


**PHOTO OF THE PROTOTYPE:**

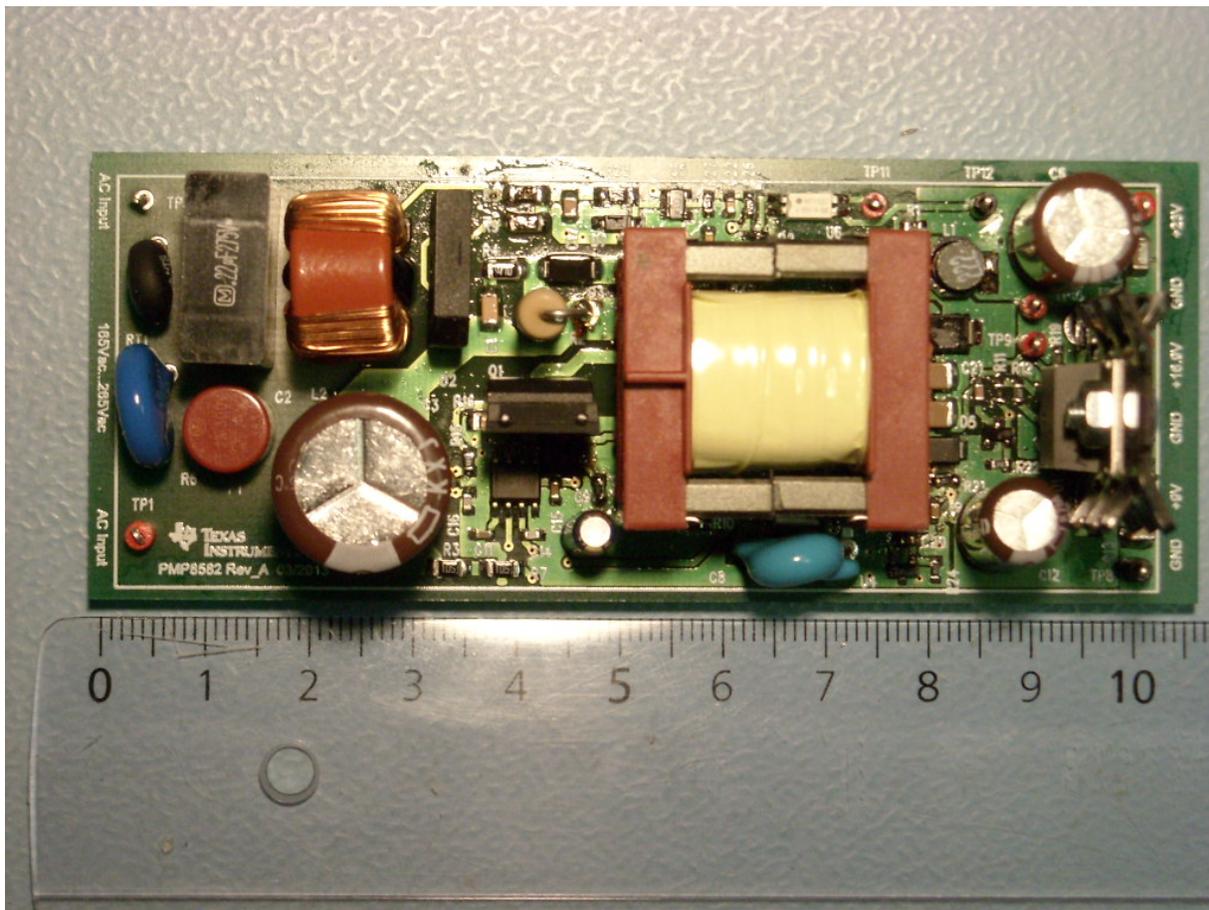


## 1. Startup

The output voltage behavior at startup is shown in the images below. The input voltage was set to 230Vac, 50Hz. All outputs fully loaded in the upper picture and unloaded for the bottom one.


**Ch1: 23Vout (5V/div, 40ms/div), Ch2: 17Vout (5V/div), Ch3: 9Vout (2V/div)**

**Bandwidth limit for all channels: 20MHz**

**Full Load:**

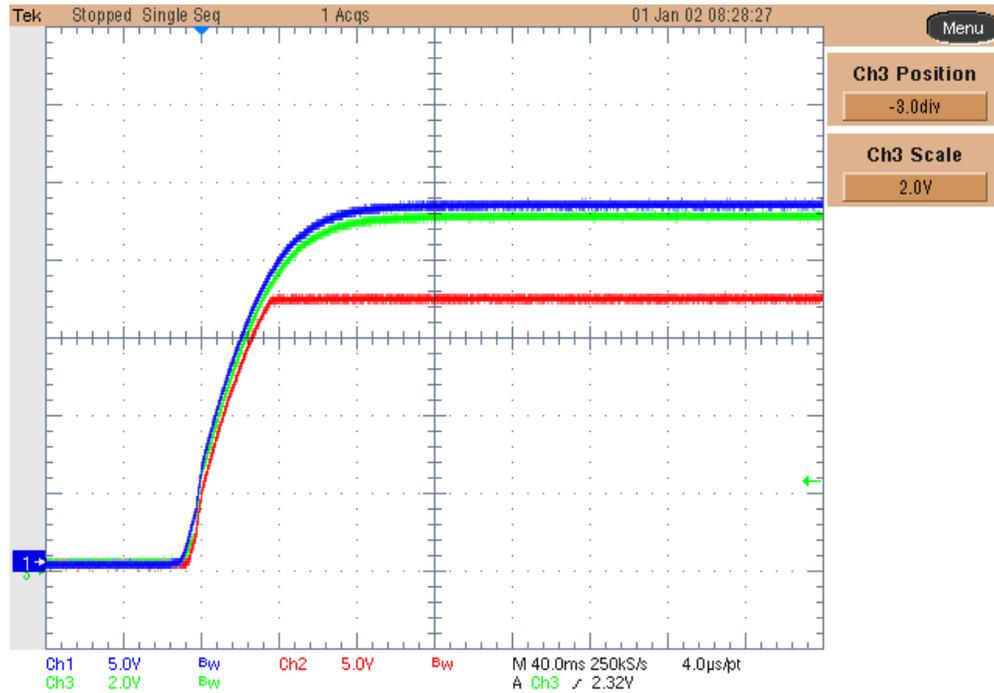


**No Load**

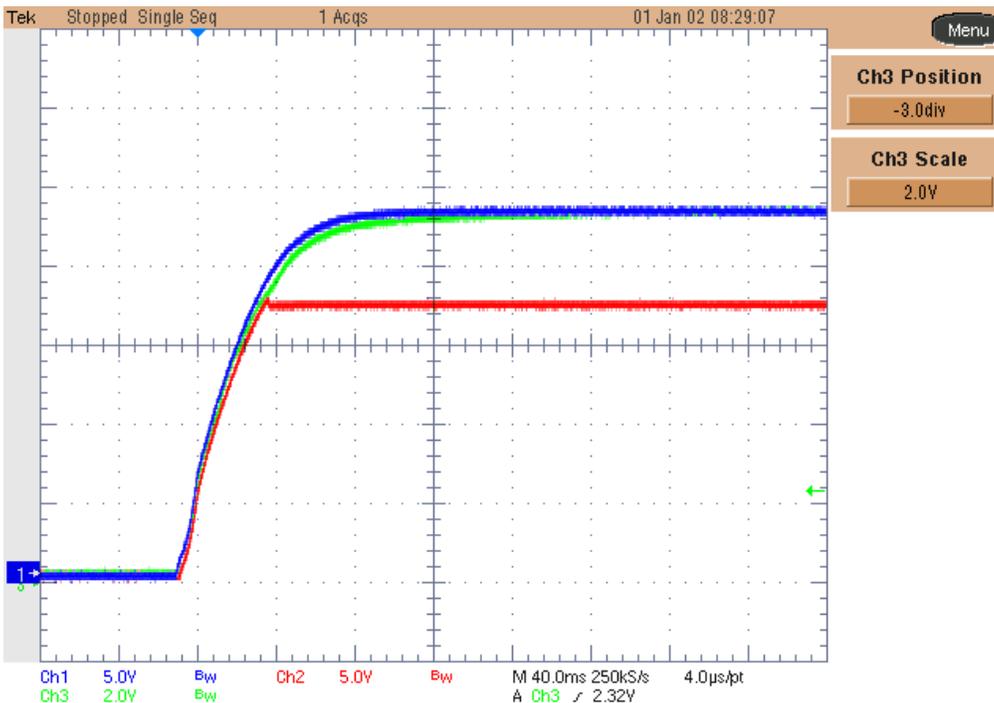

## 2. Efficiency

The efficiency data are shown in the tables and graph below. A digital power meter Yokogawa WT210 has been used and the input AC voltage set to 165, 230 and 265Vrms, 50Hz. All loads have been increased at the same time from 0% to 100% of its nominal value.

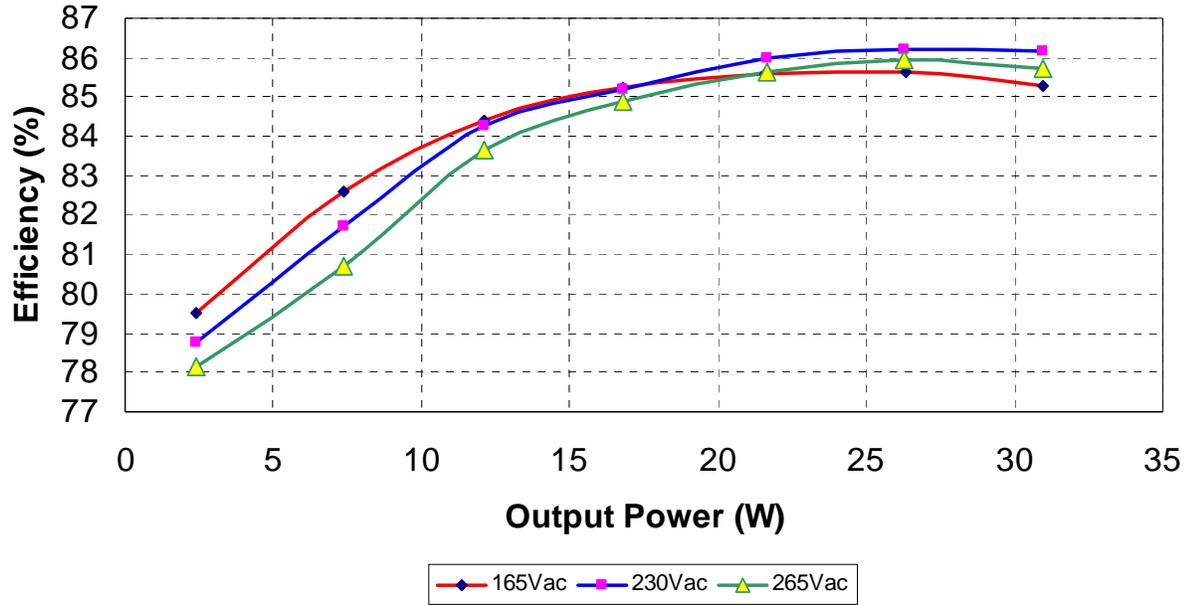



Vin = 165Vac, Vout in V and Iout in mA									
I_9V	I_17V	I_23V	V_9V	V_17V	V_23V	Pout (W)	Pin (W)	Ploss (W)	Eff (%)
0	0	0	10.30	17.05	22.60	0.00	0.13	0.130	0.00
24.6	16.4	83.3	9.376	17.03	22.99	2.43	3.05	0.625	79.51
76.8	49.9	251.7	9.265	17.03	23.04	7.36	8.91	1.549	82.61
124.6	83.1	414.6	9.207	17.03	23.05	12.12	14.36	2.241	84.39
173.2	115.0	575.6	9.197	17.03	23.05	16.82	19.73	2.911	85.25
223.9	147.5	738.7	9.202	17.03	23.03	21.58	25.22	3.635	85.58
270.8	180.4	901.7	9.201	17.03	23.02	26.32	30.73	4.409	85.65
321.3	213.1	1059.4	9.263	17.03	22.98	30.95	36.30	5.350	85.26


Vin = 230Vac, Vout in V and Iout in mA									
I_9V	I_17V	I_23V	V_9V	V_17V	V_23V	Pout (W)	Pin (W)	Ploss (W)	Eff (%)
0	0	0	10.13	17.06	22.56	0.00	0.16	0.160	0.00
24.8	16.4	83.3	9.400	17.03	22.97	2.43	3.08	0.654	78.76
76.2	49.9	251.6	9.374	17.03	22.98	7.35	8.99	1.644	81.71
124.9	83.0	414.7	9.211	17.03	23.04	12.12	14.38	2.261	84.27
174.5	115.0	575.6	9.207	17.03	23.03	16.82	19.74	2.919	85.21
224.6	147.4	741.3	9.190	17.03	23.03	21.65	25.17	3.524	86.00
270.0	180.3	901.7	9.211	17.03	23.01	26.31	30.51	4.204	86.22
321.1	213.1	1059.4	9.170	17.03	23.01	30.95	35.92	4.970	86.16

Vin = 265Vac, Vout in V and Iout in mA									
I_9V	I_17V	I_23V	V_9V	V_17V	V_23V	Pout (W)	Pin (W)	Ploss (W)	Eff (%)
0	0	0	10.11	17.05	22.64	0.00	0.18	0.180	0.00
24.3	16.4	83.3	9.418	17.02	22.98	2.42	3.10	0.678	78.14
78.7	49.9	251.6	9.385	17.02	22.98	7.37	9.13	1.760	80.72
124.9	83.0	414.7	9.213	17.02	23.04	12.12	14.49	2.372	83.63
174.5	115.0	575.6	9.203	17.03	23.03	16.82	19.82	3.000	84.87
225.5	147.5	741.4	9.196	17.03	23.02	21.65	25.28	3.627	85.65
270.1	180.4	901.7	9.203	17.03	23.00	26.30	30.60	4.303	85.94
320.7	213.1	1059.5	9.185	17.03	23.00	30.94	36.10	5.157	85.72

## 1 Output Voltage Regulation

The output voltage variation for each output is shown in the graphs below.

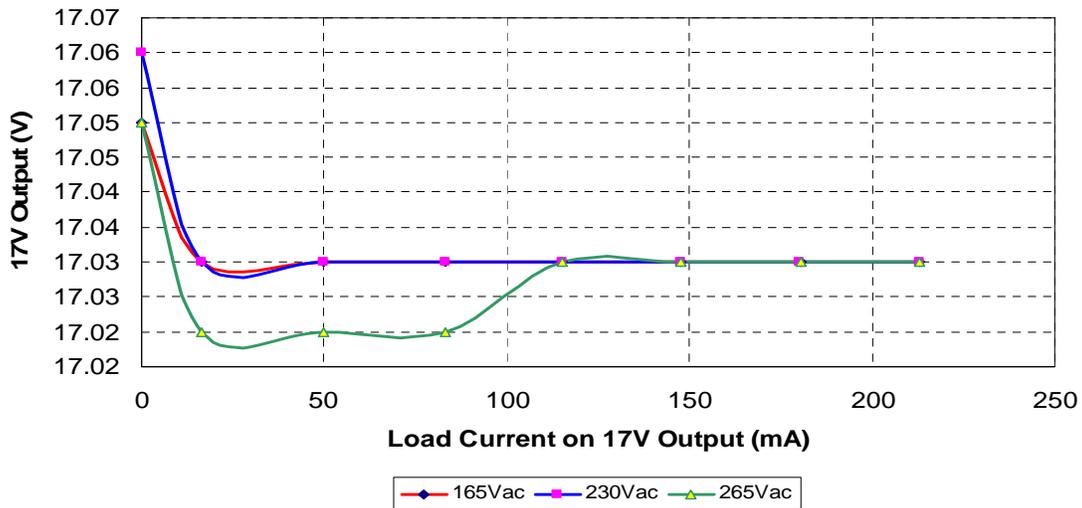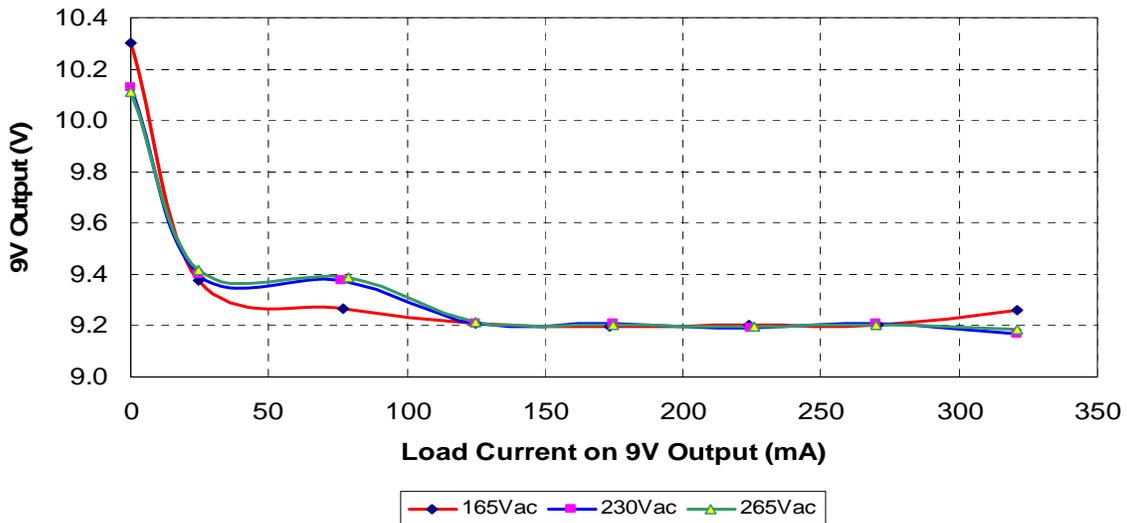


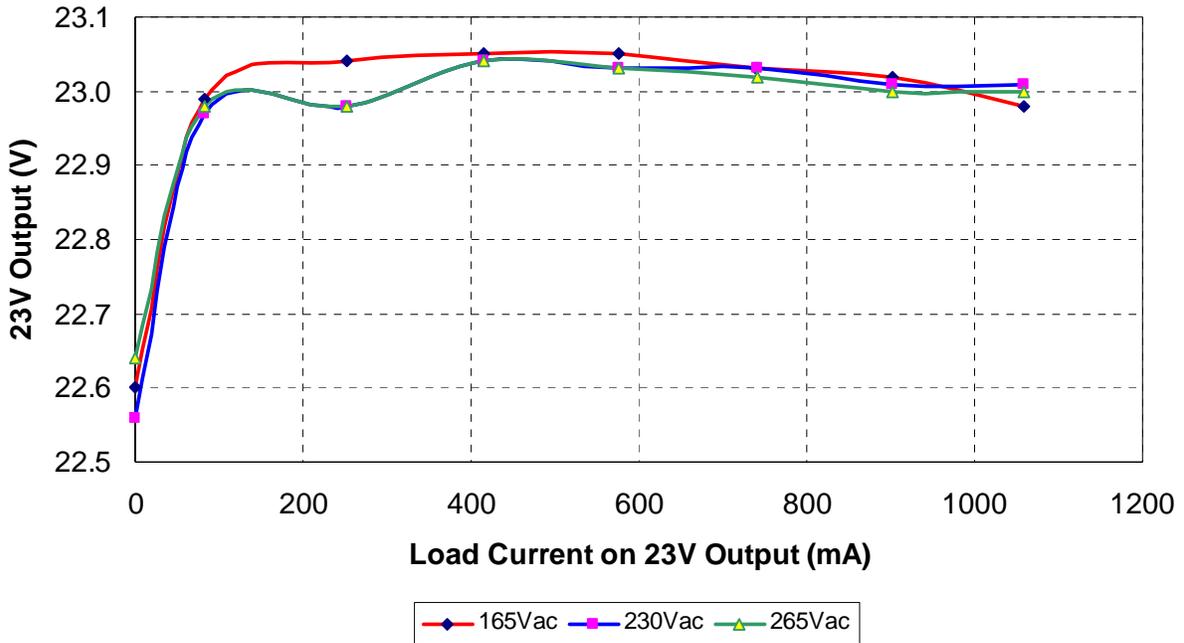


### 3. Output Ripple Voltage

The output ripple voltages for each output and in several load conditions are shown in the plots below. The input was set to 230Vac.


**Ch.2: 9V out (20mV/div, 4us/div, AC coupling, 20MHz BWL), all outputs fully loaded**

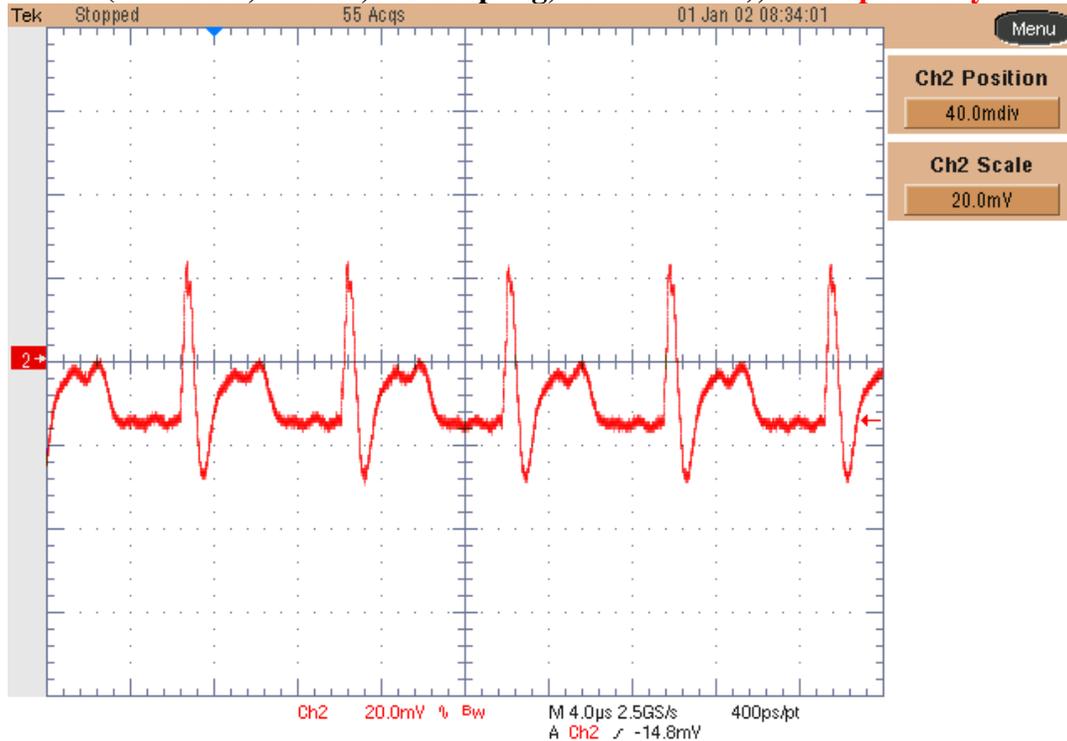


**Ch.2: 9V out (50mV/div, 200us/div, AC coupling, 20MHz BWL), 5% load on all outputs**

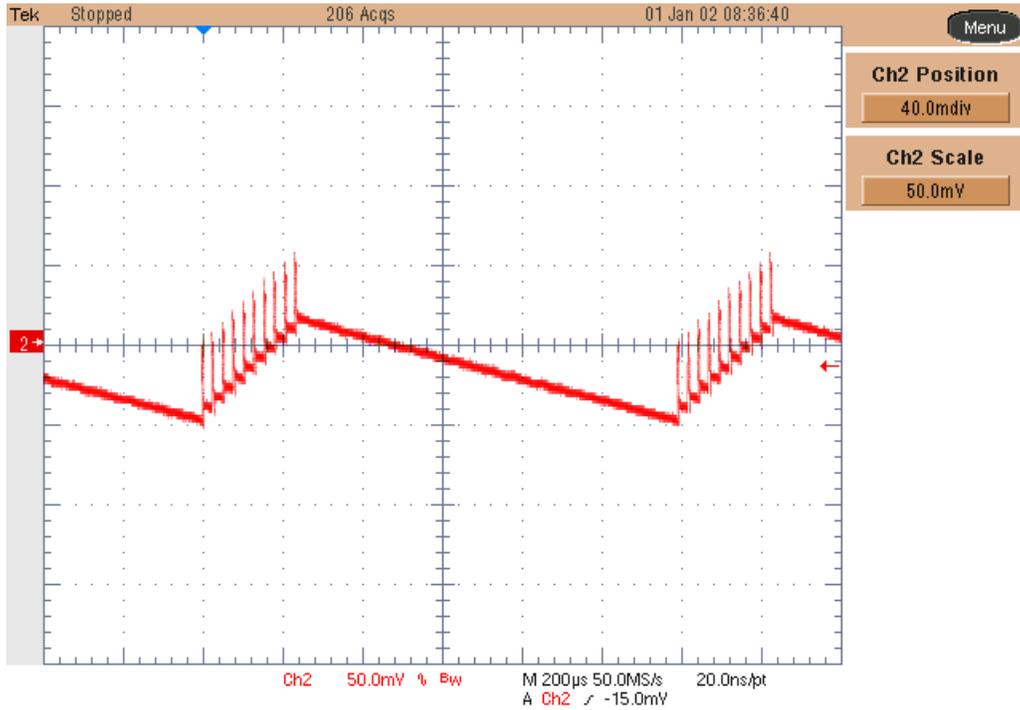


**Ch.2: 17V out (20mV/div, 40us/div, AC coupling, 20MHz BWL), all outputs fully loaded**

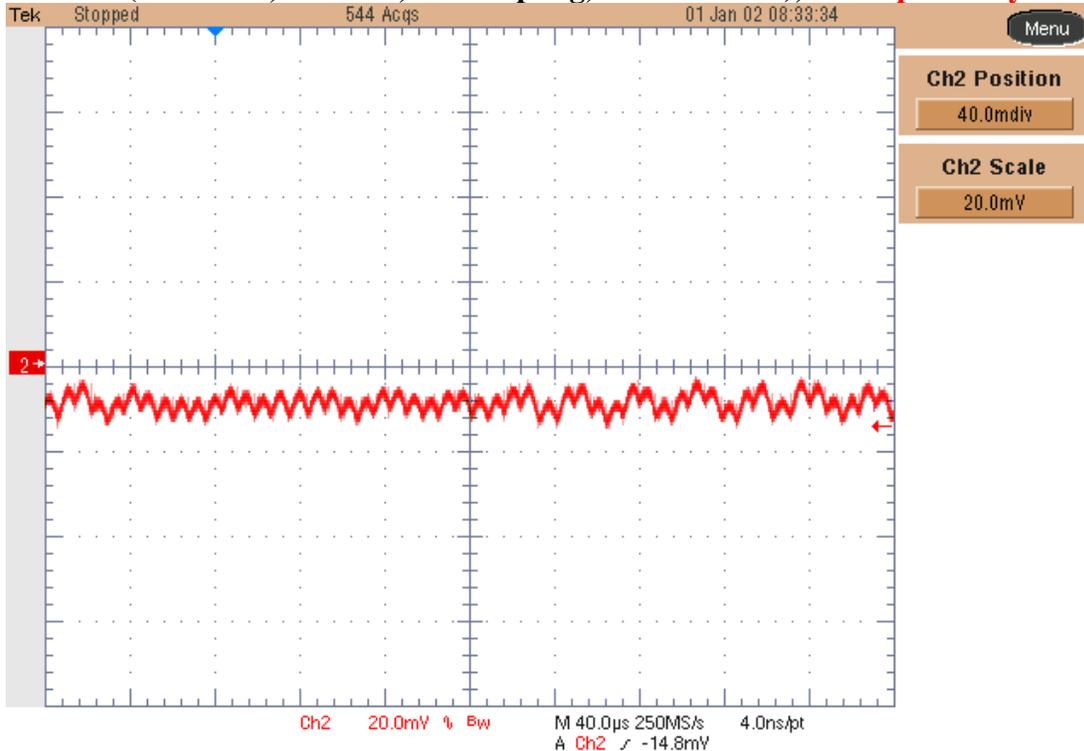

**Ch.2: 23V out (50mV/div, 200us/div, AC coupling, 20MHz BWL), 5% load on all outputs**

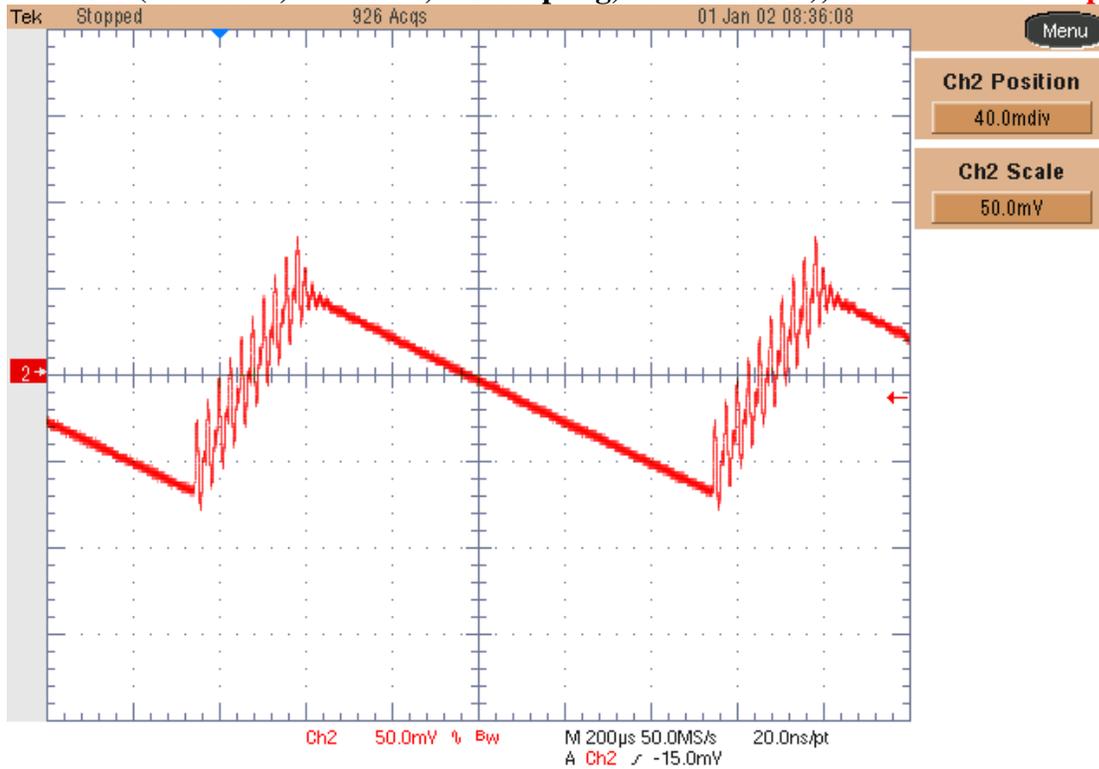


**Ch.2: 23V out (20mV/div, 40us/div, AC coupling, 20MHz BWL), all outputs fully loaded**

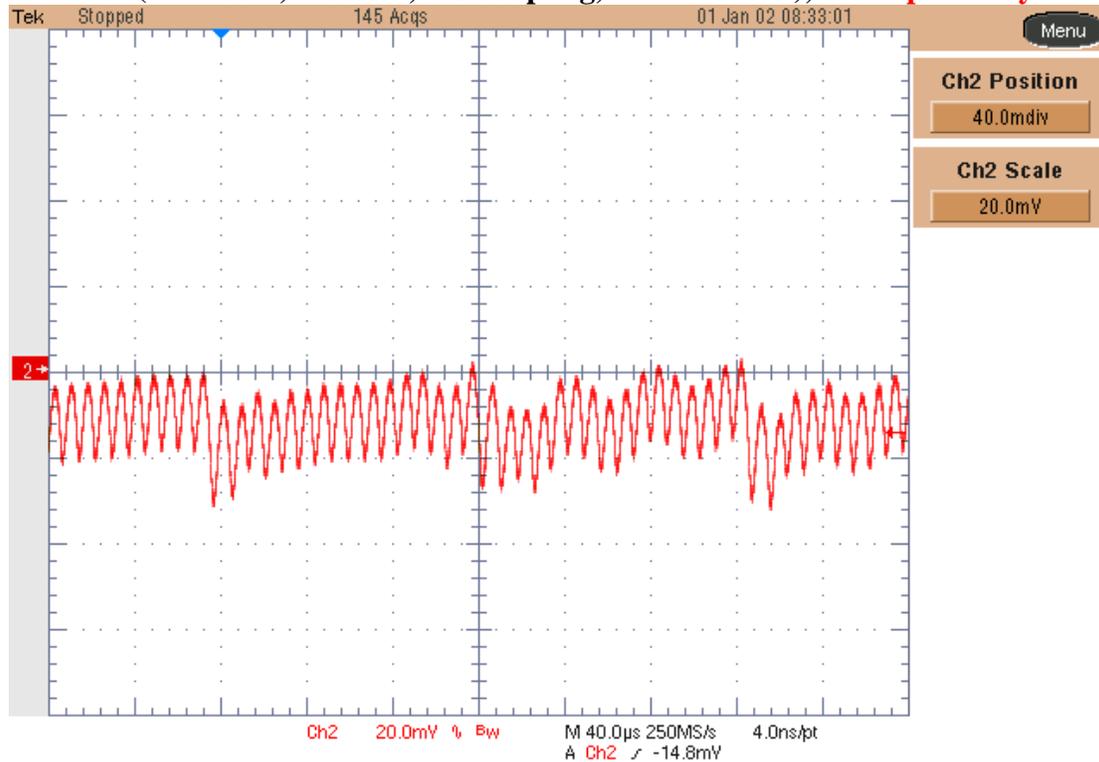

## 2 Switching Node Waveform


The images below show the peak voltage on the drain of the Mosfet Q1 with a 230Vac input at different loads.

**Ch3: Q1 Drain voltage (100V/div, 2us/div, No BWL), all outputs fully loaded.**

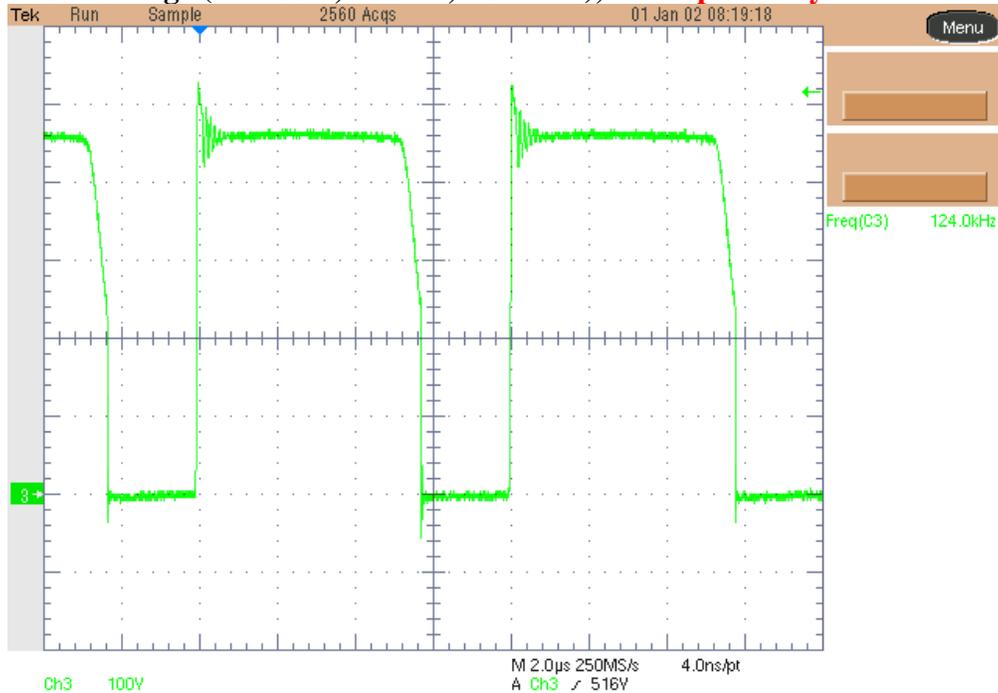


At light load, the converter reduces the switching frequency as shown in the picture below.

**Ch3: Q1 Drain voltage (100V/div, 4us/div, No BWL), Total load = 20%**

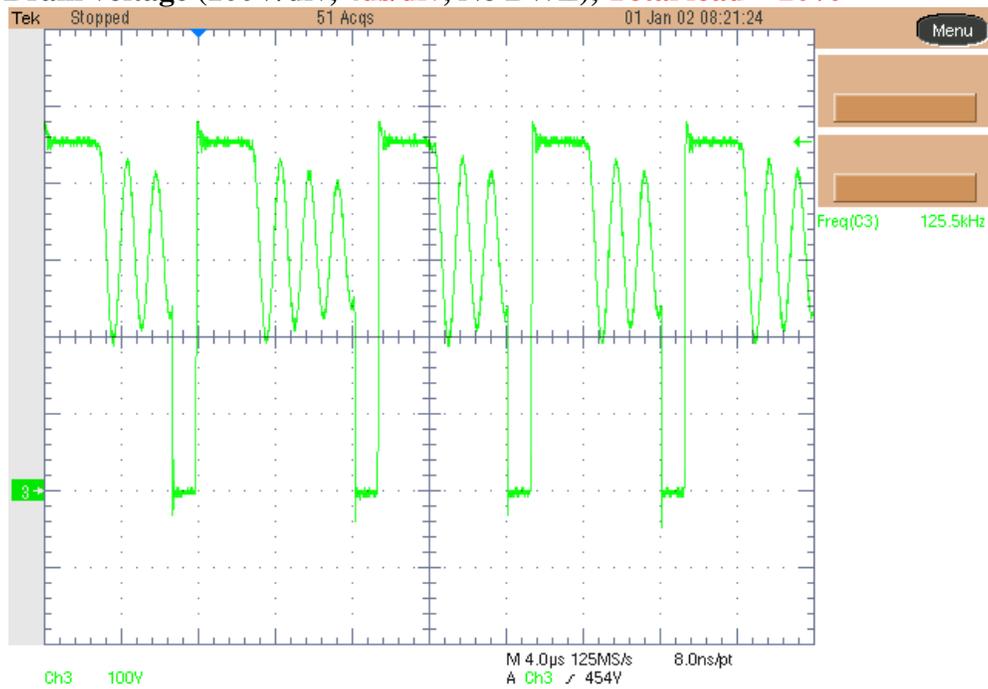

At 5% load on each output the converter enters burst mode:


**Ch3: Q1 Drain voltage (100V/div, 200usec/div, No BWL), 5% Load on all outputs**

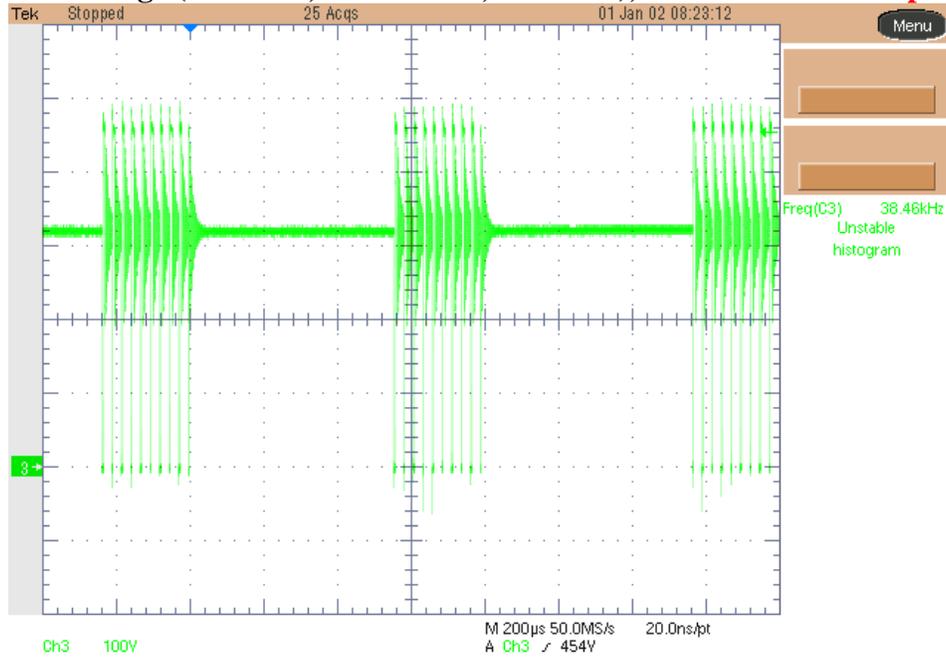

### 3 Transient Response

The image below show the transient response on the 23V out when the load on this output has been switched between 50% and 100% of its nominal value and the 9V out was fully loaded. The 17V out was unloaded. The input voltage was set to 230Vac.


**Ch2: 23Vout (50mV/div, 1ms/div, 20MHz BWL), Ch4: 23Vout current (200mA/div).**

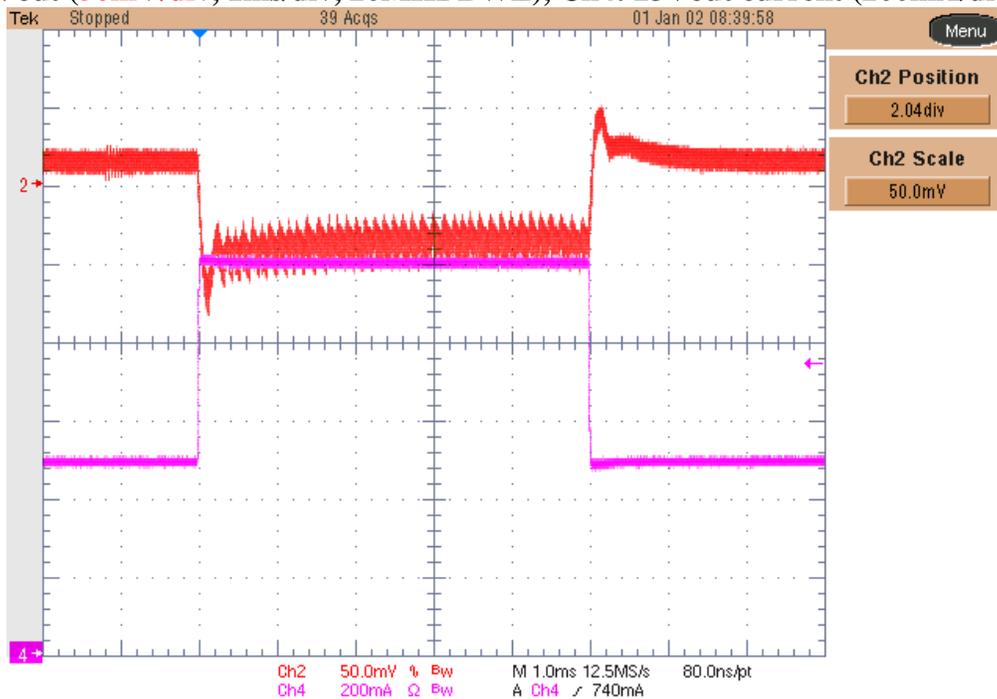

## 4 Loop Analysis

The image below show the bode diagram of the converter supplied with 320Vdc and loaded @ 1A on 23Vout, 200mA on 9Vout and 200mA on 17Vout.

The crossover frequency was 2.2KHz, the phase margin 58deg and the gain margin 41dB.

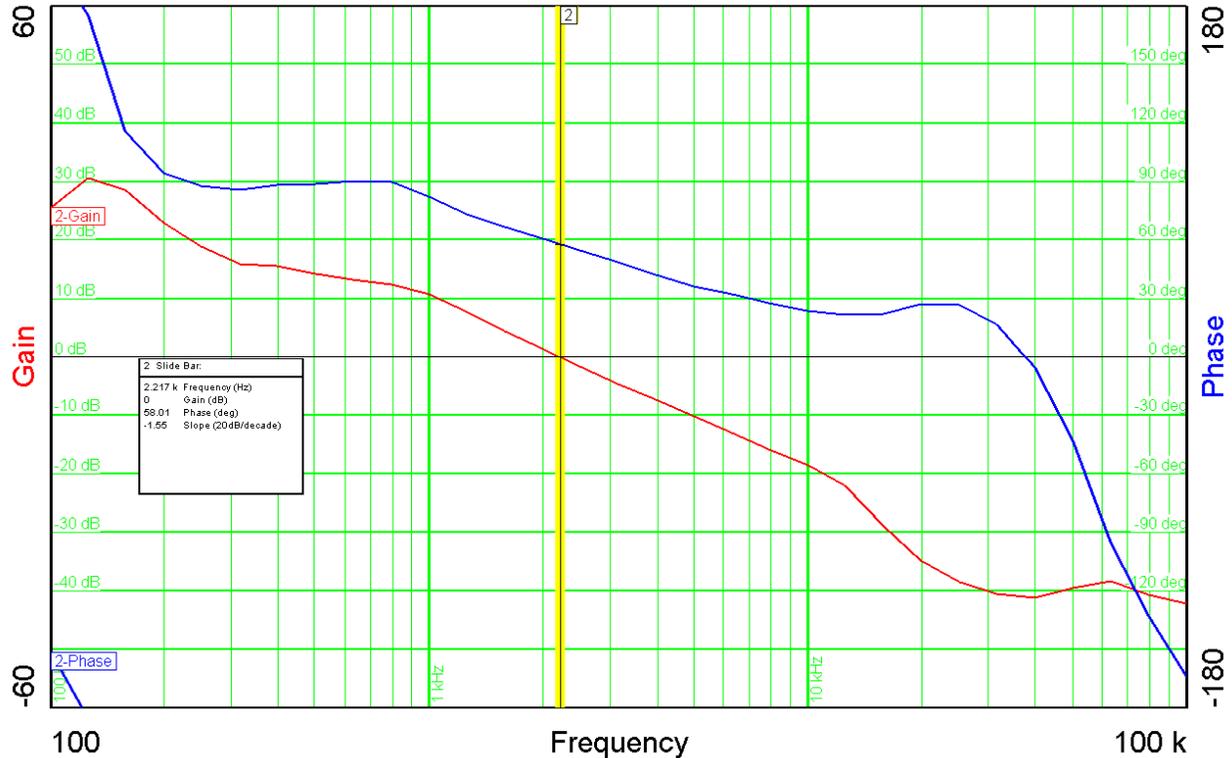

## 5 Notes on the voltage regulation

1) Condition: 23Vout unloaded, 9Vout @ 280mA, 17Vout unloaded

Measure: 23Vout = 23.9V, 17Vout = 17V, 9Vout = 7.588V


2) Needed minimum 40mA on 23Vout in order to keep the 9Vout  $\geq$  8.5V, when this output is fully loaded

3) Needed minimum 26mA on 9Vout in order to keep it  $<$  12V when the 23Vout is fully loaded

3) The 17V is always stable; any load on this output will be considered the same load on the 23Vout.

## 6 Thermal Analysis

The image below show the thermal picture taken with the prototype fully loaded on all outputs, without any forced convection and placed horizontally on the bench. The input voltage has been set to 230Vac, 50Hz.

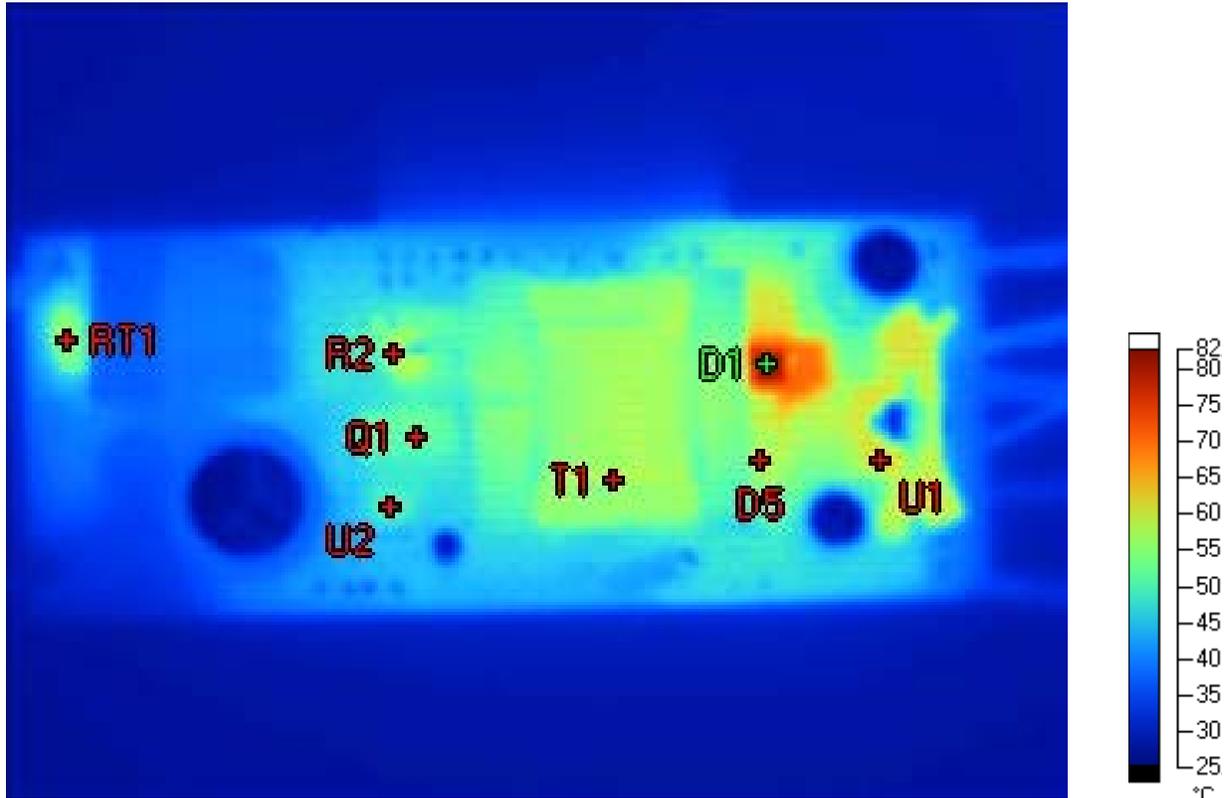

### Image Info

Background	20.0 °C
Average Temperature	36.1 °C
Calibration Range	-20.0 °C to 350.0 °C
Camera Model	Ti40FT
Manufacturer	Fluke
Camera Serial Number	Ti40FT-070263

### Markers

Label	Temperature	Emissivity	Background
RT1	55.6 °C	0.95	20.0 °C
U2	50.0 °C	0.95	20.0 °C
Q1	51.4 °C	0.95	20.0 °C
T1	58.0 °C	0.95	20.0 °C
D5	58.1 °C	0.95	20.0 °C
D1	81.7 °C	0.95	20.0 °C
U1	61.1 °C	0.95	20.0 °C
R2	57.1 °C	0.95	20.0 °C

---

<b>EVALUATION BOARD/KIT/MODULE (EVM) WARNINGS, RESTRICTIONS AND DISCLAIMER</b>
--------------------------------------------------------------------------------

---

**For Feasibility Evaluation Only, in Laboratory/Development Environments.** The EVM is not a complete product. It is intended solely for use for preliminary feasibility evaluation in laboratory / development environments by technically qualified electronics experts who are familiar with the dangers and application risks associated with handling electrical / mechanical components, systems and subsystems. It should not be used as all or part of a production unit.

**Your Sole Responsibility and Risk.** You acknowledge, represent and agree that:

1. You have unique knowledge concerning Federal, State and local regulatory requirements (including but not limited to Food and Drug Administration regulations, if applicable) which relate to your products and which relate to your use (and/or that of your employees, affiliates, contractors or designees) of the EVM for evaluation, testing and other purposes.
2. You have full and exclusive responsibility to assure the safety and compliance of your products with all such laws and other applicable regulatory requirements, and also to assure the safety of any activities to be conducted by you and/or your employees, affiliates, contractors or designees, using the EVM. Further, you are responsible to assure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard.
3. Since the EVM is not a completed product, it may not meet all applicable regulatory and safety compliance standards (such as UL, CSA, VDE, CE, RoHS and WEEE) which may normally be associated with similar items. You assume full responsibility to determine and/or assure compliance with any such standards and related certifications as may be applicable. You will employ reasonable safeguards to ensure that your use of the EVM will not result in any property damage, injury or death, even if the EVM should fail to perform as described or expected.

**Certain Instructions.** Exceeding the specified EVM ratings (including but not limited to input and output voltage, current, power, and environmental ranges) may cause property damage, personal injury or death. If there are questions concerning these ratings please contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM User's Guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, some circuit components may have case temperatures greater than 60°C as long as the input and output ranges are maintained at nominal ambient operating temperature. These components include but are not limited to linear regulators, switching transistors, pass transistors, and current sense resistors which can be identified using the EVM schematic located in the EVM User's Guide. When placing measurement probes near these devices during normal operation, please be aware that these devices may be very warm to the touch.

**Agreement to Defend, Indemnify and Hold Harmless.** You agree to defend, indemnify and hold TI, its licensors and their representatives harmless from and against any and all claims, damages, losses, expenses, costs and liabilities (collectively, "Claims") arising out of or in connection with any use of the EVM that is not in accordance with the terms of this agreement. This obligation shall apply whether Claims arise under the law of tort or contract or any other legal theory, and even if the EVM fails to perform as described or expected.

**Safety-Critical or Life-Critical Applications.** If you intend to evaluate TI components for possible use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, such as devices which are classified as FDA Class III or similar classification, then you must specifically notify TI of such intent and enter into a separate Assurance and Indemnity Agreement.

## IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements. These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to TI's Terms of Sale (<https://www.ti.com/legal/termsofsale.html>) or other applicable terms available either on [ti.com](https://www.ti.com) or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265  
Copyright © 2021, Texas Instruments Incorporated