

# EVM User's Guide: TRF0108SP-EVM TRF0108SEP-EVM

## TRF0108SEP/SP Evaluation Module




### Description

The TRF0108SP and TRF0108SEP evaluation modules (EVM) are used to evaluate the TRF0108-SP and TRF0108-SEP devices, respectively, which are differential input to single-ended (D2S) output RF amplifiers. The TRF0108SP-EVM is radiation-hardness-assured (RHA) and TRF0108SEP-EVM is radiation-tolerant. The devices are designed for applications that require a D2S function when driven by a digital-to-analog converter (DAC).

### Features

- Operates on a single +5V supply
- AC-coupled configuration
- Designed for a 100Ω differential input matching
- Simple interface to the inputs and output through onboard SMA connectors
- Power down option available onboard using a jumper connector

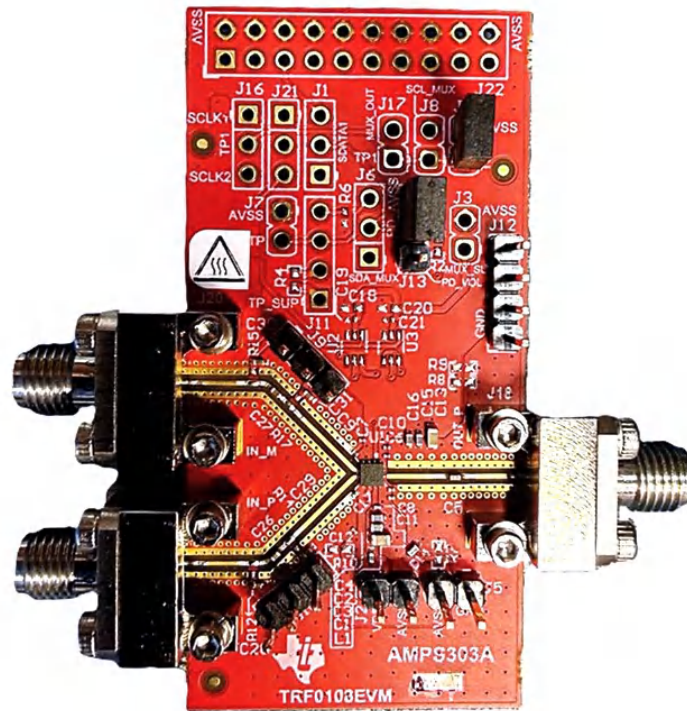


TRF0108SP-EVM and TRF0108SEP-EVM (Top View)

# 1 Evaluation Module Overview

## 1.1 Introduction

This user's guide covers the basic steps and functions that are required to verify the proper operation and quick set up of the TRF0108SP/SEP-EVM. The document also includes a schematic diagram, a bill of materials (BOM), printed-circuit board (PCB) layouts, and test block diagrams. Throughout this document, the abbreviations *EVM*, *TRF0108SP/SEP-EVM* and the term *evaluation module* are synonymous with both the TRF0108SP-EVM and the TRF0108SEP-EVM, unless otherwise noted.

The amplifier is internally matched for 100 $\Omega$  differential input and 50 $\Omega$  single-ended output, and the default EVM configuration is set for the match. The EVM has AC-coupling capacitors at input and output. The EVM is ready to connect to a +5V power supply, signal source, and test instruments for device evaluation and measurement.

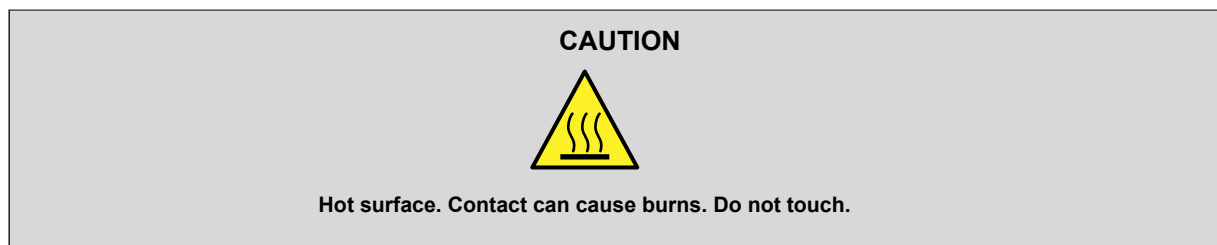

## 1.2 Kit Contents

Item	Quantity
TRF0108SP-EVM or TRF0108SEP-EVM	1

## 1.3 Specification

Connector	Parameter	Value
J2	J2.1 VDD J2.2 AVSS	$V_{DD} = 5V$ AVSS = GND
J4	J4.1 AVSS J4.2 SCL	J4.2 SCL connects to pin 8 (GND) of the device. For best performance, short AVSS (J4.1) and SCL (J4.2) using a user-provided jumper.
J5	J5.1 GND J5.2 AVSS	Short AVSS (J5.2) and GND (J5.1)
J13	J13.1 PD_Voltage J13.2 PD J13.3 AVSS	Short PD (J13.2) and PD_Voltage (J13.1) to power down the device Short PD (J13.2) and AVSS (= GND, J13.3) to enable the device
J18	RF Output	See <a href="#">related documentation</a>
J19	RF Input INP	See <a href="#">related documentation</a>
J20	RF Input INM	See <a href="#">related documentation</a>


## 1.4 Device Information

The TRF0108-SP and TRF0108-SEP are very high performance, differential-to-single-ended (D2S) RF amplifiers. The devices are an excellent choice for applications that require a D2S conversion when driven by a digital-to-analog converter (DAC) such as the high-performance DAC39RF10 (-SP/-SEP) or [AFE7950-SP](#).

See [related documentation](#) for detailed device information.

## 2 Hardware

### 2.1 General Usage Information

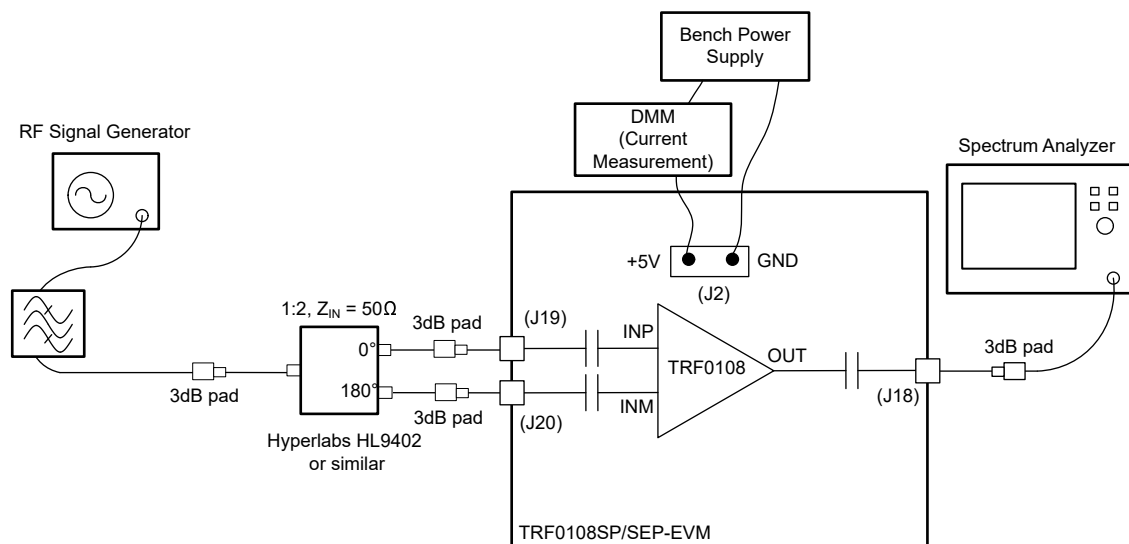

**Figure 2-1. Single-Tone Setup for Gain and Output P1dB**

This section provides general usage information for the TRF0108SP/SEP-EVM. See [Figure 2-1](#) for a general EVM configuration and for a single-tone measurement setup as a reference point for the following instructions (some components, such as supply bypass capacitors, are omitted for clarity):

1. Recommended power up sequence:
  - a. Before connecting the power supply cables to the EVM, set the dc output power supply to +5V
  - b. Set the current limit of the dc output power supply to 300mA
  - c. Making sure the supply is turned off, connect the power supply cables to the J2 connector of the EVM
  - d. Now turn on the dc power supply to set  $V_{DD} = +5V$ . The active supply current ( $I_{QA}$ ) drawn from the power supply is approximately 170mA.
  - e. If the supply current is low, then verify that the device is not powered down by the PD pin configuration
2. Power down options:
  - a. The device can be powered down by configuring the J13 jumper connection as described in [Figure 2-1](#)
  - b. Alternately, a device supported logic high voltage can be applied to PD (J13.2) to power down the device (see [related documentation](#))
3. Single-tone measurement setup:
  - a. The EVM inputs are fully differential ( $180^\circ$  out-of-phase) at J19 and J20 SMA connectors. The single-ended signal out of the RF signal generator must be converted to a differential signal using an external passive balun and connected to the inputs through SMA connectors J19 and J20 as shown in [Figure 2-1](#). When measuring single tone distortion, use an RF band pass filter as shown in [Figure 2-1](#) between the RF signal generator and the 3dB pad.
  - b. The RF signal generator used must support up to 12GHz signal frequency for testing out the full frequency range of the TRF0108SP/SEP-EVM.
  - c. The device input is  $100\Omega$  differential in the pass-band.  
To minimize signal reflections due to impedance mismatch, TI recommends using an attenuator pad of approximately from 3dB to 6dB at the three terminals of the passive balun.
  - d. The EVM output is single-ended at J18 SMA connector.
  - e. The single-ended signal output of the EVM is connected to spectrum analyzer as shown in [Figure 2-1](#). Usage of an attenuator pad of approximately from 3dB to 6dB is recommended at the output to minimize reflections.
  - f. Lastly, TI recommends to properly characterize and account for the insertion loss of RF coax cables, attenuator pads, and passive baluns to accurately measure the gain and power levels of the device.


4. Matching considerations:
  - a. TRF0108-SP and TRF0108-SEP are wideband amplifiers and expect 100 $\Omega$  differential input matching over the operating bandwidth. A typical RF signal generator or noise source that drives EVM inputs has 50 $\Omega$  impedance over a wide bandwidth, that is converted to 100 $\Omega$  differential impedance by 1:2 wideband balun. However, if the EVM is driven by a narrowband driver or a source that is not 50 $\Omega$  impedance, then that can result in amplifier or measurement performance degradation.
  - b. When the EVM output is connected to the spectrum analyzer, TI recommends using attenuator pads to minimize reflections.

### 3 Implementation Results

#### 3.1 Test Setup Diagrams

This section includes general recommendations for S-parameter, noise figure, and two-tone OIP3 measurement setups using the EVM.


##### 3.1.1 S-Parameter Test Setup

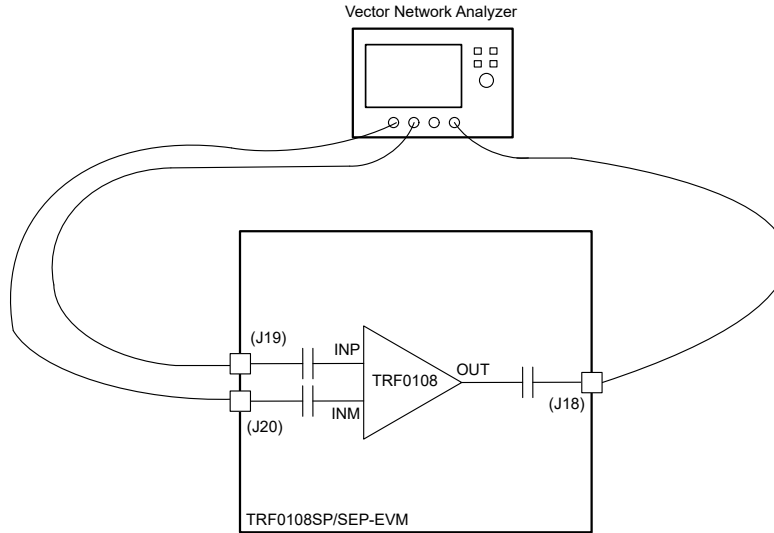

**Figure 3-1. S-Parameter Test Setup**


Use the following guidelines for S-parameter measurement:

1. As shown in [Figure 3-1](#), the S-parameter measurement is typically done using a Vector Network Analyzer (VNA). For measuring the EVM, a 3-port VNA is recommended which can generate differential signals and receive single-ended signals at the input and output ports of the EVM, respectively.
2. Before connecting the RF coax cables to the EVM, calibrate the VNA along with the cables using a calibration kit
3. Make sure the frequency sweep and output power level from the VNA is set within the linear operating range of the TRF0108-SP and TRF0108-SEP devices. The resolution bandwidth (RBW) and dynamic range of the VNA can be adjusted to give optimum sweep time for the measurement.
4. Account for board trace losses at the input and output of the device for accurate gain measurements. [Figure 3-2](#) shows input and output trace loss for reference, as measured on a representative EVM.

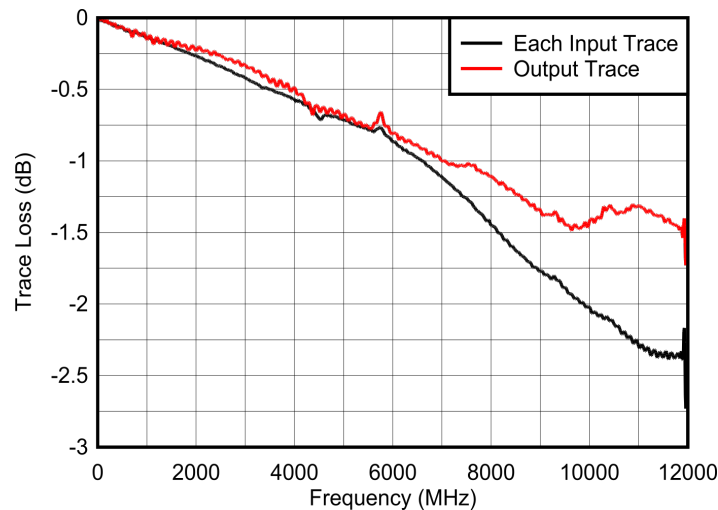

**Figure 3-2. PCB Trace Loss vs Frequency**

### 3.1.2 Noise Figure Test Setup

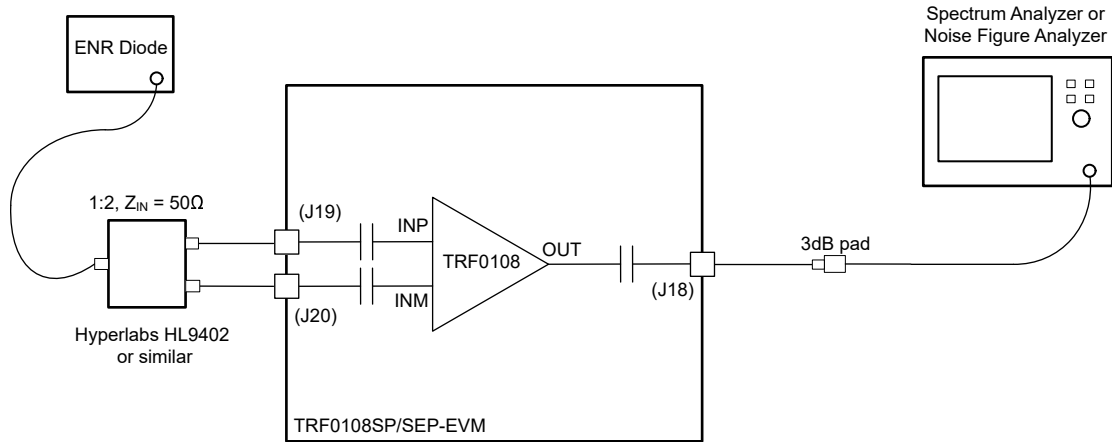


**Figure 3-3. Noise Figure Test Setup**

Use the following guidelines for noise figure (NF) measurement:

1. As shown in [Figure 3-3](#), the traditional Y-factor method can be used for the NF measurement using a noise diode and a spectrum analyzer (or a noise figure analyzer).
2. For accurate NF measurement, account for RF cable losses to the EVM and for any external attenuators used in the setup
3. Also, onboard losses of the input traces at the device input pins must be factored into the NF measurement
4. If the loss after the device output is significant (greater than about 5dB) then factor the output loss into the NF measurement. Use the *Friis* equation to calculate the NF of the device from the total measured NF.

### 3.1.3 Two-Tone OIP3 Test Setup

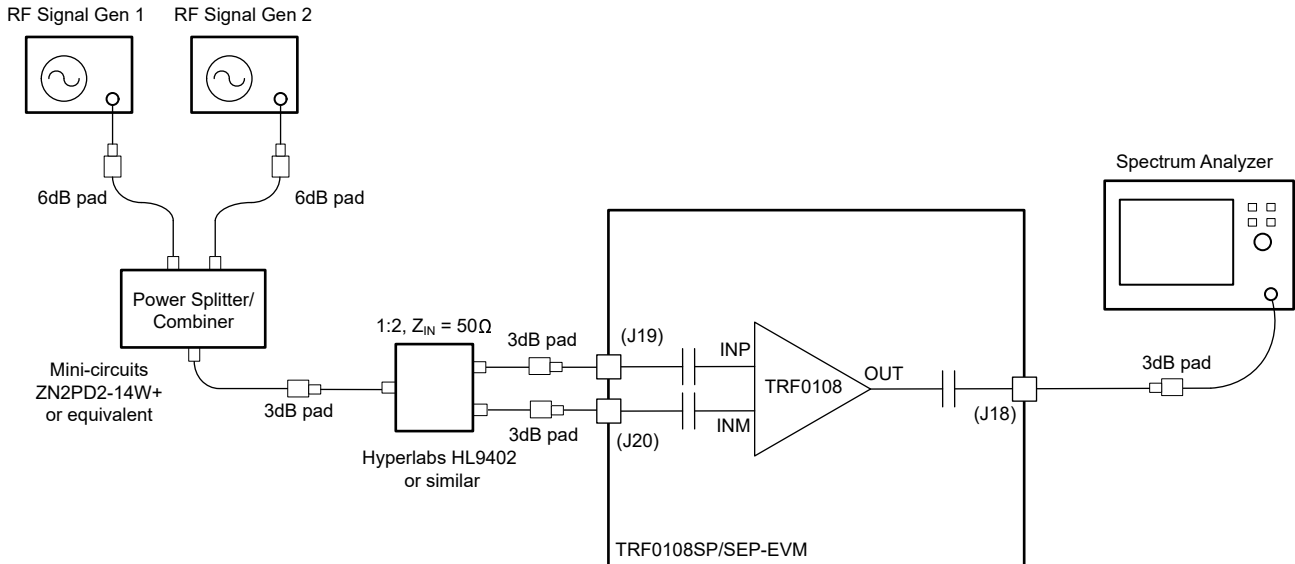

**Figure 3-4. Two-Tone OIP3 Test Setup**

Use the following guidelines for two-tone OIP3 measurement:

1. As shown in [Figure 3-4](#), combine two signal generator outputs using an in-phase power splitter/combiner. 6dB attenuators are recommended at the RF signal generator outputs to increase isolation between the two signal generators and minimize IMD3 spurs.
2. Set both the RF signal generator outputs to a power level and frequency spacing such that the signal generator yields the desired output power ( $P_{OUT}$ ) at the device.

3. TI recommends that the output power level be within the linear operation range of the TRF0108-SP and TRF0108-SEP devices. For example, set the power on the signal generators such that the power at the device output results in approximately  $-4\text{dBm}$  per tone. As a general rule, TI recommends to keep the total output power level approximately 6 to 8dB lower than the 1dB compression point. See the device datasheet for the output power levels supported by the device.
4. Set the two tones on the signal generator according to the desired center frequency and the frequency spacing.
5. Set the spectrum analyzer attenuation setting appropriately so that the spectrum analyzer non-linearity does not affect the measurements.
6. Keep spectrum analyzer RBW and VBW settings identical for the main tones and the IM3 products.
7. For output IP3 calculation, take into account combined losses at the desired frequency band between the device output to the spectrum analyzer input. The combined power loss is due to PCB output trace, RF coax cable, and any external attenuator pad used. The calculated OIP3 is given by [Equation 1](#).

$$\text{OutputIP3} = \frac{P_{\text{IN\_SA}} - \text{IMD3}}{2} + P_{\text{IN\_SA}} + P_{\text{LOSS}} \quad (1)$$

where,

- $P_{\text{IN\_SA}}$  = Input power per tone into the spectrum analyzer
  - $P_{\text{LOSS}}$  = Power loss from the device output to the spectrum analyzer input
  - $\text{IMD3}$  = Higher power of the two intermodulation distortion products recorded at either  $2f_1 - f_2$  or  $2f_2 - f_1$
8. In [Equation 1](#),  $P_{\text{IN\_SA}} + P_{\text{LOSS}} = P_{\text{OUT}}$  is the amplifier output power per tone.

## 4 Hardware Design Files

### 4.1 Schematic

Figure 4-1 shows the TRF0108SP/SEP-EVM schematic.

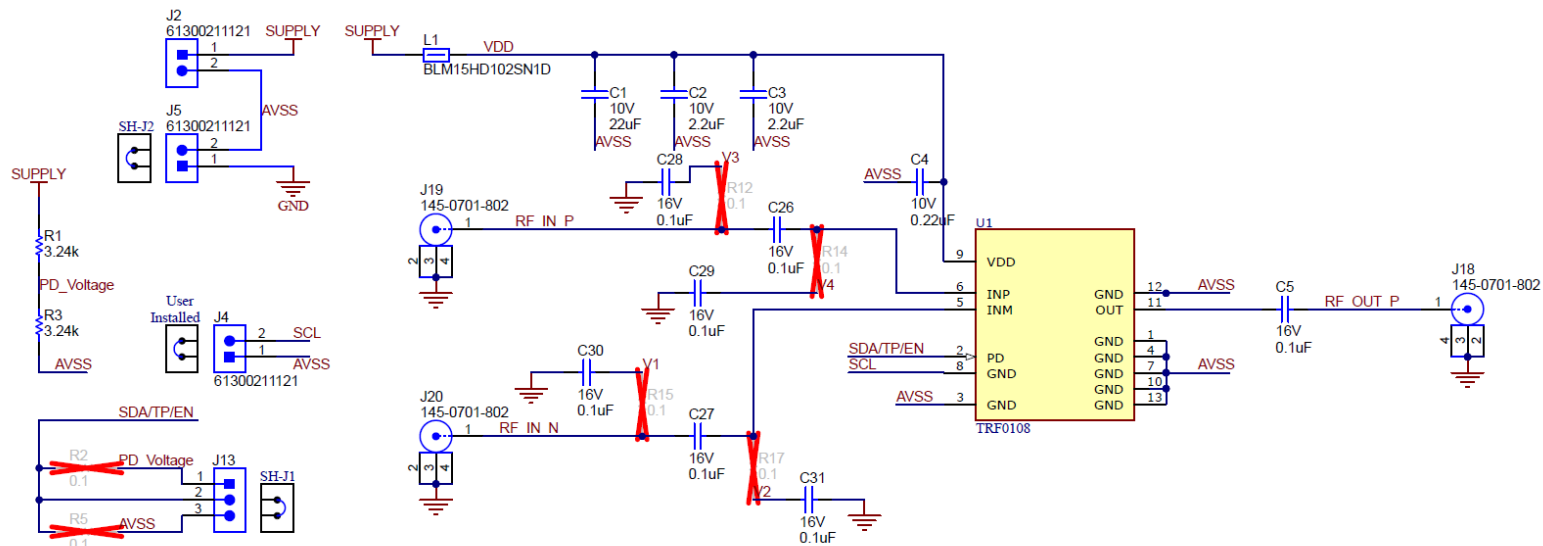


Figure 4-1. TRF0108SP/SEP-EVM Schematic

## 4.2 PCB Layers

Figure 4-2 through Figure 4-5 illustrate the PCB layers for this EVM.

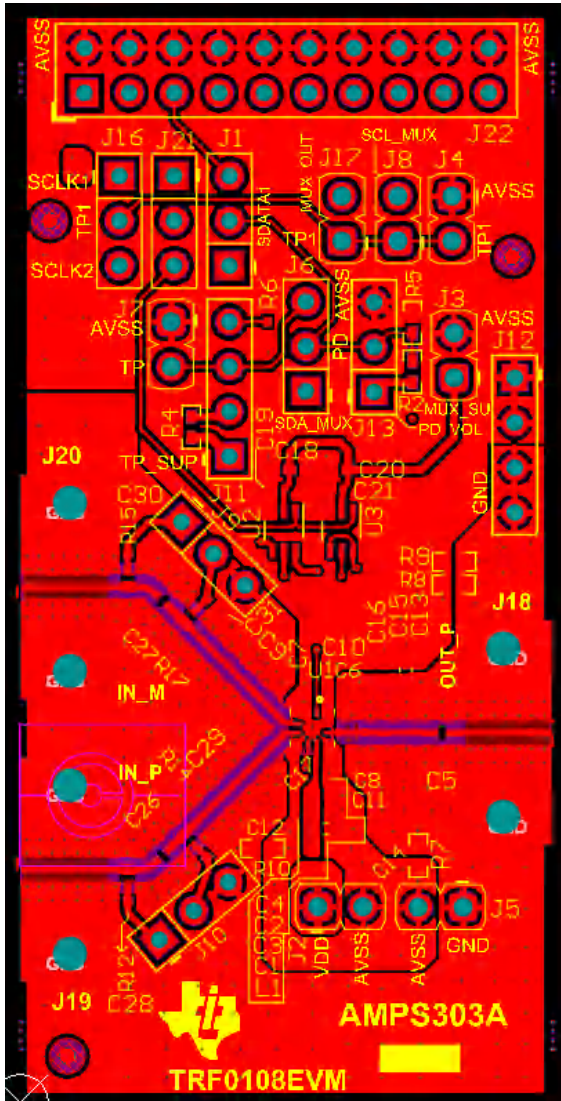


Figure 4-2. Top Layer

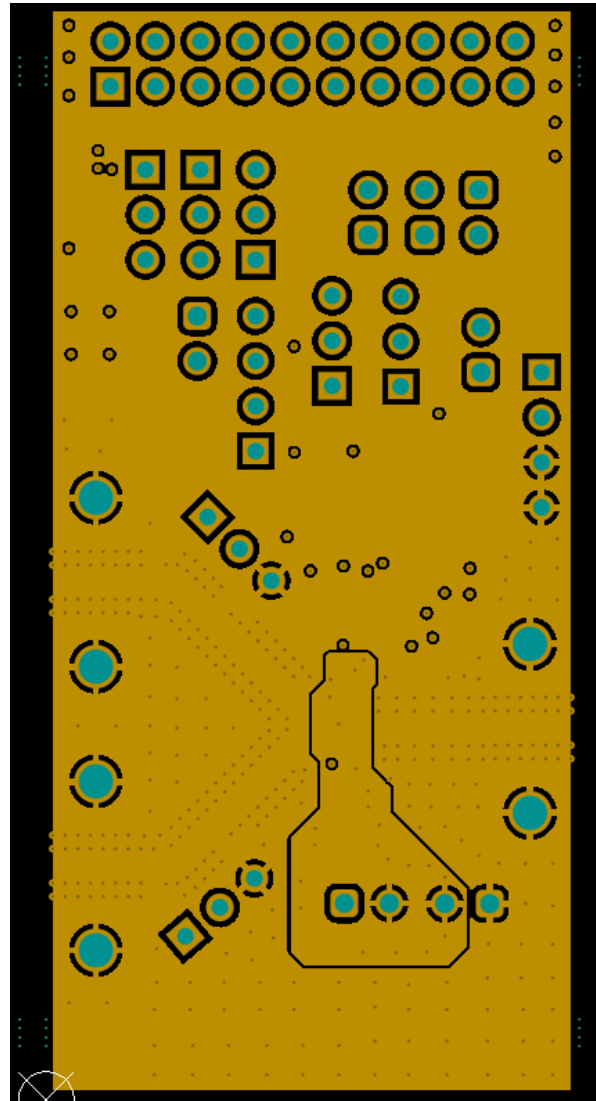


Figure 4-3. Layer 2

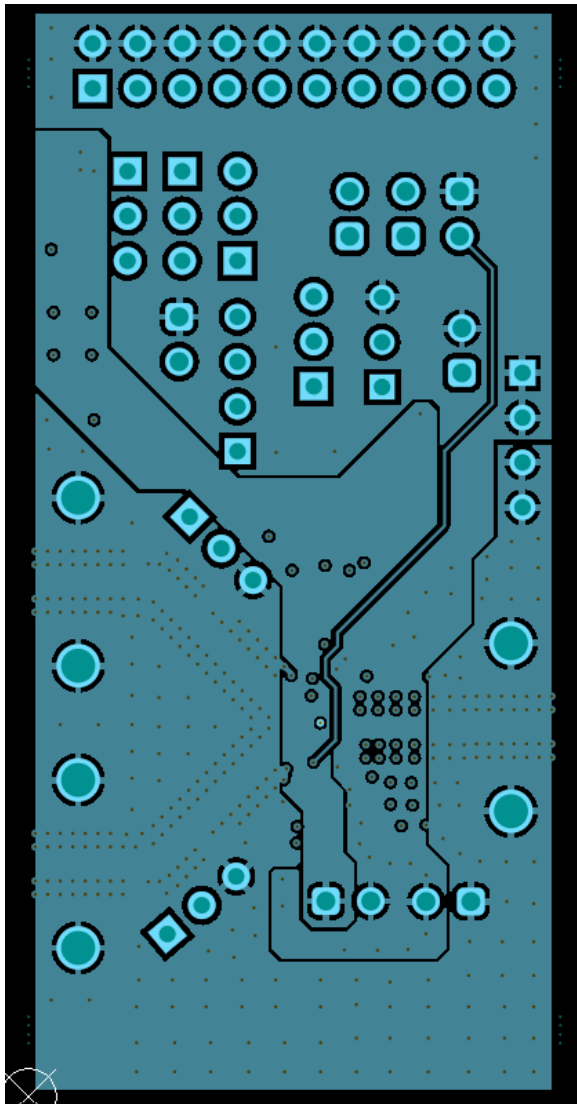


Figure 4-4. Layer 3

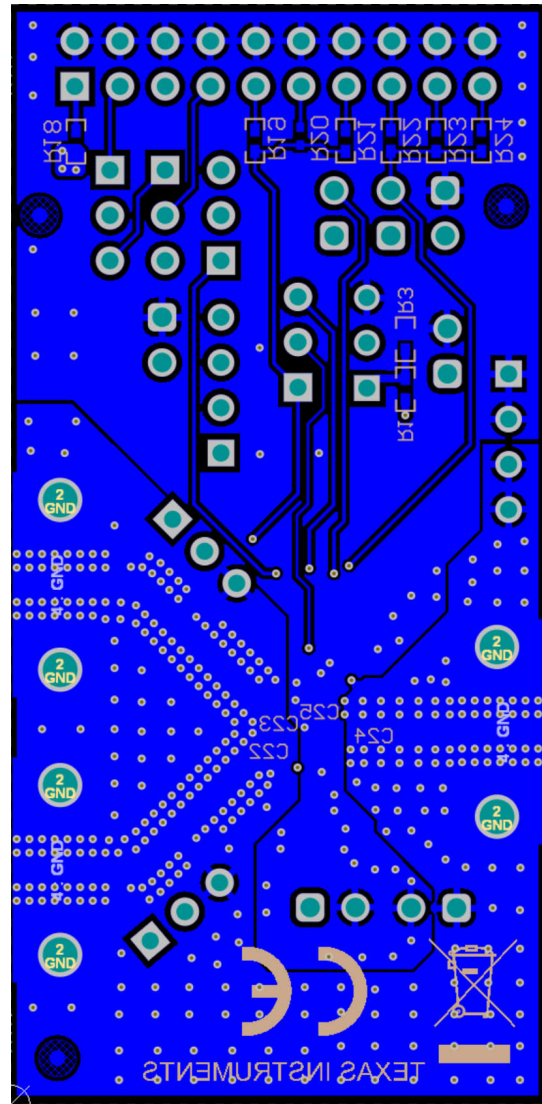


Figure 4-5. Bottom Layer

### 4.2.1 Stack-Up and Material

The TRF0108SP/SEP-EVM is a 67-mil, 4-layer board whose material type is Isola® 370HR. The top layer routes the power, ground, and signals between SMA connectors and the device. Second layer is the reference RF ground layer. The signal trace impedance is targeted at 50Ω. The bottom two are primarily ground layers.

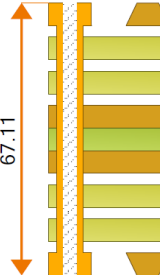
Layer	Stack up	Supplier	Supplier Description	Description	Base Thickness	Processed Thickness	εr
1		GOULD	COPPER FOIL	12+35 m	1.850	2.559	
		ISOLA	185HR	#2116	5.000	4.966	4.320
2		ISOLA	185HR	#2116	5.000	4.966	4.320
		ISOLA	185HR	1.00 1.0/1.0	1.378	1.378	4.420
3		ISOLA	185HR	#2116	5.000	4.966	4.320
		ISOLA	185HR	#2116	5.000	4.966	4.320
4		GOULD	COPPER FOIL	12+35 m	1.850	2.559	

Figure 4-6. TRF0108SP/SEP-EVM Stack-Up (Units in Mils)

### 4.3 TRF0108SP/SEP-EVM Bill of Material

**Table 4-1. TRF0108SP/SEP-EVM Bill Of Materials**

Designator	Quantity	Value	Description	Part Number	Manufacturer	Package Reference	Fitted
C1, C13	2	22uF	CAP, CERM, 22uF, 10V, +/- 20%, X5R, 0603	CL10A226MP8NUNE	Samsung Electro-Mechanics	0603	Fitted
C2, C3, C14, C15, C16	5	2.2uF	CAP, CERM, 2.2uF, 10V, +/- 10%, X7S, 0402	C1005X7S1A225K050BC	TDK	0402	Fitted
C4	1	0.22uF	CAP, CERM, 0.22uF, 10V, +/- 20%, X5R, 0201	LMK063BJ224MP-F	Taiyo Yuden	0201	Fitted
C5, C26, C27, C28, C29, C30, C31	7	0.1uF	CAP, CERM, 0.1uF, 16V, +/- 10%, X7R, 0402	ATC530L104KT16T	AT Ceramics	0402	Fitted
C6, C7, C8, C9, C10, C11, C12, C17, C22, C23, C24, C25	12	100nF	0.1µF ±20% 16V Ceramic Capacitor 0201 (0603 Metric)	560Z104MTT	KYOCERA AVX	0201	Fitted
J2, J4, J5	3		Header, 2.54mm, 2x1, Gold, TH	61300211121	Wurth Elektronik	Header, 2.54mm, 2x1, TH	Fitted
J9, J10	2		Header, 100mil, 3x1, Gold, TH	PBC03SAAN	Sullins Connector Solutions	PBC03SAAN	Fitted
J12	1		Header, 2.54mm, 4x1, Gold, TH	PBC04SAAN	Sullins Connector Solutions	Header, 2.54mm, 4x1, TH	Fitted
J13	1		Header, 100mil, 3x1, Tin, TH	PEC03SAAN	Sullins Connector Solutions	Header, 3 PIN, 100mil, Tin	Fitted
J18, J19, J20	3		50 Ohm JACK, SMT	145-0701-802	Cinch Connectivity	50 Ohm JACK, SMT	Fitted
L1	1	1000ohm	Ferrite Bead, 1000ohm at 100MHz, 0.25A, 0402	BLM15HD102SN1D	MuRata	0402	Fitted
R1, R3	2	3.24k	RES, 3.24k, 1%, 0.063W, AEC-Q200 Grade 0, 0402	CRCW04023K24FKED	Vishay-Dale	0402	Fitted
SH-J1, SH-J2	2	1x2	Shunt, 100mil, Gold plated, Black	SNT-100-BK-G	Samtec	Shunt	Fitted
U1	1		TRF0108	TRF0108RPVT/EM or TRF0108RPVTSP/EM	Texas Instruments	WQFN-FCRLF, 12	Fitted
C18, C20	0	10uF	CAP, CERM, 10µF, 10V,+/- 20%, X5R, 0402	CL05A106MP8NUB8	Samsung Electro-Mechanics	0402	Not Fitted
C19, C21	0	0.1uF	CAP, CERM, 0.1uF, 16V, +/- 10%, X5R, 0201	GRM033C71C104KE14D	MuRata	0201	Not Fitted
FID1, FID2, FID3, FID4, FID5, FID6	0		Fiducial mark. There is nothing to buy or mount.	N/A	N/A	N/A	Not Fitted

**Table 4-1. TRF0108SP/SEP-EVM Bill Of Materials (continued)**

Designator	Quantity	Value	Description	Part Number	Manufacturer	Package Reference	Fitted
J1, J6, J16, J21	0		Header, 100mil, 3x1, Gold, TH	PBC03SAAN	Sullins Connector Solutions	PBC03SAAN	Not Fitted
J3, J7, J8, J17	0		Header, 2.54mm, 2x1, Gold, TH	61300211121	Wurth Elektronik	Header, 2.54mm, 2x1, TH	Not Fitted
J11	0		Header, 2.54mm, 4x1, Gold, TH	PBC04SAAN	Sullins Connector Solutions	Header, 2.54mm, 4x1, TH	Not Fitted
J22	0		Receptacle, 100mil, 10x2, Gold, TH	PPPC102LFBN-RC	Sullins Connector Solutions	10x2 Receptacle	Not Fitted
R2, R5, R7, R8, R9, R10, R12, R14, R15, R17, R18, R19	0	0.1	RES, 0.1, 1%, 0.25W, 0402	ERJ2BWFR100X	Panasonic	0402	Not Fitted
R4, R6, R20	0	10.0k	RES, 10.0k, 1%, 0.063W, 0402	RC0402FR-0710KL	Yageo America	0402	Not Fitted
R21	0	20.0k	RES, 20.0k, 1%, 0.063W, AEC-Q200 Grade 0, 0402	CRCW040220K0FKED	Vishay-Dale	0402	Not Fitted
R22	0	2.20k	RES, 2.20k, 1%, 0.063W, AEC-Q200 Grade 0, 0402	RMCF0402FT2K20	Stackpole Electronics Inc	0402	Not Fitted
R23	0	4.70k	RES, 4.70k, 1%, 0.0625W, 0402	RC0402FR-074K7L	Yageo America	0402	Not Fitted
R24	0	4.99k	RES, 4.99k, 1%, 0.063W, 0402	RC0402FR-074K99L	Yageo America	0402	Not Fitted

## 5 Additional Information

### 5.1 Trademarks

Isola® is a registered trademark of Isola USA Corporation.  
All trademarks are the property of their respective owners.

## 6 Related Documentation

For related documentation, see the following:

- Texas Instruments, [TRF0108-SP Radiation-Hardness-Assured \(RHA\), DC to 12GHz Bandwidth, Differential-to-Single-Ended RF Amplifier datasheet](#)
- Texas Instruments, [TRF0108-SEP Radiation-Tolerant, DC to 12GHz Bandwidth, Differential-to-Single-Ended RF Amplifier datasheet](#)

## STANDARD TERMS FOR EVALUATION MODULES

1. *Delivery:* TI delivers TI evaluation boards, kits, or modules, including any accompanying demonstration software, components, and/or documentation which may be provided together or separately (collectively, an "EVM" or "EVMs") to the User ("User") in accordance with the terms set forth herein. User's acceptance of the EVM is expressly subject to the following terms.
  - 1.1 EVMs are intended solely for product or software developers for use in a research and development setting to facilitate feasibility evaluation, experimentation, or scientific analysis of TI semiconductor products. EVMs have no direct function and are not finished products. EVMs shall not be directly or indirectly assembled as a part or subassembly in any finished product. For clarification, any software or software tools provided with the EVM ("Software") shall not be subject to the terms and conditions set forth herein but rather shall be subject to the applicable terms that accompany such Software
  - 1.2 EVMs are not intended for consumer or household use. EVMs may not be sold, sublicensed, leased, rented, loaned, assigned, or otherwise distributed for commercial purposes by Users, in whole or in part, or used in any finished product or production system.
2. *Limited Warranty and Related Remedies/Disclaimers:*
  - 2.1 These terms do not apply to Software. The warranty, if any, for Software is covered in the applicable Software License Agreement.
  - 2.2 TI warrants that the TI EVM will conform to TI's published specifications for ninety (90) days after the date TI delivers such EVM to User. Notwithstanding the foregoing, TI shall not be liable for a nonconforming EVM if (a) the nonconformity was caused by neglect, misuse or mistreatment by an entity other than TI, including improper installation or testing, or for any EVMs that have been altered or modified in any way by an entity other than TI, (b) the nonconformity resulted from User's design, specifications or instructions for such EVMs or improper system design, or (c) User has not paid on time. Testing and other quality control techniques are used to the extent TI deems necessary. TI does not test all parameters of each EVM. User's claims against TI under this Section 2 are void if User fails to notify TI of any apparent defects in the EVMs within ten (10) business days after delivery, or of any hidden defects with ten (10) business days after the defect has been detected.
  - 2.3 TI's sole liability shall be at its option to repair or replace EVMs that fail to conform to the warranty set forth above, or credit User's account for such EVM. TI's liability under this warranty shall be limited to EVMs that are returned during the warranty period to the address designated by TI and that are determined by TI not to conform to such warranty. If TI elects to repair or replace such EVM, TI shall have a reasonable time to repair such EVM or provide replacements. Repaired EVMs shall be warranted for the remainder of the original warranty period. Replaced EVMs shall be warranted for a new full ninety (90) day warranty period.

### **WARNING**

**Evaluation Kits are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems.**

**User shall operate the Evaluation Kit within TI's recommended guidelines and any applicable legal or environmental requirements as well as reasonable and customary safeguards. Failure to set up and/or operate the Evaluation Kit within TI's recommended guidelines may result in personal injury or death or property damage. Proper set up entails following TI's instructions for electrical ratings of interface circuits such as input, output and electrical loads.**

**NOTE:**

**EXPOSURE TO ELECTROSTATIC DISCHARGE (ESD) MAY CAUSE DEGRADATION OR FAILURE OF THE EVALUATION KIT; TI RECOMMENDS STORAGE OF THE EVALUATION KIT IN A PROTECTIVE ESD BAG.**

### 3 Regulatory Notices:

#### 3.1 United States

##### 3.1.1 Notice applicable to EVMs not FCC-Approved:

**FCC NOTICE:** This kit is designed to allow product developers to evaluate electronic components, circuitry, or software associated with the kit to determine whether to incorporate such items in a finished product and software developers to write software applications for use with the end product. This kit is not a finished product and when assembled may not be resold or otherwise marketed unless all required FCC equipment authorizations are first obtained. Operation is subject to the condition that this product not cause harmful interference to licensed radio stations and that this product accept harmful interference. Unless the assembled kit is designed to operate under part 15, part 18 or part 95 of this chapter, the operator of the kit must operate under the authority of an FCC license holder or must secure an experimental authorization under part 5 of this chapter.

##### 3.1.2 For EVMs annotated as FCC – FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant:

#### **CAUTION**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### **FCC Interference Statement for Class A EVM devices**

*NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.*

#### **FCC Interference Statement for Class B EVM devices**

*NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:*

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### 3.2 Canada

##### 3.2.1 For EVMs issued with an Industry Canada Certificate of Conformance to RSS-210 or RSS-247

#### **Concerning EVMs Including Radio Transmitters:**

This device complies with Industry Canada license-exempt RSSs. Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

#### **Concernant les EVMs avec appareils radio:**

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

#### **Concerning EVMs Including Detachable Antennas:**

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. This radio transmitter has been approved by Industry Canada to operate with the antenna types listed in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

### Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante. Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

#### 3.3 Japan

3.3.1 *Notice for EVMs delivered in Japan:* Please see [http://www.tij.co.jp/lstds/ti\\_ja/general/eStore/notice\\_01.page](http://www.tij.co.jp/lstds/ti_ja/general/eStore/notice_01.page) 日本国内に輸入される評価用キット、ボードについては、次のところをご覧ください。

<https://www.ti.com/ja-jp/legal/notice-for-evaluation-kits-delivered-in-japan.html>

3.3.2 *Notice for Users of EVMs Considered "Radio Frequency Products" in Japan:* EVMs entering Japan may not be certified by TI as conforming to Technical Regulations of Radio Law of Japan.

If User uses EVMs in Japan, not certified to Technical Regulations of Radio Law of Japan, User is required to follow the instructions set forth by Radio Law of Japan, which includes, but is not limited to, the instructions below with respect to EVMs (which for the avoidance of doubt are stated strictly for convenience and should be verified by User):

1. Use EVMs in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
2. Use EVMs only after User obtains the license of Test Radio Station as provided in Radio Law of Japan with respect to EVMs, or
3. Use of EVMs only after User obtains the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to EVMs. Also, do not transfer EVMs, unless User gives the same notice above to the transferee. Please note that if User does not follow the instructions above, User will be subject to penalties of Radio Law of Japan.

【無線電波を送信する製品の開発キットをお使いになる際の注意事項】 開発キットの中には技術基準適合証明を受けていないものがあります。技術適合証明を受けていないものご使用に際しては、電波法遵守のため、以下のいずれかの措置を取っていただく必要がありますのでご注意ください。

1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用いただく。
2. 実験局の免許を取得後ご使用いただく。
3. 技術基準適合証明を取得後ご使用いただく。

なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。

上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。日本テキサス・イ

ンスツルメンツ株式会社

東京都新宿区西新宿 6 丁目 2 4 番 1 号

西新宿三井ビル

3.3.3 *Notice for EVMs for Power Line Communication:* Please see [http://www.tij.co.jp/lstds/ti\\_ja/general/eStore/notice\\_02.page](http://www.tij.co.jp/lstds/ti_ja/general/eStore/notice_02.page)

電力線搬送波通信についての開発キットをお使いになる際の注意事項については、次のところをご覧ください。 <https://www.ti.com/ja-jp/legal/notice-for-evaluation-kits-for-power-line-communication.html>

#### 3.4 European Union

3.4.1 *For EVMs subject to EU Directive 2014/30/EU (Electromagnetic Compatibility Directive):*

This is a class A product intended for use in environments other than domestic environments that are connected to a low-voltage power-supply network that supplies buildings used for domestic purposes. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

- 
- 4 *EVM Use Restrictions and Warnings:*
    - 4.1 EVMS ARE NOT FOR USE IN FUNCTIONAL SAFETY AND/OR SAFETY CRITICAL EVALUATIONS, INCLUDING BUT NOT LIMITED TO EVALUATIONS OF LIFE SUPPORT APPLICATIONS.
    - 4.2 User must read and apply the user guide and other available documentation provided by TI regarding the EVM prior to handling or using the EVM, including without limitation any warning or restriction notices. The notices contain important safety information related to, for example, temperatures and voltages.
    - 4.3 *Safety-Related Warnings and Restrictions:*
      - 4.3.1 User shall operate the EVM within TI's recommended specifications and environmental considerations stated in the user guide, other available documentation provided by TI, and any other applicable requirements and employ reasonable and customary safeguards. Exceeding the specified performance ratings and specifications (including but not limited to input and output voltage, current, power, and environmental ranges) for the EVM may cause personal injury or death, or property damage. If there are questions concerning performance ratings and specifications, User should contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may also result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM user guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, even with the inputs and outputs kept within the specified allowable ranges, some circuit components may have elevated case temperatures. These components include but are not limited to linear regulators, switching transistors, pass transistors, current sense resistors, and heat sinks, which can be identified using the information in the associated documentation. When working with the EVM, please be aware that the EVM may become very warm.
      - 4.3.2 EVMs are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems. User assumes all responsibility and liability for proper and safe handling and use of the EVM by User or its employees, affiliates, contractors or designees. User assumes all responsibility and liability to ensure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard. User assumes all responsibility and liability for any improper or unsafe handling or use of the EVM by User or its employees, affiliates, contractors or designees.
    - 4.4 User assumes all responsibility and liability to determine whether the EVM is subject to any applicable international, federal, state, or local laws and regulations related to User's handling and use of the EVM and, if applicable, User assumes all responsibility and liability for compliance in all respects with such laws and regulations. User assumes all responsibility and liability for proper disposal and recycling of the EVM consistent with all applicable international, federal, state, and local requirements.
  5. *Accuracy of Information:* To the extent TI provides information on the availability and function of EVMs, TI attempts to be as accurate as possible. However, TI does not warrant the accuracy of EVM descriptions, EVM availability or other information on its websites as accurate, complete, reliable, current, or error-free.
  6. *Disclaimers:*
    - 6.1 EXCEPT AS SET FORTH ABOVE, EVMS AND ANY MATERIALS PROVIDED WITH THE EVM (INCLUDING, BUT NOT LIMITED TO, REFERENCE DESIGNS AND THE DESIGN OF THE EVM ITSELF) ARE PROVIDED "AS IS" AND "WITH ALL FAULTS." TI DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, REGARDING SUCH ITEMS, INCLUDING BUT NOT LIMITED TO ANY EPIDEMIC FAILURE WARRANTY OR IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADE SECRETS OR OTHER INTELLECTUAL PROPERTY RIGHTS.
    - 6.2 EXCEPT FOR THE LIMITED RIGHT TO USE THE EVM SET FORTH HEREIN, NOTHING IN THESE TERMS SHALL BE CONSTRUED AS GRANTING OR CONFERRING ANY RIGHTS BY LICENSE, PATENT, OR ANY OTHER INDUSTRIAL OR INTELLECTUAL PROPERTY RIGHT OF TI, ITS SUPPLIERS/LICENSORS OR ANY OTHER THIRD PARTY, TO USE THE EVM IN ANY FINISHED END-USER OR READY-TO-USE FINAL PRODUCT, OR FOR ANY INVENTION, DISCOVERY OR IMPROVEMENT, REGARDLESS OF WHEN MADE, CONCEIVED OR ACQUIRED.
  7. *USER'S INDEMNITY OBLIGATIONS AND REPRESENTATIONS.* USER WILL DEFEND, INDEMNIFY AND HOLD TI, ITS LICENSORS AND THEIR REPRESENTATIVES HARMLESS FROM AND AGAINST ANY AND ALL CLAIMS, DAMAGES, LOSSES, EXPENSES, COSTS AND LIABILITIES (COLLECTIVELY, "CLAIMS") ARISING OUT OF OR IN CONNECTION WITH ANY HANDLING OR USE OF THE EVM THAT IS NOT IN ACCORDANCE WITH THESE TERMS. THIS OBLIGATION SHALL APPLY WHETHER CLAIMS ARISE UNDER STATUTE, REGULATION, OR THE LAW OF TORT, CONTRACT OR ANY OTHER LEGAL THEORY, AND EVEN IF THE EVM FAILS TO PERFORM AS DESCRIBED OR EXPECTED.

8. *Limitations on Damages and Liability:*

8.1 *General Limitations.* IN NO EVENT SHALL TI BE LIABLE FOR ANY SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL, OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF THESE TERMS OR THE USE OF THE EVMS , REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCLUDED DAMAGES INCLUDE, BUT ARE NOT LIMITED TO, COST OF REMOVAL OR REINSTALLATION, ANCILLARY COSTS TO THE PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, RETESTING, OUTSIDE COMPUTER TIME, LABOR COSTS, LOSS OF GOODWILL, LOSS OF PROFITS, LOSS OF SAVINGS, LOSS OF USE, LOSS OF DATA, OR BUSINESS INTERRUPTION. NO CLAIM, SUIT OR ACTION SHALL BE BROUGHT AGAINST TI MORE THAN TWELVE (12) MONTHS AFTER THE EVENT THAT GAVE RISE TO THE CAUSE OF ACTION HAS OCCURRED.

8.2 *Specific Limitations.* IN NO EVENT SHALL TI'S AGGREGATE LIABILITY FROM ANY USE OF AN EVM PROVIDED HEREUNDER, INCLUDING FROM ANY WARRANTY, INDEMNITY OR OTHER OBLIGATION ARISING OUT OF OR IN CONNECTION WITH THESE TERMS, , EXCEED THE TOTAL AMOUNT PAID TO TI BY USER FOR THE PARTICULAR EVM(S) AT ISSUE DURING THE PRIOR TWELVE (12) MONTHS WITH RESPECT TO WHICH LOSSES OR DAMAGES ARE CLAIMED. THE EXISTENCE OF MORE THAN ONE CLAIM SHALL NOT ENLARGE OR EXTEND THIS LIMIT.

9. *Return Policy.* Except as otherwise provided, TI does not offer any refunds, returns, or exchanges. Furthermore, no return of EVM(s) will be accepted if the package has been opened and no return of the EVM(s) will be accepted if they are damaged or otherwise not in a resalable condition. If User feels it has been incorrectly charged for the EVM(s) it ordered or that delivery violates the applicable order, User should contact TI. All refunds will be made in full within thirty (30) working days from the return of the components(s), excluding any postage or packaging costs.

10. *Governing Law:* These terms and conditions shall be governed by and interpreted in accordance with the laws of the State of Texas, without reference to conflict-of-laws principles. User agrees that non-exclusive jurisdiction for any dispute arising out of or relating to these terms and conditions lies within courts located in the State of Texas and consents to venue in Dallas County, Texas. Notwithstanding the foregoing, any judgment may be enforced in any United States or foreign court, and TI may seek injunctive relief in any United States or foreign court.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265  
Copyright © 2023, Texas Instruments Incorporated

## IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you fully indemnify TI and its representatives against any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to [TI's Terms of Sale](#), [TI's General Quality Guidelines](#), or other applicable terms available either on [ti.com](#) or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products. Unless TI explicitly designates a product as custom or customer-specified, TI products are standard, catalog, general purpose devices.

TI objects to and rejects any additional or different terms you may propose.

Copyright © 2026, Texas Instruments Incorporated

Last updated 10/2025