

User's Guide TIDU982–June 2015

SimpleLink™ Wi-Fi® CC3200 Smart Plug User's Guide





General Texas Instruments High Voltage CC3200 Smart Plug User Safety Guidelines

# WARNING

Always follow TI's setup and application instructions, including use of all interface components within their recommended electrical rated voltage and power limits. Always use electrical safety precautions to help ensure your personal safety and those working around you. Contact TI's Product Information Center at http://support/ti./com for further information.

Save all warnings and instructions for future reference.

# Failure to follow warnings and instructions may result in personal injury, property damage, or death due to electrical shock and burn hazards.

The enclosed CC3200 Smart Plug is intended strictly for customer demonstration purposes under the direct control of authorized TI field sales personnel with knowledge of electrical safety risks. In order to minimize risk of personal injury and property damage, at no time shall the CC3200 Smart Plug be operated or otherwise demonstrated by anyone other than a TI authorized field sales representative. The CC3200 Smart Plug should NEVER be left with a customer at any time for their own use or any other evaluation purpose, nor operated in an unintended manner without the direct presence or participation of the authorized TI field sales representative.

The customer should always be reminded that the final application design circuits are solely the responsibility of the customer and at no time allow GERBER plots of the CC3200 Smart Plug printed circuit board layout be provided to customers.

Any other use or application of the CC3200 Smart Plug is strictly prohibited by Texas Instruments.

When demonstrating the CC3200 Smart Plug the following practices and guidelines shall be followed:

- 1. Work Area Safety:
  - (a) Keep work area clean and orderly.
  - (b) Have qualified observers present anytime circuits are energized.
  - (c) Effective barriers and signage must be present in the area where the CC3200 Smart Plug and its interface electronics are energized, indicating operation and/or presence of high voltages, for the purpose of protecting inadvertent access.
  - (d) All interface circuits including but not limited to power supplies, evaluation modules, instruments, meters, scopes, and other related apparatus used in a development or demonstration environment exceeding 50 V<sub>RMS</sub>/75-V DC must be electrically located within a protected Emergency Power Off (EPO) protected power strip.
  - (e) Use stable and non-conductive work surface.
  - (f) Use adequately insulated clamps and wires to attach measurement probes and instruments. No freehand testing whenever possible.

2. Electrical Safety:

As a precautionary measure, it is always a good engineering practice to assume that the entire CC3200 Smart Plug may have fully accessible and active high voltages.

- (a) De-energize the CC3200 Smart Plug and all its interface outputs and electrical loads before performing any electrical or other diagnostic measurements. Revalidate that the CC3200 Smart Plug power has been safely de-energized.
- (b) With the CC3200 Smart Plug confirmed de-energized, proceed with required electrical circuit configurations or other CC3200 Smart Plug interface hook-ups, while still assuming the load circuit connected to the CC3200 Smart Plug and accompanying measuring instruments are electrically live.
- (c) Once the CC3200 Smart Plug readiness is complete, proceed with energization as intended.

# WARNING

While the CC3200 Smart Plug is energized, never touch any of its electrical circuits or controlled interface loads as they could be at high voltages capable of causing electrical shock hazard.

- 3. Personal Safety:
  - (a) Wear personal protective equipment such as latex gloves or safety glasses with side shields, or protect the EVM in an adequate lucent plastic box with interlocks from accidental touch.

Limitation for safe use: The CC3200 Smart Plug is intended only for demonstration purposes and not to be used at all as part of a production unit.

### Contents

1	Introduction	5
2	Requirements	5
3	Demo Overview	6
4	Smart Plug	7
5	Key Components	8
6	Install Android App	10
7	Network Connection	10
8	Starting the Demo — Android Application	11
9	Starting the Demo — Exosite Website	18
10	Software Files	20

# List of Figures

1	Main Interface	6
2	Main Components of Smart Plug	7
3	Provisioning by Using Wi-Fi Starter App	9
4	Sign-In Screen	11
5	Menu	11
6	mDNS With Device Found	12
7	Adding Current Device to Exosite Account	12
8	Device is Already Listed	12
9	Adding a Device Manually by Entering Information	13
10	Main List With Smart Plug Running in Local Connection	13
11	Device Screen With Cloud Connection Running	14
12	Plotting With Apparent Power Selected	14
13	Scheduling Table	15
14	Editing Detail	15
15	Displaying Device Details	15
16	Calibration Screen (Local Connection Only)	16
17	Enable/Disable Cloud Secure Connection (Local Connection Only)	16
18	Certificate Update Screen	16
19	Signed-Out Screen	17
20	Application Exit	17
21	Exosite Start Page	18
22	Metrology Data Monitoring Options	19
23	Device Menu in Android	20
24	Delete Device from Exosite Website	20

### List of Tables

1	Status LED Behavior Chart	8
2	Smart Plug Provisioning	9
3	mDNS Options	12
4	Adding New Device Setup	13



### 1 Introduction

There is an increasing application requirement for Wi-Fi-enabled energy measurement and control. This increase is manifested in end products like smart plugs, smart receptacles, and in general application spaces such as home appliance, smart grid, and building automation. The goal was to offer a form-factor reference design and application software that could very quickly be turned into a production Smart Plug. The deliverables would also address application requirements in connected energy measurement and any cloud-connected device. Updated information will be posted on the <u>C3200 Smart Plug product page</u>.

### 2 Requirements

Hardware:

- CC3200 Smart Plug
- Android<sup>™</sup> device with Android 4.1 (Jelly Bean, API level 16) or above
- Access point with internet connection

Software:

- Smart Plug Android application in the package
- Exosite account

TIDU982-June 2015

Submit Documentation Feedback

Introduction



### 3 Demo Overview

### 3.1 Android Application

The Smart Plug Android application is a user-friendly tool to interface with the CC3200 Smart Plug. All features mentioned in the introduction can be accessed in this application. The source code of this application is also available for download in the product's wiki page: http://processors.wiki.ti.com/index.php/CC31xx %26 CC32xx Provisioning.



Figure 1. Main Interface

### 3.2 Exosite® Website

6

Exosite is the cloud service to be used with the CC3200 Smart Plug. The service provides not only the storage for metrology data or an alternative platform to monitor the Smart Plug, but also a communication bridge between the Smart Plug and the Android application. When a mobile device is not in the same local network as the Smart Plug, the user can still access all the readings and most controlling features because the cloud service is doing all the work, making it almost seamless.



# 4 Smart Plug

The Smart Plug has a very simple look which simplifies the user experience. The main components are:

- Plug: On the back side of the Smart Plug, for plugging into a wall outlet.
- Socket: For plugging a device in the appliance.
- Power Indicator: LED indicator telling whether the Smart Plug is powered or not.
- Status Indicator: LED indicator telling the status of the Smart Plug.
- Provisioning Control Button: Performs provisioning.
- Relay Control Button: Manually controls the relay status of the Smart Plug.
- Reset Button: Resets the device forcefully.

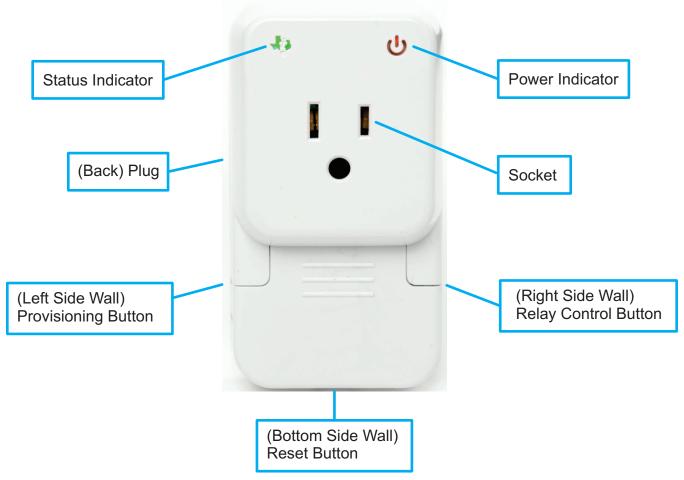


Figure 2. Main Components of Smart Plug

Smart Plug

### 5 Key Components

# 5.1 Plug

The plug is located on the back side of the Smart Plug. Plug it into a wall outlet to receive power. The device is capable of loading 100 to 240 V and 50- or 60-Hz power supply. If needed, use an adapter to fit your local socket type.

### 5.2 Socket

Plug the appliance into the socket to read power values. Use an adapter to fit if needed.

### 5.3 Power Indicator

Power light is represented by a red LED on the top right-hand corner. Being on means the Smart Plug is powered, off otherwise.

### 5.4 Status Indicator

The status indicator is represented by the three-color green-blue-red LED with a TI logo. This light tells the user the status of the Smart Plug to make sure the device is functioning the way the user intends. Table 1 lists all possible statuses.

LEFT LED	BEHAVIOR	STATUS
Red	Flashing slowly, then steady	The device is powering up, then fully powered
Reu	Flashing quickly	Any error indication
	Flashing quickly	The device is in Smart Config mode
	Flashing slowly	Trying to connect to a Wi-Fi network
Blue	Steady	Connected to Wi-Fi with IP address <b>NOTE:</b> If the device is unable to connect to the AP, LED blinks slowly during this period and the <i>Smart Config</i> button can be pressed
	Steady	Connected to the mobile app
Magenta	Flashing	During data transfer <b>NOTE:</b> If the Smart Plug is transferring data to both the cloud and the android app, the cloud's representation dominates.
Green	Steady	Internet connection available or connected to the cloud
Green	Flashing	During data transfer

### Table 1. Status LED Behavior Chart

# 5.5 Provisioning Button

On a new Smart Plug, since there is no Wi-Fi profile stored on the device, provisioning becomes important in order for the Smart Plug to connect to the AP of your desire.

The Smart Plug supports three types of provisioning:

PROVISIONING METHOD	PROVISIONING BUTTON ACTION	HOW TO USE
Smart Config	Hold for 1 to 3 seconds	Wi-Fi Starter App
AP	Hold for 3 to 10 seconds	Webpage
WPS	Hold for >10 seconds	WPS compatible router

### **Table 2. Smart Plug Provisioning**

<b>4</b> 3'	🛜 <b>Га</b> 91% 🔲 12:59 ам
Device	Configuration
Network Name	
Password 💿	•••••
Device Name	Name of the Device
This is the device nan (optional)	ne that will serve for discovery
	Start
((+•)) Smart Config	Devices Settings
$\bigtriangledown$	0

Figure 3. Provisioning by Using Wi-Fi Starter App

For more information about provisioning, visit the CC31xx and CC32xx Provisioning wiki page: http://processors.wiki.ti.com/index.php/CC31xx\_%26\_CC32xx\_Provisioning.

Once the Smart Plug is connected to the AP, the green LED will light up, indicating a successful connection.

### 5.6 Relay Control Button

Press this button to control the relay status forcefully. This button overrides any scheduled relay from the software. Users will have to re-enter the scheduling if desiring this feature.

# 5.7 Reset Button

Press this button to reset the device. Please be aware that all existing connections will be terminated. Stored Wi-Fi profiles are not affected.

Key Components



### 6 Install Android App

The companion Android app SmartPlug.apk is included in the package. However, since this app is not released on Google Play, users will need to use an alternative way to install the .apk file onto their devices. Please visit this website for instruction on how to install the .apk file: <u>http://www.cnet.com/how-to/how-to/how-to-install-apps-outside-of-google-play/</u>

### 7 Network Connection

To read the Smart Plug data, a user may choose to use the Android app or the Exosite website for this task. However, the Android app is capable of monitoring under a local network connection and cloud connection. One convenient feature for this dual connection mode is that the user does not necessarily need an internet connection or a cloud account to bring up the demo. If a local network is the only environment to work with, use the Android app to be the sole monitoring device.

### 7.1 Local Connection with Android App

When both the Smart Plug and the Android app are located in the same local network, the app can directly monitor the values without any external internet connection.



# 7.2 Cloud Connection With Android App

There are scenarios when the Smart Plug and the Android app are not located in the same local network. In such case, cloud connection becomes very useful because users can monitor the data at anywhere, as long as an internet connection exists. The Android app has Exosite API integrated into it so all data reported to the cloud server can be seen directly on the app.



### 7.3 Cloud Connection with Exosite Website

Whether or not the user uses the Android app to monitor Smart Plug data, all values are recorded on the Exosite server for users to login through a web browser and see the values.





### 8 Starting the Demo — Android Application

### 8.1 Signing in With an Exosite Account

Upon entering the app the first time, the user may sign up or use an existing account. To sign up for a free account, simply provide an email address and a password. For new and existing accounts, passwords must meet these requirements:


- At least six (6) characters
- Contains at least one number
- Contains at least one letter
- · Contains at least one non number or capital letter
- Cannot begin or end with spaces
- · Must be different from current password

Once signed in, the app will take the user to the main page with a list of devices that is either stored on the cloud or locally. The list may be empty if there are not any known devices added. The user may also choose to skip the sign-in process and proceed directly to the list; however, this will prevent the user from communicating with the device through the Exosite cloud service. Metrology data monitor and other controls are only accessible through local connection.

The main menu can be brought onto the screen by swiping from the left edge of the screen or by touching the application icon at the top of the screen. The menu provides access to all essential functionalities to navigate inside the app easier (Figure 5).

There are three ways to add a new device:

- Add a Device: Add a device manually by entering relevant information (see Figure 8).
- mDNS Search: Search for local devices using mDNS (see Figure 6).
- Sync Devices: If the user has added devices to an Exosite account before, this option will retrieve all of them and list them here.

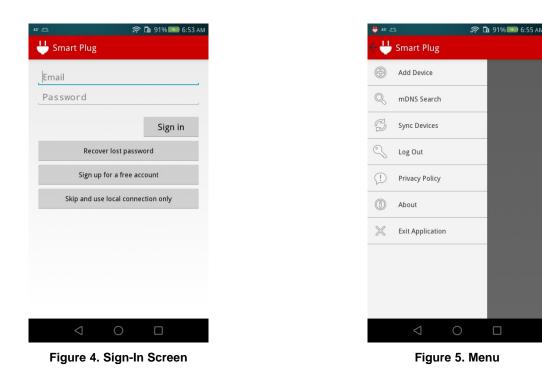



奈 🖬 91% 💷 1:00 AN

cc3200smartplug\_ti \_device-info.\_tcp.local.

D05FB81BC767 /192.168.1.222:1204 www.ti.com

# 8.2 Adding a New Device Through mDNS

When the CC3200 Smart Plug and mobile device are in the same local network, mDNS searching is the easiest way to add a new device. mDNS resolves host names to IP addresses within small networks that do not include a local DNS server. It allows the Android device to discover the Smart Plug and ultimately connects to it without manually entering IP addresses.

When a Smart Plug is found within the same network, one of these options will show up:


### Table 3. mDNS Options

OPTION	DESCRIPTION
Add To List	The device is not in the main list. Click this button to add the device to the list. A confirmation screen will show up, asking the user whether to add this device to the cloud account or not (see Figure 7). This screen will not be shown if the user is not signed into a cloud account.
Added	This image is not clickable. It indicates that the device is already listed in the app (see Figure 8). Check the main screen to see the device.
Update	This button will show if the device is already in the main list, but has an unmatched IP address. Click on this to update the IP address.

🔀 😃 43°	🔊 🖬 91% 📰 1:00 am
■ 🕂 MDNS Sea	irch
List will refres	h automatically
Add To List	cc3200smartplug_ti _device-info_tcp.local. D05FB81BC767 /192.168.1.222:1204
$\triangleleft$	0

Figure 6. mDNS With Device Found

2	43'	(î:	🖬 91% 📰 1:00	D AM
	🖶 MDNS Se			
Lis	t will refre	sh automa	tically	
8		cc3200si _device-info D05FB81BC70 /192.168.1.22	57	ti
	Confirma	ation		I
	Would you like to	add this device	to cloud?	
	Default (CIK:	508a6d42)		
	Cancel	NO	ок	
	$\triangleleft$	0		

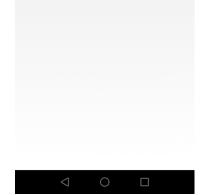

💾 MDNS Search

Added

List will refresh automatically

Figure 7. Adding Current Device to Exosite Account Figure 8. Device is Already Listed



### 8.3 Adding a New Device Manually

Another way to add a device is by entering all the information manually. This method is particularly useful if the user is adding a Smart Plug that will be used in the future but does not have it running at the moment. Table 4 describes all fields in the page.

FIELD	REQUIRED	DESCRIPTION
Name	Yes	Name of the device
Serial Number (MAC Address)	Yes	MAC address of the device. This is also known as the serial number for the Exosite cloud.
Local Connection Address	—	IP address of the device for local connection
Auto Cloud Connection Only Local Connection Only	_	<ul> <li>Connection policy for the device:</li> <li>Auto: Using cloud as the default, but will switch to local connection if the cloud connection is lost</li> <li>Cloud Connection Only: Forced cloud connection</li> <li>Local Connection Only: Forced local connection</li> </ul>
Portal	_	The portal in the account to which the Smart Plug will be added. No modification is needed if the user has only one portal.
Vendor	_	The name of the vendor. This field is not modifiable due to demonstration purpose. This is required if the user adds the current Smart Plug into the cloud account.
Model		The name of the model. This field is not modifiable due to its demonstration purpose. This is also required if the user adds the current Smart Plug into the cloud account.
Local Add Only	_	Enable this check box to add this Smart Plug to the mobile device only. It means the cloud account will not be able to communicate with it. If the user is not signed in, this field makes no difference.

### Table 4. Adding New Device Setup

	🛜 🖬 91% 🔲 1:00
Add Device	
Name *	
Serial Number (N	/IAC address) *
Local Connection	n Address
Auto	
Portal	-
Default (CIK: 508a	5d42)
Vendor	
texasinstruments	S
Model	
smartplugv2	
Local Add On	y Add Device
$\langle \langle \rangle$	



Figure 10. Main List With Smart Plug Running in Local Connection



### Starting the Demo — Android Application

#### www.ti.com

### 8.4 Metrology Data Monitoring

One of the main features of the Smart Plug reference design is the monitoring of metrology data. It currently displays the following metrology data:

- Active Power
- Average Power
- Reactive Power
- Apparent Power
- Voltage
- Current
- Frequency
- Power Factor
- Total Energy Consumption

Besides monitoring, it also has the ability to send data to the Smart Plug to improve user experience. Functionality includes the following:

- Device Powering Status
- Scheduling
- Power & Energy Threshold
- Power Saving Status
- 24-Hour Energy Summary
- Calibration
- Enable/Disable Secure Cloud Connection (SSL/TLS)
- Cloud Connection Certificate Update

Refer to the CC3200 Smart Plug design guide for implementation details (TIDU983).

cc3200smar	. 0-
MAC Address	D05FB81BC767
Connection Status	ON
Active/Average Power	250.123/230.456W
Reactive/Apparent Power	5.456/280.123W
Power Factor	0.9456
Voltage	240.123V
Current	1.025A
Frequency	50.026Hz
Total Energy Consumption	83.0000kWh
Hourly A Power saving di Device Update Interval Device Turned C	:1
Device Details	Scheduling



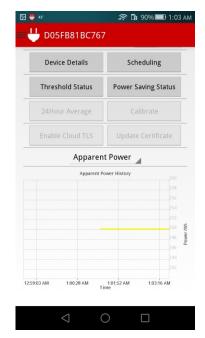


Figure 12. Plotting With Apparent Power Selected



Device Powering Status

This is also known as "relay". This option controls whether or not to supply power to the device plugged into the Smart Plug. Toggling this field will override the Scheduling setting.

Scheduling

Also called "switch table" in the code, this option schedules the relay on weekly bases. The days are divided into three categories: weekdays, Saturday, and Sunday. Each category has four time fields to modify. Users can specify the wake-up time (to turn on), leaving time (to turn off), returning time (to turn on), and sleeping time (to turn off), simulating a daily routine of a typical person (see Figure 13).

Editing Details

This item is located in the drawer menu on the left side of the screen. The user can make changes to fields as shown in Figure 14. There are currently three connection options: Auto, Cloud Connection Only, and Local Connection Only.

Device Details

A dialog box will pop up when the user clicks on the *Device Details* button (see Figure 15). This dialog shows all essential information to the user about the Smart Plug, mainly for debugging purposes.

Threshold Status

This sets the threshold values for power and energy. Once a value exceeds the specified threshold value, the corresponding metrology value will start blinking red, and the user will receive email alerts if the Smart Plug is connected to the user's cloud account.

Power Saving Status

The user has the option to enable or disable power saving. Once enabled, the metrology reporting period can be changed to report data every 5 to 60 seconds.

	🔊 🖬 65% 💷 5:31 PM				
Enable Scheduling					
Weekdays					
Wakeup (ON)	Hour 24 Minute:				
Leave (OFF)	Hour Minute:				
Return (ON)	Hour Minute:				
Sleep (OFF)	Hour Minute:				
	Saturday				
Wakeup (ON)	Hour Minute:				
Leave (OFF)	Hour Minute:				
Return (ON)	Hour Minute:				
Sleep (OFF)	Hour 24 Minute:				
ОК	Send Update				

Figure 13. Scheduling Table

DOSFB81BC767   cc3200smartplug_ti   DOSFB81BC767   192.168.1.222   Auto   CIK   1b7dcd583eafd4efdab072f050   a8d4089704394a   Refresh CIK   Cancel   Refresh CIK   Device Details   Scheduling   Threshold Status	42'	ê <b>D</b>	90% 💷 1:04 AM
Edit Details         cc3200smartplug_ti         D05FB81BC767         192.168.1.222         Auto         CIK         1b7dcd583eafd4efdab072f050         a8d4089704394a         Refresh CIK         Cancel       Re-Enable Device       Update         Device Details       Scheduling		81BC767	
cc3200smartplug_ti       D05FB81BC767       192.168.1.222       Auto       CIK       1b7dcd583eafd4efdab072f050 a8d4089704394a       Refresh CIK       Cancel     Re-Enable Device     Update       Device Details     Scheduling		0100707	
cc3200smartplug_ti         D05FB81BC767         192.168.1.222         Auto         CIK         1b7dcd583eafd4efdab072f050         a8d4089704394a         Refresh CIK         Cancel       Re-Enable Device       Update         Device Details       Scheduling			_
cc3200smartplug_ti         D05FB81BC767         192.168.1.222         Auto         CIK         1b7dcd583eafd4efdab072f050         a8d4089704394a         Refresh CIK         Cancel       Re-Enable Device       Update         Device Details       Scheduling	Edit De	tails	
D05FB81BC767 192.168.1.222 Auto CIK 1b7dcd583eafd4efdab072f050 a8d4089704394a Refresh CIK Cancel Re-Enable Device Update Device Details Scheduling	-		-
D05FB81BC767 192.168.1.222 Auto CIK 1b7dcd583eafd4efdab072f050 a8d4089704394a Refresh CIK Cancel Re-Enable Device Update Device Details Scheduling			
192.168.1.222       Auto       CIK       1b7dcd583eafd4efdab072f050       a8d4089704394a       Refresh CIK       Cancel     Re-Enable Device     Update       Device Details     Scheduling	cc3200	smartplug_ti	
Auto       CIK       1b7dcd583eafd4efdab072f050       a8d4089704394a       Refresh CIK       Update       Cancel     Re-Enable Device     Update       Device Details     Scheduling	D05FB8	31BC767	
Auto       CIK       1b7dcd583eafd4efdab072f050       a8d4089704394a       Refresh CIK       Cancel       Re-Enable Device     Update       Device Details     Scheduling	192,16	8.1.222	
CIK 1b7dcd583eafd4efdab072f050 a8d4089704394a Refresh CIK Cancel Re-Enable Device Update Device Details Scheduling			
1b7dcd583eafd4efdab072f050         a8d4089704394a         Refresh CIK         Cancel       Re-Enable Device       Update         Device Details       Scheduling			A
a8d4089704394a Refresh CIK Cancel Re-Enable Device Update Device Details Scheduling			
Cancel     Re-Enable Device     Update       Device Details     Scheduling			72f050
Cancel     Re-Enable Device     Update       Device Details     Scheduling		Refresh CIK	
Device Details Scheduling		Ken est en	_
Device Details Scheduling	-		-
	Cancel	Re-Enable Device	Update
Threshold Status	Device D	etails Sche	eduling
	Threshold	Status Power Sa	aving Status
	$\triangleleft$	0	

Figure 14. Editing Detail

cc3200sm D05FB81BC767				
	Detuns			
Name	cc3200smartplug_			
MAC Address	D05FB81BC76			
Exosite Client Model	smartplugv			
Exosite Vendor	texasinstrument			
Device RID dd11e231af	7581233fda791cc755c 82d7a97ed			
Device CIK 1b7dcd583e	afd4efdab072f050a8d 089704394			
Associated User				
Local Address	192.168.1.22			
Cloud Connection	tru			
Local Connection	tru			
Last Metrology Time	2014/12/17 17:31:1			
Metrology Database Size	10			
ОК				
0				
Device Details	Scheduling			
Threshold Status	Power Saving Status			

Figure 15. Displaying Device Details

### 8.5 Local versus Cloud Connection

The followings options can only be changed under a local connection:

- 24-Hour Energy Summary The 24-Hour Average button displays the hourly average energy summary in the past 24 hours.
- Calibration This option calibrates voltage and current readings if the displayed values are not shown correctly. This also displays scale factors and noises information (see Figure 16).
- Enable/Disable Secure Cloud Connection (SSL/TLS) This is a demonstration to show the ability to communicate with the cloud service with a non-secure connection or with an SSL/TLS connection.
- Certificate Update

Certificates come with expiration dates. Once expired, SSL/TLS communication will no longer be working. Having the ability to update the certificate is crucial to make the Smart Plug able to work in the future if the user has not used it for a long time. Click on the button to browse the certificate file to update.

As of right now, only the X509 file extension format is supported (.der extension).

🔀 💾 42'	흤 🖬 89% 💷 1:05 AM
■ 🖶 D05FB81BC767	
connection status	on
Active/Average Power	250.123/230.456W
P	E 456(000 400)4
Calibration	-
Desired Voltage	
Desired Current	
Voltage Scale Factor	540.00(
Current Scale Factor	1.00(
Voltage Noise	0.00′
Current Noise	0.00′
Cancel	Update
24Hour Average	Calibrate
Enable Cloud TLS	Update Certificate
< <	

Figure 16. Calibration Screen (Local Connection Only)

🔀 😃 42'	🔝 🖬 89% 💷 1:05 AM		
■ 🖶 D05FB81BC767			
- Connection Status			
Active/Average Power	250.123/230.456W		
Reactive/Apparent Power	5.456/280.123W		
Power Factor	0.9456		
Voltage	240.123V		
Secure Cloud Con	nection		
🗹 Enable			
Cancel	Update		
Device Details	Scheduling		
Threshold Status	Power Saving Status		
24Hour Average	Calibrate		
Enable Cloud TLS	Update Certificate		
1 0			

Figure 17. Enable/Disable Cloud Secure Connection (Local Connection Only)



Figure 18. Certificate Update Screen



### 8.6 Application Termination

Upon pressing the back or home button on the bottom of the screen, the app interface will exit, but the application is still running as a service in the background. Any established communication will sustain and receive metrology updates constantly. To exit the application, select "Exit Application" from the menu (see Figure 20).

### 8.7 Troubleshooting and Bug Report

Due to the Android application being used for demonstration purposes and not for end-user distribution, it may contain some bugs. This section briefly describes several problematic scenarios and possible resolutions:

- Cloud Synchronization
  - If the user cannot add a device to the cloud account, contact the local FAE. This device may have been registered by other users before and have not been removed from their account.
  - If a device cannot be deleted (it may show a short message saying "Error"). Manually delete all data by going to Settings → Apps → All → Smart Plug → Clear Data. This path may vary among different Android devices.
- Application Crash
  - When encountering application crash, a dialog will show up and asks the user to report the bug to the developer. Send the report to the local FAE so TI can improve the robustness of the application.
  - When encountering an application crash, the application may restart automatically. However, application stability is not guaranteed at this point. Exit the application through the "Exit Application" option in the menu and restart.

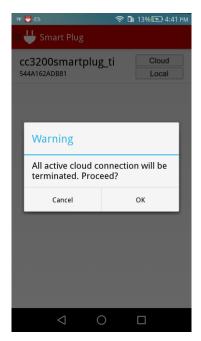


Figure 19. Signed-Out Screen

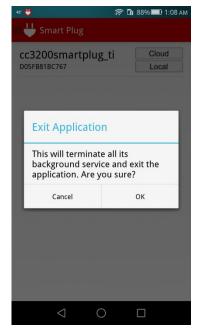


Figure 20. Application Exit



### 9 Starting the Demo — Exosite Website

An alternative way to monitor the Smart Plug is by using the cloud website. Exosite is the default cloud service provider for Smart Plug. Exosite cloud allows the user to monitor and manipulate the Smart Plug even if user's Android device is not within the same local network of the Smart Plug. Register a free account by using the Android application or through the following link to the TI-Exosite Site: https://ti.exosite.com/login.

Once signed in, two columns of information panels and a menu appear on the left side of the screen (see Figure 21). If the user has any existing device that was added before through the Android application or on the website, the user can see them all in the "Device List" panel on the right. Note that devices listed here may not be all Smart Plugs. This page is essentially a portal to all TI devices, and Smart Plug is one of them. However, the Android application will only display Smart Plug (specifically, Smart Plug V2) devices.

PORTAL MENU	Getting S	tarted Guide C	Device List - Click the Dev	rice to see Data Dashboard	C
Overview	Step 1	Configure your device: See Exosite-supported TI Devices <u>here</u> to set up your device.	Name▲ SmartPlugV1_B3	Active	Active Event
	Step 2	<ul> <li>Add a new device to your Portal:</li> <li>1. <u>Click here</u> to add a new device to your Portal</li> <li>2. Once successfully added, the new device will be shown under "Device List", or navigate to the Portal Dashboard from <u>here</u>, select the device from top drop-down menu to see reported data.</li> </ul>			
	Step 3	Monitor and interact with your data: 1. Click data labels on device image to see data history. 2. <u>Add a dashboard</u> and widgets to visualize your data.			
	Step 4	<ul> <li>Useful Links:</li> <li>1. <u>11 M2M Projects</u> - All TI kit projects on Exosite.com</li> <li>2. <u>11 Community Forum</u> - Community projects and forums</li> <li>3. <u>New User Guide</u> - Detailed information about using Exosite</li> <li>4. <u>Help Section</u> - Information about Exosite and this tool</li> </ul>			

Figure 21. Exosite Start Page

### 9.1 Adding a New Device

To add a new device, click the link in the Step 2 shown on the left panel in Figure 21.

- 1. Check "Select a supported device" and choose "Smart Plug V2".
- 2. Click Continue.
- 3. Enter MAC address and name of the device. The location field is optional.
- 4. Click Continue.

Once the device is successfully added, the user will be given a CIK number as a reference. This number is generated based on the MAC address. If an error appears saying that the device cannot be added, check with the local FAE to make sure the device is not registered to another account.

Going back to the home screen, the new device is in the list on the right. Click on the device name to start monitoring.



Starting the Demo - Exosite Website

### www.ti.com

# 9.2 Metrology Data Monitoring

The Exosite cloud webpage provides basic monitoring that closely resembles the Android application. The website is mainly used an alternative monitoring interface in case an Android device is not available.

MAGE Mine	C							
ita vices	Smart	Plug St	atus					C
ents	• Sma	rt Plug	Demo	DEVICE	STATE ON O	POWER	SAVING MODE	ON OFF
ishboards iripts	POWER			ENERGY	FREQUENCY			
lmin PRTAL MENU Verview	6.351 v	118.597 v	0.135 ^	0.0009 KWh	<b>59.99</b> <sub>Hz</sub>	<b>14.709</b>	0.3964 	<b>16.021</b>
	•	Data receivin Power thresh Energy thres	old value 2	/sec watts 19400 KWh		SAVE		
	Realtime Power							0
	(i) 10 5				//////////////////////////////////////	W W		
	0							
	Average Power -	1 Hour						C
	Average Power -		04:00 18:	04:30 18:05:00	18:05:30	18:06:00	18:06:30	18:07:00
	Average Power -	3:03:30 18:	04:00 18:1	04:30 18:05:00	18.05.30	18:06:00	18.06.30	18.07.00
	Average Power -	3:03:30 18:	04:00 18:		18:05:30 altime data time wir		18.06:30	18:07:00
	Average Power -	3:03:30 18:	04:00 18:0				18.06.30	18.07.00
	Average Power - (a) 2.5 2.0 0.0 10 Average Energy (b) 10 10 Average Energy (b) 10 10 Average Energy	- 24 Hours	lule v E	No data within rea	altime data time wir		18.06.30	18.07.00
	Average Power - (a) the state of the state	3:03:30 18: - 24 Hours ler Schec Mon-Fri	iule V E Saturday	No data within rea nable Schedule Sunday	altime data time wir Mess Message Ei	dow Sage mail example@co		18:07:00
	Average Power - (a) the state of the state	- 24 Hours	lule v E	No data within rea	altime data time wir	dow Sage mail example@co		c
	Average Power -	3:03:30 18: - 24 Hours ler Schec Mon-Fri	iule V E Saturday	No data within rea nable Schedule Sunday	altime data time wir Mess Message Ei	dow Sage mail example@co		c
	Average Power - (a) the second secon	3:03:30 18: - 24 Hours ler Schec Mon-Fri 6:00 AM	Iule V E Saturday 8:00 AM	No data within rea nable Schedule Sunday 7:00 AM	altime data time wir Mess Message Ei	dow Sage mail example@co		c

Figure 22. Metrology Data Monitoring Options



### 9.3 Removing Device from Exosite

If the same Smart Plug needs to be used by someone else in the future, delete the MAC address stored on the cloud to allow the next user to register the same device in his or her account. Only one MAC address can be registered by one user at the same time.

There are two ways to delete the device from the cloud:

- If the Smart Plug was added to your cloud account via the Android application, you can simply delete the device from the App menu by choosing the "Delete Device" option (see Figure 23). Synchronization will be done automatically.
- To delete the device from the cloud website, go to the menu on the left side of the page and click "Devices" → your Smart Plug device. Under the "Delete Device" section, type "confirm" in the box and click "DELETE" (see Figure 24).

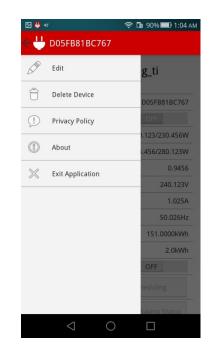


Figure 23. Device Menu in Android

	To re-enable, first type "confirm" in the box below.	Schedule	schedule	2400,2400,2400,2400,24	
MANAGE		Temperature	temp	none	
Home	CONTINUE	Voltage	volt	120.54	
Data Devices	Delete Device				HELP +
Events	WARNING! If you delete this device, all data will be lost.				Ξ.
Dashboards	IMPORTANT! Once deleted, another user could activate this device				
Scripts	To delete, first type "confirm" below.				
Admin PORTAL MENU	confirm DELETE				
Overview				CLOSE	and the second
					and a second second second

Figure 24. Delete Device from Exosite Website

### 10 Software Files

To download the software files for this reference design, refer to <u>http://www.ti.com/tool/TIDC-</u>CC3200smartplug.

### **IMPORTANT NOTICE**

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as "components") are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have *not* been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.

Products		Applications	
Audio	www.ti.com/audio	Automotive and Transportation	www.ti.com/automotive
Amplifiers	amplifier.ti.com	Communications and Telecom	www.ti.com/communications
Data Converters	dataconverter.ti.com	Computers and Peripherals	www.ti.com/computers
DLP® Products	www.dlp.com	Consumer Electronics	www.ti.com/consumer-apps
DSP	dsp.ti.com	Energy and Lighting	www.ti.com/energy
Clocks and Timers	www.ti.com/clocks	Industrial	www.ti.com/industrial
Interface	interface.ti.com	Medical	www.ti.com/medical
Logic	logic.ti.com	Security	www.ti.com/security
Power Mgmt	power.ti.com	Space, Avionics and Defense	www.ti.com/space-avionics-defense
Microcontrollers	microcontroller.ti.com	Video and Imaging	www.ti.com/video
RFID	www.ti-rfid.com		
OMAP Applications Processors	www.ti.com/omap	TI E2E Community	e2e.ti.com
Wireless Connectivity	www.ti.com/wirelessconne	ctivity	

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2015, Texas Instruments Incorporated