





TMAG5170D-Q1 SLYS052A - MARCH 2023 - REVISED DECEMBER 2023

# TMAG5170D-Q1 Dual-Die High-Precision 3D Linear Hall-Effect Sensor With SPI

#### 1 Features

- 3D Hall-effect sensor performance:
  - Sensitivity mismatch thermal drift X-Y axes: ±2.3% (Max)
  - X-Y angle thermal drift: ±1.2° (Max)
  - 20 kSPS conversion rate for single axis
- Fully isolated dual-die with vertically aligned sensing elements
- **Functional Safety-Compliant:** 
  - Developed for functional safety applications
  - Designed to meet ASIL D requirements when implemented with the appropriate system-level control according to the Functional Safety Manual
- AEC-Q100 qualified for automotive applications:
  - Temperature grade 0: –40°C to 150°C
- Configurable 10-MHz serial peripheral interface (SPI) with cyclic redundancy check (CRC)
- · Built-in temperature sensor and compensation for multiple magnet types
- Independently selectable X, Y, and Z ranges:
  - TMAG5170DA1-Q1: ±25, ±50, ±100 mT
  - TMAG5170DA2-Q1: ±75, ±150, ±300 mT
- Autonomous wake-up and sleep mode for threshold detection consuming only 1.5 µA
- Integrated digital filter with up to 32 times sensor data integration
- Conversion trigger through the ALERT, CS, or SPI communications
- Supply voltage range: 2.3 V to 5.5 V

## 2 Applications

- **Electric Power Steering**
- Shifter systems
- Steering column control
- Brake systems
- Wiper modules
- **Actuators**

## 3 Description

The TMAG5170D-Q1 is a fully redundant, electrically isolated dual die 3D hall effect sensor with a precision signal chain. The two dies are vertically aligned providing superior matching output results with each die being independently configurable, including temperature sensing with temperature drift compensation. Multiple measurement types are supported included 1D linear, 2D angle, 3D joystick and magnetic threshold cross applications.


The TMAG5170D-Q1 contains on-chip diagnostic features required for high reliability automotive and industrial applications, including monitors of both internal and external fault conditions. The device supports multiple power options such as wake-up and sleep mode, allowing designers to optimize system power consumption based on system-level needs.


Integrated angle calculation engine (CORDIC) provides full 360° angular position information for both on-axis and off-axis angle measurements with magnetic gain and offset correction to mitigate the impact of system mechanical error sources. The integrated ALERT function can be used to generate interrupt with either sensor conversion, magnetic threshold cross, or functional safety violation.

## **Package Information**

PART NUMBER	PACKAGE <sup>(1)</sup>	PACKAGE SIZE(2)	
TMAG5170D-Q1	PW (TSSOP, 16)	5.00 mm × 6.40 mm	

- For all available packages, see the package option (1) addendum at the end of the data sheet.
- The package size (length × width) is a nominal value and includes pins, where applicable.

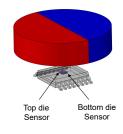

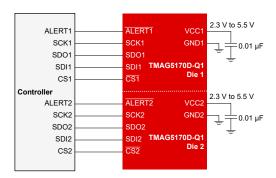

**Application Block Diagram** 



# **Table of Contents**

1 Features1	6.4 Device Functional Modes23
2 Applications1	6.5 Programming
3 Description	
4 Pin Configuration and Functions3	
5 Specifications4	7.2 Typical Application37
5.1 Absolute Maximum Ratings4	7.3 Best Design Practices39
5.2 ESD Ratings4	7.4 Power Supply Recommendations40
5.3 Recommended Operating Conditions4	7.5 Layout40
5.4 Thermal Information4	8 Register Map42
5.5 Electrical Characteristics5	9 Device and Documentation Support53
5.6 Magnetic Characteristics7	9.1 Receiving Notification of Documentation Updates53
5.7 Power up Timing10	9.2 Support Resources53
5.8 SPI Interface Timing10	9.3 Trademarks53
5.9 Typical Characteristics11	9.4 Electrostatic Discharge Caution53
6 Detailed Description14	9.5 Glossary53
6.1 Overview14	10 Revision History53
6.2 Functional Block Diagram14	11 Mechanical, Packaging, and Orderable
6.3 Feature Description15	Information53



# **4 Pin Configuration and Functions**

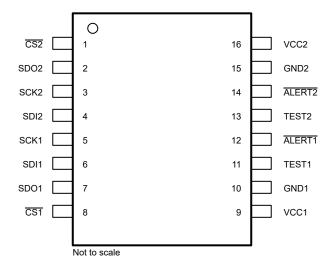


Figure 4-1. PW Package 16-Pin TSSOP Top View

**Table 4-1. Pin Functions** 

PIN		TYPE <sup>(1)</sup>	DESCRIPTION
NO.	NAME	I TPE("/	DESCRIPTION
1	CS2	I	Chip select, bottom die
2	SDO2	0	Serial data out, bottom die
3	SCK2	I	Serial clock, bottom die
4	SDI2	I	Serial data in, bottom die
5	SCK1	I	Serial clock, top die
6	SDI1	I	Serial data in, top die
7	SDO1	0	Serial data out, top die
8	CS1	I	Chip select, top die
9	VCC1	Р	Main power supply, top die. Handles 2.3-V to 5.5-V power supply input
10	GND1	G	Ground, top die
11	TEST1	I/O	Test input, top die, connect to ground
12	ALERT1	I/O	Status output/Trigger, top die
13	TEST2	I/O	Test input, bottom die, connect to ground
14	ALERT2	I/O	Status output/Trigger, bottom die
15	GND2	G	Ground, bottom die
16	VCC2	Р	Main power supply, bottom die. Handles 2.3-V to 5.5-V power supply input

(1) I = input, O = output, I/O = input and output, G = ground, P = power



## **5 Specifications**

# **5.1 Absolute Maximum Ratings**

		MIN	MAX	UNIT
V <sub>CC</sub>	Main supply voltage, VCC1, VCC2	-0.3	7	V
I <sub>OUT</sub>	Output current, SDO1, SDO2, ALERT1, ALERT2	-10	10	mA
V	Pin voltage, SDO1, SDO2, ALERT1, ALERT2	-0.3	7	V
V <sub>IO</sub>	Pin voltage, SDI1, CS1, SCK1, SDI2, CS2, SCK2	-0.3	V <sub>CC</sub> + 0.3 or V <sub>CCIO</sub> + 0.3	V
B <sub>MAX</sub>	Magnetic flux density		Unlimited	Т
TJ	Junction temperature	-40	170	°C
T <sub>stg</sub>	Storage temperature	-65	170	°C

## 5.2 ESD Ratings

				VALUE	UNIT
		Human body model (HBM), per AEC HBM ESD classification level 2	Q100-002 <sup>(1)</sup>	±2000	
V <sub>(ESD)</sub>	(ESD) Electrostatic discharge	\ //!	Corner pins (1, 8, 9, and 16)	±750	V
		AEC Q100-011 CDM ESD classification level C4B	All pins	±500	

<sup>(1)</sup> AEC Q100-002 indicates that HBM stressing shall be in accordance with the ANSI/ESDA/JEDEC JS-001 specification.

## **5.3 Recommended Operating Conditions**

		MIN	MAX	UNIT
V <sub>VCC</sub>	Main supply voltage	2.3	5.5	V
	Output current, SDO1, SDO2	-2	2	mA
lout	Output current, ALERT1, ALERT2	0	2	mA
	Pin voltage, SDO1, SDO2, ALERT1, ALERT2	0	5.5	V
V <sub>IO</sub>	Pin voltage, SDI1, CS1, SCK1, SDI2, CS2, SCK2	0	V <sub>CC</sub> + 0.3 or V <sub>CCIO</sub> + 0.3	V
T <sub>A</sub>	Operating free air temperature	-40	150	С

## **5.4 Thermal Information**

		TMAG5170D-Q1	
	THERMAL METRIC <sup>(1)</sup>	PW (16-TSSOP)	UNIT
		PINS	
$R_{\theta JA}$	Junction-to-ambient thermal resistance	106.4	°C/W
R <sub>0JC(top)</sub>	Junction-to-case (top) thermal resistance	33.5	°C/W
$R_{\theta JB}$	Junction-to-board thermal resistance	63.5	°C/W
$\Psi_{JT}$	Junction-to-top characterization parameter	2.4	°C/W
$\Psi_{JB}$	Junction-to-board characterization parameter	62.7	°C/W

<sup>(1)</sup> For more information about traditional and new thermal metrics, see the Semiconductor and IC Package Thermal Metrics application report.



## **5.5 Electrical Characteristics**

Over  $T_A$  = -40°C to 125°C range and  $V_{CC}$  = 2.3 V to 5.5 V (unless otherwise noted); Typical specification are at  $T_A$  = 25°C and  $V_{CC}$  = 5 V (unless otherwise noted)

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
Digital Input/Ou	ıtput				1	
V <sub>IH</sub>	Input logic high voltage, SDI1, CS1, SCK1, SDI2, CS2, SCK2		0.75 * V <sub>CC</sub>			V
V <sub>IL</sub>	Input logic low voltage, SDI1, CS1, SCK1, ALERT1, SDI2, CS2, SCK2, ALERT2				0.25 * V <sub>CC</sub>	V
V <sub>OH</sub>	Output HIGH voltage, SDOx pins	I <sub>OUT</sub> = 2 mA	V <sub>CC</sub> -0.4		V <sub>CC</sub>	V
V <sub>OL</sub>	Output LOW voltage, SDOx pins	I <sub>OUT</sub> = -2 mA	0		0.4	V
V <sub>OL</sub>	Output LOW voltage, ALERTx pins	I <sub>OUT</sub> = -2 mA	0		0.4	V
t <sub>FALL_ALERT</sub>	ALERTx output fall time	$R_{PU} = 10 \text{ k}\Omega$ $C_L = 20 \text{ pF}$		50		ns
t <sub>ALERT</sub>	ALERTx output pulse width with conversion complete or threshold cross interrupt event	ALERT_MODE = 0h Interrupt & Trigger Mode		5		μs
t <sub>ALERT</sub>	ALERTx output pulse width with other interrupt events	ALERT_MODE = 0h Interrupt & Trigger Mode		31		μs
l <sub>oz</sub>	Output Leakage current, ALERTx pins	ALERT pin disabled V <sub>OZ</sub> = 5.5 V	0	30	100	nA
Power Supply						
V <sub>CC_PORRise</sub>	Power on reset voltage at VCCx ramping up		1.15	1.4	1.7	V
V <sub>CC_PORFall</sub>	Power off reset voltage at VCCx ramping down		0.8	1.2	1.6	V
V <sub>CC_UV</sub>	Under voltage threshold at VCCx		2.0	2.1	2.3	V
V <sub>CC_OV</sub>	Over voltage threshold at VCCx		5.57	5.9	6.9	V
I <sub>ACTIVE</sub>	Active mode current from VCC1 or VCC2	CS high		3.4	4.5	mA
I <sub>STDBY</sub>	Stand-by mode current from VCC1 or VCC2	CS high		8.0	1.2	mA
I <sub>CFG</sub>	Configuration mode current from VCC1 or VCC2	CS high		0.06	0.15	mA
I <sub>SLP</sub>	Sleep mode current from VCC1 or VCC2	∇S high		1.3	45	μΑ
I <sub>DEEP_SLP</sub>	Deep sleep mode current from VCC1 or VCC2	∇S high		5	300	nA
	Duty-cycle mode current consumption	Data active rate 1000 Hz		290	1.7 1.6 2.3 6.9 4.5 1.2 0.15	μA
	for each die	Data active rate 100 Hz		34		μΑ
	One channel enabled	Data active rate 10 Hz		4.5		μΑ
loo pou	CONV_AVG = 0h  Data active rate 1 Hz  2.2		μΑ			
ICC_DCM	Duty-cycle mode current	Data active rate 1000 Hz		360		μΑ
	consumption for each die	Data active rate 100 Hz		43		μΑ
	Two channels enabled CONV AVG = 0h	Data active rate 10 Hz		5		μΑ
	OONV_AVO = 011	Data active rate 1 Hz		2.3		μΑ

Over  $T_A$  = -40°C to 125°C range and  $V_{CC}$  = 2.3 V to 5.5 V (unless otherwise noted); Typical specification are at  $T_A$  = 25°C and  $V_{CC}$  = 5 V (unless otherwise noted)

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
Operating Spe	eed					
t <sub>w_trigger</sub>	Pulse width for conversion trigger input signal			15		μs
	Conversion time (1)	CONV_AVG = 0h <sup>(2)</sup>		50		μs
t <sub>measure</sub>	OPERATING_MODE = 2h One channel enabled	CONV_AVG = 5h <sup>(3)</sup>		825		μs
f <sub>HFOSC</sub>	Internal high-frequency oscillator speed		2.95	3.2	3.5	MHz
f <sub>LFOSC</sub>	Internal low-frequency oscillator speed		13.5	16	19.5	KHz
Temperature S	Sensing		•			
T <sub>SENS_T0</sub>	Reference temperature for TADC <sub>T0</sub>		20.5	25	29.5	°C
TADC <sub>T0</sub>	TEMP_RESULT decimal value @ T <sub>SENS_T0</sub>			17522		
TADC <sub>RES</sub>	Temp sensing resolution		58.2	60.0	61.8	LSB/°C
NDMC (T)	DMC (4 Sigma) tomperature paids	CONV_AVG = 5h		0.06		°C
NRMS (T)	RMS (1 Sigma) temperature noise	CONV_AVG = 0h		0.35		°C
Sensor Locati	ion					
d <sub>s1_s2</sub>	Sensor displacement in the X and Y plane			25	75	μm
A <sub>s1_s2</sub>	Relative angular rotation between top and bottom sensor in degree			1	3	deg

<sup>(1)</sup> To calculate the time between conversion request and the availability of the conversion result, add the initialization time to the t<sub>measure</sub> as explained in Comparing Operating Modes Table. For continuous conversion, the initialization time is applicable only for the first conversion.

<sup>(2)</sup> Add 25 µs for each additional channel enabled for conversion with CONV\_AVG = 0h.

<sup>(3)</sup> For conversion with CONV\_AVG = 5h, each axis data is collected 32 times. If an additional channel is enabled with CONV\_AVG = 5h, add 32×25 μs = 80 0μs to the t<sub>measure</sub> to calculate the conversion time for two axes.



## **5.6 Magnetic Characteristics**

Over  $T_A$  = -40°C to 125°C range and  $V_{CC}$  = 2.3 V to 5.5 V (unless otherwise noted); Typical specification are at  $T_A$  = 25°C and  $V_{CC}$  = 5 V (unless otherwise noted)

	PARAMETER	TEST CO	ONDITIONS	MIN	TYP	MAX	UNIT
TMAG5170A1							
		x_RANGE <sup>(2)</sup> = 0h			±50		mT
B <sub>RANGE</sub>	Linear magnetic range	x_RANGE <sup>(2)</sup> = 1h	### ### ### ### ### ### ### ### ### ##	±25		mT	
		$x$ _RANGE <sup>(2)</sup> = 2h			±100		mT
		x RANGE <sup>(2)</sup> = 0h			654		LSB/mT
SENS	Sensitivity	x RANGE <sup>(2)</sup> = 1h			1308	±3.9 ±4.9 ±3.4 ±4.5 ±5.4 ±4.5 ±2.3 ±3.1 ±3.1 ±400 ±600 ±8.1 ±2.1 185 217 45 55 82 90 20	LSB/mT
		$x$ _RANGE $^{(2)}$ = 2h			326		LSB/mT
SENS <sub>ERR</sub>	Sensitivity error	X, Y, or Z axis			±1.0	±3.9	%
LIVI		T <sub>A</sub> = 25°C	B <sub>RANGE</sub> = 100 mT	,	±1.0	±4.9	%
SENS <sub>ERR_DR</sub>	Sensitivity thermal drift	X, Y, or Z axis B <sub>RANGE</sub> = 25 mT, 50 m	T, 100 mT		±1.0	±3.4	%
SENS <sub>LTD</sub>	Sensitivity Lifetime drift	X, Y, Z axes			±0.5		%
CENC	Concitivity Line suit : Fores	T = 25°C	X, Y axes	,	±0.1		%
SENS <sub>LE</sub>	Sensitivity Linearity Error	T <sub>A</sub> = 25°C	Z axis		±0.05		%
			X-Y axes	,	±0.02	±3.9 ±4.5 ±5.4 ±4.5 ±2.3 ±3.1 ±400 ±600 ±8.1 ±2.1 185 217 45 55 82 90 20 23 ±1.1	%
SENS <sub>MIS</sub>	Sensitivity mismatch	T <sub>A</sub> = 25°C	Y-Z axes		±0.17	±5.4	%
			X-Z axes		±0.15	±4.5	%
		X-Y axes			±0.8	±2.3	%
SENS <sub>MIS_DR</sub>	Sensitivity mismatch thermal drift	Y-Z axes		,	±0.7	±3.1	%
_		X-Z axes			±1.4	±3.1	%
B <sub>OFFSET</sub>	X, Y, or Z axis	±400	μΤ				
OTTOET		X, Y, or Z axis B <sub>RANGE</sub> = 100 mT	T <sub>A</sub> = 25°C		±150	±600	μΤ
D	Office A the course of elucity	X or Y axis			±1.0	±8.1	μT/°C
B <sub>OFFSET_DR</sub>	Offset thermal drift	Z axis			±0.50	±2.1	μT/°C
B <sub>OFFSET_LTD</sub>	Offset Lifetime drift				±50		μΤ
		X or Y axis	T <sub>A</sub> = 25°C		140	50 25 00 54 08 26 1.0 ±3.9 1.0 ±4.9 1.0 ±3.4 0.5 0.1 05 02 ±4.5 17 ±5.4 15 ±4.5 0.8 ±2.3 0.7 ±3.1 1.4 ±3.1 10 ±400 50 ±600 1.0 ±8.1 50 ±2.1 50 40 185 60 217 25 45 30 55 62 82 70 90 11 20 13 23 0.5 ±1.1	μΤ
		x_RANGE <sup>(2)</sup> = 0h CONV_AVG = 0h	T <sub>A</sub> = 125°C		160		μΤ
		X or Y axis	T <sub>A</sub> = 25°C		25	45	μΤ
_	RMS (1 Sigma) magnetic	x_RANGE <sup>(2)</sup> = 0h CONV_AVG = 5h	T <sub>A</sub> = 125°C		30	55	μΤ
B <sub>N,RMS</sub>	noise	Z axis	T <sub>A</sub> = 25°C		62	82	μΤ
		Z_RANGE <sup>(2)</sup> = 0h CONV AVG = 0h	T <sub>A</sub> = 125°C		70	90	μT
		Z axis	T <sub>A</sub> = 25°C		11	20	μT
		Z_RANGE <sup>(2)</sup> = 0h CONV_AVG = 5h			13	23	μT
		X-Y axes			±0.5	±1.1	deg
ANG <sub>ERR</sub> (3)	Angle error	X-Z, Y-Z axes			±0.5	±1.4	deg
, "IOEKK , ,	, angle circi	X-Y axes	RANGE = 0h, 2h			140     185       160     217       25     45       30     55       62     82       70     90       11     20       13     23       0.5     ±1.1       0.5     ±1.4       ±1.5	deg
		X-Z, Y-Z axes	CONV_AVG = 5h				deg



Over  $T_A$  = -40°C to 125°C range and  $V_{CC}$  = 2.3 V to 5.5 V (unless otherwise noted); Typical specification are at  $T_A$  = 25°C and  $V_{CC}$  = 5 V (unless otherwise noted)

	PARAMETER	TEST CO	ONDITIONS	MIN	TYP	MAX	UNIT
TMAG5170A2	2						
		x_RANGE <sup>(2)</sup> = 0h			±150		mT
B <sub>RANGE</sub>	Linear magnetic range	x_RANGE <sup>(2)</sup> = 1h			±75		mT
		x_RANGE <sup>(2)</sup> = 2h			±300	±4.5 ±5.5 ±4.2 ±4.1 ±3.6 ±6.8 ±4.4 ±7.4 ±4.0 ±6.8 ±3.0 ±3.3	mT
			x_RANGE <sup>(2)</sup> = 0h		218	±4.5 ±5.5 ±4.2 ±4.1 ±3.6 ±6.8 ±4.4 ±7.4 ±4.0 ±6.8 ±3.0 ±3.3	LSB/mT
SENS	Sensitivity	X, Y, or Z axis	x_RANGE <sup>(2)</sup> = 1h		436		LSB/mT
			x_RANGE <sup>(2)</sup> = 2h		108		LSB/mT
SENS <sub>ERR</sub>	Sensitivity error	X, Y, or Z axis	B <sub>RANGE</sub> = 75 mT, 150 mT		±1.0	±4.5	%
2		T <sub>A</sub> = 25°C	B <sub>RANGE</sub> = 300 mT		±0.7	±5.5	%
SENS <sub>ERR DR</sub>	Sensitivity thermal drift	X, Y, or Z axis	B <sub>RANGE</sub> = 75 mT, 150 mT		±1.1	±4.5 ±5.5 ±4.2 ±4.1 ±3.6 ±6.8 ±4.4 ±7.4 ±4.0 ±6.8 ±3.0 ±3.3 ±4.0 ±4.5 ±4.0 ±4.5 ±4.0 ±4.5	%
_			B <sub>RANGE</sub> = 300 mT		±1.6		%
CENC	Concitivity Linearity orrer	T <sub>A</sub> = 25°C	X, Y axes		±0.1	50 75 00 18 36 08 1.0	%
SENS <sub>LE</sub>	Sensitivity Linearity error		Z axis		±0.1		%
SENS <sub>LTD</sub>	Sensitivity Lifetime drift	X, Y, Z axes			±0.6		%
	Sensitivity mismatch	X-Y axes T <sub>A</sub> = 25°C	B <sub>RANGE</sub> = 75 mT, 150 mT		±0.9	±3.6	%
		1 <sub>A</sub> - 25 C	B <sub>RANGE</sub> = 300 mT		±1	±6.8	%
SENS <sub>MIS</sub>		Y-Z axes T <sub>A</sub> = 25°C	B <sub>RANGE</sub> = 75 mT, 150 mT		±1.6	±4.4	%
		1 <sub>A</sub> - 23 0	B <sub>RANGE</sub> = 300 mT		±1.4	±7.4	%
		X-Z axes T <sub>A</sub> = 25°C	B <sub>RANGE</sub> = 75 mT, 150 mT		±1.2	±4.0	%
			B <sub>RANGE</sub> = 300 mT		±1.1	±6.8	%
		X-Y axes	B <sub>RANGE</sub> = 75 mT, 150 mT		±0.5	10	%
			B <sub>RANGE</sub> = 300 mT		±0.5		%
SENS <sub>MIS_DR</sub>	Sensitivity mismatch thermal drift	Y-Z axes	B <sub>RANGE</sub> = 75 mT, 150 mT		±0.4	±4.0	%
	diff		B <sub>RANGE</sub> = 300 mT		±0.2	±4.5	%
		X-Z axes	B <sub>RANGE</sub> = 75 mT, 150 mT		±0.2	±4.0	%
			B <sub>RANGE</sub> = 300 mT		±1.1	±4.4	%
B <sub>OFFSET</sub>	Magnetic offset	T <sub>A</sub> = 25°C	B <sub>RANGE</sub> = 75 mT, 150 mT		±110	±600	μТ
	Magnetic offset		B <sub>RANGE</sub> = 300 mT		±415	±1150	μΤ
		B <sub>RANGE</sub> = 75 mt, 150	X or Y axis		±1.0	±4.0 ±4.5 ±4.0 ±4.4 ±600 ±1150 ±7.0	μT/°C
30FFSET_DR	Offset thermal drift	mT	Z axis		±1.5	±3.1	μT/°C
		B <sub>RANGE</sub> = 300 mT	X, Y, or Z axis		±2.5	±8.5	μT/°C
Barrarrura	Offset Lifetime drift				±25		μT

www.ti.com

Over  $T_A$  = -40°C to 125°C range and  $V_{CC}$  = 2.3 V to 5.5 V (unless otherwise noted); Typical specification are at  $T_A$  = 25°C and  $V_{CC}$  = 5 V (unless otherwise noted)

	PARAMETER	TEST C	ONDITIONS	MIN	TYP	MAX	UNIT
		X or Y axis	T <sub>A</sub> = 25°C		160	225	μΤ
		$x_RANGE^{(2)} = 0h$ $CONV_AVG = 0h$	T <sub>A</sub> = 125°C		193	270	μΤ
		X or Y axis	T <sub>A</sub> = 25°C		28	55	μΤ
<b>D</b>	RMS (1 Sigma) magnetic	$x_RANGE^{(2)} = 0h$ $CONV_AVG = 5h$	T <sub>A</sub> = 125°C		35	60	μΤ
B <sub>N,RMS</sub>	noise	Z axis	T <sub>A</sub> = 25°C		75	120	μΤ
		Z_RANGE <sup>(2)</sup> = 0h CONV_AVG = 0h	T <sub>A</sub> = 125°C		84	140	μΤ
		Z axis	T <sub>A</sub> = 25°C		13	26	μΤ
		Z_RANGE <sup>(2)</sup> = 0h CONV_AVG = 5h	T <sub>A</sub> = 125°C		15	30	μΤ
ANG <sub>ERR</sub> (3)	Angle error	X-Y, Y-Z, X-Z axes	RANGE = 0h or 1h CONV_AVG = 5h T <sub>A</sub> = 25°C		±0.5	±1.2	deg
· ·····EKK		X-Y axes	RANGE = 0h or 1h			±1.65	deg
		Y-Z, X-Z axes	CONV_AVG = 5h			±1.9	deg
TEMPERATU	IRE COMPENSATION						
STC	Temperature compensation (no compensation)	MAG_TEMPCO = 0h			0		%/°C
STC	Temperature compensation (for NdBFe magnet)	MAG_TEMPCO = 1h	MAG_TEMPCO = 1h		0.12		%/°C
STC	Temperature compensation (for SmCo magnet)	MAG_TEMPCO = 2h			0.03		%/°C
STC	Temperature compensation (for Ceramic magnet)	MAG_TEMPCO = 3h			0.2		%/°C

<sup>(1)</sup> Drift at any temperature can be calculated from drift values at -40°C to 125°C.

<sup>(2)</sup> x\_RANGE denotes the X\_RANGE, Y\_RANGE, or Z\_RANGE register bits

<sup>(3)</sup> Angle measurement is performed in static condition using arctan of corresponding X, Y, and Z register values with offset and gain corrections. The input fields have peak magnitudes equal to 80% of the magnetic full range.



## 5.7 Power up Timing

Over  $T_A$  = -40°C to 125°C range and  $V_{CC}$  = 2.3 V to 5.5 V (unless otherwise noted); Typical specification are at  $T_A$  = 25°C and  $V_{CC}$  = 5 V (unless otherwise noted)


	PARAMETER	TEST CONDITIONS	MIN TYP	MAX	UNIT
V <sub>CC</sub> = 5.5 V					
t <sub>start_power_up</sub>	Time to start up after $V_{VCC}$ supply voltage crossing $V_{VCC\_MIN}$		246		μs
t <sub>start_sleep</sub>	Time to activate from sleep mode		40		μs
t <sub>go_sleep</sub>	Time to go into sleep mode after CS goes high		50		μs
t <sub>start_deep_sleep</sub>	Time to start up from deep sleep mode		246		μs
t <sub>start_deep_sleep</sub>	Time to go into deep sleep mode after CS goes high		75		μs
t <sub>stand_by</sub>	Time to go to Stand-by mode from Configuration mode		150		μs
V <sub>CC</sub> = 2.3 V					
t <sub>start_power_up</sub>	Time to start up after V <sub>CC</sub> supply voltage crossing V <sub>CC_MIN</sub>		260		μs
t <sub>start_sleep</sub>	Time to activate from sleep mode		40		μs
t <sub>go_sleep</sub>	Time to go into sleep mode after CS goes high		60		μs
t <sub>start_deep_sleep</sub>	Time to start up from deep sleep mode		260		μs
t <sub>start_deep_sleep</sub>	Time to go into deep sleep mode after CS goes high		75		μs
t <sub>stand_by</sub>	Time to go to Stand-by mode from Configuration mode		150		μs

## 5.8 SPI Interface Timing

Over  $T_A$  = -40°C to 125°C range and  $V_{CC}$  = 2.3 V to 5.5 V (unless otherwise noted); Typical specification are at  $T_A$  = 25°C and  $V_{CC}$  = 5 V (unless otherwise noted)


	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
SPI Interface						
f <sub>SPI</sub>	SPI clock (SCK) frequency	C <sub>L</sub> = 25 pF V <sub>CC</sub> = 2.3 V to 3.0 V			8	MHz
f <sub>SPI</sub>	SPI clock (SCK) frequency	C <sub>L</sub> = 25 pF V <sub>CC</sub> = 3.0 V to 5.5 V			10	MHz
t <sub>whigh</sub>	High time: SCK logic high time duration		45			ns
t <sub>wlow</sub>	Low time: SCK logic low time duration		45			ns
t <sub>su_cs</sub>	CS setup time: Time delay between falling edge of CS and rising edge of SCK		45			ns
t <sub>h_cs</sub>	Hold time: Time between the falling edge of SCK and rising edge of $\overline{\text{CS}}$		45			ns
t <sub>pd_soen</sub>	Delay time: Time delay from falling edge of $\overline{\text{CS}}$ to data valid at SDO				45	ns
t <sub>pd_sodis</sub>	Delay time: Time delay from rising edge of $\overline{\text{CS}}$ to SDO transition to high-impedance				55	ns
t <sub>su_si</sub>	SDI setup time: Setup time of SDI before the rising edge of SCK		25			ns
t <sub>h_si</sub>	Hold time: Time between the rising edge of SCK to SDI valid		25			ns
t <sub>pd_so</sub>	Propagation delay from falling edge of SCK to SDO				45	ns
t <sub>w_cs</sub>	SPI transfer inactive time (time between two transfers) during which $\overline{\text{CS}}$ must remain high.	C <sub>L</sub> = 25 pF	100			ns
t <sub>spi_deep_sleep</sub>	Setup time between $\overline{\text{CS}}$ going low and SCK start during deep sleep mode			150	320	μs

## 5.9 Typical Characteristics

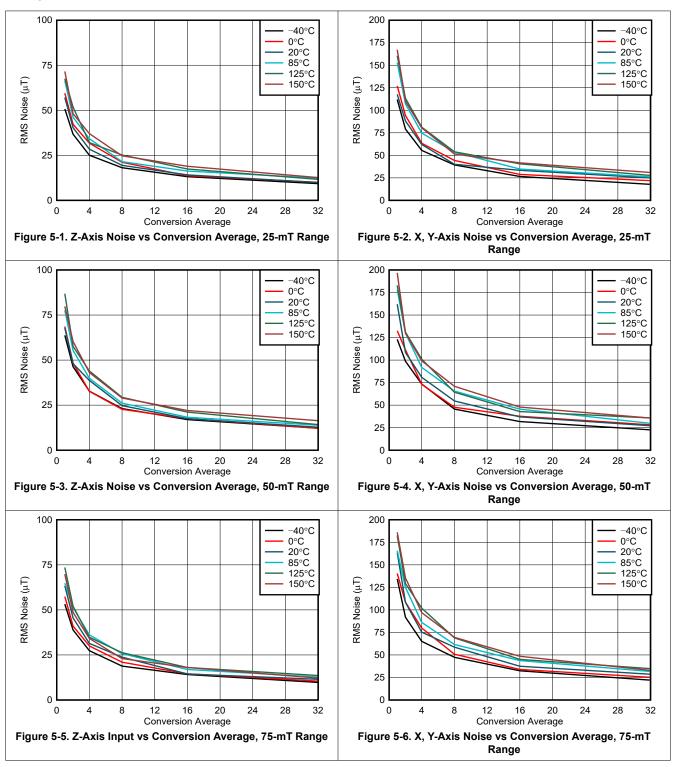




## 5.9 Typical Characteristics (continued)

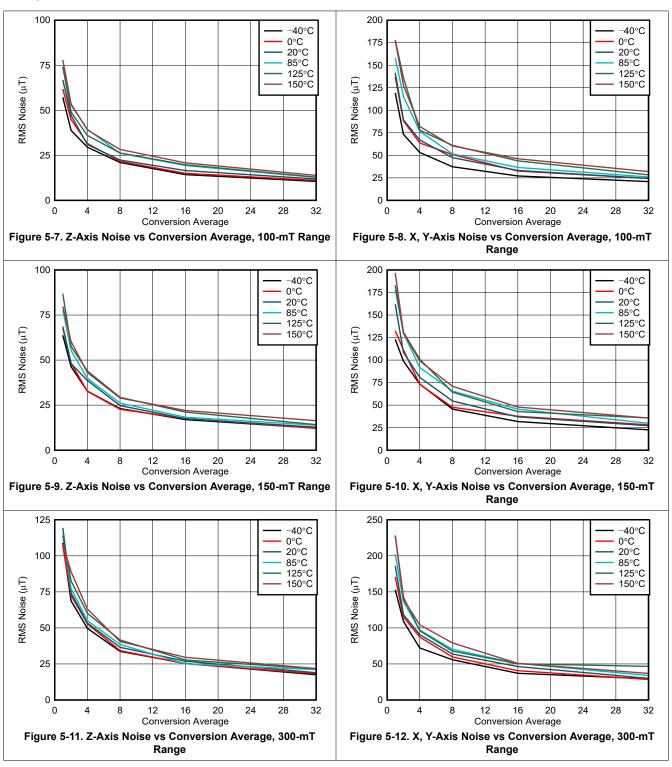

Submit Document Feedback

Copyright © 2023 Texas Instruments Incorporated

## 5.9 Typical Characteristics (continued)

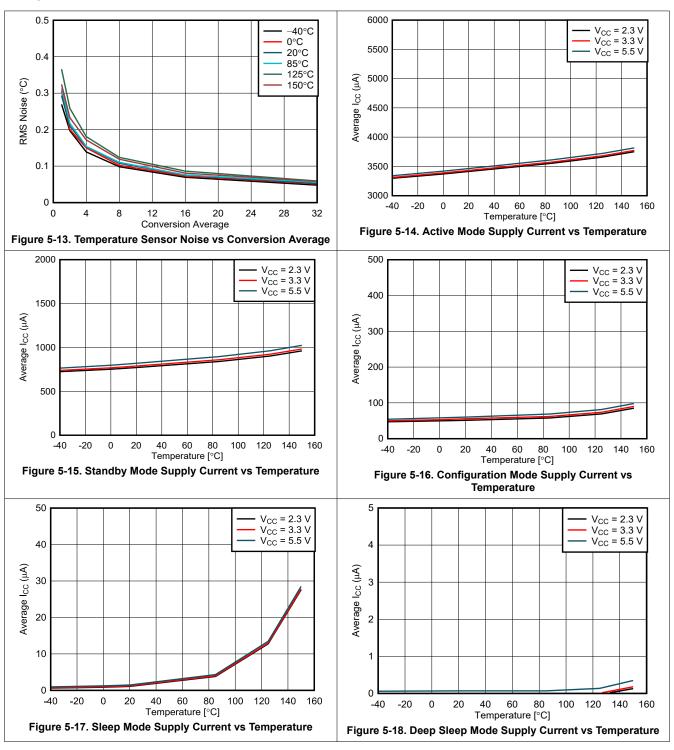



## **6 Detailed Description**


## 6.1 Overview

The TMAG5170D-Q1 IC is based on the Hall-effect technology and precision mixed signal circuitry from Texas Instruments. The output signals (raw X, Y, Z magnetic data and die temperature data) is provided through the SPI. The device can be configured in multiple settings through user access registers in the SPI.

The IC consists of the following functional and building blocks:

- The Power Management & Oscillator block contains a low-power oscillator, biasing circuitry, undervoltage and overvoltage detection circuitry, and a fast oscillator.
- The sensing and temperature measurement block contains the Hall biasing, Hall sensors with multiplexers, noise filters, integrator circuit, temperature sensor, and the ADC. The Hall sensor data and temperature data are multiplexed through the same ADC.
- The Interface block contains the SPI control circuitry, ESD protection circuits, and all the I/O circuits. The TMAG5170D-Q1 supports SPI along with an integrated cyclic redundancy check (CRC).
- The diagnostic blocks are embedded in the circuitry to enable mandatory and user-enabled diagnostic checks.

## 6.2 Functional Block Diagram

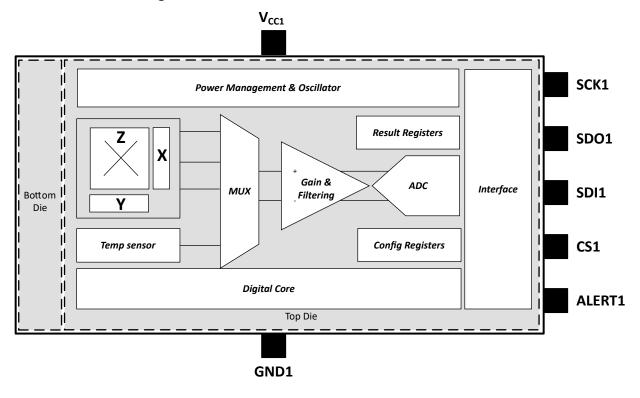

Product Folder Links: TMAG5170D-Q1

Ibmit Document Feedback



## **6.3 Feature Description**

## **6.3.1 Magnetic Flux Direction**

The TMAG5170D-Q1 is sensitive to the magnetic field component in X, Y, and Z directions. The X and Y fields are in-plane with the package. The Z field is perpendicular to the top of the package. The device is sensitive to both magnetic north and south poles in each axis. As shown in Figure 6-1, the device generates positive ADC codes in response to a magnetic south pole in the proximity. Similarly, the device generates negative ADC codes if magnetic north poles approach from the same directions.

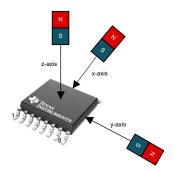


Figure 6-1. Direction of Applied Magnetic South Pole to Generate Positive ADC Codes

#### 6.3.2 Sensor Location

Figure 6-2 shows the location of the X, Y, Z Hall elements inside the TMAG5170D-Q1.

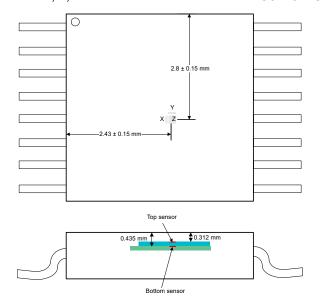


Figure 6-2. Location of X, Y, Z Hall Elements



## 6.3.3 Magnetic Range Selection

Table 6-1 shows the magnetic range selection for the TMAG5170D-Q1 device. Each axis range can be independently selected irrespective of the others.

**Table 6-1. Magnetic Range Selection** 

	RANGE REGISTER SETTING	TMAG5170A1-Q1	TMAG5170A2-Q1	COMMENT
	X_RANGE = 0h	±50 mT	±150 mT	
X Axis Field	X_RANGE = 1h	±25 mT	±75 mT	Best resolution case
	X_RANGE = 2h	±100 mT	±300 mT	Highest range, best SNR case
	Y_RANGE = 0h	±50 mT	±150 mT	
Y Axis Field	Y_RANGE = 1h	±25 mT	±75 mT	Best resolution case
	Y_RANGE = 2h	±100 mT	±300 mT	Highest range, best SNR case
	Z_RANGE = 0h	±50 mT	±150 mT	
Z Axis Field	Z_RANGE = 1h	±25 mT	±75 mT	Best resolution case
	Z_RANGE = 2h	±100 mT	±300 mT	Highest range, best SNR case

## 6.3.4 Update Rate Settings

The TMAG5170D-Q1 offers multiple update rates for system design flexibility. Figure 6-4 shows the different update rates for the TMAG5170D-Q1 during continuous conversion.

**Table 6-2. Update Rate Settings** 

OPERATING	REGISTER SETTING		COMMENT		
MODE	REGISTER SETTING	SINGLE AXIS	TWO AXIS	THREE AXIS	COMMENT
X, Y, Z Axis	CONV_AVG = 0h	20 kSPS	13.3 kSPS	10 kSPS	Fastest update rate
X, Y, Z Axis	CONV_AVG = 1h	13.3 kSPS	8.0 kSPS	5.7 kSPS	
X, Y, Z Axis	CONV_AVG = 2h	8.0 kSPS	4.4 kSPS	3.1 kSPS	
X, Y, Z Axis	CONV_AVG = 3h	4.4 kSPS	2.4 kSPS	1.6 kSPS	
X, Y, Z Axis	CONV_AVG = 4h	2.4 kSPS	1.2 kSPS	0.8 kSPS	
X, Y, Z Axis	CONV_AVG = 5h	1.2 kSPS	0.6 kSPS	0.4 kSPS	Best SNR case

### 6.3.5 ALERT Function

The ALERT pin of the TMAG5170D-Q1 supports multiple operating modes targeting different applications.

## 6.3.5.1 Interrupt and Trigger Mode

With ALERT\_MODE at default value of 0b, the ALERT output can be configured to generate an interrupt signal for the microcontroller when a user-defined event occurs. A user-defined event can be a conversion completion or an error from diagnostic tests. The ALERT pin can also trigger a conversion start in this mode using the TRIGGER\_MODE register bit.

## 6.3.5.2 Magnetic Switch Mode

With ALERT\_MODE set at 1b, the ALERT output is configured as a magnetic switch. One or multiple magnetic channels can be selected in the ALERT\_CONFIG register. The magnetic switch thresholds are determined by the \*\_THRX\_CONFIG register bits setting. If the measured magnetic field is greater than \*\_HI\_THRESHOLD, or smaller than \*\_LO\_THRESHOLD, the ALERT output will assert low. Figure 6-3 shows the magnetic switch function using the X-axis magnetic field as an example.

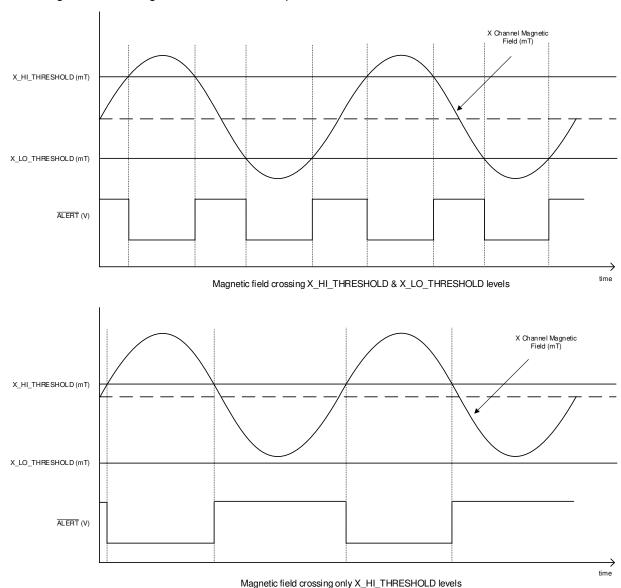


Figure 6-3. ALERT Pin Working as Magnetic Switch



#### 6.3.6 Threshold Count

The THRX\_COUNT bits in the ALERT\_CONFIG register offer robust noise filtering and immunity against false tripping while the TMAG5170D-Q1 implements the ALERT function for a specific magnetic or temperature threshold crossing. With THRX\_COUNT at default 00b, only one measured value must cross the threshold to be considered a valid threshold crossing event. With THRX\_COUNT at 11b, four successive measured values must cross the threshold to be considered a valid threshold crossing. An internal counter tracks and records the number of threshold crossing for a given sensor.

The counter resets if any of the below events occur:

- The device meets the threshold cross count for the specified number per the THRX\_COUNT bits, the corresponding \*CH\_THX bit(s) are set, and the SPI read of the SYS\_STATUS register occurred
- If a measured result does not cross the threshold

When the ALERT pin is configured to work as a magnetic switch, the threshold count is active for both low-to-high and high-to-low transitions, offering noise immunity in both directions of the threshold cross.

### 6.3.7 Diagnostics

The TMAG5170D-Q1 supports several device and system level diagnostics features to detect, monitor, and report failures during the device operation.

In the event of a failure, the TMAG5170D-Q1 reports back to the controller through the following mechanisms:

- · ERROR\_STAT bit during the SDO read frame
- · Direct read of the status registers through the SPI
- ALERT pin response to indicate a failure, if enabled
- No response through SDO line, or CRC error during SPI communication

The TMAG5170D-Q1 performs the following device and system level checks:

## 6.3.7.1 Memory Cyclic Redundancy Check (CRC)

This diagnostic mechanism checks the content of the internal memory by comparing a calculated CRC of the read content against a factory-programmed expected CRC value. During runtime, when the internal memory is read again for configuration for different channels, the CRC is checked again, providing detection of memory errors even during runtime.

Run Mode Continuous

Configuration Register(s) N/A

Fault Register Bit TRIM\_STAT

Impact if disabled N/A. Cannot be disabled

### 6.3.7.2 ALERT Integrity Check

This diagnostic mechanism checks and compares the read back value of the ALERT pin to the value that is driven by the device. This will check the presence of an external short on ALERT pin to a higher voltage such as VCC which will prevent device to indicate a fault. When the controller is driving the ALERT pin to trigger a measurement, the controller can read the ALRT\_LVL bit to check if the correct polarity of the ALERT was detected by the device, thus checking any failures on the pin.

Run Mode Continuous

Configuration Register(s) N/A

Fault Register Bit ALRT\_DRV and ALRT\_LVL

Impact if disabled When driven by device N/A. Cannot be disabled. When driven by controller, device may not detect a new

measurement command and still report old measurement data.

#### 6.3.7.3 VCC Check

This diagnostic mechanism continuously checks the external voltage supply on VCC pin and flags a fault if the supply is out of range.

 $\begin{array}{lll} \text{Run Mode} & \text{Continuous} \\ \text{Data Sheet Parameters} & \text{$V_{\text{CC\_UV}}$, $V_{\text{CC\_OV}}$} \\ \text{Fault Register Bit} & \text{$VCC\_UV$ and $VCC\_OV$} \\ \text{Impact if disabled} & \text{N/A. Cannot be disabled.} \end{array}$ 

## 6.3.7.4 Internal LDO Undervoltage Check

This diagnostic mechanism continuously monitors the internal regulator that supplies the critical analog blocks and Hall sensor biasing, and flags a fault if the internal regulator falls below a threshold after which the accuracy of the magnetic field measurement cannot be guaranteed.

Run Mode Continuous
Data Sheet Parameters N/A
Fault Register Bit LDO STAT

Impact if disabled N/A. Cannot be disabled.

### 6.3.7.5 Digital Core Power-On Reset Check

This diagnostic mechanism continuously monitors the internal regulator that supplies the internal digital core, and puts the device in reset if the digital core cannot function reliably. The occurrence of the fault is detected by reading the CFG\_RESET bit which can only be set at power up or if the digital core was reset.

Run Mode Continuous

Data Sheet Parameters N/A

Fault Register Bit CFG RESET

Impact if disabled N/A. Cannot be disabled.

## 6.3.7.6 SDO Output Check

This diagnostic mechanism continuously compares the internally driven value by device on the SDO pin to the read-back value on SDO pin to detect any shorts to ground or power supply.

Run Mode Continuous, every time a SPI transaction is initiated

Data Sheet Parameters N/A
Fault Register Bit SDO\_DRV

Impact if disabled N/A. Cannot be disabled.



## 6.3.7.7 Communication Cyclic Redundancy Check (CRC)

This diagnostic mechanism for every SPI transaction will compute the CRC of the received SPI frame from the controller and check the CRC against the CRC value transmitted by the controller, and flag a fault if the values do not match. The device also embeds a CRC value as part of the SPI frame in the response for the controller to check the integrity of the received data. This check detects faults with the SPI communication block in the digital core, the SPI I/O buffers and, and the controller to check for any faults on the SPI external to the device.

Another check also runs in the background that counts the number of SPI clocks in a SPI frame and flags a fault if the number of clocks sent by the controller is not same as the expected value. This can help the controller detect any issues with the SPI.

Run Mode Continuous, every time a SPI transaction is initiated Configuration Register(s) CRC DIS to disable CRC in the SPI protocol

Fault Register Bit CRC\_STAT, FRAME\_STAT

Impact if disabled If CRC is disabled, then any fault with SPI communication will not be detected and incorrect value of measured

field can be reported.

#### 6.3.7.8 Oscillator Integrity Check

This diagnostic mechanism allows the controller to check any hardware fault with the internal oscillator. With this check, any drift of internal oscillators can be checked. The high-frequency oscillator is critical for precision measurement of the magnetic field and low-power oscillator is critical to control wake-up and sleep mode and other state machine control.

To run this check, external software code on the controller is required. The controller must instate the check by setting the OSC\_CNT\_CTL bits to select a particular oscillator and start the internal count on the device. At the same time, the controller also starts a counter using its own timebase. After a predetermined time, the controller issues a stop to the oscillator count by setting OSC\_CNT\_CTL = 03h and read the OSC\_COUNT. The read value of the OSC\_COUNT should not exceed the value based off maximum f<sub>HFOSC</sub>, f<sub>LFPOSC</sub> in the specification section. Consider the variation of controller speed and SPI communication when calculating the error margin for the OSC\_COUNT.

Run Mode On-demand as run by the external controller

 $\begin{array}{ll} \text{Data Sheet Parameter(s)} \ \ f_{\text{HFOSC}}, \ f_{\text{LFPOSC}} \\ \text{Configuration Register(s)} \ \ \text{OSC\_CNT\_CTL} \\ \text{Fault Register Bit} \qquad \text{OSC\_COUNT} \\ \end{array}$ 

Impact if disabled If the controller decides not to run this test, then any drift of HF oscillator can impact the accuracy of the reported

sensor data

## 6.3.7.9 Magnetic Field Threshold Check

This diagnostic mechanism allows the controller to monitor the external applied field. The controller can use this check to determine if a magnetic field is present within specified thresholds. This check, though used as check at system level, can also indicate any gross problems with the signal path if a field much outside the expected range is detected and reported.

To run this check, the controller must enable the check separately for each axis and also set the thresholds for each axis independently. The user can configure the ALERT pin to toggle if the threshold crossed, which is also reported in the user register.

Run Mode Every time a magnetic measurement is initiated and completed

Configuration Register(s) X\_HLT\_EN, Y\_HLT\_EN, Z\_HLT\_EN to enable test. X\_THRX\_CONFIG, Y\_THRX\_CONFIG, Z\_THRX\_CONFIG to

set threshold

Fault Register Bit XCH\_THX, YCH\_THX, ZCH\_THX

Impact if disabled Disabling this check does not have an impact on device-level failure detection but can impact at system level.

Examples of system failure can be loss of magnet, magnet too far, or too close to the sensor.

## 6.3.7.10 Temperature Alert Check

This diagnostic mechanism allows the controller to monitor the junction temperature of the die, which is also an indication of the ambient temperature as the device does not generate significant self-heating. This is useful to monitor the temperature at the system level accurately and alert the controller if the temperature is exceeded. The check can also be used to warn the controller if the die temperature due to some internal failure has increased beyond the expected range.

To run this check, the controller must enable the temperature check and set the threshold. The user can configure the ALERT pin to toggle if the threshold crossed, which is also reported in the user register.

Run Mode Every time a magnetic measurement is initiated and completed Configuration Register(s) T\_HLT\_EN to enable test. T\_THRX\_CONFIG to set threshold

Fault Register Bit TEMP THX

Impact if disabled Disabling this check does not have an impact on device-level failure detection but can impact at system level

increase or decrease of temperature.

## 6.3.7.11 Analog Front-End (AFE) Check

This diagnostic mechanism allows the controller to check the performance of the analog signal path. In this check, the device disconnects the Hall sensor from the signal path and uses an alternate resistance bridge to create a known, predetermined signal as an input to the signal path. This mechanism then checks if the measured digital value compared to a fixed value from the factory is within a pre-programmed, factory-determined value. This mechanism can detect issues with multiplexers, offset cancellation mechanism, the gain stages, the low-pass filter, and the ADC as well.

To run this check, the controller must enable the check and set the scheduling for the run. During this check, the AFE is not available for magnetic field conversion. The user can configure the ALERT pin to toggle if an error is detected. This error is also reported in the user register.

Run Mode Every time a magnetic measurement is initiated and completed

Configuration Register(s) DIAG\_SEL to schedule when the test is run

Fault Register Bit SENS\_STAT

Impact if disabled If disabled, any failures or drift with the analog front-end signal path may not be detected.

#### 6.3.7.12 Hall Resistance and Switch Matrix Check

This diagnostic mechanism allows the controller to check if the sensitivity of the Hall sensor is within the factory-determined limits by checking the resistance of the Hall-effect sensor. In this check, the biasing and multiplexing control of all directions of the Hall sensor (X, Y and Z) are also checked.

To run this check, the controller must enable the check and set the scheduling for the run. During this check, the Hall sensor is not available for magnetic field conversion. The user can configure the ALERT pin to toggle if an error is detected. This error is also reported in the user register.

Run Mode Every time a magnetic measurement is initiated and completed Configuration Register(s) DIAG\_EN to enable test. DIAG\_SEL to schedule when the test is run

Fault Register Bit ZHS STAT, YHS STAT and XHS STAT

Impact if disabled If disabled, any failures or drift in the Hall-effect sensor properties and biasing will not be detected, leading to

potentially incorrect magnetic field conversion



#### 6.3.7.13 Hall Offset Check

This diagnostic mechanism allows the controller to check if the offset of the Hall sensor is within the factory-determined limits and the offset cancellation circuitry is working properly.

To run this check, the controller must enable the check and set the scheduling for the run. During this check, the AFE is not available for magnetic field conversion. The user can configure the ALERT pin to toggle if an error is detected. This error is also reported in the user register.

Run Mode Every time a magnetic measurement is initiated and completed Configuration Register(s) DIAG\_EN to enable test. DIAG\_SEL to schedule when the test is run

Fault Register Bit SENS STAT

Impact if disabled If disabled, any failures with offset cancellation mechanism or large drift of Hall-effect sensor may not be

detected, leading to potentially incorrect magnetic field conversion.

#### 6.3.7.14 ADC Check

This diagnostic mechanism checks ADC functionality and conversion. This check is done by converting a known band-gap voltage, which is completely independent of the ADC reference, and comparing the voltage against the factory-determined tolerance limits.

To run this check, the controller must enable the check and set the scheduling for the run. During this check the AFE is not available for magnetic field conversion. The user can configure the AEERT pin to toggle if an error is detected. This error is also reported in the user register.

Run Mode Every time a magnetic measurement is initiated and completed Configuration Register(s) DIAG EN to enable test. DIAG SEL to schedule when the test is run

Fault Register Bit TEMP\_STAT

Impact if disabled, any failures with ADC conversion will not be detected, leading to potentially incorrect errors in the

converted magnetic field values.



## **6.4 Device Functional Modes**

## 6.4.1 Operating Modes

The TMAG5170D-Q1 supports multiple operating modes for wide array of applications as explained in Figure 6-4. The device starts powering up after the VCC supply crosses the minimum threshold as specified in the *Recommended Operating Conditions* table. Any particular operating mode can be selected by setting the corresponding OPERATING MODE register bits.

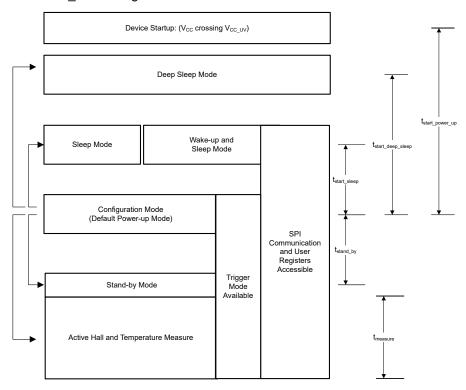


Figure 6-4. TMAG5170D-Q1 Power-Up Sequence

Table 6-3 shows different power saving modes of the TMAG5170D-Q1.

**Table 6-3. Comparing Operating Modes** 

Table 0-3. Comparing Operating Modes									
OPERATING MODE	DEVICE FUNCTION	INITIALIZATION TIME TO START CONVERSION <sup>(1)</sup>	DATA CONVERSION						
Active Conversion	Continuously measuring X, Y, Z axis, or temperature data	10 µs	Supports continuous and trigger mode conversion						
Standby Mode	Device is ready to accept SPI commands and start active conversion	35 µs	Supports trigger mode conversion						
Configuration Mode	SPI and user configuration registers active	t <sub>stand_by</sub> + 35 μs	Supports trigger mode conversion						
Wake-up & Sleep Mode	Wakes up at a certain interval to measure the X, Y, Z axis, or temperature data	t <sub>start_sleep</sub> + t <sub>stand_by</sub> + 35 μs	1, 5, 10, 15, 20, 30, 100, 500, and 1000-ms intervals supported <sup>(1)</sup> .						
Sleep Mode	Device retains key configuration settings, and last measurement data	t <sub>start_sleep</sub> + t <sub>stand_by</sub> + 35 μs	The microcontroller can use sleep mode to implement other power saving intervals not supported by wake-up and sleep mode.						
Deep-sleep Mode	Device does not retain key configuration settings, and last measurement data	t <sub>start_deep_sleep</sub> + t <sub>stand_by</sub> + 35 μs	No conversion start is supported during deep-sleep mode						

<sup>(1)</sup> The timing numbers are typical parameters. The values may vary depending on the internal oscillator frequency.

#### 6.4.1.1 Active Mode

The TMAG5170D-Q1 converts the magnetic sensor or temperature data during active mode. Active mode supports both continuous conversion and trigger mode conversion based off the OPERATING MODE setting. Continuous operation at this mode is useful for applications where the fastest data conversion is required, and power budget is not stringent. In the active trigger mode, a controller can trigger a conversion through one of several trigger mechanisms as described in the TRIGGER\_MODE register bits. When the conversion started, the time it takes to finish a conversion is denoted by t<sub>measure</sub>. The conversion time can vary widely based off the MAG\_CH\_EN, CONV\_AVG, DIAG\_SEL, and DIAG\_EN register bits setting. The average current consumption during the active conversion is  $I_{ACT}$ .

### 6.4.1.2 Standby Mode

In standby mode, the TMAG5170D-Q1 is ready to start sensor conversion with a trigger command from a controller. Several trigger methods are supported as defined in the TRIGGER\_MODE register bits. During this operating mode, the relevant analog and digital support circuitry remain active to enable a faster conversion start. The average current consumption during this mode is denoted by I<sub>STDBY</sub>. The time it takes for the device to go to standby mode from configuration mode is denoted by t<sub>stand by</sub>.

## 6.4.1.3 Configuration Mode (DEFAULT)

At power up, the TMAG5170D-Q1 goes into the default configuration mode. In this mode, the SPI communication and user register access are enabled. A controller may configure the device to select the desired operating mode, sensor data conversion, enable or disable diagnostic features, and so forth. The average current consumption during this mode is denoted by I<sub>CFG</sub>. Similar to the standby mode, the configuration mode also supports sensor conversion start with a trigger. However, the configuration mode takes longer time to start the sensor conversion, and consumes approximately ten times less current compared to standby mode.

### 6.4.1.4 Sleep Mode

The TMAG5170D-Q1 supports the sleep mode where the device retains the user configuration settings and previous conversion results. A controller can wake up the device from sleep mode through either the SPI communication or the ALERT signal. The average power consumption in this mode is denoted by I<sub>SLP</sub>. The time it takes for the device to go to the configuration mode from the sleep mode is denoted by t<sub>start\_sleep</sub>.

#### 6.4.1.5 Wake-Up and Sleep Mode

The TMAG5170D-Q1 supports the wake-up and sleep mode where the device is configured to wake up at a certain time interval, and perform the sensor conversion as defined in the SENSOR CONFIG register setting. When the sensor conversion is complete, an ALERT signal can be generated to notify the controller that the new conversion data is ready. It is possible to generate an ALERT signal only in the event a particular magnetic or temperature threshold is exceeded. Detail setting on ALERT signal is specified in the ALERT CONFIG register. A controller can wake up the TMAG5170D-Q1 and access the conversion data at any time. The average power consumption in the wake-up and sleep mode is denoted by I<sub>VCC DCM</sub>. The time it takes for the device to go to configuration mode from wake-up and sleep mode is denoted by t<sub>start sleep</sub>.

#### 6.4.1.6 Deep-Sleep Mode

For ultra-low power system, the TMAG5170D-Q1 supports a deep-sleep mode to conserve power. In this mode, the TMAG5170D-Q1 does not retain the user configuration or previous result data. The device reverts back to factory setting in this mode. The average power consumption in this mode is IDEEP SLP. The time it takes for the device to go to the configuration mode from the deep-sleep mode is denoted by t<sub>start\_sleep</sub>.

## 6.5 Programming

## 6.5.1 Data Definition

## 6.5.1.1 Magnetic Sensor Data

The X, Y, and Z magnetic sensor data are stored in the X\_CH\_RESULT, Y\_CH\_RESULT, and Z\_CH\_RESULT registers, respectively. ADC output stored in 16-bit result registers in 2's complement format. With fastest conversion (CONV\_AVG = 0h), the ADC output loads the 12 MSB bits of the 16-bit result register along with 4 LSB bits as zeros. With CONV\_AVG != 0h, all the 16 bits are used to store the results. With DATA\_TYPE = 0h, the 16-bit magnetic sensor data can be accessed through regular 32-bit SPI read. The LSB size for each magnetic range is:

50 mT: 654 LSB/mT
25 mT: 1308 LSB/mT
100 mT: 326 LSB/mT
150 mT: 218 LSB/mT
75 mT: 436 LSB/mT
300 mT: 108 LSB/mT

Table 6-4. 16-Bit X, Y, Z Magnetic Sensor Data Format. Two decimal places are shown.

	rabio 0 41 10 Bit X, 1, 2 magnotic concor bata 1 ormati 1100 decimal places are offermi												
		Magnetic	x_CH_RES	ULT									
Range = 50 mT	Range = 25 mT	Range = 100 mT	100   Range = 150   Range = 75   Range = 300		HEX								
-50.103	-25.051	-100.515	-150.311	-75.155	-303.407	1000 0000 0000 0000	8000h						
-25.051	-12.525	-50.257	-75.155	-37.577	-151.703	1100 0000 0000 0000	C000h						
-0.001	-0.001	-0.003	-0.004	-0.002	-0.009	1111 1111 1111 1111	FFFFh						
0	0	0	0	0	0	0000 0000 0000 0000	0000h						
0.001	0.001	0.003	0.004	0.002	0.009	0000 0000 0000 0001	0001h						
25.051	12.525	50.257	75.155	37.577	151.703	0100 0000 0000 0000	4000h						
50.102	25.051	100.512	150.307	75.153	303.398	0111 1111 1111 1111	7FFFh						



## 6.5.1.2 Temperature Sensor Data

The TMAG5170D-Q1 temperature sensor will measure temperature from  $-40^{\circ}$ C to  $170^{\circ}$ C and store the result in the 16-bit TEMP\_RESULT register. With CONV\_AVG != 0h, and DATA\_TYPE = 0h, the 16-bit temperature data can be accessed through regular 32-bit SPI read using Equation 1 to calculate the temperature. If CONV\_AVG = 0h or DATA\_TYPE != 0h, use Equation 2 to calculate the temperature.

$$T = T_{SENS\_T0} + \frac{TADC_T - TADC_{T0}}{TADC_{RES}}$$
 (1)

#### where

- T is the measured temperature in degree Celsius.
- T<sub>SENS T0</sub> is 25°C.
- TADC<sub>RES</sub> is 60.0 LSB/°C.
- TADC<sub>T0</sub> is 17522.
- TADC<sub>T</sub> is the TEMP\_RESULT register value in decimal.

$$T = T_{SENS\_T0} + \frac{16 \times \left(TADC_T - \frac{TADC_{T0}}{16}\right)}{TADC_{RES}}$$
 (2)

Table 6-5. 16-Bit Temperature Data Format. Two decimal places are shown.

TEMPERATURE	TEMP_RESULT						
(°C)	BINARY	HEX					
-40	0011 0101 0011 0110	3536h					
-25	0011 1000 1011 1010	38BAh					
0	0011 1110 1001 0110	3E96h					
25	0100 0100 0111 0010	4472h					
25.01	0100 0100 0111 0011	4473h					
85	0101 0010 1000 0010	5282h					
125	0101 1011 1110 0010	5BE2h					

## 6.5.1.3 Magnetic Sensor Offset Correction

Figure 6-5 shows that the TMAG5170D-Q1 can enable offset correction for a pair of magnetic axes. The magnetic axes and order are selected based off the ANGLE\_EN register bit settings. The MAG\_OFFSET\_CONFIG register stores the offset values to be corrected in 2's complement data format. The selection and order of the sensors are defined in the ANGLE\_EN register bits setting. The default value of these offset correction registers are set as zero.

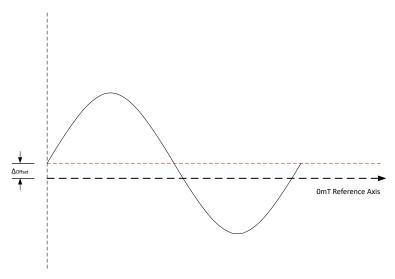


Figure 6-5. Magnetic Sensor Data Offset Correction

The MAG\_OFFSET\_CONFIG register contains OFFSET\_VALUE1 and OFFSET\_VALUE2 that are added to the sensor conversion results as defined by of the OFFSET\_SELECTION field of the MAG\_OFFSET\_CONFIG register. The data format is 2's complement format with a LSB size define by the range.

50 mT: 25 μT/LSB
 25 mT: 12.5 μT/LSB
 100 mT: 50 μT/LSB
 150 mT: 75 μT/LSB
 75 mT: 37.5 μT/LSB
 300 mT: 150 μT/LSB

Table 6-6. 7-bit Magnetic Sensor Offset Correction Data Format. Two decimal places are shown.

		Magnetic (	Offset_Config	_x[7:0]			
Range = 50 mT	Range = 25 mT	Range = 100 mT	Range = 150 mT	Range = 75 mT	Range = 300 mT	BINARY	HEX
-1.60	-0.80	-3.20	-4.80	-2.40	-9.60	100 0000	40h
-1.35	-0.67	-2.70	-4.05	-2.02	-8.10	100 1010	4Ah
-0.02	-0.01	-0.05	-0.07	-0.03	-0.15	111 1111	7Fh
0	0	0	0	0	0	000 0000	00h
0.02	0.01	0.05	0.07	0.03	0.15	000 0001	01h
1.35	0.67	2.70	4.05	2.02	8.10	011 0110	36h
1.57	0.78	3.15	4.72	2.36	9.45	011 1111	3Fh

## 6.5.1.4 Angle and Magnitude Data Definition

The TMAG5170D-Q1 calculates the angle based off the ANGLE\_EN register bit settings. The 11-bit ANGLE RESULT value stores the angle information. The data format is an unsigned angle value with a LSB size of 0.25°. The TMAG5170D-Q1 CORDIC offers angle resolution of 0.25 degree. The TMAG170 code example software package has functions that can be ported to the system microcontroller for an accurate but computationally inexpensive angle calculation using the TMAG5170D-Q1 axes readings.

Table 6-7. 11-Bit Angle Data Format

ANGLE (°)	ANGLE_RESULT[10:0]							
ANGLE ( )	BINARY	HEX						
0	000 0000 0000	000h						
0.25	0.25 000 0000 0001							
90	001 0110 1000	168h						
180	010 1101 0000	2D0h						
270	100 0011 1000	438h						
360	101 1010 0000	5A0h						

During the angle calculation, the MAGNITUDE RESULT[13:0] stores the resultant vector magnitude in the MAGNITUDE RESULT register. MAGNITUDE RESULT is an unsigned value with a LSB size that depends on the range of device.

50 mT: 40.96 LSB/mT 25 mT: 81.92 LSB/mT 100 mT: 20.48 LSB/mT 150 mT: 13.653 LSB/mT 75 mT: 27.306 LSB/mT 300 mT: 6.826 LSB/mT

For on-axis angular measurement the magnitude value should remain constant across the full 360° measurement.

Table 6-8. 13-bit Magnitude Data Format. Only 3 decimal places are shown.

		Magnitu	MAGNITUDE_RES	SULT[13:0]			
Range = 50 mT	Range = 25 mT	Range = 100 mT	Range = 150 mT	Range = 75 mT	Range = 300 mT	BINARY	HEX
0	0	0	0	0	0	0 0000 0000 0000	0000h
0.024	0.012	0.048	0.073	0.036	0.146	0 0000 0000 0001	0001h
6.225	3.112	12.451	18.676	9.338	37.353	0 0000 1111 1111	00FFh
35.351	17.675	70.703	106.054	53.027	212.109	0 0101 1010 1000	05A8h
70.703	35.351	141.406	212.109	106.054	424.218	0 1011 0101 0000	0B50h

### 6.5.2 Serial Peripheral Interface (SPI)

The Serial Peripheral Interface (SPI) is a synchronous serial communication interface used for short distance communication, usually between devices on a printed circuit board (PCB) assembly. The TMAG5170D-Q1 supports a 4-wire SPI. The primary communication between the device and the external microcontroller is through the SPI bus that provides full-duplex communication. The external microcontroller works as the SPI controller that sends command requests on the SDI pin and receives device responses on the SDO pin. The TMAG5170D-Q1 device works as the SPI peripheral device that receives command requests and sends responses (such as status and measured values) to the external microcontroller over the SDO line. The TMAG5170D-Q1 supports a fixed 32-bit frame size to communicate with a controller device. However, the 32-bit frame can be configured through DATA\_TYPE register bits to support a regular single register read data packet, or a special packet to read two-channel data simultaneously.

#### 6.5.2.1 SCK


The Serial Clock (SCK) represents the controller clock signal. This clock determines the speed of data transfer and all receiving and sending are done synchronously to this clock. The output data on the SDO pin transitions on the falling edge of the SCK and input data on the SDI pin is latched on the rising edge of the SC.

#### 6.5.2.2 CS

The  $\overline{\text{CS}}$  activates the SPI. As long as the  $\overline{\text{CS}}$  signal is at high level, the TMAG5170D-Q1 will not accept the SCK signal or the Serial-data-in (SDI), and the Serial-data-out (SDO) is in high impedance. Hold  $\overline{\text{CS}}$  low for the duration of a communication frame without toggling to ensure proper communication. The SPI is disabled each time  $\overline{\text{CS}}$  is brought from low to high.

#### 6.5.2.3 SDI

The Serial-data-in (SDI) line is used by the controller to configure the user access registers, start a new conversion, or send a read command. The SDI bits are transmitted with each SCK rising edge when the  $\overline{\text{CS}}$  pin is low. Figure 6-6 explains the SDI frame details. There are four command bits in the SDI line to select the status bit for the next frame or start a new conversion.

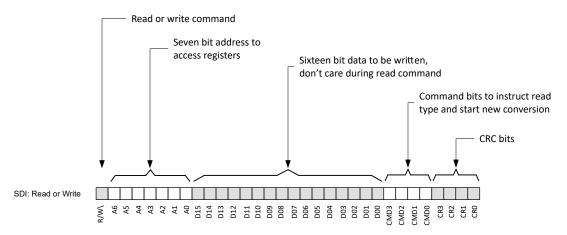

CMD0	CMD0 = 0	No conversion start through command bits
	CMD0 = 1	Start of conversion at the 32-bit SPI frame last SCK pulse falling edge
	CMD1 = 0	Display SET_COUNT [2:0] in STAT [2:0] bits at SDO next frame
CMD1	CMD1 = 1	Display DATA_TYPE [2:0] in STAT [2:0] bits at SDO next frame

- \* CMD2 & CMD3 are reserved bits
- \*\* SET\_COUNT register bits indicate the rolling count of the conversion data set. The counter is reset after 111b.
- \*\*\* DATA\_TYPE register bits indicate the type of data being read through the SDO line

Figure 6-6. 32-Bit Frame Definition of the SDI Line

#### 6.5.2.4 SDO


The Serial-data-out (SDO) line is used by the controller to read the data from the TMAG5170D-Q1. The TMAG5170D-Q1 will shift out command responses and ADC conversion data serially with each falling SCK edge when the  $\overline{CS}$  pin is low. This pin assumes a high-impedance state when  $\overline{CS}$  is high. Based off the DATA\_TYPE bit setting, the TMAG5170D-Q1 supports two different SDO frames:

- Regular 32-Bit SDO Read
- Special 32-Bit SDO Read



#### 6.5.2.4.1 Regular 32-Bit SDO Read

With DATA\_TYPE = 000b, the TMAG5170D-Q1 supports a regular 16-bit register read during the 32-bit SDO frame as explained in Figure 6-7. In this read mode, 12-bit status bits are displayed. All the status bits except for the ERROR\_STAT bit are directly read from the status registers. The ERROR\_STAT bit indicates if any error bit set in the device. Figure 6-7 shows how the status bits STAT[2:0] can be changed based off CMD1 value in the previous frame.

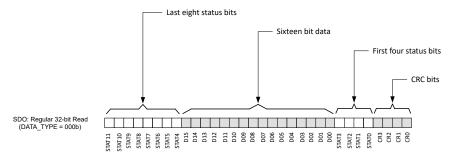


STAT11	STAT10	STAT9	STAT8	STAT7	STAT6	STAT5	STAT4	STAT3	STAT2	STAT1	STAT0
PREV_CRC_STAT	CFG_RESET	ALRT_STATUS1	ALRT_STATUS0	Х	Υ	Z	Т	ERROR_STAT	Follows CMD1 instruction from previous frame		

- \* PREV CRC STAT indicates if there is any CRC error in the immediate past frame
- \*\* ERROR\_STAT indicates if there is any error bit flipped in the part
- \*\*\* STAT10 to STAT4 indicate select status bits from the CONV\_STATUS and AFE\_STATUS registers

Figure 6-7. Regular 32-Bit SDO Read

### 6.5.2.4.2 Special 32-Bit SDO Read

With DATA\_TYPE > 000b, the TMAG5170D-Q1 supports a special 32-bit SDO frame for two-channel simultaneous data read. Each channel data is limited to 12 bits. This feature is useful for systems requiring faster data throughput while performing multi-axis measurements. Figure 6-8 explains the detail construction of the special 32-bit SDO frame. When the device is set to special 32-bit read, the device will continue to deliver the 2-channel data set through the SDO line during consecutive read or write cycles. DATA\_TYPE bits must be reset to get back to a regular read cycle. Only four status bits are transmitted in this mode. All the status bits except for the ERROR\_STAT bit are directly read from the status registers. The ERROR\_STAT bit indicates if any error bit set in the device. The status bits, STAT[2:0], can be changed based off CMD1 value in the previous frame.

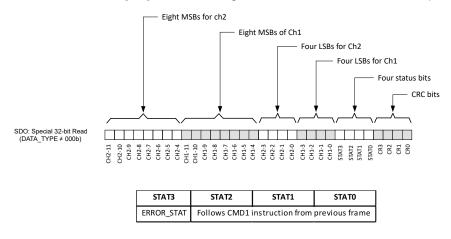

<sup>\*</sup> ERROR\_STAT indicates if there is any error bit set in the device

Figure 6-8. Special 32-Bit SDO Read

#### 6.5.2.5 SPI CRC

The TMAG5170D-Q1 performs mandatory CRC for SPI communication. The data integrity is maintained in both directions by a 4-bit CRC covering the content of the incoming and outgoing 32-bit messages. The four LSB bits of each 32-bit SPI frame are dedicated for the CRC. The CRC code is generated by the polynomial  $x^4 + x + 1$ . Initialize the CRC bits with b1111.

During the SDI write frame, the TMAG5170D-Q1 reads for the CRC data before executing a write instruction. The write instruction from the controller is ignored if there is any CRC error present in the frame. During the SDI regular read frame, the TMAG5170D-Q1 starts to deliver the requested data through SDO line in the same frame and notifies the controller of any error occurrence through the ERROR\_STAT bit. If the device detects a CRC error in the SDI line, the device will invert the last bit of the SDO CRC in the same frame to promptly signal to a controller that the SPI communication is compromised. A controller can also determine the presence of a CRC error in the SDI frame by checking the Status11 bit in the next regular read frame.

#### Note

The TMAG5170D-Q1 default mode at power up is CRC-enabled. With CRC enabled, the device will ignore all the SDI commands if proper CRC codes are not received. To disable the CRC at the SDI line, send the SPI SDI command x0F000407.

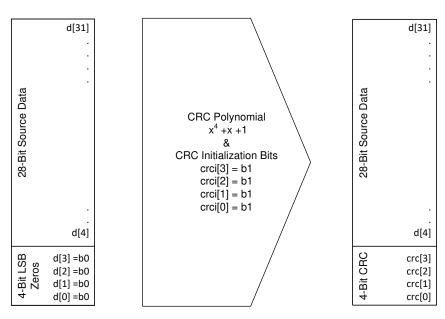


Figure 6-9. 4-Bit CRC Calculation

Use the following XOR function equations to calculate the 4-bit CRC. Figure 6-9 describes the notations of these equations.

Copyright © 2023 Texas Instruments Incorporated

Submit Document Feedback



The following shows example codes for calculating the 4-bit CRC.

```
function logic [3:0] calculate_crc4;
  input logic [27:0] frame;
   logic [31:0]
logic [3:0]
                             padded_frame;
                                 frame_crc;
    logic
    integer
    padded_frame = {frame, 4'b0000};
       frame_crc = 4'hf; // initial value
for (i=31; i >= 0; i=i-1) begin
      inv = padded_frame[i] ^ frame_crc[3];
      frame_crc[3] = frame_crc[2];
      frame\_crc[2] = frame\_crc[1];
      frame_crc[1] = frame_crc[0] ^ inv;
frame_crc[0] = inv;
       end
        return frame_crc;
   end
endfunction
```


#### 6.5.2.6 SPI Frame

With the flexible definition of the 32-bit frames, the TMAG5170D-Q1 supports a wide array of application requirements catering to multiple user-specific data throughout. Two different frame examples are shown in this section to illustrate the complete SPI bus communication:

- 32-Bit Read Frame
- 32-Bit Write Frame

#### 6.5.2.6.1 32-Bit Read Frame

Figure 6-10 shows both regular and special SDO frames during SDI read command. The TMAG5170D-Q1 implements in-frame communication. When the controller sends a register read command during a regular read cycle, the corresponding 16-bit register data is sent through the SDO line in the same frame. During the special read cycle, the TMAG5170D-Q1 ignores the address and data bits of the SDI line and sends the two channel data set through the SDO line as defined in the DATA TYPE register bits.

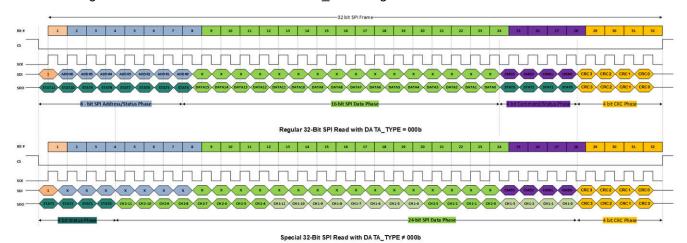


<sup>\*</sup> With DATA\_TYPE = 000b, the SDO will deliver the requested 16-bit register data during the same frame
\*\* With DATA\_TYPE = 000b, the SDO will continue to deliver two channel data and ignore the address and data bits of the SDI line
\*\* X = don't can.

Figure 6-10. 32-Bit SPI Read

#### 6.5.2.6.2 32-Bit Write Frame

Figure 6-11 shows both regular and special SDO frames during SDI write command. During a regular 32-bit frame write command through SDI, the SDO delivers '0's in place of 16-bit data placeholders. During the special frame write cycle through SDI line, the TMAG5170D-Q1 will continue to send the two channel data through SDO line as defined by the DATA\_TYPE register bits.

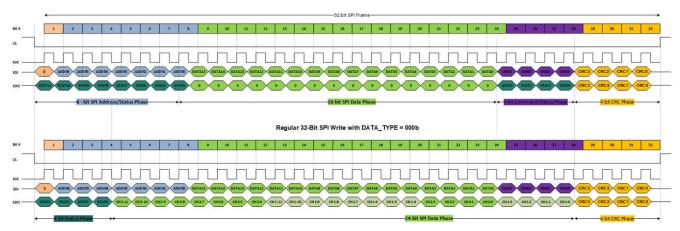

Special 32-Bit SPI Write with DATA\_TYPE ≠ 000b

Figure 6-11. 32-Bit Write Frame

With DATA\_TYPE = 000b, the SDO will deliver '0's in the 16-bit register data during the same frame
\*\* With DATA\_TYPE # 000b, the SDO will continue to deliver two channel data during either read or write frame



## 7 Application and Implementation

#### Note

Information in the following applications sections is not part of the TI component specification, and TI does not warrant its accuracy or completeness. TI's customers are responsible for determining suitability of components for their purposes, as well as validating and testing their design implementation to confirm system functionality.

## 7.1 Application Information

## 7.1.1 Selecting the Sensitivity Option

Select the highest TMAG5170D-Q1 sensitivity option that can measure the required range of magnetic flux density so that the ADC output range is maximized.

Larger-sized magnets and farther sensing distances can generally enable better positional accuracy than very small magnets at close distances, because magnetic flux density increases exponentially with the proximity to a magnet. TI created an online tool to help with simple magnet calculations under the TMAG5170-Q1 product folder on ti.com.

## 7.1.2 Temperature Compensation for Magnets

The TMAG5170D-Q1 temperature compensation is designed to directly compensate the average temperature drift of several magnets as specified in the MAG\_TEMPCO register bits. The residual induction (B<sub>r</sub>) of a magnet typically reduces by 0.12%/°C for NdFeB, and 0.20%/°C for ferrite magnets as the temperature increases. Set the MAG\_TEMPCO bit to default 00b if the device temperature compensation is not needed.


#### 7.1.3 Sensor Conversion

Multiple conversion schemes can be adopted based off the MAG\_CH\_EN, CONV\_AVG, DIAG\_SEL, and DIAG\_EN register bit settings.


#### 7.1.3.1 Continuous Conversion

The TMAG5170D-Q1 can be set in continuous conversion mode when OPERATING\_MODE is set to 010b. Figure 7-1 shows few examples of continuous conversion. The input magnetic field is processed in two steps. In the first step the device spins the hall sensor elements, and integrates the sampled data. In the second step, the ADC block converts the analog signal into digital bits and stores in the corresponding result register. While the ADC starts processing the first magnetic sample, the spin block can start processing another magnetic sample. The temperature data is taken at the beginning of each new conversion. This temperature data is used to compensate for the magnetic thermal drift.




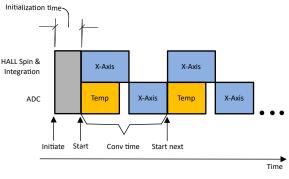

OPERATING\_MODE = 010b, MAG\_CH\_EN = 0001b, CONV\_AVG = 000b

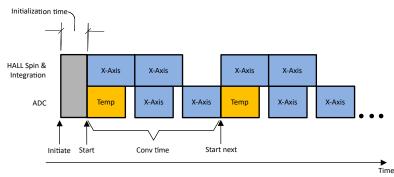

OPERATING\_MODE = 010b, MAG\_CH\_EN = 0001b, CONV\_AVG = 001b

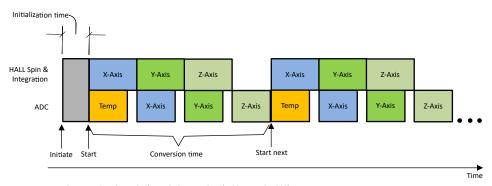

OPERATING\_MODE = 010b, MAG\_CH\_EN = 0111b, CONV\_AVG = 000b

Figure 7-1. Continuous Conversion Examples

## 7.1.3.2 Trigger Conversion

The TMAG5170D-Q1 supports trigger conversion with OPERATING\_MODE set to 000b, 001b, or 011b. During trigger conversion, the initialization time can vary depending on the operating mode (see Table 6-3). The trigger event can be initiated through a SPI command, ALERT, or CS signal. Figure 7-2 shows an example of trigger conversion with X, Y, Z, and temperature sensors activated.



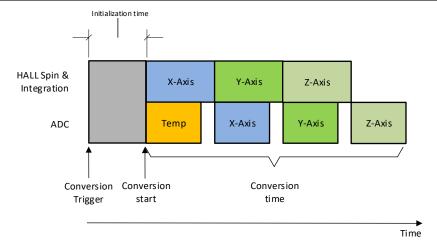


Figure 7-2. Trigger Conversion for X, Y, Z, and Temperature Sensors

## 7.1.3.3 Pseudo-Simultaneous Sampling

In absolute angle measurement, application sensor data from multiple axes are required to calculate an accurate angle. The magnetic field data collected at different times through the same signal chain introduces error in angle calculation. The TMAG5170D-Q1 offers pseudo-simultaneous sampling data collection modes to eliminate this error. Figure 7-3 shows an example where MAG CH EN is set at 1101b to collect XZX data. Equation 7 shows that the time stamps for the X and Z sensor data are the same.

$$t_{Z} = \frac{t_{X1} + t_{X2}}{2} \tag{7}$$

where

t<sub>X1</sub>, t<sub>Z</sub>, t<sub>X2</sub> are time stamps for X, Z, X sensor data completion as defined in Figure 7-3.

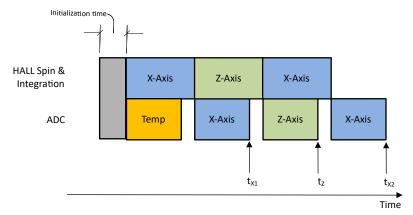


Figure 7-3. XZX Magnetic Field Conversion

The vertical X, Y sensors of the TMAG5170D-Q1 exhibit more noise than the horizontal Z sensor. The pseudosimultaneous sampling can be used to equalize the noise floor when two set of vertical sensor data are collected against one set of horizontal sensor data, as in examples of XZX or YZY modes.

### 7.1.4 Error Calculation During Linear Measurement

The TMAG5170D-Q1 offers independent configurations to perform linear position measurements in X, Y, and Z axes. To calculate the expected error during linear measurement, the contributions from each of the individual error sources must be understood. The relevant error sources include sensitivity error, offset, noise, cross axis sensitivity, hysteresis, nonlinearity, drift across temperature, drift across life time, and so forth. For a 3-axis Hall

solution like the TMAG5170D-Q1, the cross-axis sensitivity and hysteresis error sources are insignificant. Use Equation 8 to estimate the linear measurement error calculation at room temperature.

$$Error_{LM_{25C}} = \frac{\sqrt{(B \times SENS_{ER})^2 + B_{off}^2 + N_{RMS_{25}}^2}}{B} \times 100\%$$
 (8)

#### where

- Error<sub>LM\_25C</sub> is total error in % during linear measurement at 25°C.
- B is input magnetic field.
- SENS<sub>FR</sub> is sensitivity error at 25°C.
- B<sub>off</sub> is offset error at 25°C.
- N<sub>RMS\_25</sub> is RMS noise at 25°C.

In many applications, system level calibration at room temperature can nullify the offset and sensitivity errors at 25°C. The noise errors can be reduced by further digital averaging the sensor data in a microcontroller. Use Equation 9 to estimate the linear measurement error across temperature after calibration at room temperature.

$$Error_{LM\_Temp} = \frac{\sqrt{(B \times SENS_{DR})^2 + B_{off\_DR}^2 + N_{RMS\_Temp}^2}}{B} \times 100\%$$
 (9)

#### where

- Error<sub>LM\_Temp</sub> is total error in % during linear measurement across temperature after room temperature calibration.
- · B is input magnetic field.
- SENS<sub>DR</sub> is sensitivity drift from value at 25°C.
- B<sub>off DR</sub> is offset drift from value at 25°C.
- N<sub>RMS</sub> Temp is RMS noise across temperature.

If room temperature calibration is not performed, sensitivity and offset errors at room temperature must also account for total error calculation across temperature (see Equation 10).

$$Error_{LM\_Temp\_NCal} = \frac{\sqrt{\left(B \times SENS_{ER}\right)^2 + \left(B \times SENS_{DR}\right)^2 + B_{off}^2 + B_{off\_DR}^2 + N_{RMS\_Temp}^2}}{B} \times 100\%$$
 (10)

#### where

 Error<sub>LM\_Temp\_NCal</sub> is total error in % during linear measurement across temperature without room temperature calibration.

#### 7.1.5 Error Calculation During Angular Measurement

The TMAG5170D-Q1 offers on-chip CORDIC to measure angle data from any of the two magnetic axes. The linear magnetic axis data can be used to calculate the angle using an external CORDIC as well. To calculate the expected error during angular measurement, the contributions from each individual error source must be understood. The relevant error sources include sensitivity error, offset, noise, axis-axis mismatch, nonlinearity, drift across temperature, drift across life time, and so forth. Use the Angle Error Calculation Tool to estimate the total error during angular measurement.

#### 7.2 Typical Application

Magnetic angle sensors are very popular due to contactless and reliable measurements, especially in applications requiring long-term measurements in rugged environments. The TMAG5170D-Q1 offers an on-chip angle calculator that can provide angular measurement based off any two of the magnetic axes. The two axes of interest can be selected in the ANGLE\_EN register bits. The device offers an angle output in complete 360 degree scale. Take several error sources into account for angle calculation, including sensitivity error, offset error, linearity error, noise, mechanical vibration, temperature drift, and so forth.

Copyright © 2023 Texas Instruments Incorporated

Submit Document Feedback



<600

<1° for 360° rotation

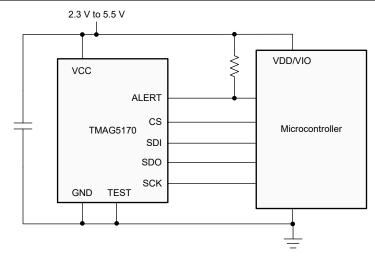


Figure 7-4. TMAG5170D-Q1 Application Diagram

### 7.2.1 Design Requirements

Use the parameters listed in Table 7-1 for this design example

DESIGN PARAMETERS	ON-AXIS MEASUREMENT	OFF-AXIS MEASUREMENT
Device	TMAG5170-A1	TMAG5170-A1
VCC	5 V	5 V
Magnet	Cylinder: 4.7625-mm diameter, 12.7-mm thick, neodymium N52, Br = 1480	Cylinder: 4.7625-mm diameter, 12.7-mm thick, neodymium N52, Br = 1480
Magnetic Range Selection	Select the same range for both axes based off the highest possible magnetic field seen by the sensor	Select the same range for both axes based off the highest possible magnetic field seen by the sensor

Table 7-1. Design Parameters

#### 7.2.1.1 Gain Adjustment for Angle Measurement

**RPM** 

**Desired Accuracy** 

Common measurement topology include angular position measurements in on-axis or off-axis angular measurements shown in Figure 7-5. Select the on-axis measurement topology whenever possible, as this offers the best optimization of magnetic field and the device measurement ranges. The TMAG5170D-Q1 offers an on-chip gain adjustment option to account for mechanical position misalignments.

<600

<1° for 360° rotation

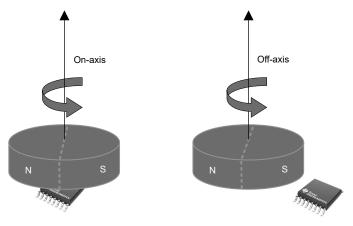


Figure 7-5. On-Axis vs. Off-Axis Angle Measurements

#### 7.2.2 Detailed Design Procedure

For accurate angle measurement, the two axes amplitudes must be normalized by selecting the proper gain adjustment value in the MAG\_GAN\_CONFIG register. The gain adjustment value is a fractional decimal number between 0 and 1. The following steps must be followed to calculate this fractional value:

- 1. Set the device at 32x average mode and rotate the shaft a full 360 degree.
- 2. Record the two axes sensor ADC codes for the full 360 degree rotation.
- 3. Measure the maximum peak-peak ADC code delta for each axis, Ax and Ay, as shown in Figure 7-6 or Figure 7-7.
- 4. Calculate the gain adjustment value for X axis:

$$G_{X} = \frac{A_{Y}}{A_{X}} \tag{11}$$

5. If  $G_X>1$ , apply the gain adjustment value to Y axis:

$$G_{Y} = \frac{1}{G_{X}} \tag{12}$$

6. Calculate the target binary gain setting at the GAIN\_VALUE register bits:


$$G_X \text{ or } G_Y = GAIN\_VALUE_{decimal} / 1024$$
 (13)

**Example 1:** If  $A_X = A_Y = 60,000$ , the GAIN\_SELECTION resister bits can be set as 00b. The GAIN\_VALUE register bits are don't care bits in this case.

**Example 2:** If  $A_X$ = 60,000,  $A_Y$  = 45,000, the  $G_X$  = 45,000/60,000 =0.75. Select 01b for the GAIN\_SELECTION register bits.

**Example 3:** If  $A_X$ = 45,000,  $A_Y$  = 60,000, the  $G_X$  = (60,000/45,000) =1.33. Since  $G_X$  >1, the gain adjustment needs to be applied to Y axis with  $G_Y$  =1/ $G_X$ . Select 10b for the GAIN\_SELECTION register bits.


### 7.2.3 Application Curves

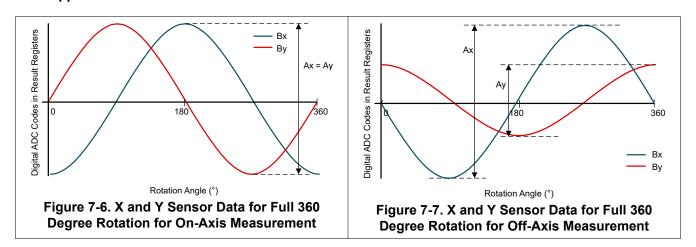


#### 7.3 Best Design Practices

The TMAG5170D-Q1 updates the result registers at the end of a conversion. SPI read of the result register must be synchronized with the conversion update time to ensure reading the updated result data. The conversion update time, t<sub>measure</sub> is defined in the *Electrical Characteristics* table. Figure 7-8 shows examples of correct and incorrect SPI read timings for applications with strict timing budgets. Use the ALERT signal to notify the controller when a conversion is complete.



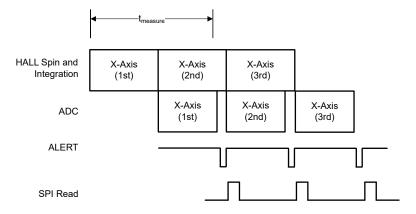

SPI Read Synchronized with Conversion Complete

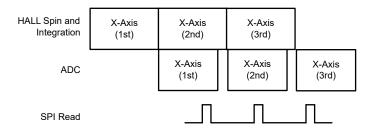

SPI Read not Synchronized with Conversion Complete

Figure 7-8. SPI Read During Continuous Conversion

## 7.4 Power Supply Recommendations

A decoupling capacitor close to the device must be used to provide local energy with minimal inductance. TI recommends using a ceramic capacitor with a value of at least  $0.01~\mu F$  between each VCC and GND pins. Connect the TEST pins to the respective ground planes.

#### 7.5 Layout

## 7.5.1 Layout Guidelines

Magnetic fields pass through most nonferromagnetic materials with no significant disturbance. Embedding Hall-effect sensors within plastic or aluminum enclosures and sensing magnets on the outside is common practice. Magnetic fields also easily pass through most printed circuit boards (PCBs), which makes placing the magnet on the opposite side of the PCB possible.



## 7.5.2 Layout Example

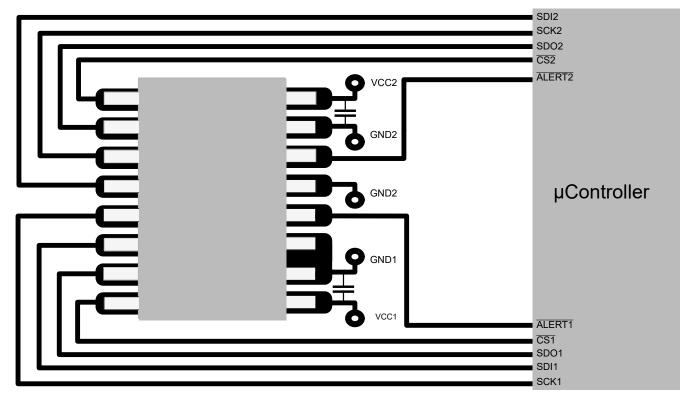


Figure 7-9. Layout Example With TMAG5170D-Q1



# 8 Register Map

All register addresses not listed should be considered as reserved locations and the register contents should not be modified.

Table 8-1. TMAG5170D-Q1 Registers

Address	Туре	Reset	Acronym	Register Name	Section
00h	R/W	0000h	DEVICE_CONFIG	Configure Device Operation Modes	Go
01h	R/W	0000h	SENSOR_CONFIG	Configure Device Operation Modes	Go
02h	R/W	0000h	SYSTEM_CONFIG	Configure Device Operation Modes	Go
03h	R/W	0000h	ALERT_CONFIG	Configure Device Operation Modes	Go
04h	R/W	7D83h	X_THRX_CONFIG	Configure Device Operation Modes	Go
05h	R/W	7D83h	Y_THRX_CONFIG	Configure Device Operation Modes	Go
06h	R/W	7D83h	Z_THRX_CONFIG	Configure Device Operation Modes	Go
07h	R/W	6732h	T_THRX_CONFIG	Configure Device Operation Modes	Go
08h	R/W	0000h	CONV_STATUS	Conversion Status Register	Go
09h	R	0000h	X_CH_RESULT	Conversion Result Register	Go
0Ah	R	0000h	Y_CH_RESULT	Conversion Result Register	Go
0Bh	R	0000h	Z_CH_RESULT	Conversion Result Register	Go
0Ch	R	0000h	TEMP_RESULT	Conversion Result Register	Go
0Dh	R	8000h	AFE_STATUS	Status Register	Go
0Eh	R	0000h	SYS_STATUS	Status Register	Go
0Fh	R/W	00x0h	TEST_CONFIG	Test Configuration Register	Go
10h	R	0000h	OSC_MONITOR	Conversion Result Register	Go
11h	R/W	0000h	MAG_GAIN_CONFIG	Configure Device Operation Modes	Go
12h	R/W	0000h	MAG_OFFSET_CONFIG	Configure Device Operation Modes	Go
13h	R	0000h	ANGLE_RESULT	Conversion Result Register	Go
14h	R	0000h	MAGNITUDE_RESULT	Conversion Result Register	Go

Table 8-2. TMAG5170D-Q1 Access Type Codes

Table 0-2. TWACSTY OD-QT Access Type Codes			
Code	Description		
R	Read		
R C	Read to Clear		
W	Write		
Reset or Default Value			
	Value after reset or the default value		
	R R C		



## 8.1 DEVICE\_CONFIG Register (Address = 00h) [Reset = 0000h]

Return to Register Map.

Table 8-3. DEVICE\_CONFIG Register Field Descriptions

Bit	Field	Туре	Reset	Description
15	RESERVED	R	0h	Reserved
14-12	CONV_AVG	R/W	Oh	Enables additional sampling of the sensor data to reduce the noise effect (or to increase resolution)  0h = 1x - 10.0 kSPS (3-axes) or 20 kSPS (1 axis)  1h = 2x - 5.7 kSPS (3-axes) or 13.3 kSPS (1 axis)  2h = 4x - 3.1 kSPS (3-axes) or 8.0 kSPS (1 axis)  3h = 8x - 1.6 kSPS (3-axes) or 4.4 kSPS (1 axis)  4h = 16x - 0.8 kSPS (3-axes) or 2.4 kSPS (1 axis)  5h = 32x - 0.4 kSPS (3-axes) or 1.2 kSPS (1 axis)  6h = Code not used, defaults to 000b if selected  7h = Code not used, defaults to 000b if selected
11-10	RESERVED	R	0h	Reserved
9-8	MAG_TEMPCO	R/W	Oh	Temperature coefficient of sense magnet 0h = 0%/ deg C (Current sensor applications) 1h = 0.12%/deg C (NdBFe) 2h = 0.03% /deg C (SmCo) 3h = 0.2%/deg C (Ceramic)
7	RESERVED	R	0h	Reserved
6-4	OPERATING_MODE	R/W	Oh	Selects operating mode  0h = Configuration mode, Default (TRIGGER_MODE active)  1h = Stand-by mode (TRIGGER_MODE active)  2h = Active measure mode (Continuous conversion)  3h = Active trigger mode (TRIGGER_MODE active)  4h = Wake-up and sleep mode (duty-cycled mode)  5h = Sleep mode  6h = Deep sleep mode (wakes up at CS signal from controller)  7h = Code not used, defaults to 000b if selected
3	T_CH_EN	R/W	Oh	Enables temperature compensation of the sensor data. Set this bit to '1b' for precision performance. If only temperature channel is enabled, the CONV_AVG register bits need to set at 000b.  0h = Temp channel disabled, Default 1h = Temp channel enabled
2	T_RATE	R/W	0h	Temperature conversion rate. The rate is linked to the CONV_AVG field  0h = Same as other sensors per CONV_AVG, Default 1h = Once per conversion set
1	T_HLT_EN	R/W	0h	Enables temperature limit check  0h = Temperature limit check off, Default  1h = Temperature limit check on
0	RESERVED	R	0h	Reserved



# 8.2 SENSOR\_CONFIG Register (Address = 01h) [Reset = 0000h]

Return to Register Map.

## Table 8-4. SENSOR\_CONFIG Register Field Descriptions

Bit	Field	Type	Reset	Description
15:14	ANGLE_EN	R/W	Oh	Enable angle calculation using two axis data  Oh = No angle calculation (default)  1h = X-Y-angle calculation enabled  2h = Y-Z-angle calculation enabled  3h = X-Z-angle calculation enabled
13:10	SLEEPTIME	R/W	Oh	Selects the time spent in low power mode between conversions when OPERATING_MODE =010b  0h = 1 ms 1h = 5 ms 2h = 10 ms 3h = 15 ms 4h = 20 ms 5h = 30 ms 6h = 50 ms 7h = 100 ms 8h = 500 ms 9h = 1000 ms Ah = Code not used, defaults to 0000b if selected Bh = Code not used, defaults to 0000b if selected Ch = Code not used, defaults to 0000b if selected Dh = Code not used, defaults to 0000b if selected Eh = Code not used, defaults to 0000b if selected Fh = Code not used, defaults to 0000b if selected Fh = Code not used, defaults to 0000b if selected
9:6	MAG_CH_EN	R/W	Oh	Enables data acquisition of the magnetic axis channel(s)  0h = All magnetic channels of OFF, DEFAUT  1h = X channel enabled  2h = Y channel enabled  3h = X, Y channels enabled  4h = Z channel enabled  5h = Z, X channels enabled  6h = Y, Z channels enabled  7h = X, Y, Z channels enabled  8h = XYX channels enabled  9h = YXY channels enabled  Ah = YZY channels enabled  Bh = ZYZ channels enabled  Ch = ZXZ channels enabled  Dh = XZX channels enabled  Eh = XYZYX channels enabled  Fh = XYZZYX channels enabled
5:4	Z_RANGE	R/W	Oh	Enables different magnetic ranges to support magnetic fields from ±25 mT to ±300 mT  0h = ±50 mT (TMAG5170A1)/ ±150 mT(TMAG5170A2), Default 1h = ±25 mT (TMAG5170A1)/ ±75 mT(TMAG5170A2) 2h = ±100 mT (TMAG5170A1)/ ±300 mT(TMAG5170A2) 3h = Code not used, defaults to 00b if selected
3:2	Y_RANGE	R/W	Oh	Enables different magnetic ranges to support magnetic fields from ±25 mT to ±300 mT  0h = ±50 mT (TMAG5170A1)/ ±150 mT(TMAG5170A2), Default 1h = ±25 mT (TMAG5170A1)/ ±75 mT(TMAG5170A2) 2h = ±100 mT (TMAG5170A1)/ ±300 mT(TMAG5170A2) 3h = Code not used, defaults to 00b if selected
1:0	X_RANGE	R/W	Oh	Enables different magnetic ranges to support magnetic fields from $\pm 25$ mT to $\pm 300$ mT $0h = \pm 50$ mT (TMAG5170A1)/ $\pm 150$ mT(TMAG5170A2), Default $1h = \pm 25$ mT (TMAG5170A1)/ $\pm 75$ mT(TMAG5170A2) $2h = \pm 100$ mT (TMAG5170A1)/ $\pm 300$ mT(TMAG5170A2) $3h = Code$ not used, defaults to 00b if selected



## SYSTEM\_CONFIG Register (Address = 02h) [Reset = 0000h]

Return to Register Map.

## Table 8-5. SYSTEM\_CONFIG Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:14	RESERVED	R	0h	Reserved
13:12	DIAG_SEL	R/W	0h	Selects a diagnostic mode run  0h = Run all data path diagnostics all together, Default  1h = Run only enabled data path diagnostics all together  2h = Run all data path diagnostics in sequence  3h = Run only enabled data path diagnostics in sequence
11	RESERVED	R	0h	Reserved
10:9	TRIGGER_MODE	R/W	Oh	Selects a condition which initiates a single conversion based off already configured registers. A running conversion completes before executing a trigger. Redundant triggers are ignored.  TRIGGER_MODE is available only during the modes explicitly mentioned in OPERATING_MODE.  0h = Conversion start at SPI command, Default 1h = Conversion start at CS pulse 2h = Conversion start at ALERT pulse 3h = Code not used, defaults to 00b if selected
8:6	DATA_TYPE	R/W	Oh	Data Type to be accessed from results registers via SPI 0h = Default 32-bit register access 1h = 12-Bit XY data access 2h = 12-Bit XZ data access 3h = 12-Bit ZY data access 4h = 12-Bit XT data access 5h = 12-Bit YT data access 6h = 12-Bit ZT data access 7h = 12-Bit AM data access
5	DIAG_EN	R/W	0h	Enables user controlled AFE diagnostic tests  0h = Execution of AFE diagnostics is disabled, Default  1h = Execution of AFE diagnostics is enabled
4:3	RESERVED	R	0h	Reserved
2	Z_HLT_EN	R/W	0h	Enables magnetic field limit check on Z axis  0h = Z axis limit check off, Default  1h = Z axis limit check on
1	Y_HLT_EN	R/W	0h	Enables magnetic field limit check on Y axis  0h = Y axis limit check off, Default  1h = Y axis limit check on
0	X_HLT_EN	R/W	0h	Enables magnetic field limit check on X axis  0h = X axis limit check off, Default  1h = X axis limit check on



## 8.3 ALERT\_CONFIG Register (Address = 03h) [Reset = 0000h]

Return to Register Map.

Table 8-6. ALERT\_CONFIG Register Field Descriptions

				Register Fleid Descriptions
Bit	Field	Туре	Reset	Description
15:14	RESERVED	R	0h	Reserved
13	ALERT_LATCH	R/W	Oh	Latched ALERT mode select  0h = ALERT sources are not latched. ALERT is asserted only while the source of the ALERT response is present  1h = ALERT sources are latched. ALERT response is latched when the source of the ALERT is asserted until cleared on Read of the corresponding status register (AFE_STATUS, SYS_STATUS, or result registers)
12	ALERT_MODE	R/W	0h	ALERT mode select  0h = Interrupt mode  1h = Switch mode. This mode overrides any interrupt function (ALERT trigger is also disabled), and implements Hall switch function based off the *_THRX_ALRT settings. In the switch mode the corresponding X_HLT_EN, Y_HLT_EN, Z_HLT_EN need to be set.
11	STATUS_ALRT	R/W	0h	Enable ALERT response when any flag in the AFE_STATUS or SYS_STATUS registers are set 0h = ALERT is not asserted when any of the AFE_STATUS or SYS_STATUS bit is set 1h = ALERT output is asserted when any of the AFE_STATUS or SYS_STATUS bit is set
10:9	RESERVED	R	0h	Reserved
8	RSLT_ALRT	R/W	0h	Enable ALERT response when the configured set of conversions is complete  0h = ALERT is not used to signal when the configured set of conversions are complete  1h = ALERT output is asserted when the configured set of conversions are complete
7:6	RESERVED	R	0h	Reserved
5:4	THRX_COUNT	R/W	0h	Number of conversions above the HIGH threshold or below the LOW threshold before the ALERT response is initiated 0h = 1-Conversion result 1h = 2-Conversion results 2h = 3-Conversion results 3h = 4-Conversion results
3	T_THRX_ALRT	R/W	0h	Temperature threshold ALERT enable  0h = ALERT is not used to signal when temperature thresholds are crossed  1h = ALERT output is asserted when temperature thresholds are crossed
2	Z_THRX_ALRT	R/W	0h	Z-Channel threshold ALERT enable  0h = ALERT is not used to signal when Z-Axis magnetic thresholds are crossed  1h = ALERT output is asserted when Z-Axis magnetic thresholds are crossed
1	Y_THRX_ALRT	R/W	0h	Y-Channel threshold ALERT enable 0h = ALERT is not used to signal when Y-Axis magnetic thresholds are crossed 1h = ALERT output is asserted when Y-Axis magnetic thresholds are crossed
0	X_THRX_ALRT	R/W	0h	X-Channel threshold ALERT enable 0h = ALERT is not used to signal when X-Axis magnetic thresholds are crossed 1h = ALERT output is asserted when X-Axis magnetic thresholds are crossed

## 8.4 X\_THRX\_CONFIG Register (Address = 04h) [Reset = 7D83h]

Return to Register Map.

Table 8-7. X\_THRX\_CONFIG Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:8	X_HI_THRESHOLD	R/W	7Dh	X-Axis maximum magnetic field threshold. User input as 2's complement 8-bit binary number. The threshold in mT can be calculated as: (X_RANGE/128)*X_HI_THRESHOLD. Default to 98% of the full-scale
7:0	X_LO_THRESHOLD	R/W	83h	X-Axis minimum magnetic field threshold. User input as 2's complement 8-bit binary number. The threshold in mT can be calculated as: (X_RANGE/128)*X_LO_THRESHOLD. Default to -98% of the full-scale

## Y\_THRX\_CONFIG Register (Address = 05h) [Reset = 7D83h]

Return to Register Map.

#### Table 8-8. Y\_THRX\_CONFIG Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:8	Y_HI_THRESHOLD	R/W	7Dh	Y-Axis maximum magnetic field threshold. User input as 2's complement 8-bit binary number. The threshold in mT can be calculated as: (Y_RANGE/128)*Y_HI_THRESHOLD. Default to 98% of the full-scale.
7:0	Y_LO_THRESHOLD	R/W	83h	Y-Axis minimum magnetic field threshold. User input as 2's complement 8-bit binary number. The threshold in mT can be calculated as: (Y_RANGE/128)*Y_LO_THRESHOLD. Default to -98% of the full-scale.

## Z\_THRX\_CONFIG Register (Address = 06h) [Reset = 7D83h]

Return to Register Map.

## Table 8-9. Z\_THRX\_CONFIG Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:8	Z_HI_THRESHOLD	R/W	7Dh	Z-Axis maximum magnetic field threshold. User input as 2's complement 8-bit binary number. The threshold in mT can be calculated as:(Z_RANGE/128)*Z_HI_THRESHOLD. Default to 98% of the full-scale
7:0	Z_LO_THRESHOLD	R/W	83h	Z-Axis minimum magnetic field threshold. User input as 2's complement 8-bit binary number. The threshold in mT can be calculated as: (Z_RANGE/128)*X_LO_THRESHOLD. Default to -98% of the full-scale

## T\_THRX\_CONFIG Register (Address = 07h) [Reset = 6732h]

Return to Register Map.

## Table 8-10. T\_THRX\_CONFIG Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:8	T_HI_THRESHOLD	R/W	67h	Temperature maximum threshold. User input as 2's complement 8-bit binary number. Each LSB in this field corresponds to 4.267°C. Default value of 67h represents 172°C.
7:0	T_LO_THRESHOLD	R/W	32h	Temperature minimum threshold. User input as 2's complement 8-bit binary number. Each LSB in this field corresponds to 4.267°C. Default value of 32h represents -53°C.

## CONV\_STATUS Register (Address = 08h) [Reset = 0000h]

Return to Register Map.

## Table 8-11. CONV\_STATUS Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:14	RESERVED	R	0h	Reserved
13	RDY	R	0h	Conversion data buffer is ready.  0h = Conversion data not valid (result registers hold previous conversion value)  1h = Conversion data valid
12	A	R	0h	Angle/Magnitude data from current conversion 0h = Data is not current 1h = Data is current
11	Т	R	0h	Temperature data from current conversion  0h = Temperature data is not current  1h = Temperature data is current
10	Z	R	0h	Z-Channel data from current conversion 0h = Z-Channel data is not current 1h = Z-Channel data is current
9	Y	R	0h	Y-Channel data from current conversion 0h = Y-Channel data is not current 1h = Y-Channel data is current
8	X	R	0h	X-Channel data from current conversion 0h = X-Channel data is not current 1h = X-Channel data is current
7	RESERVED	R	0h	Reserved
6:4	SET_COUNT	R	0h	Rolling count of conversion data sets
3:2	RESERVED	R	0h	Reserved
1:0	ALRT_STATUS	R	0h	State of ALERT response  0h = No ALERT conditions  1h = AFE status flag set  2h = SYS status flag set  3h = Flags set in both AFE and SYS status registers

## X\_CH\_RESULT Register (Address = 09h) [Reset = 0000h]

Return to Register Map.

## Table 8-12. X\_CH\_RESULT Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:0	X_CH_RESULT	R	0000h	X-Channel data conversion results

## Y\_CH\_RESULT Register (Address = 0Ah) [Reset = 0000h]

Return to Register Map.

## Table 8-13. Y\_CH\_RESULT Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:0	Y_CH_RESULT	R	0000h	Y-Channel data conversion results



## 8.5 Z\_CH\_RESULT Register (Address = 0Bh) [Reset = 0000h]

Return to Register Map.

#### Table 8-14. Z\_CH\_RESULT Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:0	Z_CH_RESULT	R	0000h	Z-Channel data conversion results

## TEMP\_RESULT Register (Address = 0Ch) [Reset = 0000h]

Return to Register Map.

## Table 8-15. TEMP\_RESULT Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:0	TEMP_RESULT	R	0000h	Temperature sensor data conversion results

## AFE\_STATUS Register (Address = 0Dh) [Reset = 8000h]

Return to Register Map.

## Table 8-16. AFE\_STATUS Register Field Descriptions

Bit	Field	Туре	Reset	Description
15	CFG_RESET	RC	1h	Device power up status. This bit is reset when microcontroller reads the AFE_STATUS register.  Oh = Device reset has been acknowledged and cleared  1h = Device has experienced a hardware reset after a power down or brown-out
14:13	RESERVED	R	0h	Reserved
12	SENS_STAT	RC	0h	Analog front end sensor diagnostic status  0h = No error detected  1h = Analog front end sensor diagnostic test failed
11	TEMP_STAT	RC	0h	Temperature sensor diagnostic status  0h = No error detected  1h = Analog front end temperature sensor diagnostic test failed
10	ZHS_STAT	RC	0h	Z-Axis hall sensor diagnostic status  0h = No error detected  1h = Z-Axis hall sensor diagnostic test failed
9	YHS_STAT	RC	0h	Y-Axis hall sensor diagnostic status  0h = No error detected  1h = Y-Axis hall sensor diagnostic test failed
8	XHS_STAT	RC	0h	X-Axis hall sensor diagnostic status 0h = No error detected 1h = X-Axis hall sensor diagnostic test failed
7:2	RESERVED	R	0h	Reserved
1	TRIM_STAT	RC	0h	Trim data error  0h = No trim data errors were detected  1h = Trim data error was detected
0	LDO_STAT	RC	0h	LDO error 0h = No faults in the internal LDO supplied power were detected 1h = A fault in the internal LDO supplied power was detected

Copyright © 2023 Texas Instruments Incorporated



## 8.6 SYS\_STATUS Register (Address = 0Eh) [Reset = 0000h]

Return to Register Map.

## Table 8-17. SYS\_STATUS Register Field Descriptions

Bit	Field	Туре	Reset	Description
15	ALRT_LVL	R	Oh	Reflects the current state of the ALERT pin feed-back path  0h = The input ALERT logic level is low  1h = The input ALERT logic level is high
14	ALRT_DRV	RC	Oh	Each time the open drain ALERT signal is driven, the feedback circuit checks if the ALERT output goes Low. An error flag is generated at the ALRT_DRV bit if the output does not go Low.  Oh = No ALERT drive error detected  1h = ALERT drive error detected
13	SDO_DRV	RC	Oh	The Logic value driven output on SDO was not the value of the SDO Pin Feed-back path when SDO is being driven by the device 0h = No SDO drive error detected 1h = SDO drive error detected
12	CRC_STAT	RC	0h	Cyclic redundancy check error  0h = No cyclic redundancy check error was detected  1h = Cyclic redundancy check error was detected for a SPI transaction
11	FRAME_STAT	RC	Oh	Incorrect number of clocks in SPI frame  0h = No frame error was detected  1h = Incorrect number of clocks detected for a SPI transaction
10:8	OPERATING_STAT	R	Oh	Reports the status of operating mode  0h = Config state  1h = Standby state  2h = Active measure (Continuous Mode) state  3h = Active triggered mode state  4h = DCM active state  5h = DCM Sleep state  6h = Sleep state
7:6	RESERVED	R	0h	Reserved
5	VCC_OV	RC	Oh	VCC over-voltage detection in active or stand-by mode 0h = No over-voltage detected on VCC 1h = VCC was detected to be over-voltage
4	VCC_UV	RC	Oh	VCC under voltage detection in active or stand-by mode 0h = No under-voltage was detected on VCC 1h = VCC was detected to be under-voltage
3	TEMP_THX	RC	Oh	Temperature threshold crossing detected  0h = No temperature threshold crossing detected  1h = Temperature threshold crossing detected
2	ZCH_THX	RC	0h	Z-Channel threshold crossing detected 0h = No Z-Axis magnetic field threshold crossing detected 1h = Z-Axis magnetic field threshold crossing detected
1	YCH_THX	RC	0h	Y-Channel threshold crossing detected  0h = No Y-Axis magnetic field threshold crossing detected  1h = Y-Axis magnetic field threshold crossing detected
0	XCH_THX	RC	0h	X-Channel threshold crossing detected  0h = No X-Axis magnetic field threshold crossing detected  1h = X-Axis magnetic field threshold crossing detected

## 8.7 TEST\_CONFIG Register (Address = 0Fh) [Reset = 00x0]

Return to Register Map.

Table 8-18. TEST\_CONFIG Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:6	RESERVED	R	001h	Reserved
5:4	VER	R	xh	Indicates the version of the device  0h = A1 rev  1h = A2 rev  2h = reserved  3h = reserved
3	RESERVED	R	0h	Reserved
2	CRC_DIS	R/W	0h	Enable or disable CRC in SPI communication  0h = CRC enabled in SPI communication (Default)  1h = CRC disabled in SPI communication
1:0	OSC_CNT_CTL	R/W	Oh	Oscillator count control - starts, stops, and resets the counter driven by the HFOSC or LFOSC oscillator to facilitate oscillator frequency and integrity checks  0h = Reset OSC counter (default)  1h = Start OSC counter driven by HFOSC  2h = Start OSC counter driven by LFOSC  3h = Stop OSC counter

## OSC\_MONITOR Register (Address = 10h) [Reset = 0000h]

Return to Register Map.

Table 8-19. OSC\_MONITOR Register Field Descriptions

Bit	Field	Туре	Reset	Description				
15:0	OSC_COUNT	R		Oscillator Counter. The number of selected oscillator clock cycles that have been counted since Oscillator Counter was started. The HFOSC and LFOSC clock roll-over the 16-bit counter once reaching the max value.				

## MAG\_GAIN\_CONFIG Register (Address = 11h) [Reset = 0000h]

Return to Register Map.

Table 8-20. MAG\_GAIN\_CONFIG Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:14	GAIN_SELECTION	R/W	0h	Enables the selection of a particular Hall axis for amplitude correction to get accurate angle measurement  0h = No axis is selected (Default)  1h = X-axis is selected  2h = Y-axis is selected  3h = Z-axis is selected
13:11	RESERVED	R	0h	Reserved
10:0	GAIN_VALUE	R/W	000h	11-bit gain value determined by controller to adjust the a particular Hall axis value. The gain value is anywhere between 0 and 2. Gain is calculated as 'user entered value/1024'.



## 8.8 MAG\_OFFSET\_CONFIG Register (Address = 12h) [Reset = 0000h]

Return to Register Map.

## Table 8-21. MAG\_OFFSET\_CONFIG Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:14	OFFSET_SELECTION	R/W	Oh	Enables the selection of a particular Hall axis for offset correction to get accurate angle measurement:  00b = No axis is selected for offset correction (Default).  01b = Only OFFSET_VALUE1 is used for offset correction. Applied to X axis when ANGLE_EN = 01b or 11b, and to Y axis when ANGLE_EN = 10b. No axis is selected if ANGLE_EN = 00b.  10b = Only OFFSET_VALUE2 is used for offset correction. Applied to Y axis when ANGLE_EN = 01b, and to Z axis when ANGLE_EN = 10b or 11b. No axis is selected if ANGLE_EN = 00b.  11b = Both OFFSET_VALUE1 and OFFSET_VALUE2 are used for offset correction. OFFSET_VALUE1 applied to X axis when ANGLE_EN = 01b or 11b, and to Y axis when ANGLE_EN = 10b.  OFFSET_VALUE2 applied to Y axis when ANGLE_EN = 01b, and to Z axis when ANGLE_EN = 10b or 11b. No axis is selected if ANGLE_EN = 00b.
13:7	OFFSET_VALUE1	R/W	00h	7-bit, 2' complement offset value determined by controller to adjust a particular Hall axis value. The range of possible offset valid entries can be +/-64. The offset value is calculated from the user input as the 7 LSB bits of a 11-bit range per SENSOR_CONFIG register setting for the corresponding axis. Default offset value is 0.
6:0	OFFSET_VALUE2	R/W	00h	7-bit, 2' complement offset value determined by controller to adjust a particular Hall axis value. The range of possible offset valid entries can be +/-64. The offset value is calculated from the user input as the 7 LSB bits of a 11-bit range per SENSOR_CONFIG register setting for the corresponding axis. Default offset value is 0.

## ANGLE\_RESULT Register (Address = 13h) [Reset = 0000h]

Return to Register Map.

## Table 8-22. ANGLE\_RESULT Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:13	Reserved	R	0h	Reserved
12:2	ANGLE_RESULT[10:0]	R		Angle measurement result in degree. The data is displayed from 0 to 360 degree in 11 LSB bits. The LSB size is 0.25°
1:0	Reserved	R	0h	Reserved

## MAGNITUDE\_RESULT Register (Address = 14h) [Reset = 0000h]

Return to Register Map.

## Table 8-23. MAGNITUDE\_RESULT Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:0	MAGNITUDE_RESULT	R	0000h	Resultant vector magnitude (during angle measurement) result. This value should be constant during 360 degree measurements

## 9 Device and Documentation Support

## 9.1 Receiving Notification of Documentation Updates

To receive notification of documentation updates, navigate to the device product folder on ti.com. Click on *Notifications* to register and receive a weekly digest of any product information that has changed. For change details, review the revision history included in any revised document.

### 9.2 Support Resources

TI E2E<sup>™</sup> support forums are an engineer's go-to source for fast, verified answers and design help — straight from the experts. Search existing answers or ask your own question to get the quick design help you need.

Linked content is provided "AS IS" by the respective contributors. They do not constitute TI specifications and do not necessarily reflect TI's views; see TI's Terms of Use.

## 9.3 Trademarks

TI E2E<sup>™</sup> is a trademark of Texas Instruments.

All trademarks are the property of their respective owners.

## 9.4 Electrostatic Discharge Caution



This integrated circuit can be damaged by ESD. Texas Instruments recommends that all integrated circuits be handled with appropriate precautions. Failure to observe proper handling and installation procedures can cause damage.

ESD damage can range from subtle performance degradation to complete device failure. Precision integrated circuits may be more susceptible to damage because very small parametric changes could cause the device not to meet its published specifications.

## 9.5 Glossary

TI Glossary

This glossary lists and explains terms, acronyms, and definitions.

## 10 Revision History

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

## Changes from Revision \* (March 2023) to Revision A (December 2023)

Page

Changed data sheet status from Advanced Information to Production Data......

#### 11 Mechanical, Packaging, and Orderable Information

The following pages include mechanical, packaging, and orderable information. This information is the most current data available for the designated devices. This data is subject to change without notice and revision of this document. For browser-based versions of this data sheet, refer to the left-hand navigation.

www.ti.com 11-Jan-2024

#### PACKAGING INFORMATION

Orderable Device	Status	Package Type	Package Drawing	Pins	Package Qty	Eco Plan	Lead finish/ Ball material	MSL Peak Temp	Op Temp (°C)	Device Marking (4/5)	Samples
TMAG5170DA1EPWRQ1	ACTIVE	TSSOP	PW	16	2000	RoHS & Green	SN	Level-3-260C-168 HR	-40 to 150	5170DA1	Samples
TMAG5170DA2EPWRQ1	ACTIVE	TSSOP	PW	16	2000	RoHS & Green	SN	Level-3-260C-168 HR	-40 to 150	5170DA2	Samples

(1) The marketing status values are defined as follows:

**ACTIVE:** Product device recommended for new designs.

LIFEBUY: TI has announced that the device will be discontinued, and a lifetime-buy period is in effect.

NRND: Not recommended for new designs. Device is in production to support existing customers, but TI does not recommend using this part in a new design.

PREVIEW: Device has been announced but is not in production. Samples may or may not be available.

**OBSOLETE:** TI has discontinued the production of the device.

(2) RoHS: TI defines "RoHS" to mean semiconductor products that are compliant with the current EU RoHS requirements for all 10 RoHS substances, including the requirement that RoHS substance do not exceed 0.1% by weight in homogeneous materials. Where designed to be soldered at high temperatures, "RoHS" products are suitable for use in specified lead-free processes. TI may reference these types of products as "Pb-Free".

RoHS Exempt: TI defines "RoHS Exempt" to mean products that contain lead but are compliant with EU RoHS pursuant to a specific EU RoHS exemption.

Green: TI defines "Green" to mean the content of Chlorine (CI) and Bromine (Br) based flame retardants meet JS709B low halogen requirements of <=1000ppm threshold. Antimony trioxide based flame retardants must also meet the <=1000ppm threshold requirement.

- (3) MSL, Peak Temp. The Moisture Sensitivity Level rating according to the JEDEC industry standard classifications, and peak solder temperature.
- (4) There may be additional marking, which relates to the logo, the lot trace code information, or the environmental category on the device.
- (5) Multiple Device Markings will be inside parentheses. Only one Device Marking contained in parentheses and separated by a "~" will appear on a device. If a line is indented then it is a continuation of the previous line and the two combined represent the entire Device Marking for that device.
- (6) Lead finish/Ball material Orderable Devices may have multiple material finish options. Finish options are separated by a vertical ruled line. Lead finish/Ball material values may wrap to two lines if the finish value exceeds the maximum column width.

**Important Information and Disclaimer:** The information provided on this page represents TI's knowledge and belief as of the date that it is provided. TI bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. TI has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. TI and TI suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

In no event shall TI's liability arising out of such information exceed the total purchase price of the TI part(s) at issue in this document sold by TI to Customer on an annual basis.



# **PACKAGE OPTION ADDENDUM**

www.ti.com 11-Jan-2024

# **PACKAGE MATERIALS INFORMATION**

www.ti.com 23-Dec-2023

## TAPE AND REEL INFORMATION





A0	Dimension designed to accommodate the component width
В0	Dimension designed to accommodate the component length
K0	Dimension designed to accommodate the component thickness
W	Overall width of the carrier tape
P1	Pitch between successive cavity centers

### QUADRANT ASSIGNMENTS FOR PIN 1 ORIENTATION IN TAPE



#### \*All dimensions are nominal

Device	Package Type	Package Drawing		SPQ	Reel Diameter (mm)	Reel Width W1 (mm)	A0 (mm)	B0 (mm)	K0 (mm)	P1 (mm)	W (mm)	Pin1 Quadrant
TMAG5170DA1EPWRQ1	TSSOP	PW	16	2000	330.0	12.4	6.85	5.45	1.6	8.0	12.0	Q1
TMAG5170DA2EPWRQ1	TSSOP	PW	16	2000	330.0	12.4	6.85	5.45	1.6	8.0	12.0	Q1

**PACKAGE MATERIALS INFORMATION** 

www.ti.com 23-Dec-2023



### \*All dimensions are nominal

Device	Package Type	Package Drawing	Pins	SPQ	Length (mm)	Width (mm)	Height (mm)	
TMAG5170DA1EPWRQ1	TSSOP	PW	16	2000	340.0	340.0	38.0	
TMAG5170DA2EPWRQ1	TSSOP	PW	16	2000	340.0	340.0	38.0	



SMALL OUTLINE PACKAGE



#### NOTES:

- 1. All linear dimensions are in millimeters. Any dimensions in parenthesis are for reference only. Dimensioning and tolerancing per ASME Y14.5M.

  2. This drawing is subject to change without notice.

  3. This dimension does not include mold flash, protrusions, or gate burrs. Mold flash, protrusions, or gate burrs shall not
- exceed 0.15 mm per side.
- 4. This dimension does not include interlead flash. Interlead flash shall not exceed 0.25 mm per side.
- 5. Reference JEDEC registration MO-153.



SMALL OUTLINE PACKAGE



NOTES: (continued)

6. Publication IPC-7351 may have alternate designs.

7. Solder mask tolerances between and around signal pads can vary based on board fabrication site.



SMALL OUTLINE PACKAGE



NOTES: (continued)

- 8. Laser cutting apertures with trapezoidal walls and rounded corners may offer better paste release. IPC-7525 may have alternate design recommendations.
- 9. Board assembly site may have different recommendations for stencil design.



## IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATA SHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to TI's Terms of Sale or other applicable terms available either on ti.com or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products.

TI objects to and rejects any additional or different terms you may have proposed.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2024, Texas Instruments Incorporated