

# ***BQ27Z746-R1 and BQ27Z758***

## *Technical Reference Manual*

---



Literature Number: SLUUD50C  
OCTOBER 2024 – REVISED APRIL 2026



# Table of Contents



|   |    |
|---|----|
| <b>Read This First</b> .....                        | 9  |
| About This Manual.....                              | 9  |
| Notational Conventions.....                         | 9  |
| Battery Notational Conventions.....                 | 9  |
| Trademarks.....                                     | 9  |
| Glossary.....                                       | 9  |
| <b>1 Introduction</b> .....                         | 10 |
| <b>2 IO Options</b> .....                           | 11 |
| 2.1 Configuration of the GPO Pin.....               | 11 |
| <b>3 Basic Measurement System</b> .....             | 12 |
| 3.1 Introduction.....                               | 12 |
| 3.2 Current and Coulomb Counting.....               | 12 |
| 3.3 Voltage.....                                    | 12 |
| 3.3.1 Cell Voltage.....                             | 12 |
| 3.3.2 Pack Voltage.....                             | 12 |
| 3.4 Temperature.....                                | 12 |
| 3.4.1 Internal Temperature.....                     | 12 |
| 3.4.2 Cell Temperature.....                         | 12 |
| 3.4.3 Optional Second Temperature Sensor.....       | 13 |
| 3.4.4 Temperature Configuration.....                | 13 |
| <b>4 Protections</b> .....                          | 14 |
| 4.1 Introduction.....                               | 14 |
| 4.2 Hardware-Based Protection.....                  | 14 |
| 4.2.1 Cell Undervoltage Protection.....             | 14 |
| 4.2.2 Cell Overvoltage Protection.....              | 14 |
| 4.2.3 Overcurrent in Discharge Protection.....      | 14 |
| 4.2.4 Overcurrent in Charge Protection.....         | 15 |
| 4.2.5 Short Circuit in Discharge Protection.....    | 15 |
| 4.2.6 Threshold Targets.....                        | 15 |
| 4.3 Firmware Based Protections.....                 | 16 |
| 4.3.1 Cell Undervoltage Protection.....             | 16 |
| 4.3.2 Cell Overvoltage Protection.....              | 17 |
| 4.3.3 Overcurrent in Charge Protection.....         | 18 |
| 4.3.4 Overcurrent in Discharge Protection.....      | 18 |
| 4.3.5 Temperature Protections.....                  | 18 |
| 4.3.6 Overtemperature in Charge Protection.....     | 18 |
| 4.3.7 Overtemperature in Discharge Protection.....  | 19 |
| 4.3.8 Undertemperature in Charge Protection.....    | 19 |
| 4.3.9 Undertemperature in Discharge Protection..... | 19 |
| 4.3.10 Precharge Timeout Protection.....            | 20 |
| 4.3.11 Fast Charge Timeout Protection.....          | 20 |
| 4.3.12 Protections Configuration.....               | 20 |
| 4.3.13 FET Options.....                             | 22 |
| 4.3.14 Protections Data Flash Values.....           | 23 |
| <b>5 Permanent Fail</b> .....                       | 26 |
| 5.1 Introduction.....                               | 26 |
| 5.2 Safety Cell Undervoltage Permanent Fail.....    | 27 |
| 5.3 Safety Cell Overvoltage Permanent Fail.....     | 27 |
| 5.4 Charge FET Permanent Fail.....                  | 27 |

|   |           |
|---|-----------|
| 5.5 Discharge FET Permanent Fail.....   | 27        |
| 5.6 Permanent Fail Configuration.....   | 27        |
| 5.7 Permanent Fail Data Flash Values.....   | 28        |
| 5.7.1 SUV - Safety Undervoltage.....  | 28        |
| 5.7.2 SOV - Safety Overvoltage.....   | 28        |
| 5.7.3 CFETF - Charge FET Failure.....   | 29        |
| 5.7.4 DFETF - Discharge FET Failure.....  | 29        |
| <b>6 Battery Sensing Output.....</b>  | <b>30</b> |
| 6.1 Introduction.....   | 30        |
| 6.2 Automatic Mode.....   | 31        |
| 6.2.1 RLO Mode.....   | 31        |
| 6.2.2 RLO Charge Mode.....  | 31        |
| 6.2.3 BUFFER Mode.....  | 32        |
| 6.3 Hardware-Based Protections.....   | 33        |
| <b>7 Power Modes.....</b>   | <b>34</b> |
| 7.1 Introduction.....   | 34        |
| 7.2 NORMAL Mode.....  | 34        |
| 7.3 SLEEP Mode.....   | 34        |
| 7.3.1 Device Sleep.....   | 34        |
| 7.4 SHIP Mode.....  | 35        |
| 7.5 SHELF Mode.....   | 36        |
| 7.6 SHUTDOWN Mode.....  | 37        |
| 7.6.1 Voltage-Based Shutdown.....   | 37        |
| 7.6.2 AltManufacturerAccess() MAC Shutdown.....   | 39        |
| 7.6.3 Time-Based Shutdown.....  | 39        |
| 7.7 Power Modes Configuration.....  | 39        |
| <b>8 Gauging.....</b>   | <b>40</b> |
| 8.1 Impedance Track (IT) Model.....   | 40        |
| 8.2 Thermal Model.....  | 40        |
| 8.3 Gauging Capacities.....   | 40        |
| 8.4 Learning Cycles.....  | 41        |
| 8.5 Impedance Track Configuration.....  | 41        |
| 8.6 Gas Gauge Modes.....  | 43        |
| 8.7 QMax and Ra.....  | 46        |
| 8.7.1 QMax Initial Values.....  | 46        |
| 8.7.2 QMax Update Conditions.....   | 46        |
| 8.7.3 Ra Table Initial Values.....  | 49        |
| 8.7.4 Ra Table Update Conditions.....   | 50        |
| 8.7.5 Fast Resistance Scaling.....  | 51        |
| 8.8 FullChargeCapacity (FCC), RemainingCapacity (RemCap), and RelativeStateOfCharge (RSOC)..... | 52        |
| 8.8.1 Smoothing Engine.....   | 52        |
| 8.9 Impedance Track (IT) Configuration Options.....   | 53        |
| 8.10 State-Of-Health (SOH).....   | 56        |
| 8.11 Battery Trip Point (BTP).....  | 57        |
| <b>9 Lifetime Data Collection.....</b>  | <b>59</b> |
| 9.1 Description.....  | 59        |
| 9.2 Reset.....  | 60        |
| <b>10 Host Interrupts.....</b>  | <b>61</b> |
| 10.1 Description.....   | 61        |
| 10.2 Voltage and Temperature Interrupts.....  | 61        |
| 10.3 RSOC Interrupts.....   | 62        |
| 10.4 Host Interrupts Configuration.....   | 62        |
| <b>11 Device Security.....</b>  | <b>63</b> |
| 11.1 Description.....   | 63        |
| 11.2 SHA-256 Authentication.....  | 63        |
| 11.2.1 Secure Key.....  | 63        |
| 11.2.2 Authentication Flow.....   | 63        |
| 11.3 Security Modes.....  | 64        |
| 11.3.1 SEALING and UNSEALING Data Flash.....  | 64        |
| 11.3.2 SEALED to UNSEALED.....  | 64        |
| 11.3.3 UNSEALED to FULL ACCESS.....   | 64        |

|  |           |
|--|-----------|
| <b>12 Advanced Charge Algorithm</b> .....                          | <b>65</b> |
| 12.1 Introduction.....   | 65        |
| 12.2 Charge Temperature Ranges.....                                | 65        |
| 12.3 Voltage Range.....  | 66        |
| 12.3.1 RelativeStateofCharge() Range.....                          | 67        |
| 12.4 Charging Current.....   | 68        |
| 12.5 Charging Voltage.....   | 70        |
| 12.5.1 Charge Voltage Compensation for System Impedance.....       | 71        |
| 12.6 Charging Degradation Modes.....                               | 71        |
| 12.7 Cell Swelling Control (via Charging Voltage Degradation)..... | 72        |
| 12.8 Valid Charge Termination.....                                 | 73        |
| 12.9 Charge and Discharge Alarms.....                              | 74        |
| 12.10 Terminate Charge and Discharge Alarms.....                   | 77        |
| 12.11 Precharge.....   | 77        |
| 12.12 Charge Disable and Discharge Disable.....                    | 77        |
| 12.13 Charge Inhibit.....  | 78        |
| 12.14 Charge Suspend.....  | 78        |
| 12.15 Zero Volt Charging (ZVCHG).....                              | 78        |
| <b>13 Communications</b> .....                                     | <b>80</b> |
| 13.1 HDQ Single-Pin Serial Interface.....                          | 80        |
| 13.2 I <sup>2</sup> C Interface.....                               | 80        |
| 13.2.1 I <sup>2</sup> C Clock Frequency.....                       | 81        |
| 13.2.2 I <sup>2</sup> C Time Out.....                              | 81        |
| 13.2.3 I <sup>2</sup> C Command Waiting Time.....                  | 81        |
| 13.2.4 I <sup>2</sup> C Clock Stretching.....                      | 82        |
| <b>14 Manufacture Production</b> .....                             | <b>83</b> |
| 14.1 Manufacture Testing.....                                      | 83        |
| 14.1.1 Manufacturing Status Configuration.....                     | 83        |
| 14.2 I <sup>2</sup> C Configuration.....                           | 83        |
| 14.3 Manufacturer Information Blocks.....                          | 84        |
| 14.4 Verification of Data Flash.....                               | 84        |
| 14.5 Calibration.....  | 84        |
| <b>15 Calibration</b> .....  | <b>86</b> |
| 15.1 Voltage Calibration.....                                      | 86        |
| 15.1.1 Cell (BAT) Voltage Calibration.....                         | 86        |
| 15.1.2 Pack (PACK) Voltage Calibration.....                        | 87        |
| 15.1.3 Voltage Calibration Data Flash.....                         | 87        |
| 15.2 Current Calibration.....                                      | 88        |
| 15.2.1 CC Gain/Capacity Gain Calibration.....                      | 88        |
| 15.2.2 Deadbands.....  | 88        |
| 15.2.3 Current Calibration Data Flash.....                         | 89        |
| 15.3 Temperature Calibration.....                                  | 89        |
| 15.3.1 Internal Temperature Sensor Calibration.....                | 89        |
| 15.3.2 TS Calibration.....   | 90        |
| 15.3.3 Temperature Calibration Data Flash.....                     | 90        |
| 15.3.4 Cell Temp Model.....  | 90        |
| 15.3.5 Internal Temp Model.....                                    | 91        |
| 15.3.6 2nd Temperature Model.....                                  | 91        |
| <b>16 Data Commands</b> .....                                      | <b>92</b> |
| 16.1 Standard Data Commands.....                                   | 92        |
| 16.1.1 0x00/01 ManufacturerAccess()/ControlStatus().....           | 93        |
| 16.1.2 0x02/03 AtRate().....                                       | 94        |
| 16.1.3 0x04/05 AtRateTimeToEmpty().....                            | 94        |
| 16.1.4 0x06/07 Temperature().....                                  | 94        |
| 16.1.5 0x08/09 Voltage().....                                      | 94        |
| 16.1.6 0x0A/0B BatteryStatus().....                                | 95        |
| 16.1.7 0x0C/0D Current().....                                      | 95        |
| 16.1.8 0x10/11 RemainingCapacity().....                            | 95        |
| 16.1.9 0x12/13 FullChargeCapacity().....                           | 96        |
| 16.1.10 0x14/15 AverageCurrent().....                              | 96        |
| 16.1.11 0x16/17 AverageTimeToEmpty().....                          | 96        |

|   |     |
|---|-----|
| 16.1.12 0x18/19 AverageTimeToFull()   | 96  |
| 16.1.13 0x1E/1F MaxLoadCurrent()  | 96  |
| 16.1.14 0x20/21 MaxLoadTimeToEmpty()  | 96  |
| 16.1.15 0x22/23 AveragePower()  | 96  |
| 16.1.16 0x28/29 InternalTemperature()                                       | 97  |
| 16.1.17 0x2A/2B CycleCount()  | 97  |
| 16.1.18 0x2C/2D RelativeStateOfCharge()—RSOC                                | 97  |
| 16.1.19 0x2E/2F StateOfHealth()   | 97  |
| 16.1.20 0x30/31 ChargingVoltage()   | 97  |
| 16.1.21 0x32/33 ChargingCurrent()   | 97  |
| 16.1.22 0x34/35 TerminateVoltage()  | 98  |
| 16.1.23 0x36/0x37/0x38/0x39 Timestamp()                                     | 98  |
| 16.1.24 QMax Cycles() 0x3A/3B   | 98  |
| 16.1.25 0x3C/3D DesignCapacity()  | 98  |
| 16.1.26 0x3E/3F AltManufacturerAccess()                                     | 98  |
| 16.1.27 0x40/0x5F MACData()   | 98  |
| 16.1.28 0x60 MACDataChecksum()  | 99  |
| 16.1.29 0x61 MACDataLength()  | 99  |
| 16.1.30 0x62/63 VoltHiSetThreshold  | 99  |
| 16.1.31 0x64/65 VoltHiClearThreshold  | 99  |
| 16.1.32 0x66/67 VoltLoSetThreshold  | 99  |
| 16.1.33 0x68/69 VoltLoClearThreshold  | 99  |
| 16.1.34 0x6A TempHiSetThreshold   | 100 |
| 16.1.35 0x6B TempHiClearThreshold   | 100 |
| 16.1.36 0x6C TempLoSetThreshold   | 100 |
| 16.1.37 0x6D TempLoClearThreshold   | 100 |
| 16.1.38 0x6E InterruptStatus()  | 100 |
| 16.1.39 0x6F SOCSetDeltaThreshold   | 101 |
| 16.2 0x00, 0x01 ManufacturerAccess() and 0x3E, 0x3F AltManufacturerAccess() | 101 |
| 16.2.1 AltManufacturerAccess() 0x0001 Device Type                           | 103 |
| 16.2.2 AltManufacturerAccess() 0x0002 Firmware Version                      | 103 |
| 16.2.3 AltManufacturerAccess() 0x0003 Hardware Version                      | 103 |
| 16.2.4 AltManufacturerAccess() 0x0004 Instruction Flash Signature           | 103 |
| 16.2.5 AltManufacturerAccess() 0x0005 Static DF Signature                   | 104 |
| 16.2.6 AltManufacturerAccess() 0x0006 Chemical ID                           | 104 |
| 16.2.7 AltManufacturerAccess() 0x0007 Pre_MACWrite                          | 104 |
| 16.2.8 AltManufacturerAccess() 0x0008 Static Chem DF Signature              | 104 |
| 16.2.9 AltManufacturerAccess() 0x0009 All DF Signature                      | 104 |
| 16.2.10 AltManufacturerAccess() 0x000B SHELF Enable                         | 105 |
| 16.2.11 AltManufacturerAccess() 0x000C SHELF Disable                        | 105 |
| 16.2.12 AltManufacturerAccess() 0x0010 SHUTDOWN Mode                        | 105 |
| 16.2.13 AltManufacturerAccess() 0x0012 Device Reset                         | 105 |
| 16.2.14 AltManufacturerAccess() 0x0015 SHIP Mode Enable                     | 105 |
| 16.2.15 AltManufacturerAccess() 0x0016 SHIP Mode Disable                    | 106 |
| 16.2.16 AltManufacturerAccess() 0x0017 QMax Day                             | 106 |
| 16.2.17 AltManufacturerAccess() 0x001F CHG FET Toggle                       | 106 |
| 16.2.18 AltManufacturerAccess() 0x0020 DSG FET Toggle                       | 106 |
| 16.2.19 AltManufacturerAccess() 0x0021 Gauging                              | 106 |
| 16.2.20 AltManufacturerAccess() 0x0022 FET Control                          | 106 |
| 16.2.21 AltManufacturerAccess() 0x0023 Lifetime Data Collection             | 107 |
| 16.2.22 AltManufacturerAccess() 0x0024 Permanent Failure                    | 107 |
| 16.2.23 AltManufacturerAccess() 0x0028 Lifetime Data Reset                  | 107 |
| 16.2.24 AltManufacturerAccess() 0x0029 Permanent Fail Data Reset            | 107 |
| 16.2.25 AltManufacturerAccess() 0x002D CALIBRATION Mode                     | 107 |
| 16.2.26 AltManufacturerAccess() 0x002E Lifetime Data Flush                  | 107 |
| 16.2.27 AltManufacturerAccess() 0x002F Lifetime Data SPEED UP Mode          | 107 |
| 16.2.28 AltManufacturerAccess() 0x0030 Seal Device                          | 107 |
| 16.2.29 AltManufacturerAccess() 0x0035 Security Keys                        | 108 |
| 16.2.30 AltManufacturerAccess() 0x0041 Device Reset                         | 108 |
| 16.2.31 AltManufacturerAccess() 0x0047 Tambient Sync                        | 108 |
| 16.2.32 AltManufacturerAccess() 0x004A Device Name                          | 109 |

|   |            |
|---|------------|
| 16.2.33 AltManufacturerAccess() 0x004B Device Chem.....                                 | 109        |
| 16.2.34 AltManufacturerAccess() 0x004C Manufacturer Name.....                           | 109        |
| 16.2.35 AltManufacturerAccess() 0x004D Manufacture Date.....                            | 109        |
| 16.2.36 AltManufacturerAccess() 0x004E Serial Number.....                               | 109        |
| 16.2.37 ManufacturerAccess() 0x0050 SafetyAlert.....                                    | 110        |
| 16.2.38 ManufacturerAccess() 0x0051 SafetyStatus.....                                   | 111        |
| 16.2.39 AltManufacturerAccess() 0x0052 PFAAlert.....                                    | 112        |
| 16.2.40 AltManufacturerAccess() 0x0053 PFStatus.....                                    | 113        |
| 16.2.41 AltManufacturerAccess() 0x0054 OperationStatus.....                             | 114        |
| 16.2.42 AltManufacturerAccess() 0x0055 ChargingStatus.....                              | 116        |
| 16.2.43 AltManufacturerAccess() 0x0056 GaugingStatus.....                               | 118        |
| 16.2.44 AltManufacturerAccess() 0x0057 ManufacturingStatus.....                         | 119        |
| 16.2.45 AltManufacturerAccess() 0x0060 Lifetime Data Block 1.....                       | 120        |
| 16.2.46 AltManufacturerAccess() 0x0061 Lifetime Data Block 2.....                       | 120        |
| 16.2.47 AltManufacturerAccess() 0x0062 Lifetime Data Block 3.....                       | 121        |
| 16.2.48 ManufacturerAccess() 0x0063 Lifetime Data Block 4.....                          | 121        |
| 16.2.49 ManufacturerAccess() 0x0064 Lifetime Data Block 5.....                          | 121        |
| 16.2.50 AltManufacturerAccess() 0x0065–0x006B Lifetime SOC Range Table Data Blocks..... | 122        |
| 16.2.51 AltManufacturerAccess() 0x006C Lifetime Data Block 13.....                      | 122        |
| 16.2.52 AltManufacturerAccess() 0x0070 ManufacturerInfo.....                            | 122        |
| 16.2.53 AltManufacturerAccess() 0x0071 DAStatus1.....                                   | 123        |
| 16.2.54 AltManufacturerAccess() 0x0072 DAStatus2.....                                   | 124        |
| 16.2.55 AltManufacturerAccess() 0x0073 ITStatus1.....                                   | 124        |
| 16.2.56 AltManufacturerAccess() 0x0074 ITStatus2.....                                   | 125        |
| 16.2.57 AltManufacturerAccess() 0x0075 ITStatus3.....                                   | 125        |
| 16.2.58 AltManufacturerAccess() 0x0077 FCC_SOH.....                                     | 126        |
| 16.2.59 AltManufacturerAccess() 0x0078 Filtered Capacity.....                           | 126        |
| 16.2.60 AltManufacturerAccess() 0x007A ManufacturerInfoB.....                           | 126        |
| 16.2.61 AltManufacturerAccess() 0x007B ManufacturerInfoC.....                           | 127        |
| 16.2.62 AltManufacturerAccess() 0x0097 FET Control Override.....                        | 127        |
| 16.2.63 AltManufacturerAccess() 0x00A3 System Reset Enable.....                         | 127        |
| 16.2.64 AltManufacturerAccess() 0x00A4 System Reset.....                                | 127        |
| 16.2.65 AltManufacturerAccess() 0x00B0 ChargingVoltageOverride.....                     | 128        |
| 16.2.66 AltManufacturerAccess() 0x00B1 BattSenseOutput.....                             | 128        |
| 16.2.67 AltManufacturerAccess() 0x00E0 Ra Table Cell0.....                              | 129        |
| 16.2.68 AltManufacturerAccess() 0x0F00 ROM Mode.....                                    | 129        |
| 16.2.69 Data Flash Access() 0x4000–0x5FFF.....  | 130        |
| 16.2.70 AltManufacturerAccess() 0x7C40 Switch to HDQ.....                               | 130        |
| 16.2.71 AltManufacturerAccess() 0xF080 Exit Calibration Output Mode.....                | 130        |
| 16.2.72 AltManufacturerAccess() 0xF081 Output CC and ADC for Calibration.....           | 131        |
| 16.2.73 AltManufacturerAccess() 0xF083 OutputTemperatureCal.....                        | 131        |
| 16.2.74 AltManufacturerAccess() 0xF0A0 ProtectorCalibration.....                        | 132        |
| 16.2.75 AltManufacturerAccess() 0xF0A1 ProtectorImage1.....                             | 132        |
| 16.2.76 AltManufacturerAccess() 0xF0A2 ProtectorImage2.....                             | 132        |
| 16.2.77 AltManufacturerAccess() 0xF0A3 ProtectorImageSave.....                          | 133        |
| 16.2.78 AltManufacturerAccess() 0xF0A4 ProtectorImageLock.....                          | 133        |
| 16.2.79 AltManufacturerAccess() 0xF0A5 ProtectorFactoryConfig.....                      | 133        |
| <b>17 Data Flash Access and Format.....</b>   | <b>134</b> |
| 17.1 Data Flash Access.....   | 134        |
| 17.1.1 Minimum Voltage.....   | 134        |
| 17.2 Data Formats.....  | 134        |
| 17.2.1 Unsigned Integer.....  | 134        |
| 17.2.2 Integer.....   | 134        |
| 17.2.3 Floating Point.....  | 135        |
| 17.2.4 Hex.....   | 135        |
| 17.2.5 String.....  | 135        |
| <b>18 Data Flash Summary.....</b>   | <b>136</b> |
| 18.1 Data Flash Summary.....  | 136        |
| <b>19 Revision History.....</b>   | <b>151</b> |

This page intentionally left blank.



## About This Manual

This manual discusses the modules and peripherals of the BQ27Z746-R1 and BQ27Z758 devices, and how each is used to build a complete battery pack gas gauge and protection solution. For electrical specifications, refer to either the *BQ27Z746 Single-Cell Battery Fuel Gauge with Integrated Protector* ([SLUSDW2](#)) or the *BQ27Z758 Single-Cell Battery Fuel Gauge with Integrated Protector* ([SLUSFQ0](#)).

## Notational Conventions

The following notation is used if SBS commands and data flash values are mentioned within a text block:

- SBS commands: *italics* with parentheses and no breaking spaces; for example, *RemainingCapacity()*
- Data flash: *italics*, **bold**, and breaking spaces; for example, **Design Capacity**
- Register bits and flags: *italics* and brackets; for example, *[TDA]*
- Data flash bits: *italics* and **bold**; for example, **[LED1]**
- Modes and states: ALL CAPITALS; for example, UNSEALED

The reference format for SBS commands is: SBS:Command Name(Command No.): Manufacturer Access(MA No.)[Flag]; for example:

SBS:Voltage(0x09), or SBS:ManufacturerAccess(0x00): Seal Device(0x0020)

## Battery Notational Conventions

The following notation is used if SBS commands and data flash values are mentioned within a text block:

- SBS commands: *italics* with parentheses and no breaking spaces; for example, *RemainingCapacity()*
- Data flash: *italics*, **bold**, and breaking spaces; for example, **Design Capacity**
- Register bits and flags: *italics* and brackets; for example, *[TDA]*
- Data flash bits: *italics* and **bold**; for example, **[LED1]**
- Modes and states: ALL CAPITALS; for example, UNSEALED

The reference format for SBS commands is: SBS:Command Name(Command No.): Manufacturer Access(MA No.)[Flag]; for example:

SBS:Voltage(0x09), or SBS:ManufacturerAccess(0x00): Seal Device(0x0020)

## Trademarks

All trademarks are the property of their respective owners.

## Glossary

[TI Glossary](#) This glossary lists and explains terms, acronyms, and definitions.



The BQ27Z746-R1 and BQ27Z758 devices provide a feature-rich gas gauging solution for single-cell battery pack applications. The devices have extended capabilities, including:

- Fully integrated single-cell Li-ion or Li-polymer cell battery gauge solution and protection
- Next-generation patented Impedance Track™ technology accurately measures available charge in Li-ion and Li-polymer batteries
- High side N-CH protection FET drive
- Power modes:
  - NORMAL mode
  - SLEEP mode
  - SHIP mode
  - SHELF mode
  - SHUTDOWN mode
- Full array of programmable protection features
  - Voltage
  - Current
  - Temperature
  - CHG/DSG FETs
- Information available to external smart charger
  - JEITA
  - Charging current
  - Charging voltage
- Diagnostic lifetime data monitor
- Supports two-wire I<sup>2</sup>C interface
- Supports one-wire HDQ interface
- SHA-256 authentication
- Ultra-compact package: 15-ball DSBGA



## 2.1 Configuration of the GPO Pin

The GPO pin can be optionally configured to read a second thermistor (using **Temperature Enable**) or it can be used as a digital output as a host interrupt signal. The pin can be used for either purpose, but not both.

| Class    | Subclass      | Name           | Type | Min  | Max  | Default | Unit       |
|----------|---------------|----------------|------|------|------|---------|------------|
| Settings | Configuration | GPO Pin Config | H1   | 0x00 | 0x01 | 0x00    | Hex        |
| 7        | 6             | 5              | 4    | 3    | 2    | 1       | 0          |
| RSVD     | RSVD          | RSVD           | RSVD | RSVD | RSVD | RSVD    | HOSTINT_EN |

**RSVD (Bits 7–1):** Reserved. Do not use.

**HOSTINT\_EN (Bit 0):** Use the pin for output of a host interrupt signal

1 = Enabled

0 = Disabled (default)

### Note

By default, neither option is selected.

If one of the options is selected, see the appropriate chapter for either temperature measurement or host interrupts.



### 3.1 Introduction

The BQ27Z746-R1 and BQ27Z758 gauges contain an integrating analog-to-digital converter (ADC) for current measurement and a second order delta-sigma ADC for cell voltage and temperature measurements.

### 3.2 Current and Coulomb Counting

The integrating delta-sigma ADC in the gauge measures the charge/discharge flow of the battery by measuring the voltage drop across a small-value sense resistor between the SRP and SRN pins. The 16-bit integrating ADC measures bipolar signals from  $-0.10\text{ V}$  to  $0.10\text{ V}$  with  $3.74\text{-}\mu\text{V}$  resolution. The gauge reports charge activity when  $VSR = V_{(SRP)} - V_{(SRN)}$  is positive, and discharge activity when  $VSR = V_{(SRP)} - V_{(SRN)}$  is negative. This data is scaled and translated into mA using **CC Gain** and reported through *Current()*. The gauge uses this information for gauging and lifetime data logging functions. In NORMAL and SLEEP modes, the gauge continuously monitors the measured current and integrates the digital signal over time using an internal coulomb counter, which is also used for gauging.

In addition, the integrating ADC is sampled during voltage measurements and converted to mA in the same manner. This data is used for gauging (but not coulomb counting) and reported through Cell 1 Current in *DAStatus1()*.

### 3.3 Voltage

#### 3.3.1 Cell Voltage

The second order delta-sigma ADC in the gauge measures the cell voltage at 1-s intervals in NORMAL mode, and **Voltage Time**-second intervals in SLEEP mode. This data is scaled and translated into mV using **Cell Gain** and reported through *Voltage()*. The gauge uses this information for gauging and lifetime data logging functions.

#### 3.3.2 Pack Voltage

The second order delta-sigma ADC in the gauge measures the pack voltage (at the PACK pin) at 1-s intervals in NORMAL mode, and **Voltage Time**-second intervals in SLEEP mode. This data is scaled and translated into mV using **Pack Gain** and reported through PACK pin voltage in *DAStatus1()*. The gauge uses this information for entry to SHUTDOWN mode, zero-volt charging, and BUFFER mode for the battery sensing output.

### 3.4 Temperature

#### 3.4.1 Internal Temperature

The second order delta-sigma ADC in the gauge measures internal temperature at 1-s intervals in NORMAL mode and **Voltage Time**-second intervals in SLEEP mode. This data is translated into 0.1 K using the parameters in **Internal Temp Model** and reported through *InternalTemperature()*. The internal temperature can be used for gauging and lifetime data logging functions, and reported through *Temperature()* if **Temperature Enable[TSInt]** = 1.

#### 3.4.2 Cell Temperature

The second order delta-sigma ADC in the gauge measures cell temperature via an external thermistor at 1-s intervals in NORMAL mode and **Voltage Time**-second intervals in SLEEP mode. This data is translated into 0.1 K using the parameters in **Cell Temp Model** and reported through *Temperature()* if **Temperature Enable[TS1]** =

1. The cell temperature can be used for gauging and lifetime data logging functions if **Temperature Enable[TS1]** = 1.

The cell temperature measurement requires an external 10-k $\Omega$  negative temperature coefficient (NTC) thermistor, such as the Semitec 103AT–2, connected between VSS and the TS pin.

### 3.4.3 Optional Second Temperature Sensor

The GPO pin can be configured to provide an additional temperature sensor. The default for the sensor is Semitec 103AT NTC thermistor. The thermistor is connected between Vss and the GPO when this configuration is used. This additional sensor can be configured as either a FET temperature sensor or an additional cell temperature sensor.

### 3.4.4 Temperature Configuration

The following data flash parameter enables/disables the available temperature sensor options.

| Class    | Subclass      | Name               | Type | Min  | Max  | Default | Description  |
|----------|---------------|--------------------|------|------|------|---------|--|
| Settings | Configuration | Temperature Enable | H1   | 0x00 | 0x0F | 0x02    | <p>Determines whether the internal temperature (TSInt) or the external temperature (TS1 on TS pin) is reported with <i>Temperature()</i>.</p> <p>Bit 0: TSInt—Enables internal TS</p> <p>Bit 1: TS1—Enables external TS pin</p> <p>0, 0: Neither enabled, <i>Temperature()</i> reports –273.2K.</p> <p>0, 1: Enables internal TS, <i>Temperature()</i> reports the internal temperature.</p> <p>1, 0: Enables TS1, <i>Temperature()</i> reports the value determined by the thermistor on the TS pin.</p> <p>1, 1: TSInt and TS1 are enabled, <i>Temperature()</i> reports the higher of the two values.</p> <p>Bit 2: TS2—Selected for a second thermistor on the GPO pin for temperature measurement reported as TS2 Temperature. Enable only if <b>GPO Pin Config[HOSTINT_EN]</b> = 0. Additionally, when Bit 3:TS2FET is set, the gauge uses the second thermistor as a FET temperature measurement reported as FET Temperature. Otherwise, the second thermistor is used for <i>Temperature()</i>, where the highest value of all enabled sources is reported and FET Temperature reports –273.2 K.</p> |



## 4.1 Introduction

The BQ27z746-R1 and BQ27Z758 provide two levels of protection. The first level of protection is firmware based and is backed up by a second hardware based level of protection. The hardware protections have precedence over the firmware protections.

## 4.2 Hardware-Based Protection

The device has five hardware-based protections—HCUV, HCOV, HOCC, HOCD, and HSCD—with adjustable threshold and delay time. The threshold settings are in mV; therefore, for current-based protections, the actual current that triggers the protection is based on the  $R_{SENSE}$  used in the schematic design.

In general, when a fault is detected after the **Delay** time, the CHG and DSG FETs are disabled (Trip stage). Because both FETs are off, the current drops to 0 mA. After **Recovery** time, the CHG and DSG FETs are turned on again (Recovery stage).

### 4.2.1 Cell Undervoltage Protection

The device has a hardware-based cell undervoltage protection with adjustable threshold and delay time.

| Status   | Condition   | Action  |
|----------|---|---|
| Normal   | $Voltage() > \text{Protector UVP Threshold}$  | $SafetyStatus()[HCUV] = 0$  |
| Trip     | $Voltage() \leq \text{Protector UVP Threshold for Protector UVP Delay Time}$  | $SafetyStatus()[HCUV] = 1$<br>$OperationStatus()[XDSG] = 1$<br>Turn off DSG FET |
| Recovery | $SafetyStatus()[HCUV] = 1$ AND<br>$(Voltage() \geq \text{HCUV:Recovery for HCUV:Recovery Delay in RELAX or DISCHARGE mode})$ OR<br>$(Voltage() \geq \text{HCUV:Recovery Chg for HCUV:Recovery Delay in CHARGE mode})$ | $SafetyStatus()[HCUV] = 0$<br>$OperationStatus()[XDSG] = 0$                     |

### 4.2.2 Cell Overvoltage Protection

The device has a hardware-based cell overvoltage protection with adjustable threshold and delay time.

| Status   | Condition  | Action  |
|----------|--|---|
| Normal   | $Voltage() < \text{Protector OVP Threshold}$   | $SafetyStatus()[HCOV] = 0$  |
| Trip     | $Voltage() \geq \text{Protector OVP Threshold for Protector OVP Delay Time}$                 | $SafetyStatus()[HCOV] = 1$<br>$OperationStatus()[XCHG] = 1$<br>Turn off CHG FET |
| Recovery | $SafetyStatus()[HCOV] = 1$ AND $Voltage() \leq \text{HCOV:Recovery for HCOV:Recovery Delay}$ | $SafetyStatus()[HCOV] = 0$<br>$OperationStatus()[XCHG] = 0$                     |

### 4.2.3 Overcurrent in Discharge Protection

The device has a hardware-based overcurrent in discharge protection with adjustable current and delay time.

| Status | Condition  | Action  |
|--------|--|---|
| Normal | $Current() > \text{Protector OCD Threshold}$                                 | $SafetyStatus()[HOCD] = 0$  |
| Trip   | $Current() \leq \text{Protector OCD Threshold for Protector OCD Delay Time}$ | $SafetyStatus()[HOCD] = 1$<br>$OperationStatus()[XDSG] = 1$<br>Turn off DSG FET |

| Status   | Condition   | Action  |
|----------|---|---|
| Recovery | $SafetyStatus()[HOCD] = 1$ AND<br>$Current() \geq HOCD:Recovery\ Threshold$ for<br>$HOCD:Recovery\ Delay\ time$ | $SafetyStatus()[HOCD] = 0$<br>$OperationStatus()[XDSG] = 0$ |

#### 4.2.4 Overcurrent in Charge Protection

The device has a hardware-based overcurrent in charge protection with adjustable current and delay time.

| Status   | Condition   | Action  |
|----------|---|---|
| Normal   | $Current() < Protector\ OCC\ Threshold$   | $SafetyStatus()[HOCC] = 0$  |
| Trip     | $Current() \geq Protector\ OCC\ Threshold$ for Protector<br>OCC Delay Time                                      | $SafetyStatus()[HOCC] = 1$<br>$OperationStatus()[XCHG] = 1$<br>Turn off CHG FET |
| Recovery | $SafetyStatus()[HOCC] = 1$ AND<br>$Current() \leq HOCC:Recovery\ Threshold$ for<br>$HOCC:Recovery\ Delay\ time$ | $SafetyStatus()[HOCC] = 0$<br>$OperationStatus()[XCHG] = 0$                     |

#### 4.2.5 Short Circuit in Discharge Protection

The device has a hardware-based short circuit in discharge protection with adjustable current and delay time.

| Status   | Condition  | Action  |
|----------|--|---|
| Normal   | $Current() > Protector\ SCD\ Threshold$  | $SafetyStatus()[HSCD] = 0$  |
| Trip     | $Current() \leq Protector\ SCD\ Threshold$ for Protector<br>SCD Delay Time                               | $SafetyStatus()[HSCD] = 1$<br>$OperationStatus()[XDSG] = 1$<br>Turn off DSG FET |
| Recovery | $SafetyStatus()[HSCD] = 1$ AND<br>$Current() \geq HSCD:Recovery\ Threshold$ for<br>$HSCD:Recovery\ time$ | $SafetyStatus()[HSCD] = 0$<br>$OperationStatus()[XDSG] = 0$                     |

#### 4.2.6 Threshold Targets

An area of data flash at memory address 0x4020 is reserved for storing the threshold targets for the hardware-based protections. Updates to these data flash parameters must be done manually and do not impact operation of the hardware-based protections. Instead, these parameters provide a record of any changes made from the factory settings and provide an easy to read format of the threshold targets. **Field Config** can be used as an identifier for a specific combination of threshold targets to differentiate certain pack configurations.

| Class       | Subclass             | Name   | Type | Min   | Max  | Default | Unit   | Description  |
|-------------|----------------------|--------|------|-------|------|---------|--------|--|
| Protections | HW Threshold Targets | OVP    | U2   | 2000  | 5000 | 4525    | mV     | Threshold target for cell voltage for hardware-based OVP                         |
| Protections | HW Threshold Targets | UVP    | U2   | 2000  | 4000 | 2300    | mV     | Threshold target for cell voltage for hardware-based UVP                         |
| Protections | HW Threshold Targets | OCC    | I2   | 0     | 1000 | 140     | 0.1 mV | Threshold target for voltage across the sense resistor for hardware-based OCC    |
| Protections | HW Threshold Targets | OCD    | I2   | -1000 | 0    | -160    | 0.1 mV | Threshold target for voltage across the sense resistor for hardware-based OCD    |
| Protections | HW Threshold Targets | SCD    | I2   | -1000 | 0    | -200    | 0.1 mV | Threshold target for voltage across the sense resistor for hardware-based SCD    |
| Protections | HW Threshold Targets | I-Wake | I2   | -1000 | 0    | -20     | 0.1 mV | Threshold target for voltage across the sense resistor for hardware-based I-Wake |
| Protections | HW Threshold Targets | BDP    | I2   | -1000 | 0    | -200    | mV     | Threshold target for voltage between BAT and BAT_SP for hardware-based BDP       |
| Protections | HW Threshold Targets | BCP    | I2   | 0     | 1000 | 200     | mV     | Threshold target for voltage between BAT and BAT_SP for hardware-based BCP       |

| Class       | Subclass             | Name         | Type | Min    | Max    | Default | Unit | Description  |
|-------------|----------------------|--------------|------|--------|--------|---------|------|--|
| Protections | HW Threshold Targets | BDN          | I2   | -1000  | 0      | -200    | mV   | Threshold target for voltage between VSS and BAT_SN for hardware-based BDN         |
| Protections | HW Threshold Targets | BCN          | I2   | 0      | 1000   | 200     | mV   | Threshold target for voltage between VSS and BAT_SN for hardware-based BCN         |
| Protections | HW Threshold Targets | Field Cal    | U2   | 0x0000 | 0xFFFF | 0x0000  | Hex  | Flags to indicate which target thresholds have been modified from factory settings |
| Protections | HW Threshold Targets | Field Config | U1   | 0x00   | 0xFF   | 0x00    | Hex  | Numeric identifier for a set of target thresholds for hardware-based protections   |

### 4.3 Firmware Based Protections

Firmware cannot override any hardware based protection. The firmware protections are used to signal impending hardware protection. This can allow a host system to respond to conditions before hardware protection opens a FET. Some of the firmware protection can be programmed to open a FET. Every firmware protection has two associated signals. When a threshold violation is detected the associated status bit is set. Each threshold has an associated timer. If the timer expires an associated status bit is set. If the status bit has an active associated FET control action, that action will be taken when the status bit is set. All firmware based protections have an associated recovery threshold.

When the protection is triggered, charging and/or discharging is disabled. This is indicated by the *OperationStatus()[XCHG]* = 1 when charging is disabled (the CHG FET is turned OFF), and/or the *OperationStatus()[XDSG]* = 1 when discharging is disabled (DSG FET is turned OFF). Once the protection is recovered, charging and discharging resume. All firmware-based protections can be enabled or disabled under **Settings:Enabled Protections A**, **Settings:Enabled Protections B**, **Settings:Enabled Protections C**, and **Settings:Enabled Protections D**. All hardware-based protections are either enabled or disabled, which is based on the configuration image stored in secure memory.

To protect the DSG FET body diode, the DSG FET will always be closed when *Current()* ≥ **Chg Current Threshold**, including when *OperationStatus()[XDSG]* = 1. Likewise, to protect the CHG FET body diode, the CHG FET will always be closed when *Current()* ≤ (-)**Dsg Current Threshold**, including when *OperationStatus()[XCHG]* = 1. Setting **FET Options[IWAKE\_FET]** = 1 configures the device to protect the body diode of the CHG FET during low power modes such as SLEEP and SHIP when the hardware-based IWAKE threshold is surpassed. This is because the IWAKE threshold can only be configured to detect discharge current.

When the protections are triggered, *BatteryStatus()[TCA][TDA][FD][OCA][OTA]* is set according to the type of safety protections. [Section 12.10](#) provides a summary of the various alarms flags' set conditions.

#### Note

Delay settings with 1-s granularity can have an average trigger delay equal to the delay setting plus 1.8 s.

#### 4.3.1 Cell Undervoltage Protection

The device can detect cell undervoltage in batteries and protect cells from damage by preventing further discharge.

| Status | Condition   | Action  |
|--------|---|---|
| Normal | <i>Voltage()</i> > <b>CUV:Threshold</b>                               | <i>SafetyAlert()[CUV]</i> = 0<br><i>BatteryStatus()[TDA]</i> = 0  |
| Alert  | <i>Voltage()</i> ≤ <b>CUV:Threshold</b>                               | <i>SafetyAlert()[CUV]</i> = 1<br><i>BatteryStatus()[TDA]</i> = 1  |
| Trip   | <i>Voltage()</i> ≤ <b>CUV:Threshold</b> for <b>CUV:Delay</b> duration | <i>SafetyAlert()[CUV]</i> = 0<br><i>SafetyStatus()[CUV]</i> = 1<br><i>BatteryStatus()[FD]</i> = 1, <i>[TDA]</i> = 0<br><i>OperationStatus()[XDSG]</i> = 1 |

| Status   | Condition   | Action   |
|----------|---|--|
| Recovery | Condition 1:<br>SafetyStatus()[CUV] = 1 AND<br>Voltage() ≥ CUV:Recovery for CUV:Recovery Delay AND<br>Protection Configuration[CUV_RECOV_CHG] = 0   | SafetyStatus()[CUV] = 0<br>BatteryStatus()[FD] = 0, [TDA] = 0<br>OperationStatus()[XDSG] = 0 |
|          | OR Condition 2:<br>SafetyStatus()[CUV] = 1 AND<br>Voltage() ≥ CUV:Recovery for CUV:Recovery Delay AND<br>Protection Configuration[CUV_RECOV_CHG] = 1 AND<br>Charging detected (that is, BatteryStatus()[DSG] = 0) |  |

### 4.3.2 Cell Overvoltage Protection

The device can detect cell overvoltage in batteries and protect cells from damage by preventing further charge.

#### Note

The protection detection threshold is influenced by the temperature settings of the advanced charging algorithm and the measured temperature.

| Status  | Condition  | Action   |
|---|--|--|
| Normal,<br>ChargingStatus()[UT] or [LT] = 1     | Voltage() < COV:Threshold Low Temp   | SafetyAlert()[COV] = 0   |
| Normal,<br>ChargingStatus()[STL] or [STH] = 1   | Voltage() < COV:Threshold Standard Temp  |  |
| Normal,<br>ChargingStatus()[RT] = 1             | Voltage() < COV:Threshold Rec Temp   |  |
| Normal,<br>ChargingStatus()[HT] or [OT] = 1     | Voltage() < COV:Threshold High Temp  |  |
| Alert,<br>ChargingStatus()[UT] or [LT] = 1      | Voltage() ≥ COV:Threshold Low Temp   | SafetyAlert()[COV] = 1<br>BatteryStatus()[TCA] = 1   |
| Alert,<br>ChargingStatus()[STL] or [STH] = 1    | Voltage() ≥ COV:Threshold Standard Temp  |  |
| Alert,<br>ChargingStatus()[RT] = 1              | Voltage() ≥ COV:Threshold Rec Temp   |  |
| Alert,<br>ChargingStatus()[HT] or [OT] = 1      | Voltage() ≥ COV:Threshold High Temp  |  |
| Trip,<br>ChargingStatus()[UT] or [LT] = 1       | Voltage() ≥ COV:Threshold Low Temp for COV:Delay duration                                | SafetyAlert()[COV] = 0<br>SafetyStatus()[COV] = 1<br>BatteryStatus()[TCA] = 0<br>OperationStatus()[XCHG] = 1 |
| Trip,<br>ChargingStatus()[STL] or [STH] = 1     | Voltage() ≥ COV:Threshold Standard Temp for COV:Delay duration                           |  |
| Trip,<br>ChargingStatus()[RT] = 1               | Voltage() ≥ COV:Threshold Rec Temp for COV:Delay duration                                |  |
| Trip,<br>ChargingStatus()[HT] or [OT] = 1       | Voltage() ≥ COV:Threshold High Temp for COV:Delay duration                               |  |
| Recovery,<br>ChargingStatus()[UT] or [LT] = 1   | SafetyStatus()[COV] = 1 AND Voltage() ≤ COV:Recovery Low Temp for COV:Recovery Delay     | SafetyStatus()[COV] = 0<br>BatteryStatus()[TCA] = 0<br>OperationStatus()[XCHG] = 0                           |
| Recovery,<br>ChargingStatus()[STL] or [STH] = 1 | SafetyStatus()[COV] = 1 AND Voltage() ≤ COV:RecoveryStandard Temp for COV:Recovery Delay |  |
| Recovery,<br>ChargingStatus()[RT] = 1           | SafetyStatus()[COV] = 1 AND Voltage() ≤ COV:Recovery Rec Temp for COV:Recovery Delay     |  |
| Recovery,<br>ChargingStatus()[HT] or [OT] = 1   | SafetyStatus()[COV] = 1 AND Voltage() ≤ COV:Recovery High Temp for COV:Recovery Delay    |  |

### 4.3.3 Overcurrent in Charge Protection

To protect cells from damage due to unsafe charge currents, the device can detect overcurrent events and disable the CHG FET.

| Status   | Condition   | Action   |
|----------|---|--|
| Normal   | $Current() < OCC:Threshold$   | $SafetyAlert()[OCC] = 0$   |
| Alert    | $Current() \geq OCC:Threshold$  | $SafetyAlert()[OCC] = 1$<br>$BatteryStatus()[TCA] = 1$   |
| Trip     | $Current() \geq OCC:Threshold$ for $OCC:Delay$ duration   | $SafetyAlert()[OCC] = 0$<br>$SafetyStatus()[OCC] = 1$<br>$BatteryStatus()[TCA] = 0$<br>$OperationStatus()[XCHG] = 1$ |
| Recovery | $[SafetyStatus()[OCC] = 1$ AND<br>$Current() \leq OCC:Recovery Threshold$ for $OCC:Recovery Delay$ time | $SafetyStatus()[OCC] = 0$<br>$BatteryStatus()[TCA] = 0$<br>$OperationStatus()[XCHG] = 0$                             |

### 4.3.4 Overcurrent in Discharge Protection

To protect cells from damage due to unsafe load currents, the device can detect overcurrent events and disable the DSG FET.

| Status   | Condition   | Action   |
|----------|---|--|
| Normal   | $Current() > OCD:Threshold$   | $SafetyAlert()[OCD] = 0$   |
| Alert    | $Current() \leq OCD:Threshold$  | $SafetyAlert()[OCD] = 1$<br>$BatteryStatus()[TDA] = 1$   |
| Trip     | $Current() \leq OCD:Threshold$ for $OCD:Delay$ duration   | $SafetyAlert()[OCD] = 0$<br>$SafetyStatus()[OCD] = 1$<br>$BatteryStatus()[TDA] = 0$<br>$OperationStatus()[XDSG] = 1$ |
| Recovery | $[SafetyStatus()[OCD] = 1$ AND<br>$Current() \geq OCD:Recovery Threshold$ for $OCD:Recovery Delay$ time | $SafetyStatus()[OCD] = 0$<br>$BatteryStatus()[TDA] = 0$<br>$OperationStatus()[XDSG] = 0$                             |

### 4.3.5 Temperature Protections

The device provides overtemperature and undertemperature protections based on cell temperature measurement. The cell temperature-based protections are further divided into CHARGE and DISCHARGE conditions. This section describes in detail each of the protection functions.

The device supports up to two external thermistors and one internal temperature sensor for measuring temperature. Unused temperature sensors must be disabled by clearing the corresponding flag in **Settings:Temperature Enable[TS2][TS1][TSInt]**.

The *Temperature()* command returns the cell temperature measurement, which is the maximum of the enabled temperature sensors.

*AltManufacturerBlockAccess()* command *DAStatus2()* returns all the temperature measurements.

The cell-based overtemperature and undertemperature safety provide protections in CHARGE and DISCHARGE conditions. The battery pack is in CHARGE mode when  $BatteryStatus()[DSG] = 0$ , where  $Current() > Chg Current Threshold$ . The overtemperature and undertemperature in charging protections are active in this mode. The  $BatteryStatus()[DSG]$  is set to 1 in a NON-CHARGE mode condition, which includes RELAX and DISCHARGE modes. The overtemperature and undertemperature in discharge protections are active in these two modes. See [Section 8.6](#) for detailed descriptions of the gas gauge modes.

### 4.3.6 Overtemperature in Charge Protection

The device has an overtemperature protection for cells in CHARGE state (that is, charging state with  $BatteryStatus[DSG] = 0$ ).

| Status   | Condition  | Action   |
|----------|--|--|
| Normal   | $Temperature() < OTC:Threshold$ OR not charging                          | $SafetyAlert()[OTC] = 0$   |
| Alert    | $Temperature() \geq OTC:Threshold$ AND charging                          | $SafetyAlert()[OTC] = 1$<br>$BatteryStatus()[TCA] = 1$   |
| Trip     | $Temperature() \geq OTC:Threshold$ AND charging for $OTC:Delay$ duration | $SafetyAlert()[OTC] = 0$<br>$SafetyStatus()[OTC] = 1$<br>$BatteryStatus()[OTA] = 1$<br>$BatteryStatus()[TCA] = 0$<br>$OperationStatus()[XCHG] = 1$ |
| Recovery | $SafetyStatus()[OTC]$ AND $Temperature() \leq OTC:Recovery$              | $SafetyStatus()[OTC] = 0$<br>$BatteryStatus()[OTA] = 0$<br>$BatteryStatus()[TCA] = 0$<br>$OperationStatus()[XCHG] = 0$                             |

#### 4.3.7 Overtemperature in Discharge Protection

The device has an overtemperature protection for cells in DISCHARGE or RELAX state (that is, non-charging state with  $BatteryStatus[DSG] = 1$ ).

| Status   | Condition   | Action   |
|----------|---|--|
| Normal   | $Temperature() < OTD:Threshold$ OR charging   | $SafetyAlert()[OTD] = 0$   |
| Alert    | $Temperature() \geq OTD:Threshold$ AND not charging (that is, $BatteryStatus[DSG] = 1$ )                          | $SafetyAlert()[OTD] = 1$<br>$BatteryStatus()[TDA] = 1$   |
| Trip     | $Temperature() \geq OTD:Threshold$ AND not charging (that is, $BatteryStatus[DSG] = 1$ ) for $OTD:Delay$ duration | $SafetyAlert()[OTD] = 0$<br>$SafetyStatus()[OTD] = 1$<br>$BatteryStatus()[OTA] = 1$<br>$OperationStatus()[XDSG] = 1$<br>$BatteryStatus()[TDA] = 0$ |
| Recovery | $SafetyStatus()[OTD]$ AND $Temperature() \leq OTD:Recovery$   | $SafetyStatus()[OTD] = 0$<br>$BatteryStatus()[OTA] = 0$<br>$OperationStatus()[XDSG] = 0$<br>$BatteryStatus()[TDA] = 0$                             |

#### 4.3.8 Undertemperature in Charge Protection

The device has an undertemperature protection for cells in CHARGE state (that is, charging state with  $BatteryStatus[DSG] = 0$ ).

| Status   | Condition  | Action   |
|----------|--|--|
| Normal   | $Temperature() > UTC:Threshold$ OR not charging                          | $SafetyAlert()[UTC] = 0$   |
| Alert    | $Temperature() \leq UTC:Threshold$ AND charging                          | $SafetyAlert()[UTC] = 1$   |
| Trip     | $Temperature() \leq UTC:Threshold$ AND charging for $UTC:Delay$ duration | $SafetyAlert()[UTC] = 0$<br>$SafetyStatus()[UTC] = 1$<br>$OperationStatus()[XCHG] = 1$ |
| Recovery | $SafetyStatus()[UTC]$ AND $Temperature() \geq UTC:Recovery$              | $SafetyStatus()[UTC] = 0$<br>$OperationStatus()[XCHG] = 0$                             |

#### 4.3.9 Undertemperature in Discharge Protection

The device has an undertemperature protection for cells in DISCHARGE or RELAX state (that is, non-charging state with  $BatteryStatus[DSG] = 1$ ).

| Status | Condition   | Action   |
|--------|---|--|
| Normal | $Temperature() > UTD:Threshold$ OR charging   | $SafetyAlert()[UTD] = 0$   |
| Alert  | $Temperature() \leq UTD:Threshold$ AND not charging (that is, $BatteryStatus[DSG] = 1$ )                          | $SafetyAlert()[UTD] = 1$   |
| Trip   | $Temperature() \leq UTD:Threshold$ AND not charging (that is, $BatteryStatus[DSG] = 1$ ) for $UTD:Delay$ duration | $SafetyAlert()[UTD] = 0$<br>$SafetyStatus()[UTD] = 1$<br>$OperationStatus()[XDSG] = 1$ |

| Status   | Condition   | Action   |
|----------|---|--|
| Recovery | $SafetyStatus()[UTD]$ AND $Temperature() \geq UTD:Recovery$ | $SafetyStatus()[UTD] = 0$<br>$BatteryStatus()[OTA] = 0$<br>$OperationStatus()[XDSG] = 0$ |

#### 4.3.10 Precharge Timeout Protection

The device can measure the precharge time and stop charging if the precharge time exceeds the adjustable period.

| Status              | Condition   | Action  |
|---------------------|---|---|
| Enable              | $Current() > PTO:Charge\ Threshold$ AND<br>$ChargingStatus()[PV] = 1$   | Start PTO timer<br>$SafetyAlert()[PTOS] = 0$  |
| Suspend or Recovery | $Current() < PTO:Suspend\ Threshold$  | Stop PTO timer<br>$SafetyAlert()[PTOS] = 1$   |
| Trip                | $PTO\ timer > PTO:Delay$  | Stop PTO timer<br>$SafetyStatus()[PTO] = 1$<br>$OperationStatus()[XCHG] = 1$  |
| Reset               | $(SafetyAlert()[PTOS] = 1$ OR<br>$SafetyStatus()[PTO] = 1)$ AND<br>Discharge by an amount of <b>PTO:Reset</b> | Stop and reset PTO timer<br>$SafetyAlert()[PTOS] = 0$<br>$SafetyStatus()[PTO] = 0$<br>$OperationStatus()[XCHG] = 0$ |

#### 4.3.11 Fast Charge Timeout Protection

The device can measure the charge time and stop charging if the charge time exceeds the adjustable period.

| Status              | Condition   | Action  |
|---------------------|---|---|
| Enable              | $Current() > CTO:Charge\ Threshold$ AND<br>$(ChargingStatus()[LV] = 1$ OR<br>$ChargingStatus()[MV] = 1$ OR<br>$ChargingStatus()[HV] = 1)$ | Start CTO timer<br>$SafetyAlert()[CTOS] = 0$  |
| Suspend or Recovery | $Current() < CTO:Suspend\ Threshold$  | Stop CTO timer<br>$SafetyAlert()[CTOS] = 1$   |
| Trip                | $CTO\ time > CTO:Delay$   | Stop CTO timer<br>$SafetyStatus()[CTO] = 1$<br>$OperationStatus()[XCHG] = 1$  |
| Reset               | $(SafetyAlert()[CTOS] = 1$ OR<br>$SafetyStatus()[CTO] = 1)$ AND<br>Discharge by an amount of <b>CTO:Reset</b>                             | Stop and reset CTO timer<br>$SafetyAlert()[CTOS] = 0$<br>$SafetyStatus()[CTO] = 0$<br>$OperationStatus()[XCHG] = 0$ |

#### 4.3.12 Protections Configuration

| Class    | Subclass   | Name                     | Type | Min  | Max  | Default           | Unit |
|----------|------------|--------------------------|------|------|------|-------------------|------|
| Settings | Protection | Protection Configuration | H2   | 0x00 | 0x02 | 0x00              | Hex  |
| 7        | 6          | 5                        | 4    | 3    | 2    | 1                 | 0    |
| RSVD     | RSVD       | RSVD                     | RSVD | RSVD | RSVD | CUV_RECOV_<br>CHG | RSVD |

**RSVD (Bits 7–2):** Reserved. Do not use.

**CUV\_RECOV\_CHG (Bit 1):** Require charge to recover  $SafetyStatus()[CUV]$

1 = Enabled

0 = Disabled (default)

**RSVD (Bit 0):** Reserved. Do not use.

| Class    | Subclass   | Name                  | Type | Min  | Max  | Default | Unit |
|----------|------------|-----------------------|------|------|------|---------|------|
| Settings | Protection | Enabled Protections A | H2   | 0x00 | 0xFF | 0x57    | Hex  |
| 7        | 6          | 5                     | 4    | 3    | 2    | 1       | 0    |
| RSVD     | RSVD_1     | RSVD                  | OCD  | RSVD | OCC  | COV     | CUV  |

**RSVD (Bit 7):** Reserved. Do not use.

**RSVD\_1 (Bit 6):** Reserved and programmed to 1 for proper operation. Do not use.

**RSVD (Bit 5):** Reserved. Do not use.

**OCD (Bit 4):** Overcurrent in Discharge

1 = Enabled (default)

0 = Disabled

**RSVD (Bit 3):** Reserved. Do not use.

**OCC (Bit 2):** Overcurrent in Charge

1 = Enabled (default)

0 = Disabled

**COV (Bit 1):** Cell Overvoltage

1 = Enabled (default)

0 = Disabled

**CUV (Bit 0):** Cell Undervoltage

1 = Enabled (default)

0 = Disabled

| Class    | Subclass   | Name                  | Type | Min  | Max    | Default | Unit   |
|----------|------------|-----------------------|------|------|--------|---------|--------|
| Settings | Protection | Enabled Protections B | H2   | 0x00 | 0xFF   | 0x35    | Hex    |
| 7        | 6          | 5                     | 4    | 3    | 2      | 1       | 0      |
| RSVD     | RSVD       | OTD                   | OTC  | RSVD | RSVD_1 | RSVD    | RSVD_1 |

**RSVD (Bits 7–6):** Reserved. Do not use.

**OTD (Bit 5):** Overtemperature in discharge

1 = Enabled (default)

0 = Disabled

**OTC (Bit 4):** Overtemperature in charge

1 = Enabled (default)

0 = Disabled

**RSVD (Bit 3):** Reserved. Do not use.

**RSVD\_1 (Bit 2):** Reserved and programmed to 1 for proper operation. Do not use.

**RSVD (Bit 1):** Reserved. Do not use.

**RSVD\_1 (Bit 0):** Reserved and programmed to 1 for proper operation. Do not use.

**Protections**

| Class    | Subclass   | Name                  | Type | Min  | Max  | Default | Unit |
|----------|------------|-----------------------|------|------|------|---------|------|
| Settings | Protection | Enabled Protections C | H1   | 0x00 | 0xFF | 0x14    | Hex  |
| 7        | 6          | 5                     | 4    | 3    | 2    | 1       | 0    |
| RSVD     | RSVD       | RSVD                  | CTO  | RSVD | PTO  | RSVD    | RSVD |

**RSVD (Bits 7–5):** Reserved. Do not use.

**CTO (Bit 4):** Charging timeout

1 = Enabled (default)

0 = Disabled

**RSVD (Bit 3):** Reserved. Do not use.

**PTO (Bit 2):** Precharging timeout

1 = Enabled (default)

0 = Disabled

**RSVD (Bits 1–0):** Reserved. Do not use.

| Class    | Subclass   | Name                  | Type | Min  | Max  | Default | Unit |
|----------|------------|-----------------------|------|------|------|---------|------|
| Settings | Protection | Enabled Protections D | H1   | 0x00 | 0xFF | 0xCC    | Hex  |
| 7        | 6          | 5                     | 4    | 3    | 2    | 1       | 0    |
| RSVD_1   | RSVD_1     | RSVD                  | RSVD | UTD  | UTC  | RSVD    | RSVD |

**RSVD\_1 (Bit 7):** Reserved and programmed to 1 for proper operation. Do not use.

**RSVD\_1 (Bit 6):** Reserved and programmed to 1 for proper operation. Do not use.

**RSVD (Bits 5–4):** Reserved. Do not use.

**UTD (Bit 3):** Undertemperature While Not Charging

1 = Enabled (default)

0 = Disabled

**UTC (Bit 2):** Undertemperature While Charging

1 = Enabled (default)

0 = Disabled

**RSVD (Bits 1–0):** Reserved. Do not use.

#### 4.3.13 FET Options

| Class    | Subclass      | Name        | Type  | Min    | Max    | Default | Unit      |
|----------|---------------|-------------|-------|--------|--------|---------|-----------|
| Settings | Configuration | FET Options | H2    | 0x0000 | 0x01FF | 0x0142  | Hex       |
| 15       | 14            | 13          | 12    | 11     | 10     | 9       | 8         |
| RSVD     | RSVD          | RSVD        | RSVD  | RSVD   | RSVD   | RSVD    | IWAKE_FET |
| 7        | 6             | 5           | 4     | 3      | 2      | 1       | 0         |
| RSVD     | SLEEPCHG      | CHGFET      | CHGIN | CHGSU  | OTFET  | UTFET   | RSVD      |

**RSVD (Bits 15–9):** Reserved. Do not use.

**IWAKE\_FET (Bit 8):** CHG FET body diode protection for IWAKE

1 = CHG FET turns on for IWAKE (default)

0 = CHG FET unchanged for IWAKE

**RSVD (Bit 7):** Reserved. Do not use.

**SLEEPCHG (Bit 6):** CHG FET enabled during SLEEP

1 = CHG FET remains on during SLEEP (default)

0 = CHG FET off during SLEEP

**CHGFET (Bit 5):** FET action on setting of *GaugeStatus()[TC]*

1 = Charging disabled, FET off

0 = No FET action for terminate charge condition (default)

**CHGIN (Bit 4):** FET action in CHARGE INHIBIT mode

1 = Charging disabled, FET off

0 = No FET action for charge inhibit condition (default)

**CHGSU (Bit 3):** FET action in CHARGE SUSPEND mode

1 = Charging disabled, FET off

0 = No FET action for charge suspend condition (default)

**OTFET (Bit 2):** FET action in OVERTEMPERATURE mode. Bit is ignored when there is no FET temperature sensor configured.

1 = CHG and DSG FETs will be turned off for overtemperature conditions

0 = No FET action for overtemperature condition (default)

**UTFET (Bit 1):** FET action in UNDERTEMPERATURE mode. Bit is ignored when there is no FET temperature sensor configured.

1 = CHG and DSG FETs will be turned off for undertemperature conditions (default)

0 = No FET action for undertemperature condition

**RSVD (Bit 0):** Reserved. Do not use.

### 4.3.14 Protections Data Flash Values

#### 4.3.14.1 CUV—Cell Undervoltage

| Class       | Subclass | Name           | Type | Min | Max   | Default | Unit | Description                          |
|-------------|----------|----------------|------|-----|-------|---------|------|--------------------------------------|
| Protections | CUV      | Threshold      | I2   | 0   | 32767 | 2500    | mV   | Cell undervoltage trip threshold     |
| Protections | CUV      | Delay          | U1   | 0   | 255   | 1       | s    | Cell undervoltage trip delay         |
| Protections | CUV      | Recovery       | I2   | 0   | 32767 | 2900    | mV   | Cell undervoltage recovery threshold |
| Protections | CUV      | Recovery Delay | U1   | 0   | 255   | 1       | s    | Cell undervoltage recovery delay     |

#### 4.3.14.2 HCUV—Hardware Cell Undervoltage

| Class       | Subclass | Name           | Type | Min | Max   | Default | Unit | Description  |
|-------------|----------|----------------|------|-----|-------|---------|------|--|
| Protections | HCUV     | Recovery       | I2   | 0   | 32767 | 2900    | mV   | Hardware Cell Undervoltage recovery threshold in RELAX or DISCHARGE mode |
| Protections | HCUV     | Recovery Chg   | I2   | 0   | 32767 | 2520    | mV   | Hardware Cell Undervoltage recovery threshold in CHARGE mode             |
| Protections | HCUV     | Recovery Delay | U1   | 0   | 255   | 1       | s    | Hardware Cell Undervoltage recovery delay                                |

#### 4.3.14.3 COV—Cell Overvoltage

| Class       | Subclass | Name               | Type | Min | Max   | Default | Unit | Description                                      |
|-------------|----------|--------------------|------|-----|-------|---------|------|--|
| Protections | COV      | Threshold Low Temp | I2   | 0   | 32767 | 4490    | mV   | Cell overvoltage low temperature range threshold |

**Protections**

| Class       | Subclass | Name                         | Type | Min | Max   | Default | Unit | Description   |
|-------------|----------|------------------------------|------|-----|-------|---------|------|---|
| Protections | COV      | Threshold Standard Temp Low  | I2   | 0   | 32767 | 4490    | mV   | Cell overvoltage standard low temperature range threshold           |
| Protections | COV      | Threshold Standard Temp High | I2   | 0   | 32767 | 4490    | mV   | Cell overvoltage standard high temperature range threshold          |
| Protections | COV      | Threshold High Temp          | I2   | 0   | 32767 | 4490    | mV   | Cell overvoltage high temperature range threshold                   |
| Protections | COV      | Threshold Rec Temp           | I2   | 0   | 32767 | 4490    | mV   | Cell overvoltage recommended temperature range threshold            |
| Protections | COV      | Delay                        | U1   | 0   | 255   | 1       | s    | Cell overvoltage trip delay   |
| Protections | COV      | Recovery Low Temp            | I2   | 0   | 32767 | 4290    | mV   | Cell overvoltage low temperature range recovery threshold           |
| Protections | COV      | Recovery Standard Temp Low   | I2   | 0   | 32767 | 4290    | mV   | Cell overvoltage standard low temperature recovery range threshold  |
| Protections | COV      | Recovery Standard Temp High  | I2   | 0   | 32767 | 4290    | mV   | Cell overvoltage standard high temperature recovery range threshold |
| Protections | COV      | Recovery High Temp           | I2   | 0   | 32767 | 4290    | mV   | Cell overvoltage high temperature range recovery threshold          |
| Protections | COV      | Recovery Rec Temp            | I2   | 0   | 32767 | 4290    | mV   | Cell overvoltage recommended temperature range recovery threshold   |
| Protections | COV      | Recovery Delay               | U1   | 0   | 255   | 1       | s    | Cell overvoltage recovery delay                                     |

**4.3.14.4 HCOV—Hardware Cell Overvoltage**

| Class       | Subclass | Name           | Type | Min | Max   | Default | Unit | Description                                  |
|-------------|----------|----------------|------|-----|-------|---------|------|--|
| Protections | HCOV     | Recovery       | I2   | 0   | 32767 | 4290    | mV   | Hardware Cell Overvoltage recovery threshold |
| Protections | HCOV     | Recovery Delay | U1   | 0   | 255   | 1       | s    | Hardware Cell Overvoltage recovery delay     |

**4.3.14.5 OCC—Overcurrent In Charge**

| Class       | Subclass | Name               | Type | Min    | Max   | Default | Unit | Description                              |
|-------------|----------|--------------------|------|--------|-------|---------|------|--|
| Protections | OCC      | Threshold          | I2   | -32768 | 32767 | 12000   | mA   | Overcurrent in Charge trip threshold     |
| Protections | OCC      | Delay              | U1   | 0      | 255   | 1       | s    | Overcurrent in Charge trip delay         |
| Protections | OCC      | Recovery Threshold | I2   | -32768 | 32767 | 200     | mA   | Overcurrent in Charge recovery threshold |
| Protections | OCC      | Recovery Delay     | U1   | 0      | 255   | 10      | s    | Overcurrent in Charge recovery delay     |

**4.3.14.6 HOCC—Hardware Overcurrent in Charge**

| Class       | Subclass | Name               | Type | Min    | Max   | Default | Unit | Description                                       |
|-------------|----------|--------------------|------|--------|-------|---------|------|---|
| Protections | HOCC     | Recovery Threshold | I2   | -32768 | 32767 | 200     | mA   | Hardware Overcurrent in Charge recovery threshold |
| Protections | HOCC     | Recovery Delay     | U1   | 0      | 255   | 70      | s    | Hardware Overcurrent in Charge recovery delay     |

**4.3.14.7 OCD—Overcurrent in Discharge**

| Class       | Subclass | Name               | Type | Min    | Max   | Default | Unit | Description                                 |
|-------------|----------|--------------------|------|--------|-------|---------|------|---|
| Protections | OCD      | Threshold          | I2   | -32768 | 32767 | -7000   | mA   | Overcurrent in Discharge trip threshold     |
| Protections | OCD      | Delay              | U1   | 0      | 255   | 3       | s    | Overcurrent in Discharge trip delay         |
| Protections | OCD      | Recovery Threshold | I2   | -32768 | 32767 | -200    | mA   | Overcurrent in Discharge recovery threshold |
| Protections | OCD      | Recovery Delay     | U1   | 0      | 255   | 10      | s    | Overcurrent in Discharge recovery delay     |

#### 4.3.14.8 HOCD—Hardware Overcurrent in Discharge

| Class       | Subclass | Name               | Type | Min    | Max   | Default | Unit | Description  |
|-------------|----------|--------------------|------|--------|-------|---------|------|--|
| Protections | HOCD     | Recovery Threshold | I2   | -32768 | 32767 | -200    | mA   | Hardware Overcurrent in Discharge recovery threshold |
| Protections | HOCD     | Recovery Delay     | U1   | 0      | 255   | 70      | s    | Hardware Overcurrent in Discharge recovery delay     |

#### 4.3.14.9 HSCD—Hardware Short Circuit in Discharge

| Class       | Subclass | Name               | Type | Min    | Max   | Default | Unit | Description                                   |
|-------------|----------|--------------------|------|--------|-------|---------|------|---|
| Protections | HSCD     | Recovery Threshold | I2   | -32768 | 32767 | -200    | mA   | Short Circuit in Discharge recovery threshold |
| Protections | HSCD     | Recovery Delay     | U1   | 0      | 255   | 7       | s    | Short Circuit in Discharge recovery delay     |

#### 4.3.14.10 OTC—Overtemperature in Charge

| Class       | Subclass | Name      | Type | Min  | Max  | Default | Unit  | Description                                       |
|-------------|----------|-----------|------|------|------|---------|-------|---|
| Protections | OTC      | Threshold | I2   | -400 | 1500 | 550     | 0.1°C | Overtemperature in Charge trip threshold          |
| Protections | OTC      | Delay     | U1   | 0    | 255  | 2       | s     | Overtemperature in Charge Cell trip delay         |
| Protections | OTC      | Recovery  | I2   | -400 | 1500 | 500     | 0.1°C | Overtemperature in Charge Cell recovery threshold |

#### 4.3.14.11 OTD—Overtemperature in Discharge

| Class       | Subclass | Name      | Type | Min  | Max  | Default | Unit  | Description                                     |
|-------------|----------|-----------|------|------|------|---------|-------|---|
| Protections | OTD      | Threshold | I2   | -400 | 1500 | 600     | 0.1°C | Overtemperature in Discharge trip threshold     |
| Protections | OTD      | Delay     | U1   | 0    | 255  | 2       | s     | Overtemperature in Discharge trip delay         |
| Protections | OTD      | Recovery  | I2   | -400 | 1500 | 550     | 0.1°C | Overtemperature in Discharge recovery threshold |

#### 4.3.14.12 UTC—Undertemperature in Charge

| Class       | Subclass | Name      | Type | Min  | Max  | Default | Unit  | Description  |
|-------------|----------|-----------|------|------|------|---------|-------|--|
| Protections | UTC      | Threshold | I2   | -400 | 1500 | 0       | 0.1°C | Undertemperature in Charge trip threshold          |
| Protections | UTC      | Delay     | U1   | 0    | 255  | 2       | s     | Undertemperature in Charge Cell trip delay         |
| Protections | UTC      | Recovery  | I2   | -400 | 1500 | 50      | 0.1°C | Undertemperature in Charge Cell recovery threshold |

#### 4.3.14.13 UTD—Undertemperature in Discharge

| Class       | Subclass | Name      | Type | Min  | Max  | Default | Unit  | Description                                      |
|-------------|----------|-----------|------|------|------|---------|-------|--|
| Protections | UTD      | Threshold | I2   | -400 | 1500 | 0       | 0.1°C | Undertemperature in Discharge trip threshold     |
| Protections | UTD      | Delay     | U1   | 0    | 255  | 2       | s     | Undertemperature in Discharge trip delay         |
| Protections | UTD      | Recovery  | I2   | -400 | 1500 | 50      | 0.1°C | Undertemperature in Discharge recovery threshold |



## 5.1 Introduction

The BQ27Z746-R1 and BQ27Z758 devices can permanently disable the use of the battery pack in case of a significant failure. The permanent failure checks can be enabled or disabled individually by setting the appropriate bit in **Settings:Enabled PF A** and **Settings: Enabled PF C**. All permanent failure checks are disabled until *ManufacturingStatus()[PF]* is set. When any *PFStatus()* bit is set, the device enters PERMANENT FAIL mode and the following actions are taken in sequence:

1. Charge, and discharge FETs are turned off.
2. *OperationStatus()[PF]* = 1, *[XCHG]* = 1, *[XDSDG]* = 1
3. The following SBS data is changed: *BatteryStatus()[TCA]* = 1, *BatteryStatus()[TDA]* = 1, *ChargingCurrent()* = 0, and *ChargingVoltage()* = 0.
4. Run lifetime data collection update.
5. Data flash writing is disabled (except to store subsequent *PFStatus()* flags)

## 5.2 Safety Cell Undervoltage Permanent Fail

The BQ27Z746-R1 and BQ27Z758 devices can permanently disable the battery in the case of significant undervoltage on the cell.

| Status | Condition  | Action  |
|--------|--|---|
| Normal | $Voltage() > SUV:Threshold$                                  | $PFAAlert()[SUV] = 0$<br>$BatteryStatus()[TDA] = 0$                         |
| Alert  | $Voltage() \leq SUV:Threshold$                               | $PFAAlert()[SUV] = 1$<br>$BatteryStatus()[TDA] = 1$                         |
| Trip   | $Voltage() \leq SUV:Threshold$ for <b>SUV:Delay</b> duration | $PFAAlert()[SUV] = 0$<br>$PFStatus()[SUV] = 1$<br>$BatteryStatus()[FD] = 1$ |

## 5.3 Safety Cell Overvoltage Permanent Fail

The BQ27Z746-R1 and BQ27Z758 devices can permanently disable the battery in the case of significant overvoltage on the cell.

| Status | Condition  | Action  |
|--------|--|---|
| Normal | $Voltage() < SOV:Threshold$                                  | $PFAAlert()[SOV] = 0$                               |
| Alert  | $Voltage() \geq SOV:Threshold$                               | $PFAAlert()[SOV] = 1$<br>$BatteryStatus()[TCA] = 1$ |
| Trip   | $Voltage() \geq SOV:Threshold$ for <b>SOV:Delay</b> duration | $PFAAlert()[SOV] = 0$<br>$PFStatus()[SOV] = 1$      |

## 5.4 Charge FET Permanent Fail

The BQ27Z746-R1 and BQ27Z758 devices can permanently disable the battery pack in case the charge FET is not working properly.

| Status | Condition  | Action   |
|--------|--|--|
| Normal | CHG FET off AND $Current() < CFET:OFF Threshold$                                       | $PFAAlert()[CFETF] = 0$                            |
| Alert  | CHG FET off AND $Current() \geq CFET:OFF Threshold$                                    | $PFAAlert()[CFETF] = 1$                            |
| Trip   | CHG FET off AND $Current() \geq CFET:OFF Threshold$ for <b>CFET:OFF Delay</b> duration | $PFAAlert()[CFETF] = 0$<br>$PFStatus()[CFETF] = 1$ |

## 5.5 Discharge FET Permanent Fail

The BQ27Z746-R1 and BQ27Z758 devices can permanently disable the battery pack in case the discharge FET is not working properly.

| Status | Condition  | Action   |
|--------|--|--|
| Normal | DSG FET off AND $Current() > DFET:OFF Threshold$                                       | $PFAAlert()[DFETF] = 0$                            |
| Alert  | DSG FET off AND $Current() \leq DFET:OFF Threshold$                                    | $PFAAlert()[DFETF] = 1$                            |
| Trip   | DSG FET off AND $Current() \leq DFET:OFF Threshold$ for <b>DFET:OFF Delay</b> duration | $PFAAlert()[DFETF] = 0$<br>$PFStatus()[DFETF] = 1$ |

## 5.6 Permanent Fail Configuration

| Class    | Subclass          | Name         | Type | Min  | Max  | Default | Unit |
|----------|-------------------|--------------|------|------|------|---------|------|
| Settings | Permanent Failure | Enabled PF A | H2   | 0x00 | 0xFF | 0x00    | Hex  |

7                      6                      5                      4                      3                      2                      1                      0

|      |      |      |      |      |      |     |     |
|------|------|------|------|------|------|-----|-----|
| RSVD | RSVD | RSVD | RSVD | RSVD | RSVD | SOV | SUV |
|------|------|------|------|------|------|-----|-----|

**RSVD (Bit 7-2):** Reserved. Do not use.

**SOV (Bit 1):** Safety Cell Overvoltage

1 = Enabled

0 = Disabled (default)

**SUV (Bit 0):** Safety Cell Undervoltage

1 = Enabled

0 = Disabled (default)

| Class    | Subclass          | Name         | Type | Min  | Max  | Default | Unit |
|----------|-------------------|--------------|------|------|------|---------|------|
| Settings | Permanent Failure | Enabled PF C | H2   | 0x00 | 0xFF | 0x00    | Hex  |

7                  6                  5                  4                  3                  2                  1                  0

|      |      |      |      |      |      |       |       |
|------|------|------|------|------|------|-------|-------|
| RSVD | RSVD | RSVD | RSVD | RSVD | RSVD | DFETF | CFETF |
|------|------|------|------|------|------|-------|-------|

**RSVD (Bit 7-2):** Reserved. Do not use.

**CFETF (Bit 1):** Discharge Fet Failure

1 = Enabled

0 = Disabled (default)

**DFETF (Bit 0):** Charge Fet Failure

1 = Enabled

0 = Disabled (default)

## 5.7 Permanent Fail Data Flash Values

### 5.7.1 SUV - Safety Undervoltage

| Class          | Subclass | Name      | Type | Min | Max   | Default | Unit | Description                             |
|----------------|----------|-----------|------|-----|-------|---------|------|---|
| Permanent Fail | SUV      | Threshold | I2   | 0   | 32767 | 2200    | mV   | Safety cell undervoltage trip threshold |
| Permanent Fail | SUV      | Delay     | U1   | 0   | 255   | 5       | s    | Safety cell undervoltage trip delay     |

### 5.7.2 SOV - Safety Overvoltage

| Class          | Subclass | Name      | Type | Min | Max   | Default | Unit | Description                            |
|----------------|----------|-----------|------|-----|-------|---------|------|--|
| Permanent Fail | SOV      | Threshold | I2   | 0   | 32767 | 4500    | mV   | Safety cell overvoltage trip threshold |
| Permanent Fail | SOV      | Delay     | U1   | 0   | 255   | 5       | s    | Safety cell overvoltage trip delay     |

### 5.7.3 CFETF - Charge FET Failure

| Class          | Subclass | Name      | Type | Min | Max | Default | Unit | Description                       |
|----------------|----------|-----------|------|-----|-----|---------|------|-----------------------------------|
| Permanent Fail | CFETF    | Threshold | I2   | 0   | 500 | 5       | mA   | Charge FET failure trip threshold |
| Permanent Fail | CFETF    | Delay     | U1   | 0   | 255 | 5       | s    | Charge FET failure trip delay     |

### 5.7.4 DFETF - Discharge FET Failure

| Class          | Subclass | Name      | Type | Min  | Max | Default | Unit | Description                          |
|----------------|----------|-----------|------|------|-----|---------|------|--------------------------------------|
| Permanent Fail | DFETF    | Threshold | I2   | -500 | 0   | -5      | mA   | Discharge FET failure trip threshold |
| Permanent Fail | DFETF    | Delay     | U1   | 0    | 255 | 5       | s    | Discharge FET failure trip delay     |



## 6.2 Automatic Mode

In AUTOMATIC mode (*BattSenseOutput()*[MANUAL] = 0), the device controls the output on BAT\_SP and BAT\_SN based on discrete states, as defined below.

**Table 6-1. Battery Sensing Output States in AUTOMATIC Mode**

| Value | State           | BAT_SP   | BAT_SN   |
|-------|-----------------|--|--|
| 0     | HIZ Mode        | BAT_SP connected to BAT through a 1- MΩ resistor                                   | BAT_SN connected to VSS through a 1-MΩ resistor                                    |
| 1     | RLO Mode        | BAT_SP connected to BAT through RLO  | BAT_SN connected to VSS through RLO  |
| 2     | RLO Charge Mode | BAT_SP connected to BAT through RLO with option to include buffer with 0-mV offset | BAT_SN connected to VSS through RLO with option to include buffer with 0-mV offset |
| 3     | Buffer Mode     | BAT_SP connected to BAT through buffer with configured offset                      | BAT_SN connected to VSS through buffer with configured offset                      |

The configuration of BAT\_SP and BAT\_SN during initialization (before initial measurements complete and the CHG and DSG FETs are turned on) is either HIZ mode or BUFFERmode. The initial state is BUFFER mode when ZVCHG must be enabled, otherwise it is HIZ mode. After the initial set of measurements complete, the next state is determined by the entry or exit conditions of each state.

### 6.2.1 RLO Mode

RLO mode is the standard state for automatic mode when not in a low voltage condition or charging at high current. In this mode, BAT\_SN is connected to VSS and BAT\_SP is connected to BAT through separate low resistors.

| Status   | Condition  | Action         |
|----------|--|----------------|
| Activate | $(OperationStatusA()[XCHG] = 1 \text{ AND } Batt\ Sense\ Options[XCHG\_RLO] = 1)$ OR<br>$(OperationStatusA()[XCHG] = 0 \text{ AND } Current() < RLO\ Charge\ Threshold \text{ AND } \text{Not in Buffer Mode})$    | Enter RLO mode |
| Exit     | $(OperationStatusA()[XCHG] = 1 \text{ AND } Batt\ Sense\ Options[XCHG\_RLO] = 0)$ OR<br>$(OperationStatusA()[XCHG] = 0 \text{ AND } (Current() \geq RLO\ Charge\ Threshold \text{ OR } \text{Enter Buffer Mode}))$ | Exit RLO mode  |

### 6.2.2 RLO Charge Mode

RLO Charge mode is similar to RLO mode, except it includes the option to individually enable the buffer with 0-mV offset on BAT\_SP and BAT\_SN using **RLO Charge Config**. Enabling the buffer in RLO Charge mode is intended to reduce battery sensing error due to high charge currents through the  $R_{DS(on)}$  of the CHG and DSG FETs and the parasitic resistance on the high and low sides of the battery.

| Status   | Condition   | Action                |
|----------|---|-----------------------|
| Activate | $OperationStatusA()[XCHG] = 0 \text{ AND } Current() \geq RLO\ Charge\ Threshold$ | Enter RLO Charge Mode |
| Exit     | $OperationStatusA()[XCHG] = 1 \text{ OR } Current() < RLO\ Charge\ Threshold$     | Exit RLO Charge Mode  |

| Class    | Subclass   | Name                 | Type | Min  | Max   | Default | Unit |
|----------|------------|----------------------|------|------|-------|---------|------|
| Settings | Batt Sense | RLO Charge Threshold | I2   | 0    | 32767 | 75      | mA   |
| Settings | Batt Sense | RLO Charge Config    | H1   | 0x00 | 0x0C  | 0x0C    | Hex  |

7                      6                      5                      4                      3                      2                      1                      0

|      |      |      |      |          |          |      |      |
|------|------|------|------|----------|----------|------|------|
| RSVD | RSVD | RSVD | RSVD | BUF_P_EN | BUF_N_EN | RSVD | RSVD |
|------|------|------|------|----------|----------|------|------|



0 = Disable buffer between BAT and BAT\_SP (default)

**BUF\_N\_EN (Bit 2):** Buffer enable on BAT\_SN during transition

1 = Enable buffer between VSS and BAT\_SN (default)

0 = Disable buffer between VSS and BAT\_SN

**RSVD (Bits 1–0):** Reserved. Do not use.

| Class    | Subclass   | Name                    | Type | Min   | Max   | Default | Unit      |
|----------|------------|-------------------------|------|-------|-------|---------|-----------|
| Settings | Batt Sense | Buffer Mode Threshold   | I2   | 0     | 32767 | 2500    | mV        |
| Settings | Batt Sense | Buffer Mode Delay       | U1   | 0     | 255   | 1       | s         |
| Settings | Batt Sense | Buffer Mode Recovery    | I2   | 0     | 32767 | 2900    | mV        |
| Settings | Batt Sense | Buffer Mode PACK Margin | I2   | -1000 | 1000  | 100     | mV        |
| Settings | Batt Sense | Transition Delay        | U2   | 0     | 1000  | 250     | 2 $\mu$ s |

### 6.3 Hardware-Based Protections

As reported in *BattSenseOutput()*, the device detects short-circuits from BAT\_SP or BAT\_SN to PACK+ or PACK- while the low resistors or buffers are enabled. For example, BCP and BDP indicate a short-circuit on BAT\_SP, whereas BCN and BDN indicate a short-circuit on BAT\_SN. The detection of these short-circuits is to prevent discharging or charging the battery through alternate paths which avoid the CHG and DSG FETs. When enabling the low resistor or buffer on either BAT\_SP or BAT\_SN, the device waits for **Protection Enable Delay** to allow the voltage on the pins to settle before enabling these hardware-based protections: BCP, BDP, BCN, and BDN. **Protection Enable Delay** should only be increased if **Transition Delay** is increased above 500, which corresponds to 1000  $\mu$ s. In this case, **Protection Enable Delay** should be increased to 4 ms to avoid BCP or BCN from being detected when transitioning from Buffer Mode.

The voltage threshold and detection time for each of these hardware-based protections is configured separately through the *ProtectorCalibration()* or *ProtectorImage1()/ProtectorImage2()* commands.

If BCP, BDP, BCN, or BDN is detected, the device switches the battery sensing output to HIZ Mode, as described in [Table 6-1](#), to limit the current flow on BAT\_SP and BAT\_SN. After waiting for **Protection Recovery Delay**, the device configures the battery sensing output to the state based on the present conditions. During this recovery period, the battery sensing output cannot be changed from HIZ Mode.

| Class    | Subclass   | Name                      | Type | Min | Max | Default | Unit |
|----------|------------|---------------------------|------|-----|-----|---------|------|
| Settings | Batt Sense | Protection Enable Delay   | U1   | 0   | 255 | 3       | ms   |
| Settings | Batt Sense | Protection Recovery Delay | U1   | 0   | 255 | 5       | s    |



## 7.1 Introduction

To enhance battery life, the BQ27Z746-R1 and BQ27Z758 supports several power modes to minimize power consumption during operation.

## 7.2 NORMAL Mode

In NORMAL mode (also referred to as ACTIVE mode), the device takes voltage, current, and temperature readings every 1 s, performs gauging calculations, updates data, and makes status selections at 1-s intervals. Between these periods of activity, the device is in a reduced power state.

## 7.3 SLEEP Mode

### 7.3.1 Device Sleep

When the sleep conditions are met, the device goes into SLEEP mode with periodic wakeups to reduce power consumption. The device returns to NORMAL mode if any exit sleep condition is met, but waits until the 4-second current measurement completes to avoid losing passed charge.

By setting **DA Configuration**[WAKE\_SLP\_1SEC] = 1, the device can be configured to exit to NORMAL on the next 1-second boundary and stop the present current measurement. However, this configuration is not recommended, especially if SLEEP mode is frequently entered and exited. The device always exits SLEEP to NORMAL on the next 1-second boundary for *OperationStatus()*[SDM] and *OperationStatus()*[CAL], which are used to enter SHUTDOWN and calibration mode.

Firmware processing is minimized by reducing the number of calculations. Some calculations are performed less frequently: only after voltage and temperature are measured. These less frequent calculations include updating lifetime data, the voltage and temperature range of the advanced charge algorithm, and averaged values such as *AveragePower()*.

| Status   | Condition  | Action   |
|----------|--|--|
| Activate | <b>DA Config</b> [SLEEP] = 1 AND<br>  <i>Current()</i>   ≤ <b>Sleep Current</b> AND<br><b>Voltage Time</b> > 0 AND<br>Device in RELAX mode   | The device goes to SLEEP mode.<br>The device wakes up every <b>Voltage Time</b> to measure voltage and temperature. <sup>(1)</sup><br>The device continues to coulomb count and update current every 4 s.<br>Tip: Synchronize these two times to save power. |
| Exit     | <b>DA Config</b> [SLEEP] = 0 OR<br>  <i>Current()</i>   > <b>Sleep Current</b> OR<br><b>Voltage Time</b> = 0 OR<br>(Hardware-based IWAKE threshold surpassed AND<br><b>DA Configuration</b> [IWAKE_EXIT] = 1) OR<br><i>OperationStatus()</i> [SDM] = 1 OR<br><i>OperationStatus()</i> [CAL] = 1 OR<br><i>SafetyAlert()</i> ≠ 0 | Return to NORMAL mode  |

(1) The device wakes up every 1 second to measure voltage and temperature for best performance when an OCV is in progress (*GaugingStatus()*[SLPQMAX] = 1) or a safety alert is present (*SafetyAlert()* ≠ 0) prior to exiting SLEEP.

The configuration options for SLEEP are in the following data flash.

| Class | Subclass | Name          | Type | Min | Max   | Default | Unit | Description   |
|-------|----------|---------------|------|-----|-------|---------|------|---|
| Power | Sleep    | Sleep Current | I2   | 0   | 32767 | 15      | mA   | <i>Current()</i>   threshold to enter SLEEP mode      |
| Power | Sleep    | Voltage Time  | U1   | 1   | 20    | 5       | s    | Voltage and temperature sampling period in SLEEP mode |

## 7.4 SHIP Mode

In SHIP mode, the device measures voltage and temperature very infrequently and at shorter ADC conversion times, and current is not measured or coulomb counted. Current is assumed to be and reported as 0 mA. Therefore, the device tracks the battery's state-of-charge from OCVs. The measurements performed at each interval are:

1. Cell voltage
2. Temperature (rotating between TSInt, TS1, and TS2 if enabled)
3. PACK voltage (every fourth interval)

### Note

The ADC conversion time for temperature measurements is short enough that added capacitance on the TS and GPO (for TS2 if enabled) pins can cause temperature error due to longer voltage settling time.

Firmware processing is minimized by reducing the number of calculations. Some calculations are performed less frequently: only after voltage and temperature are measured. These less frequent calculations include updating firmware-based protections, lifetime data, and the voltage and temperature range of the advanced charge algorithm. Other calculations, such as updating *RemainingCapacity()* and *FullChargeCapacity*, are not performed at all with the assumption the system is off and will not communicate with the gauge.

SHIP mode is entered based on voltage through SLEEP or by command through NORMAL or SLEEP. Exit from this mode is through a current level or command.

| Status   | Condition   | Action  |
|----------|---|---|
| Activate | ( <i>OperationStatusA()[SLEEP]</i> = 1 AND <i>Voltage()</i> < <b>Shipmode Voltage Threshold</b> for <b>Shipmode Voltage Delay</b> ) OR ( <i>OperationStatusB()[SHIPM]</i> = 1 for <b>Shipmode Command Delay</b> AND   <i>Current()</i>   ≤ <b>Sleep Current</b> )               | <i>OperationStatusA()[SHIP]</i> = 1<br>The device enters RELAX mode.<br><i>Current()</i> = 0 mA, <i>AverageCurrent()</i> = 0 mA<br>The device wakes up every <b>Shipmode Measure Time</b> to measure voltage and temperature. <sup>(1)</sup><br>The device does NOT coulomb count or measure current. |
| Exit     | (Hardware-based IWAKE threshold surpassed AND <b>DA Configuration[IWAKE_EXIT]</b> = 1) OR ( <i>Voltage()</i> ≥ <b>Shipmode Voltage Threshold</b> AND <i>OperationStatusB()[SHIPM]</i> = 0) OR ( <i>OperationStatusB()[SHIPM]</i> = 1 AND <i>MAC ShipmodeDisable()</i> received) | <i>OperationStatusA()[SHIP]</i> = 0<br><i>OperationStatusB()[SHIPM]</i> = 0<br>Return to NORMAL mode  |

- (1) For best performance, the device wakes up every 1 second to measure voltage and temperature when an OCV is in progress (*GaugingStatus()[SLPQMAX]* = 1) or a firmware-based protection entered the alert state (that is, *SafetyAlert()* ≠ 0).

### Note

If the gauge is UNSEALED and the *MAC ShipmodeEnable()* command is sent twice in a row, the gauge enters SHIP mode immediately and skips the normal delay sequence.

The configuration options for SHIP are in the following data flash.

| Class | Subclass | Name                       | Type | Min | Max   | Default | Unit | Description                            |
|-------|----------|----------------------------|------|-----|-------|---------|------|--|
| Power | Shipmode | Shipmode Voltage Threshold | I2   | 0   | 32767 | 2300    | mV   | Cell based SHIP voltage trip threshold |
| Power | Shipmode | Shipmode Voltage Delay     | U2   | 0   | 255   | 10      | s    | Cell based SHIP voltage trip delay     |

| Class | Subclass | Name                   | Type | Min | Max | Default | Unit | Description   |
|-------|----------|------------------------|------|-----|-----|---------|------|---|
| Power | Shipmode | Shipmode Measure Time  | U1   | 1   | 30  | 30      | s    | Determines the wake interval to measure voltage and temperature in SHIP mode  |
| Power | Shipmode | Shipmode Command Delay | U1   | 0   | 255 | 0       | s    | Delay time to enter SHIP mode after MAC <i>ShipmodeEnable()</i> is received. The device takes an additional 1-2 seconds to enter SHIP mode for command processing |

## 7.5 SHELF Mode

SHELF mode operates the same as SHIP mode with a minimized amount of measurements and firmware processing. However, device power consumption in SHELF mode is reduced from SHIP mode by turning off the CHG and DSG FETs and hardware protector (all hardware-based protections and IWAKE). Due to the FETs being off in SHELF mode, the system is not powered without a charger attached, so the exit conditions are different from SHIP mode and the FET control logic is not performed.

In SHELF mode, the device measures voltage and temperature very infrequently and at shorter ADC conversion times, and current is not measured or coulomb counted. Current is assumed to be and reported as 0 mA. Therefore, the device tracks the battery's state-of-charge from OCVs. The measurements performed each interval are:

1. Cell voltage
2. Temperature (rotating between TSInt, TS1, and TS2 if enabled)
3. PACK voltage (every fourth interval)

### Note

The ADC conversion time for temperature measurements is short enough that added capacitance on the TS and GPO (for TS2 if enabled) pins can cause temperature error due to longer voltage settling time.

Firmware processing is minimized by reducing the number of calculations. Some calculations are performed less frequently: only after voltage and temperature are measured. These less frequent calculations include updating firmware-based protections, lifetime data, and the voltage and temperature range of the advanced charge algorithm. Other calculations, such as updating *RemainingCapacity()* and *FullChargeCapacity*, are not performed at all with the assumption the system is off and will not communicate with the gauge.

SHELF mode is entered based on voltage through SLEEP or SHIP or by command through NORMAL or SLEEP. Exit from this mode is through command, voltage at the PACK terminal  $> V_{\text{STARTUP}}$ , or the ENAB pin being pulled low. The latter two conditions are shared with SHUTDOWN and only checked **Shelf Exit Holdoff** seconds after entering SHELF mode to allow pin voltages to settle once the DSG and CHG FETs turn off.

| Status   | Condition   | Action  |
|----------|---|---|
| Activate | $(\text{OperationStatusA}()[\text{SLEEP}] = 1 \text{ AND } \text{Voltage}() < \text{Shelf Voltage Threshold for Shelf Voltage Delay})$ OR<br>$(\text{OperationStatusB}()[\text{SHELFM}] = 1 \text{ for Shelf Command Delay AND }  \text{Current}()  \leq \text{Sleep Current})$ | $\text{OperationStatusA}()[\text{SHELF}] = 1$<br>The device enters RELAX mode.<br>$\text{Current}() = 0 \text{ mA}$ , $\text{AverageCurrent}() = 0 \text{ mA}$<br>The device wakes up every <b>Shelf Measure Time</b> to measure voltage and temperature. <sup>(1)</sup><br>The device does NOT coulomb count or measure current.<br>Turn off the CHG and DSG FETs.<br>Turn off the protector (all hardware-based protections and IWAKE). |

| Status | Condition   | Action   |
|--------|---|--|
| Exit   | ( $Voltage() \geq \text{Shelf Voltage Threshold}$ AND $OperationStatusB()[SHELFM] = 0$ ) OR<br>( $OperationStatusB()[SHELFM] = 1$ AND $MAC\ ShelfDisable()$ received) OR<br>(Time in SHELF mode $\geq \text{Shelf Exit Holdoff}$ AND<br>(Voltage at PACK terminal $> V_{STARTUP}$ OR<br>ENAB pin pulled low for <b>Power: ENAB: Shelf ENAB Hold Time</b> )) | $OperationStatusA()[SHELF] = 0$<br>$OperationStatusB()[SHELFM] = 0$<br>Return to NORMAL mode |

- (1) For best performance, the device wakes up every 1 second to measure voltage and temperature when an OCV is in progress ( $GaugingStatus()[SLPQMAX] = 1$ ) or a firmware-based protection entered the alert state (that is,  $SafetyAlert() \neq 0$ ).

### Note

If the gauge is UNSEALED and the  $MAC\ ShelfEnable()$  command is sent twice in a row, the gauge enters SHELF immediately and skips the normal delay sequence.

The configuration options for SHELF are in the following data flash.

| Class | Subclass | Name                    | Type | Min | Max   | Default | Unit | Description  |
|-------|----------|-------------------------|------|-----|-------|---------|------|--|
| Power | Shelf    | Shelf Voltage Threshold | I2   | 0   | 32767 | 2200    | mV   | Cell based SHELF voltage trip threshold  |
| Power | Shelf    | Shelf Voltage Delay     | U2   | 0   | 255   | 10      | s    | Cell based SHELF voltage trip delay  |
| Power | Shelf    | Shelf Measure Time      | U1   | 1   | 30    | 30      | s    | Determines the wake interval to measure voltage and temperature in SHELF mode  |
| Power | Shelf    | Shelf Command Delay     | U1   | 0   | 255   | 10      | s    | Delay time to enter SHELF mode after $MAC\ ShelfEnable()$ is received. The device takes an additional 1-2 seconds to enter SHELF mode for command processing |
| Power | Shelf    | Shelf Exit Holdoff      | U1   | 1   | 255   | 10      | s    | Holdoff time after entering SHELF mode to check the PACK and ENAB pin exit conditions  |
| Power | Shelf    | Shelf ENAB Hold Time    | U1   | 0   | 10    | 0       | s    | It is the hold time in seconds before the Shelf mode is exited. If it is zero, the Shelf mode is exited immediately when the ENAB pin is driven low.         |

### Note

FETs remain OFF until **Shelf ENAB Hold Time** expires.

## 7.6 SHUTDOWN Mode

### 7.6.1 Voltage-Based Shutdown

To minimize power consumption and avoid draining the battery, the device can be configured to shut down at a programmable cell voltage threshold, **Shutdown Voltage**. If **Shutdown Voltage** is configured above the cell undervoltage thresholds, the delay to enter SHUTDOWN may be longer than **Shutdown Time**, because the voltage on the PACK terminal takes time to drain (assuming a charger is not attached) once the DSG FET turns off. The time to drain the PACK terminal depends on the load attached. This function also works in PERMANENT FAILURE mode. When the device is in PERMANENT FAILURE mode, the parameters **PF Shutdown Voltage** and **PF Shutdown Time** configure the shutdown threshold

### Note

In a test environment, it is possible to quickly drop the cell voltage below **Shutdown Voltage**. Even if **Shutdown Voltage** is configured below the cell undervoltage thresholds, the PACK terminal may take extra time to drain, especially if PACK+ is floating. However, this should not be a concern with a system load attached with sufficient voltage margin between the **Shutdown Voltage** and the DSG FET turning off.

| Status   | Condition   | Action   |
|----------|---|--|
| Enable   | Cell voltage < <b>Shutdown Voltage</b>  | <code>OperationStatus()[SDV] = 1</code>                          |
| Trip     | Cell voltage continuous < <b>Shutdown Voltage</b> for <b>Shutdown Time</b>  | Turn DSG FET off   |
| Shutdown | Voltage at PACK terminal < <b>Charger Present Threshold</b> AND $Current() \leq 0$ AND ENAB pin is high   | Send device into SHUTDOWN mode                                   |
| Exit     | Voltage at PACK terminal > $V_{STARTUP}$ OR (ENAB pin pulled low for <b>Power: ENAB: Startup ENAB Hold Time</b> ) OR Cell voltage > <b>Shutdown Voltage</b> if not in SHUTDOWN mode | <code>OperationStatus()[SDV] = 0</code><br>Return to NORMAL mode |

### Note

During ENAB software debounce, FETs are off until **Power: ENAB: Startup ENAB Hold Time** expires. ENAB hold feature is ignored if charger is connected.

### Note

The device goes through a full reset when exiting from SHUTDOWN mode, which means the device reinitializes. On power up, the gauge checks certain special memory locations. If the memory checksum is incorrect, or if the watchdog was triggered, the gauge does a full reset.

If the memory checksum is good (for example, in the case of a short power glitch), the gauge does a partial reset. The initialization is faster in a partial reset, and certain memory data is not reinitialized (for example, all SBS registers, last ADC and CC readings, safety alerts, and statuses, and so on) and so a partial reset is usually transparent to the host. After a partial reset, the FETs remain off until the hardware-based cell undervoltage protection, HCUV, is able to complete detection. Once HCUV detection finishes, the FETs turn on or remain off based on this result and the other restored safety statuses.

The configuration options for SHUTDOWN are in the following data flash.

| Class | Subclass | Name                      | Type | Min | Max   | Default | Unit   | Description  |
|-------|----------|---------------------------|------|-----|-------|---------|--------|--|
| Power | Shutdown | Shutdown Voltage          | I2   | 0   | 32767 | 2150    | mV     | Cell based shutdown voltage trip threshold   |
| Power | Shutdown | Shutdown Time             | U2   | 0   | 255   | 10      | s      | Cell based shutdown voltage trip delay   |
| Power | Shutdown | PF Shutdown Voltage       | I2   | 0   | 32767 | 1750    | mV     | Cell based PERMANENT FAILURE mode shutdown voltage trip threshold  |
| Power | Shutdown | PF Shutdown Time          | U2   | 0   | 255   | 10      | s      | Cell based PERMANENT FAILURE mode shutdown voltage trip delay  |
| Power | Shutdown | Charger Present Threshold | I2   | 0   | 32767 | 100     | mV     | PACK terminal voltage threshold  |
| Power | ENAB     | Startup ENAB Hold Time    | U1   | 0   | 6     | 0       | 250 ms | It is the number of 250ms periods to delay before allowing the ENAB pin to be used as a wake-up event. Feature is disabled if set to zero. |

### 7.6.2 AltManufacturerAccess() MAC Shutdown

In SHUTDOWN mode, the device turns off the CHG and DSG FETs after **FET Off Time**, and then shuts down to minimize power consumption after **Delay** time. Both **FET Off Time** and **Delay** time are referenced to the time the gauge received the command. Thus, the **Delay** time must be set longer than the **FET Off Time**. The device returns to NORMAL mode when the voltage at PACK terminal  $> V_{STARTUP}$  or the ENAB pin is pulled low. The device can be sent to this mode with the *AltManufacturerAccess() Shutdown* command, which sets *OperationStatus()[SDM]*. Charger voltage must not be present and the ENAB pin must be high for the device to enter SHUTDOWN mode. If there is charger voltage present or charge current is flowing, the device waits until the charger is removed to enter the SHUTDOWN state. This is to prevent the device from an unintended, immediate wakeup. The *Shutdown()* command cannot be canceled.

#### Note

If the gauge is unsealed and the *MAC Shutdown()* command is sent twice in a row, the gauge executes the shutdown sequence immediately and skips the normal delay sequence.

| Class | Subclass | Name           | Type | Min | Max   | Default | Unit | Description   |
|-------|----------|----------------|------|-----|-------|---------|------|---|
| Power | Ship     | FET Off Time   | U1   | 0   | 127   | 10      | s    | Delay time to turn OFF FETs prior to entering SHUTDOWN mode. This setting should not be longer than the <b>Delay</b> setting. |
| Power | Ship     | Delay          | U1   | 0   | 254   | 20      | s    | Delay time to enter SHUTDOWN mode   |
| Power | Ship     | Auto Ship Time | U2   | 0   | 65535 | 4320    | min  | Time without communication in SLEEP to automatically enter SHUTDOWN when <b>Power Config[AUTO_SHIP_EN] = 1</b>                |

### 7.6.3 Time-Based Shutdown

The device can be configured to enter SHUTDOWN after staying in SLEEP mode without communication for a preset time interval specified in **Auto Ship Time**. Setting **Power Config[AUTO\_SHIP\_EN] = 1** enables this feature. Any communication to the device restarts the timer. When the timer reaches **Auto Ship Time**, the time-based shutdown effectively triggers the MAC shutdown command to start the shutdown sequence. The device returns to NORMAL mode when voltage at the PACK terminal  $> V_{STARTUP}$  or the ENAB pin is pulled low.

## 7.7 Power Modes Configuration

| Class    | Subclass      | Name             | Type | Min    | Max    | Default | Unit | Description   |
|----------|---------------|------------------|------|--------|--------|---------|------|---|
| Settings | Configuration | Power Config     | H2   | 0x0000 | 0xFFFF | 0x0011  | —    | Bit 0: AUTO_SHIP_EN<br>0 = Disable time-based entry into SHUTDOWN<br>1 = Enable time-based entry into SHUTDOWN (default)<br>Bits 3:1 Reserved<br>Bit 4: SLP_ACCUM<br>0 = Disables CC accumulation during SLEEP mode<br>1 = Enables CC accumulation during SLEEP mode<br>Bits 15:5: Reserved   |
| Settings | Configuration | DA Configuration | H2   | 0x0000 | 0x0010 | 0x0010  | —    | Bits 3:0: Reserved<br>Bit 4: SLEEP—SLEEP mode<br>0 = Disables SLEEP mode<br>1 = Enables SLEEP mode (default)<br>Bits 9:5: Reserved<br>Bit 10: IWAKE_EXIT—Exit from SLEEP, SHIP due to IWAKE<br>0 = Disables IWAKE exit<br>1 = Enable IWAKE exit (default)<br>WAKE_SLP_1SEC—Wake from SLEEP within 1 second<br>0 = Disables wake within 1 second (default)<br>1 = Enables wake within 1 second<br>Bits 15:12: Reserved |



## 8.1 Impedance Track (IT) Model

Predicting available energy from lithium-ion cells requires a number of measurable parameters. The Impedance Track (IT) model measures, records, and predicts available capacity or energy from these parameters. The model provides the means to accurately determine available energy over the life of a cell by accounting for aging and present environmental conditions. Aging can be accounted for by measuring QMax and cell impedances as the cell is cycled. QMax is the amount of charge available in a fully charged cell. The present conditions include consideration of cell and ambient temperature as well as the present or predicted power requirements. There are three major components of Impedance Track.

- One is measurement of QMax.
- Two is measurement of cell impedance.
- Three is the calculation of capacities.

All three components rely on the relationship of the open circuit voltage (OCV) versus depth of discharge (DOD). DOD is the percent of QMax removed from a cell during a no load discharge and goes to 100% when the cell is fully discharged. The OCV versus DOD relationship is fixed for each particular cell chemistry. QMax is determined by measuring the charge passed between two DOD points; the DOD points being determined from OCV measurements during Relax mode. Cell impedance is measured during constant load times during discharge from the difference of measured voltage to the OCV voltage based on the known DOD. The DOD determined from the most recent OCV reading and adjusted by the passed charge during the discharge. In general, capacities are recalculated based on changes in temperature, load or impedance. Capacity calculations use the known DOD, load, temperature, end-of-discharge voltage, **TermV**, and **QMax**.

## 8.2 Thermal Model

Because temperature changes significantly during the course of a discharge, the algorithm needs to be able to predict the future temperature. This is required for temperature correction of battery impedance during voltage simulation near the end of discharge. To achieve this, the algorithm collects temperature-time dependence data during discharge. This data is used to update parameters of a simple thermal model, including a heat exchange coefficient, **temp k**, and a thermal time constant, **temp k**. These parameters are updated at the same time as resistances. The algorithm also records the outside temperature during relaxation periods. These parameters are used to define a temperature function  $T(t, T\_start)$  that calculates a temperature profile starting from the present temperature,  $T\_start$ , and continuing until the end of discharge in the simulation calculation.

## 8.3 Gauging Capacities

The BQ27Z746-R1 and BQ27Z758 measures individual cell voltages, pack voltage, temperature, and current. When at rest and *GaugingStatus[REST]* is set or when cell impedance is updated, the Impedance Track capacity calculation determines battery state-of-charge from DOD and temperature. The BQ27Z746-R1 and BQ27Z758 measures charge and discharge activity by integrating the voltage across a small-value series sense resistor (1 mΩ typ.) between the negative terminal of the cell stack and the negative terminal of the battery pack. The battery state-of-charge is subsequently adjusted during load or charger application, using the integrated charge passed through the battery.

The device is capable of supporting a maximum battery pack capacity of 32 Ah. See the *Theory and Implementation of Impedance Track™ Battery Fuel-Gauging Algorithm in the bq20zxx Product Family Application Report (SLUA364)* for further details of the Impedance Track calculations.

The default for Impedance Track gauging is *off*. To enable the gauging function, set **Manufacturing Status[GAUGE\_EN]** = 1. The gauging function will be enabled after a reset or a seal command is set. Alternatively, the MAC command *Gauging()* can be used to turn on and off the gauging function. *Gauging()* takes an immediate effect and the **[GAUGE\_EN]** is also updated accordingly.

The *ITStatus1()*, *ITStatus2()*, and *ITStatus3()* commands return various gauging related information, which is useful to verify learned cell data was updated correctly, as well as problem analyses.

## 8.4 Learning Cycles

As described in [Section 8.3](#), IT is not enabled by default. When the BQ27Z746-R1 and BQ27Z758 gauge receives an enable request, the gauge is then in its learning cycle mode. It is not necessary to use the gauge in this mode for all gauges during manufacture.

This mode helps to determine the golden image, which can be programmed into all gauges during the manufacture process. Learning cycles are generally run under lab conditions. When the golden image is learned by a gauge, the gauge is left in the IT learned mode of operation. Thus, when its data flash image is transferred to another gauge during manufacture, that gauge is then in learned mode; the gauge with this update will still need to receive an IT enable request. Requiring this request prevents the gauge from any unintended updates that could result from pack activity during manufacture. It would be one of the last commands to the pack before it is prepared for shipment. For more details, see the application note *Impedance Track™ Gas Gauge for Novices – bq20z70/z90 (SLUA397)*, which can be downloaded from [TI.com](http://TI.com).

## 8.5 Impedance Track Configuration

### Load Mode

During normal operation, the battery-impedance profile compensation of the Impedance Track algorithm can provide more accurate full-charge and remaining state-of-charge information if the typical load type is known. The two selectable options are constant current ( **Load Mode** = 0) and constant power ( **Load Mode** = 1).

### Load Select

To compensate for the  $I \times R$  drop near the end of discharge, the BQ27Z746-R1 and BQ27Z758 must be configured for whatever current (or power) will flow in the future. While it cannot be exactly known, the BQ27Z746-R1 and BQ27Z758 can use load history, such as the average current of the present discharge to make a sufficiently accurate prediction.

The BQ27Z746-R1 and BQ27Z758 can be configured to use several methods of this prediction by setting the **Load Select** value. Because this estimate has only a second-order effect on remaining capacity accuracy, different measurement-based methods (methods 0–3, and method 7) result in only minor differences in accuracy. However, methods 4–6, where an estimate is arbitrarily assigned by the user, can result in a significant error if a fixed estimate is far from the actual load.

| Constant Current ( <b>Load Mode</b> = 0) | Constant Power ( <b>Load Mode</b> = 1)     |
|--|--|
| 0 = <b>Avg I Last Run</b>                | <b>Avg P Last Run</b>                      |
| 1 = Present average discharge current    | Present average discharge power            |
| 2 = <i>Current()</i>                     | <i>Current()</i> × <i>Voltage()</i>        |
| 3 = <i>AverageCurrent()</i>              | <i>AverageCurrent()</i> × <i>Voltage()</i> |
| 4 = <b>Design Capacity mAh /5</b>        | <b>Design Capacity cWh /5</b>              |
| 5 = <i>AtRate()</i> (mA)                 | N/A  |
| 6 = <b>User Rate-mA</b>                  | <b>User Rate-cW</b>                        |
| 7 = <b>Max Avg I Last Run</b>            | <b>Max Avg P Last Run</b>                  |

### Pulsed Load Compensation and Termination Voltage

To take into account pulsed loads while calculating remaining capacity until **Term Voltage** threshold is reached, the BQ27Z746-R1 and BQ27Z758 monitor not only average load, but also short load spikes. The maximum voltage deviation during a load spike is continuously updated during discharge and stored in **Delta Voltage**, with the minimum value allowed set in **Min Delta Voltage**. **Delta Voltage** is added to **Term Voltage** to determine end-of-discharge voltage (EDV).

### Reserve Battery Capacity

The BQ27Z746-R1 and BQ27Z758 allow an amount of capacity to be reserved in both mAh (**Reserve Cap-mAh**) and cWh (**Reserve Cap-cWh**) units between the point where the *RemainingCapacity()* function reports zero capacity and the absolute minimum pack voltage, **Term Voltage**. This enables a system to report zero capacity/energy, but still have enough reserve capacity/energy to perform a controlled shutdown or provide an extended sleep period for the host system.

### Pack Based Termination Voltage

The BQ27Z746-R1 and BQ27Z758 force *RemainingCapacity()* to 0 mAh when the battery voltage discharges to **Term Voltage** for a period of **Term V Hold Time**.

A portion of the configuration options for Impedance Track is in the following data flash. Additional configuration options are located in the sections in which they are discussed.

| Class       | Subclass | Name                           | Type | Min    | Max   | Default | Unit               | Description  |
|-------------|----------|--------------------------------|------|--------|-------|---------|--------------------|--|
| Gas Gauging | IT Cfg   | Pack Resistance                | I2   | 0      | 32767 | 0       | mΩ                 | Value of the battery pack serial resistance that is NOT along the cell voltage measurement path of the gauge. This can include the resistance associated with FETs, traces, sense resistors, and any additional resistance in the path.  |
| Gas Gauging | IT Cfg   | System Resistance              | I2   | 0      | 32767 | 0       | mΩ                 | Value of the system serial resistance that is along the path from the battery pack to the system power converter input. This can include FETs, traces, sense resistors and any additional resistance in the path.  |
| Gas Gauging | IT Cfg   | Cell 1 Interconnect Resistance | I2   | 0      | 32767 | 0       | 2 <sup>-10</sup> Ω | Value of the battery pack serial resistance that is along the cell voltage measurement path of the gauge; that is, the negative rail to the bottom of the cell and the top of the cell to the gauge. This can include the resistance associated with FETs, traces, sense resistors, and any additional resistance in the path. The gauge will offset the measured resistance with this value to improve Ra accuracy. |
| Gas Gauging | IT Cfg   | Term Voltage                   | I2   | 0      | 32767 | 3000    | mV                 | Minimum pack voltage used in IT simulations. Set <b>Term Voltage</b> to the minimum allowable voltage at the system power converter input. If it is desired to report 0% <i>RelativeStateOfCharge()</i> before the pack voltage reaches <b>Term Voltage</b> , it is recommended to increase <b>Reserve Cap-mAh</b> and <b>Reserve Cap-cWh</b> .  |
| Gas Gauging | IT Cfg   | Term V Hold Time               | U1   | 0      | 255   | 2       | s                  | When <b>Term Voltage</b> is met for <b>Term V Hold Time</b> , the <i>RemainingCapacity()</i> is set to 0 mAh.  |
| Gas Gauging | IT Cfg   | Max Simulation Iterations      | U1   | 20     | 50    | 50      | —                  | Enables the user to set the max number of simulation iterations IT is allowed to do. If the user finds that the watchdog is tripping, this number can be lowered.  |
| Gas Gauging | IT Cfg   | Simulation Near Term Delta     | I2   | 0      | 32767 | 250     | mV                 | Voltage delta from <b>Term Voltage</b> , which defines "near EDV" for IT simulations. If <b>Term Voltage</b> is increased, decrease <b>Simulation Near Term Delta</b> to keep <b>Term Voltage + Simulation Near Term Delta</b> around 3.2 V–3.5 V, the knee of the discharge curve.  |
| Gas Gauging | IT Cfg   | Min Delta Voltage              | I2   | -32768 | 32767 | 0       | mV                 | The minimum <b>Delta Voltage</b> that is saved during discharge cycles   |
| Gas Gauging | IT Cfg   | Load Select                    | U1   | 0      | 7     | 1       | —                  | Defines load compensation mode used by the gauging algorithm   |

| Class       | Subclass | Name                 | Type | Min    | Max   | Default | Unit | Description  |
|-------------|----------|----------------------|------|--------|-------|---------|------|--|
| Gas Gauging | IT Cfg   | Load Mode            | U1   | 0      | 1     | 1       | —    | Defines unit used by the gauging algorithm:<br>0 = Constant Current<br>1 = Constant Power  |
| Gas Gauging | IT Cfg   | User Rate-mA         | I2   | −9000  | 0     | 0       | mA   | Discharge rate used for capacity calculation selected by <b>Load Select</b> = 6  |
| Gas Gauging | IT Cfg   | User Rate-cW         | I2   | −32768 | 0     | 0       | cW   | Discharge rate used for capacity calculation selected by <b>Load Select</b> = 6  |
| Gas Gauging | IT Cfg   | Reserve Cap-mAh      | I2   | 0      | 9000  | 0       | mAh  | Capacity reserved available when the gauging algorithm reports 0% <i>RelativeStateOfCharge()</i>   |
| Gas Gauging | IT Cfg   | Reserve Cap-cWh      | I2   | 0      | 32000 | 0       | cWh  | Capacity reserved available when the gauging algorithm reports 0% <i>RelativeStateOfCharge()</i>   |
| Gas Gauging | IT Cfg   | Predict Ambient Time | U2   | 0      | 65535 | 2000    | s    | Wait time before the gauging algorithm starts to predict the ambient temperature during CHARGE and DISCHARGE modes (if [ <b>AMB_PRED</b> ] = 1). It is recommended to be set to 2× the value of <b>Temp a</b> to represent system thermal equilibrium. |

The parameters updated by AND used for Impedance Track are in the following data flash.

| Class       | Subclass | Name           | Type | Min    | Max   | Default | Unit             | Description  |
|-------------|----------|----------------|------|--------|-------|---------|------------------|--|
| Gas Gauging | State    | Update Status  | H1   | 0x00   | 0x0E  | 0x00    | —                | Bit 1:0: UPDATE1, UPDATE0<br>Update Status<br>0,0 = QMax NOT updated, Ra NOT updated<br>0,1 = QMax updated, Ra NOT updated<br>1,0 = QMax updated, Ra updated<br>1,1 = Unused<br>Bit 2: Enables—Impedance Track gauging is enabled. This bit can only be changed via the <i>Gauging()</i> command.<br>0 = Disabled<br>1 = Enabled<br>Bit 3: is_QMax_Field_Updated—QMax has updated in the field.<br>0 = Not updated<br>1 = Updated<br>Bit 7:4: Reserved |
| Gas Gauging | State    | Avg I Last Run | I2   | −32768 | 32767 | −500    | mA               | Average current last discharge cycle   |
| Gas Gauging | State    | Avg P Last Run | I2   | −32768 | 32767 | −192    | cW               | Average power last discharge cycle   |
| Gas Gauging | State    | Delta Voltage  | I2   | −32768 | 32767 | 0       | mV               | <i>Voltage()</i> delta between normal and short load spikes to optimize runtime calculation  |
| Gas Gauging | State    | Temp k         | I2   | 0      | 32767 | 200     | 0.1°C/<br>256 cW | Thermal model temperature factor   |
| Gas Gauging | State    | Temp a         | I2   | 0      | 32767 | 1000    | s                | Thermal model temperature time constant  |
| Gas Gauging | State    | Max I Last Run | I2   | −32768 | 32767 | −500    | mA               | Max current last discharge cycle   |
| Gas Gauging | State    | Max P Last Run | I2   | −32768 | 32767 | −192    | cW               | Max power last discharge cycle   |

## 8.6 Gas Gauge Modes

Resistance updates take place only in DISCHARGE mode, while OCV and QMax updates only take place in RELAX mode. Fast QMax will update at the end of discharge (see [Section 8.7.2](#) for details). Entry and exit of each mode is controlled by data flash parameters in the subclass **Gas Gauging: Current Thresholds** section. When the device is determined to be in RELAX mode and OCV is taken, the *GaugingStatus()[REST]* flag is set. In RELAX mode or DISCHARGE mode, *BatteryStatus()[DSG]* is set. [Figure 8-1](#) shows the flow.


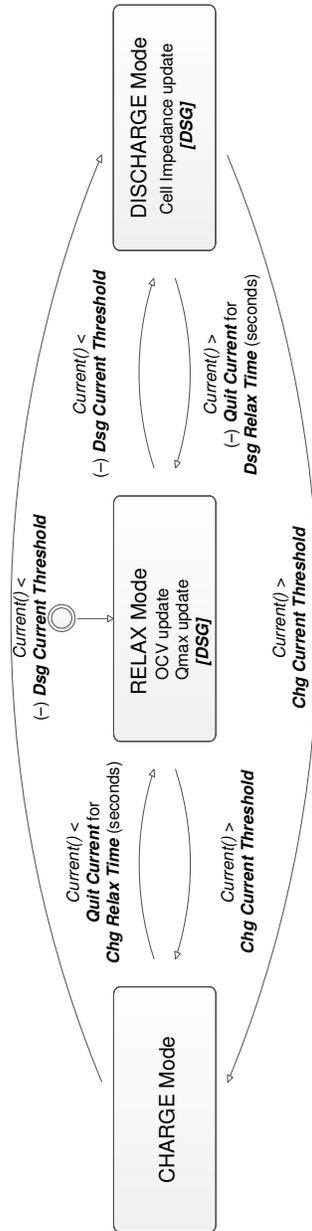


Figure 8-1. Gas Gauge Operating Modes

CHARGE mode is exited and RELAX mode is entered when *Current* goes below **Quit Current** for a period of **Chg Relax Time**. DISCHARGE mode is entered when *Current* goes below **(-)Dsg Current Threshold**. DISCHARGE mode is exited and RELAX mode is entered when *Current* goes above **(-)Quit Current** threshold for a period of **Dsg Relax Time**. CHARGE mode is entered when *Current* goes above **Chg Current Threshold**. Figure 8-2 shows an example of the operating modes.

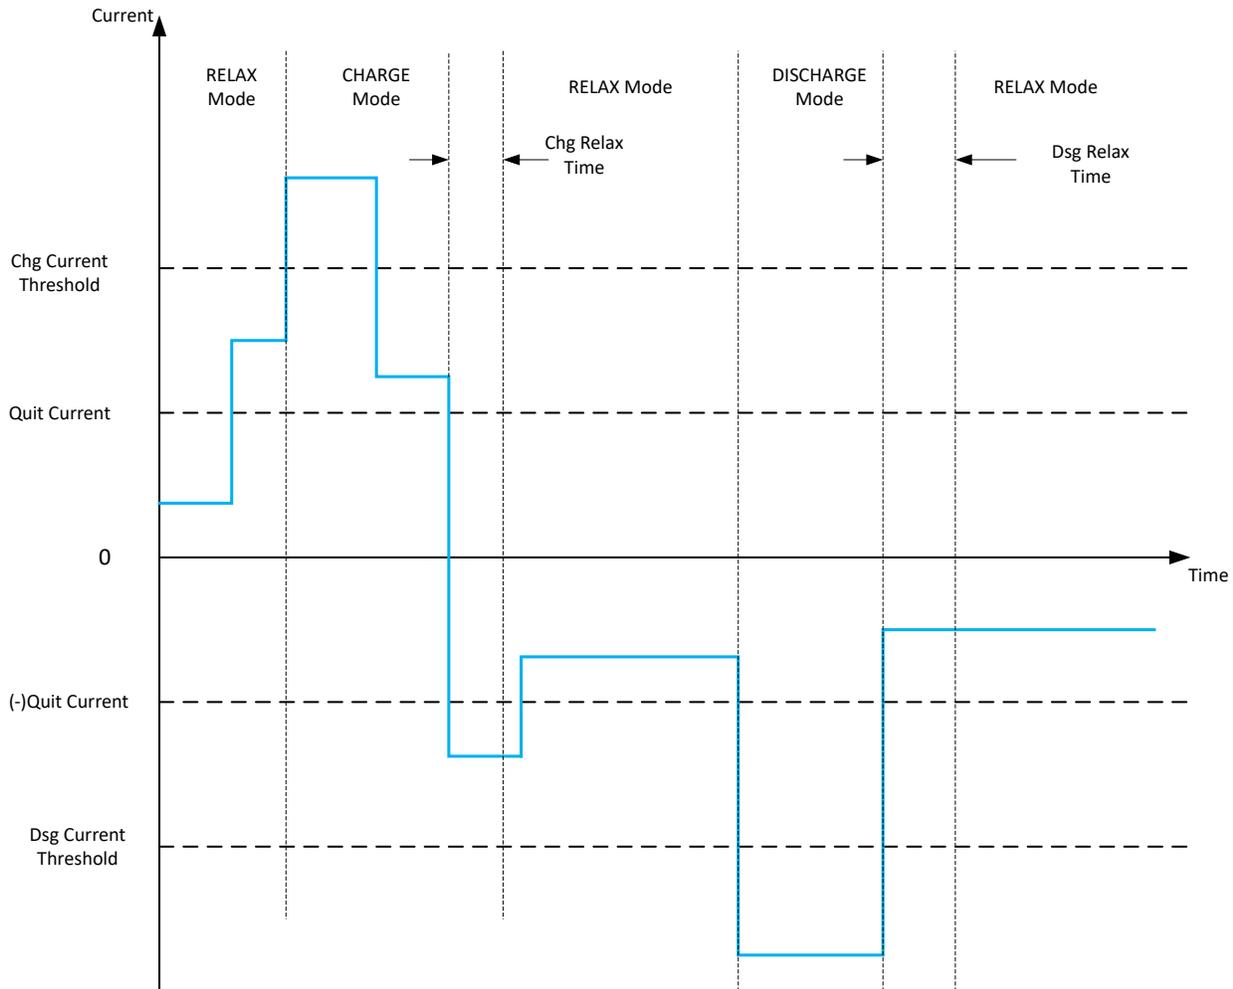

**Figure 8-2. Gas Gauge Operating Mode Example**

The configuration options for the gas gauge modes are in the following data flash.

| Class       | Subclass           | Name                  | Type | Min    | Max   | Default | Unit | Description                                |
|-------------|--------------------|-----------------------|------|--------|-------|---------|------|--|
| Gas Gauging | Current Thresholds | Dsg Current Threshold | I2   | -32768 | 32767 | 60      | mA   | DISCHARGE mode <i>Current()</i> threshold  |
| Gas Gauging | Current Thresholds | Chg Current Threshold | I2   | -32768 | 32767 | 75      | mA   | CHARGE mode <i>Current()</i> threshold     |
| Gas Gauging | Current Thresholds | Quit Current          | I2   | 0      | 32767 | 40      | mA   | $ Current()$ threshold to enter RELAX mode |
| Gas Gauging | Current Thresholds | Dsg Relax Time        | U1   | 0      | 255   | 60      | s    | DISCHARGE to RELAX timeout                 |
| Gas Gauging | Current Thresholds | Chg Relax Time        | U1   | 0      | 255   | 60      | s    | CHARGE to RELAX timeout                    |

## 8.7 QMax and Ra

The total battery capacity is found by comparing states-of-charge before and after applying the load with the amount of charge passed. When an applications load is applied, the impedance of the cell is measured by comparing the open circuit voltage (OCV) obtained from a predefined function for the present state-of-charge with the measured voltage under load.

Measurements of OCV and charge integration determine the chemical state-of-charge (SOC) and chemical capacity (QMax). Ra is the impedance of the cell at 25°C at various states-of-charge.

The BQ27Z746-R1 and BQ27Z758 acquires and updates the battery-impedance profile during normal battery usage. It uses this profile, along with the state-of-charge and QMax value, to determine *FullChargeCapacity()* and *RelativeStateOfCharge()* specifically for the configured load and present temperature. *FullChargeCapacity()* reports a capacity or energy available from a fully charged battery reduced by **Reserve Cap-mAh** or **Reserve Cap-cWh** under the configured load and present temperature until *Voltage()* reaches end-of-discharge voltage (EDV).

### 8.7.1 QMax Initial Values

The initial **QMax Cell 1** value must be taken from the cell manufacturers' data sheet multiplied by the number of parallel cells, and are also used for the **Design Capacity mAh** data flash value.

See the "Theory and Implementation of Impedance Track Battery Fuel-Gauging Algorithm" section in the *BQ20zxx Product Family Application Report (SLUA364)* for further details.

| Class       | Subclass | Name                | Type | Min | Max   | Default | Unit | Description            |
|-------------|----------|---------------------|------|-----|-------|---------|------|------------------------|
| Gas Gauging | State    | QMax Cell 1         | I2   | 0   | 32767 | 5359    | mAh  | QMax Cell 1            |
| Gas Gauging | Design   | Design Capacity mAh | I2   | 0   | 32767 | 5300    | mAh  | Design Capacity in mAh |
| Gas Gauging | Design   | Design Capacity cWh | I2   | 0   | 32767 | 2040    | cWh  | Design Capacity in cWh |
| Gas Gauging | Design   | Design Voltage      | I2   | 0   | 32767 | 3850    | mV   | Design Voltage         |

### 8.7.2 QMax Update Conditions

#### 8.7.2.1 Base Required Conditions

QMax learning/updates do not occur until the *GaugingStatus()[QEN]* flag is set by sending the *Gauging()* (0x0021) command to *AltManufacturerAccess()*.

The following conditions prevent a QMax update when an OCV is taken.

**Temperature** If *Temperature()* is outside of the range 10°C to 40°C

**Delta Capacity** If the capacity change between battery rest periods is less than 37%

**Voltage** If *Voltage()* is inside a flat voltage region. (See the *Support of Multiple Li-Ion Chemistries with Impedance Track Gas Gauges Application Report (SLUA372)* for the voltage ranges of other chemistries.) This flat region varies with different chemistries. The *GaugingStatus()[OCVFR]* flag indicates if the cell voltage is inside this flat region when *GaugingStatus()[REST]* is set. Prior to an exit from CHARGE or DISCHARGE mode, the *GaugingStatus()[QMAXDODOK]* flag can be checked to determine if the cell is in the flat zone.

**CC Error** If the estimated coulomb counter (CC) error accumulated during the time passed from the previous OCV reading exceeds 1.5% of **Design Capacity mAh**, the update is disqualified. CC error current is calculated as a function of **Coulomb Counter Deadband** and the sense resistor value. For applications with small battery capacities, CC error of 1.5% of **Design Capacity mAh** can be reached in a short period of time, especially with a small sense resistor. Therefore, a minimum time of 11 hours from the last qualified OCV is enforced before disqualification, which facilitates QMax updates in such applications. Enforcing this minimum time can increase CC error to as high as 5.5% of **Design Capacity mAh**.

### 8.7.2.2 Tracking QMax Updates

Several flags in *GaugingStatus()* are helpful to track QMax update conditions. The *[REST]* flag indicates an OCV is taken in RELAX mode. *[REST]* sets when the OCV is taken and clears when exiting RELAX mode. If the firmware has successfully made an OCV prediction, the *GaugingStatus[OCVPRED]* bit is set. The bit will clear if *GaugingStatus[REST]* gets set or when RELAX mode is exited. The *[VOK]* flag indicates the last OCV reading is qualified for the QMax update. *[VOK]* sets when exiting RELAX mode after an OCV that qualifies for QMax updates (including those that update QMax). *[VOK]* clears when a QMax update occurs, when a QMax update is disqualified based on an offset error (as described above), or upon a full reset. The *[QMAX]* flag toggles when a QMax update occurs. *ITStatus2()* and *ITStatus3()* return the QMax and DOD (the depth of discharge that corresponds to the OCV reading) data.

### 8.7.2.3 Relaxed Cell OCV

The BQ27Z746-R1 and BQ27Z758 updates the no-load full capacity (QMax) when two open circuit voltage (OCV) readings are taken. These OCV readings are taken when the battery is in RELAX mode before and after a minimum charge or discharge activity. A relaxed state is achieved if the battery voltage has a dV/dt of < 1 μV/s. Typically, it can take up to two hours after charging and five hours after discharging to ensure that the dV/dt condition is satisfied. If five hours are exceeded, a reading is taken even if the dV/dt condition was not satisfied. This relaxed cell state is indicated when the *[REST]* flag is set.

### 8.7.2.4 OCV Prediction

Another method available in the BQ27Z746-R1 and BQ27Z758 gauges is to estimate an accurate OCV reading. After a set wait time ( **OCV Pred Transient T** ) in RELAX mode, the gauge begins to accumulate voltage readings. Once **OCV Pred Measure Time** has passed, the gauge uses a fast OCV algorithm to predict the final OCV value. This fast OCV method is enabled by setting **IT Gauging Ext[FOCV\_EN]** = 1. This method provides the benefit of reduced relaxation requirements for QMax updates. If at any time the requirements for the conventional OCV method are achieved (dV/dt of < 1 μV/s requirement) after a fast OCV estimation, the device updates the OCV measurement accordingly. For a fast OCV estimate, entry into RELAX mode must be preceded by at least **OCV Pred Active T Limit** of a charge or discharge current large enough for the BQ27Z746-R1 and BQ27Z758 to exit RELAX mode.

| Class       | Subclass | Name                    | Type | Min | Max   | Default | Unit | Description   |
|-------------|----------|-------------------------|------|-----|-------|---------|------|---|
| Gas Gauging | IT Cfg   | OCV Pred Active T Limit | U2   | 100 | 65535 | 200     | s    | This is the minimum time the gauge must be in CHARGE or DISCHARGE mode before entering into RELAX mode for a fast OCV estimate. |
| Gas Gauging | IT Cfg   | OCV Pred Transient T    | U2   | 100 | 65535 | 300     | s    | This is the minimum time the gauge must be in RELAX mode before fast OCV voltage readings start to accumulate.                  |
| Gas Gauging | IT Cfg   | OCV Pred Measure Time   | U2   | 0   | 65535 | 200     | s    | This is the time in RELAX mode when fast OCV voltage readings are accumulated and fast OCV is predicted.                        |

### 8.7.2.5 Cycle Count Based QMax Degradation

For a gauging situation that never or rarely meets the condition for any of the previously described QMax updates, QMax will update and diminish based on a cycle count. The gauge tracks full discharge cycles since the last QMax update was determined via one of the above methods. When this cycle count reaches **Cycle Adjust Threshold**, QMax updates as  $QMax = QMax \times (1 - (Cycle\ Adj\ Incr \times Cycle\ Adjust\ Threshold / 10000))$ .

### 8.7.2.6

#### Note

When there is a QMax update, the discharge cycle count since the last QMax update is set to 0. The discharge cycle count since the last QMax update is incremented each time *CycleCount()* is incremented.

### 8.7.2.7 Fast QMax Update Conditions

The Fast QMax update conditions are very similar to the QMax update conditions with the following differences:

- Instead of taking two OCV readings for a QMax update, a Fast QMax update requires only one OCV reading AND
- The battery pack should discharge below 10% RSOC.

The differences in requirements enable the Fast QMax feature to have a QMax update at the end of discharge (given one OCV reading is already available and discharge < 10% RSOC) without a longer relax time after a discharge event. The temperature, delta capacity, voltage, and offset error requirements for a QMax update are still required for the Fast QMax update.

This feature is particularly useful for reducing production QMax learning cycle time or for an application that is mostly in CHARGE or DISCHARGE state with infrequent relaxation. Setting **IT Gauging Configuration[FAST\_QMAX\_LRN]** = 1 enables Fast QMax during production learning only (that is, **Update Status** = 06). When setting **IT Gauging Configuration[FAST\_QMAX\_FLD]** = 1, Fast QMax is enabled when Impedance Track is enabled and **Update Status** = 06 or 0E.

The DOD is taken for QMax at a high state-of-charge, then during discharge when at the steep portion of the voltage curve (92–96% DOD). This enables a good estimation of DOD. This DOD estimation during discharge is used to update QMax immediately instead of first needing a rest period. The actual update to QMax occurs when the discharge stops after verifying that no conditions are present to cause the QMax update to fail. The BQ27Z46-R1 and BQ27Z758 devices have an option to qualify DODEOC for QMax updates, which means it is possible to update QMax with no rest periods (by having a charge termination followed by a full discharge). Fast QMax can be enabled in either LEARN mode ( **[FAST\_QMAX\_LRN]** ) or FIELD mode ( **[FAST\_QMAX\_FLD]** ). The LEARN mode flag means Fast QMax is only enabled with **Update Status** = 06, and will be disabled when the status = 0x0E. FIELD mode means Fast QMax is enabled with **Update Status** = 06 and 0E.

### 8.7.2.8 QMax and Fast QMax Update Boundary Check

The BQ27Z46-R1 and BQ27Z758 implement a QMax and Fast QMax boundary check prior to saving the value to data flash. This improves the robustness of the QMax update in case of potential QMax corruption during the update process.

The verifications are as follows:

1. Verify that the updating QMax or Fast QMax value is within **Qmax Delta** of the present QMax (above or below). **QMax Delta** is the maximum allowed QMax change for each update, expressed as a percentage of **Design Capacity mAh** . If the updating value is outside of this range, the QMax change is capped to ( **QMax Delta** × **Design Capacity mAh** ) / 100.
2. Bound the QMax value to a maximum of **Qmax Upper Bound** . **Qmax Upper Bound** is expressed as a percentage of **Design Capacity mAh** . If the updating value is above this maximum, the QMax update is capped to ( **Qmax Upper Bound** × **Design Capacity mAh** ) / 100.
3. Ensure that QMax is greater than 0 mAh.

| Class       | Subclass | Name             | Type | Min | Max | Default | Unit | Description   |
|-------------|----------|------------------|------|-----|-----|---------|------|---|
| Gas Gauging | IT Cfg   | QMax Delta       | U1   | 3   | 100 | 5       | %    | Maximum allowed QMax change from its previous value. The QMax change will be capped by this setting if the delta from the previous QMax is larger than <b>QMax Delta</b> . <b>QMax Delta</b> is a percentage of <b>Design Capacity mAh</b> .  |
| Gas Gauging | IT Cfg   | Qmax Upper Bound | U1   | 100 | 255 | 130     | %    | Maximum QMax value over the lifetime of the pack. If the updated QMax value is larger than this setting, the updated QMax will be capped to <b>Qmax Upper Bound</b> . <b>Qmax Upper Bound</b> is a percentage of <b>Design Capacity mAh</b> . |

### 8.7.3 Ra Table Initial Values

The Ra table is part of the impedance profile that updates during discharge when gauging is enabled. Program the initial **Cell0 R\_a0...14** values by selecting the correct chemistry data during data flash configuration. A chemistry database is constantly updating, and can be downloaded from the Gas Gauge Chemistry Updater product web page (<http://www.ti.com/tool/gasgaugechem-sw>). The initial **xCell0 R\_a0...14** values are a copy of the non-x data set. Two sets of Ra tables are used alternatively when gauging is enabled to prevent wearing out the data flash.

The **Cell0 R\_a flag** and the **xCell0 R\_a flag** indicate the validity of the cell impedance table for the cell.

#### Note

Firmware updates these values: It is not recommended to change them manually.

#### 8.7.3.1 R\_a0 Table

| Class    | Subclass | Name           | Type | Min    | Max    | Default | Unit               | Description  |
|----------|----------|----------------|------|--------|--------|---------|--------------------|--|
| Ra Table | R_a0     | Cell0 R_a flag | H2   | 0x0000 | 0xFFFF | 0xFF55  | —                  | High Byte:<br>0x00: Cell Impedance and QMax updated<br>0x05: RELAX mode and QMax update in progress<br>0x55: DISCHARGE mode and cell updated<br>0xFF: Cell impedance never updated<br>Low-Byte:<br>0x00: Table not used and QMax updated<br>0x55: Table being used<br>0xFF: Table never used, no QMax or cell impedance update |
| Ra Table | R_a0     | Cell0 R_a 0    | I2   | 0      | 32767  | 159     | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 0  |
| Ra Table | R_a0     | Cell0 R_a 1    | I2   | 0      | 32767  | 58      | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 1  |
| Ra Table | R_a0     | Cell0 R_a 2    | I2   | 0      | 32767  | 65      | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 2  |
| Ra Table | R_a0     | Cell0 R_a 3    | I2   | 0      | 32767  | 79      | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 3  |
| Ra Table | R_a0     | Cell0 R_a 4    | I2   | 0      | 32767  | 90      | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 4  |
| Ra Table | R_a0     | Cell0 R_a 5    | I2   | 0      | 32767  | 63      | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 5  |
| Ra Table | R_a0     | Cell0 R_a 6    | I2   | 0      | 32767  | 76      | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 6  |
| Ra Table | R_a0     | Cell0 R_a 7    | I2   | 0      | 32767  | 82      | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 7  |
| Ra Table | R_a0     | Cell0 R_a 8    | I2   | 0      | 32767  | 82      | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 8  |
| Ra Table | R_a0     | Cell0 R_a 9    | I2   | 0      | 32767  | 87      | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 9  |
| Ra Table | R_a0     | Cell0 R_a 10   | I2   | 0      | 32767  | 87      | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 10   |
| Ra Table | R_a0     | Cell0 R_a 11   | I2   | 0      | 32767  | 101     | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 11   |
| Ra Table | R_a0     | Cell0 R_a 12   | I2   | 0      | 32767  | 118     | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 12   |
| Ra Table | R_a0     | Cell0 R_a 13   | I2   | 0      | 32767  | 191     | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 13   |
| Ra Table | R_a0     | Cell0 R_a 14   | I2   | 0      | 32767  | 282     | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 14   |

#### 8.7.3.2 R\_a0x Table

| Class    | Subclass | Name            | Type | Min    | Max    | Default | Unit               | Description  |
|----------|----------|-----------------|------|--------|--------|---------|--------------------|--|
| Ra Table | R_a0x    | xCell0 R_a flag | H2   | 0x0000 | 0xFFFF | 0xFFFF  | —                  | High-Byte:<br>0x00: Cell Impedance and QMax updated<br>0x05: RELAX mode and QMax update in progress<br>0x55: DISCHARGE mode and cell updated<br>0xFF: Cell impedance never updated.<br>Low-Byte:<br>0x00: Table is not used and QMax updated.<br>0x55: Table is being used.<br>0xFF: Table was never used and no QMax or cell impedance was updated. |
| Ra Table | R_a0x    | xCell0 R_a 0    | I2   | 0      | 32767  | 159     | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 0  |
| Ra Table | R_a0x    | xCell0 R_a 1    | I2   | 0      | 32767  | 58      | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 1  |
| Ra Table | R_a0x    | xCell0 R_a 2    | I2   | 0      | 32767  | 65      | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 2  |
| Ra Table | R_a0x    | xCell0 R_a 3    | I2   | 0      | 32767  | 79      | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 3  |
| Ra Table | R_a0x    | xCell0 R_a 4    | I2   | 0      | 32767  | 90      | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 4  |
| Ra Table | R_a0x    | xCell0 R_a 5    | I2   | 0      | 32767  | 63      | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 5  |
| Ra Table | R_a0x    | xCell0 R_a 6    | I2   | 0      | 32767  | 76      | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 6  |
| Ra Table | R_a0x    | xCell0 R_a 7    | I2   | 0      | 32767  | 82      | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 7  |
| Ra Table | R_a0x    | xCell0 R_a 8    | I2   | 0      | 32767  | 82      | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 8  |
| Ra Table | R_a0x    | xCell0 R_a 9    | I2   | 0      | 32767  | 87      | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 9  |

| Class    | Subclass | Name          | Type | Min | Max   | Default | Unit               | Description                        |
|----------|----------|---------------|------|-----|-------|---------|--------------------|------------------------------------|
| Ra Table | R_a0x    | xCell0 R_a 10 | I2   | 0   | 32767 | 87      | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 10 |
| Ra Table | R_a0x    | xCell0 R_a 11 | I2   | 0   | 32767 | 101     | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 11 |
| Ra Table | R_a0x    | xCell0 R_a 12 | I2   | 0   | 32767 | 118     | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 12 |
| Ra Table | R_a0x    | xCell0 R_a 13 | I2   | 0   | 32767 | 191     | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 13 |
| Ra Table | R_a0x    | xCell0 R_a 14 | I2   | 0   | 32767 | 282     | 2 <sup>-10</sup> Ω | Cell 0 resistance at grid point 14 |

### 8.7.4 Ra Table Update Conditions

The impedance is different across different DOD states. The cell has 15 Ra grid points representing the impedance from 0%–100% DOD. In general, the Ra table is updated during discharge. The *GaugingStatus()*[RX] flag toggles when the Ra grid point is updated. The Ra update is disabled if any of the following conditions are met. The *GaugingStatus()*[RDIS] is set to indicate the Ra update is disabled.

- During the optimization cycle, the Ra update is disabled until QMax is updated (that is, Ra is not updated if **Update Status** = 4).
- The Ra update is disabled if the charge accumulation error > 5% of **Design Capacity mAh**.
- During a discharge, a negative resistance is measured.

A valid OCV reading during RELAX mode or a Fast QMax update without an OCV read clears the [RDIS] flag.

The configuration options related to Ra table updates are in the following data flash.

| Class       | Subclass | Name                        | Type | Min | Max   | Default | Unit                   | Description   |
|-------------|----------|-----------------------------|------|-----|-------|---------|------------------------|---|
| Gas Gauging | IT Cfg   | Resistance Parameter Filter | U2   | 1   | 65535 | 65142   | —                      | This is the filter coefficient on voltage, current, and temperature for resistance updates. Reducing this filter setting can improve low temperature performance at high rates. Examining the <b>Term Voltage Delta</b> setting and <b>Fast Scale Start SOC</b> must be done before adjusting this parameter when trying to improve the RSOC performance. The following is the formula to convert the DF setting into actual filter time constant: Filter time constant = $[1/(1 - (DF\_Value / 65536))] - 1$ . |
| Gas Gauging | IT Cfg   | Max Charge Current %        | U1   | 0   | 100   | 10      | %                      | If <i>AverageCurrent()</i> changes by more than this threshold from the previous resistance measurement to the present, the present resistance measurement and Ra scale update are not used. This protects resistance measurements from voltage transients after step changes in current, especially transitions to relaxation.   |
| Gas Gauging | IT Cfg   | Resistance Update Voltage   | I2   | 0   | 32767 | 50      | mV                     | The difference between the open circuit voltage based on DOD and the measured voltage is estimated as the IR drop. If this IR drop is greater than <b>Resistance Update Voltage</b> , then the resistance calculation is allowed. This can be helpful in applications with small battery packs and large resistances that do not meet the C/10 minimum current requirement for resistance updates.  |
| Gas Gauging | IT Cfg   | Ra Filter                   | U2   | 0   | 999   | 800     | 0.1%                   | Filter value used in Ra updates that specifies what percentage of the Ra update is from the new value (100%—setting) versus the old value (setting). The recommended setting is 80% if fast resistance scaling is enabled. Otherwise, the recommended setting as the default is 50%.  |
| Gas Gauging | IT Cfg   | Ra Max Delta                | U1   | 0   | 255   | 15      | % of Design Resistance | Maximum value of allowed Ra change  |
| Gas Gauging | IT Cfg   | Design Resistance           | I2   | 1   | 32767 | 90      | mΩ                     | Cell resistance at grid point 4. Automatically updated during learning when <b>Update Status</b> is set by the gauge to 06 and 0E. To automatically update again, set <b>Update Status</b> to 04. Manually set <b>Design Resistance</b> when <b>Update Status</b> = 0E.   |

### 8.7.5 Fast Resistance Scaling

At low temperatures and very high discharge rates, using cell resistance directly from interpolating Ra table grids can lead to higher errors in RSOC. This is especially true near the end of discharge when cell resistance is changing quickly, which could cause undesirable drops to 0% RSOC. Fast resistance scaling is an algorithm that improves RSOC convergence to 0% by scaling cell resistance values from Ra table interpolation to reflect the most recent measured resistance.

The following terms are defined to understand the operation of fast resistance scaling:

- True RSOC: The true relative state-of-charge of the battery pack, as determined by the gauge. It is computed as True Rem Q / True Full Chg Q.
- Resistance voltage: A filtered cell voltage used for resistance measurements with a time constant defined by **Near EDV Ra Param Filter** (or **Resistance parameter filter** if **IT Gauging Configuration[FF\_NEAR\_EDV] = 0**).
- Average voltage: A filtered pack voltage with the same time constant as *AverageCurrent()*.

#### 8.7.5.1 Calculation of Resistance Scale

When enabled with **IT Gauging Configuration[RSOC\_CONV] = 1**, fast resistance scaling becomes active once one of the following is true:

- True RSOC  $\leq$  **Fast Scale Start SOC** OR
- Resistance voltage  $<$  **Term Voltage + Term Voltage Delta**.

For most applications, the default values of **Term Voltage Delta** and **Fast Scale Start SOC** are recommended. It is typically best to keep **Term Voltage + Term Voltage Delta** around 3.2 V–3.5 V, the knee of the discharge curve, for most battery applications.

Once active, every 30 seconds the algorithm calculates a new cell resistance scale as  $(R_{new} / R_{old}) \times 1000$ , where  $R_{new}$  is the most recent measured cell resistance and  $R_{old}$  is the interpolated cell resistance at the present DOD. The raw scale is reported on Cell 1 RaScale. After a scale is calculated, an IT simulation is triggered to utilize the new resistance information. In addition, the scale is used for ambient temperature prediction (if enabled).

As a safeguard, the scale is limited to a minimum of 200 and a maximum of 5000 when applied, but Cell 1 RaScale maintains the raw scale. For clarity, a scale of 200 corresponds to 0.2 (reducing cell resistance) and 5000 corresponds to 5.0 (increasing cell resistance).

#### 8.7.5.2 Negative Resistance Scale

If a negative scale is calculated, it usually indicates significant error in QMax or an incorrect DOD0, which could be from system loading during initialization. When this occurs, Cell 1 RaScale resets to 1000 and *GaugingStatus()[NSFM]* sets to 1. The gauge attempts to correct the error in DOD by adjusting DOD0 such that  $DOD0 + (DOD0 \text{ Passed } Q / Q_{Max})$  equals the DOD computed from voltage, current, and temperature used for resistance.

#### 8.7.5.3 Reset of Resistance Scale

Cell 1 RaScale resets to 1000 under the following conditions:

- Initialization of the device
- IT is enabled (*GaugingStatus()[QEN]* changes to 1).
- In CHARGE mode when average voltage  $>$  **Term Voltage + Term V Delta** AND True RSOC  $>$  **Fast Scale Start SOC**.
- In RELAX mode when an OCV reading occurs with *Temperature()*  $>$  15.0°C.
- In DISCHARGE mode when a negative resistance scale is calculated.

#### 8.7.5.4 Application of Resistance Scale

The scale can be applied in two ways:

- If **IT Gauging Configuration[DOD\_RSCALE\_EN] = 0**, the resistance scale is applied across all DODs.

- If **IT Gauging Configuration[DOD\_RSCALE\_EN]** = 1, the resistance scale is only applied to DODs greater than or equal to the DOD at which it was calculated.

Setting **IT Gauging Configuration[DOD\_RSCALE\_EN]** = 1 is recommended because it reduces the sensitivity of FCC to large changes in the resistance scale.

### 8.7.5.5 Fast Resistance Scaling Configuration

| Class       | Subclass | Name                     | Type | Min | Max   | Default | Unit | Description  |
|-------------|----------|--------------------------|------|-----|-------|---------|------|--|
| Gas Gauging | IT Cfg   | Term Voltage Delta       | I2   | 0   | 32767 | 200     | mV   | Controls when fast resistance scaling becomes active when <b>[RSOC_CONV]</b> = 1. If <b>Term Voltage</b> is increased, <b>Term Voltage Delta</b> should be decreased to keep <b>Term Voltage + Term Voltage Delta</b> around 3.2 V–3.5 V, the knee of the discharge curve. |
| Gas Gauging | IT Cfg   | Fast Scale Start SOC     | U1   | 0   | 100   | 10      | %    | Controls the RSOC % that fast resistance scaling becomes active when <b>[RSOC_CONV]</b> = 1. The default value is recommended, however, it may be appropriate to adjust this value in certain applications to be around the knee of the discharge curve.                   |
| Gas Gauging | IT Cfg   | Near EDV Ra Param Filter | U2   | 1   | 65535 | 62184   | —    | Ra filter used in the fast resistance scaling region if <b>[FF_NEAR_EDV]</b> = 1. The default value should be used.  |

## 8.8 FullChargeCapacity (FCC), RemainingCapacity (RemCap), and RelativeStateOfCharge (RSOC)

The Impedance Track algorithm applies QMax, impedance, temperature, voltage, and current data to predict the runtime *FullChargeCapacity()*, *RemainingCapacity()*, and *RelativeStateOfCharge()*. These values are updated if any of the following conditions are met, reflecting the battery capacity in real time:

- QMax update occurs
- Ra update occurs
- At onset of charge and discharge
- Valid charge termination
- Every 1 hour in RELAX mode after an OCV has been taken
- If temperature changes more than 5°C
- Every second when current is measured and passed charge is accumulated

### 8.8.1 Smoothing Engine

The gauge provides an engine that ensures *FullChargeCapacity()*, *RemainingCapacity()*, and *RelativeStateOfCharge()* change smoothly, which can be desirable in certain system applications. This smoothing engine is enabled when **IT Gauging Configuration[SMOOTH]** = 1. The true and smooth versions of FCC, RemCap, and RSOC are always available, but **IT Gauging Configuration[SMOOTH]** selects which version is reported on the standard commands.

When the smoothing engine is enabled, there are specific cases that can be handled differently based on user preference.

#### 8.8.1.1 Smoothing to 0% in DISCHARGE Mode

When **IT Gauging Configuration[DSG\_0\_SMOOTH\_OK]** = 1, smoothing to 0% in DISCHARGE mode is enabled. For preventing jumps to 0% in DISCHARGE mode, two data flash parameters are used: **Term Smooth Start Cell V Delta** and **Term Smooth Time**. If *Voltage()* is less than or equal to **Term Voltage + Term Smooth Start Cell V Delta** while in DISCHARGE mode, time-based smoothing to 0% is initiated. *RemainingCapacity()* smoothly converges to 0 mAh over the next **Term Smooth Time** seconds. Time-based smoothing to 0% will continue unless CHARGE mode is entered.

**Term Smooth Final Cell V Delta** makes sure that the gauge reports 0% before voltage drops too low. If *Voltage()* is less than or equal to **Term Voltage – Term Smooth Final Cell V Delta** while in DISCHARGE mode, *RemainingCapacity()* is forced to 0 mAh, even if time-based smoothing to 0% was active.

### Note

**Term Smooth Final Cell V Delta** can be disabled by setting equal to **Term Voltage** , but is typically expected to be low enough to enable the system to shut down properly (without brownout).

| Class       | Subclass  | Name                           | Type | Min | Max   | Default | Unit | Description  |
|-------------|-----------|--------------------------------|------|-----|-------|---------|------|--|
| Gas Gauging | Smoothing | Term Smooth Start Cell V Delta | I2   | 0   | 32767 | 150     | mV   | If <b>[DSG_0_SMOOTH_OK]</b> = 1, then during DISCHARGE mode and once <b>Voltage()</b> is less than or equal to <b>Term Voltage + Term Smooth Start Cell V Delta</b> , time-based smoothing to 0% is initiated. This will smooth <b>RemainingCapacity()</b> to 0 mAh over the next <b>Term Smooth Time</b> seconds. |
| Gas Gauging | Smoothing | Term Smooth Final Cell V Delta | I2   | 0   | 32767 | 100     | mV   | If <b>[DSG_0_SMOOTH_OK]</b> = 1, then during DISCHARGE mode and once <b>Voltage()</b> is less than or equal to <b>Term Voltage + Term Smooth Final Cell V Delta</b> , <b>RemainingCapacity()</b> is forced to 0 mAh.   |
| Gas Gauging | Smoothing | Term Smooth Time               | U1   | 1   | 32767 | 20      | s    | If <b>[DSG_0_SMOOTH_OK]</b> = 1, then during DISCHARGE mode and once <b>Voltage()</b> is less than or equal to <b>Term Voltage + Term Smooth Start Cell V Delta</b> , time-based smoothing to 0% is initiated. This will smooth <b>RemainingCapacity()</b> to 0 mAh over the next <b>Term Smooth Time</b> seconds. |

#### 8.8.1.2 Smoothing to 100% in CHARGE Mode

When **IT Gauging Configuration[CHG\_100\_SMOOTH\_OK]** = 1, smoothing to 100% in CHARGE mode is enabled. For preventing jumps to 100% in CHARGE mode, this feature uses the valid charge termination logic to predict when charging will complete. Refer to [Valid Charge Termination](#) for the full set of details. The valid charge termination logic requires two consecutive 40-s windows that meet all taper conditions. After the first 40-s window is satisfied, time-based smoothing to 100% will be initiated. **RemainingCapacity()** smoothly converges to **FullChargeCapacity()** over the next 40-s window.

#### 8.8.1.3 Smoothing in RELAX Mode

**IT Gauging Configuration[RELAX\_JUMP\_OK]** and **IT Gauging Configuration[RELAX\_SMOOTH\_OK]** determine the behavior of **RelativeStateOfCharge()** during RELAX mode.

When **IT Gauging Configuration[RELAX\_JUMP\_OK]** = 1, **RelativeStateOfCharge()** is allowed to jump during RELAX mode. When **IT Gauging Configuration[RELAX\_JUMP\_OK]** = 0, **RelativeStateOfCharge()** holds constant during RELAX mode and any RSOC jump will be passed onto CHARGE and DISCHARGE mode.

When **IT Gauging Configuration[RELAX\_SMOOTH\_OK]** = 1, **RelativeStateOfCharge()** is NOT allowed to jump during RELAX mode. Any RSOC jumps during RELAX mode are smoothed out over a period of **Smooth Relax Time** . If **Smooth Relax Time** is not reached, the remaining portion of the RSOC jump will be passed onto CHARGE and DISCHARGE mode.

If both bits are set to 1, **IT Gauging Configuration[RELAX\_JUMP\_OK]** takes higher priority and **RelativeStateOfCharge()** is allowed to jump during RELAX mode.

| Class       | Subclass  | Name              | Type | Min | Max   | Default | Unit | Description   |
|-------------|-----------|-------------------|------|-----|-------|---------|------|---|
| Gas Gauging | Smoothing | Smooth Relax Time | I2   | 1   | 32767 | 1000    | s    | If <b>[RELAX_SMOOTH_OK]</b> = 1, the delta remaining capacity and full charge capacity are smoothed over this set period of time. It is recommended to use the default setting. |

## 8.9 Impedance Track (IT) Configuration Options

The BQ27Z746-R1 and the BQ27Z758 provide several Impedance Track configuration options to fine-tune the gauging performance. These configurations can be turned on or off through the corresponding flags in **Settings** : **IT Gauging Configuration** and **I2C Gauging Configuration** .

**[LOCK0]** : After a discharge event, cell voltage usually recovers to a slightly higher voltage during RELAX mode. A new OCV reading during this time can result in a slightly higher state-of-charge. This flag provides an option to keep *RemainingCapacity()* and *RelativeStateOfCharge()* locked during relaxation after 0% and *GaugingStatus()* *[FD]* are reached during discharge. The lock is removed once CHARGE mode is entered.

**[1PERCENT\_HOLD]** : When enabled, holds the RSOC value at 1% until **Term Voltage** has been reached during discharge.

**[RSOC\_HOLD]** : An IT simulation will run at the onset of discharge. If charge terminates at a low temperature and discharge occurs at a higher temperature, the difference in temperature could cause a small rise of RSOC for a short period of time at the beginning of discharge. This flag option prevents RSOC rises during discharge. RSOC will be held until the calculated value falls below the actual state.

**[RSOCL]** : When set, RSOC will be held to 99% until charge termination is detected.

**[RFACTSTEP]** : The gauge keeps track of the change in Ra over 15 updates. It is limited to 1.5 max. During an Ra update, if  $(\text{new Ra})/(\text{old Ra}) > 1.5$  or  $< 0.5$ , the gauge will take different actions based on the setting of this flag.

If the flag is set to 1 (default), the gauge allows Ra to update once using the max factor of 1.5 or min factor of 0.5, then disables the Ra update. If this flag is set to 0, the gauge will not update Ra, but will disable it. It is recommended to keep the default setting. In both cases, *GaugingStatus()**[RDIS]* is set.

**[OCVFR]** : An OCV reading is taken when a dV/dt condition is met. This is not the case if charging stops within or below the flat voltage region, which varies with ChemID. The change of cell voltage in this region is very small; therefore, the same voltage error can correspond to a larger DOD error. This flag is set by default. The device waits 48 hours before taking an OCV reading if charging stops prematurely. A short discharge will not cancel this 48-hour wait. An OCV reading is taken when the dV/dt condition is met. To reduce test time during evaluation, it is helpful to remove the 48-hour wait-time requirement.

**[DOD0EW]** : DOD0 readings have an associated error based on the elapsed time since the reading, the conditions at the time of the reading (reset, charge termination, and so on), the temperature, and the amount of relax time at the time of the reading, among others. This flag provides an option to take into account both the previous and new calculated DOD0, which are weighted according to their respective accuracies. This can result in improved accuracy and in reduction of RSOC jumps after relaxation.

**[LFP\_RELAX]** : When enabled, this bit activates an additional functionality only if the chemistry ID programmed indicates a LiFePO<sub>4</sub> chemistry (ID 0x4xxx or 0x04xx). Having this bit enabled with a non-LiFePO<sub>4</sub> cell type does not introduce any behavioral modifications.

LiFePO<sub>4</sub> has a unique, slow configuration relaxation near full charge. The slow decaying voltage causes RSOC to continue to drop every 5 hours. Depending on the full charge taper current, the fully settled voltage could be close to or even below **FlatVoltMax** in some cases. If **[LFP\_RELAX]** is enabled and the LiFePO<sub>4</sub> chemID is selected, **[OCVFR]** will be set on exit from CHARGE mode regardless of voltage or state of charge. For **[OCVFR]** to clear, a relaxation of 48 hours or non-trivial discharge must occur. A non-trivial discharge is indicated when the cell voltage in relaxation falls below **FlatVoltMin**. The QMax update is unlikely disabled because DOD will not update due to **[OCVFR]** forcing the 48-hour timeout, and voltage likely relaxing into the flat zone. Therefore, the QMax update takes an alternative approach: Once full charge occurs (**[FC]** bit set), DOD0 = Dod\_at\_EOC is automatically assigned and valid for a QMax update. **[VOK]** is set if there is no QMax update. If QMax is updated, **[VOK]** is cleared. The DOD error, as a result of this action, is zero or negligible because in the LiFePO<sub>4</sub> table, the OCV voltage corresponding to DOD = 0 is much lower. **[RSOC\_CONV]** : This function is also called fast resistance scaling. It is an option to address the convergence of RSOC to 0% at a low temperature and a very high rate of discharge. See [Fast Resistance Scaling](#) for more details.

**[FAST\_QMAX\_LRN]** and **[FAST\_QMAX\_FLD]** : The first flag enables Fast QMax during the learning cycle when **Update Status** = 06. The second bit enables Fast QMax in the field when **Update Status** ≥ 06. See [Fast QMax Update Conditions](#) for more details on Fast QMax.

**[FF\_NEAR\_EDV]**: Fast filter near EDV. If this flag is set to 1, the gauge applies an alternative filter, **Near EDV Ra Param Filter**, for an Ra update in the fast scaling region (starting around 10% RSOC). This flag should be kept to 1 as a default. If this flag is set to 0, the gauge uses the regular Ra filter, **Resistance Parameter Filter**. Both DF filters should not be changed from the default value.

**[SMOOTH]**: If this bit is set to 1, the smoothing engine is enabled. For more details, see [Smoothing Engine](#), which covers **[RELAX\_JUMP\_OK]**, **[RELAX\_SMOOTH\_OK]**, **[CHG\_100\_SMOOTH\_OK]**, and **[DSG\_0\_SMOOTH\_OK]** as further configuration to the smoothing engine.

**[CSYNC]**: If this bit is set to 1, the gauge synchronizes *RemainingCapacity()* to *FullChargeCapacity()* at valid charge termination.

**[CCT]**: This bit provides an option to use *FullChargeCapacity()* (when **[CCT]** = 1) or *DesignCapacity()* (when **[CCT]** = 0) for cycle count threshold calculation. Regardless of whether *FullChargeCapacity()* or *DesignCapacity()* is selected for cycle count threshold calculation, the minimum cycle count threshold is always 10% of *DesignCapacity()*. This helps to avoid any erroneous cycle count increment caused by an extremely low *FullChargeCapacity()* or improper settings of **Cycle Count Percentage**.

**[TAMB\_SYNC\_SIM]**: If this bit is set to 1, the gauge performs an IT simulation after the *TambientSync()* command is received to use the newly recorded ambient temperature. This IT simulation could produce a change in *RelativeStateOfCharge()* if **[SMOOTH]** = 0. If **[SMOOTH]** = 1, *RelativeStateOfCharge()* behaves according to the configuration of the smoothing engine.

**[AMB\_PRED]**: If this bit is set to 1, ambient temperature can be predicted during DISCHARGE and CHARGE modes. This can be useful in system applications that experience large increases in ambient temperature during discharges and/or charges without entry to RELAX mode. Ambient temperature prediction is triggered after being in DISCHARGE/CHARGE for **Predict Ambient Time**, when the system is assumed to be at thermal equilibrium.

**[THERM\_IV]**: If this bit is set to 1, battery heat is held constant near the end of an IT simulation. This helps prevent overestimation of temperature towards the end of discharge, and applies to SOH simulations.

**[THERM\_SAT]**: If this bit is set to 1, IT simulations occurring near termination in a sustained discharge (when thermal saturation is reached) assume simulated temperature to be equal to measured cell temperature. This behavior does NOT apply to SOH simulations.

**[FOCV\_EN]**: If this bit is set to 1, the gauge enables a fast OCV algorithm to predict the final OCV value, which reduces relaxation requirements for QMax updates.

| Class    | Subclass      | Name                      | Type | Min  | Max  | Default | Description  |
|----------|---------------|---------------------------|------|------|------|---------|--|
| Settings | Configuration | I2C Gauging Configuration | H1   | 0x00 | 0x3F | 0x20    | Bit 0: RSOC— <i>RelativeStateOfCharge()</i> and <i>RemainingCapacity()</i> behavior at end of charge<br>0 = Actual value shown (default)<br>1 = Held at 99% until valid charge termination. On entering valid charge termination, updates to 100%<br>Bit 1: RSOC_HOLD—Prevents RSOC from increasing during discharge<br>0 = RSOC is not limited.<br>1 = RSOC is not allowed to increase during discharge.<br>Bit 2: LOCK0—Keeps <i>RemainingCapacity()</i> and <i>RelativeStateOfCharge()</i> from jumping back during relaxation after 0 was reached during discharge<br>0 = Disabled (default)<br>1 = Enabled<br>Bit 3: RSVD<br>BIT 4: 1PERCENT_HOLD<br>0 = Disabled<br>1 = Enabled<br>Bit 5: TAMB_SYNC_SIM—Ambient Temperature Synchronization Simulation<br>0 = Disabled<br>1 = Enabled (default)<br>Bit 7:6: Reserved |

| Class    | Subclass      | Name                     | Type | Min    | Max    | Default | Description  |
|----------|---------------|--------------------------|------|--------|--------|---------|--|
| Settings | Configuration | IT Gauging Configuration | H2   | 0x0000 | 0xFFFF | 0xD5FE  | Bit 0: CCT—Cycle count threshold<br>0 = Use <i>DesignCapacity()</i> for cycle count threshold (default)<br>1 = Use <i>FullChargeCapacity()</i> for cycle count threshold<br>Bit 1: CSYNC—Syncs <i>RemainingCapacity()</i> with <i>FullChargeCapacity()</i> at valid charge termination<br>0 = Not synchronized<br>1 = Synchronized (default)<br>Bit 2: RFACTSTEP—Ra factor step<br>0 = Disabled<br>1 = Enabled (default)<br>Bit 3: OCVFR—Open circuit voltage flat region<br>0 = Disabled<br>1 = Enabled (default)<br>Bit 4: DOD0EW—DOD0 error weighting<br>0 = Disabled<br>1 = Enabled (default)<br>Bit 5: RSVD—Do not use.<br>Bit 6: RSOC_CONV—RSOC convergence (fast resistance scaling)<br>0 = Disabled<br>1 = Enabled (default)<br>Bit 7: FAST_QMAX_LRN—Fast QMax LEARN mode<br>0 = Disabled<br>1 = Enabled (default)<br>Bit 8: FAST_QMAX_FLD—Fast QMax FIELD mode<br>0 = Disabled<br>1 = Enabled (default)<br>Bit 9: RSVD<br>Bit 10: FF_NEAR_EDV—Fast filter near EDV<br>0 = Disabled<br>1 = Enabled (default)<br>Bit 11: RELAX_JUMP_OK—Enables RSOC Jumps in RELAX mode<br>0 = Disabled (default)<br>1 = Enabled<br>Bit 12: SMOOTH—Smoothing engine<br>0 = Disabled<br>1 = Enabled (default)<br>Bit 13: LFP_RELAX—Lithium iron phosphate relax<br>0 = Disabled<br>1 = Enabled<br>Bit 14: RELAX_SMOOTH_OK—Smoothing in RELAX<br>0 = Disabled<br>1 = Enabled (default)<br>Bit 15: DOD_RSCALE_EN—Configures which DOD the new RaScale is to be applied.<br>0 = The RaScale is applied to all DODs during IT simulations.<br>1 = The RaScale is only applied to DODs higher than the DOD where the RaScale is calculated. (default) |
| Settings | Configuration | IT Gauging Ext           | H2   | 0x0000 | 0x003F | 0x003B  | Bit 0: DSG_0_SMOOTH_OK—Smoothing to 0%<br>0 = Disabled<br>1 = Enabled (default)<br>Bit 1: CHG_100_SMOOTH_OK—Smoothing to 100%<br>0 = Disabled<br>1 = Enabled (default)<br>Bit 2: AMB_PRED—Ambient temperature prediction<br>0 = Disabled (default)<br>1 = Enabled<br>Bit 3: THERM_IV—Thermal model IV heat<br>0 = Disabled<br>1 = Enabled (default)<br>Bit 4: THERM_SAT—Thermal model saturation<br>0 = Disabled<br>1 = Enabled (default)<br>Bit 5: FOCV_EN—Enables fast OCV feature<br>0 = Disabled<br>1 = Enabled (default)<br>Bits 15:6: RSVD   |

## 8.10 State-Of-Health (SOH)

The BQ27Z746-R1 and BQ27Z758 devices implement an updated version of the battery state-of-health (SOH), which is reported by the *StateOfHealth()* command. In the previous version (in the BQ27Z746 device), the *StateOfHealth()* was calculated using a special 25°C version of *FullChargeCapacity()* as a fraction of **Design Capacity**. However, this calculation still included some parameters that were updated during operation based on the loading and use of the battery, separate from the battery status itself. This could lead to varying calculations of state-of-health for the same battery, depending on how the battery was used in the system. The updated version of *StateOfHealth()* addresses this by calculating a special *FCC\_SOH()*, with the initial ambient temperature fixed at 25°C, using a current load specified by **SOH Load Rate**, and using the thermal model parameters, **SOH Temp a** and **SOH Temp k**.

The **SOH Load Rate** can be set to the typical current of the application, and it is specified in units of hour-rate (that is, **Design Capacity / SOH Load Rate** will be the current used for the SOH simulation). The **SOH Temp a** and **SOH Temp k** can be set to expected values for the system during operation. These data flash settings are used only for the *StateOfHealth()* calculation. The SOH full charge capacity is updated whenever QMax or the impedance table is updated. Because this implementation removes the variation of load current, temperature, and learned parameters, it is a better representation of the battery's state-of-health. The SOH full charge capacity is available on the MAC command *FCC\_SOH()*.

The configuration options for state-of-health (SOH) are in the following data flash.

| Class                     | Subclass          | Name              | Type | Min    | Max   | Default | Unit         | Description  |
|---------------------------|-------------------|-------------------|------|--------|-------|---------|--------------|--|
| Gas Gauging               | SoH               | SOH Load Rate     | U1   | 1      | 255   | 50      | 0.1 Hr rate  | Rate used in SOH simulation  |
| Advanced Charge Algorithm | Rec Temp Charging | Voltage           | I2   | 0      | 32767 | 4400    | mV           | Constant value for charge terminate voltage for the SOH calculation only |
| Gas Gauging               | State             | SOH Temp k        | I2   | 0      | 32767 | 1       | 0.1°C/256 cW | Thermal model temperature factor for SOH                                 |
| Gas Gauging               | State             | SOH Temp a        | I2   | 0      | 32767 | 1000    | s            | Thermal model temperature factor for SOH                                 |
| Gas Gauging               | It Cfg            | Min Delta Voltage | I2   | -32768 | 32767 | 0       | mV           | Constant added to terminate voltage for the SOH simulation               |

## 8.11 Battery Trip Point (BTP)

Used with WIN8 OS and later, the battery trip point (BTP) feature indicates when the RSOC of a battery pack has depleted to a certain value set in a DF register.

The BTP feature enables a host to program two capacity- or RSOC-based thresholds that govern triggering a BTP interrupt on the BTP\_INT pin, and setting or clearing of the *OperationStatus()[BTP\_INT]* on the basis of *RemainingCapacity()* or *RelativeStateOfCharge()*. The source of programmed thresholds (capacity or RSOC) is selected via **Settings.Configuration.IO Config[BTP\_SRC]**. The interrupt is enabled or disabled via **Settings.Configuration.IO Config[BTP\_EN]**. Similarly, the polarity of the interrupt is configurable based on the value set in **Settings.Configuration.IO Config[INT\_POL]**.

- *OperationStatus()[BTP\_INT]* is set when:
  - Current > 0 and RemCap/RSOC > “clear” threshold as set by *BTP Chg Set()*. This threshold is initialized at reset from **Settings.BTP.Init Charge Set** or **Settings.BTP.Init Charge Set RSOC**.
  - Current ≤ 0 and RemCap < “set” threshold as set by *BTP Dsg Set()*. This threshold is initialized at reset from **Settings.BTP.Init Discharge Set** or **Settings.BTP.Init Discharge Set RSOC**.
- When *OperationStatus()[BTP\_INT]* is set and if **Settings.Configuration.IO Config[BTP\_EN]** is set, then the BTP\_INT pin output is asserted.
  - If **Settings.Configuration.IO Config[INT\_POL]** is set, it will assert high; otherwise, it will assert low.
- When either *BTPDischargeSet()* or *BTPChargeSet()* commands are received, *OperationStatus()[BTP\_INT]* will clear and the pin will be deasserted. The new threshold is written to either *BTPDischargeSet()* or *BTPChargeSet()*.
- At reset, the pin is set to the deasserted state.
  - If **[INT\_POL]** is changed, one of the BTP commands must be reset or sent to “clear” the state.

| Class    | Subclass | Name                    | Type | Min | Max   | Default | Unit | Description   |
|----------|----------|-------------------------|------|-----|-------|---------|------|---|
| Settings | BTP      | Init Discharge Set      | I2   | 0   | 32767 | 150     | mAh  | Initial value for <i>BTPDischargeSet()</i> , for <b>Settings.Configuration.IO Config[BTP_SRC] = 0</b> |
| Settings | BTP      | Init Charge Set         | I2   | 0   | 32767 | 175     | mAh  | Initial value for <i>BTPChargeSet()</i> , for <b>Settings.Configuration.IO Config[BTP_SRC] = 0</b>    |
| Settings | BTP      | Init Discharge Set RSOC | U1   | 0   | 255   | 10      | %    | Initial value for <i>BTPDischargeSet()</i> , for <b>Settings.Configuration.IO Config[BTP_SRC] = 1</b> |

| Class    | Subclass | Name                    | Type | Min | Max | Default | Unit | Description  |
|----------|----------|-------------------------|------|-----|-----|---------|------|--|
| Settings | BTP      | Init Charge Set<br>RSOC | U1   | 0   | 255 | 15      | mAh  | Initial value for <i>BTPChargeSet()</i> , for <b>Settings.Configuration.IO Config[BTP_SRC] = 1</b> |



## 9.1 Description

The device has the capability to log events over the life of the battery, which is useful for analysis. Lifetime data collection is enabled by setting **ManufacturingStatus[LF\_EN]** = 1. The data is collected in RAM and only written to data flash under the following conditions to avoid wear out of the data flash:

- Every 10 hours if RAM content is different from data flash.
- A reset counter increments. The lifetime RAM data is reset; therefore, only the reset counters are updated to data flash.
- In permanent fail, before data flash updates are disabled
- Before scheduled shutdown.
- Before low voltage shutdown and the voltage is above **Valid Update Voltage** .
- A safety event counter increments and **Lifetimes Configuration[SAFETY\_SAVE]** = 1.

The lifetime data stops collecting under the following conditions:

- After permanent fail
- Lifetime data collection is disabled by setting **ManufacturingStatus[LF\_EN]** = 0.

When the gauge is unsealed, the following **ManufacturingStatus()** can be used for testing lifetime data.

- **LifetimeDataReset()** can reset the lifetime data (RAM and data flash) to the default values.
- **LifetimeDataFlush()** can force an update of the RAM lifetime data to data flash.
- **LifetimeDataSpeedupMode()** can increase the rate the lifetime data is incremented.

The following lifetime data is collected when **ManufacturingStatus[LF\_EN]** = 1.

- Voltage
  - Maximum or minimum cell voltage
- Current
  - Maximum charge/discharge current
  - Maximum average discharge current
  - Maximum average discharge power
- Safety events that trigger **SafetyStatus()**
  - Number of safety events
  - **Cycle Count** at last safety events
- Charging events
  - Number of valid charge terminations (That is, the number of times [VCT] is set.)
  - **Cycle Count** at Last Valid Charge Termination
- Discharging events
  - Number of full discharges (That is, the number of times [FD] is set.)
  - **Cycle Count** at last Full Discharge
- Gauging events
  - Number of QMax updates
  - **Cycle Count** at Last QMax update
  - Number of RA updates and disable
  - **Cycle Count** at Last RA update and disable
- Power events

- Number of full resets, partial resets, and watchdog resets
- Number of shutdowns
- Temperature
  - Max/Min Cell Temperature
  - Max/Min Int Temperature Sensor
- Time (This data is stored with a resolution of 1 second up to over 100 years.)
  - Total runtime
  - Total time spent charging
  - Total time spent discharging
  - Time spent in different *RelativeStateOfCharge() – Temperature()* ranges
    - Eight *RelativeStateOfCharge()* ranges for each of the seven charge temperature ranges
    - 56 *RelativeStateOfCharge() – Temperature()* runtime values

**Table 9-1. Time Spent in *RelativeStateOfCharge() – Temperature()* Ranges**

|                              | RSOC ≥ 95%<br>[default] | RSOC ≥ 90% | RSOC ≥ 80% | RSOC ≥ 60% | RSOC ≥ 40% | RSOC ≥ 20% | RSOC ≥ 10% | RSOC ≥ 0% |
|------------------------------|-------------------------|------------|------------|------------|------------|------------|------------|-----------|
| Under Temperature            |                         |            |            |            |            |            |            |           |
| Low Temperature              |                         |            |            |            |            |            |            |           |
| Standard Temperature<br>Low  |                         |            |            |            |            |            |            |           |
| Recommended<br>Temperature   |                         |            |            |            |            |            |            |           |
| Standard Temperature<br>High |                         |            |            |            |            |            |            |           |
| High Temperature             |                         |            |            |            |            |            |            |           |
| Over Temperature             |                         |            |            |            |            |            |            |           |

## 9.2 Reset

In addition to the *ManufacturerAccess() 0x0028 Lifetime Data Reset*, **Lifetime Data Collection** can also be reset when **[SEALED\_RESET]** is set using a two-word MAC sequence available in SEALED and UNSEALED modes. The two-word key is programmable using *ManufacturerAccess() 0x0035 Security Keys*. Both keys must be sent within 4 seconds of each other for **Lifetimes** data to reset.



## 10.1 Description

The device can be enabled to generate an interrupt to the host processor on the INT pin under various voltage, temperature, and RSOC conditions. The **GPO Pin Config[HOSTINT\_EN]** bit is used to enable or disable the interrupt function, and its polarity can be set to active high (**Host Intr Config[ACTIVEHI\_EN] = 1**) or active low (**Host Intr Config[ACTIVEHI\_EN] = 0**). The **Host Intr Config[INT\_TYPE]** bit is used to select if interrupt is a pulse on the INT pin with an approximate width of 1 ms (**Host Intr Config[INT\_TYPE] = 1**) or level-based interrupt (**Host Intr Config[INT\_TYPE] = 0**). The **Host Intr Config[PUSHPULL\_EN]** bit is to select if INT output is open-drain (**Host Intr Config[PUSHPULL\_EN] = 0**) or push-pull (**Host Intr Config[PUSHPULL\_EN] = 1**).

## 10.2 Voltage and Temperature Interrupts

The device can be enabled to generate an interrupt on the INT pin to indicate an overvoltage, undervoltage, overtemperature, or undertemperature condition. The thresholds to set and clear each event are configurable through data flash for the initial values, and later by writing to the standard commands referenced below:

- The voltage for the overvoltage set interrupt threshold is *VoltHiSetThreshold()*.
- The voltage for the overvoltage clear interrupt threshold is *VoltHiClearThreshold()*.
- The voltage for the undervoltage set interrupt threshold is *VoltLoSetThreshold()*.
- The voltage for the undervoltage clear interrupt threshold is *VoltLoClearThreshold()*.
- The temperature for the overtemperature set interrupt threshold is *TempHiSetThreshold()*.
- The temperature for the overtemperature clear interrupt threshold is *TempHiClearThreshold()*.
- The temperature for the undertemperature set interrupt threshold is *TempLoSetThreshold()*.
- The temperature for the undertemperature clear interrupt threshold is *TempLoClearThreshold()*.

The interrupts are indicated in *InterruptStatus()*.

Table 10-1 summarizes the interrupt flags, which are [VOLT\_HI], [VOLT\_LO], [TEMP\_HI], and [TEMP\_LO].

**Table 10-1. Interrupt Flags (Interrupt Status)**

| Flag      | Set Criteria                                   | Clear Criteria                                   |
|-----------|--|--|
| [VOLT_HI] | <i>Voltage() &gt; VoltHiSetThreshold()</i>     | <i>Voltage() &lt; VoltHiClearThreshold()</i>     |
| [VOLT_LO] | <i>Voltage() &lt; VoltLoSetThreshold()</i>     | <i>Voltage() &gt; VoltLoClearThreshold()</i>     |
| [TEMP_HI] | <i>Temperature() &gt; TempHiSetThreshold()</i> | <i>Temperature() &lt; TempHiClearThreshold()</i> |
| [TEMP_LO] | <i>Temperature() &lt; TempLoSetThreshold()</i> | <i>Temperature() &gt; TempLoClearThreshold()</i> |

| Class    | Subclass      | Name                      | Type | Min  | Max  | Default | Unit | Description   |
|----------|---------------|---------------------------|------|------|------|---------|------|---|
| Settings | Configuration | Init Voltage High Set     | I2   | 0    | 5000 | 4500    | mV   | Initial value for <i>VoltHiSetThreshold()</i> , the high cell voltage set threshold     |
| Settings | Configuration | Init Voltage High Clear   | I2   | 0    | 5000 | 4400    | mV   | Initial value for <i>VoltHiClearThreshold()</i> , the high cell voltage clear threshold |
| Settings | Configuration | Init Voltage Low Set      | I2   | 0    | 5000 | 2500    | mV   | Initial value for <i>VoltLoSetThreshold()</i> , the low cell voltage set threshold      |
| Settings | Configuration | Init Voltage Low Clear    | I2   | 0    | 5000 | 2600    | mV   | Initial value for <i>VoltLoClearThreshold()</i> , the low cell voltage clear threshold  |
| Settings | Configuration | Init Temperature High Set | I1   | -128 | 127  | 60      | °C   | Initial value for <i>TempHiSetThreshold()</i> , the high temperature set threshold      |

| Class    | Subclass      | Name                        | Type | Min  | Max | Default | Unit | Description  |
|----------|---------------|-----------------------------|------|------|-----|---------|------|--|
| Settings | Configuration | Init Temperature High Clear | I1   | -128 | 127 | 55      | °C   | Initial value for <i>TempHiClearThreshold()</i> , the high temperature clear threshold |
| Settings | Configuration | Init Temperature Low Set    | I1   | -128 | 127 | 0       | °C   | Initial value for <i>TempLoSetThreshold()</i> , the low temperature set threshold      |
| Settings | Configuration | Init Temperature Low Clear  | I1   | -128 | 127 | 5       | °C   | Initial value for <i>TempLoClearThreshold()</i> , the low temperature clear threshold  |

### 10.3 RSOC Interrupts

The device can be enabled to generate an interrupt on the INT pin at configurable RSOC intervals. The threshold setting is configurable through **SOC Delta** for the initial value, and later by writing to the standard command *SOCSetDeltaThreshold()*. Setting **SOC Delta** to 0 disables RSOC interrupts; otherwise, interrupts will be generated at the following RSOC points:

- 100%
- $100\% - n \times \text{SOC Delta}$ , where n is an integer from 1 to  $\text{INT}(100 / \text{SOC Delta})$
- 0%

The RSOC interrupt is indicated in *InterruptStatus()* by [SOC\_DELTA] flag.

| Class    | Subclass      | Name      | Type | Min | Max | Default | Unit | Description   |
|----------|---------------|-----------|------|-----|-----|---------|------|---|
| Settings | Configuration | SOC Delta | U1   | 0   | 100 | 1       | %    | Initial value for <i>SOCSetDeltaThreshold()</i> , RSOC delta set threshold. It is the interval for generating RSOC-based interrupts on the INT pin. Set to 0 to disable these RSOC-based interrupts. Otherwise, interrupts are generated at the following RSOC points: 0%, 100%, $100\% - n \times \text{SOC Delta}$ , where n is an integer from 1 to $\text{INT}(100 / \text{SOC Delta})$ . |

### 10.4 Host Interrupts Configuration

| Class    | Subclass      | Name             | Type | Min  | Max  | Default | Unit | Description  |
|----------|---------------|------------------|------|------|------|---------|------|--|
| Settings | Configuration | Host Intr Config | H1   | 0x00 | 0x38 | 0x00    | —    | Bit 0: BTP_EN<br>0 = Disables assertion of the INT pin when BTP is triggered<br>1 = Enables assertion of the INT pin when BTP is triggered<br>Bit 1: BTP_SRC<br>0 = BTP interrupts use capacity-based thresholds<br>1 = BTP interrupts use RSOC-based thresholds<br>Bit 2: RSVD<br>Bit 3: ACTVLO_EN<br>0 = Interrupt (INT) is active HIGH.<br>1 = Interrupt (INT) is active LOW.<br>Bit 4: PUSH_PULL_EN<br>0 = Interrupts on the INT pin are open-drain type (pull up required),<br>1 = Interrupts on the INT pin are push-pull type (internal pull up used),<br>Bit 5: INT_TYPE<br>0 = Interrupts enabled on INT pin as level-type<br>1 = Interrupts enabled on INT pin as pulse-type<br>Bits 7-6: RSVD |



## 11.1 Description

There are three levels of secured operation within the device: SEALED, UNSEALED, and FULL ACCESS. To switch between the levels, different operations are needed with different access keys. The device also supports SHA-256 HMAC authentication with the host system. Additionally, lifetime data is protected by an access key.

## 11.2 SHA-256 Authentication

Both the BQ27Z746-R1 and BQ27Z758 use SHA-256 for authentication.

- SHA-256 preprocessing is described in the *SHA-1 Preprocessing* section in [FIPS 180-4](#).
- The hash computation is described in the *SHA-1 Hash Computation* section in [FIPS 180-4](#).
- The HMAC implementation is described in [FIPS 198-1](#).

Detailed information about the SHA-256 algorithm can be found here:

- <http://www.nist.gov/itl/>
- <http://csrc.nist.gov/publications/fips>
- [www.faqs.org/rfcs/rfc3174.html](http://www.faqs.org/rfcs/rfc3174.html)

The random number should be a 32-byte random number generated from the host processor system. Once this number is generated, it is used to generate the HMAC value using the random number as the message and the secure key as the secret key for SHA-256.

### 11.2.1 Secure Key

The secure key is stored in the secured memory of the BQ27Z746-R1 and BQ27Z758 devices. It is located in secure memory, which can store up to three secure keys.

**Auth Config** selects which of the three keys to be used with KEY\_SEL0 and KEY\_SEL1.

| Class    | Subclass      | Name        | Type | Min | Max  | Default | Unit | Description  |
|----------|---------------|-------------|------|-----|------|---------|------|--|
| Settings | Configuration | Auth Config | H1   | 0x0 | 0x02 | 0x00    | —    | Bit 0: KEY_SEL0<br>Bit 1: KEY_SEL1<br>00 = Enables KEY 1<br>01 = Enables KEY 2<br>10 = Enables KEY 3<br>11 = Reserved. Do not use. |

### 11.2.2 Authentication Flow

The authentication procedure is described in the following steps:

1. The host writes 0x00 to 0x3E.
2. The host writes 0x00 to 0x3F.
3. Write the random challenge should be written in a 32-byte block to address 0x40–0x5F.
4. Write the checksum (1's complement sum of (1), (2), and (3)) to address 0x60.
5. Write the length 0x24 to address 0x61.
6. The gauge will compute the HMAC using SHA-256 after step (5). Wait 200 ms. (60 ms is how long authentication takes, but extra margin is added).
7. The `MACData()` command will contain the computed HMAC result using SHA-256.

8.  $[AUTH] = 1$  in *OperationStatusB()*.

### 11.3 Security Modes

As shipped, the device is in FULL ACCESS mode. For device security after manufacture, the device should be set to the SEALED access operational mode. To do this, send the MAC seal 0x0030 to the gauge. After the device is set to the SEALED mode, any device resets will cause the device to enter the SEALED mode. See the following sections for instructions on how to return to the other access modes.

For security mode access keys, the device ships with factory defaults. The manufacturer should change the keys to their proprietary keys using the MAC 0x0035. See [Section 16.2.29](#).

#### 11.3.1 SEALING and UNSEALING Data Flash

The gas gauge has a key access scheme to transition between SEALED, UNSEALED, and FULL ACCESS modes. Each transition requires that a unique set of two keys be sent to the gas gauge via the *AltManufacturerAccess()* command. The keys must be sent consecutively, with no other data being written to the *AltManufacturerAccess()* register. The *Seal Device* command instructs the device to limit access to the registers, functions, and data flash space, and sets the  $[SEC1][SEC0]$  flags. In SEALED mode, standard register information is accessible. Extended MAC Command functions and data flash are not accessible. Once in SEALED mode, the device can never permanently return to UNSEALED or FULL ACCESS modes. [Section 16.2.41](#), the *OperationStatusB()* register, shows the status of the device using the  $[SEC1][SEC0]$  bits.

#### 11.3.2 SEALED to UNSEALED

SEALED to UNSEALED instructs the device to extend access to the standard and extended registers and data flash space and clears the  $[SEC1][SEC0]$  flags. In UNSEALED mode, all data, standard and extended registers and DF have read/write access. Unsealing is a two-step command performed by writing the first word of the unseal key to *AltManufacturerAccess()* (MAC), followed by the second word of the unseal key to *AltManufacturerAccess()*. The unseal key can be read and changed via the *MAC SecurityKey()* command when in FULL ACCESS mode. To return to the SEALED mode, either a hardware reset is needed, or the *MAC Seal Device()* command is needed to transit from FULL ACCESS or UNSEALED to SEALED.


#### 11.3.3 UNSEALED to FULL ACCESS

UNSEALED to FULL ACCESS instructs the device to allow full access to all standard and extended registers and data flash. The device is shipped from TI in this mode. The keys for UNSEALED to FULL ACCESS can be read and changed via the MAC command *SecurityKey()* when in FULL ACCESS mode. Changing from UNSEALED to FULL ACCESS is performed by using the *AltManufacturerAccess()* command, by writing the first word of the Full Access Key to *AltManufacturerAccess()*, followed by the second word of the Full Access Key to *AltManufacturerAccess()*. In FULL ACCESS mode, the command to go to boot ROM can be sent.



### 12.1 Introduction

The BQ27Z746-R1 and BQ27Z758 devices do not control the charge directly. They can interact with a smart charger to enhance its performance. The device can change the values of *ChargingVoltage()* and *ChargingCurrent()* based on *Temperature()* and *Voltage()*. Its flexible charging algorithm is JEITA-compatible and can also meet other specific cell manufacturer charge requirements. The *ChargingStatus()* register shows the state of the charging algorithm.

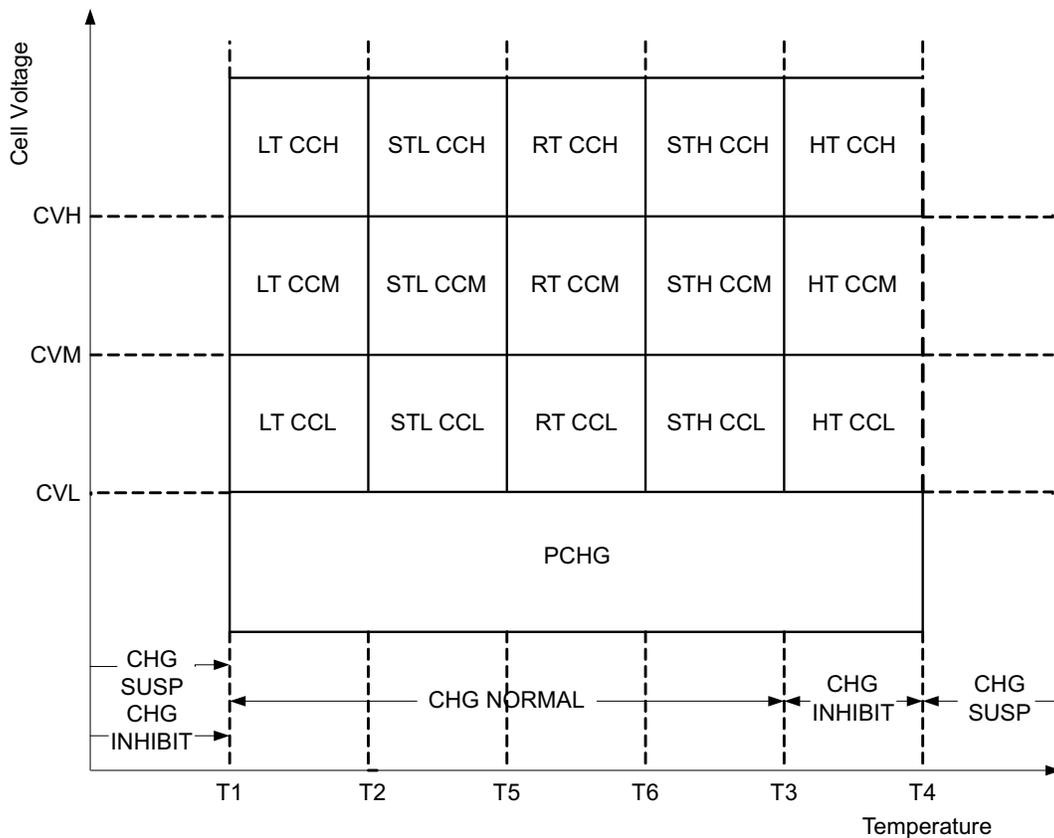

**Figure 12-1. Charging Matrix**

### 12.2 Charge Temperature Ranges

The measured temperature is segmented into several temperature ranges. The charging algorithm adjusts *ChargingCurrent()* and *ChargingVoltage()* according to the temperature range. The temperature ranges set in data flash should adhere to the following format:

$$T1 \leq T2 \leq T5 \leq T6 \leq T3 \leq T4$$

*Temp Range* bit definitions can be found in *ChargingStatus()*.

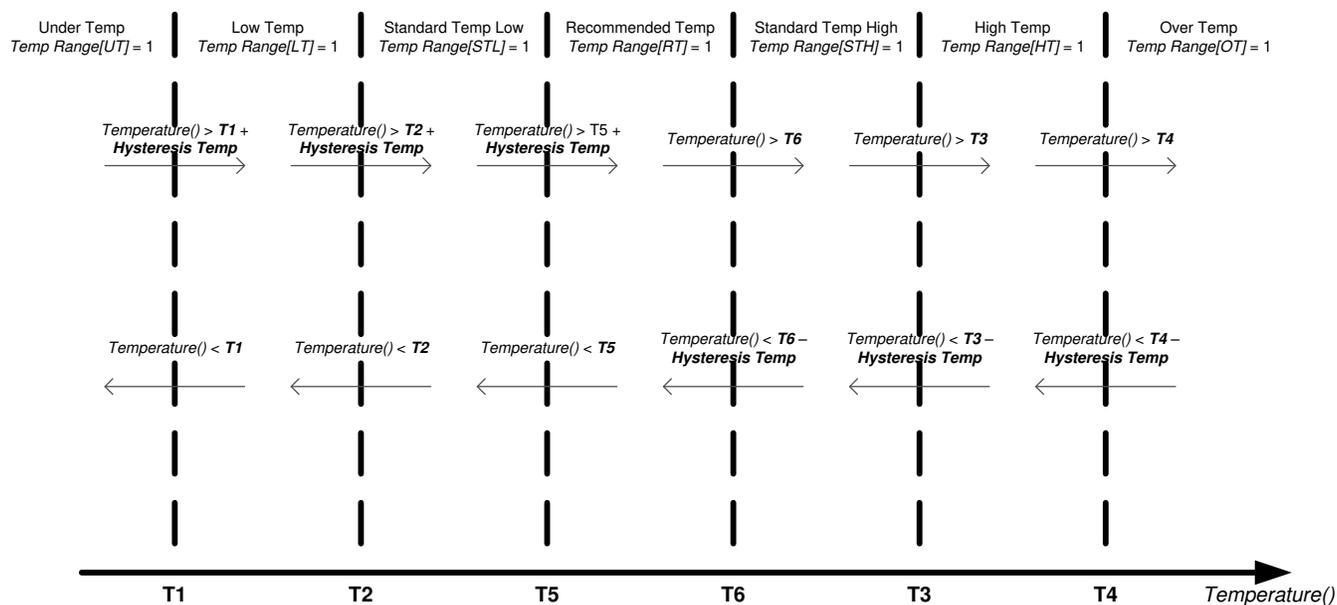


Figure 12-2. Charging Across Temperature


| Class                      | Subclass           | Name       | Type | Min  | Max | Default | Unit | Description   |
|----------------------------|--------------------|------------|------|------|-----|---------|------|---|
| Advanced Charge Algorithms | Temperature Ranges | T1         | l1   | -128 | 127 | 0       | °C   | T1 low temperature range lower limit                            |
| Advanced Charge Algorithms | Temperature Ranges | T2         | l1   | -128 | 127 | 10      | °C   | T2 low temperature range to standard temperature range          |
| Advanced Charge Algorithms | Temperature Ranges | T5         | l1   | -128 | 127 | 20      | °C   | T5 recommended temperature range lower limit                    |
| Advanced Charge Algorithms | Temperature Ranges | T6         | l1   | -128 | 127 | 25      | °C   | T6 recommended temperature range upper limit                    |
| Advanced Charge Algorithms | Temperature Ranges | T3         | l1   | -128 | 127 | 45      | °C   | T3 standard temperature range to high temperature range         |
| Advanced Charge Algorithms | Temperature Ranges | T4         | l1   | -128 | 127 | 55      | °C   | T4 high temperature range upper limit                           |
| Advanced Charge Algorithms | Temperature Ranges | Hysteresis | l1   | -128 | 127 | 1       | °C   | Temperature hysteresis, applied when temperature is decreasing. |

### 12.3 Voltage Range

The measured cell voltage is segmented into several voltage ranges. The charging algorithm adjusts *ChargingCurrent()* according to the temperature range and voltage range. The voltage ranges set in data flash should adhere to the following format:

$$\text{Charging Voltage Low} \leq \text{Charging Voltage Med} \leq \text{Charging Voltage High} \leq [\text{Standard or Rec}] \text{Temp Charging:Voltage}$$

Depending on the specific charging profile, the **Low Temp Charging:Voltage** and **High Temp Charging:Voltage** settings do not necessarily have the highest setting values.

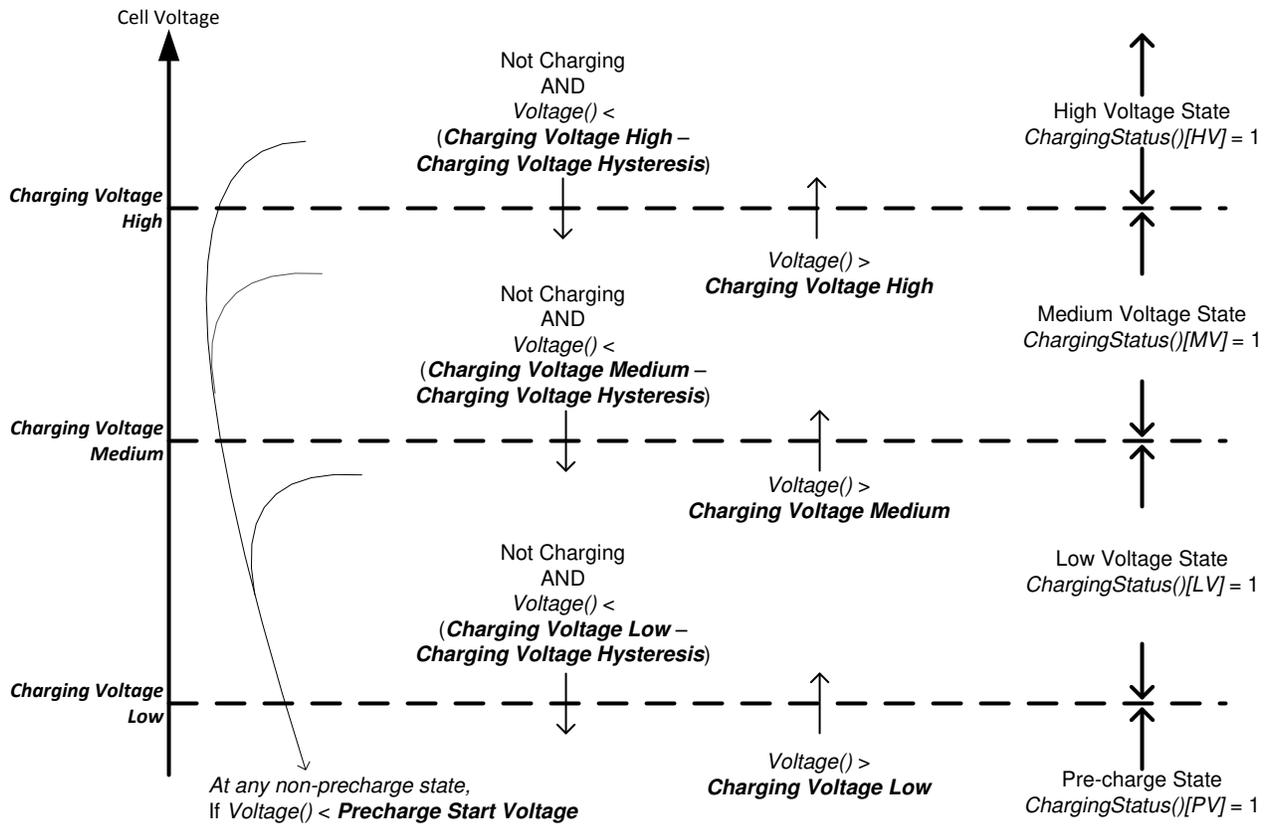

Copyright © 2017, Texas Instruments Incorporated

Figure 12-3. Charging Voltage Ranges

| Class                        | Subclass      | Name                        | Type | Min | Max   | Default | Unit | Description   |
|------------------------------|---------------|-----------------------------|------|-----|-------|---------|------|---|
| Advanced Charging Algorithms | Voltage Range | Precharge Start Voltage     | I2   | 0   | 32767 | 2500    | mV   | Minimum cell voltage to enter PRECHARGE mode                              |
| Advanced Charging Algorithms | Voltage Range | Charging Voltage Low        | I2   | 0   | 32767 | 2900    | mV   | <b>Precharge Start Voltage</b> range to <b>Charging Voltage Low</b> range |
| Advanced Charging Algorithms | Voltage Range | Charging Voltage Med        | I2   | 0   | 32767 | 3600    | mV   | <b>Charging Voltage Low</b> range to <b>Charging Voltage Med</b> range    |
| Advanced Charging Algorithms | Voltage Range | Charging Voltage High       | I2   | 0   | 32767 | 4000    | mV   | <b>Charging Voltage Med</b> to <b>Charging Voltage High</b> range         |
| Advanced Charging Algorithms | Voltage Range | Charging Voltage Hysteresis | U1   | 0   | 255   | 0       | mV   | <b>Charging Voltage Hysteresis</b> is applied when voltage is decreasing. |

### 12.3.1 RelativeStateOfCharge() Range

If  $[SOC\_CHARGE]$  in **Charging Configuration** is set, then the voltage-based threshold control, as described in Section 12.3, is replaced with *RelativeStateOfCharge()* control.

With this method, the following changes in the control transitions occur:

1. [LV] state and  $RelativeStateOfCharge() > \text{Charging SOC Mid}$  ; move to [MV].
2. [MV] state and  $RelativeStateOfCharge() > \text{Charging SOC High}$  ; move to [HV].
3. [MV] state [DSG] = 1, and  $RelativeStateOfCharge() < \text{Charging SOC Mid} - \text{SOC Hysteresis}$  ; move to [LV].

4. [HV] state [DSG] = 1, and  $RelativeStateOfCharge() < \text{Charging SOC High} - \text{Charging SOC Hysteresis}$  ; move to [MV].

**Table 12-1. RelativeStateOfCharge() Range**

| Class                     | Subclass  | Name                    | Type | Min Value | Max Value | Default Value | Unit |
|---------------------------|-----------|-------------------------|------|-----------|-----------|---------------|------|
| Advanced Charge Algorithm | SOC Range | Charging SOC Mid        | U1   | 0         | 100       | 50            | %    |
| Advanced Charge Algorithm | SOC Range | Charging SOC High       | U1   | 0         | 100       | 75            | %    |
| Advanced Charge Algorithm | SOC Range | Charging SOC Hysteresis | U1   | 0         | 100       | 1             | %    |

## 12.4 Charging Current

The  $ChargingCurrent()$  value changes depending on the detected temperature and voltage per the charging algorithm.

The **Charging Configuration[CRATE]** bit provides an option to adjust the  $ChargingCurrent()$  based on  $FullChargeCapacity()/DesignCapacity()$ .

For example, with **[CRATE] = 1**, if  $FullChargeCapacity()/DesignCapacity() = 90\%$  and **Rec Temp Charging: Current Med** is active per the charging algorithm, the  $ChargingCurrent() = \text{Rec Temp Charging: Current Med} \times 90\%$ .

---

### Note

Table priority is top to bottom.

---

| Temp Range | Voltage Range | Condition | Action  |
|------------|---------------|-----------|---|
| UT or OT   | Any           | —         | $ChargingCurrent() = 0$   |
| Any        | PV            | —         | $ChargingCurrent() = \text{Pre-Charging:Current}$                     |
| LT         | LV            | —         | $ChargingCurrent() = \text{Low Temp Charging:Current Low}$            |
|            | MV            | —         | $ChargingCurrent() = \text{Low Temp Charging:Current Med}$            |
|            | HV            | —         | $ChargingCurrent() = \text{Low Temp Charging:Current High}$           |
| STL        | LV            | —         | $ChargingCurrent() = \text{Standard Temp Low Charging:Current Low}$   |
|            | MV            | —         | $ChargingCurrent() = \text{Standard Temp Low Charging:Current Med}$   |
|            | HV            | —         | $ChargingCurrent() = \text{Standard Temp Low Charging:Current High}$  |
| STH        | LV            | —         | $ChargingCurrent() = \text{Standard Temp High Charging:Current Low}$  |
|            | MV            | —         | $ChargingCurrent() = \text{Standard Temp High Charging:Current Med}$  |
|            | HV            | —         | $ChargingCurrent() = \text{Standard Temp High Charging:Current High}$ |
| RT         | LV            | —         | $ChargingCurrent() = \text{Rec Temp Charging:Current Low}$            |
|            | MV            | —         | $ChargingCurrent() = \text{Rec Temp Charging:Current Med}$            |
|            | HV            | —         | $ChargingCurrent() = \text{Rec Temp Charging:Current High}$           |
| HT         | LV            | —         | $ChargingCurrent() = \text{High Temp Charging:Current Low}$           |
|            | MV            | —         | $ChargingCurrent() = \text{High Temp Charging:Current Med}$           |
|            | HV            | —         | $ChargingCurrent() = \text{High Temp Charging:Current High}$          |

The configuration options for charging current are in the following data flash.

| Class                        | Subclass                   | Name                   | Type | Min  | Max    | Default | Unit | Description   |
|------------------------------|----------------------------|------------------------|------|------|--------|---------|------|---|
| Settings                     | Configuration              | Charging Configuration | H2   | 0x00 | 0x3F85 | 0x00    | —    | Bit 0: CRATE— <i>ChargingCurrent()</i> rate<br>0 = No adjustment to <i>ChargingCurrent()</i> (default)<br>1 = <i>ChargingCurrent()</i> adjusted based on <i>FullChargeCapacity()/DesignCapacity()</i><br>Bit 1: Reserved<br>Bit 2: SOC_CHARGE<br>0 = Uses voltage thresholds (CVL, CVM, and CVH) in <b>Advanced Charging Algorithms</b><br>1 = Enables the SOC threshold to replace voltage thresholds (CVL, CVM, and CVH) in <b>Advanced Charging Algorithms</b><br>Bits 6:3: Reserved<br>Bit 7: CS_CV<br>0 = Cell swelling voltage degradation disabled<br>1 = Cell swelling voltage degradation enabled<br>Bit 8: COMP_IR<br>0 = Disables voltage compensation for system resistance<br>1 = Enables voltage compensation for system resistance<br>Bit 9: DEGRADE_CC<br>0 = Disables <i>ChargingCurrent()</i> degradation based on the charging degradation mode<br>1 = Enables <i>ChargingCurrent()</i> degradation based on the charging degradation mode<br>Bit 10: CHGV_DEGRADE<br>0 = Disables <i>ChargingVoltage()</i> degradation based on the charging degradation mode<br>1 = Enables <i>Charging Voltage()</i> degradation based on the charging degradation mode<br>Bit 11: HIBAT_CHG<br>0 = Disables the high battery voltage feature<br>= Enables the high battery voltage feature<br>Bit 12: SLEEPCHG<br>0 = <i>ChargingCurrent()</i> and <i>ChargingVoltage()</i> are 0 in SLEEP mode<br>1 = <i>ChargingCurrent()</i> and <i>ChargingVoltage()</i> are determined by <b>Advanced Charging Algorithms</b> in SLEEP mode.<br>Bit 13: TAPER_VOLT<br>0 = Uses <i>ChargingVoltage()</i> for charge termination detection<br>1 = Uses fixed <b>Charge Term Charging Voltage</b> for charge termination<br>Bits 15:14: Reserved |
| Advanced Charging Algorithms | Pre-Charging               | Current                | I2   | 0    | 32767  | 88      | mA   | Precharge <i>ChargingCurrent()</i>  |
| Advanced Charging Algorithms | Maintenance Charging       | Current                | I2   | 0    | 32767  | 44      | mA   | Maintenance <i>ChargingCurrent()</i>  |
| Advanced Charging Algorithms | Low Temp Charging          | Current Low            | I2   | 0    | 32767  | 132     | mA   | Low temperature range low voltage range <i>ChargingCurrent()</i>  |
| Advanced Charging Algorithms | Low Temp Charging          | Current Med            | I2   | 0    | 32767  | 352     | mA   | Low temperature range medium voltage range <i>ChargingCurrent()</i>   |
| Advanced Charging Algorithms | Low Temp Charging          | Current High           | I2   | 0    | 32767  | 264     | mA   | Low temperature range high voltage range <i>ChargingCurrent()</i>   |
| Advanced Charging Algorithms | Standard Temp Low Charging | Current Low            | I2   | 0    | 32767  | 1980    | mA   | Standard temperature low range low voltage range <i>ChargingCurrent()</i>   |
| Advanced Charging Algorithms | Standard Temp Low Charging | Current Med            | I2   | 0    | 32767  | 4004    | mA   | Standard temperature low range medium voltage range <i>ChargingCurrent()</i>  |
| Advanced Charging Algorithms | Standard Temp Low Charging | Current High           | I2   | 0    | 32767  | 2992    | mA   | Standard temperature low range high voltage range <i>ChargingCurrent()</i>  |

| Class                        | Subclass                    | Name         | Type | Min | Max   | Default | Unit | Description   |
|------------------------------|-----------------------------|--------------|------|-----|-------|---------|------|---|
| Advanced Charging Algorithms | Standard Temp High Charging | Current Low  | I2   | 0   | 32767 | 1980    | mA   | Standard temperature high range low voltage range <i>ChargingCurrent()</i>    |
| Advanced Charging Algorithms | Standard Temp High Charging | Current Med  | I2   | 0   | 32767 | 4004    | mA   | Standard temperature high range medium voltage range <i>ChargingCurrent()</i> |
| Advanced Charging Algorithms | Standard Temp High Charging | Current High | I2   | 0   | 32767 | 2992    | mA   | Standard temperature high range high voltage range <i>ChargingCurrent()</i>   |
| Advanced Charging Algorithms | High Temp Charging          | Current Low  | I2   | 0   | 32767 | 1012    | mA   | High temperature range low voltage range <i>ChargingCurrent()</i>             |
| Advanced Charging Algorithms | High Temp Charging          | Current Med  | I2   | 0   | 32767 | 1980    | mA   | High temperature range medium voltage range <i>ChargingCurrent()</i>          |
| Advanced Charging Algorithms | High Temp Charging          | Current High | I2   | 0   | 32767 | 1496    | mA   | High temperature range high voltage range <i>ChargingCurrent()</i>            |
| Advanced Charging Algorithms | Rec Temp Charging           | Current Low  | I2   | 0   | 32767 | 2508    | mA   | Recommended temperature range low voltage range <i>ChargingCurrent()</i>      |
| Advanced Charging Algorithms | Rec Temp Charging           | Current Med  | I2   | 0   | 32767 | 4488    | mA   | Recommended temperature range medium voltage range <i>ChargingCurrent()</i>   |
| Advanced Charging Algorithms | Rec Temp Charging           | Current High | I2   | 0   | 32767 | 3520    | mA   | Recommended temperature range high voltage range <i>ChargingCurrent()</i>     |

## 12.5 Charging Voltage

The *ChargingVoltage()* changes depending on the detected temperature per the charge algorithm. If cell temperature reduces *ChargingVoltage()* below the cell voltage, setting **[HIBAT\_CHG]** can hold it unchanged while *ChargingCurrent()* is held at 0. This action continues until the desired *ChargingVoltage()* is above the cell voltage.

### Note

Table priority is top to bottom.

| Temp Range | Condition | Action  |
|------------|-----------|---|
| UT or OT   | —         | <i>ChargingVoltage()</i>  |
| LT         | —         | <i>ChargingVoltage()</i> = <b>Low Temp Charging:Voltage</b>           |
| STL        | —         | <i>ChargingVoltage()</i> = <b>Standard Temp Low Charging:Voltage</b>  |
| STH        | —         | <i>ChargingVoltage()</i> = <b>Standard Temp High Charging:Voltage</b> |
| RT         | —         | <i>ChargingVoltage()</i> = <b>Rec Temp Charging:Voltage</b>           |
| HT         | —         | <i>ChargingVoltage()</i> = <b>High Temp Charging:Voltage</b>          |

Table 12-2 shows the configurations for the charging voltages. They can be changed with the *ChargingVoltageOverride* MAC.

**Table 12-2. JEITA Charging Voltages**

| Class                        | Subclass                   | Name    | Type | Min | Max   | Default | Unit | Description   |
|------------------------------|----------------------------|---------|------|-----|-------|---------|------|---|
| Advanced Charging Algorithms | Low Temp Charging          | Voltage | I2   | 0   | 32767 | 4400    | mV   | Low temperature range <i>ChargingVoltage()</i>          |
| Advanced Charging Algorithms | Standard Temp Low Charging | Voltage | I2   | 0   | 32767 | 4400    | mV   | Standard temperature low range <i>ChargingVoltage()</i> |

**Table 12-2. JEITA Charging Voltages (continued)**

| Class                        | Subclass                    | Name    | Type | Min | Max   | Default | Unit | Description  |
|------------------------------|-----------------------------|---------|------|-----|-------|---------|------|--|
| Advanced Charging Algorithms | Standard Temp High Charging | Voltage | I2   | 0   | 32767 | 4400    | mV   | Standard temperature high range <i>ChargingVoltage()</i> |
| Advanced Charging Algorithms | High Temp Charging          | Voltage | I2   | 0   | 32767 | 4100    | mV   | High temperature range <i>ChargingVoltage()</i>          |
| Advanced Charging Algorithms | Rec Temp Charging           | Voltage | I2   | 0   | 32767 | 4400    | mV   | Recommended temperature range <i>ChargingVoltage()</i>   |

### 12.5.1 Charge Voltage Compensation for System Impedance

The design of some battery charging systems may have a not insignificant impedance between the charger and battery terminals. In this case, a voltage compensation feature handles system level IR drops to ensure the correct charging voltage is supplied at the battery terminals. Program the **System Resistance** register with the measured resistance in milliohms (mΩ) between the battery terminals and charger terminals. To enable this feature, set the configuration bit **[COMP\_IR]** in (default 0) the **Charging Configuration** register.

This feature works as follows:

$$\text{ChargingVoltage}() = \text{charging\_voltage} + \text{ChargingCurrent}() \times \text{System Resistance}$$

where `charging_voltage` was computed as a result of a selected configuration; from the JEITA table and any applied degradations.

### 12.6 Charging Degradation Modes

This optional feature can be used to reduce charging voltages and/or currents based on measured parameters that reflect the aging of cells.

Here is an example of charging degradation using **Cycle Count** (although it is the same for the other aging parameters as itemized below):

In NORMAL mode (there is no reduction of *ChargingCurrent()* or *ChargingVoltage()*), *ChargingCurrent()* is reduced by CC Degradation Mode 1 (assuming the Cycle Count 1 entry conditions are met), then moving to Cycle Count Mode 2, *ChargingCurrent()* is further reduced by CC Degradation Mode 2 (assuming Cycle Count 2 entry conditions are met). This is similar for Cycle Count Mode 3.

Care should be taken to set the degradation mode thresholds such that each threshold is increased for each mode. The fact that any of the other measured aging parameters have not passed a degradation mode threshold would not cause the lower mode to be used.

This charging current degradation scheme (if enabled) works in conjunction with any other existing degradation/increments (such as charge loss compensation).

The following table shows the default values for how charging voltage and charging current are degraded for each degradation mode:

| <b>[CHGV_DEGRADE]</b> is set.) | <b>Charging Voltage (CV)</b><br>(CV degradation is available if enabled.) | <b>Charging Current (CC)</b><br>(CC degradation is available if enabled <b>[DEGRADE_CC]</b> ). <sup>(1)</sup> |
|--------------------------------|---|---|
| Normal                         | <b>No CV Degradation</b>  | <b>No CC Degradation</b>  |
| Mode 1                         | <b>CV Degradation</b> (default 10 mV / cell)                              | <b>CC Degradation</b> (default 10%)   |
| Mode 2                         | <b>CV Degradation</b> (default 40 mV / cell)                              | <b>CC Degradation</b> (default 20%)   |
| Mode 3                         | <b>CV Degradation</b> (default 70 mV / cell)                              | <b>CC Degradation</b> (default 40%)   |

(1) Only **[DEGRADE\_CC]** or **[CRATE]** can be used at a time. Both must not be enabled together.

A degrade mode is entered when any measured parameter exceeds the thresholds set in data flash. The following thresholds are defined for each mode (see [Data Flash Summary](#) for threshold value settings and addresses).

- **Cycle Threshold** checked against *CycleCount()*
- **SOH Threshold** checked against *StateOfHealth()*
- **Runtime Threshold** checked against **Runtime Degrade**
- **High SOC Threshold** checked against the sum of all the high SOC times recorded in **Lifetimes** : **Time Spent In UT RSOC A** , **Time Spent In LT RSOC A** , **Time Spent In STL RSOC A** , **Time Spent In RT RSOC A** , **Time Spent In STH RSOC A** , **Time Spent In HT RSOC A** , and **Time Spent In OT RSOC A**
- **High Temp Threshold** checked against the sum of all the high temperature times recorded in **Lifetimes** : **Time Spent In HT RSOC A** , **Time Spent In HT RSOC B** , **Time Spent In HT RSOC C** , **Time Spent In HT RSOC D** , **Time Spent In HT RSOC E** , **Time Spent In HT RSOC F** , **Time Spent In HT RSOC G** , and **Time Spent In HT RSOC H**
- **High Temp SOC Threshold** checked against **Time Spent in HT RSOC A**

*CycleCount()* must be greater than **Cycle Count Start Runtime** before **Runtime Degrade** starts to increment and any degradation modes are detected.

The current degradation mode can be determined from the value of *[CV\_DGRD]*.

**Runtime Degrade** is updated to data flash every **Runtime Update Interval** and tracks the runtime after *CycleCount()*  $\geq$  **Cycle Count Start Runtime** .

---

#### Note

A threshold can be set to an unobtainable value for a particular aging parameter to be disabled.

---

## 12.7 Cell Swelling Control (via Charging Voltage Degradation)

Cell swelling can occur when the cell temperature and cell voltage are above certain thresholds. In these situations, the charging voltage can be stepped down gradually until the cell temperature moves back down.

This scheme works (as shown in [Figure 12-4](#)) when enabled by setting *[CS\_CV]* (default is cleared) in the **Charging Configuration** register. When the max cell voltage<sup>1..4</sup> and cell temperature are above the **Voltage Threshold** and **Temperature Threshold** , respectively, for the period defined by **Time Interval** , then the charging voltage is stepped down by **Delta Voltage** . This step down continues until either the max cell voltage<sup>1..4</sup> and cell temperature conditions go away (that is, cell swelling reduces) or the step down reaches **Min CV** .

The charging voltage reduction/degradation resulting from this feature is reset when exiting CHARGE mode.

---

#### Note

This degradation works in conjunction with other degradation features; therefore, use with care.

---

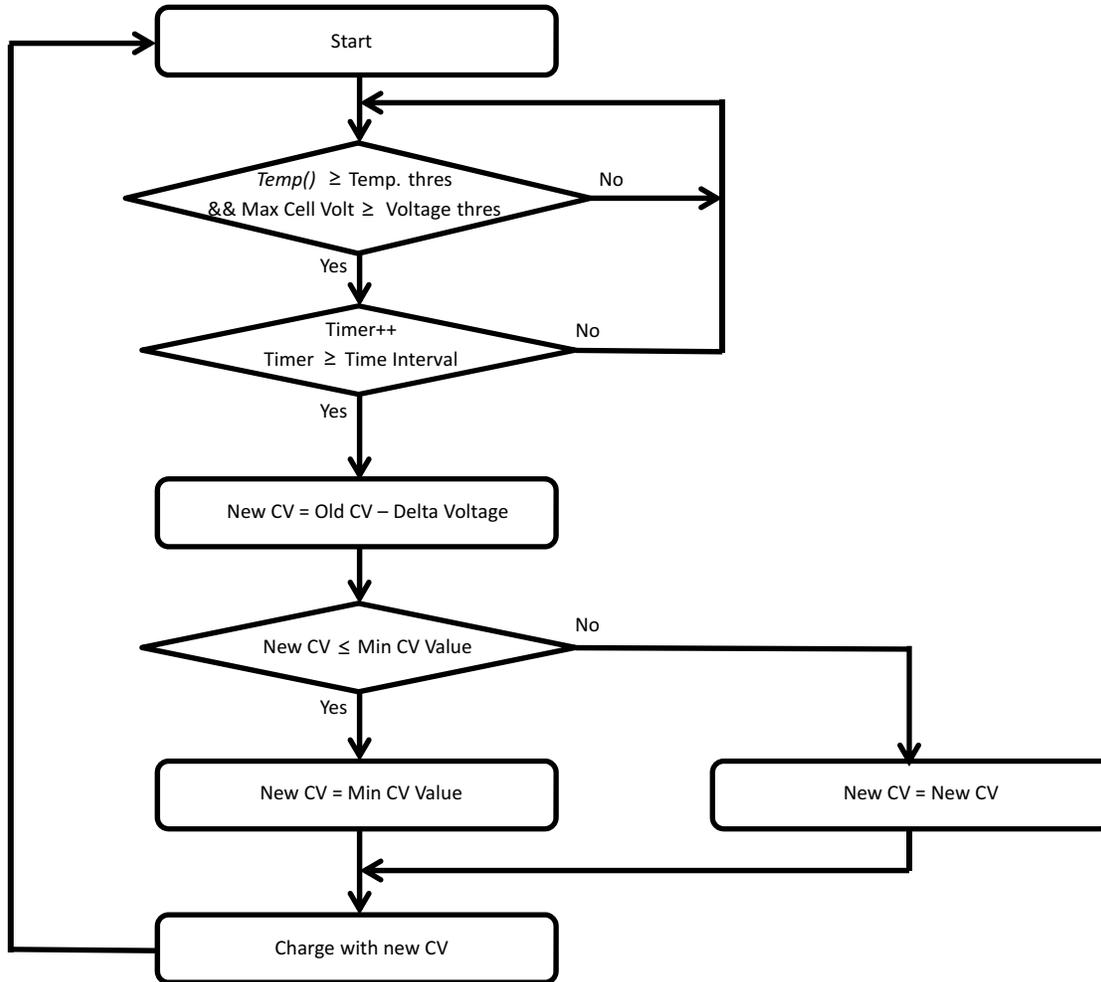


Figure 12-4. Cell Swelling Control

### 12.8 Valid Charge Termination

The charge termination condition must be met to enable valid charge termination. The device has the following actions at charge termination, based on the bits settings:

- If **IT Gauging Configuration[CSYNC] = 1**, *RemainingCapacity()* = *FullChargeCapacity()*.
- If **I2C Gauging Configuration[RSOCL] = 1**, *RelativeStateOfCharge()* and *RemainingCapacity()* are held at 99% until charge termination occurs. Only on entering charge termination is 100% displayed.
- If **I2C Gauging Configuration[RSOCL] = 0**, *RelativeStateOfCharge()* and *RemainingCapacity()* are not held at 99% until charge termination occurs. Fractions of percentages greater than 99% are rounded up to display 100%.

| Status   | Condition   | Action                  |
|----------|---|-------------------------|
| Charging | <i>GaugingStatus()[REST] = 0 AND BatteryStatus()[DSG] = 0</i> | Charge Algorithm active |

| Status  | Condition  | Action  |
|---|--|---|
| Valid Taper Charge Termination                          | <b>SOC Flag Config A[TCSETVCT] = 1</b> selects termination detection based on the taper conditions. All of the following conditions must occur for two consecutive 40-s periods:<br>Charging (that is, $BatteryStatus()[DSG] = 0$ ) AND $AverageCurrent() < Charge\ Term\ Taper\ Current$ AND $Voltage() + Charge\ Term\ Voltage \geq ChargingVoltage()$ AND $[TAPER\_VOLT] = 0$ AND<br>The accumulated change in capacity > 0.25 mAh, | $ChargingStatus()[VCT] = 1$<br>$ChargingVoltage() = Charging\ Algorithm$<br>$ChargingCurrent() = Charging\ Algorithm$<br>$BatteryStatus()[FC] = 1$ and $GaugingStatus()[FC] = 1$ if <b>SOC Flag Config A[FCSETVCT] = 1</b><br>$BatteryStatus()[TCA] = 1$ and $GaugingStatus()[TC] = 1$ if <b>SOC Flag Config A[TCSETVCT] = 1</b><br><b>Cell 1 Chg Voltage at EoC = Voltage()</b><br><b>Current at EoC = Current()</b><br>Calculate Cell 1 DODEOC<br>Trigger IT simulation |
| Valid Charge Termination from SOC or Voltage Thresholds | <b>SOC Flag Config A[TCSETRSOC] = 1</b> and $Relative\ State\ of\ Charge() \geq TC.Set\ \% RSOC\ Threshold$ or <b>SOC Flag Config A[TCSETV] = 1</b> and $Voltage() \geq TC.Set\ Voltage\ Threshold$  | $ChargingStatus()[VCT] = 1$<br>$ChargingVoltage() = Charging\ Algorithm$<br>$ChargingCurrent() = Charging\ Algorithm$<br>$BatteryStatus()[FC] = 1$ and $GaugingStatus()[FC] = 1$<br>$BatteryStatus()[TCA] = 1$ and $GaugingStatus()[TC] = 1$<br><b>Cell 1 Chg Voltage at EoC = Voltage()</b><br><b>Current at EoC = Current()</b><br>Calculate Cell 1 DODEOC<br>Trigger IT simulation   |

### Note

After valid charge termination,  $RemainingCapacity()$  and  $FullChargeCapacity()$  will reflect any change in capacity due to any difference in  $ChargingVoltage()$  from the previous valid charge termination.

### Note

Setting  $[TAPER\_VOLT]$  causes **Charge Term Charging Voltage** to be used in place of  $ChargingVoltage()$ .

### Note

It is recommended to choose the Taper Charge Termination method. However, some applications may have difficulty achieving all the conditions. In that case the other method could be selected. It is not recommended to select both methods.

| Class                        | Subclass           | Name                      | Type | Min | Max   | Default | Unit | Description  |
|------------------------------|--------------------|---------------------------|------|-----|-------|---------|------|--|
| Advanced Charging Algorithms | Termination Config | Charge Term Taper Current | I2   | 0   | 32767 | 100     | mA   | Valid charge termination taper current qualifier threshold       |
| Advanced Charging Algorithms | Termination Config | Charge Term Voltage       | I2   | 0   | 32767 | 100     | mV   | Valid charge termination delta voltage qualifier, max cell based |
| Gas Gauging                  | State              | Cell 1 Chg Voltage at EoC | I2   | 0   | 32767 | 4375    | mV   | Cell 1 Voltage value at end of charge                            |
| Gas Gauging                  | State              | Current at EoC            | I2   | —   | 32767 | 100     | mA   | Current at end of charge   |

## 12.9 Charge and Discharge Alarms

The  $[TC]$  and  $[FC]$  bits in  $GaugingStatus()$  can be set at charge termination and based on RSOC or cell voltage. If multiple set and clear conditions are selected, then the corresponding flag is set whenever a valid set or clear condition is met. If the set and clear conditions are true at the same time, the flag will clear. The same functionality is applied to the  $[TD]$  and  $[FD]$  bits in  $GaugingStatus()$ .

### Note

*GaugingStatus()*[TC][TD][FC][FD] are the status flags based on the gauging conditions only. These flags are set and cleared based on **SOC Flag Config A** and **SOC Flag Config B**.

The *BatteryStatus()*[TCA][TDA][FCA][FDA] flags are set and cleared according to the *GaugingStatus()*[TC][TD][FC][FD] flags.

The table below summarizes the options to set and clear the [TC] and [FC] flags in *GaugingStatus()*.

| Flag | Set Criteria                                 | Set Condition  | Enable                                   |
|------|--|--|--|
| [TC] | Cell Voltage                                 | $Voltage() > TC: \text{Set Voltage Threshold}$               | <b>SOC Flag Config A</b> [TCSETV] = 1    |
|      | RSOC   | $RelativeStateOfCharge() > TC: \text{Set \% RSOC Threshold}$ | <b>SOC Flag Config A</b> [TCSETRSOC] = 1 |
|      | Valid Charge Termination (enable by default) | When $ChargingStatus[VCT] = 1$                               | <b>SOC Flag Config A</b> [TCSETVCT] = 1  |
| [FC] | Cell Voltage                                 | $Voltage() > FC: \text{Set Voltage Threshold}$               | <b>SOC Flag Config B</b> [FCSETV] = 1    |
|      | RSOC   | $RelativeStateOfCharge() > FC: \text{Set \% RSOC Threshold}$ | <b>SOC Flag Config B</b> [FCSETRSOC] = 1 |
|      | Valid Charge Termination (enable by default) | When $ChargingStatus[VCT] = 1$                               | <b>SOC Flag Config A</b> [FCSETVCT] = 1  |

| Flag | Clear Criteria           | Clear Condition   | Enable                                     |
|------|--------------------------|---|--|
| [TC] | Cell Voltage             | $Voltage() \leq TC: \text{Clear Voltage Threshold}$               | <b>SOC Flag Config A</b> [TCCLEARV] = 1    |
|      | RSOC (enable by default) | $RelativeStateOfCharge() \leq TC: \text{Clear \% RSOC Threshold}$ | <b>SOC Flag Config A</b> [TCCLEARRSOC] = 1 |
| [FC] | Cell Voltage             | $Voltage() \leq FC: \text{Clear Voltage Threshold}$               | <b>SOC Flag Config B</b> [FCCLEARV] = 1    |
|      | RSOC (enable by default) | $RelativeStateOfCharge() \leq FC: \text{Clear \% RSOC Threshold}$ | <b>SOC Flag Config B</b> [FCCLEARRSOC] = 1 |

The tables below summarize the various options to set and clear the [TD] and [FD] flags in *GaugingStatus()*.

| Flag | Set Criteria             | Set Condition  | Enable                                   |
|------|--------------------------|--|--|
| [TD] | Cell Voltage             | $Voltage() < TD: \text{Set Voltage Threshold}$               | <b>SOC Flag Config A</b> [TDSETV] = 1    |
|      | RSOC (enable by default) | $RelativeStateOfCharge() < TD: \text{Set \% RSOC Threshold}$ | <b>SOC Flag Config A</b> [TDSETRSOC] = 1 |
| [FD] | Cell Voltage             | $Voltage() < FD: \text{Set Voltage Threshold}$               | <b>SOC Flag Config B</b> [FDSETV] = 1    |
|      | RSOC (enable by default) | $RelativeStateOfCharge() < FD: \text{Set \% RSOC Threshold}$ | <b>SOC Flag Config B</b> [FDSETRSOC] = 1 |

| Flag | Clear Criteria           | Clear Condition   | Enable                                     |
|------|--------------------------|---|--|
| [TD] | Cell Voltage             | $Voltage() \geq TD: \text{Clear Voltage Threshold}$               | <b>SOC Flag Config A</b> [TDCLEARV] = 1    |
|      | RSOC (enable by default) | $RelativeStateOfCharge() \geq TD: \text{Clear \% RSOC Threshold}$ | <b>SOC Flag Config A</b> [TDCLEARRSOC] = 1 |
| [FD] | Cell Voltage             | $Voltage() \geq FD: \text{Clear Voltage Threshold}$               | <b>SOC Flag Config B</b> [FDCLEARV] = 1    |
|      | RSOC (enable by default) | $RelativeStateOfCharge() \geq FD: \text{Clear \% RSOC Threshold}$ | <b>SOC Flag Config B</b> [FDCLEARRSOC] = 1 |

The configuration options for the charge and discharge alarms are in the following data flash.

| Class       | Subclass      | Name                    | Type | Min    | Max    | Default | Unit | Description  |
|-------------|---------------|-------------------------|------|--------|--------|---------|------|--|
| Settings    | Configuration | SOC Flag Config A       | H2   | 0x0000 | 0x0FFF | 0x0C8C  | —    | Bit 0: TDSETV—Enables the TD flag set by cell voltage threshold<br>0 = Disabled (default)<br>1 = Enabled<br>Bit 1: TDCLEARV—Enables the TD flag cleared by the cell voltage threshold<br>0 = Disabled (default)<br>1 = Enabled<br>Bit 2: TDSETRSOC—Enables the TD flag set by the RSOC threshold<br>0 = Disabled<br>1 = Enabled (default)<br>Bit 3: TDCLEARRSOC—Enables the TD flag cleared by the RSOC threshold<br>0 = Disabled<br>1 = Enabled (default)<br>Bit 4: TCSETV—Enables the TC flag set by the cell voltage threshold<br>0 = Disabled (default)<br>1 = Enabled<br>Bit 5: TCCLEARV—Enables the TC flag cleared by the cell voltage threshold<br>0 = Disabled (default)<br>1 = Enabled<br>Bit 6: TCSETRSOC—Enables the TC flag set by the RSOC threshold<br>0 = Disabled (default)<br>1 = Enabled<br>Bit 7: TCCLEARRSOC—Enables the TC flag cleared by the RSOC threshold<br>0 = Disabled<br>1 = Enabled (default)<br>Bit 8: Reserved<br>Bit 9: Reserved<br>Bit 10: FCSETVCT—Enables the FC flag set by valid charge termination<br>0 = Disabled<br>1 = Enabled (default)<br>Bit 11: TCSETVCT—Enables the TC flag set by valid charge termination<br>0 = Disabled<br>1 = Enabled (default)<br>Bit 15: 12: Reserved |
| Settings    | Configuration | SOC Flag Config B       | H1   | 0x00   | 0xFF   | 0x8C    | —    | Bit 0: FDSETV—Enables the FD flag set by the cell voltage threshold<br>0 = Disabled (default)<br>1 = Enabled<br>Bit 1: FDCLEARV—Enables the FD flag cleared by the cell voltage threshold<br>0 = Disabled (default)<br>1 = Enabled<br>Bit 2: FDSETRSOC—Enables the FD flag set by the RSOC threshold<br>0 = Disabled<br>1 = Enabled (default)<br>Bit 3: FDCLEARRSOC—Enables the FD flag cleared by the RSOC threshold<br>0 = Disabled<br>1 = Enabled (default)<br>Bit 4: FCSETV—Enables the FC flag set by the cell voltage threshold<br>0 = Disabled (default)<br>1 = Enabled<br>Bit 5: FCCLEARV—Enables the FC flag cleared by the cell voltage threshold<br>0 = Disabled (default)<br>1 = Enabled<br>Bit 6: FCSETRSOC—Enables the FC flag set by the RSOC threshold<br>0 = Disabled (default)<br>1 = Enabled<br>Bit 7: FCCLEARRSOC—Enables the FC flag cleared by the RSOC threshold<br>0 = Disabled<br>1 = Enabled (default)   |
| Gas Gauging | FD            | Set Voltage Threshold   | I2   | 0      | 5000   | 3000    | mV   | <i>GaugingStatus()</i> [FD] and <i>BatteryStatus()</i> [FD] cell voltage set threshold   |
| Gas Gauging | FD            | Clear Voltage Threshold | I2   | 0      | 5000   | 3100    | mV   | <i>GaugingStatus()</i> [FD] and <i>BatteryStatus()</i> [FD] cell voltage clear threshold   |
| Gas Gauging | FD            | Set RSOC % Threshold    | U1   | 0      | 100    | 0       | %    | <i>GaugingStatus()</i> [FD] and <i>BatteryStatus()</i> [FD] <i>RelativeStateOfCharge()</i> set threshold   |
| Gas Gauging | FD            | Clear RSOC % Threshold  | U1   | 0      | 100    | 5       | %    | <i>GaugingStatus()</i> [FD] and <i>BatteryStatus()</i> [FD] <i>RelativeStateOfCharge()</i> clear threshold   |
| Gas Gauging | FC            | Set Voltage Threshold   | I2   | 0      | 5000   | 4400    | mV   | <i>GaugingStatus()</i> [FC] and <i>BatteryStatus()</i> [FC] cell voltage set threshold   |

| Class       | Subclass | Name                    | Type | Min | Max  | Default | Unit | Description  |
|-------------|----------|-------------------------|------|-----|------|---------|------|--|
| Gas Gauging | FC       | Clear Voltage Threshold | I2   | 0   | 5000 | 4300    | mV   | <i>GaugingStatus()</i> [FC] and <i>BatteryStatus()</i> [FC] cell voltage clear threshold                   |
| Gas Gauging | FC       | Set RSOC % Threshold    | U1   | 0   | 100  | 100     | %    | <i>GaugingStatus()</i> [FC] and <i>BatteryStatus()</i> [FC] <i>RelativeStateOfCharge()</i> set threshold   |
| Gas Gauging | FC       | Clear RSOC % Threshold  | U1   | 0   | 100  | 95      | %    | <i>GaugingStatus()</i> [FC] and <i>BatteryStatus()</i> [FC] <i>RelativeStateOfCharge()</i> clear threshold |
| Gas Gauging | TD       | Set Voltage Threshold   | I2   | 0   | 5000 | 3200    | mV   | <i>GaugingStatus()</i> [TD] cell voltage set threshold   |
| Gas Gauging | TD       | Clear Voltage Threshold | I2   | 0   | 5000 | 3300    | mV   | <i>GaugingStatus()</i> [TD] cell voltage clear threshold   |
| Gas Gauging | TD       | Set RSOC % Threshold    | U1   | 0   | 100  | 6       | %    | <i>GaugingStatus()</i> [TD] <i>RelativeStateOfCharge()</i> set threshold                                   |
| Gas Gauging | TD       | Clear RSOC % Threshold  | U1   | 0   | 100  | 8       | %    | <i>GaugingStatus()</i> [TD] <i>RelativeStateOfCharge()</i> clear threshold                                 |
| Gas Gauging | TC       | Set Voltage Threshold   | I2   | 0   | 5000 | 4400    | mV   | <i>GaugingStatus()</i> [TC] cell voltage set threshold   |
| Gas Gauging | TC       | Clear Voltage Threshold | I2   | 0   | 5000 | 4300    | mV   | <i>GaugingStatus()</i> [TC] cell voltage clear threshold   |
| Gas Gauging | TC       | Set RSOC % Threshold    | U1   | 0   | 100  | 100     | %    | <i>GaugingStatus()</i> [TC] <i>RelativeStateOfCharge()</i> set threshold                                   |
| Gas Gauging | TC       | Clear RSOC % Threshold  | U1   | 0   | 100  | 95      | %    | <i>GaugingStatus()</i> [TC] <i>RelativeStateOfCharge()</i> clear threshold                                 |

## 12.10 Terminate Charge and Discharge Alarms

The *BatteryStatus()*[TCA][TDA][FC][FD] flags are set according to *GaugingStatus()* and safety protections. The following is a summary of the set conditions and their various alarm flags:

[TCA] = 1

- *SafetyAlert()*[OCC], [COV], [OTC], [UTC] = 1 OR
- *PFAAlert()*[SOV] = 1 OR
- Any *PFStatus()* = 1 OR
- *GaugingStatus()*[TC] = 1 AND in CHARGE mode

[FC] = 1

- *GaugingStatus()*[FC] = 1

[TDA] = 1 if

- *SafetyAlert()*[OCD], [CUV], [OTD], [UTD] = 1 OR
- *PFAAlert()*[SUV] = 1 OR
- Any *PFStatus()* = 1 OR
- *GaugingStatus()*[TD] = 1 AND in DISCHARGE mode

[FD] = 1 if

- *SafetyStatus()*[CUV] = 1 OR
- *PFStatus()*[SUV] = 1 OR
- *GaugingStatus()*[FD] = 1

[OTA] = 1 if

- *SafetyStatus()*[OTC], [OTD] = 1

## 12.11 Precharge

The device enters PRECHARGE mode if the cell voltage falls below **Precharge Start Voltage**.

## 12.12 Charge Disable and Discharge Disable

The BQ27Z746-R1 and BQ27Z758 devices can disable charging if certain safety conditions are detected, setting the *OperationStatus()*[XCHG] = 0.

| Status | Condition  | Action  |
|--------|--|---|
| Normal | $GaugingStatus()[TCA] = 0$ if <b>Charging Configuration[CHGFET] = 1</b>  | $ChargingVoltage() =$ Charging Algorithm<br>$ChargingCurrent() =$ Charging Algorithm<br>$OperationStatus()[XCHG] = 0$ |
| Trip   | $ManufacturingStatus()[FET\_EN] = 0$ OR<br>$ChargingStatus()[IN] = 1$ if <b>[CHGIN] = 1</b> OR<br>$ChargingStatus()[SU] = 1$ if <b>[CHGSU] = 1</b> OR<br>$OperationStatus()[SLEEP] = 1$ if AND <b>[SLEEPCHG] = 0</b> OR<br>$GaugingStatus()[TCA] = 1$ if <b>Charging Configuration[CHGFET] = 1</b> | $ChargingVoltage() = 0$<br>$ChargingCurrent() = 0$<br>$OperationStatus()[XCHG] = 1$                                   |

Similarly, the device can disable discharge of certain safety conditions if any of the following conditions are detected, setting the  $OperationStatus()[XDSG] = 1$ :

- $ManufacturingStatus()[FET\_EN] = 0$  OR
- Any  $PFStatus()$  set OR
- $OperationStatus()[SDM] = 1$  AND delay time > **FET Off Time** OR
- $OperationStatus()[SDV] = 1$  AND low voltage time  $\geq$  **Shutdown Time** .

### 12.13 Charge Inhibit

The BQ27Z746-R1 and BQ27Z758 devices can provide information to the smart charger to enable it to inhibit the start of charging at high and low temperatures to prevent damage of the cells. This feature is intended to enable the charger to prevent the start of charging when the temperature is at the inhibit range; therefore, if charging is in progress, the charger must determine its actions. *Temp Range* bit definitions can be found in  $ChargingStatus()$ .

| Status | Condition   | Action   |
|--------|---|--|
| Normal | $Temp\ Range[LT] = 1$ OR<br>$Temp\ Range[STL] = 1$ OR<br>$Temp\ Range[RT] = 1$ OR<br>$Temp\ Range[STH] = 1$ | $ChargingStatus()[IN] = 0$<br>$ChargingVoltage() =$ charging algorithm<br>$ChargingCurrent() =$ charging algorithm |
| Trip   | Not charging AND $Temp\ Range[HT] = 1$  | $ChargingStatus()[IN] = 1$<br>$ChargingStatus()[SU] = 0$<br>$ChargingVoltage() = 0$<br>$ChargingCurrent() = 0$     |

### 12.14 Charge Suspend

The device can stop charging at high and low temperatures to prevent damage of the cells. The charge suspend feature is mutually exclusive with the charge inhibit, so if charge inhibit is set after the device exits charging, then the charge suspend status will be cleared.

| Status | Condition   | Action   |
|--------|---|--|
| Normal | $ChargingStatus()[LT] = 1$ OR<br>$ChargingStatus()[STL] = 1$ OR<br>$ChargingStatus()[RT] = 1$ OR<br>$ChargingStatus[STH] = 1$ OR<br>$ChargingStatus()[HT] = 1$ OR<br>$ChargingStatus[IN] = 1$ | $ChargingStatus()[SU] = 0$<br>$ChargingVoltage() =$ charging algorithm<br>$ChargingCurrent() =$ charging algorithm |
| Trip   | $ChargingStatus()[UT] = 1$ OR<br>$ChargingStatus()[OT] = 1$   | $ChargingStatus()[SU] = 1$<br>$ChargingVoltage() = 0$<br>$ChargingCurrent() = 0$                                   |

### 12.15 Zero Volt Charging (ZVCHG)

The device supports trickle charging a cell at very low voltages. This is known as zero volt charging (ZVCHG). When ZVCHG is enabled, the device connects the gate of the CHG FET to the PACK pin to turn it on when the cell voltage is otherwise too low. ZVCHG is only enabled in the presence of a charger as determined by the PACK pin voltage. While ZVCHG is enabled, the FET driver to the gate of the CHG FET is disabled (reflected

by `OperationStatus()[CHG]`). ZVCHG is disabled for the same charge disable conditions as described above, as well as for any protections that disable the CHG FET.

When the device boots up, the DSG FET is off and the CHG FET is on due to ZVCHG. The device performs very fast ADC measurements of cell and PACK voltage to determine if ZVCHG should remain enabled to prevent the device from possibly experiencing a power-on reset due to a low cell voltage. If the conditions to enable ZVCHG are not present, the CHG FET is turned off by disabling ZVCHG to ensure no current flows during the initial measurements for open-circuit voltage (OCV).

| Status   | Condition  | Action   |
|----------|--|--|
| Activate | $Voltage() < \mathbf{ZVCHG\ Exit\ Threshold}$ AND<br>Pack Pin Voltage $\geq \mathbf{ZVCHG\ PACK\ Threshold}$ | <code>OperationStatus()[ZVCHG] = 1</code><br><code>OperationStatus()[CHG] = 0</code> |
| Exit     | $Voltage() \geq \mathbf{ZVCHG\ Exit\ Threshold}$ OR<br>Pack Pin Voltage $< \mathbf{ZVCHG\ PACK\ Threshold}$  | <code>OperationStatus()[ZVCHG] = 0</code><br><code>OperationStatus()[CHG] = 1</code> |

| Class    | Subclass | Name                 | Type | Min | Max  | Default | Unit |
|----------|----------|----------------------|------|-----|------|---------|------|
| Settings | AFE      | ZVCHG Exit Threshold | I2   | 0   | 2000 | 2000    | mV   |
| Settings | AFE      | ZVCHG PACK Threshold | I2   | 0   | 2000 | 1500    | mV   |

---

#### Note

During device power-on, the firmware performs fast ADC measurements of BAT pin voltage within ~3ms of boot. If BAT pin Voltage  $\geq \mathbf{ZVCHG\ Exit\ Threshold}$  at this early stage, the firmware immediately disables ZVCHG.

---



---

#### Note

This behavior is documented for firmware version BQ27z758 v0.03 bld 4. Future firmware versions may handle this timing differently.

---



### 13.1 HDQ Single-Pin Serial Interface

The HDQ interface is an asynchronous return-to-one protocol where a processor sends the command code to the fuel gauge. With HDQ, the least significant bit (LSB) of a data byte (command) or word (data) is transmitted first.

---

#### Note

The HDQ pin (A3) is open-drain and requires an external pullup resistor.

---

The 8-bit command code consists of two fields: the 7-bit HDQ command code (bits 0:6) and the 1-bit RW field (MSB bit 7). The RW field directs the fuel gauge either to:

- Store the next 8 or 16 bits of data to the specified register or
- Output 8 bits of data from the specified register.

The HDQ peripheral can transmit and receive data as either an HDQ master or slave.

The host processor initiates HDQ serial communication by sending a break command to the fuel gauge. A break is detected when the DATA pin is driven to a logic-low state for a time  $t_{(B)}$  or greater. The DATA pin should then be returned to its normal ready high logic state for a time  $t_{(BR)}$ . The fuel gauge is now ready to receive information from the host processor.


The *HDQ Communication Basics Application Report (SLUA408)* provides details of HDQ communication basics, including an alternative method to use a standard two-wire UART for single-wire HDQ communication.

The BQ27Z746-R1 and BQ27Z758 gauges are shipped in I<sup>2</sup>C mode, but TI provides a method to switch to HDQ mode via *SwitchToHDQ()* (see [AltManufacturerAccess\(\) 0x7C40](#) for details).

### 13.2 I<sup>2</sup>C Interface

The gauge supports the standard I<sup>2</sup>C read, incremental read, one-byte write, quick read, and functions. The 7-bit device address (ADDR) is the most significant 7 bits of the hex address and defaults to 1010101, or 0x55. The 8-bit device address therefore defaults to 0xAA or 0xAB for write or read, respectively.

The 7-bit device address can be configured by setting **Alt I2C Address** to the desired address and **Alt I2C Addr Chk** to the 2's complement of **Alt I2C Address**. If **Alt I2C Address** and **Alt I2C Addr Chk** are updated, a reset is required for the gauge to use the new device address. However, the gauge defaults to 0x55 if **Alt I2C Address** is 0x00 or 0xFF or **Alt I2C Addr Chk** is not set correctly.

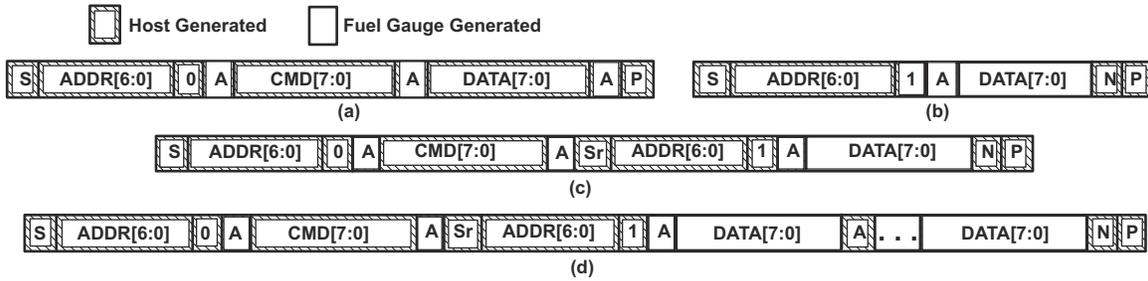

- a. 1-byte write
- b. Quick read
- c. 1-byte read
- d. Incremental read

**Figure 13-1. Supported I<sup>2</sup>C Formats**

(S = Start, Sr = Repeated Start, A = Acknowledge, N = No Acknowledge, and P = Stop)

The quick read returns data at the address indicated by the address pointer. The address pointer, a register internal to the I<sup>2</sup>C communication engine, increments when data is acknowledged by the fuel gauge or the I<sup>2</sup>C master. Quick writes function in the same way and are a convenient means of sending multiple bytes to consecutive command locations (such as two-byte commands that require two bytes of data).

Attempt to write a read-only address (NACK after data sent by master):




Attempt to read an address above 0x7F (NACK command):



Attempt at incremental writes (NACK all extra data bytes sent):



Incremental read at the maximum allowed read address:

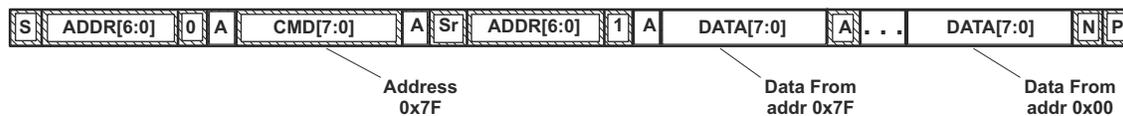

### 13.2.1 I<sup>2</sup>C Clock Frequency


The gauge supports different maximum clock frequencies for the I<sup>2</sup>C engine. The desired maximum clock frequency can be configured via **Settings.Configuration.I2C Configuration**.

### 13.2.2 I<sup>2</sup>C Time Out


The I<sup>2</sup>C engine releases SDA and SCL if the I<sup>2</sup>C bus is held low for about two seconds. If the fuel gauge were holding the lines, releasing them frees the master to drive the lines.

### 13.2.3 I<sup>2</sup>C Command Waiting Time

To ensure the correct results of a command with the 400-kHz I<sup>2</sup>C operation, there must be a proper waiting time between issuing the command and reading the results. For *AltManufacturerAccess()* commands, the following diagram shows the waiting time required between issuing the *AltManufacturerAccess()* command and reading the status. For read-only standard commands, there is no waiting time required, but the host must not issue all standard commands more than two times per second. If thousands of I<sup>2</sup>C transactions are sent to the gauge in one second, then it could adversely impact the CPU and cause a watchdog reset.

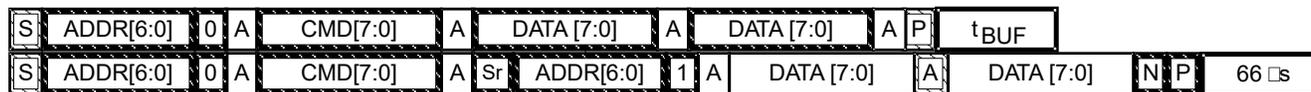

Waiting time between control subcommand and reading results

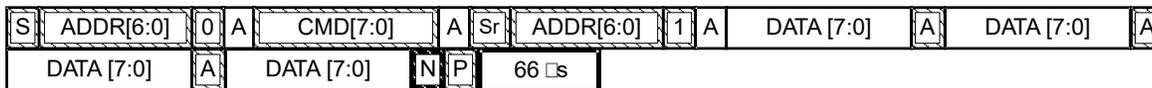

Waiting time between continuous reading results

**Table 13-1. Command Waiting Times**

| Command  | t <sub>BUF</sub> |
|--|------------------|
| Data flash signature commands: <i>StaticDFSSignature()</i> , <i>StaticChemDFSSignature()</i> , or <i>AllDFSSignature()</i> | 250 ms           |
| All other writes to <i>AltManufacturerAccess()</i>   | 66 μs            |

### 13.2.4 I<sup>2</sup>C Clock Stretching

I<sup>2</sup>C clock stretches can occur during all modes of fuel gauge operation. In SLEEP mode, a short clock stretch occurs on all I<sup>2</sup>C traffic, as the device must wake up to process the packet. In NORMAL and SLEEP modes, clock stretching only occurs for packets addressed for the fuel gauge. The timing of stretches varies as interactions between the communicating host and the gauge are asynchronous. The I<sup>2</sup>C clock stretches may occur after start bits, the ACK/NACK bit, and first data bit transmit on a host read cycle. The majority of clock stretch periods are small ( $\leq 4$  ms), as the I<sup>2</sup>C interface peripheral and CPU firmware perform normal data flow control. However, less frequent but more significant clock stretch periods may occur when data flash is written by the CPU to update the Ra tables and other data flash parameters, such as QMax. Due to the organization of data flash, updates need to be written in data blocks consisting of multiple data bytes.

For example, an Ra table update requires erasing a single page of data flash and programming the updated Ra table. The potential I<sup>2</sup>C clock stretching time is 40.08 ms maximum. This includes a 40-ms page erase and 40-μs row programming time ( $\times 2$  rows). The Ra table updates occur during the discharge cycle and at up to 15 resistance grid points that occur during the discharge cycle.



## 14.1 Manufacture Testing

To improve the manufacture testing flow, the gas gauge device allows certain features to be toggled on or off through *AltManufacturerAccess()* commands (for example, *CHG FET()*, *DSG FET()*, *FET Control Override()*, *LifetimeDataCollection()*, *CalibrationMode()*, and *Gauging()*). Enabling only the feature under test can simplify the test flow in production by avoiding any feature interference. The *AltManufacturerAccess()* command that toggles *ManufacturingStatus()*[*CAL\_EN*], [*LT\_TEST*], [*FET\_OVRD*], [*DSG\_TEST*], and [*CHG\_TEST*] only sets the RAM data, meaning the conditions set by this command are cleared if a reset or seal is issued to the gauge. The *AltManufacturerAccess()* commands that toggle *ManufacturingStatus()*[*LF\_EN*], [*FET\_EN*], [*GAUGE\_EN*] are updated to data flash and synchronized between *ManufacturingStatus()* and **Mfg Status Init**. *ManufacturingStatus()* keeps track of the status (enabled or disabled) of each feature.

**Mfg Status Init** provides the option to enable or disable individual features for normal operation. Upon a reset or a seal command, *ManufacturingStatus()* is reloaded from **Mfg Status Init**. This means if an update is made to **Mfg Status Init** to enable or disable a feature, the gauge only takes the new setting if a reset or seal command is sent.

### 14.1.1 Manufacturing Status Configuration

| Class    | Subclass      | Name            | Type | Min    | Max    | Default | Description   |
|----------|---------------|-----------------|------|--------|--------|---------|---|
| Settings | Manufacturing | Mfg Status Init | H2   | 0x0000 | 0xFFFF | 0x0000  | Bit 0: Reserved<br>Bit 1: Reserved<br>Bit 2: Reserved<br>Bit 3: GAUGE_EN—Gauging<br>0 = Disabled (default)<br>1 = Enabled<br>Bit 4: FET_EN<br>0 = Disabled<br>1 = Enabled<br>Bit 5: LF_EN—Lifetime data collection<br>0 = Disabled (default)<br>1 = Enabled<br>Bit 15:6: Reserved |

## 14.2 I<sup>2</sup>C Configuration

The following table describes the bit settings for I<sup>2</sup>C communication options.

| Class    | Subclass      | Name              | Type | Min    | Max    | Default | Unit | Description  |
|----------|---------------|-------------------|------|--------|--------|---------|------|--|
| Settings | Configuration | I2C Configuration | H1   | 0x0000 | 0x08FF | 0x0028  | —    | Bit 2:0: Reserved<br>Bit 3: XL—Enables 400-kHz I <sup>2</sup> C max clock frequency<br>0 = 100-kHz max clock frequency<br>1 = 400-kHz max clock frequency (default)<br>Bits 5:4:Bus LowTimeout<br>0,0 = No timeout<br>0,1 = 1 second<br>1,0 = 2 seconds<br>1,1 = 3 seconds<br>Bit 6: Reserved<br>Bit 7: FLASH_BUSY_WAIT—Set this bit to avoid NACKs on legal commands. Note there will be long clock stretches if the gauge is updating data flash.<br>Bit 10:8: Reserved<br>Bit 11: NO_CLOCK—HFO Clock Disabled for Target Address<br>0 = HFO clock enabled receiving target address (default)<br>1 = HFO clock disabled receiving target address. Requires strict timing compliance<br>Bit 15:12: Reserved |

### 14.3 Manufacturer Information Blocks

There are three 32-byte manufacturer information blocks in data flash that record details related to the manufacture of a battery pack. The gauge does not use this data; it is available for the manufacturer to use and interpret the data. No formatting of data written in these blocks is imposed by the gauge firmware. These blocks can be accessed by either the regular data flash access methods or by using *ManufacturerAccess()* commands. See the entries for **Manufacturer Data**, **Manufacturer Info B**, and **Manufacturer Info C** in the [Section 18.1](#) to *AltManufacturerAccess()* *0x007A ManufacturerInfoB* access by [Section 16.2.69](#).

The manufacturer information blocks can also be read or written when the gauge is in the UNSEALED mode, using the associated MACs *AltManufacturerAccess()* *0x0070 ManufacturerInfo*, *AltManufacturerAccess()* *0x007A ManufacturerInfoB*, and *AltManufacturerAccess()* *0x007B ManufacturerInfoC*. *AltManufacturerAccess()* *0x007B ManufacturerInfoC* can be used to write to manufacturer information block c when the gauge is SEALED if *[MFG\_C\_SEALED]* is set in **Settings.Configuration.I2C Configuration**.

### 14.4 Verification of Data Flash

During manufacture, the configuration of the gauge in data flash will be updated. Typically, a known good data flash image is loaded to the device. To avoid the time needed to read back to verify the data flash, a number of data flash signature Manufacturer Access commands are available (see [Section 16.2](#)). The BQ27Z746-R1 and BQ27Z758 have both static and non-static sections in the data flash memory. The static memory areas are only changed by host writes to data flash commands. Non-static memory may be modified by the gauge firmware.

### 14.5 Calibration

The device has integrated routines that support calibration of current and voltage readings, accessible after writing 0xF081 to *AltManufacturerAccess()* when the *ManufacturingStatus()[CAL\_EN]* bit is ON. While the calibration is active, the raw ADC data is available on *MACData()*. The device stops reporting calibration data on *MACData()* if any other MAC commands are sent or the device is reset or sealed.

#### Note

The *ManufacturingStatus()[CAL\_EN]* bit must be turned OFF after calibration is completed. The *ManufacturingStatus()[CAL\_EN]* bit is set by default when **Mfg Status Init** is set to 0. This bit is cleared at reset or after sealing.

**Table 14-1. AltManufacturerAccess() Descriptions**

| AltManufacturerAccess() | Description   |
|-------------------------|---|
| 0x002D                  | Enables/disables <i>ManufacturingStatus()[CAL_EN]</i> |

**Table 14-1. AltManufacturerAccess() Descriptions (continued)**

| AltManufacturerAccess() | Description  |
|-------------------------|--|
| 0xF080                  | Disables raw ADC data output on <i>MACData()</i>             |
| 0xF081                  | Outputs raw ADC data of voltage and current <i>MACData()</i> |

The *MACData()* output format is: ZZYYaaAAabbBBccCCddDDeeEEffFFggGGhhHHiiiJJkkKK,

where:

**Table 14-2. MACData() Format Descriptions**


| Value | Format   | Description  |
|-------|----------|--|
| ZZ    | byte     | 8-bit counter, increments when raw ADC values are refreshed (every 1000 ms). |
| YY    | byte     | Output status<br><i>AltManufacturerAccess()</i> = 0xF081: 1                  |
| AAaa  | 2's comp | Current (coulomb counter)  |
| BBbb  | 2's comp | Cell Voltage   |
| CCcc  | 2's comp | Reserved   |
| DDdd  | 2's comp | Reserved   |
| EEee  | 2's comp | Reserved   |
| FFff  | 2's comp | Reserved   |
| GGgg  | 2's comp | Reserved   |
| HHhh  | 2's comp | Cell Current   |
| IIii  | 2's comp | Reserved   |
| JJjj  | 2's comp | Reserved   |
| KKkk  | 2's comp | Reserved   |

**Note**

All calibration steps that require accessing data on *MACData()* must begin read operations starting at *AltManufacturerAccess()* to ensure the data portion of the block is properly refreshed per the intended *AltManufacturerAccess()* subcommand (in this case 0xF081). The first two bytes returned are the *AltManufacturerAccess()* subcommand followed by the counter, status, and raw ADC values, as shown in [Table 14-1](#).

**15.1 Voltage Calibration**

**15.1.1 Cell (BAT) Voltage Calibration**

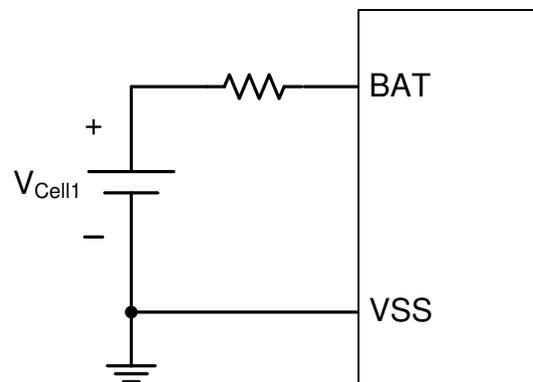


**Figure 15-1. Cell Voltage Calibration**

- Apply known voltage in mV to the cell voltage inputs:
  - $V_{CELL1}$  between BAT terminal and VSS terminal
- If *ManufacturerStatus()*[CAL\_EN] = 0, send 0x002D to *AltManufacturerAccess()* to enable the [CAL\_EN] flag.
- Send 0xF081 to *AltManufacturerAccess()* to enable raw cell voltage output on *MACData()*.
- Poll *MACData()* until the 8-bit counter value increments by 2 before reading data.
- Read the ADC conversion readings of cell voltages from *MACData()*:
  - $ADC_{CELL1}$  = BBbb of *MACData()*
- Average several readings for higher accuracy. Poll *MACData()* until ZZ increments, to indicate that updated values are available:
  - $ADC_{CELL1} = [ADC_{CELL1}(\text{reading } n) + \dots + ADC_{CELL1}(\text{reading } 1)]/n$
- Calculate gain value:

$$Cell\ Gain = \frac{V_{Cell1}}{ADC_{Cell1}} \times 2^{16}$$

- Write the new **Cell Gain** value to data flash.
- Recheck the voltage reading and if it is not accurate, repeat Steps 5 and 6.
- Send 0x002D to *AltManufacturerAccess()* to clear the [CAL\_EN] flag if all calibration is complete.

### 15.1.2 Pack (PACK) Voltage Calibration

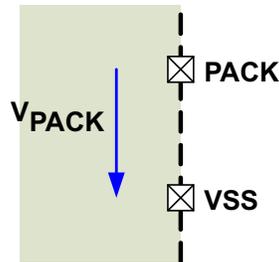

- Apply known voltages in mV to the voltage input:
  - $V_{PACK}$  between PACK terminal and VSS terminal
- If *ManufacturerStatus()*[CAL\_EN] = 0, send 0x002D to *AltManufacturerAccess()* to enable the [CAL\_EN] flag.
- Send 0xF081 to *AltManufacturerAccess()* to enable raw pack voltage output on *MACData()*.
- Poll *MACData()* until the 8-bit counter value increments by 2 before reading data.
- Read ADC conversion readings of pack voltage from *MACData()*:
  - $ADC_{PACK}$  = FFff of *MACData()*
- Average several readings for higher accuracy. Poll *MACData()* until ZZ increments to indicate that updated values are available:
  - $ADC_{PACK} = [ADC_{PACK}(\text{reading } n) + \dots + ADC_{PACK}(\text{reading } 1)]/n$
- Calculate gain value:

$$PACK\ Gain = \frac{V_{PACK}}{ADC_{PACK}} \times 2^{16}$$

- Write the new **Pack Gain** value to data flash.
- Recheck voltage readings and if they are not accurate, repeat Steps 4 through 6.
- Send 0x002D to *AltManufacturerAccess()* to clear the [CAL\_EN] flag if all calibration is complete.


### 15.1.3 Voltage Calibration Data Flash

| Class       | Subclass | Name      | Type | Min    | Max   | Default              | Unit | Description    |
|-------------|----------|-----------|------|--------|-------|----------------------|------|----------------|
| Calibration | Voltage  | Cell Gain | I2   | -32768 | 32767 | 12101 <sup>(1)</sup> | —    | BAT – VSS gain |

| Class       | Subclass | Name      | Type | Min | Max   | Default              | Unit | Description     |
|-------------|----------|-----------|------|-----|-------|----------------------|------|-----------------|
| Calibration | Voltage  | Pack Gain | U2   | 0   | 65536 | 24835 <sup>(1)</sup> | —    | Pack – VSS gain |

(1) Clearing this value causes the gauge to use the internal factory calibration default.

## 15.2 Current Calibration

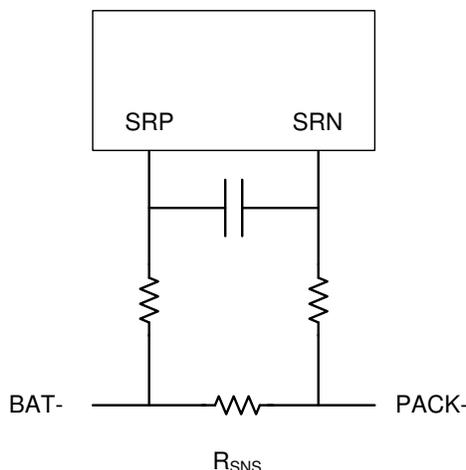

**Figure 15-2. Current Calibration (Charge Current Flow Is BAT– to PACK–)**

### Note

CC offset and board offset are no longer calibrations required by the BQ27Z746 and BQ27Z758 due to hardware improvements.

### 15.2.1 CC Gain/Capacity Gain Calibration

- Apply a known current (typically 1 A to 2 A), and ensure  $I_{CC}$  is flowing through the sense resistor connected between the SRP and SRN pins.
- If `ManufacturingStatus()[CAL_EN] = 0`, send 0x002D to `AltManufacturerAccess()` to enable the `[CAL_EN]` flag.
- Send 0xF081 to `AltManufacturerAccess()` to enable raw CC output on `MACData()`.
- Poll `MACData()` until ZZ increments by 2 before reading data.
- Check the ADC conversion current output from `MACData()`:
  - $ADC_{CC} = \text{AAaa of } MACData()$

Is  $ADC_{CC} < 0x8000$ ? If yes, use  $ADC_{CC}$ ; otherwise,  $ADC_{CC} = -(0xFFFF - \text{AAaa} + 0x0001)$ .
- Average several readings for higher accuracy. Poll `MACData()` until ZZ increments to indicate that updated values are available:
  - $ADC_{CC} = [ADC_{CC}(\text{reading } n) + \dots + ADC_{CC}(\text{reading } 1)]/n$
- Calculate gain values:
$$CC \text{ Gain} = I_{CC} / ADC_{CC}$$

$$Capacity \text{ Gain} = CC \text{ Gain} \times 1193046.4712$$
- Write the new **CC Gain** and **Capacity Gain** values to data flash.
- Recheck the current reading. If the reading is not accurate, repeat the steps.
- Send 0x002D to `AltManufacturerAccess()` to clear the `[CAL_EN]` flag if all calibration is complete.

### 15.2.2 Deadbands

The gauge can be configured to ignore current and coulomb measurements below individually programmable levels.

### 15.2.2.1 Current Deadband

When current measures to a value less than the value programmed in **Deadband**, *Current()* will report 0. This has no effect on the coulomb counting for the gas gauging functionality. The value of **Deadband** should be selected based on the characterization of the battery electronics design combined with the environment in which the battery will be used. If the PCB senses noise causing a real no-current condition to report a non-zero value, then **Deadband** could be adjusted accordingly.

### 15.2.2.2 Coulomb Counter Deadband

During normal operation, there could be noise generated in the battery electronics environment that could cause the gauge to accumulate incorrectly (positively or negatively). To filter out this noise, the **Coulomb Counter Deadband** setting is used. Any input below this threshold is not accumulated.

### 15.2.3 Current Calibration Data Flash

| Class       | Subclass         | Name                     | Type | Min          | Max           | Default    | Unit   | Description  |
|-------------|------------------|--------------------------|------|--------------|---------------|------------|--------|--|
| Calibration | Current          | CC Gain                  | F4   | 1.00E-001    | 4.00E+000     | 3.68       | —      | Coulomb Counter Gain   |
| Calibration | Current          | Capacity Gain            | F4   | 2.98262E+004 | 1.193046E+006 | 4390411.01 | —      | Capacity Gain  |
| Calibration | Current Deadband | Deadband                 | U1   | 0            | 255           | 3          | mA     | Cell-based deadband to report 0 mA   |
| Calibration | Current Deadband | Coulomb Counter Deadband | U1   | 0            | 255           | 9          | 116 nV | Coulomb counter deadband to report 0 charge (This setting should not be modified.) |

## 15.3 Temperature Calibration

### Note

For temperature calibration, only an offset is determined and then applied to the gauge's measured temperatures.

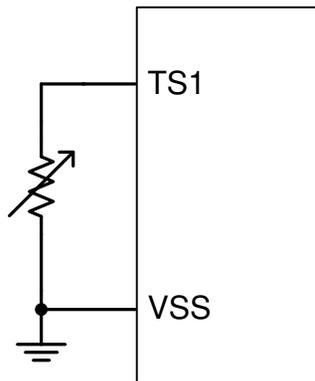


Figure 15-3. Temperature Calibration

### 15.3.1 Internal Temperature Sensor Calibration

1. Apply a known temperature in 0.1°C, and ensure that temperature Temp<sub>TINT</sub> is applied to the device.
2. Read the TINT offset<sub>old</sub> from **Internal Temp Offset**.
3. Read the reported temperature from *DAStatus2()*:
  - TINT = AAaa of *DAStatus2()*

Is TINT > 0? If yes, TINT = AAaa – 2732.
4. Calculate temperature offset:

$$TINT\ offset = TEMP_{TINT} - TINT + TINT\ offset_{old}$$

5. Write the new **Internal Temp Offset** value to data flash.
6. Recheck the `DAStatus2()` reading. If the reading is not accurate, repeat the steps.

### 15.3.2 TS Calibration

1. Apply a known temperature in 0.1°C, and ensure the temperature  $TEMP_{TS}$  is applied to the thermistor connected to the TS terminal.
2. Read the TS  $offset_{old}$  from **External1 Temp Offset**.
3. Read the appropriate temperature from the `DAStatus2()` block as TS.
4. Calculate the temperature offset:

$$TS\ offset = TEMP_{TS} - TS + TS\ offset_{old}$$

5. Write the new **External1 Temp Offset** value to data flash.
6. Recheck the `DAStatus2()` reading. If the reading is not accurate, repeat the steps.

#### Note

Follow the same steps when calibrating the temperature measurement on the GPO pin (referred to as TS2 Temperature in `DAStatus2()`, which can be used for cell or FET temperature), except use **External2 Temp Offset**.

### 15.3.3 Temperature Calibration Data Flash

It is not necessary to adjust these offsets. These offsets can be used to improve temperature accuracy at temperatures away from the calibration temperature of the models below; however, they can reduce accuracy across the range of temperatures.

| Class       | Subclass    | Name                  | Type | Min  | Max | Default | Unit   | Description  |
|-------------|-------------|-----------------------|------|------|-----|---------|--------|--|
| Calibration | Temperature | Internal Temp Offset  | I1   | -128 | 127 | 0       | 0.1 °C | Internal temperature sensor reading offset               |
| Calibration | Temperature | External1 Temp Offset | I1   | -128 | 127 | 0       | 0.1 °C | TS pin temperature sensor reading offset                 |
| Calibration | Temperature | External2 Temp Offset | I1   | -128 | 127 | 0       | 0.1 °C | GPO pin (used for TS2) temperature sensor reading offset |

### 15.3.4 Cell Temp Model

The parameters in the following table are used for the Semitec 103AT-2 thermistor; default for the TS pin. These parameters will only need to be updated if a different thermistor is used. See the application report to calculate coefficients for other thermistors.

| Class       | Subclass        | Name           | Type | Min    | Max   | Default          | Unit | Description                                   |
|-------------|-----------------|----------------|------|--------|-------|------------------|------|---|
| Calibration | Cell Temp Model | Coefficient a1 | I2   | -32768 | 32767 | -17447           | —    | Cell Temperature calculation polynomial a1    |
| Calibration | Cell Temp Model | Coefficient a2 | I2   | -32768 | 32767 | 29332            | —    | Cell Temperature calculation polynomial a2    |
| Calibration | Cell Temp Model | Coefficient a3 | I2   | -32768 | 32767 | -25430           | —    | Cell Temperature calculation polynomial a3    |
| Calibration | Cell Temp Model | Coefficient a4 | I2   | -32768 | 32767 | 29836            | —    | Cell Temperature calculation polynomial a4    |
| Calibration | Cell Temp Model | Coefficient a5 | I2   | -32768 | 32767 | 1200             | —    | Cell Temperature calculation polynomial a5    |
| Calibration | Cell Temp Model | Coefficient b1 | I2   | -32768 | 32767 | -293             | —    | Cell Temperature calculation polynomial b1    |
| Calibration | Cell Temp Model | Coefficient b2 | I2   | -32768 | 32767 | 552              | —    | Cell Temperature calculation polynomial b2    |
| Calibration | Cell Temp Model | Coefficient b3 | I2   | -32768 | 32767 | -2887            | —    | Cell Temperature calculation polynomial b3    |
| Calibration | Cell Temp Model | Coefficient b4 | I2   | -32768 | 32767 | 4591             | —    | Cell Temperature calculation polynomial b4    |
| Calibration | Cell Temp Model | Rc0            | I2   | -32768 | 32767 | 11703            | —    | Resistance at 25°C                            |
| Calibration | Cell Temp Model | Adc0           | I2   | -32768 | 32767 | 11703            | —    | ADC reading at 25°C                           |
| Calibration | Cell Temp Model | Rpad           | I2   | -32768 | 32767 | 1 <sup>(1)</sup> | Ω    | Pad Resistance (0 to use factory calibration) |

| Class       | Subclass        | Name | Type | Min    | Max   | Default              | Unit | Description   |
|-------------|-----------------|------|------|--------|-------|----------------------|------|---|
| Calibration | Cell Temp Model | Rint | I2   | -32768 | 32767 | 18000 <sup>(1)</sup> | Ω    | Pullup resistor resistance (0 to use factory calibration) |

(1) Setting this value to 0 causes the gauge to use the internal factory calibration default.

### 15.3.5 Internal Temp Model

Values in this table should not be modified, as the voltage-based sensor in the device was factory trimmed for these model parameters.

| Class       | Subclass            | Name             | Type | Min    | Max   | Default | Unit  | Description                           |
|-------------|---------------------|------------------|------|--------|-------|---------|-------|---------------------------------------|
| Calibration | Internal Temp Model | Int Gain         | I2   | -32768 | 32767 | -13908  | —     | Internal temperature gain             |
| Calibration | Internal Temp Model | Int Base Offset  | I2   | -32768 | 32767 | 6959    | —     | Internal temperature base offset      |
| Calibration | Internal Temp Model | Int Minimum AD   | I2   | -32768 | 32767 | 0       | —     | Minimum AD count used for calculation |
| Calibration | Internal Temp Model | Int Maximum Temp | I2   | -32768 | 32767 | 6959    | 0.1 K | Maximum Temperature boundary          |

### 15.3.6 2nd Temperature Model

The parameters in the following table are used for the Semitec 103AT-2 thermistor; default for the GPO pin for either cell or FET temperature. These parameters only need to be updated if a different thermistor is used. If a different thermistor is desired, guidance on selection and coefficient calculation can be found at [Thermistor Selection Guide for Texas Instruments Advanced Fuel Gauges](#).

| Class       | Subclass              | Name           | Type | Min    | Max   | Default              | Unit | Description   |
|-------------|-----------------------|----------------|------|--------|-------|----------------------|------|---|
| Calibration | 2nd Temperature Model | Coefficient a1 | I2   | -32768 | 32767 | -17447               | —    | Cell Temperature calculation polynomial a1                |
| Calibration | 2nd Temperature Model | Coefficient a2 | I2   | -32768 | 32767 | 29332                | —    | Cell Temperature calculation polynomial a2                |
| Calibration | 2nd Temperature Model | Coefficient a3 | I2   | -32768 | 32767 | -25430               | —    | Cell Temperature calculation polynomial a3                |
| Calibration | 2nd Temperature Model | Coefficient a4 | I2   | -32768 | 32767 | 29836                | —    | Cell Temperature calculation polynomial a4                |
| Calibration | 2nd Temperature Model | Coefficient a5 | I2   | -32768 | 32767 | 1200                 | —    | Cell Temperature calculation polynomial a5                |
| Calibration | 2nd Temperature Model | Coefficient b1 | I2   | -32768 | 32767 | -293                 | —    | Cell Temperature calculation polynomial b1                |
| Calibration | 2nd Temperature Model | Coefficient b2 | I2   | -32768 | 32767 | 552                  | —    | Cell Temperature calculation polynomial b2                |
| Calibration | 2nd Temperature Model | Coefficient b3 | I2   | -32768 | 32767 | -2887                | —    | Cell Temperature calculation polynomial b3                |
| Calibration | 2nd Temperature Model | Coefficient b4 | I2   | -32768 | 32767 | 4591                 | —    | Cell Temperature calculation polynomial b4                |
| Calibration | 2nd Temperature Model | Rc0            | I2   | -32768 | 32767 | 11703                | —    | Resistance at 25°C  |
| Calibration | 2nd Temperature Model | Adc0           | I2   | -32768 | 32767 | 11703                | —    | ADC reading at 25°C                                       |
| Calibration | 2nd Temperature Model | Rpad           | I2   | -32768 | 32767 | 1 <sup>(1)</sup>     | Ω    | Pad Resistance (0 to use factory calibration)             |
| Calibration | 2nd Temperature Model | Rint           | I2   | -32768 | 32767 | 18000 <sup>(1)</sup> | Ω    | Pullup resistor resistance (0 to use factory calibration) |

(1) Setting this value to 0 causes the gauge to use the internal factory calibration default.



## 16.1 Standard Data Commands

The BQ27Z746-R1 and BQ27Z758 devices use a series of 2-byte standard commands to enable system reading and writing of battery information. Each standard command has an associated command code pair, as indicated in [Table 16-1, Standard Commands](#). The LSB of the command code corresponds to the LSB register data. The LSB should be read first to keep the register data synchronized. For some host systems, the host should change the byte order so that the order corresponds to the host's native endianness. Both the I<sup>2</sup>C and HDQ protocols have methods to access the data for each command code. The gauge updates and/or reads the standard command registers once per second.

**Table 16-1. Standard Commands**

| Name                                      | Register Code (LSB/MSB) | Description  |
|---|-------------------------|--|
| <i>ManufacturerAccess/ControlStatus()</i> | CNTL 0x00/0x01          | Control Register (See <a href="#">Section 16.1.1</a> .)  |
| <i>AtRate()</i>                           | AR 0x02/0x03            | Read/write. The value is a signed integer with the negative value indicating a discharge current value. The default value is 0 and forces <i>AtRateTimeToEmpty()</i> to return 65,535.   |
| <i>AtRateTimeToEmpty()</i>                | ARTTE 0x04/0x05         | This read-only function returns an unsigned integer value to predict remaining operating time based on battery discharge at the <i>AtRate()</i> value in minutes with a range of 0 to 65,534. A value of 65,535 indicates <i>AtRate()</i> = 0. The gas gauge updates the <i>AtRateTimeToEmpty()</i> within 1 s after the system sets the <i>AtRate()</i> value. The gas gauge updates these parameters every 1 s. The commands are used in NORMAL mode.  |
| <i>Temperature()</i>                      | TEMP 0x06/0x07          | This read-only function returns an unsigned integer value of temperature measured by the gas gauge and is used for the gauging algorithm. Values are reported in units 0.1 K. It reports either internal temperature or external thermistor temperature, depending on the setting of the <i>[TS1]</i> and <i>[TSlnt]</i> bits in <i>Temperature Enable</i> .   |
| <i>Voltage()</i>                          | VOLT 0x08/0x09          | This read-only function returns an unsigned integer value of the measured cell pack in mV with a range of 0 to 6000 mV.  |
| <i>BatteryStatus()</i>                    | FLAGS 0x0A/0x0B         | This read-only function returns various battery status information.  |
| <i>Current()</i>                          | INSTCURR 0x0C/0x0D      | This read-only function returns a signed integer value that is the instantaneous current flow through the sense resistor. The value is updated every 1 s. Units are mA.  |
| <i>RemainingCapacity()</i>                | RM 0x10/0x11            | This read-only command returns the predicted remaining capacity, based on rate (per configured <i>Load Select</i> ), temperature, present depth-of-discharge, and stored impedance. Values are reported in mAh.  |
| <i>FullChargeCapacity()</i>               | FCC 0x12/0x13           | This read-only command returns the predicted capacity of the battery at full charge, based on rate (per configured <i>Load Select</i> ), temperature, present depth-of-discharge, and stored impedance. Values are reported in mAh.  |
| <i>AverageCurrent()</i>                   | AI 0x14/0x15            | This read-only function returns a signed integer value that is the average current flow through the sense resistor. The value is updated every 1 s. Units are mA.  |
| <i>AverageTimeToEmpty()</i>               | TTE 0x16/0x17           | Uses average current value with a time constant of 15 s for this method. A value of 65,535 means the battery is not being discharged.  |
| <i>AverageTimeToFull()</i>                | TTF 0x18/0x19           | This read-only function returns a signed integer value, predicting time to reach full charge for the battery in units of minutes based on <i>AverageCurrent()</i> . The computation accounts for the taper current time extension from a linear TTF computation based on a fixed <i>AverageCurrent()</i> rate of charge accumulation. A value of 65,535 indicates the battery is not being charged.  |
| <i>MaxLoadCurrent()</i>                   | MLI 0x1E/0x1F           | This read-only function returns a signed integer value in units of mA of the maximum load current. The <i>MaxLoadCurrent()</i> is an adaptive measurement which is initially reported as the maximum load current programmed in <i>Max Load Current</i> . If the measured current is ever greater than <i>Max Load Current</i> , then the <i>MaxLoadCurrent()</i> updates to the new current. <i>MaxLoadCurrent()</i> is reduced to the average of the previous value and <i>Max Load Current</i> whenever the battery is charged to full after a previous discharge to an RSOC of less than <i>Max Load Rsoc</i> . This will prevent the reported value from maintaining an unusually high value. |
| <i>MaxLoadTimeToEmpty()</i>               | MLTTE 0x20/0x21         | This read-only function returns a signed integer value, predicting remaining battery life at the maximum discharge load current rate in units of minutes. A value of 65,535 indicates that the battery is not being discharged.  |
| <i>AveragePower()</i>                     | AP 0x22/0x23            | This read-only function returns a signed integer value of average power during battery charging and discharging. It is negative during discharge and positive during charge. A value of 0 indicates that the battery is not being discharged. The value is reported in units of mW.  |
| <i>BTPDischargeSet()</i>                  | BTP 0x24/0x25           | This read/write-word command updates the BTP set threshold for DISCHARGE mode for the next BTP interrupt, deasserts the present BTP interrupt, and clears the <i>OperationStatus()[BTP_INT]</i> bit.   |
| <i>BTPChargeSet()</i>                     | BTP 0x26/0x27           | The read/write-word command updates the BTP set threshold for CHARGE mode for the next BTP interrupt, deasserts the present BTP interrupt, and clears the <i>OperationStatus()[BTP_INT]</i> bit.   |

**Table 16-1. Standard Commands (continued)**

| Name                           | Register Code (LSB/MSB) | Description  |
|--------------------------------|-------------------------|--|
| <i>InternalTemperature()</i>   | INT_TEMP 0x28/0x29      | This read-only function returns an unsigned integer value of the measured internal temperature of the device in 0.1 K units measured by the gas gauge.   |
| <i>CycleCount()</i>            | CC 0x2A/0x2B            | This read-only function returns an unsigned integer value of the number of cycles the battery has experienced a discharge (range 0 to 65,535). One cycle occurs when accumulated discharge greater than or equal to the cycle count threshold.             |
| <i>RelativeStateOfCharge()</i> | RSOC 0x2C/0x2D          | This read-only function returns an unsigned integer value of the predicted remaining battery capacity expressed as percentage of <i>FullChargeCapacity()</i> with a range of 0% to 100%.   |
| <i>StateOfHealth()</i>         | SOH 0x2E/0x2F           | This read-only function returns an unsigned integer value of the battery state-of-health expressed as a percentage of the ratio of predicted FCC (simulated with <b>SOH Load Rate</b> at 25°C) over the <i>DesignCapacity()</i> . The range is 0% to 100%. |
| <i>ChargingVoltage()</i>       | CV 0x30/0x31            | Returns the desired charging voltage in mV to the charger  |
| <i>ChargingCurrent()</i>       | CC 0x32/0x33            | Returns the desired charging current in mA to the charger  |
| <i>TerminateVoltage()</i>      | 0x34/0x35               | Returns or updates the value of <b>Terminate Voltage</b>   |
| <i>TimeStampUpper()</i>        | 0x36/0x37               | Returns or updates the upper 16 bits of the time stamp in seconds  |
| <i>TimeStampLower()</i>        | 0x38/0x39               | Returns or updates the lower 16 bits of the time stamp in seconds  |
| <i>QmaxCycles()</i>            | 0x3A/0x3B               | Returns cycle count at the last QMax update  |
| <i>DesignCapacity()</i>        | 0x3C/0x3D               | In SEALED and UNSEALED access: This command returns the value stored in <b>Design Capacity mAh</b> . This is intended to be a theoretical or nominal capacity of a new pack, but should have no bearing on the operation of the gas gauge functionality.   |
| <i>AltManufacturerAccess()</i> | 0x3E/0x3F               | MAC data block command   |
| <i>MACData()</i>               | 0x40/0x5F               | MAC data block   |
| <i>MACDataSum()</i>            | 0x60                    | MAC data block checksum  |
| <i>MACDataLen()</i>            | 0x61                    | MAC data block length  |
| <i>VoltHiSetThreshold()</i>    | 0x62/0x63               | This read/write function is a signed integer in units of mV for the high voltage level threshold, which sets <i>InterruptStatus()[VOLT_HI]</i> .   |
| <i>VoltHiClearThreshold()</i>  | 0x64/0x65               | This read/write function is a signed integer in units of mV for the high voltage level threshold, which clears <i>InterruptStatus()[VOLT_HI]</i> .   |
| <i>VoltLoSetThreshold()</i>    | 0x66/0x67               | This read/write function is a signed integer in units of mV for the low voltage level threshold, which sets <i>InterruptStatus()[VOLT_LO]</i> .  |
| <i>VoltLoClearThreshold()</i>  | 0x68/0x69               | This read/write function is a signed integer in units of mV for the low voltage level threshold, which clears <i>InterruptStatus()[VOLT_LO]</i> .  |
| <i>TempHiSetThreshold()</i>    | 0x6A                    | This read/write function is a signed integer in units of °C for the high temperature level threshold, which sets <i>InterruptStatus()[TEMP_HI]</i> .   |
| <i>TempHiClearThreshold()</i>  | 0x6B                    | This read/write function is a signed integer in units of °C for the high temperature level threshold, which clears <i>InterruptStatus()[TEMP_HI]</i> .   |
| <i>TempLoSetThreshold()</i>    | 0x6C                    | This read/write function is a signed integer in units of °C for the low temperature level threshold, which sets <i>InterruptStatus()[TEMP_LO]</i> .  |
| <i>TempLoClearThreshold()</i>  | 0x6D                    | This read/write function is a signed integer in units of °C for the low temperature level threshold, which clears <i>InterruptStatus()[TEMP_LO]</i> .  |
| <i>InterruptStatus()</i>       | 0x6E                    | This read-only function returns the status of the interrupt including cause of interrupt.  |
| <i>SOCDeltaSetThreshold()</i>  | 0x6F                    | This read/write function is an unsigned char in units of % for the SOC delta level threshold, which clears <i>InterruptStatus()SOC_DELTA</i> .   |

### 16.1.1 0x00/01 ManufacturerAccess()/ControlStatus()

This read/write word function returns the control bits when read and is an interface to the manufacturer access system (MAC) when written. This command is provided for backward compatibility/ease of use, as all of the control bits except *ControlStatus()[ChecksumValid]* are available in *OperationStatusA()* and *OperationStatusB()* in addition to *AltManufacturerAccess()* being the recommended interface for MAC (as discussed in [Section 16.2](#)).

15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

|      |     |    |      |      |      |                 |      |      |      |      |      |      |      |     |     |
|------|-----|----|------|------|------|-----------------|------|------|------|------|------|------|------|-----|-----|
| RSVD | FAS | SS | RSVD | RSVD | RSVD | Check Sum Valid | RSVD | RSVD | RSVD | RSVD | RSVD | LDMD | RDIS | VOK | QEN |
|------|-----|----|------|------|------|-----------------|------|------|------|------|------|------|------|-----|-----|

**RSVD (Bit 15):** Reserved

**FAS, SS (Bits 14–13):** Legacy SECURITY mode

0, 0 = Full Access

0, 1 = Reserved

1, 0 = Unsealed

1, 1 = Sealed

**RSVD (Bit 12):** Reserved

**RSVD (Bits 11–10):** Reserved

**ChecksumValid (Bit 9):** Checksum valid

1 = Flash Writes are enabled.

0 = Flash Writes are disabled due to low voltage or PF condition.

**RSVD (Bits 8–4):** Reserved

**LDMD (Bit 3):** LOAD mode

1 = Constant power

0 = Constant current

**RDIS (Bit 2):** Resistance updates

1 = Disabled

0 = Enabled

**VOK (Bit 1):** Voltage OK for QMax update

1 = Detected

0 = Not detected

**QEN (Bit 0):** Impedance Track Gauging (Ra and QMax updates are enabled.)

### 16.1.2 0x02/03 AtRate()

This read/write word function sets the value used in calculating *AtRateTimeToEmpty()*.

| I <sup>2</sup> C Cmd | Name            | Access |    |    | Proto-<br>col | Type | Min    | Max   | Default | Unit |
|----------------------|-----------------|--------|----|----|---------------|------|--------|-------|---------|------|
|                      |                 | SE     | US | FA |               |      |        |       |         |      |
| 0x02/03              | <i>AtRate()</i> | R/W    |    |    | Word          | I2   | -32768 | 32767 | 0       | mA   |

### 16.1.3 0x04/05 AtRateTimeToEmpty()

This read-word function returns the remaining time to fully discharge the battery based on *AtRate()*.

| I <sup>2</sup> C Cmd | Name                       | Access |    |    | Proto-<br>col | Type | Min | Max   | Unit | Note                              |
|----------------------|----------------------------|--------|----|----|---------------|------|-----|-------|------|-----------------------------------|
|                      |                            | SE     | US | FA |               |      |     |       |      |                                   |
| 0x04/05              | <i>AtRateTimeToEmpty()</i> | R      |    |    | Word          | U2   | 0   | 65535 | min  | 65535 indicates not being charged |

### 16.1.4 0x06/07 Temperature()

This read-word function returns the temperature in units 0.1 K.

| I <sup>2</sup> C Cmd | Name                 | Access |    |    | Proto-<br>col | Type | Min | Max   | Unit  |
|----------------------|----------------------|--------|----|----|---------------|------|-----|-------|-------|
|                      |                      | SE     | US | FA |               |      |     |       |       |
| 0x06/07              | <i>Temperature()</i> | R      |    |    | Word          | I2   | 0   | 32767 | 0.1 K |

### 16.1.5 0x08/09 Voltage()

This read-word function returns the measured cell voltage.

| I <sup>2</sup> C Cmd | Name             | Access |    |    | Proto-<br>col | Type | Min | Max   | Unit |
|----------------------|------------------|--------|----|----|---------------|------|-----|-------|------|
|                      |                  | SE     | US | FA |               |      |     |       |      |
| 0x08/09              | <i>Voltage()</i> | R      |    |    | Word          | I2   | 0   | 32767 | mV   |

### 16.1.6 0x0A/0B BatteryStatus()

This read-word function returns various battery status information.

15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

|      |     |      |      |     |      |     |      |      |     |    |    |      |      |      |      |
|------|-----|------|------|-----|------|-----|------|------|-----|----|----|------|------|------|------|
| RSVD | TCA | RSVD | RSVD | TDA | RSVD | RCA | RSVD | INIT | DSG | FC | FD | RSVD | RSVD | RSVD | RSVD |
|------|-----|------|------|-----|------|-----|------|------|-----|----|----|------|------|------|------|

**RSVD (Bit 15):** Reserved

**TCA (Bit 14):** Terminate Charge Alarm

0 = Inactive

1 = Active

**RSVD (Bits 13–12):** Reserved

**TDA (Bit 11):** Terminate Discharge Alarm

0 = Inactive

1 = Active

**RSVD (Bit 10):** Reserved

**RCA (Bit 9):** Remaining Capacity Alarm

0 = Inactive

1 = Active

**RSVD (Bit 8):** Reserved

**INIT (Bit 7):** Initialization

0 = Complete

1 = Active

**DSG (Bit 6):** Discharging

0 = The battery is charging.

1 = The battery is discharging.

**FC (Bit 5):** Fully Charged

0 = The battery is not fully charged.

1 = The battery is fully charged.

**FD (Bit 4):** Fully Discharged

0 = The battery is okay.

1 = The battery is fully depleted.

**RSVD (Bits 3–0):** Reserved

### 16.1.7 0x0C/0D Current()

This read-word function returns the measured current from the coulomb counter.

| I <sup>2</sup> C Cmd | Name      | Access |    |    | Proto-<br>col | Type | Min    | Max   | Unit |
|----------------------|-----------|--------|----|----|---------------|------|--------|-------|------|
|                      |           | SE     | US | FA |               |      |        |       |      |
| 0x0C/0D              | Current() |        | R  |    | Word          | I2   | -32768 | 32767 | mA   |

### 16.1.8 0x10/11 RemainingCapacity()

This read-word function returns the predicted remaining battery capacity.

| I <sup>2</sup> C Cmd | Name                | Access |    |    | Proto-<br>col | Type | Min | Max   | Unit |
|----------------------|---------------------|--------|----|----|---------------|------|-----|-------|------|
|                      |                     | SE     | US | FA |               |      |     |       |      |
| 0x10/11              | RemainingCapacity() |        | R  |    | Word          | U2   | 0   | 32767 | mAh  |

### 16.1.9 0x12/13 FullChargeCapacity()

This read-word function returns the predicted battery capacity when fully charged.

| I <sup>2</sup> C Cmd | Name                        | Access |    |    | Proto-<br>col | Type | Min | Max   | Unit |
|----------------------|-----------------------------|--------|----|----|---------------|------|-----|-------|------|
|                      |                             | SE     | US | FA |               |      |     |       |      |
| 0x12/13              | <i>FullChargeCapacity()</i> | R      |    |    | Word          | I2   | 0   | 32767 | mAh  |

### 16.1.10 0x14/15 AverageCurrent()

This read-word function provides the filtered/average current.

| I <sup>2</sup> C Cmd | Name                    | Access |    |    | Proto-<br>col | Type | Min    | Max   | Unit |
|----------------------|-------------------------|--------|----|----|---------------|------|--------|-------|------|
|                      |                         | SE     | US | FA |               |      |        |       |      |
| 0x14/15              | <i>AverageCurrent()</i> | R      |    |    | Word          | I2   | -32767 | 32768 | mA   |

### 16.1.11 0x16/17 AverageTimeToEmpty()

This read-word function returns the predicted remaining time to fully discharge the battery based on *AverageCurrent()*.

| I <sup>2</sup> C Cmd | Name                        | Access |    |    | Proto-<br>col | Type | Min | Max   | Unit | Note   |
|----------------------|-----------------------------|--------|----|----|---------------|------|-----|-------|------|--|
|                      |                             | SE     | US | FA |               |      |     |       |      |  |
| 0x16/17              | <i>AverageTimeToEmpty()</i> | R      |    |    | Word          | U2   | 0   | 65535 | min  | 65535 = The battery is not being discharged. |

### 16.1.12 0x18/19 AverageTimeToFull()

This read-word function returns the predicted remaining time to achieve full charge based on *AverageCurrent()*.

| I <sup>2</sup> C Cmd | Name                       | Access |    |    | Proto-<br>col | Type | Min | Max   | Unit | Note |
|----------------------|----------------------------|--------|----|----|---------------|------|-----|-------|------|------|
|                      |                            | SE     | US | FA |               |      |     |       |      |      |
| 0x18/19              | <i>AverageTimeToFull()</i> | R      |    |    | Word          | U2   | 0   | 65535 | min  |      |

### 16.1.13 0x1E/1F MaxLoadCurrent()

This read-word function returns the maximum load current.

| I <sup>2</sup> C Cmd | Name                    | Access |    |    | Proto-<br>col | Type | Min | Max   | Unit |
|----------------------|-------------------------|--------|----|----|---------------|------|-----|-------|------|
|                      |                         | SE     | US | FA |               |      |     |       |      |
| 0x1E/1F              | <i>MaxLoadCurrent()</i> | R      |    |    | Word          | I2   | 0   | 65535 | mA   |

| Class       | Subclass | Name             | Type | Min    | Max | Default | Unit | Description  |
|-------------|----------|------------------|------|--------|-----|---------|------|--|
| Gas Gauging | Max Load | Max Load Current | I2   | -32768 | 0   | -500    | mA   | Initial value reported on <i>MaxLoadCurrent()</i>  |
| Gas Gauging | Max Load | Max Load Rsoc    | U1   | 0      | 100 | 50      | %    | Threshold that RSOC must fall below to average <i>MaxLoadCurrent()</i> with <b>Max Load Current</b> on the next valid charge termination |

### 16.1.14 0x20/21 MaxLoadTimeToEmpty()

This read-word function returns the remaining time to fully discharge the battery based on *MaxLoadCurrent()*.

| I <sup>2</sup> C Cmd | Name                        | Access |    |    | Proto-<br>col | Type | Min | Max   | Unit |
|----------------------|-----------------------------|--------|----|----|---------------|------|-----|-------|------|
|                      |                             | SE     | US | FA |               |      |     |       |      |
| 0x20/21              | <i>MaxLoadTimeToEmpty()</i> | R      |    |    | Word          | I2   | 0   | 65535 | min  |

### 16.1.15 0x22/23 AveragePower()

This read-word function returns the average power [*Voltage()* × *AverageCurrent()*] during battery charging or discharging. It is negative due to discharge and positive due to charge. A 0 value indicates the battery is not being discharged.

| I <sup>2</sup> C Cmd | Name                  | Access |    |    | Proto-<br>col | Type | Min    | Max   | Unit |
|----------------------|-----------------------|--------|----|----|---------------|------|--------|-------|------|
|                      |                       | SE     | US | FA |               |      |        |       |      |
| 0x22/23              | <i>AveragePower()</i> |        | R  |    | Word          | I2   | -32768 | 32767 | mW   |

### 16.1.16 0x28/29 *InternalTemperature()*

This read-word function returns the internal die temperature in units 0.1 K.

| I <sup>2</sup> C Cmd | Name                         | Access |    |    | Proto-<br>col | Type | Min | Max   | Unit  |
|----------------------|------------------------------|--------|----|----|---------------|------|-----|-------|-------|
|                      |                              | SE     | US | FA |               |      |     |       |       |
| 0x28/29              | <i>InternalTemperature()</i> |        | R  |    | Word          | I2   | 0   | 32767 | 0.1 K |

### 16.1.17 0x2A/2B *CycleCount()*

This read-word function returns the number of discharge cycles the battery has experienced.

| I <sup>2</sup> C Cmd | Name                | Access |    |    | Proto-<br>col | Type | Min | Max   | Unit   |
|----------------------|---------------------|--------|----|----|---------------|------|-----|-------|--------|
|                      |                     | SE     | US | FA |               |      |     |       |        |
| 0x2A/2B              | <i>CycleCount()</i> | R      | R  |    | Word          | U2   | 0   | 65535 | cycles |

| Class       | Subclass | Name                   | Type | Min | Max   | Default | Unit | Description   |
|-------------|----------|------------------------|------|-----|-------|---------|------|---|
| Gas Gauging | Cycle    | Cycle Count Percentage | U1   | 0   | 100   | 90      | %    | Percentage of <i>DesignCapacity()</i> or <i>FullChargeCapacity()</i> (determined by <b>IT Gauging Configuration[CCT]</b> ) to be used for the cycle count threshold |
| Gas Gauging | State    | Cycle Count            | U2   | 0   | 65535 | 0       | —    | Value reported by <i>CycleCount()</i> . Updated by the gauge automatically based on <b>Cycle Count Percentage</b>   |
| Gas Gauging | State    | QMax Cycle Count       | U2   | 0   | 65535 | 0       | —    | The <i>CycleCount()</i> when QMax last updated  |

### 16.1.18 0x2C/2D *RelativeStateOfCharge()*—RSOC

This read-word function returns the predicted remaining battery capacity as a percentage of *FullChargeCapacity()*.

| I <sup>2</sup> C Cmd | Name                           | Access |    |    | Proto-<br>col | Type | Min | Max | Unit |
|----------------------|--------------------------------|--------|----|----|---------------|------|-----|-----|------|
|                      |                                | SE     | US | FA |               |      |     |     |      |
| 0x2C/2D              | <i>RelativeStateOfCharge()</i> |        | R  |    | Word          | U1   | 0   | 100 | %    |

### 16.1.19 0x2E/2F *StateOfHealth()*

This command returns the state-of-health (SOH) information of the battery in percentage of **Design Capacity mAh**. It is a read-only command.

| I <sup>2</sup> C Cmd | Name                   | Access |    |    | Proto-<br>col | Type | Min | Max | Unit |
|----------------------|------------------------|--------|----|----|---------------|------|-----|-----|------|
|                      |                        | SE     | US | FA |               |      |     |     |      |
| 0x2E/2F              | <i>StateOfHealth()</i> |        | R  |    | Word          | U1   | 0   | 100 | %    |

### 16.1.20 0x30/31 *ChargingVoltage()*

This read-word function returns the desired charging voltage.

| I <sup>2</sup> C Cmd | Name                     | Access |    |    | Proto-<br>col | Type | Min | Max   | Unit | Note                            |
|----------------------|--------------------------|--------|----|----|---------------|------|-----|-------|------|---------------------------------|
|                      |                          | SE     | US | FA |               |      |     |       |      |                                 |
| 0x30/31              | <i>ChargingVoltage()</i> | R      | R  | R  | Word          | I2   | 0   | 32767 | mV   | 32767 = Request maximum voltage |

### 16.1.21 0x32/33 *ChargingCurrent()*

This read-word function returns the desired charging current.

| I <sup>2</sup> C Cmd | Name                     | Access |    |    | Protocol | Type | Min | Max   | Unit | Note                            |
|----------------------|--------------------------|--------|----|----|----------|------|-----|-------|------|---------------------------------|
|                      |                          | SE     | US | FA |          |      |     |       |      |                                 |
| 0x32/33              | <i>ChargingCurrent()</i> | R      | R  | R  | Word     | I2   | 0   | 32767 | mA   | 32767 = Request maximum current |

### 16.1.22 0x34/35 *TerminateVoltage()*

This reads or writes the voltage level at which the state-of-charge goes to 0. See **Term Voltage** in [Section 8.5](#).

| I <sup>2</sup> C Cmd | Name                      | Access |    |    | Protocol | Type | Min | Max   | Unit | Note |
|----------------------|---------------------------|--------|----|----|----------|------|-----|-------|------|------|
|                      |                           | SE     | US | FA |          |      |     |       |      |      |
| 0x34/35              | <i>TerminateVoltage()</i> | RW     | RW | RW | Word     | I2   | 0   | 32767 | mV   |      |

### 16.1.23 0x36/0x37/0x38/0x39 *Timestamp()*

This 4-byte value, which is the system runtime in seconds, can be read or written. Always begin the read operation at 0x36 (the LSB) to keep the bytes synchronized during the read by copying the gauge clock to the time stamp registers. The host must read bytes into its 32-bit unsigned integer format in the appropriate endianness. When written by the host, the gauge updates its internal clock on the write to register 0x39.

| I <sup>2</sup> C Cmd | Name                    | Access |    |    | Protocol | Type | Min | Max   | Unit | Note |
|----------------------|-------------------------|--------|----|----|----------|------|-----|-------|------|------|
|                      |                         | SE     | US | FA |          |      |     |       |      |      |
| 0x36/37              | <i>TimeStampUpper()</i> | R      | RW | RW | Word     | U2   | 0   | 65535 | s    |      |

| I <sup>2</sup> C Cmd | Name                    | Access |    |    | Protocol | Type | Min | Max   | Unit | Note |
|----------------------|-------------------------|--------|----|----|----------|------|-----|-------|------|------|
|                      |                         | SE     | US | FA |          |      |     |       |      |      |
| 0x38/39              | <i>TimeStampLower()</i> | R      | RW | RW | Word     | U2   | 0   | 65535 | s    |      |

### 16.1.24 QMax Cycles() 0x3A/3B

This returns the cycle count when QMax was last updated. It is helpful for a host system to compare this to the present *CycleCount()*.

| I <sup>2</sup> C Cmd | Name                | Access |    |    | Protocol | Type | Min | Max   | Unit | Note |
|----------------------|---------------------|--------|----|----|----------|------|-----|-------|------|------|
|                      |                     | SE     | US | FA |          |      |     |       |      |      |
| 0x3A/3B              | <i>QmaxCycles()</i> | R      | R  | R  | Word     | U2   | 0   | 65535 | —    |      |

### 16.1.25 0x3C/3D *DesignCapacity()*

This read-word function returns the theoretical or nominal maximum pack capacity.

| I <sup>2</sup> C Cmd | Name                    | Access |     |     | Protocol | Type | Min | Max   | Default | Unit |
|----------------------|-------------------------|--------|-----|-----|----------|------|-----|-------|---------|------|
|                      |                         | SE     | US  | FA  |          |      |     |       |         |      |
| 0x3C/3D              | <i>DesignCapacity()</i> | R      | R/W | R/W | Word     | I2   | 0   | 32767 | 5300    | mAh  |
|                      |                         |        |     |     |          |      |     |       | 2040    | cWh  |

### 16.1.26 0x3E/3F *AltManufacturerAccess()*

Writes to this command are interchangeable with *AltManufacturerAccess()*. This command enables an easy way to verify the active MAC command while reading the *MACData()* returned by the MAC. The host can simply read from *AltManufacturerAccess()* to *MACDataLength()* with one block read. For a description of returned data values, see the *AltManufacturerAccess()* version of same command in [Section 16.2](#).

| I <sup>2</sup> C Cmd | Name                           | Access |    |    | Protocol | Type | Min | Max | Default | Unit |
|----------------------|--------------------------------|--------|----|----|----------|------|-----|-----|---------|------|
|                      |                                | SE     | US | FA |          |      |     |     |         |      |
| 0x3E/3F              | <i>AltManufacturerAccess()</i> | R      | R  | R  | Word     | —    | —   | —   | —       | —    |

### 16.1.27 0x40/0x5F *MACData()*

This is the data block for *AltManufacturerAccess()* or *AltManufacturerAccess()* commands.

| I <sup>2</sup> C Cmd | Name             | Access |    |    | Proto-<br>col | Type | Min | Max | Default | Unit |
|----------------------|------------------|--------|----|----|---------------|------|-----|-----|---------|------|
|                      |                  | SE     | US | FA |               |      |     |     |         |      |
| 0x40/5F              | <i>MACData()</i> | R      | R  | R  | Block         | —    | —   | —   | —       | —    |

### 16.1.28 0x60 MACDataChecksum()

This is the checksum of the *AltManufacturerAccess()* and *MACData()* bytes.

| I <sup>2</sup> C Cmd | Name                     | Access |    |    | Protocol | Type | Min | Max | Default | Unit |
|----------------------|--------------------------|--------|----|----|----------|------|-----|-----|---------|------|
|                      |                          | SE     | US | FA |          |      |     |     |         |      |
| 0x60                 | <i>MACDataChecksum()</i> | R      | R  | R  | Byte     | —    | —   | —   | —       | —    |

The checksum is the 8-bit sum of the MSB and LSB of the command + the (command length) bytes in the buffer. The final sum is the bitwise inversion of the result. Because the length is part of the checksum, the verification cannot take place until the length is written. The checksum and length must be written together as a word to be valid.

### 16.1.29 0x61 MACDataLength()

This is the length for *AltManufacturerAccess()* and *MACData()*.

| I <sup>2</sup> C Cmd | Name                   | Access |    |    | Protocol | Type | Min | Max | Default | Unit |
|----------------------|------------------------|--------|----|----|----------|------|-----|-----|---------|------|
|                      |                        | SE     | US | FA |          |      |     |     |         |      |
| 0x61                 | <i>MACDataLength()</i> | R      | R  | R  | Byte     | —    | —   | —   | —       | —    |

The length byte for all MAC commands includes the 2-byte command, the 1-byte checksum, the 1-byte length, and 1 to 32 bytes of data. This means the minimum length value is 5 for a valid block (no length or checksum is used for command only writes, so a block of 0 size is not necessary). For proper write command validation, the checksum and length must be written in order (word access triggered).

### 16.1.30 0x62/63 VoltHiSetThreshold

This read/write-word function returns the desired interrupt set threshold for a high battery voltage.

| I <sup>2</sup> C Cmd | Name                        | Access |     |     | Proto-<br>col | Type | Min | Max  | Unit |
|----------------------|-----------------------------|--------|-----|-----|---------------|------|-----|------|------|
|                      |                             | SE     | US  | FA  |               |      |     |      |      |
| 0x62/63              | <i>VoltHiSetThreshold()</i> | R/W    | R/W | R/W | Word          | I2   | 0   | 5000 | mV   |

### 16.1.31 0x64/65 VoltHiClearThreshold

This read/write-word function returns the desired interrupt clear threshold for a high battery voltage.

| I <sup>2</sup> C Cmd | Name                          | Access |     |     | Proto-<br>col | Type | Min | Max  | Unit |
|----------------------|-------------------------------|--------|-----|-----|---------------|------|-----|------|------|
|                      |                               | SE     | US  | FA  |               |      |     |      |      |
| 0x64/65              | <i>VoltHiClearThreshold()</i> | R/W    | R/W | R/W | Word          | I2   | 0   | 5000 | mV   |

### 16.1.32 0x66/67 VoltLoSetThreshold

This read/write-word function returns the desired interrupt set threshold for a low battery voltage.

| I <sup>2</sup> C Cmd | Name                        | Access |     |     | Proto-<br>col | Type | Min | Max  | Unit |
|----------------------|-----------------------------|--------|-----|-----|---------------|------|-----|------|------|
|                      |                             | SE     | US  | FA  |               |      |     |      |      |
| 0x66/67              | <i>VoltLoSetThreshold()</i> | R/W    | R/W | R/W | Word          | I2   | 0   | 5000 | mV   |

### 16.1.33 0x68/69 VoltLoClearThreshold

This read/write-word function returns the desired interrupt clear threshold for a low battery voltage.

| I <sup>2</sup> C Cmd | Name                          | Access |     |     | Proto-<br>col | Type | Min | Max  | Unit |
|----------------------|-------------------------------|--------|-----|-----|---------------|------|-----|------|------|
|                      |                               | SE     | US  | FA  |               |      |     |      |      |
| 0x68/69              | <i>VoltLoClearThreshold()</i> | R/W    | R/W | R/W | Word          | I2   | 0   | 5000 | mV   |

### 16.1.34 0x6A TempHiSetThreshold

This read/write-byte function returns the desired interrupt set threshold for a high battery temperature.

| I <sup>2</sup> C Cmd | Name                        | Access |     |     | Proto-<br>col | Type | Min  | Max | Unit |
|----------------------|-----------------------------|--------|-----|-----|---------------|------|------|-----|------|
|                      |                             | SE     | US  | FA  |               |      |      |     |      |
| 0x6A                 | <i>TempHiSetThreshold()</i> | R/W    | R/W | R/W | Byte          | I1   | -128 | 127 | °C   |

### 16.1.35 0x6B TempHiClearThreshold

This read/write-byte function returns the desired interrupt clear threshold for a high battery temperature.

| I <sup>2</sup> C Cmd | Name                          | Access |     |     | Proto-<br>col | Type | Min  | Max | Unit |
|----------------------|-------------------------------|--------|-----|-----|---------------|------|------|-----|------|
|                      |                               | SE     | US  | FA  |               |      |      |     |      |
| 0x6B                 | <i>TempHiClearThreshold()</i> | R/W    | R/W | R/W | Byte          | I1   | -128 | 127 | °C   |

### 16.1.36 0x6C TempLoSetThreshold

This read/write-byte function returns the desired interrupt set threshold for a low battery temperature.

| I <sup>2</sup> C Cmd | Name                        | Access |     |     | Proto-<br>col | Type | Min  | Max | Unit |
|----------------------|-----------------------------|--------|-----|-----|---------------|------|------|-----|------|
|                      |                             | SE     | US  | FA  |               |      |      |     |      |
| 0x6C                 | <i>TempLoSetThreshold()</i> | R/W    | R/W | R/W | Byte          | I1   | -128 | 127 | °C   |

### 16.1.37 0x6D TempLoClearThreshold

This read/write-byte function returns the desired interrupt clear threshold for a low battery temperature.

| I <sup>2</sup> C Cmd | Name                          | Access |     |     | Proto-<br>col | Type | Min  | Max | Unit |
|----------------------|-------------------------------|--------|-----|-----|---------------|------|------|-----|------|
|                      |                               | SE     | US  | FA  |               |      |      |     |      |
| 0x6D                 | <i>TempLoClearThreshold()</i> | R/W    | R/W | R/W | Byte          | I1   | -128 | 127 | °C   |

### 16.1.38 0x6E InterruptStatus()

This read-byte function returns the status of the interrupt bits for high/low voltage and temperature.

| Status   | Condition                                | Action   |
|----------|--|--|
| Activate | 0x0057 to <i>AltManufacturerAccess()</i> | Outputs <i>ManufacturingStatus()</i> flags on <i>MACData()</i> |

7                  6                  5                  4                  3                  2                  1                  0

|      |      |      |           |         |         |         |         |
|------|------|------|-----------|---------|---------|---------|---------|
| RSVD | RSVD | RSVD | SOC_DELTA | TEMP_LO | TEMP_HI | VOLT_LO | VOLT_HI |
|------|------|------|-----------|---------|---------|---------|---------|

**RSVD (Bits 7–5):** Reserved

**SOC\_DELTA (Bit 4):** RSOC interrupt

- 1 = RSOC interrupt set
- 0 = RSOC interrupt cleared

**TEMP\_LO (Bit 3):** Low temperature interrupt

- 1 = Low temperature interrupt set
- 0 = Low temperature interrupt cleared

**TEMP\_HI (Bit 2):** High temperature interrupt

- 1 = High temperature interrupt set
- 0 = High temperature interrupt cleared

**VOLT\_LO (Bit 1):** Low voltage interrupt

- 1 = Low voltage interrupt set
- 0 = Low voltage interrupt cleared

**VOLT\_HI (Bit 0):** High voltage interrupt

1 = High voltage interrupt set

0 = High voltage interrupt cleared

### 16.1.39 0x6F SOCSetDeltaThreshold

This read/write-byte function returns the desired interrupt set threshold for battery RSOC delta.

| I <sup>2</sup> C Cmd | Name                          | Access |     |     | Protocol | Type | Min | Max | Unit |
|----------------------|-------------------------------|--------|-----|-----|----------|------|-----|-----|------|
|                      |                               | SE     | US  | FA  |          |      |     |     |      |
| 0x6F                 | <i>SOCSetDeltaThreshold()</i> | R/W    | R/W | R/W | Byte     | U1   | 0   | 100 | %    |

### 16.2 0x00, 0x01 ManufacturerAccess() and 0x3E, 0x3F AltManufacturerAccess()

*AltManufacturerAccess()* provides a method of reading and writing data in the Manufacturer Access System (MAC). The MAC command is sent via *AltManufacturerAccess()* by a block protocol. The result is returned on *AltManufacturerAccess()* via a block read.

Commands are sent by writing to registers 0x00/0x01 or 0x3E/0x3F. 0x3E and 0x3F work the same as 0x00 and 0x01, but are primarily intended for block writes and reads.

Example: Send a MAC *Gauging()* to enable IT via *AltManufacturerAccess()*.

- With Impedance Track disabled, send *Gauging()* (0x0021) to *AltManufacturerAccess()*
  - Command Write, start address = 0x3E (or 0x00). Data = 21 00 (data must be sent in little endian).
- IT is enabled, *ManufacturingStatus()[GAUGE\_EN]* = 1.

Example: Read *Chemical ID()* (0x0006) via *AltManufacturerAccess()*.

- Send *Chemical ID()* to *AltManufacturerAccess()*.
  - Command Write, start address = 0x3E (or 0x00). Data sent = 06 00 (data must be sent in little endian).
- Read the result from *AltManufacturerAccess()* and *MACData()*.
  - Command Read, start address = 0x3E length = 36 bytes. The first 4 bytes of the response will be 06 00 10 12.
  - The first two bytes "06 00" is the MAC command (for verification).
  - The second two bytes "10 12" are the Chem ID in little endian. That is, 0x1210 for ChemID 1210.
  - The last two bytes of the 36-byte block will be the checksum and length. The length in this case will be 6. The checksum is 0xFF – (sum of the first length – 2 bytes). The length and checksum are used to validate the block response.

It is recommended to send “command only” operations to 0x00 and 0x01, and to set the command for a read back in the same way. The reason for this is that it can always reset any legacy support options that may be in effect; whereas, some legacy support options use 0x3E and 0x3F for other purposes. However, 0x3E and 0x3F can always safely be used for block reads. For backward compatibility, a request of the device number or version reports a value for a read on 0x00/0x01. The response word for the MAC commands DEV and VERSION (0x0001 and 0x0002) should report 0xFFA5 as the legacy response. This is meant as a token to indicate to the host that the real response is on the extended block. “Command only” operations take place immediately after the word write.

**Table 16-2. AltManufacturerAccess() Command List**

| Command | Function           | Access | Format | Data Read on MACData() | Available in SEALED Mode | Type | Units |
|---------|--------------------|--------|--------|------------------------|--------------------------|------|-------|
| 0x0001  | DeviceType         | R      | Block  | √                      | R                        | hex  | —     |
| 0x0002  | FirmwareVersion    | R      | Block  | √                      | R                        | hex  | —     |
| 0x0003  | HardwareVersion    | R      | Block  | √                      | R                        | hex  | —     |
| 0x0004  | IFChecksum         | R      | Block  | √                      | R                        | hex  | —     |
| 0x0005  | StaticDFSSignature | R      | Block  | √                      | R                        | hex  | —     |

**Table 16-2. AltManufacturerAccess() Command List (continued)**

| Command | Function                 | Access | Format | Data Read on MACData() | Available in SEALED Mode | Type  | Units |
|---------|--------------------------|--------|--------|------------------------|--------------------------|-------|-------|
| 0x0006  | ChemID                   | R      | Block  | √                      | R                        | hex   | —     |
| 0x0007  | Prev_MacWrite            | R      | Block  | √                      | R                        | hex   | —     |
| 0x0008  | StaticChemDFSignature    | R      | Block  | √                      | R                        | hex   | —     |
| 0x0009  | AllDFSignature           | R      | Block  | √                      | R                        | hex   | —     |
| 0x000b  | ShelfEnable              | W      | —      | —                      | W                        | hex   | —     |
| 0x000c  | ShelfDisable             | W      | —      | —                      | W                        | hex   | —     |
| 0x0010  | ShutdownMode             | W      | —      | —                      | W                        | hex   | —     |
| 0x0012  | Reset                    | W      | —      | —                      | —                        | hex   | —     |
| 0x0015  | ShipmodeEnable           | W      | —      | —                      | W                        | hex   | —     |
| 0x0016  | ShipmodeDisable          | W      | —      | —                      | W                        | hex   | —     |
| 0x0017  | QMax Day                 | R      | Block  | √                      | R                        | U2    | days  |
| 0x001F  | ChargeFETToggle          | W      | —      | —                      | W                        | hex   | —     |
| 0x0020  | DischargeFETToggle       | W      | —      | —                      | W                        | hex   | —     |
| 0x0021  | Gauging (IT Enable)      | W      | —      | —                      | —                        | hex   | —     |
| 0x0022  | FET Enable               | W      | —      | —                      | —                        | hex   | —     |
| 0x0023  | LifetimeDataCollection   | W      | —      | —                      | —                        | hex   | —     |
| 0x0024  | PermanentFailure         | W      | —      | —                      | —                        | hex   | —     |
| 0x0028  | LifetimeDataReset        | W      | —      | —                      | —                        | hex   | —     |
| 0x002D  | CalibrationMode          | W      | —      | —                      | —                        | hex   | —     |
| 0x002E  | LifetimeDataFlush        | W      | —      | —                      | —                        | hex   | —     |
| 0x002F  | LifetimeDataSpeedUp Mode | W      | —      | —                      | —                        | hex   | —     |
| 0x0029  | PermanentFailDataReset   | W      | —      | —                      | —                        | hex   | —     |
| 0x0030  | SealDevice               | W      | —      | —                      | —                        | hex   | —     |
| 0x0035  | SecurityKeys             | R/W    | Block  | √                      | —                        | hex   | —     |
| 0x0041  | Reset                    | W      | —      | —                      | —                        | hex   | —     |
| 0x0047  | TambientSync             | W      | —      | —                      | W                        | hex   | —     |
| 0x004A  | Device Name              | R      | Block  | √                      | R                        | hex   | —     |
| 0x004B  | Device Chem              | R      | Block  | √                      | R                        | hex   | —     |
| 0x004C  | Manufacturer Name        | R      | Block  | √                      | R                        | hex   | —     |
| 0x004D  | Manufacture Date         | R/W    | Block  | √                      | R                        | hex   | —     |
| 0x004E  | Serial Number            | R/W    | Word   | √                      | R                        | hex   | —     |
| 0x0050  | SafetyAlert              | R      | Block  | √                      | R                        | hex   | —     |
| 0x0051  | SafetyStatus             | R      | Block  | √                      | R                        | hex   | —     |
| 0x0052  | PFAAlert                 | R      | Block  | √                      | R                        | hex   | —     |
| 0x0053  | PFStatus                 | R      | Block  | √                      | R                        | hex   | —     |
| 0x0054  | OperationStatus          | R      | Block  | √                      | R                        | hex   | —     |
| 0x0055  | ChargingStatus           | R      | Block  | √                      | R                        | hex   | —     |
| 0x0056  | GaugingStatus            | R      | Block  | √                      | R                        | hex   | —     |
| 0x0057  | ManufacturingStatus      | R      | Block  | √                      | R                        | hex   | —     |
| 0x0060  | LifetimeDataBlock1       | R      | Block  | √                      | R                        | Mixed | Mixed |
| 0x0061  | LifetimeDataBlock2       | R      | Block  | √                      | R                        | Mixed | Mixed |
| 0x0062  | LifetimeDataBlock3       | R      | Block  | √                      | R                        | U4    | s     |
| 0x0063  | LifetimeDataBlock4       | R      | Block  | √                      | R                        | Mixed | Mixed |
| 0x0065  | LifetimeDataBlock6       | R      | Block  | √                      | R                        | Mixed | Mixed |
| 0x0065  | LifetimeDataBlock7       | R      | Block  | √                      | R                        | Mixed | Mixed |
| 0x0067  | LifetimeDataBlock8       | R      | Block  | √                      | R                        | Mixed | Mixed |
| 0x0068  | LifetimeDataBlock9       | R      | Block  | √                      | R                        | Mixed | Mixed |
| 0x0069  | LifetimeDataBlock10      | R      | Block  | √                      | R                        | Mixed | Mixed |
| 0x006A  | LifetimeDataBlock11      | R      | Block  | √                      | R                        | Mixed | Mixed |
| 0x006B  | LifetimeDataBlock12      | R      | Block  | √                      | R                        | Mixed | Mixed |
| 0x0070  | ManufacturerInfo         | R/W    | Block  | √                      | R                        | hex   | —     |
| 0x0071  | DAStatus1                | R      | Block  | √                      | R                        | Mixed | Mixed |

**Table 16-2. AltManufacturerAccess() Command List (continued)**

| Command         | Function                     | Access | Format | Data Read on MACData() | Available in SEALED Mode | Type  | Units              |
|-----------------|------------------------------|--------|--------|------------------------|--------------------------|-------|--------------------|
| 0x0072          | DAStatus2                    | R      | Block  | √                      | R                        | Mixed | Mixed              |
| 0x0073          | ITStatus1                    | R      | Block  | √                      | R                        | Mixed | Mixed              |
| 0x0074          | ITStatus2                    | R      | Block  | √                      | R                        | Mixed | Mixed              |
| 0x0075          | ITStatus3                    | R      | Block  | √                      | R                        | Mixed | Mixed              |
| 0x0077          | FCC_SOH                      | R      | Block  | √                      | R                        | hex   | —                  |
| 0x0078          | Filtered Capacity            | R      | Block  | √                      | R                        | hex   | Mixed              |
| 0x007A          | ManufacturerInfoB            | R/W    | Block  | √                      | R                        | hex   | —                  |
| 0x007B          | ManufacturerInfoC            | R/W    | Block  | √                      | R/W                      | hex   | —                  |
| 0x0097          | FET Control Override         | W      | Word   | —                      | W                        | hex   | —                  |
| 0x00A3          | System Reset Enable          | W      | —      | —                      | W                        | —     | —                  |
| 0x00A4          | System Reset                 | W      | —      | —                      | W                        | —     | —                  |
| 0x00B1          | BattSenseOutput              | R/W    | Block  | √                      | R                        | hex   | —                  |
| 0x00E0          | RaTableCell0                 | R      | Block  | √                      | R                        | I2    | 2 <sup>-10</sup> Ω |
| 0x0F00          | ROMMode                      | W      | —      | —                      | —                        | hex   | —                  |
| 0x4000 - 0x5FFF | DataFlashAccess              | R/W    | Block  | √                      | —                        | hex   | Mixed              |
| 0x7C40          | SwitchToHDQ                  | W      | —      | —                      | —                        | hex   | —                  |
| 0xF080          | ExitCalibrationOutput        | R/W    | Block  | √                      | —                        | hex   | —                  |
| 0xF081          | OutputCCandADCforCalibration | R/W    | Block  | √                      | —                        | hex   | —                  |
| 0xF083          | OutputTemperatureCal         | R/W    | Block  | √                      | —                        | hex   | —                  |
| 0xF0A0          | ProtectorCalibration         | R/W    | Block  | √                      | —                        | hex   | —                  |
| 0xF0A1          | ProtectorImage1              | R/W    | Block  | √                      | —                        | hex   | —                  |
| 0xF0A2          | ProtectorImage2              | R/W    | Block  | √                      | —                        | hex   | —                  |
| 0xF0A3          | ProtectorImageSave           | R/W    | Block  | √                      | —                        | hex   | —                  |
| 0xF0A4          | ProtectorImageLock           | R/W    | Block  | √                      | —                        | hex   | —                  |
| 0xF0A5          | ProtectorFactoryConfig       | R      | Block  | √                      | —                        | hex   | —                  |

### 16.2.1 AltManufacturerAccess() 0x0001 Device Type

The device can be checked for its part number.

| Status | Condition                                | Action   |
|--------|--|--|
| Enable | 0x0001 to <i>AltManufacturerAccess()</i> | Returns the device part number on a subsequent read on <i>MACData()</i> in the following format: aaAA, where:<br>aaAA: Device type |

### 16.2.2 AltManufacturerAccess() 0x0002 Firmware Version

The device can be checked for its firmware version.

| Status | Condition                                | Action  |
|--------|--|---|
| Enable | 0x0002 to <i>AltManufacturerAccess()</i> | Returns the firmware revision on <i>MACData()</i> in the following format: ddDDvvVVbbBBTTzzZZRREE, where:<br>ddDD: Device number<br>vvVV: Version<br>bbBB: build number<br>TT: Firmware type<br>zzZZ: Impedance Track version<br>RR: Reserved<br>EE: Reserved |

### 16.2.3 AltManufacturerAccess() 0x0003 Hardware Version

The device can be checked for its hardware version.

| Status | Condition                                | Action  |
|--------|--|---|
| Enable | 0x0003 to <i>AltManufacturerAccess()</i> | Returns the hardware version on a subsequent read on <i>MACData()</i> |

### 16.2.4 AltManufacturerAccess() 0x0004 Instruction Flash Signature

The device can return the instruction flash signature.

| Status | Condition                                | Action  |
|--------|--|---|
| Enable | 0x0004 to <i>AltManufacturerAccess()</i> | Returns the IF signature on a subsequent read on <i>MACData()</i> after a wait time of 250 ms |

### 16.2.5 *AltManufacturerAccess()* 0x0005 Static DF Signature

This command returns the signature of all static data flash parameters. The command does not update **Static DF Signature**.

| Status | Condition                                | Action  |
|--------|--|---|
| Enable | 0x0005 to <i>AltManufacturerAccess()</i> | Returns the signature of all static DF on a subsequent read on <i>MACData()</i> after a wait time of 250 ms. The MSB is set to 1 if the calculated signature does not match the signature stored in DF. |

| Class       | Subclass  | Name                | Type | Min | Max    | Default | Unit | Description   |
|-------------|-----------|---------------------|------|-----|--------|---------|------|---|
| System Data | Integrity | Static DF Signature | H2   | 0   | 0x7FFF | 0x0000  | —    | Static data flash signature. Use the MAC <i>StaticDFSSignature()</i> (with MSB set to 0) to manually initialize this value. |

### 16.2.6 *AltManufacturerAccess()* 0x0006 Chemical ID

This command returns the chemical ID of the OCV tables used in the gauging algorithm.

| Status | Condition                                | Action   |
|--------|--|--|
| Enable | 0x0006 to <i>AltManufacturerAccess()</i> | Returns the chemical ID on subsequent read on <i>MACData()</i> |

### 16.2.7 *AltManufacturerAccess()* 0x0007 Pre\_MACWrite

This command enables copying the last MAC into a 2-byte block.

| Status | Condition                                | Action   |
|--------|--|--|
| Enable | 0x0007 to <i>AltManufacturerAccess()</i> | Copies the last MAC information into a 2-byte block <i>MACData()</i> |

### 16.2.8 *AltManufacturerAccess()* 0x0008 Static Chem DF Signature

This command returns the signature of all static, chemistry-related data flash parameters. The command does not update **Static Chem DF Signature**.

| Status | Condition                                | Action  |
|--------|--|---|
| Enable | 0x0008 to <i>AltManufacturerAccess()</i> | Returns the signature of all static chemistry DF on a subsequent read on <i>MACData()</i> after a wait time of 250 ms. The MSB is set to 1 if the calculated signature does not match the signature stored in DF. |

| Class       | Subclass  | Name                     | Type | Min | Max    | Default | Unit | Description   |
|-------------|-----------|--------------------------|------|-----|--------|---------|------|---|
| System Data | Integrity | Static Chem DF Signature | H2   | 0   | 0x7FFF | 0x3A4C  | —    | Static chemistry data signature. Use the MAC <i>StaticChemDFSSignature()</i> (with MSB set to 0) to manually initialize this value. |

### 16.2.9 *AltManufacturerAccess()* 0x0009 All DF Signature

This command returns the signature of all data flash parameters. The command does not update **All DF Signature**.

| Status | Condition                                | Action  |
|--------|--|---|
| Enable | 0x0009 to <i>AltManufacturerAccess()</i> | Returns the signature of all DF parameters on a subsequent read on <i>MACData()</i> after a wait time of 250 ms. The MSB is set to 1 if the calculated signature does not match the signature stored in DF. It is normally expected that this signature will change due to updates of lifetime, gauging, and other information. |

| Class       | Subclass  | Name             | Type | Min | Max    | Default | Unit | Description  |
|-------------|-----------|------------------|------|-----|--------|---------|------|--|
| System Data | Integrity | All DF Signature | H2   | 0   | 0x7FFF | 0x0000  | —    | All data flash signature. Use the MAC <i>AllDFSignature()</i> (with MSB set to 0) to manually initialize this value. |

### 16.2.10 *AltManufacturerAccess()* 0x000B SHELF Enable

To reduce power consumption further without entering SHUTDOWN mode, the device can be sent to SHELF mode. After receiving *ShelfEnable()*, *OperationStatusB()[SHELFM]* = 1 and an internal counter starts. When the counter reaches **Shelf Command Delay** seconds, the device enters SHELF mode if  $|Current()| \leq \text{Sleep Current}$ .

If the device is SEALED, this feature requires the command to be sent twice in a row within 4 seconds (for safety purposes). If the device is in UNSEALED or FULL ACCESS mode, sending the command the second time cancels the delay and the device enters SHELF mode immediately.

### 16.2.11 *AltManufacturerAccess()* 0x000C SHELF Disable

After receiving *ShelfDisable()*, *OperationStatusB()[SHELFM]* = 0 and the device exits SHELF mode within 1 second. The command has no effect if the device is not in SHELF mode.

### 16.2.12 *AltManufacturerAccess()* 0x0010 SHUTDOWN Mode

To reduce power consumption to a minimum, the device can be sent to SHUTDOWN mode. After sending this command, the *OperationStatus()[SDM]* = 1, an internal counter starts and the CHG and DSG FETs turn off when the counter reaches **FET Off Time**. When the counter reaches **Delay** time, the device enters SHUTDOWN mode if no charger present is detected and the ENAB pin is high.

If the device is SEALED, this feature requires the command to be sent twice in a row within 4 seconds (for safety purposes). If the device is in UNSEALED or FULL ACCESS mode, sending the command the second time cancels the delay and the device enters SHUTDOWN immediately.

To wake up the device, a voltage  $> V_{STARTUP}$  must apply to the PACK pin or the ENAB pin pulled low. The device powers up and a full reset is applied.

### 16.2.13 *AltManufacturerAccess()* 0x0012 Device Reset

This command resets the device.

| Status | Condition                                | Action            |
|--------|--|-------------------|
| Enable | 0x0012 to <i>AltManufacturerAccess()</i> | Resets the device |

#### Note

Command 0x0041 also resets the device.

### 16.2.14 *AltManufacturerAccess()* 0x0015 SHIP Mode Enable

To reduce power consumption further without entering SHUTDOWN, the device can be sent into SHIP mode. After receiving *ShipmodeEnable()*, *OperationStatusB()[SHIPM]* = 1 and an internal counter starts. When the counter reaches **Shipmode Command Delay** seconds, the device enters SHIP mode if  $|Current()| \leq \text{Sleep Current}$ .

If the device is SEALED, this feature requires the command to be sent twice in a row within 4 seconds (for safety purposes). If the device is in UNSEALED or FULL ACCESS mode, sending the command the second time cancels the delay and the device enters SHIP mode immediately.

---

**Note**

In UNSEALED mode, if the command is sent one time, the gauge enters SHIP mode but does not re-enter SHIP mode after reset. To make the gauge re-enter SHIP mode after reset, the command should be sent twice.

---

**16.2.15 AltManufacturerAccess() 0x0016 SHIP Mode Disable**

After receiving *ShipmodeDisable()*, *OperationStatusB()[SHIPM]* = 0 and the device exits SHIP mode within 1 second. The command has no effect if the device is not in SHIP mode.

**16.2.16 AltManufacturerAccess() 0x0017 QMax Day**

Instructs the fuel gauge to return the last day QMax was updated. The value is updated with the *Elapsed Time Count()* converted to days whenever QMax is updated.

**16.2.17 AltManufacturerAccess() 0x001F CHG FET Toggle**

This command turns on/off the CHG FET drive function to ease testing during manufacturing. If the *ManufacturingStatus()[CHG\_TEST]* = 0, sending this command turns on the CHG FET and the *ManufacturingStatus()[CHG\_TEST]* = 1 and vice versa. This toggling command is only enabled if *ManufacturingStatus()[FET\_EN]* = 0 or *ManufacturingStatus()[FET\_OVRD]* = 1 when SEALED, indicating FW FET control is not active and manual control is allowed. A reset clears the *[CHG\_TEST]* flag and turns off the CHG FET if *ManufacturingStatus()[FET\_EN]* = 0.

**16.2.18 AltManufacturerAccess() 0x0020 DSG FET Toggle**

This command turns on/off the DSG FET drive function to ease testing during manufacturing. If the *ManufacturingStatus()[DSG\_TEST]* = 0, sending this command turns on the DSG FET and the *ManufacturingStatus()[DSG\_TEST]* = 1 and vice versa. This toggling command is only enabled if *ManufacturingStatus()[FET\_EN]* = 0 or *ManufacturingStatus()[FET\_OVRD]* = 1 when SEALED, indicating FW FET control is not active and manual control is allowed. A reset clears the *[DSG\_TEST]* flag and turns off the DSG FET if *ManufacturingStatus()[FET\_EN]* = 0.

**16.2.19 AltManufacturerAccess() 0x0021 Gauging**

This command enables or disables the gauging function to ease testing during manufacturing.

| Status  | Condition   | Action   |
|---------|---|--|
| Disable | <i>ManufacturingStatus()[GAUGE_EN]</i> = 1 AND 0x0021 to <i>AltManufacturerAccess()</i> | <i>ManufacturingStatus()[GAUGE_EN]</i> = 0<br>Disables the gauging feature |
| Enable  | <i>ManufacturingStatus()[GAUGE_EN]</i> = 0 AND 0x0021 to <i>AltManufacturerAccess()</i> | <i>ManufacturingStatus()[GAUGE_EN]</i> = 1<br>Enables the gauging feature  |

**16.2.20 AltManufacturerAccess() 0x0022 FET Control**

This command enables/disables control of the CHG and DSG FETs by the firmware. The initial setting is loaded from **Mfg Status Init[FET\_EN]**. If the *ManufacturingStatus()[FET\_EN]* = 0, sending this command allows the FW to control the CHG and DSG FETs and the *ManufacturingStatus()[FET\_EN]* = 1 and vice versa.

In UNSEALED mode, the *ManufacturingStatus()[FET\_EN]* status is copied to **Mfg Status Init[FET\_EN]** when the command is received by the gauge. The device remains on its FET control state through resets.

---

**Note**

The firmware FET control state can only be changed while the gauge is in the UNSEALED mode. FETs are closed only if there are no safety violations. When *ManufacturingStatus()[FET\_EN]* = 0, the FETs are open and no current flows in or out of the cell.

---

### 16.2.21 *AltManufacturerAccess()* 0x0023 Lifetime Data Collection

This command disables/enables lifetime data collection for manufacturing.

| Status  | Condition   | Action  |
|---------|---|---|
| Disable | <i>ManufacturingStatus()</i> [LF_EN] = 1 AND 0x0023 to <i>AltManufacturerAccess()</i> | <i>ManufacturingStatus()</i> [LF_EN] = 0<br>The lifetime data collection feature is disabled. |
| Enable  | <i>ManufacturingStatus()</i> [LF_EN] = 0 AND 0x0023 to <i>AltManufacturerAccess()</i> | <i>ManufacturingStatus()</i> [LF_EN] = 1<br>The lifetime data collection feature is enabled.  |

### 16.2.22 *AltManufacturerAccess()* 0x0024 Permanent Failure

This PF\_EN command enables/disables **Permanent Failure** to help streamline production testing. The initial setting is loaded from *Mfg Status Init*[PF\_EN]. If the *ManufacturingStatus()*[PF\_EN] = 0, sending this command enables Permanent Failure protections and the *ManufacturingStatus()*[PF\_EN] = 1 and vice versa.

In UNSEALED mode, *ManufacturingStatus()*[PF\_EN] status is copied to *MFG Status Init*[PF\_EN] when the command is received by the gauge. The BQ27Z746-R1 and BQ27Z758 device remains on its PF enable/disable setting prior to a reset.

### 16.2.23 *AltManufacturerAccess()* 0x0028 Lifetime Data Reset

This command resets lifetime data in data flash for manufacturing.

| Status | Condition                                | Action                     |
|--------|--|----------------------------|
| Reset  | 0x0028 to <i>AltManufacturerAccess()</i> | Clears lifetime data in DF |

### 16.2.24 *AltManufacturerAccess()* 0x0029 Permanent Fail Data Reset

Sending this PF\_CLEAR command resets PF data in data flash to help streamline production testing.

### 16.2.25 *AltManufacturerAccess()* 0x002D CALIBRATION Mode

This command disables/enables entry into CALIBRATION mode. The status is indicated by the *ManufacturingStatus()*[CAL\_EN] flag. CALIBRATION mode is disabled upon a reset.

| Status  | Condition  | Action  |
|---------|--|---|
| Disable | <i>ManufacturingStatus()</i> [CAL_EN] = 1 AND 0x002D to <i>AltManufacturerAccess()</i> | <i>ManufacturingStatus()</i> [CAL_EN] = 0<br>Disables output of ADC and CC raw data on <i>MACData()</i>   |
| Enable  | <i>ManufacturingStatus()</i> [CAL_EN] = 0 AND 0x002D to <i>AltManufacturerAccess()</i> | <i>ManufacturingStatus()</i> [CAL_EN] = 1<br>Enables output of ADC and CC raw data on <i>MACData()</i> , controllable with 0xF081 on <i>AltManufacturerAccess()</i> |

### 16.2.26 *AltManufacturerAccess()* 0x002E Lifetime Data Flush

This command flushes the RAM lifetime data to data flash to help streamline evaluation testing.

### 16.2.27 *AltManufacturerAccess()* 0x002F Lifetime Data SPEED UP Mode

For ease of evaluation testing, this command enables a lifetime SPEED UP mode where every 1 s in real time counts as 1 hour in FW time. When the lifetime SPEED UP mode is enabled, the *ManufacturingStatus()*[LT\_TEST] = 1.

The SPEED UP mode will be disabled if this command is sent again when [LT\_TEST] = 1, the MAC *LifetimeDataReset()* command is sent, the MAC *SealDevice()* command is sent, or the device is reset.

### 16.2.28 *AltManufacturerAccess()* 0x0030 Seal Device

This command seals the device for the field, disabling certain commands and access to DF.

| Status | Condition   | Action   |
|--------|---|--|
| Sealed | <i>OperationStatusA()</i> [SEC1,SEC0] = 0,1 or 1,0 AND 0x0030 to <i>AltManufacturerAccess()</i> | <i>OperationStatusA()</i> [SEC1,SEC0] = 1,1<br>Certain commands are not available. See <a href="#">Table 16-1</a> for details. |

### 16.2.29 *AltManufacturerAccess()* 0x0035 Security Keys

This is a read/write command that changes the Unseal, Full Access, and Lifetime reset keys. To read the keys, send the *SecurityKeys()* command to either the *AltManufacturerAccess()* 0x00 or 0x3E, followed by a read from *AltManufacturerAccess()*.

To change the keys, the write operations must be sent through *AltManufacturerAccess()* 0x3E with the *SecurityKeys()* followed by the keys. Each parameter entry must be sent in little endian.

#### Note

Create each access key to be unique; otherwise, the copy key will not execute the intended function.

Example of changing the Unseal key to 0x0123, 0x4567; the Full Access key to 0x89AB, 0xCDEF; and the Lifetime reset key to 0x2244, 0x2131:

Byte 0: Unseal Key LSW

Byte 1: Unseal Key MSW

Byte 2: Full Access Key LSW

Byte 3: Full Access Key MSW

Byte 4: Lifetime Reset Key LSW

Byte 5: Lifetime Reset Key MSW

Write block: command through *AltManufacturerAccess()* starting address 0x3E:

data block (hex) = [35 00 23 01 67 45 AB 89 EF CD 44 22 31 21].

Starting address 0x60, data block(hex) = [0A 0C] (checksum followed by length)

Checksum = 0x52 = ~(0x35 + 0x00 + 0x23 + 0x01 + 0x67 + 0x45 + 0xAB + 0x89 + 0xEF + 0xCD + 0x44 + 0x22 + 0x31 + 0x21). The checksum is the 8-bit sum of the MSB and LSB of the command plus the (command length) bytes in the buffer. The final sum is the bitwise inversion of the result.

### 16.2.30 *AltManufacturerAccess()* 0x0041 Device Reset

This command resets the device hardware and firmware. The command causes the FETs to open until initial safety checks are completed by the firmware.

| Status | Condition                                | Action            |
|--------|--|-------------------|
| Enable | 0x0041 to <i>AltManufacturerAccess()</i> | Resets the device |

#### Note

Command 0x0012 also resets the device.

### 16.2.31 *AltManufacturerAccess()* 0x0047 Tambient Sync

This command synchronizes the ambient temperature in Impedance Track, T\_ambient, to the presently measured cell temperature, *Temperature()*.

| Status | Condition                                | Action   |
|--------|--|--|
| Enable | 0x0047 to <i>AltManufacturerAccess()</i> | Synchronize T_ambient to <i>Temperature()</i> and trigger an IT simulation if <b>I2C Gauging Configuration</b> [TAMB_SYNC_SIM] = 1 |

### 16.2.32 *AltManufacturerAccess()* 0x004A Device Name

This command returns the assigned pack name, as programmed in data flash.

| Status | Condition                                | Action   |
|--------|--|--|
| Enable | 0x004A to <i>AltManufacturerAccess()</i> | Returns the value stored in <b>Device Name</b> |

| Class             | Subclass | Name        | Type | Min | Max | Default  | Unit  | Description        |
|-------------------|----------|-------------|------|-----|-----|----------|-------|--------------------|
| I2C Configuration | Data     | Device Name | S21  | —   | —   | BQ27Z746 | ASCII | Assigned pack name |

### 16.2.33 *AltManufacturerAccess()* 0x004B Device Chem

This command returns the battery chemistry used in the pack, as programmed in data flash.

| Status | Condition                                | Action  |
|--------|--|---|
| Enable | 0x004B to <i>AltManufacturerAccess()</i> | Returns the value stored in <b>Device Chemistry</b> |

| Class             | Subclass | Name             | Type | Min | Max | Default | Unit  | Description   |
|-------------------|----------|------------------|------|-----|-----|---------|-------|---|
| I2C Configuration | Data     | Device Chemistry | S5   | —   | —   | LION    | ASCII | The battery chemistry used in the pack. This parameter does not change with chemistry programming and must be updated manually. |

### 16.2.34 *AltManufacturerAccess()* 0x004C Manufacturer Name

This command returns the pack manufacturer name, as programmed in data flash.

| Status | Condition                                | Action   |
|--------|--|--|
| Enable | 0x004C to <i>AltManufacturerAccess()</i> | Returns the value stored in <b>Manufacturer Name</b> |

| Class             | Subclass | Name              | Type | Min | Max | Default           | Unit  | Description            |
|-------------------|----------|-------------------|------|-----|-----|-------------------|-------|------------------------|
| I2C Configuration | Data     | Manufacturer Name | S21  | —   | —   | Texas Instruments | ASCII | Pack manufacturer name |

### 16.2.35 *AltManufacturerAccess()* 0x004D Manufacture Date

This command returns the manufacture date of the pack, as programmed in data flash. This command can be written to update data flash in UNSEALED mode.

| Status | Condition                                | Action  |
|--------|--|---|
| Enable | 0x004D to <i>AltManufacturerAccess()</i> | Returns the value stored in <b>Manufacture Date</b> |

| Class             | Subclass | Name             | Type | Min | Max   | Default  | Unit | Description   |
|-------------------|----------|------------------|------|-----|-------|----------|------|---|
| I2C Configuration | Data     | Manufacture Date | U2   | 0   | 65535 | 1980-1-1 | date | Manufacture date of the pack, which follows the format:<br>Day + Month×32 + (Year–1980) × 512<br>Example: 10/27/2017 = 19291 (or 0x4B5B, binary split: 100101, 1010, 11011) |

### 16.2.36 *AltManufacturerAccess()* 0x004E Serial Number

This command returns the serial number of the pack, as programmed in data flash. This command can be written to update data flash in UNSEALED mode.

| Status | Condition                                | Action   |
|--------|--|--|
| Enable | 0x004E to <i>AltManufacturerAccess()</i> | Returns the value stored in <b>Serial Number</b> |

| Class             | Subclass | Name          | Type | Min    | Max    | Default | Unit | Description               |
|-------------------|----------|---------------|------|--------|--------|---------|------|---------------------------|
| I2C Configuration | Data     | Serial Number | H2   | 0x0000 | 0xFFFF | 0x0001  | —    | Serial number of the pack |

### 16.2.37 ManufacturerAccess() 0x0050 SafetyAlert

This command returns the *SafetyAlert()* flags on *ManufacturerBlockAccess()* or *ManufacturerData()*.

|      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |     |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|-----|
| 31   | 30   | 29   | 28   | 27   | 26   | 25   | 24   | 23   | 22   | 21   | 20   | 19   | 18   | 17   | 16  |
| RSVD | RSVD | RSVD | RSVD | UTD  | UTC  | RSVD | RSVD | RSVD | RSVD | CTOS | RSVD | PTOS | RSVD | RSVD | OTF |
| 15   | 14   | 13   | 12   | 11   | 10   | 9    | 8    | 7    | 6    | 5    | 4    | 3    | 2    | 1    | 0   |
| RSVD | RSVD | OTD  | OTC  | RSVD | OCD  | RSVD | OCC  | COV  | CUV |

**RSVD (Bits 31-28):** Reserved. Do not use.

**UTD (Bit 27):** Undertemperature during discharge

1 = Detected

0 = Not detected

**UTC (Bit 26):** Undertemperature during charge

1 = Detected

0 = Not detected

**RSVD (Bits 25-22):** Reserved. Do not use.

**CTOS (Bit 21):** Charge timeout suspend

1 = Detected

0 = Not detected

**RSVD (Bit 20):** Reserved. Do not use.

**PTOS (Bit 19):** Precharge timeout suspend

1 = Detected

0 = Not detected

**RSVD (Bits 18-17):** Reserved. Do not use.

**OTF (Bit 16):** Overtemperature FET

1 = Detected

0 = Not detected

**RSVD (Bits 15-14):** Reserved. Do not use.

**OTD (Bit 13):** Overtemperature during discharge

1 = Detected

0 = Not detected

**OTC (Bit 12):** Overtemperature during charge

1 = Detected

0 = Not detected

**RSVD (Bits 11-5):** Reserved. Do not use.

**OCD (Bit 4):** Overcurrent during discharge

1 = Detected

0 = Not detected

**RSVD (Bit 3):** Reserved. Do not use.

**OCC (Bit 2):** Overcurrent during charge

1 = Detected

0 = Not detected

**COV (Bit 1):** Cell overvoltage

1 = Detected

0 = Not detected

**CUV (Bit 0):** Cell undervoltage

1 = Detected

0 = Not detected

### 16.2.38 ManufacturerAccess() 0x0051 SafetyStatus

This command returns the *SafetyStatus()* flags on *ManufacturerBlockAccess()* or *ManufacturerData()*.

|      |      |      |      |      |      |      |      |      |      |      |     |      |     |      |     |
|------|------|------|------|------|------|------|------|------|------|------|-----|------|-----|------|-----|
| 31   | 30   | 29   | 28   | 27   | 26   | 25   | 24   | 23   | 22   | 21   | 20  | 19   | 18  | 17   | 16  |
| HCUV | HCOV | RSVD | RSVD | UTD  | UTC  | RSVD | RSVD | RSVD | RSVD | RSVD | CTO | RSVD | PTO | RSVD | OTF |
| 15   | 14   | 13   | 12   | 11   | 10   | 9    | 8    | 7    | 6    | 5    | 4   | 3    | 2   | 1    | 0   |
| RSVD | RSVD | OTD  | OTC  | RSVD | HSCD | RSVD | HOCC | RSVD | HOCD | RSVD | OCD | RSVD | OCC | COV  | CUV |

**HCUV (Bit 31):** Cell Under Voltage

1 = Detected

0 = Not detected

**HCOV (Bit 31):** Cell Over Voltage

1 = Detected

0 = Not detected

**RSVD (Bits 29-28):** Reserved. Do not use.

**UTD (Bit 27):** Undertemperature during discharge

1 = Detected

0 = Not detected

**UTC (Bit 26):** Undertemperature during charge

1 = Detected

0 = Not detected

**RSVD (Bits 25-21):** Reserved. Do not use.

**CTO (Bit 20):** Charge timeout

1 = Detected

0 = Not detected

**RSVD (Bit 19):** Reserved. Do not use.

**PTO (Bit 18):** Precharge timeout

**RSVD (Bit 17):** Reserved. Do not use.

**OTF (Bit 16):** Overtemperature FET

1 = Detected

0 = Not detected

**RSVD (Bits 15-14):** Reserved. Do not use.

**OTD (Bit 13):** Overtemperature during discharge

1 = Detected

0 = Not detected

**OTC (Bit 12):** Overtemperature during charge

1 = Detected

0 = Not detected

**RSVD (Bit 11):** Reserved. Do not use.

**HSCD (Bit 10):** Short-circuit during discharge

1 = Detected

0 = Not detected

**RSVD (Bit 9):** Reserved. Do not use.

**HOCC (Bit 8):** Short-circuit during charge

1 = Detected

0 = Not detected

**RSVD (Bit 7):** Reserved. Do not use.

**HOCD (Bit 6):** Overload during discharge

1 = Detected

0 = Not detected

**RSVD (Bit 5):** Reserved. Do not use.

**OCD (Bit 4):** Overcurrent during discharge

1 = Detected

0 = Not detected

**RSVD (Bit 3):** Reserved. Do not use.

**OCC (Bit 2):** Overcurrent during charge

1 = Detected

0 = Not detected

**COV (Bit 1):** Cell overvoltage

1 = Detected

0 = Not detected

**CUV (Bit 0):** Cell undervoltage

1 = Detected

0 = Not detected

### 16.2.39 *AltManufacturerAccess()* 0x0052 *PFAAlert*

This command returns the *PFAAlertA+B()* and *PFAAlertC+D()* flags on *MACData()*.

| Status   | Condition                                | Action   |
|----------|--|--|
| Activate | 0x0052 to <i>AltManufacturerAccess()</i> | Outputs <i>PFAAlertA+B()</i> and <i>PFAAlertC+D()</i> flags on <i>MACData()</i> in the format AAaaBBbb where AAaa is <b>PF Alert A+B</b> and BBbb is <b>PF Alert C+D</b> |

#### 16.2.39.1 PF Alert A+B

15    14    13    12    11    10    9    8    7    6    5    4    3    2    1    0

|      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |     |     |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|-----|-----|
| RSVD | SOV | SUV |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|-----|-----|

**RSVD (Bit 15-2):** Reserved. Do not use.

**SOV (Bit 1):** Safety cell overvoltage failure

1 = Detected

0 = Not detected

**SUV (Bit 0):** Safety cell undervoltage failure

1 = Detected

0 = Not detected

### 16.2.39.2 PF Alert C+D

15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

|      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |       |       |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|-------|-------|
| RSVD | DFETF | CFETF |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|-------|-------|

**RSVD (Bit 15-2):** Reserved. Do not use.

**DFETF (Bit 1):** Discharge FET failure

1 = Detected

0 = Not detected

**CFETF (Bit 0):** Charge FET failure

1 = Detected

0 = Not detected

### 16.2.40 AltManufacturerAccess() 0x0053 PFStatus

This command returns the *PFStatusA+B()* and *PFStatusC+D()* flags on *MACData()*.

| Status   | Condition                                | Action   |
|----------|--|--|
| Activate | 0x0053 to <i>AltManufacturerAccess()</i> | Outputs <i>PFStatusA+B()</i> and <i>PFStatusC+D()</i> flags on <i>MACData()</i> in the format AAaaBBbb where AAaa is <b>PF Status A+B</b> and BBbb is <b>PF Status C+D</b> |

### 16.2.40.1 PF Status A+B

15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

|      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |     |     |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|-----|-----|
| RSVD | SOV | SUV |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|-----|-----|

**RSVD (Bit 15-2):** Reserved. Do not use.

**SOV (Bit 1):** Safety cell overvoltage failure

1 = Detected

0 = Not detected

**SUV (Bit 0):** Safety cell undervoltage failure

1 = Detected

0 = Not detected

### 16.2.40.2 PF Status C+D

15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

|      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |       |       |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|-------|-------|
| RSVD | DFETF | CFETF |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|-------|-------|

**RSVD (Bit 15-2):** Reserved. Do not use.

**DFETF (Bit 1):** Discharge FET failure

1 = Detected

0 = Not detected

**CFETF (Bit 0):** Charge FET failure

1 = Detected

0 = Not detected

### 16.2.41 AltManufacturerAccess() 0x0054 OperationStatus

This command returns the *OperationStatusA()* and *OperationStatusB()* flags on *MACData()*.

| Status   | Condition                                | Action   |
|----------|--|--|
| Activate | 0x0054 to <i>AltManufacturerAccess()</i> | Outputs <i>OperationStatusA()</i> and <i>OperationStatusB()</i> flags on <i>MACData()</i> in the format AAaaBBbb where AAaa is <b>Operation Status A</b> and BBbb is <b>Operation Status B</b> |

### 16.2.41.1 Operation Status A

15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

|       |      |      |    |    |     |      |      |         |       |      |      |           |     |     |       |
|-------|------|------|----|----|-----|------|------|---------|-------|------|------|-----------|-----|-----|-------|
| SLEEP | XCHG | XDSG | PF | SS | SDV | SEC1 | SEC0 | BTP_INT | SHELF | RSVD | SHIP | ZVCH<br>G | CHG | DSG | SHIPV |
|-------|------|------|----|----|-----|------|------|---------|-------|------|------|-----------|-----|-----|-------|

**SLEEP (Bit 15):** SLEEP mode conditions met

1 = Active

0 = Inactive

**XCHG (Bit 14):** Charging disabled

0 = Inactive

1 = Active

**XDSG (Bit 13):** Discharging disabled

1 = Active

0 = Inactive

**PF (Bit 12):** PERMANENT FAILURE mode status

1 = Active

0 = Inactive

**SS (Bit 11):** SAFETY status. This is the ORd value of all the Safety Status bits.

1 = Active

0 = Inactive

**SDV (Bit 10):** SHUTDOWN mode triggered from a low cell voltage

1 = Active

0 = Inactive

**SEC1, SEC0 (Bits 9, 8): SECURITY mode**

- 0, 0 = Reserved
- 0, 1 = Full Access
- 1, 0 = Unsealed
- 1, 1 = Sealed

**BTP\_INT (Bit 7): Battery Trip Point Interrupt.** Setting and clearing this bit depends on various conditions.

See [Section 8.11](#) for details.

**SHELF (Bit 6): SHELF mode**

- 1 = Active
- 0 = Inactive

**RSVD (Bit 5): Reserved**
**SHIP (Bit 4): SHIP mode**

- 1 = Active
- 0 = Inactive

**ZVCHG (Bit 3): Zero-volt (low voltage) charging status**

- 1 = Active
- 0 = Inactive

**CHG (Bit 2): CHG FET status**

- 1 = Active
- 0 = Inactive

**DSG (Bit 1): DSG FET status**

- 1 = Active
- 0 = Inactive

**SHIPV (Bit 0): SHIP mode triggered via low cell voltage**

- 1 = Active
- 0 = Inactive

**16.2.41.2 Operation Status B**

15    14    13    12    11    10    9    8    7    6    5    4    3    2    1    0

|            |       |      |      |      |       |      |      |            |    |      |     |      |      |      |     |
|------------|-------|------|------|------|-------|------|------|------------|----|------|-----|------|------|------|-----|
| SHELF<br>V | SHIPM | RSVD | RSVD | RSVD | SLPAD | RSVD | INIT | SHELF<br>M | XL | RSVD | CAL | RSVD | AUTH | RSVD | SDM |
|------------|-------|------|------|------|-------|------|------|------------|----|------|-----|------|------|------|-----|

**SHELFV (Bit 15): SHELF mode triggered through low cell voltage**

- 1 = Active
- 0 = Inactive

**SHIPM (Bit 14): SHIP mode triggered through command**

- 1 = Active
- 0 = Inactive

**RSVD (Bits 13–11): Reserved**
**SLPAD (Bit 10): ADC measurement in SLEEP, SHIP, or SHELF mode**

- 1 = Active
- 0 = Inactive

**RSVD (Bit 9): Reserved**

**INIT (Bit 8):** Initialization after full reset

- 1 = Active
- 0 = Inactive

**SHELFM (Bit 7):** SHELF mode triggered through command

- 1 = Active
- 0 = Inactive

**XL (Bit 6):** 400-kHz mode

- 1 = Active
- 0 = Inactive

**RSVD (Bit 5):** Reserved

**CAL (Bit 4):** Calibration output (raw ADC and CC data)

- 1 = Active when either the MAC *OutputCCADCCal()* or *OutputShortedCCADCCal()* is sent and the raw CC and ADC data for calibration is available.
- 0 = When the raw CC and ADC data for calibration is not available.

**RSVD (Bit 3):** Reserved

**AUTH (Bit 2):** Authentication in progress

- 1 = Active
- 0 = Inactive

**RSVD (Bit 1):** Reserved

**SDM (Bit 0):** SHUTDOWN mode triggered through command

- 1 = Active
- 0 = Inactive

### 16.2.42 *AltManufacturerAccess()* 0x0055 *ChargingStatus*

This command returns the *Temp Range* and *Charging Status* flags on *MACData()*.

| Status   | Condition                                | Action  |
|----------|--|---|
| Activate | 0x0055 to <i>AltManufacturerAccess()</i> | Outputs three bytes of charging related data in the format AABbbb, where AA is <i>Temp Range</i> and Bbbb is <i>Charging Status</i> flags on <i>MACData()</i> |

#### 16.2.42.1 Temp Range

*Temp Range* status bits indicate the current operating temperature range.

|      |    |    |     |    |     |    |    |
|------|----|----|-----|----|-----|----|----|
| 7    | 6  | 5  | 4   | 3  | 2   | 1  | 0  |
| RSVD | OT | HT | STH | RT | STL | LT | UT |

**RSVD (Bit 7):** Reserved

**OT (Bit 6):** Overtemperature range

- 1 = Temperature > T4
- 0 = Inactive

**HT (Bit 5):** High temperature range

- 1 = T3 < Temperature < T4
- 0 = Inactive

**STH (Bit 4):** Standard temperature high range

- 1 = T6 < Temperature < T3

0 = Inactive

**RT (Bit 3):** Recommended temperature range

1 =  $T5 < \text{Temperature} < T6$

0 = Inactive

**STL (Bit 2):** Standard temperature low range

1 =  $T2 < \text{Temperature} < T5$

0 = Inactive

**LT (Bit 1):** Low temperature range

1 =  $T1 < \text{Temperature} < T2$

0 = Inactive

**UT (Bit 0):** Undertemperature range

1 =  $\text{Temperature} < T1$

0 = Inactive

### 16.2.42.2 Charging Status

Charging Status bits indicate various status bits related to charging.

15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

|      |      |      |      |     |      |              |              |     |      |    |    |    |    |    |    |
|------|------|------|------|-----|------|--------------|--------------|-----|------|----|----|----|----|----|----|
| RSVD | RSVD | RSVD | RSVD | NCT | RSVD | CV_D<br>GRD1 | CV_D<br>GRD0 | VCT | RSVD | SU | IN | HV | MV | LV | PV |
|------|------|------|------|-----|------|--------------|--------------|-----|------|----|----|----|----|----|----|

**RSVD (Bits 15–12):** Reserved

**NCT (Bit 11):** NCT

1 = Active

0 = Inactive

**RSVD (Bit 10):** Reserved

**CV\_DGRD (Bits 9–8):** Charge degradation

0,0 = No degradation

0,1 = Mode 1

1,0 = Mode 2

1,1 = Mode 3

**VCT (Bit 7):** Charge termination

1 = Active

0 = Inactive

**RSVD (Bit 6):** Reserved

**SU (Bit 5):** Charge suspend

1 = Active

0 = Inactive

**IN (Bit 4):** Charge inhibit

1 = Active

0 = Inactive

**HV (Bit 3):** High voltage region

1 = Active

0 = Inactive

**MV (Bit 2):** Mid voltage region

1 = Active

0 = Inactive

**LV (Bit 1):** Low voltage region

1 = Active

0 = Inactive

**PV (Bit 0):** Precharge voltage region

1 = Active

0 = Inactive

### 16.2.43 AltManufacturerAccess() 0x0056 GaugingStatus

This command returns the *GaugingStatus()* flags on *MACData()*.

#### Note

The [Battery Management Studio \(BQSTUDIO\)](#) tool splits the returned value of *GaugingStatus()* into two separate registers: Gauging Status = lowest byte, and IT Status = 2nd and 3rd bytes, with the 4th byte reserved.

| Status   |             |             |      | Condition                                |      |      |      | Action   |      |                   |           |      |    |      |     |
|----------|-------------|-------------|------|--|------|------|------|--|------|-------------------|-----------|------|----|------|-----|
| Activate |             |             |      | 0x0056 to <i>AltManufacturerAccess()</i> |      |      |      | Outputs <i>GaugingStatus()</i> flags on <i>MACData()</i> |      |                   |           |      |    |      |     |
| 31       | 30          | 29          | 28   | 27                                       | 26   | 25   | 24   | 23   | 22   | 21                | 20        | 19   | 18 | 17   | 16  |
| RSVD     | RSVD        | RSVD        | RSVD | RSVD                                     | RSVD | RSVD | RSVD | RSVD   | RSVD | QMA<br>XDOD<br>OK | OCV<br>FR | LDMD | RX | QMax | VDQ |
| 15       | 14          | 13          | 12   | 11                                       | 10   | 9    | 8    | 7  | 6    | 5                 | 4         | 3    | 2  | 1    | 0   |
| NSFM     | OCVP<br>RED | SLP<br>QMax | QEN  | VOK                                      | RDIS | RSVD | REST | RSVD   | DSG  | EDV               | RSVD      | TC   | TD | FC   | FD  |

**RSVD (Bits 31–22):** Reserved. Do not use.

**QMAXDODOK (Bit 21):** Indicates whether the DOD is outside the cell chemistry's voltage flat zone. QMax updates do not happen if DOD is in the flat zone.

1 = Outside the flat zone

0 = In the flat zone

**OCVFR (Bit 20):** Open circuit voltage in flat region (during RELAX)

1 = Detected

0 = Not detected

**LDMD (Bit 19):** LOAD mode

1 = Constant power

0 = Constant current

**RX (Bit 18):** Resistance update (toggles after every resistance update)

**QMax (Bit 17):** QMax update (toggles after every QMax update)

**VDQ (Bit 16):** Discharge qualified for learning (based on RU flag)

**NSFM (Bit 15):** Negative scale factor mode

1 = Negative Ra scaling factor detected

0 = Negative Ra scaling factor not detected

**OCVPRED (Bit 14):** Open-circuit-voltage predicted

1 = Fast OCV prediction is performed in RELAX mode.

0 = Fast OCV prediction is not performed or not in RELAX mode.

**SLPQMax (Bit 13):** QMax update during sleep

1 = Active

0 = Inactive

**QEN (Bit 12):** Impedance Track gauging (Ra and QMax updates are enabled.)

1 = Enabled

0 = Disabled

**VOK (Bit 11):** Voltage OK for QMax update

1 = Detected

0 = Not detected

**RDIS (Bit 10):** Resistance updates

1 = Disabled

0 = Enabled

**RSVD (Bit 9):** Reserved. Do not use.

**REST (Bit 8):** Rest

1 = The OCV reading is taken.

0 = The OCV reading is not taken or is not in RELAX mode.

**RSVD (Bit 7):** Reserved. Do not use.

**DSG (Bit 6):** Discharge/relax

1 = Charging not detected

0 = Charging detected

**EDV (Bit 5):** End-of-discharge termination voltage

1 = Termination voltage reached during discharge

0 = Termination voltage not reached or not in DISCHARGE mode

**RSVD (Bit 4):** Reserved. Do not use.

**TC (Bit 3):** Terminate charge

1 = Detected

0 = Not detected

**TD (Bit 2):** Terminate discharge

1 = Detected

0 = Not detected

**FC (Bit 1):** Fully charged

1 = Detected

0 = Not detected

**FD (Bit 0):** Fully discharged

1 = Detected

0 = Not detected

### 16.2.44 *AltManufacturerAccess()* 0x0057 *ManufacturingStatus*

This command returns the *ManufacturingStatus()* flags on *MACData()*.

| Status   |         | Condition                                |        |          |          | Action   |          |
|----------|---------|--|--------|----------|----------|--|----------|
| Activate |         | 0x0057 to <i>AltManufacturerAccess()</i> |        |          |          | Outputs <i>ManufacturingStatus()</i> flags on <i>MACData()</i> |          |
| 15       | 14      | 13                                       | 12     | 11       | 10       | 9  | 8        |
| CAL_EN   | LT_TEST | RSVD                                     | RSVD   | RSVD     | RSVD     | RSVD   | FET_OVRD |
| 7        | 6       | 5  | 4      | 3        | 2        | 1  | 0        |
| RSVD     | PF_EN   | LF_EN                                    | FET_EN | GAUGE_EN | DSG_TEST | CHG_TEST   | RSVD     |

**CAL\_EN (Bit 15):** CALIBRATION mode

- 1 = Enabled
- 0 = Disabled

**LT\_TEST (Bit 14):** LIFETIME SPEED UP mode

- 1 = Enabled
- 0 = Disabled

**RSVD (Bits 13–6):** Reserved

**LF\_EN (Bit 5):** Lifetime data collection

- 1 = Enabled
- 0 = Disabled

**RSVD (Bit 4):** Reserved

**GAUGE\_EN (Bit 3):** Gas gauging

- 1 = Enabled
- 0 = Disabled

**RSVD (Bits 2–0):** Reserved

### 16.2.45 *AltManufacturerAccess()* 0x0060 Lifetime Data Block 1

This command returns the lifetime data in RAM on *MACData()* with the following format:

aaAAabbBBccCCddDDeeEEffFFGGHHIIJJ.

| Value | Description           |
|-------|-----------------------|
| AAaa  | Cell 1 Max Voltage    |
| BBbb  | Cell 1 Min Voltage    |
| CCcc  | Max Charge Current    |
| DDdd  | Max Discharge Current |
| EEee  | Max Avg Dsg Current   |
| FFff  | Max Avg Dsg Power     |
| GG    | Max Temp Cell         |
| HH    | Min Temp Cell         |
| II    | Max Temp Int Sensor   |
| JJ    | Min Temp Int Sensor   |

### 16.2.46 *AltManufacturerAccess()* 0x0061 Lifetime Data Block 2

This command returns the lifetime data in RAM on *MACData()* with the following format:

AABBCCDD.

| Value | Description          |
|-------|----------------------|
| AA    | No Of Shutdowns      |
| BB    | No Of Partial Resets |
| CC    | No Of Full Resets    |
| DD    | No Of Wdt Reset      |

### 16.2.47 AltManufacturerAccess() 0x0062 Lifetime Data Block 3

This command returns the lifetime data in RAM on *MACData()* with the following format:

aaAAbbBBccCCddDDeeEEffFF

| Value    | Description          |
|----------|----------------------|
| BBbbAAaa | Total Fw Runtime     |
| DDddCCcc | Total Charge time    |
| FFffEEee | Total Discharge time |

### 16.2.48 ManufacturerAccess() 0x0063 Lifetime Data Block 4

This command returns the lifetime data in RAM with the following format:

aaAAbbBBccCCddDDeeEEffFFggGGhhHHiiIjjJKkkKKIILLmmMMnnNNooOOpPP.

| Value | Description       |
|-------|-------------------|
| AAaa  | No Of COV Events  |
| BBbb  | Last COV Event    |
| CCcc  | No Of CUV Events  |
| DDdd  | Last CUV Event    |
| EEee  | No Of OCD Events  |
| FFff  | Last OCD Event    |
| GGgg  | No Of OCC Events  |
| HHhh  | Last OCC Event    |
| IIii  | No Of UTC Events  |
| JJjj  | Last UTC Event    |
| KKkk  | No Of HSCD Events |
| LLll  | Last HSCD Event   |
| MMmm  | No Of UTD Events  |
| NNnn  | Last UTD Event    |
| OOoo  | No Of OTC Events  |
| PPpp  | Last OTC Event    |

### 16.2.49 ManufacturerAccess() 0x0064 Lifetime Data Block 5

This command returns the lifetime data in RAM with the following format:

aaAAbbBBccCCddDDeeEEffFFggGGhhHHiiIjjJKkkKKIILLmmMMnnNNooOOpPP.

| Value | Description            |
|-------|------------------------|
| AAaa  | No Of OTD Events       |
| BBbb  | Last OTD Event         |
| CCcc  | No Of OTF Events       |
| DDdd  | Last OTF Event         |
| EEee  | No Valid Charge Term   |
| FFff  | Last Valid Charge Term |

| Value | Description        |
|-------|--------------------|
| GGgg  | No Of Qmax Updates |
| HHhh  | Last Qmax Update   |
| IIii  | No Of Ra Updates   |
| JJjj  | Last Ra Update     |
| KKkk  | No Of Ra Disable   |
| LLll  | Last Ra Disable    |
| MMmm  | No Of PTO Events   |
| NNnn  | Last PTO Event     |
| OOoo  | No Of CTO Events   |
| PPpp  | Last CTO Event     |

### 16.2.50 *AltManufacturerAccess()* 0x0065–0x006B Lifetime SOC Range Table Data Blocks

These commands return the lifetime data in RAM on *MACData()*. See [Table 9-1](#) for more information on the collected time based data.

Each block access returns data, as indicated below, where MAC 0x0065 returns SOC range one, MAC 0x0066 returns SOC range two, and so on:

aaAAbbBBCCccDDddEEeeFFffGGggHHhhIIiiJJjjKKkkLLlIMMmmNNnnOOooPPpp.

| Value    | Description   |
|----------|---|
| BBbbAAaa | Seconds at temperature range 1 at SOC range = (MAC number – 0x0064) |
| DDddCCcc | Seconds at temperature range 2 at SOC range = (MAC number – 0x0064) |
| FFffEEee | Seconds at temperature range 3 at SOC range = (MAC number – 0x0064) |
| HHhhGGgg | Seconds at temperature range 4 at SOC range = (MAC number – 0x0064) |
| JJjjIIii | Seconds at temperature range 5 at SOC range = (MAC number – 0x0064) |
| LLlIKKkk | Seconds at temperature range 6 at SOC range = (MAC number – 0x0064) |
| NNnnMMmm | Seconds at temperature range 7 at SOC range = (MAC number – 0x0064) |
| PPppOOoo | Seconds at temperature range 8 at SOC range = (MAC number – 0x0064) |

### 16.2.51 *AltManufacturerAccess()* 0x006C Lifetime Data Block 13

This command returns the lifetime data in RAM with the following format:

aaAAbbBBccCCddDDeeEEfffGGghHHhIIjjJKkkKIILL.

| Value | Description         |
|-------|---------------------|
| AAaa  | Unused              |
| BBbb  | Unused              |
| CCcc  | No Full Discharge   |
| DDdd  | Last Full Discharge |
| EEee  | No Of HCOV Events   |
| FFff  | Last HCOV Event     |
| GGgg  | No Of HCUV Events   |
| HHhh  | Last HCUV Event     |
| IIii  | No Of HOCC Events   |
| JJjj  | Last HOCC Event     |
| KKkk  | No Of HOCD Events   |
| LLll  | Last HOCD Event     |

### 16.2.52 *AltManufacturerAccess()* 0x0070 ManufacturerInfo

This command reads or writes the data flash values of **Manufacturer Info Block A01** through **Manufacturer Info Block A32** on *MACData()*. Writes are only available in UNSEALED mode.

| Status   | Condition                                | Action  |
|----------|--|---|
| Activate | 0x0070 to <i>AltManufacturerAccess()</i> | Outputs 32 bytes of Manufacturer Info on <i>MACData()</i> in the following format: AABCCDDEEFFGGHHIIJJKLLMMNN OOPPQQRRSSTTUUVVWWXXVZZ112233445566 |

| Class       | Subclass          | Name                        | Type | Min  | Max  | Default | Unit |
|-------------|-------------------|-----------------------------|------|------|------|---------|------|
| System Data | Manufacturer Data | Manufacturer Info Block A01 | H1   | 0x00 | 0xFF | 0x61    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A02 | H1   | 0x00 | 0xFF | 0x62    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A03 | H1   | 0x00 | 0xFF | 0x63    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A04 | H1   | 0x00 | 0xFF | 0x64    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A05 | H1   | 0x00 | 0xFF | 0x65    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A06 | H1   | 0x00 | 0xFF | 0x66    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A07 | H1   | 0x00 | 0xFF | 0x67    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A08 | H1   | 0x00 | 0xFF | 0x68    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A09 | H1   | 0x00 | 0xFF | 0x69    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A10 | H1   | 0x00 | 0xFF | 0x6A    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A11 | H1   | 0x00 | 0xFF | 0x6B    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A12 | H1   | 0x00 | 0xFF | 0x6C    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A13 | H1   | 0x00 | 0xFF | 0x6D    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A14 | H1   | 0x00 | 0xFF | 0x6E    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A15 | H1   | 0x00 | 0xFF | 0x6F    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A16 | H1   | 0x00 | 0xFF | 0x70    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A17 | H1   | 0x00 | 0xFF | 0x71    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A18 | H1   | 0x00 | 0xFF | 0x72    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A19 | H1   | 0x00 | 0xFF | 0x73    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A20 | H1   | 0x00 | 0xFF | 0x74    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A21 | H1   | 0x00 | 0xFF | 0x75    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A22 | H1   | 0x00 | 0xFF | 0x76    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A23 | H1   | 0x00 | 0xFF | 0x77    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A24 | H1   | 0x00 | 0xFF | 0x7A    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A25 | H1   | 0x00 | 0xFF | 0x78    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A26 | H1   | 0x00 | 0xFF | 0x79    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A27 | H1   | 0x00 | 0xFF | 0x30    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A28 | H1   | 0x00 | 0xFF | 0x31    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A29 | H1   | 0x00 | 0xFF | 0x32    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A30 | H1   | 0x00 | 0xFF | 0x33    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A31 | H1   | 0x00 | 0xFF | 0x34    | —    |
| System Data | Manufacturer Data | Manufacturer Info Block A32 | H1   | 0x00 | 0xFF | 0x35    | —    |

### 16.2.53 *AltManufacturerAccess()* 0x0071 *DAStatus1*

This command returns the cell voltage, cell current, cell power, power, and average power on *MACData()*.

| Status   | Condition                                | Action  |
|----------|--|---|
| Activate | 0x0071 to <i>AltManufacturerAccess()</i> | Outputs 32 bytes of data on <i>MACData()</i> in the following format:<br>aaAAbbBBccCCddDDeeEEffFGgGHhHHiIlJjJkKkKILLmmMMnn<br>NNooOOppPP where:<br>AAaa: Cell Voltage<br>BBbb:<br>CCcc:<br>DDdd:<br>EEee:<br>FFff: Pack Pin Voltage<br>GGgg: Cell Current. Simultaneous current measured during Cell<br>Voltage measurement<br>HHhh:<br>Iiii:<br>JJjj:<br>KKkk: Cell Power. Calculated using Cell Voltage and Cell Current<br>data<br>LLll:<br>MMmm:<br>NNnn:<br>OOoo: Power calculated by $Voltage() \times Current()$<br>Pppp: Average Power. Calculated by $Voltage() \times AverageCurrent()$ |

#### 16.2.54 *AltManufacturerAccess()* 0x0072 *DAStatus2*

This command returns the internal temperature sensor, TS1 temperature, TS2 temperature, cell temperature, FET temperature, and raw cell voltage and current on *MACData()*.

| Status   | Condition                                | Action  |
|----------|--|---|
| Activate | 0x0072 to <i>AltManufacturerAccess()</i> | Outputs 20 bytes of temperature data values on <i>MacData()</i> in the<br>following format: aaAAbbBBccCCddDDeeEEffFGgGHhHHiIlJjJ<br>where:<br>AAaa: Int Temperature<br>BBbb: TS1 Temperature<br>CCcc: TS2 Temperature<br>DDdd:<br>EEee:<br>FFff: Cell Temperature<br>GGgg: FET Temperature<br>HHhh: Cell Raw Voltage<br>Iiii: Cell Raw Current<br>JJjj: |

#### 16.2.55 *AltManufacturerAccess()* 0x0073 *ITStatus1*

This command instructs the device to return Impedance Track related gauging information on *MACData()*.

| Status   | Condition                                | Action   |
|----------|--|--|
| Activate | 0x0073 to <i>AltManufacturerAccess()</i> | <p>Outputs 20 bytes of IT data values on <i>MACData()</i> in the following format: aaAAbBBccCCddDDeeEEffFggGGhhHHiilljJJ where:</p> <p>AAaa: True Rem Q. True remaining capacity in mAh from IT simulation before any filtering or smoothing function. This value can be negative or higher than FCC.</p> <p>BBbb: True Rem E. True remaining energy in cWh from IT simulation before any filtering or smoothing function. This value can be negative or higher than FCC.</p> <p>CCcc: Initial Q. Initial capacity calculated from IT simulation</p> <p>DDdd: Initial E. Initial energy calculated from IT simulation</p> <p>EEee: True Full Chg Q. True full charge capacity from IT simulation without the effects of any smoothing function</p> <p>FFff: True Full Chg E. True full charge energy from IT simulation without the effects of any smoothing function</p> <p>GGgg: T_sim. Temperature during the last simulation run</p> <p>HHhh: T_ambient. Current assumed ambient temperature used by the IT algorithm for thermal modeling</p> <p>IIii: Cell 1 RaScale. Ra table scaling factor of Cell 1</p> <p>JJjj: Cell 1 CompRes. Last temperature compensated resistance of Cell 1</p> |

### 16.2.56 *AltManufacturerAccess()* 0x0074 *ITStatus2*

This command instructs the device to return Impedance Track related gauging information on *MACData()*.

| Status   | Condition                                | Action   |
|----------|--|--|
| Activate | 0x0074 to <i>AltManufacturerAccess()</i> | <p>Outputs 20 bytes of IT data values on <i>MACData()</i> in the following format: AABBCDDDEEFFggGGhhHHiilljJJkkKKIILLmmMM where:</p> <p>AA: BB: LStatus—Learned status of resistance table<br/>Bit 3   Bit 2   Bit 1   Bit 0<br/>QMax   ITEN   CF1   CF0<br/>CF1, CF0: QMax Status<br/>0,0 = Battery OK<br/>0,1 = QMax is first updated in the learning cycle.<br/>1,0 = QMax and resistance table updated in the learning cycle<br/>ITEN: IT enable<br/>0 = IT disabled<br/>1 = IT enabled<br/>QMax: QMax field updates<br/>0 = QMax is not updated in the field.<br/>1 = QMax is updated in the field.<br/>CC: Cell Grid 0. Active grid point of Cell 1<br/>DD:<br/>EE:<br/>FF:<br/>GGggHHhh: State Time. Time passed since last state change (DISCHARGE, CHARGE, RELAX)<br/>IIii: DOD0_0. Depth of discharge for Cell 1<br/>JJjj: DOD0 Passed Q. Passed capacity since the last DOD0 update<br/>KKkk: DOD0 Passed E. Passed energy since last DOD0 update<br/>LLll: DOD0 Time. Time passed since the last DOD0 update<br/>MMmm: Cell 1 DODEOC. Depth of discharge at valid charge termination for Cell 1</p> |

### 16.2.57 *AltManufacturerAccess()* 0x0075 *ITStatus3*

This command instructs the device to return Impedance Track related gauging information on *MACData()*.

| Status   | Condition                                | Action  |
|----------|--|---|
| Activate | 0x0075 to <i>AltManufacturerAccess()</i> | Outputs 14 bytes of IT data values on <i>MACData()</i> in the following format: aaAAbbBBccCCddDDeeEEffFFggGG where:<br>AAaa: QMax 0. QMax of Cell 1<br>BBbb: QMax DOD0 0. DOD0 at last QMax update of Cell 1<br>CCcc: QMax Passed Q. Pass capacity since last QMax update<br>DDdd: QMax Time. Time passed since last QMax update<br>EEee: Temp k. Thermal model temperature factor<br>FFff: Temp a. Thermal model temperature time constant<br>GGgg: Raw DOD0 1. Raw DOD0 of Cell 1 |

### 16.2.58 *AltManufacturerAccess()* 0x0077 FCC\_SOH

This command returns the capacity and energy results of the IT simulation for state-of-health.

| Status | Condition                                | Action   |
|--------|--|--|
| Enable | 0x0077 to <i>AltManufacturerAccess()</i> | Returns the state-of-health capacities (4 bytes) on a subsequent read on <i>MACData()</i> in the following format: aaAAbbBB where:<br>AAaa: SOH FC@25C Q. State-of-health simulated at 25°C in mAh<br>BBbb: SOH FC@25C E. State-of-health simulated at 25°C in cWh |

### 16.2.59 *AltManufacturerAccess()* 0x0078 Filtered Capacity

This command instructs the device to return Impedance Track related gauging information on *MACData()*.

| Status   | Condition                                | Action   |
|----------|--|--|
| Activate | 0x0078 to <i>AltManufacturerAccess()</i> | Outputs 8 bytes of IT data values on <i>MACData()</i> in the following format: AAaaBBbbCCccDDdd where:<br>AAaa: Fit Rem Q. Filtered remaining capacity (mAh)<br>BBbb: Fit Rem E. Filtered remaining capacity (cWh)<br>CCcc: Fit FCC Q. Filtered full charge capacity (mAh)<br>DDdd: Fit FCC E. Filtered full charge capacity (cWh) |

### 16.2.60 *AltManufacturerAccess()* 0x007A ManufacturerInfoB

This command reads or writes the data flash values of **Manufacturer Info Block B01** through **Manufacturer Info Block B32** on *MACData()*. Writes are only available in UNSEALED mode.

| Status   | Condition                                | Action   |
|----------|--|--|
| Activate | 0x007A to <i>AltManufacturerAccess()</i> | Outputs 32 bytes of Manufacturer Info on <i>MACData()</i> in the following format: AABCCDDEEFFGGHHIIJJKKLLMMNN OOPPQQRRSSTTUUVVWWXXVZZ112233445566 |

| Class       | Subclass            | Name                        | Type | Min  | Max  | Default | Unit |
|-------------|---------------------|-----------------------------|------|------|------|---------|------|
| System Data | Manufacturer Info B | Manufacturer Info Block B01 | H1   | 0x00 | 0xFF | 0x61    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B02 | H1   | 0x00 | 0xFF | 0x62    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B03 | H1   | 0x00 | 0xFF | 0x63    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B04 | H1   | 0x00 | 0xFF | 0x64    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B05 | H1   | 0x00 | 0xFF | 0x65    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B06 | H1   | 0x00 | 0xFF | 0x66    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B07 | H1   | 0x00 | 0xFF | 0x67    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B08 | H1   | 0x00 | 0xFF | 0x68    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B09 | H1   | 0x00 | 0xFF | 0x69    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B10 | H1   | 0x00 | 0xFF | 0x6A    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B11 | H1   | 0x00 | 0xFF | 0x6B    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B12 | H1   | 0x00 | 0xFF | 0x6C    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B13 | H1   | 0x00 | 0xFF | 0x6D    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B14 | H1   | 0x00 | 0xFF | 0x6E    | —    |

| Class       | Subclass            | Name                        | Type | Min  | Max  | Default | Unit |
|-------------|---------------------|-----------------------------|------|------|------|---------|------|
| System Data | Manufacturer Info B | Manufacturer Info Block B15 | H1   | 0x00 | 0xFF | 0x6F    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B16 | H1   | 0x00 | 0xFF | 0x70    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B17 | H1   | 0x00 | 0xFF | 0x71    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B18 | H1   | 0x00 | 0xFF | 0x72    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B19 | H1   | 0x00 | 0xFF | 0x73    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B20 | H1   | 0x00 | 0xFF | 0x74    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B21 | H1   | 0x00 | 0xFF | 0x75    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B22 | H1   | 0x00 | 0xFF | 0x76    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B23 | H1   | 0x00 | 0xFF | 0x77    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B24 | H1   | 0x00 | 0xFF | 0x7A    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B25 | H1   | 0x00 | 0xFF | 0x78    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B26 | H1   | 0x00 | 0xFF | 0x79    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B27 | H1   | 0x00 | 0xFF | 0x30    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B28 | H1   | 0x00 | 0xFF | 0x31    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B29 | H1   | 0x00 | 0xFF | 0x32    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B30 | H1   | 0x00 | 0xFF | 0x33    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B31 | H1   | 0x00 | 0xFF | 0x34    | —    |
| System Data | Manufacturer Info B | Manufacturer Info Block B32 | H1   | 0x00 | 0xFF | 0x35    | —    |

### 16.2.61 AltManufacturerAccess() 0x007B ManufacturerInfoC

This command reads or writes the data flash values of **Manufacturer Info Block C01** through **Manufacturer Info Block C32** on `MACData()`. Data is organized with default values such as, for example, Info Block B in its table. Writes are available in SEALED mode when `I2C Configuration[MFG_C_SEALED] = 1`.

### 16.2.62 AltManufacturerAccess() 0x0097 FET Control Override

Use this command to temporarily allow the host system to toggle FETs on a SEALED gauge where the `[FET_EN]` bit was set. A FET cannot be closed if a safety limit is violated. The FETs are toggled using the `AltManufacturerAccess() 0x001F/0x0020` FET toggle commands. This word write command is protected by requiring the correct code word to be sent to command `0x40` first (writing to `0x60 MACDataChecksum()` and `0x61 MACDataLength()` is not required) and then to `0x3E`. That code word is `0xb25c`. Both the code word and command must be sent as little endian.

#### Note

After enabling FET Control Override using this command, the FETs open and remain open until the `AltManufacturerAccess() 0x001F/0x0020` FET toggle commands are received due to `ManufacturingStatus()[CHG_TEST]` and `ManufacturingStatus()[DSG_TEST]` initially being clear.

This command has an associated timer, **FET OVRD Time**. While the timer is counting down, the FETs can be toggled and `ManufacturingStatus()[FET_OVRD]` is set. When the timer expires, `ManufacturingStatus()[FET_OVRD]`, `ManufacturingStatus()[CHG_TEST]`, and `ManufacturingStatus()[DSG_TEST]` all clear.

### 16.2.63 AltManufacturerAccess() 0x00A3 System Reset Enable

Signals the device to prepare to open the discharge FET. The signal is only held for two seconds. This signal must be asserted for the device to open the FET with `AltManufacturerAccess()` System Reset.

### 16.2.64 AltManufacturerAccess() 0x00A4 System Reset

The BQ27Z746-R1 and BQ27Z758 devices open the discharge FET when no charging is present and the enable signal timer has not expired. The FET remains open until **Dsg FET Off Time** expires. The feature is disabled by setting **Dsg FET Off Time** to zero.

### 16.2.65 *AltManufacturerAccess()* 0x00B0 ChargingVoltageOverride

This command enables writing the five advanced charge algorithm charging voltage values in SEALED mode to data flash in the following format: aaAAbbBBccCCddDDeeEE where:

| Value | Description                                | Unit |
|-------|--|------|
| AAaa  | Low Temperature Charging Voltage           | mV   |
| BBbb  | Standard Temperature Low Charging Voltage  | mV   |
| CCcc  | Standard Temperature High Charging Voltage | mV   |
| DDdd  | High Temperature Charging Voltage          | mV   |
| EEee  | Recommended Temperature Charging Voltage   | mV   |

### 16.2.66 *AltManufacturerAccess()* 0x00B1 BattSenseOutput

This read-write command reports the configuration and status of the battery sensing output (BAT\_SP and BAT\_SN pins) in UNSEALED and SEALED modes.

The lower byte contains the real-time configuration of the battery sensing output. The upper byte contains the status of protection events on BAT\_SP (BCP, BDP) and BAT\_SN (BCN, BDN), which detect short-circuits to either PACK+ or PACK-.

While *BattSenseOutput()*[MANUAL] = 0, the configuration of the battery sensing output updates automatically and is reflected in *BattSenseOutput()*.

While *BattSenseOutput()*[MANUAL] = 1, the configuration of the battery sensing output updates based on writes to *BattSenseOutput()*. The exception to *BattSenseOutput()*[MANUAL] = 1 is that the device automatically updates the configuration to a high impedance state during protection events. When *BattSenseOutput()*[MANUAL] changes from 1 to 0, the remaining bits in *BattSenseOutput()* are ignored and the battery sensing output returns to HIZ mode, as described in [Table 6-1](#).

The lower byte of *BattSenseOutput()* is only writeable in UNSEALED mode.

|        |          |          |         |          |          |           |           |
|--------|----------|----------|---------|----------|----------|-----------|-----------|
| 15     | 14       | 13       | 12      | 11       | 10       | 9         | 8         |
| RSVD   | RSVD     | RSVD     | RSVD    | BCP      | BDP      | BCN       | BDN       |
| 7      | 6        | 5        | 4       | 3        | 2        | 1         | 0         |
| MANUAL | RLO_P_EN | RLO_N_EN | RLO_SEL | BUF_P_EN | BUF_N_EN | BUF_REF_1 | BUF_REF_0 |

**RSVD (Bits 15–12):** Reserved. Do not use.

**BCP (Bit 11):** BAT\_SP to PACK+ short detection

- 1 = Short between BAT\_SP and PACK+ detected
- 0 = Short between BAT\_SP and PACK+ not detected

**BDP (Bit 10):** BAT\_SP to PACK– short detection

- 1 = Short between BAT\_SN and PACK– detected
- 0 = Short between BAT\_SN and PACK– not detected

**BCN (Bit 9):** BAT\_SN to PACK+ short detection

- 1 = Short between BAT\_SN and PACK+ detected
- 0 = Short between BAT\_SN and PACK+ not detected

**BDN (Bit 8):** BAT\_SN to PACK– short detection

- 1 = Short between BAT\_SN and PACK– detected
- 0 = Short between BAT\_SN and PACK– not detected

**MANUAL (Bit 7):** Battery sensing output manual mode

- 1 = Enable manual mode
- 0 = Disable manual mode (automatic mode)

**RLO\_P\_EN (Bit 6):** Low resistor (RLO) enable on BAT\_SP

- 1 = Enable low resistor between BAT and BAT\_SP
- 0 = Disable low resistor between BAT and BAT\_SP

**RLO\_N\_EN (Bit 5):** Low resistor (RLO) enable on BAT\_SN

- 1 = Enable low resistor between VSS and BAT\_SN
- 0 = Disable low resistor between VSS and BAT\_SN

**RLO\_SEL (Bit 4):** Resistance of low resistors (RLO)

- 1 = 200  $\Omega$
- 0 = 510  $\Omega$

**BUF\_P\_EN (Bit 3):** Buffer enable on BAT\_SP

- 1 = Enable buffer between BAT and BAT\_SP
- 0 = Disable buffer between BAT and BAT\_SP

**BUF\_N\_EN (Bit 2):** Buffer enable on BAT\_SN

- 1 = Enable buffer between VSS and BAT\_SN
- 0 = Disable buffer between VSS and BAT\_SN

**BUF\_REF\_1, BUF\_REF\_0 (Bits 1–0):** Voltage offset of buffers

- 1, 1 = 600 mV
- 1, 0 = 400 mV
- 0, 1 = 200 mV
- 0, 0 = 0 mV

### 16.2.67 AltManufacturerAccess() 0x00E0 Ra Table Cell0

This read-only command returns the data flash values of **Cell0 R\_a 0...14** or **xCell0 R\_a 0...14** on *MACData()*, depending which Ra table is presently being used. Reads are available in all security modes, including SEALED.

| Status   | Condition                                | Action  |
|----------|--|---|
| Activate | 0x00E0 to <i>AltManufacturerAccess()</i> | Outputs 30 bytes of the presently used Ra table in data flash on <i>MACData()</i> in the following format:<br>aaAAbbBBccCCddDDeeEEffFFggGGhhHHiiIjJJkkKKllLmmMMnn<br>NN ooOO<br>AAaa: <b>Cell0 R_a 0</b> or <b>xCell0 R_a 0</b><br>BBbb: <b>Cell0 R_a 1</b> or <b>xCell0 R_a 1</b><br>CCcc: <b>Cell0 R_a 2</b> or <b>xCell0 R_a 2</b><br>DDdd: <b>Cell0 R_a 3</b> or <b>xCell0 R_a 3</b><br>EEee: <b>Cell0 R_a 4</b> or <b>xCell0 R_a 4</b><br>FFff: <b>Cell0 R_a 5</b> or <b>xCell0 R_a 5</b><br>GGgg: <b>Cell0 R_a 6</b> or <b>xCell0 R_a 6</b><br>HHhh: <b>Cell0 R_a 7</b> or <b>xCell0 R_a 7</b><br>Iiii: <b>Cell0 R_a 8</b> or <b>xCell0 R_a 8</b><br>Jjji: <b>Cell0 R_a 9</b> or <b>xCell0 R_a 9</b><br>Kkkk: <b>Cell0 R_a 10</b> or <b>xCell0 R_a 10</b><br>LlLi: <b>Cell0 R_a 11</b> or <b>xCell0 R_a 11</b><br>MmmM: <b>Cell0 R_a 12</b> or <b>xCell0 R_a 12</b><br>Nnnn: <b>Cell0 R_a 13</b> or <b>xCell0 R_a 13</b><br>Oooo: <b>Cell0 R_a 14</b> or <b>xCell0 R_a 14</b> |

### 16.2.68 AltManufacturerAccess() 0x0F00 ROM Mode

This command sends the device into ROM mode in preparation for reprogramming.

| Status   | Condition  | Action   |
|----------|--|--|
| ROM Mode | <i>OperationStatusA()</i> [ <i>SEC1, SEC0</i> ] = 0,1 AND 0x0F00 to <i>AltManufacturerAccess()</i> | The device goes into ROM mode to prepare for updates. The ROM command 0x08 returns it to FIRMWARE mode. (Note: ROM commands are sent to address 0x16 using the I <sup>2</sup> C protocol.) |

### 16.2.69 Data Flash Access() 0x4000–0x5FFF

Accessing data flash (DF) is only supported by the *AltManufacturerAccess()* by addressing the physical address.

To write to the DF, send the starting address, followed by the DF data block. The DF data block is the intended revised DF data to be updated. The size of the DF data block ranges from 1 byte to 32 bytes. All individual data must be sent in little endian.

Write to DF example:

Assuming: data1 locates at address 0x4000 and data2 locates at address 0x4002.

Both data1 and data2 are U2 type.

To update data1 and data2, send a block write with command = 0x3E

block = starting address + DF data block

= 0x00 + 0x40 + data1\_LowByte + data1\_HighByte + data2\_LowByte + data2\_HighByte

To read the DF, send a block write to the *AltManufacturerAccess()* followed by the starting address, then send a block read to the *AltManufacturerAccess()*. The return data contains the starting address followed by 32 bytes of DF data in little endian.

Read from DF example:

Taking the same assuming from the read DF example, to read DF:

a. Send the write block with command 0x3E, block = 0x00 + 0x40

b. Send the read block with command 0x3E

The returned block = a starting address + 32 bytes of DF data

= 0x00 + 0x40 + data1\_LowByte + data1\_HighByte + data2\_LowByte + data2\_HighByte.... data32\_LowByte + data32\_HighByte

The gauge supports an auto-increment on the address during a DF read. This greatly reduces the time required to read out the entire DF. To trigger auto-increment on the address during DF reads, follow the example above, but read from *AltManufacturerAccess()* through *MACDataLength()* for a total of 36 bytes. If another read block is performed starting from *AltManufacturerAccess()*, the gauge returns another 32 bytes of DF data, starting with address 0x4020.

### 16.2.70 AltManufacturerAccess() 0x7C40 Switch to HDQ

This command PERMANENTLY switches the device's communication protocol from I<sup>2</sup>C to HDQ.

| Status   | Condition   | Action   |
|----------|---|--|
| Activate | <i>OperationStatusA()</i> [ <i>SEC1, SEC0</i> ] = 0,1 or 1,0 AND 0x7C40 to <i>AltManufacturerAccess()</i> | The device permanently switches the communication protocol to HDQ (includes ROM mode). |

#### Note

After switching to HDQ, *I2C Configuration[XL]* has no effect on gauge operation.

### 16.2.71 AltManufacturerAccess() 0xF080 Exit Calibration Output Mode

This command stops the output of calibration data to the *MACData()* command.

| Status   | Condition   | Action  |
|----------|---|---|
| Activate | $MACData() = 1$ AND 0xF080 to $AltManufacturerAccess()$ | Stops output of ADC or CC data on $MACData()$ |

### 16.2.72 $AltManufacturerAccess()$ 0xF081 Output CC and ADC for Calibration

This command instructs the device to output the raw values for calibration purposes on  $MACData()$ . All values are updated every 1000 ms and the format of each value is 2's complement, MSB first.

| Status  | Condition   | Action  |
|---------|---|---|
| Disable | $OperationStatusB()[CAL] = 1$ AND 0xF080 to $AltManufacturerAccess()$ | $OperationStatusB()[CAL] = 0$<br>Stops output of ADC and CC data on $MACData()$   |
| Enable  | 0xF081 to $AltManufacturerAccess()$                                   | $OperationStatusB()[CAL] = 1$<br>Outputs the raw CC and AD values on $MACData()$ in the format of ZZYyaaAAbbBBccCCddDDeeEEffFF<br>ggGGhhHHiiIjJkkKK:<br>ZZ: Rolling 8-bit counter, increments when values are refreshed.<br>YY: Status, 1 when $AltManufacturerAccess() = 0xF081$<br>AAaa: Current (coulomb counter)<br>BBaa: Cell Voltage<br>CCaa:<br>DDaa:<br>EEee:<br>FFff: Pack Pin Voltage<br>GGgg:<br>HHhh: Cell Current<br>Iiii:<br>JJjj:<br>KKkk: |

### 16.2.73 $AltManufacturerAccess()$ 0xF083 OutputTemperatureCal

This command controls the device to output the raw temperature values for calibration purposes on  $MACData()$ . All values are updated every 1000 ms, and the format of each value is 2's complement, MSB first.

| Status  | Condition  |
|---------|--|
| Disable | $ManufacturingStatus()[CAL\_EN] = 1$ AND 0xF080 to $AltManufacturerAccess()$ |

**Action:**  $OperationStatus()[CAL] = 0$ ,  $[CAL\_OFFSET] = 0$   
Stops output of raw temperature values on  $MACData()$

| Status | Condition                           |
|--------|-------------------------------------|
| Enable | 0xF083 to $AltManufacturerAccess()$ |

**Action:**  $OperationStatus()[CAL] = 1$ ,  $[CAL\_OFFSET] = 0$   
Outputs the raw temperature values on  $MACData()$  in the format of ZZaaAAbbBBccCCddDDeeEE:

| Value | Description   |
|-------|---|
| ZZ    | Rolling 8-bit counter, increments when values are refreshed |
| AAaa  | Internal Temperature  |
| BBbb  | TS1 External Temperature                                    |
| CCcc  | TS2 External Temperature                                    |
| DDdd  | Reserved  |
| EEee  | Reserved  |

### 16.2.74 AltManufacturerAccess() 0xF0A0 ProtectorCalibration

When written, this command calibrates the threshold of a protector channel to the presently applied voltage if *ManufacturingStatus()[CAL\_EN]* = 1 and the device is in UNSEALED or FULL ACCESS mode. In addition to the command, a three byte payload is required: Channel Value + Fault Count LSB + Fault Count MSB.

| Channel Name | Channel Value | Fault Count Min | Fault Count Max | Description                        |
|--------------|---------------|-----------------|-----------------|------------------------------------|
| I-WAKE       | 0             | 0x0000          | 0x0007          | Current Wake-Up in Discharge       |
| OCD          | 1             | 0x0000          | 0x00FF          | Overcurrent in Discharge           |
| SCD          | 2             | 0x0000          | 0x0007          | Short-Circuit Current in Discharge |
| OCC          | 3             | 0x0000          | 0x001F          | Overcurrent in Charge              |
| UVP          | 4             | 0x0000          | 0x007F          | Undervoltage Protection            |
| OVP          | 5             | 0x0000          | 0x0FFF          | Overvoltage Protection             |
| BDP          | 6             | 0x0000          | 0x003F          | BAT_SP Overcurrent in Discharge    |
| BCP          | 7             | 0x0000          | 0x003F          | BAT_SP Overcurrent in Charge       |
| BDN          | 8             | 0x0000          | 0x003F          | BAT_SN Overcurrent in Discharge    |
| BCN          | 9             | 0x0000          | 0x003F          | BAT_SN Overcurrent in Charge       |

After the command is written to and executed by the device, a status byte can be read from *MACData()* to indicate success or failure.

| Status Byte | Description                             |
|-------------|---|
| 0x00        | Success                                 |
| 0x01        | Invalid channel value                   |
| 0x02        | Fault count out of range                |
| 0x03        | Protector hardware registers locked     |
| 0x04        | Failed to calibrate protector threshold |

### 16.2.75 AltManufacturerAccess() 0xF0A1 ProtectorImage1

This read-write command is only accessible if *ManufacturingStatus()[CAL\_EN]* = 1 and the device is in UNSEALED or FULL ACCESS mode. When read, the command returns the first block of protector hardware registers to *MACData()*. This register block is the first part of the protector configuration image. When written, the command directly updates the first block of protector hardware registers to immediately affect device operation.

| Offset | Name         | Description                                       |
|--------|--------------|---|
| 0-9    | RSVD         | Reserved  |
| 10     | SCD_Delay    | Short Circuit in Discharge Protection Delay       |
| 11     | OCD_Delay    | Overcurrent in Discharge Protection Delay         |
| 12-13  | OVP_Delay    | Overvoltage Protection Delay                      |
| 14     | OCC_Delay    | Overcurrent in Charge Protection Delay            |
| 15     | UVP_Delay    | Undervoltage Protection Delay                     |
| 16     | IWK_Delay    | I-Wake trigger Delay                              |
| 17     | BSENSE_Delay | Battery Sensing Protection Delay, BDP,BCP,BDN,BCN |
| 18-29  | RSVD         | Reserved  |

### 16.2.76 AltManufacturerAccess() 0xF0A2 ProtectorImage2

This read-write command is only accessible if *ManufacturingStatus()[CAL\_EN]* = 1 and the device is in UNSEALED or FULL ACCESS mode. When read, the command returns the second block of protector hardware registers to *MACData()*. This register block is the second part of the protector configuration image. When written, the command directly updates the second block of protector hardware registers to immediately affect device operation.

| Offset | Name       | Description     |
|--------|------------|-----------------|
| 0–9    | RSVD       | Reserved        |
| 10     | CREF_SCD   | Trim for SCD    |
| 11     | CREF_OCD   | Trim for OCD    |
| 12     | CREF_OCC   | Trim for OCC    |
| 13     | CREF_OVP   | Trim for OVP    |
| 14     | CREF_UVP   | Trim for UVP    |
| 15     | CREF_IWAKE | Trim for I-WAKE |
| 16     | CREF_BDP   | Trim for BDP    |
| 17     | CREF_BCP   | Trim for BCP    |
| 18     | CREF_BDN   | Trim for BDN    |
| 19     | CREF_BCN   | Trim for BCN    |
| 20–29  | RSVD       | Reserved        |

### 16.2.77 AltManufacturerAccess() 0xF0A3 ProtectorImageSave

This read-write command is only accessible if *ManufacturingStatus()[CAL\_EN]* = 1 and the device is in UNSEALED or FULL ACCESS mode. When written, the command saves the present state of the protector hardware registers to the configuration image in secure memory. In addition to the command, a one byte payload is required to indicate whether to lock the protector hardware registers after loading the configuration image from secure memory. If the byte is zero, the protector hardware registers are not locked. If the byte is non-zero, the protection hardware registers are locked to prevent modifications.

After the command is written to and executed by the device, a status byte can be read from *MACData()* to indicate success or failure.

| Status Byte | Description   |
|-------------|---|
| 0x00        | Success   |
| 0x01        | Failed to erase configuration image in secure memory          |
| 0x02        | Failed to save configuration image to secure memory           |
| 0x05        | Failed because configuration image in secure memory is locked |

### 16.2.78 AltManufacturerAccess() 0xF0A4 ProtectorImageLock

This command is only accessible if *ManufacturingStatus()[CAL\_EN]* = 1 and the device is in UNSEALED or FULL ACCESS mode. When written, the command permanently locks the configuration image in secure memory from modification. A two byte key, 0x83de, must be sent with the command for a successful write. The key must be sent in little endian order: 0xde + 0x83.

After the command is written to and executed by the device, a status byte can be read from *MACData()* to indicate success or failure.

| Status Byte | Description   |
|-------------|---|
| 0x00        | Success   |
| 0x01        | Failed because the configuration image in secure memory is already locked |
| 0x02        | Failed because the key is invalid   |

### 16.2.79 AltManufacturerAccess() 0xF0A5 ProtectorFactoryConfig

This command returns one byte that is the profile number of the factory programmed protector configuration. This profile number is only relevant if more than one protector configuration is programmed at the factory. A profile number is assigned to each set of protector threshold targets that is programmed in the factory for identification purposes.

This command is only available in UNSEALED or FULL ACCESS modes.



## 17.1 Data Flash Access

### 17.1.1 Minimum Voltage

Data flash can only be updated when the measured cell voltage is above the **Valid Update Voltage** .

**Note**

*ManufacturingStatus()[CAL\_EN]* = 1 overrides this voltage requirement so data flash can be updated prior to or during calibration of cell voltage. However, the voltage applied must exceed **Valid Update Voltage** for proper data flash update operation.

| Class | Subclass | Name                 | Type | Min | Max   | Default | Unit | Description                                     |
|-------|----------|----------------------|------|-----|-------|---------|------|---|
| Power | Power    | Valid Update Voltage | I2   | 0   | 32767 | 2100    | mV   | Min cell voltage threshold for the flash update |

## 17.2 Data Formats


### 17.2.1 Unsigned Integer

Unsigned integers are stored without changes as 1-byte, 2-byte, or 4-byte values in little endian byte order.

0



0                      1

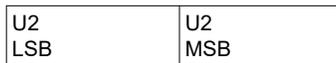

0                      1                      2                      3



### 17.2.2 Integer

Integer values are stored in 2's-complement format in 1-byte, 2-byte, or 4-byte values in little endian byte order.

0



0                      1

|           |           |
|-----------|-----------|
| I2<br>LSB | I2<br>MSB |
|-----------|-----------|

0                      1                      2                      3

|             |             |             |             |
|-------------|-------------|-------------|-------------|
| I4 L<br>LSB | I4 L<br>MSB | I4 H<br>LSB | I4 H<br>MSB |
|-------------|-------------|-------------|-------------|

### 17.2.3 Floating Point

Floating point values are stored using the IEEE 754 single-precision, 4-byte format in little endian byte order.

0                      1                      2                      3

|             |              |                          |                 |
|-------------|--------------|--------------------------|-----------------|
| Fract [0–7] | Fract [8–15] | Exp[0] +<br>Fract[16–22] | Sign + Exp[1–7] |
|-------------|--------------|--------------------------|-----------------|

Where:

Exp: 8-bit exponent stored with an offset bias of 127. The values 00 and FF have special meaning.

Fract: 23-bit fraction. If the exponent is > 0, then the mantissa is 1.fract. If the exponent is 0, then the mantissa is 0.fract.

The floating point value depends on the special cases of the exponent:

- If the exponent is FF and the fraction is 0, this represents  $\pm$  infinity.
- If the exponent is FF and the fraction is non-0, this represents "not a number" (NaN).
- If the exponent is 00, then the value is a subnormal number represented by  $(-1)^{\text{sign}} \times 2^{-126} \times 0.\text{fraction}$ .
- Otherwise, the value is a normalized number represented by  $(-1)^{\text{sign}} \times 2^{(\text{exponent} - 127)} \times 1.\text{fraction}$ .

### 17.2.4 Hex

Bit register definitions are stored in unsigned integer format.

### 17.2.5 String

String values are stored with the length byte first, followed by a number of data bytes defined with the length byte.

0                      1                      ...                      N

|        |       |     |       |
|--------|-------|-----|-------|
| Length | Data0 | ... | DataN |
|--------|-------|-----|-------|



## 18.1 Data Flash Summary

**Table 18-1. Data Flash Table**

| Class       | Subclass               | Address | Name                  | Type | Min Value   | Max Value    | Default    | Units |
|-------------|------------------------|---------|-----------------------|------|-------------|--------------|------------|-------|
| Calibration | Voltage                | 0x4000  | Cell Gain             | I2   | -32767      | 32767        | 12101      | —     |
| Calibration | Voltage                | 0x4002  | Pack Gain             | U2   | 0           | 65535        | 24835      | —     |
| Calibration | Current                | 0x4006  | CC Gain               | F4   | 1.00E-01    | 4.00E+00     | 3.68       | —     |
| Calibration | Current                | 0x400A  | Capacity Gain         | F4   | 2.98262E+02 | 1.193046E+08 | 4390411.01 | —     |
| Calibration | Temperature            | 0x4014  | Internal Temp Offset  | I1   | -128        | 127          | 0          | 0.1°C |
| Calibration | Temperature            | 0x4015  | External1 Temp Offset | I1   | -128        | 127          | 0          | 0.1°C |
| Calibration | Temperature            | 0x4016  | External2 Temp Offset | I1   | -128        | 127          | 0          | 0.1°C |
| Calibration | Internal Temp Model    | 0x4400  | Int Gain              | I2   | -32768      | 32767        | -13908     | —     |
| Calibration | Internal Temp Model    | 0x4402  | Int base offset       | I2   | -32768      | 32767        | 6959       | —     |
| Calibration | Internal Temp Model    | 0x4404  | Int Minimum AD        | I2   | -32768      | 32767        | 0          | —     |
| Calibration | Internal Temp Model    | 0x4406  | Int Maximum Temp      | I2   | -32768      | 32767        | 6959       | 0.1°K |
| Calibration | Cell Temperature Model | 0x4408  | Coeff a1              | I2   | -32768      | 32767        | -17447     | —     |
| Calibration | Cell Temperature Model | 0x440A  | Coeff a2              | I2   | -32768      | 32767        | 29322      | —     |
| Calibration | Cell Temperature Model | 0x440C  | Coeff a3              | I2   | -32768      | 32767        | -25430     | —     |
| Calibration | Cell Temperature Model | 0x440E  | Coeff a4              | I2   | -32768      | 32767        | 29836      | —     |
| Calibration | Cell Temperature Model | 0x4410  | Coeff a5              | I2   | -32768      | 32767        | 1200       | —     |
| Calibration | Cell Temperature Model | 0x4412  | Coeff b1              | I2   | -32768      | 32767        | -293       | —     |
| Calibration | Cell Temperature Model | 0x4414  | Coeff b2              | I2   | -32768      | 32767        | 552        | —     |
| Calibration | Cell Temperature Model | 0x4416  | Coeff b3              | I2   | -32768      | 32767        | -2887      | —     |
| Calibration | Cell Temperature Model | 0x4418  | Coeff b4              | I2   | -32768      | 32767        | 4591       | —     |
| Calibration | Cell Temperature Model | 0x441A  | Rc0                   | I2   | -32768      | 32767        | 11703      | —     |
| Calibration | Cell Temperature Model | 0x441C  | Adc0                  | I2   | -32768      | 32767        | 11703      | —     |
| Calibration | Cell Temperature Model | 0x441E  | Rpad                  | I2   | -32768      | 32767        | 1          | —     |
| Calibration | Cell Temperature Model | 0x4420  | Rint                  | I2   | -32768      | 32767        | 18000      | —     |
| Calibration | 2nd Temperature Model  | 0x4422  | Coeff a1              | I2   | -32768      | 32767        | -17447     | —     |

**Table 18-1. Data Flash Table (continued)**

| Class       | Subclass              | Address | Name                     | Type | Min Value | Max Value | Default | Units  |
|-------------|-----------------------|---------|--------------------------|------|-----------|-----------|---------|--------|
| Calibration | 2nd Temperature Model | 0x4424  | Coeff a2                 | I2   | -32768    | 32767     | 29322   | —      |
| Calibration | 2nd Temperature Model | 0x4426  | Coeff a3                 | I2   | -32768    | 32767     | -25430  | —      |
| Calibration | 2nd Temperature Model | 0x4428  | Coeff a4                 | I2   | -32768    | 32767     | 29836   | —      |
| Calibration | 2nd Temperature Model | 0x442A  | Coeff a5                 | I2   | -32768    | 32767     | 1200    | —      |
| Calibration | 2nd Temperature Model | 0x442C  | Coeff b1                 | I2   | -32768    | 32767     | -293    | —      |
| Calibration | 2nd Temperature Model | 0x442E  | Coeff b2                 | I2   | -32768    | 32767     | 552     | —      |
| Calibration | 2nd Temperature Model | 0x4430  | Coeff b3                 | I2   | -32768    | 32767     | -2887   | —      |
| Calibration | 2nd Temperature Model | 0x4432  | Coeff b4                 | I2   | -32768    | 32767     | 4591    | —      |
| Calibration | 2nd Temperature Model | 0x4434  | Rc0                      | I2   | -32768    | 32767     | 11703   | —      |
| Calibration | 2nd Temperature Model | 0x4436  | Adc0                     | I2   | -32768    | 32767     | 11703   | —      |
| Calibration | 2nd Temperature Model | 0x4438  | Rpad                     | I2   | -32768    | 32767     | 1       | —      |
| Calibration | 2nd Temperature Model | 0x443A  | Rint                     | I2   | -32768    | 32767     | 18000   | —      |
| Calibration | Current Deadband      | 0x4441  | Deadband                 | U1   | 0         | 255       | 3       | mA     |
| Calibration | Current Deadband      | 0x4442  | Coulomb Counter Deadband | U1   | 0         | 255       | 9       | 116 nV |
| Protections | HW Threshold Targets  | 0x4020  | OVP                      | U2   | 2000      | 5000      | 4525    | mV     |
| Protections | HW Threshold Targets  | 0x4022  | UVP                      | U2   | 2000      | 4000      | 2300    | mV     |
| Protections | HW Threshold Targets  | 0x4024  | OCC                      | I2   | 0         | 1000      | 140     | 0.1 mV |
| Protections | HW Threshold Targets  | 0x4026  | OCD                      | I2   | -1000     | 0         | -160    | 0.1 mV |
| Protections | HW Threshold Targets  | 0x4028  | SCD                      | I2   | -1000     | 0         | -200    | 0.1 mV |
| Protections | HW Threshold Targets  | 0x402A  | I-Wake                   | I2   | -1000     | 0         | -20     | 0.1 mV |
| Protections | HW Threshold Targets  | 0x402C  | BDP                      | I2   | -1000     | 0         | -200    | mV     |
| Protections | HW Threshold Targets  | 0x402E  | BCP                      | I2   | 0         | 1000      | 200     | mV     |
| Protections | HW Threshold Targets  | 0x4030  | BDN                      | I2   | -1000     | 0         | -200    | mV     |
| Protections | HW Threshold Targets  | 0x4032  | BCN                      | I2   | 0         | 1000      | 200     | mV     |
| Protections | HW Threshold Targets  | 0x4034  | Field Cal                | H2   | 0x0       | 0xFFFF    | 0x0     | Hex    |
| Protections | HW Threshold Targets  | 0x4036  | Field Config             | H1   | 0x0       | 0xFF      | 0x00    | Hex    |
| Protections | CUV                   | 0x471D  | Threshold                | I2   | 0         | 32767     | 2500    | mV     |
| Protections | CUV                   | 0x471F  | Delay                    | U1   | 0         | 255       | 1       | s      |
| Protections | CUV                   | 0x4720  | Recovery                 | I2   | 0         | 32767     | 2900    | mV     |
| Protections | CUV                   | 0x4722  | Recovery Delay           | U1   | 0         | 255       | 1       | s      |
| Protections | HCUV                  | 0x4723  | Recovery                 | I2   | 0         | 32767     | 2900    | mV     |
| Protections | HCUV                  | 0x4725  | Recovery Chg             | I2   | 0         | 32767     | 2520    | mV     |
| Protections | HCUV                  | 0x4727  | Recovery Delay           | U1   | 0         | 255       | 1       | s      |
| Protections | COV                   | 0x4728  | Threshold Low Temp       | I2   | 0         | 32767     | 4490    | mV     |

**Table 18-1. Data Flash Table (continued)**

| Class       | Subclass | Address | Name                         | Type | Min Value | Max Value | Default | Units |
|-------------|----------|---------|------------------------------|------|-----------|-----------|---------|-------|
| Protections | COV      | 0x472A  | Threshold Standard Temp Low  | I2   | 0         | 32767     | 4490    | mV    |
| Protections | COV      | 0x472C  | Threshold Standard Temp High | I2   | 0         | 32767     | 4490    | mV    |
| Protections | COV      | 0x472E  | Threshold High Temp          | I2   | 0         | 32767     | 4490    | mV    |
| Protections | COV      | 0x4730  | Threshold Rec Temp           | I2   | 0         | 32767     | 4490    | mV    |
| Protections | COV      | 0x4732  | Delay                        | U1   | 0         | 255       | 1       | s     |
| Protections | COV      | 0x4733  | Recovery Low Temp            | I2   | 0         | 32767     | 4290    | mV    |
| Protections | COV      | 0x4735  | Recovery Standard Temp Low   | I2   | 0         | 32767     | 4290    | mV    |
| Protections | COV      | 0x4737  | Recovery Standard Temp High  | I2   | 0         | 32767     | 4290    | mV    |
| Protections | COV      | 0x4739  | Recovery High Temp           | I2   | 0         | 32767     | 4290    | mV    |
| Protections | COV      | 0x473B  | Recovery Rec Temp            | I2   | 0         | 32767     | 4290    | mV    |
| Protections | COV      | 0x473D  | Recovery Delay               | U1   | 0         | 255       | 1       | s     |
| Protections | HCOV     | 0x473E  | Recovery                     | I2   | 0         | 32767     | 4290    | mV    |
| Protections | HCOV     | 0x4740  | Recovery Delay               | U1   | 0         | 255       | 1       | s     |
| Protections | OCC      | 0x4741  | Threshold                    | I2   | -32768    | 32767     | 12000   | mA    |
| Protections | OCC      | 0x4743  | Delay                        | U1   | 0         | 255       | 1       | s     |
| Protections | OCC      | 0x4744  | Recovery Threshold           | I2   | -32768    | 32767     | 200     | mA    |
| Protections | OCC      | 0x4746  | Recovery Delay               | U1   | 0         | 255       | 10      | s     |
| Protections | HOCC     | 0x4747  | Recovery Threshold           | I2   | -32768    | 32767     | 200     | mA    |
| Protections | HOCC     | 0x4749  | Recovery Delay               | U1   | 0         | 255       | 70      | s     |
| Protections | OCD      | 0x474A  | Threshold                    | I2   | -32768    | 32767     | -7000   | mA    |
| Protections | OCD      | 0x474C  | Delay                        | U1   | 0         | 255       | 3       | s     |
| Protections | OCD      | 0x474D  | Recovery Threshold           | I2   | -32768    | 32767     | -200    | mA    |
| Protections | OCD      | 0x474F  | Recovery Delay               | U1   | 0         | 255       | 10      | s     |
| Protections | HOCD     | 0x4750  | Recovery Threshold           | I2   | -32768    | 32767     | -200    | mA    |
| Protections | HOCD     | 0x4752  | Recovery Delay               | U1   | 0         | 255       | 70      | s     |
| Protections | HSCD     | 0x4753  | Recovery Threshold           | I2   | -32768    | 32767     | -200    | mA    |
| Protections | HSCD     | 0x4755  | Recovery Delay               | U1   | 0         | 255       | 70      | s     |
| Protections | OTC      | 0x4756  | Threshold                    | I2   | 2332      | 3932      | 3282    | 0.1°K |
| Protections | OTC      | 0x4758  | Delay                        | U1   | 0         | 255       | 2       | s     |
| Protections | OTC      | 0x4759  | Recovery                     | I2   | 2332      | 3932      | 3232    | 0.1°K |
| Protections | OTD      | 0x475B  | Threshold                    | I2   | 2332      | 3932      | 3332    | 0.1°K |
| Protections | OTD      | 0x475D  | Delay                        | U1   | 0         | 255       | 2       | s     |
| Protections | OTD      | 0x475E  | Recovery                     | I2   | 2332      | 3932      | 3282    | 0.1°K |
| Protections | OTF      | 0x4760  | Threshold                    | I2   | 2332      | 3932      | 3532    | 0.1°K |
| Protections | OTF      | 0x4762  | Delay                        | U1   | 0         | 255       | 2       | s     |
| Protections | OTF      | 0x4763  | Recovery                     | I2   | 2332      | 3932      | 3382    | 0.1°K |
| Protections | UTC      | 0x4765  | Threshold                    | I2   | 2332      | 3932      | 2732    | 0.1°K |
| Protections | UTC      | 0x4767  | Delay                        | U1   | 0         | 255       | 2       | s     |
| Protections | UTC      | 0x4768  | Recovery                     | I2   | 2332      | 3932      | 2782    | 0.1°K |
| Protections | UTD      | 0x476A  | Threshold                    | I2   | 2332      | 3932      | 2732    | 0.1°K |
| Protections | UTD      | 0x476C  | Delay                        | U1   | 0         | 255       | 2       | s     |
| Protections | UTD      | 0x476D  | Recovery                     | I2   | 2332      | 3932      | 2782    | 0.1°K |
| Protections | PTO      | 0x476F  | Charge Threshold             | I2   | -32768    | 32767     | 2000    | mA    |
| Protections | PTO      | 0x4771  | Suspend Threshold            | I2   | -32768    | 32767     | 1800    | mA    |
| Protections | PTO      | 0x4773  | Delay                        | U2   | 0         | 65535     | 1800    | s     |
| Protections | PTO      | 0x4775  | Reset                        | I2   | 0         | 32767     | 2       | mAh   |
| Protections | CTO      | 0x4777  | Charge Threshold             | I2   | -32768    | 32767     | 2500    | mA    |
| Protections | CTO      | 0x4779  | Suspend Threshold            | I2   | -32768    | 32767     | 2000    | mA    |
| Protections | CTO      | 0x477B  | Delay                        | U2   | 0         | 65535     | 54000   | s     |

**Table 18-1. Data Flash Table (continued)**

| Class       | Subclass          | Address | Name                        | Type | Min Value | Max Value | Default | Units        |
|-------------|-------------------|---------|-----------------------------|------|-----------|-----------|---------|--------------|
| Protections | CTO               | 0x477D  | Reset                       | I2   | 0         | 32767     | 2       | mAh          |
| Settings    | Protection        | 0x4718  | Protection Configuration    | H1   | 0x0       | 0x02      | 0x0     | Hex          |
| Settings    | Protection        | 0x4719  | Enabled Protections A       | H1   | 0x0       | 0xFF      | 0x57    | Hex          |
| Settings    | Protection        | 0x471A  | Enabled Protections B       | H1   | 0x0       | 0xFF      | 0x35    | Hex          |
| Settings    | Protection        | 0x471B  | Enabled Protections C       | H1   | 0x0       | 0xFF      | 0x14    | Hex          |
| Settings    | Protection        | 0x471C  | Enabled Protections D       | H1   | 0x0       | 0xFF      | 0xCC    | Hex          |
| Settings    | Permanent Failure | 0x477F  | Enabled PF A                | H1   | 0x0       | 0xFF      | 0x0     | Hex          |
| Settings    | Permanent Failure | 0x4781  | Enabled PF C                | H1   | 0x0       | 0xFF      | 0x0     | Hex          |
| Settings    | Batt Sense        | 0x4707  | Batt Sense Options          | H1   | 0x0       | 0x01      | 0x00    | Hex          |
| Settings    | Batt Sense        | 0x4708  | Batt Sense Config           | H1   | 0x0       | 0xFF      | 0x00    | Hex          |
| Settings    | Batt Sense        | 0x4709  | RLO Charge Config           | H1   | 0x0       | 0x0C      | 0x0C    | Hex          |
| Settings    | Batt Sense        | 0x470A  | RLO Charge Threshold        | I2   | 0         | 32767     | 75      | mA           |
| Settings    | Batt Sense        | 0x470C  | Buffer Mode Threshold       | I2   | 0         | 32767     | 2500    | mV           |
| Settings    | Batt Sense        | 0x470E  | Buffer Mode Delay           | U1   | 0         | 255       | 1       | s            |
| Settings    | Batt Sense        | 0x470F  | Buffer Mode Recovery        | I2   | 0         | 32767     | 2900    | mV           |
| Settings    | Batt Sense        | 0x4711  | Buffer Mode PACK Margin     | I2   | -1000     | 1000      | 100     | mV           |
| Settings    | Batt Sense        | 0x4713  | Transition Config           | H1   | 0x0       | 0x6C      | 0x44    | Hex          |
| Settings    | Batt Sense        | 0x4714  | Transition Delay            | U2   | 0         | 1000      | 250     | 2 $\mu$ s    |
| Settings    | Batt Sense        | 0x4716  | Protection Enable Delay     | U1   | 1         | 255       | 3       | ms           |
| Settings    | Batt Sense        | 0x4717  | Protection Recovery Delay   | U1   | 0         | 255       | 5       | s            |
| Settings    | Configuration     | 0x4600  | FET Options                 | H2   | 0x0       | 0x01FF    | 0x0142  | Hex          |
| Settings    | Configuration     | 0x4602  | FET OVRD Time               | U2   | 30        | 1800      | 60      | s            |
| Settings    | Configuration     | 0x4604  | I2C Gauging Configuration   | H1   | 0x0       | 0x3F      | 0x20    | Hex          |
| Settings    | Configuration     | 0x4605  | I2C Configuration           | H2   | 0x0       | 0x08FF    | 0x0028  | Hex          |
| Settings    | Configuration     | 0x4607  | Alt I2C Address             | H1   | 0x0       | 0xFF      | 0x0     | Hex          |
| Settings    | Configuration     | 0x4608  | Alt I2C Addr Chk            | H1   | 0x0       | 0xFF      | 0x0     | Hex          |
| Settings    | Configuration     | 0x4609  | Auth Config                 | H1   | 0x0       | 0x03      | 0x00    | Hex          |
| Settings    | Configuration     | 0x460A  | Power Config                | H2   | 0x0       | 0xFFFF    | 0x0011  | Hex          |
| Settings    | Configuration     | 0x460E  | GPO Pin Config              | H1   | 0x0       | 0x01      | 0x00    | Hex          |
| Settings    | Configuration     | 0x460F  | Host Intr Config            | H1   | 0x0       | 0x3B      | 0x00    | Hex          |
| Settings    | Configuration     | 0x4616  | Init Voltage High Set       | I2   | 0         | 5000      | 4500    | mV           |
| Settings    | Configuration     | 0x4618  | Init Voltage High Clear     | I2   | 0         | 5000      | 4400    | mV           |
| Settings    | Configuration     | 0x461A  | Init Voltage Low Set        | I2   | 0         | 5000      | 2500    | mV           |
| Settings    | Configuration     | 0x461C  | Init Voltage Low Clear      | I2   | 0         | 5000      | 2600    | mV           |
| Settings    | Configuration     | 0x461E  | Init Temperature High Set   | I1   | -128      | 127       | 60      | $^{\circ}$ C |
| Settings    | Configuration     | 0x461F  | Init Temperature High Clear | I1   | -128      | 127       | 55      | $^{\circ}$ C |
| Settings    | Configuration     | 0x4620  | Init Temperature Low Set    | I1   | -128      | 127       | 0       | $^{\circ}$ C |
| Settings    | Configuration     | 0x4621  | Init Temperature Low Clear  | I1   | -128      | 127       | 5       | $^{\circ}$ C |
| Settings    | Configuration     | 0x4622  | SOC Delta                   | U1   | 0         | 100       | 1       | %            |
| Settings    | Configuration     | 0x464D  | SOC Flag Config A           | H2   | 0x0       | 0xFFFF    | 0x0C8C  | Hex          |
| Settings    | Configuration     | 0x464F  | SOC Flag Config B           | H1   | 0x0       | 0xFF      | 0x8C    | Hex          |
| Settings    | Configuration     | 0x4668  | IT Gauging Configuration    | H2   | 0x0       | 0xFFFF    | 0xF5DE  | Hex          |
| Settings    | Configuration     | 0x466C  | IT Gauging Ext              | H2   | 0x0000    | 0x003F    | 0x003B  | Hex          |
| Settings    | Configuration     | 0x4681  | Charging Configuration      | H2   | 0x0       | 0x3F87    | 0x0000  | Hex          |
| Settings    | Configuration     | 0x46F6  | Temperature Enable          | H1   | 0x0       | 0x0F      | 0x02    | Hex          |
| Settings    | Configuration     | 0x46F7  | DA Configuration            | H2   | 0x0       | 0x0C10    | 0x0410  | Hex          |
| Settings    | AFE               | 0x46FA  | ZVCHG Exit Threshold        | I2   | 0         | 2000      | 2000    | mV           |
| Settings    | AFE               | 0x46FC  | ZVCHG PACK Threshold        | I2   | 0         | 2000      | 1500    | mV           |
| Settings    | BTP               | 0x4610  | Init Discharge Set          | I2   | 0         | 32767     | 150     | mAh          |

**Table 18-1. Data Flash Table (continued)**

| Class                     | Subclass                    | Address | Name                    | Type | Min Value | Max Value | Default | Units |
|---------------------------|-----------------------------|---------|-------------------------|------|-----------|-----------|---------|-------|
| Settings                  | BTP                         | 0x4612  | Init Charge Set         | I2   | 0         | 32767     | 175     | mAh   |
| Settings                  | BTP                         | 0x4614  | Init Discharge Set RSOC | U1   | 0         | 100       | 10      | %     |
| Settings                  | BTP                         | 0x4615  | Init Charge Set RSOC    | U1   | 0         | 100       | 15      | %     |
| Settings                  | Lifetimes                   | 0x478F  | Lifetimes Configuration | H2   | 0x0       | 0x00FF    | 0x0000  | Hex   |
| Settings                  | Lifetimes                   | 0x4792  | Time RSOC Threshold A   | U1   | 0         | 100       | 95      | %     |
| Settings                  | Lifetimes                   | 0x4793  | Time RSOC Threshold B   | U1   | 0         | 100       | 90      | %     |
| Settings                  | Lifetimes                   | 0x4794  | Time RSOC Threshold C   | U1   | 0         | 100       | 80      | %     |
| Settings                  | Lifetimes                   | 0x4795  | Time RSOC Threshold D   | U1   | 0         | 100       | 50      | %     |
| Settings                  | Lifetimes                   | 0x4796  | Time RSOC Threshold E   | U1   | 0         | 100       | 20      | %     |
| Settings                  | Lifetimes                   | 0x4797  | Time RSOC Threshold F   | U1   | 0         | 100       | 10      | %     |
| Settings                  | Lifetimes                   | 0x4798  | Time RSOC Threshold G   | U1   | 0         | 100       | 5       | %     |
| Settings                  | Manufacturing               | 0x43CC  | Mfg Status init         | H2   | 0x0       | 0xFFFF    | 0x0000  | Hex   |
| Permanent Fail            | SUV                         | 0x4783  | Threshold               | I2   | 0         | 32767     | 2200    | mV    |
| Permanent Fail            | SUV                         | 0x4785  | Delay                   | U1   | 0         | 255       | 5       | s     |
| Permanent Fail            | SOV                         | 0x4786  | Threshold               | I2   | 0         | 32767     | 4500    | mV    |
| Permanent Fail            | SOV                         | 0x4788  | Delay                   | U1   | 0         | 255       | 5       | s     |
| Permanent Fail            | CFET                        | 0x4789  | OFF Threshold           | I2   | 0         | 500       | 5       | mA    |
| Permanent Fail            | CFET                        | 0x478B  | OFF Delay               | U1   | 0         | 255       | 5       | s     |
| Permanent Fail            | DFET                        | 0x478C  | OFF Threshold           | I2   | -500      | 0         | -5      | mA    |
| Permanent Fail            | DFET                        | 0x478E  | OFF Delay               | U1   | 0         | 255       | 5       | s     |
| Advanced Charge Algorithm | Temperature Ranges          | 0x4683  | T1 Temp                 | I1   | -128      | 127       | 0       | °C    |
| Advanced Charge Algorithm | Temperature Ranges          | 0x4684  | T2 Temp                 | I1   | -128      | 127       | 10      | °C    |
| Advanced Charge Algorithm | Temperature Ranges          | 0x4685  | T5 Temp                 | I1   | -128      | 127       | 20      | °C    |
| Advanced Charge Algorithm | Temperature Ranges          | 0x4686  | T6 Temp                 | I1   | -128      | 127       | 25      | °C    |
| Advanced Charge Algorithm | Temperature Ranges          | 0x4687  | T3 Temp                 | I1   | -128      | 127       | 45      | °C    |
| Advanced Charge Algorithm | Temperature Ranges          | 0x4688  | T4 Temp                 | I1   | -128      | 127       | 55      | °C    |
| Advanced Charge Algorithm | Temperature Ranges          | 0x4689  | Hysteresis Temp         | I1   | 0         | 127       | 1       | °C    |
| Advanced Charge Algorithm | Low Temp Charging           | 0x43C1  | Voltage                 | I2   | 0         | 32767     | 4400    | mV    |
| Advanced Charge Algorithm | Low Temp Charging           | 0x468A  | Current Low             | I2   | 0         | 32767     | 132     | mA    |
| Advanced Charge Algorithm | Low Temp Charging           | 0x468C  | Current Med             | I2   | 0         | 32767     | 352     | mA    |
| Advanced Charge Algorithm | Low Temp Charging           | 0x468E  | Current High            | I2   | 0         | 32767     | 264     | mA    |
| Advanced Charge Algorithm | Standard Temp Low Charging  | 0x43C3  | Voltage                 | I2   | 0         | 32767     | 4400    | mV    |
| Advanced Charge Algorithm | Standard Temp Low Charging  | 0x4690  | Current Low             | I2   | 0         | 32767     | 1980    | mA    |
| Advanced Charge Algorithm | Standard Temp Low Charging  | 0x4692  | Current Med             | I2   | 0         | 32767     | 4004    | mA    |
| Advanced Charge Algorithm | Standard Temp Low Charging  | 0x4694  | Current High            | I2   | 0         | 32767     | 2992    | mA    |
| Advanced Charge Algorithm | Standard Temp High Charging | 0x43C5  | Voltage                 | I2   | 0         | 32767     | 4400    | mV    |
| Advanced Charge Algorithm | Standard Temp High Charging | 0x4696  | Current Low             | I2   | 0         | 32767     | 1980    | mA    |
| Advanced Charge Algorithm | Standard Temp High Charging | 0x4698  | Current Med             | I2   | 0         | 32767     | 4004    | mA    |

**Table 18-1. Data Flash Table (continued)**

| Class                     | Subclass                    | Address | Name                        | Type | Min Value | Max Value | Default | Units |
|---------------------------|-----------------------------|---------|-----------------------------|------|-----------|-----------|---------|-------|
| Advanced Charge Algorithm | Standard Temp High Charging | 0x469A  | Current High                | I2   | 0         | 32767     | 2992    | mA    |
| Advanced Charge Algorithm | High Temp Charging          | 0x43C7  | Voltage                     | I2   | 0         | 32767     | 4100    | mV    |
| Advanced Charge Algorithm | High Temp Charging          | 0x469C  | Current Low                 | I2   | 0         | 32767     | 1012    | mA    |
| Advanced Charge Algorithm | High Temp Charging          | 0x469E  | Current Med                 | I2   | 0         | 32767     | 1980    | mA    |
| Advanced Charge Algorithm | High Temp Charging          | 0x46A0  | Current High                | I2   | 0         | 32767     | 1496    | mA    |
| Advanced Charge Algorithm | Rec Temp Charging           | 0x43C9  | Voltage                     | I2   | 0         | 32767     | 4400    | mV    |
| Advanced Charge Algorithm | Rec Temp Charging           | 0x46A2  | Current Low                 | I2   | 0         | 32767     | 2508    | mA    |
| Advanced Charge Algorithm | Rec Temp Charging           | 0x46A4  | Current Med                 | I2   | 0         | 32767     | 4488    | mA    |
| Advanced Charge Algorithm | Rec Temp Charging           | 0x46A6  | Current High                | I2   | 0         | 32767     | 3520    | mA    |
| Advanced Charge Algorithm | Pre-Charging                | 0x46A8  | Current                     | I2   | 0         | 32767     | 88      | mA    |
| Advanced Charge Algorithm | Voltage Range               | 0x46AA  | Precharge Start Voltage     | I2   | 0         | 32767     | 2500    | mV    |
| Advanced Charge Algorithm | Voltage Range               | 0x46AC  | Charging Voltage Low        | I2   | 0         | 32767     | 2900    | mV    |
| Advanced Charge Algorithm | Voltage Range               | 0x46AE  | Charging Voltage Med        | I2   | 0         | 32767     | 3600    | mV    |
| Advanced Charge Algorithm | Voltage Range               | 0x46B0  | Charging Voltage High       | I2   | 0         | 32767     | 4000    | mV    |
| Advanced Charge Algorithm | Voltage Range               | 0x46B2  | Charging Voltage Hysteresis | U1   | 0         | 255       | 0       | mV    |
| Advanced Charge Algorithm | SoC Range                   | 0x46B3  | Charging SoC Med            | U1   | 0         | 100       | 50      | %     |
| Advanced Charge Algorithm | SoC Range                   | 0x46B4  | Charging SoC High           | U1   | 0         | 100       | 75      | %     |
| Advanced Charge Algorithm | SoC Range                   | 0x46B5  | Charging SoC Hysteresis     | U1   | 0         | 100       | 1       | %     |
| Advanced Charge Algorithm | Degrade Mode 1              | 0x46B6  | Cycle Threshold             | U2   | 0         | 65535     | 50      | —     |
| Advanced Charge Algorithm | Degrade Mode 1              | 0x46B8  | SOH Threshold               | U1   | 0         | 100       | 95      | %     |
| Advanced Charge Algorithm | Degrade Mode 1              | 0x46B9  | Runtime Threshold           | U2   | 0         | 65535     | 8760    | h     |
| Advanced Charge Algorithm | Degrade Mode 1              | 0x46BB  | High SOC Threshold          | U2   | 0         | 65535     | 8760    | h     |
| Advanced Charge Algorithm | Degrade Mode 1              | 0x46BD  | High Temp Threshold         | U2   | 0         | 65535     | 8760    | h     |
| Advanced Charge Algorithm | Degrade Mode 1              | 0x46BF  | High Temp at SOC Threshold  | U2   | 0         | 65535     | 8760    | h     |
| Advanced Charge Algorithm | Degrade Mode 1              | 0x46C1  | Voltage Degradation         | I2   | 0         | 32767     | 10      | mV    |
| Advanced Charge Algorithm | Degrade Mode 1              | 0x46C3  | Current Degradation         | U1   | 0         | 100       | 10      | %     |
| Advanced Charge Algorithm | Degrade Mode 2              | 0x46C4  | Cycle Threshold             | U2   | 0         | 65535     | 150     | —     |
| Advanced Charge Algorithm | Degrade Mode 2              | 0x46C6  | SOH Threshold               | U1   | 0         | 100       | 80      | %     |
| Advanced Charge Algorithm | Degrade Mode 2              | 0x46C7  | Runtime Threshold           | U2   | 0         | 65535     | 17520   | h     |
| Advanced Charge Algorithm | Degrade Mode 2              | 0x46C9  | High SOC Threshold          | U2   | 0         | 65535     | 17520   | h     |

**Table 18-1. Data Flash Table (continued)**

| Class                     | Subclass           | Address | Name                         | Type | Min Value | Max Value | Default | Units |
|---------------------------|--------------------|---------|------------------------------|------|-----------|-----------|---------|-------|
| Advanced Charge Algorithm | Degrade Mode 2     | 0x46CB  | High Temp Threshold          | U2   | 0         | 65535     | 17520   | h     |
| Advanced Charge Algorithm | Degrade Mode 2     | 0x46CD  | High Temp at SOC Threshold   | U2   | 0         | 65535     | 17520   | h     |
| Advanced Charge Algorithm | Degrade Mode 2     | 0x46CF  | Voltage Degradation          | U2   | 0         | 65535     | 40      | mV    |
| Advanced Charge Algorithm | Degrade Mode 2     | 0x46D1  | Current Degradation          | U1   | 0         | 100       | 20      | %     |
| Advanced Charge Algorithm | Degrade Mode 3     | 0x46D2  | Cycle Threshold              | U2   | 0         | 65535     | 350     | —     |
| Advanced Charge Algorithm | Degrade Mode 3     | 0x46D4  | SOH Threshold                | U1   | 0         | 100       | 60      | %     |
| Advanced Charge Algorithm | Degrade Mode 3     | 0x46D5  | Runtime Threshold            | U2   | 0         | 65535     | 26280   | h     |
| Advanced Charge Algorithm | Degrade Mode 3     | 0x46D7  | High SOC Threshold           | U2   | 0         | 65535     | 26280   | h     |
| Advanced Charge Algorithm | Degrade Mode 3     | 0x46D9  | High Temp Threshold          | U2   | 0         | 65535     | 26280   | h     |
| Advanced Charge Algorithm | Degrade Mode 3     | 0x46DB  | High Temp at SOC Threshold   | U2   | 0         | 65535     | 26280   | h     |
| Advanced Charge Algorithm | Degrade Mode 3     | 0x46DD  | Voltage Degradation          | U2   | 0         | 65535     | 70      | mV    |
| Advanced Charge Algorithm | Degrade Mode 3     | 0x46DF  | Current Degradation          | U1   | 0         | 100       | 40      | %     |
| Advanced Charge Algorithm | Degrade Mode       | 0x4200  | Runtime Degrade              | U2   | 0         | 65535     | 0       | hours |
| Advanced Charge Algorithm | Degrade Mode       | 0x46E0  | Cycle Count Start Runtime    | U1   | 0         | 255       | 1       | —     |
| Advanced Charge Algorithm | Degrade Mode       | 0x46E1  | Runtime Update Interval      | U1   | 0         | 18        | 10      | h     |
| Advanced Charge Algorithm | CS Degrade         | 0x46E2  | Temperature Threshold        | I2   | 0         | 32767     | 3232    | 0.1°K |
| Advanced Charge Algorithm | CS Degrade         | 0x46E4  | Voltage Threshold            | I2   | 0         | 32767     | 4200    | mV    |
| Advanced Charge Algorithm | CS Degrade         | 0x46E6  | Time Interval                | U2   | 0         | 14400     | 300     | s     |
| Advanced Charge Algorithm | CS Degrade         | 0x46E8  | Delta Voltage                | I2   | 0         | 32767     | 25      | mV    |
| Advanced Charge Algorithm | CS Degrade         | 0x46EA  | Min CV                       | I2   | 0         | 32767     | 3000    | mV    |
| Advanced Charge Algorithm | Termination Config | 0x46EC  | Charge Term Taper Current    | I2   | 0         | 32767     | 100     | mA    |
| Advanced Charge Algorithm | Termination Config | 0x46F0  | Charge Term Voltage Offset   | I2   | 0         | 32767     | 100     | mV    |
| Advanced Charge Algorithm | Termination Config | 0x46F2  | Charge Term Charging Voltage | I2   | 0         | 32767     | 4400    | mV    |
| Advanced Charge Algorithm | IR Correction      | 0x46F5  | Averaging Interval           | U1   | 1         | 255       | 12      | s     |
| Gas Gauging               | Current Thresholds | 0x46FF  | Dsg Current Threshold        | I2   | -32768    | 32767     | 60      | mA    |
| Gas Gauging               | Current Thresholds | 0x4701  | Chg Current Threshold        | I2   | -32768    | 32767     | 75      | mA    |
| Gas Gauging               | Current Thresholds | 0x4703  | Quit Current                 | I2   | 0         | 32767     | 40      | mA    |
| Gas Gauging               | Current Thresholds | 0x4705  | Dsg Relax Time               | U1   | 0         | 255       | 60      | s     |
| Gas Gauging               | Current Thresholds | 0x4706  | Chg Relax Time               | U1   | 0         | 255       | 60      | s     |
| Gas Gauging               | Max Load           | 0x463E  | Max Load Current             | I2   | -32768    | 0         | -500    | mA    |
| Gas Gauging               | Max Load           | 0x4640  | Max Load Rsoc                | U1   | 0         | 100       | 50      | %     |
| Gas Gauging               | Design             | 0x4645  | Design Capacity mAh          | I2   | 0         | 32767     | 5300    | mAh   |
| Gas Gauging               | Design             | 0x4647  | Design Capacity cWh          | I2   | 0         | 32767     | 2040    | cWh   |
| Gas Gauging               | Design             | 0x4649  | Design Voltage               | I2   | 0         | 32767     | 3850    | mV    |

**Table 18-1. Data Flash Table (continued)**

| Class       | Subclass | Address | Name                           | Type | Min Value | Max Value | Default | Units              |
|-------------|----------|---------|--------------------------------|------|-----------|-----------|---------|--------------------|
| Gas Gauging | Cycle    | 0x464B  | Cycle Count Percentage         | U1   | 0         | 100       | 90      | %                  |
| Gas Gauging | FD       | 0x4650  | Set Voltage Threshold          | I2   | 0         | 5000      | 3000    | mV                 |
| Gas Gauging | FD       | 0x4652  | Clear Voltage Threshold        | I2   | 0         | 5000      | 3100    | mV                 |
| Gas Gauging | FD       | 0x4654  | Set % RSOC Threshold           | U1   | 0         | 100       | 0       | %                  |
| Gas Gauging | FD       | 0x4655  | Clear % RSOC Threshold         | U1   | 0         | 100       | 5       | %                  |
| Gas Gauging | FC       | 0x4656  | Set Voltage Threshold          | I2   | 0         | 5000      | 4400    | mV                 |
| Gas Gauging | FC       | 0x4658  | Clear Voltage Threshold        | I2   | 0         | 5000      | 4300    | mV                 |
| Gas Gauging | FC       | 0x465A  | Set % RSOC Threshold           | U1   | 0         | 100       | 100     | %                  |
| Gas Gauging | FC       | 0x465B  | Clear % RSOC Threshold         | U1   | 0         | 100       | 95      | %                  |
| Gas Gauging | TD       | 0x465C  | Set Voltage Threshold          | I2   | 0         | 5000      | 3200    | mV                 |
| Gas Gauging | TD       | 0x465E  | Clear Voltage Threshold        | I2   | 0         | 5000      | 3300    | mV                 |
| Gas Gauging | TD       | 0x4660  | Set % RSOC Threshold           | U1   | 0         | 100       | 6       | %                  |
| Gas Gauging | TD       | 0x4661  | Clear % RSOC Threshold         | U1   | 0         | 100       | 8       | %                  |
| Gas Gauging | TC       | 0x4662  | Set Voltage Threshold          | I2   | 0         | 5000      | 4400    | mV                 |
| Gas Gauging | TC       | 0x4664  | Clear Voltage Threshold        | I2   | 0         | 5000      | 4300    | mV                 |
| Gas Gauging | TC       | 0x4666  | Set % RSOC Threshold           | U1   | 0         | 100       | 100     | %                  |
| Gas Gauging | TC       | 0x4667  | Clear % RSOC Threshold         | U1   | 0         | 100       | 95      | %                  |
| Gas Gauging | State    | 0x4186  | Qmax Cell 1                    | I2   | 0         | 32767     | 5359    | mAh                |
| Gas Gauging | State    | 0x4188  | Qmax Day                       | U2   | 0         | 65535     | 0       | —                  |
| Gas Gauging | State    | 0x418A  | Qmax Cycle Count               | U2   | 0         | 65535     | 0       | —                  |
| Gas Gauging | State    | 0x418C  | Update Status                  | H1   | 0x0       | 0x0E      | 0x0     | —                  |
| Gas Gauging | State    | 0x418D  | Cell 1 Chg Voltage at EoC      | I2   | 0         | 32767     | 4375    | mV                 |
| Gas Gauging | State    | 0x418F  | Current at EoC                 | I2   | 0         | 32767     | 100     | mA                 |
| Gas Gauging | State    | 0x4191  | Avg I Last Run                 | I2   | -32768    | 32767     | -500    | mA                 |
| Gas Gauging | State    | 0x4193  | Avg P Last Run                 | I2   | -32768    | 32767     | -192    | cW                 |
| Gas Gauging | State    | 0x4195  | Delta Voltage                  | I2   | -32768    | 32767     | 0       | mV                 |
| Gas Gauging | State    | 0x4197  | Temp k                         | I2   | 0         | 32767     | 200     | 0.1°C/256<br>cW    |
| Gas Gauging | State    | 0x4199  | Temp a                         | I2   | 0         | 32767     | 1000    | s                  |
| Gas Gauging | State    | 0x419B  | Max Avg I Last Run             | I2   | -32768    | 32767     | -500    | mA                 |
| Gas Gauging | State    | 0x419D  | Max Avg P Last Run             | I2   | -32768    | 32767     | -192    | cW                 |
| Gas Gauging | State    | 0x41C0  | Cycle Count                    | U2   | 0         | 65535     | 0       | —                  |
| Gas Gauging | State    | 0x45F8  | SOH Temp k                     | I2   | 0         | 32767     | 100     | 0.1°C/256<br>cW    |
| Gas Gauging | State    | 0x45FA  | SOH Temp a                     | I2   | 0         | 32767     | 1000    | s                  |
| Gas Gauging | IT Cfg   | 0x4180  | Design Resistance              | I2   | 1         | 32767     | 90      | mΩ                 |
| Gas Gauging | IT Cfg   | 0x4182  | Pack Resistance                | I2   | 0         | 32767     | 0       | mΩ                 |
| Gas Gauging | IT Cfg   | 0x4184  | System Resistance              | I2   | 0         | 32767     | 0       | mΩ                 |
| Gas Gauging | IT Cfg   | 0x458E  | Ra Filter                      | U2   | 0         | 999       | 800     | 0.1%               |
| Gas Gauging | IT Cfg   | 0x4591  | Ra Max Delta                   | U1   | 0         | 255       | 15      | %                  |
| Gas Gauging | IT Cfg   | 0x4594  | Resistance Parameter Filter    | U2   | 1         | 65535     | 65142   | —                  |
| Gas Gauging | IT Cfg   | 0x4596  | Near EDV Ra Param Filter       | U2   | 1         | 65535     | 62184   | —                  |
| Gas Gauging | IT Cfg   | 0x4598  | Cell 1 Interconnect Resistance | I2   | 0         | 32767     | 0       | 2 <sup>-10</sup> Ω |
| Gas Gauging | IT Cfg   | 0x459A  | Max Current Change %           | U1   | 0         | 100       | 10      | %                  |
| Gas Gauging | IT Cfg   | 0x459B  | Resistance Update Voltage      | I2   | 0         | 32767     | 50      | mV                 |
| Gas Gauging | IT Cfg   | 0x45BF  | Qmax Delta                     | U1   | 3         | 100       | 5       | %                  |
| Gas Gauging | IT Cfg   | 0x45C0  | Qmax Upper Bound               | U1   | 100       | 255       | 130     | %                  |
| Gas Gauging | IT Cfg   | 0x45C1  | Cycle Adjust Threshold         | U1   | 0         | 255       | 20      | —                  |
| Gas Gauging | IT Cfg   | 0x45C2  | Cycle Adj Incr                 | U1   | 0         | 255       | 5       | 0.01%              |
| Gas Gauging | IT Cfg   | 0x45C3  | OCV Pred Active T Limit        | U2   | 100       | 65535     | 200     | s                  |

**Table 18-1. Data Flash Table (continued)**

| Class       | Subclass          | Address | Name                           | Type | Min Value | Max Value | Default | Units       |
|-------------|-------------------|---------|--------------------------------|------|-----------|-----------|---------|-------------|
| Gas Gauging | IT Cfg            | 0x45C5  | OCV Pred Transient T           | U2   | 100       | 65535     | 300     | s           |
| Gas Gauging | IT Cfg            | 0x45C7  | OCV Pred Measure Time          | U2   | 0         | 65535     | 200     | s           |
| Gas Gauging | IT Cfg            | 0x45C9  | Term Voltage                   | I2   | 0         | 32767     | 3000    | mV          |
| Gas Gauging | IT Cfg            | 0x45CB  | Term V Hold Time               | U1   | 0         | 255       | 2       | s           |
| Gas Gauging | IT Cfg            | 0x45CC  | Term Voltage Delta             | I2   | 0         | 32767     | 200     | mV          |
| Gas Gauging | IT Cfg            | 0x45D7  | Max Simulation Iterations      | U1   | 20        | 50        | 50      | —           |
| Gas Gauging | IT Cfg            | 0x45D8  | Simulation Near Term Delta     | I2   | 0         | 32767     | 250     | mV          |
| Gas Gauging | IT Cfg            | 0x45EA  | Fast Scale Start SOC           | U1   | 0         | 100       | 10      | %           |
| Gas Gauging | IT Cfg            | 0x45F3  | Min Delta Voltage              | I2   | -32768    | 32767     | 0       | mV          |
| Gas Gauging | IT Cfg            | 0x466E  | Load Select                    | U1   | 0         | 7         | 1       | —           |
| Gas Gauging | IT Cfg            | 0x466F  | Load Mode                      | U1   | 0         | 1         | 1       | —           |
| Gas Gauging | IT Cfg            | 0x4670  | User Rate-mA                   | I2   | -9000     | 0         | 0       | mA          |
| Gas Gauging | IT Cfg            | 0x4672  | User Rate-cW                   | I2   | -32768    | 0         | 0       | cW          |
| Gas Gauging | IT Cfg            | 0x4674  | Reserve Cap-mAh                | I2   | 0         | 9000      | 0       | mAh         |
| Gas Gauging | IT Cfg            | 0x4676  | Reserve Cap-cWh                | I2   | 0         | 32000     | 0       | cWh         |
| Gas Gauging | IT Cfg            | 0x467F  | Predict Ambient Time           | U2   | 0         | 65535     | 2000    | s           |
| Gas Gauging | Smoothing         | 0x4678  | Smooth Relax Time              | U2   | 1         | 32767     | 1000    | s           |
| Gas Gauging | Smoothing         | 0x467A  | Term Smooth Start Cell V Delta | I2   | 0         | 32767     | 150     | mV          |
| Gas Gauging | Smoothing         | 0x467C  | Term Smooth Final Cell V Delta | I2   | 0         | 32767     | 100     | mV          |
| Gas Gauging | Smoothing         | 0x467E  | Term Smooth Time               | U1   | 1         | 32767     | 20      | s           |
| Gas Gauging | SoH               | 0x45F7  | SoH Load Rate                  | U1   | 0         | 255       | 50      | 0.1 Hr rate |
| Power       | Power             | 0x4623  | Valid Update Voltage           | I2   | 0         | 32767     | 2100    | mV          |
| Power       | Shutdown          | 0x4625  | Shutdown Voltage               | I2   | 0         | 32767     | 2150    | mV          |
| Power       | Shutdown          | 0x4627  | Shutdown Time                  | U1   | 0         | 255       | 10      | s           |
| Power       | Shutdown          | 0x4628  | PF Shutdown Voltage            | I2   | 0         | 32767     | 1750    | mV          |
| Power       | Shutdown          | 0x462A  | PF Shutdown Time               | U1   | 0         | 255       | 10      | s           |
| Power       | Shutdown          | 0x462B  | Charger Present Threshold      | I2   | 0         | 32767     | 100     | mV          |
| Power       | Sleep             | 0x462D  | Sleep Current                  | I2   | 0         | 32767     | 15      | mA          |
| Power       | Sleep             | 0x462F  | Voltage Time                   | U1   | 1         | 20        | 5       | s           |
| Power       | Ship              | 0x4630  | FET Off Time                   | U1   | 0         | 127       | 10      | s           |
| Power       | Ship              | 0x4631  | Delay                          | U1   | 0         | 254       | 20      | s           |
| Power       | Ship              | 0x4641  | Auto Ship Time                 | U2   | 0         | 65535     | 4320    | min         |
| Power       | Shipmode          | 0x4632  | Shipmode Voltage Threshold     | I2   | 0         | 32767     | 2300    | mV          |
| Power       | Shipmode          | 0x4634  | Shipmode Voltage Delay         | U1   | 0         | 255       | 10      | s           |
| Power       | Shipmode          | 0x4635  | Shipmode Command Delay         | U1   | 0         | 255       | 0       | s           |
| Power       | Shipmode          | 0x4636  | Shipmode Measure Time          | U1   | 1         | 30        | 30      | s           |
| Power       | Shelf             | 0x4637  | Shelf Voltage Threshold        | I2   | 0         | 32767     | 2200    | mV          |
| Power       | Shelf             | 0x4639  | Shelf Voltage Delay            | U1   | 0         | 255       | 10      | s           |
| Power       | Shelf             | 0x463A  | Shelf Command Delay            | U1   | 0         | 255       | 10      | s           |
| Power       | Shelf             | 0x463B  | Shelf Measure Time             | U1   | 1         | 30        | 30      | s           |
| Power       | Shelf             | 0x463C  | Shelf Exit Holdoff             | U1   | 1         | 255       | 10      | s           |
| Power       | SysReset          | 0x463D  | Dsg FET Off Time               | U1   | 0         | 30        | 0       | s           |
| Power       | ENAB              | 0x4643  | Startup ENAB Hold Time         | U1   | 0         | 100       | 0       | s           |
| Power       | ENAB              | 0x4644  | Shelf ENAB Hold Time           | U1   | 0         | 100       | 0       | s           |
| System Data | Manufacturer Data | 0x4041  | Manufacturer Info Block A01    | H1   | 0x0       | 0xFF      | 0x61    | Hex         |
| System Data | Manufacturer Data | 0x4042  | Manufacturer Info Block A02    | H1   | 0x0       | 0xFF      | 0x62    | Hex         |
| System Data | Manufacturer Data | 0x4043  | Manufacturer Info Block A03    | H1   | 0x0       | 0xFF      | 0x63    | Hex         |
| System Data | Manufacturer Data | 0x4044  | Manufacturer Info Block A04    | H1   | 0x0       | 0xFF      | 0x64    | Hex         |
| System Data | Manufacturer Data | 0x4045  | Manufacturer Info Block A05    | H1   | 0x0       | 0xFF      | 0x65    | Hex         |

**Table 18-1. Data Flash Table (continued)**

| Class       | Subclass            | Address | Name                        | Type | Min Value | Max Value | Default | Units |
|-------------|---------------------|---------|-----------------------------|------|-----------|-----------|---------|-------|
| System Data | Manufacturer Data   | 0x4046  | Manufacturer Info Block A06 | H1   | 0x0       | 0xFF      | 0x66    | Hex   |
| System Data | Manufacturer Data   | 0x4047  | Manufacturer Info Block A07 | H1   | 0x0       | 0xFF      | 0x67    | Hex   |
| System Data | Manufacturer Data   | 0x4048  | Manufacturer Info Block A08 | H1   | 0x0       | 0xFF      | 0x68    | Hex   |
| System Data | Manufacturer Data   | 0x4049  | Manufacturer Info Block A09 | H1   | 0x0       | 0xFF      | 0x69    | Hex   |
| System Data | Manufacturer Data   | 0x404A  | Manufacturer Info Block A10 | H1   | 0x0       | 0xFF      | 0x6A    | Hex   |
| System Data | Manufacturer Data   | 0x404B  | Manufacturer Info Block A11 | H1   | 0x0       | 0xFF      | 0x6B    | Hex   |
| System Data | Manufacturer Data   | 0x404C  | Manufacturer Info Block A12 | H1   | 0x0       | 0xFF      | 0x6C    | Hex   |
| System Data | Manufacturer Data   | 0x404D  | Manufacturer Info Block A13 | H1   | 0x0       | 0xFF      | 0x6D    | Hex   |
| System Data | Manufacturer Data   | 0x404E  | Manufacturer Info Block A14 | H1   | 0x0       | 0xFF      | 0x6E    | Hex   |
| System Data | Manufacturer Data   | 0x404F  | Manufacturer Info Block A15 | H1   | 0x0       | 0xFF      | 0x6F    | Hex   |
| System Data | Manufacturer Data   | 0x4050  | Manufacturer Info Block A16 | H1   | 0x0       | 0xFF      | 0x70    | Hex   |
| System Data | Manufacturer Data   | 0x4051  | Manufacturer Info Block A17 | H1   | 0x0       | 0xFF      | 0x71    | Hex   |
| System Data | Manufacturer Data   | 0x4052  | Manufacturer Info Block A18 | H1   | 0x0       | 0xFF      | 0x72    | Hex   |
| System Data | Manufacturer Data   | 0x4053  | Manufacturer Info Block A19 | H1   | 0x0       | 0xFF      | 0x73    | Hex   |
| System Data | Manufacturer Data   | 0x4054  | Manufacturer Info Block A20 | H1   | 0x0       | 0xFF      | 0x74    | Hex   |
| System Data | Manufacturer Data   | 0x4055  | Manufacturer Info Block A21 | H1   | 0x0       | 0xFF      | 0x75    | Hex   |
| System Data | Manufacturer Data   | 0x4056  | Manufacturer Info Block A22 | H1   | 0x0       | 0xFF      | 0x76    | Hex   |
| System Data | Manufacturer Data   | 0x4057  | Manufacturer Info Block A23 | H1   | 0x0       | 0xFF      | 0x77    | Hex   |
| System Data | Manufacturer Data   | 0x4058  | Manufacturer Info Block A24 | H1   | 0x0       | 0xFF      | 0x7A    | Hex   |
| System Data | Manufacturer Data   | 0x4059  | Manufacturer Info Block A25 | H1   | 0x0       | 0xFF      | 0x78    | Hex   |
| System Data | Manufacturer Data   | 0x405A  | Manufacturer Info Block A26 | H1   | 0x0       | 0xFF      | 0x79    | Hex   |
| System Data | Manufacturer Data   | 0x405B  | Manufacturer Info Block A27 | H1   | 0x0       | 0xFF      | 0x30    | Hex   |
| System Data | Manufacturer Data   | 0x405C  | Manufacturer Info Block A28 | H1   | 0x0       | 0xFF      | 0x31    | Hex   |
| System Data | Manufacturer Data   | 0x405D  | Manufacturer Info Block A29 | H1   | 0x0       | 0xFF      | 0x32    | Hex   |
| System Data | Manufacturer Data   | 0x405E  | Manufacturer Info Block A30 | H1   | 0x0       | 0xFF      | 0x33    | Hex   |
| System Data | Manufacturer Data   | 0x405F  | Manufacturer Info Block A31 | H1   | 0x0       | 0xFF      | 0x34    | Hex   |
| System Data | Manufacturer Data   | 0x4060  | Manufacturer Info Block A32 | H1   | 0x0       | 0xFF      | 0x35    | Hex   |
| System Data | Manufacturer Info B | 0x4062  | Manufacturer Info Block B01 | H1   | 0x0       | 0xFF      | 0x61    | Hex   |
| System Data | Manufacturer Info B | 0x4063  | Manufacturer Info Block B02 | H1   | 0x0       | 0xFF      | 0x62    | Hex   |
| System Data | Manufacturer Info B | 0x4064  | Manufacturer Info Block B03 | H1   | 0x0       | 0xFF      | 0x63    | Hex   |
| System Data | Manufacturer Info B | 0x4065  | Manufacturer Info Block B04 | H1   | 0x0       | 0xFF      | 0x64    | Hex   |
| System Data | Manufacturer Info B | 0x4066  | Manufacturer Info Block B05 | H1   | 0x0       | 0xFF      | 0x65    | Hex   |
| System Data | Manufacturer Info B | 0x4067  | Manufacturer Info Block B06 | H1   | 0x0       | 0xFF      | 0x66    | Hex   |
| System Data | Manufacturer Info B | 0x4068  | Manufacturer Info Block B07 | H1   | 0x0       | 0xFF      | 0x67    | Hex   |
| System Data | Manufacturer Info B | 0x4069  | Manufacturer Info Block B08 | H1   | 0x0       | 0xFF      | 0x68    | Hex   |
| System Data | Manufacturer Info B | 0x406A  | Manufacturer Info Block B09 | H1   | 0x0       | 0xFF      | 0x69    | Hex   |
| System Data | Manufacturer Info B | 0x406B  | Manufacturer Info Block B10 | H1   | 0x0       | 0xFF      | 0x6A    | Hex   |
| System Data | Manufacturer Info B | 0x406C  | Manufacturer Info Block B11 | H1   | 0x0       | 0xFF      | 0x6B    | Hex   |
| System Data | Manufacturer Info B | 0x406D  | Manufacturer Info Block B12 | H1   | 0x0       | 0xFF      | 0x6C    | Hex   |
| System Data | Manufacturer Info B | 0x406E  | Manufacturer Info Block B13 | H1   | 0x0       | 0xFF      | 0x6D    | Hex   |
| System Data | Manufacturer Info B | 0x406F  | Manufacturer Info Block B14 | H1   | 0x0       | 0xFF      | 0x6E    | Hex   |
| System Data | Manufacturer Info B | 0x4070  | Manufacturer Info Block B15 | H1   | 0x0       | 0xFF      | 0x6F    | Hex   |
| System Data | Manufacturer Info B | 0x4071  | Manufacturer Info Block B16 | H1   | 0x0       | 0xFF      | 0x70    | Hex   |
| System Data | Manufacturer Info B | 0x4072  | Manufacturer Info Block B17 | H1   | 0x0       | 0xFF      | 0x71    | Hex   |
| System Data | Manufacturer Info B | 0x4073  | Manufacturer Info Block B18 | H1   | 0x0       | 0xFF      | 0x72    | Hex   |
| System Data | Manufacturer Info B | 0x4074  | Manufacturer Info Block B19 | H1   | 0x0       | 0xFF      | 0x73    | Hex   |
| System Data | Manufacturer Info B | 0x4075  | Manufacturer Info Block B20 | H1   | 0x0       | 0xFF      | 0x74    | Hex   |
| System Data | Manufacturer Info B | 0x4076  | Manufacturer Info Block B21 | H1   | 0x0       | 0xFF      | 0x75    | Hex   |
| System Data | Manufacturer Info B | 0x4077  | Manufacturer Info Block B22 | H1   | 0x0       | 0xFF      | 0x76    | Hex   |

**Table 18-1. Data Flash Table (continued)**

| Class             | Subclass            | Address | Name                        | Type | Min Value | Max Value | Default           | Units |
|-------------------|---------------------|---------|-----------------------------|------|-----------|-----------|-------------------|-------|
| System Data       | Manufacturer Info B | 0x4078  | Manufacturer Info Block B23 | H1   | 0x0       | 0xFF      | 0x77              | Hex   |
| System Data       | Manufacturer Info B | 0x4079  | Manufacturer Info Block B24 | H1   | 0x0       | 0xFF      | 0x7A              | Hex   |
| System Data       | Manufacturer Info B | 0x407A  | Manufacturer Info Block B25 | H1   | 0x0       | 0xFF      | 0x78              | Hex   |
| System Data       | Manufacturer Info B | 0x407B  | Manufacturer Info Block B26 | H1   | 0x0       | 0xFF      | 0x79              | Hex   |
| System Data       | Manufacturer Info B | 0x407C  | Manufacturer Info Block B27 | H1   | 0x0       | 0xFF      | 0x30              | Hex   |
| System Data       | Manufacturer Info B | 0x407D  | Manufacturer Info Block B28 | H1   | 0x0       | 0xFF      | 0x31              | Hex   |
| System Data       | Manufacturer Info B | 0x407E  | Manufacturer Info Block B29 | H1   | 0x0       | 0xFF      | 0x32              | Hex   |
| System Data       | Manufacturer Info B | 0x407F  | Manufacturer Info Block B30 | H1   | 0x0       | 0xFF      | 0x33              | Hex   |
| System Data       | Manufacturer Info B | 0x4080  | Manufacturer Info Block B31 | H1   | 0x0       | 0xFF      | 0x34              | Hex   |
| System Data       | Manufacturer Info B | 0x4081  | Manufacturer Info Block B32 | H1   | 0x0       | 0xFF      | 0x35              | Hex   |
| System Data       | Manufacturer Info C | 0x4083  | Manufacturer Info Block C01 | H1   | 0x0       | 0xFF      | 0x61              | Hex   |
| System Data       | Manufacturer Info C | 0x4084  | Manufacturer Info Block C02 | H1   | 0x0       | 0xFF      | 0x62              | Hex   |
| System Data       | Manufacturer Info C | 0x4085  | Manufacturer Info Block C03 | H1   | 0x0       | 0xFF      | 0x63              | Hex   |
| System Data       | Manufacturer Info C | 0x4086  | Manufacturer Info Block C04 | H1   | 0x0       | 0xFF      | 0x64              | Hex   |
| System Data       | Manufacturer Info C | 0x4087  | Manufacturer Info Block C05 | H1   | 0x0       | 0xFF      | 0x65              | Hex   |
| System Data       | Manufacturer Info C | 0x4088  | Manufacturer Info Block C06 | H1   | 0x0       | 0xFF      | 0x66              | Hex   |
| System Data       | Manufacturer Info C | 0x4089  | Manufacturer Info Block C07 | H1   | 0x0       | 0xFF      | 0x67              | Hex   |
| System Data       | Manufacturer Info C | 0x408A  | Manufacturer Info Block C08 | H1   | 0x0       | 0xFF      | 0x68              | Hex   |
| System Data       | Manufacturer Info C | 0x408B  | Manufacturer Info Block C09 | H1   | 0x0       | 0xFF      | 0x69              | Hex   |
| System Data       | Manufacturer Info C | 0x408C  | Manufacturer Info Block C10 | H1   | 0x0       | 0xFF      | 0x6A              | Hex   |
| System Data       | Manufacturer Info C | 0x408D  | Manufacturer Info Block C11 | H1   | 0x0       | 0xFF      | 0x6B              | Hex   |
| System Data       | Manufacturer Info C | 0x408E  | Manufacturer Info Block C12 | H1   | 0x0       | 0xFF      | 0x6C              | Hex   |
| System Data       | Manufacturer Info C | 0x408F  | Manufacturer Info Block C13 | H1   | 0x0       | 0xFF      | 0x6D              | Hex   |
| System Data       | Manufacturer Info C | 0x4090  | Manufacturer Info Block C14 | H1   | 0x0       | 0xFF      | 0x6E              | Hex   |
| System Data       | Manufacturer Info C | 0x4091  | Manufacturer Info Block C15 | H1   | 0x0       | 0xFF      | 0x6F              | Hex   |
| System Data       | Manufacturer Info C | 0x4092  | Manufacturer Info Block C16 | H1   | 0x0       | 0xFF      | 0x70              | Hex   |
| System Data       | Manufacturer Info C | 0x4093  | Manufacturer Info Block C17 | H1   | 0x0       | 0xFF      | 0x71              | Hex   |
| System Data       | Manufacturer Info C | 0x4094  | Manufacturer Info Block C18 | H1   | 0x0       | 0xFF      | 0x72              | Hex   |
| System Data       | Manufacturer Info C | 0x4095  | Manufacturer Info Block C19 | H1   | 0x0       | 0xFF      | 0x73              | Hex   |
| System Data       | Manufacturer Info C | 0x4096  | Manufacturer Info Block C20 | H1   | 0x0       | 0xFF      | 0x74              | Hex   |
| System Data       | Manufacturer Info C | 0x4097  | Manufacturer Info Block C21 | H1   | 0x0       | 0xFF      | 0x75              | Hex   |
| System Data       | Manufacturer Info C | 0x4098  | Manufacturer Info Block C22 | H1   | 0x0       | 0xFF      | 0x76              | Hex   |
| System Data       | Manufacturer Info C | 0x4099  | Manufacturer Info Block C23 | H1   | 0x0       | 0xFF      | 0x77              | Hex   |
| System Data       | Manufacturer Info C | 0x409A  | Manufacturer Info Block C24 | H1   | 0x0       | 0xFF      | 0x7A              | Hex   |
| System Data       | Manufacturer Info C | 0x409B  | Manufacturer Info Block C25 | H1   | 0x0       | 0xFF      | 0x78              | Hex   |
| System Data       | Manufacturer Info C | 0x409C  | Manufacturer Info Block C26 | H1   | 0x0       | 0xFF      | 0x79              | Hex   |
| System Data       | Manufacturer Info C | 0x409D  | Manufacturer Info Block C27 | H1   | 0x0       | 0xFF      | 0x30              | Hex   |
| System Data       | Manufacturer Info C | 0x409E  | Manufacturer Info Block C28 | H1   | 0x0       | 0xFF      | 0x31              | Hex   |
| System Data       | Manufacturer Info C | 0x409F  | Manufacturer Info Block C29 | H1   | 0x0       | 0xFF      | 0x32              | Hex   |
| System Data       | Manufacturer Info C | 0x40A0  | Manufacturer Info Block C30 | H1   | 0x0       | 0xFF      | 0x33              | Hex   |
| System Data       | Manufacturer Info C | 0x40A1  | Manufacturer Info Block C31 | H1   | 0x0       | 0xFF      | 0x34              | Hex   |
| System Data       | Manufacturer Info C | 0x40A2  | Manufacturer Info Block C32 | H1   | 0x0       | 0xFF      | 0x35              | Hex   |
| System Data       | Integrity           | 0x40A3  | Static DF Signature         | H2   | 0x0       | 0x7FFF    | 0x0               | Hex   |
| System Data       | Integrity           | 0x40A5  | Static Chem DF Signature    | H2   | 0x0       | 0x7FFF    | 0x3A4C            | Hex   |
| System Data       | Integrity           | 0x40A7  | All DF Signature            | H2   | 0x0       | 0x7FFF    | 0x0               | Hex   |
| I2C Configuration | Data                | 0x40A9  | Manufacture Date            | U2   | 0         | 65535     | 0                 | date  |
| I2C Configuration | Data                | 0x40AB  | Serial Number               | H2   | 0x0       | 0xFFFF    | 0x0001            | Hex   |
| I2C Configuration | Data                | 0x40AD  | Manufacturer Name           | S21  | x         | x         | Texas Instruments | —     |
| I2C Configuration | Data                | 0x40C2  | Device Name                 | S21  | x         | x         | bq27z758          | —     |

**Table 18-1. Data Flash Table (continued)**

| Class             | Subclass        | Address | Name                   | Type | Min Value | Max Value | Default | Units  |
|-------------------|-----------------|---------|------------------------|------|-----------|-----------|---------|--------|
| I2C Configuration | Data            | 0x40D7  | Device Chemistry       | S5   | x         | x         | LION    | —      |
| Lifetimes         | Voltage         | 0x4202  | Cell 1 Max Voltage     | I2   | 0         | 32767     | 0       | mV     |
| Lifetimes         | Voltage         | 0x4204  | Cell 1 Min Voltage     | I2   | 0         | 32767     | 32767   | mV     |
| Lifetimes         | Current         | 0x4206  | Max Charge Current     | I2   | 0         | 32767     | 0       | mA     |
| Lifetimes         | Current         | 0x4208  | Max Discharge Current  | I2   | -32768    | 0         | 0       | mA     |
| Lifetimes         | Current         | 0x420A  | Max Avg Dsg Current    | I2   | -32768    | 0         | 0       | mA     |
| Lifetimes         | Current         | 0x420C  | Max Avg Dsg Power      | I2   | -32768    | 0         | 0       | cW     |
| Lifetimes         | Temperature     | 0x420E  | Max Temp Cell          | I1   | -128      | 127       | -128    | °C     |
| Lifetimes         | Temperature     | 0x420F  | Min Temp Cell          | I1   | -128      | 127       | 127     | °C     |
| Lifetimes         | Temperature     | 0x4210  | Max Temp Int Sensor    | I1   | -128      | 127       | -128    | °C     |
| Lifetimes         | Temperature     | 0x4211  | Min Temp Int Sensor    | I1   | -128      | 127       | 127     | °C     |
| Lifetimes         | Safety Events   | 0x4212  | No Of COV Events       | U2   | 0         | 32767     | 0       | events |
| Lifetimes         | Safety Events   | 0x4214  | Last COV Event         | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes         | Safety Events   | 0x4216  | No Of CUV Events       | U2   | 0         | 32767     | 0       | events |
| Lifetimes         | Safety Events   | 0x4218  | Last CUV Event         | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes         | Safety Events   | 0x421A  | No Of OCD Events       | U2   | 0         | 32767     | 0       | events |
| Lifetimes         | Safety Events   | 0x421C  | Last OCD Event         | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes         | Safety Events   | 0x421E  | No Of OCC Events       | U2   | 0         | 32767     | 0       | events |
| Lifetimes         | Safety Events   | 0x4220  | Last OCC Event         | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes         | Safety Events   | 0x4222  | No Of UTC Events       | U2   | 0         | 32767     | 0       | events |
| Lifetimes         | Safety Events   | 0x4224  | Last UTC Event         | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes         | Safety Events   | 0x4226  | No Of HSCD Events      | U2   | 0         | 32767     | 0       | events |
| Lifetimes         | Safety Events   | 0x4228  | Last HSCD Event        | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes         | Safety Events   | 0x422A  | No Of UTD Events       | U2   | 0         | 32767     | 0       | events |
| Lifetimes         | Safety Events   | 0x422C  | Last UTD Event         | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes         | Safety Events   | 0x422E  | No Of OTC Events       | U2   | 0         | 32767     | 0       | events |
| Lifetimes         | Safety Events   | 0x4230  | Last OTC Event         | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes         | Safety Events   | 0x4232  | No Of OTD Events       | U2   | 0         | 32767     | 0       | events |
| Lifetimes         | Safety Events   | 0x4234  | Last OTD Event         | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes         | Safety Events   | 0x4236  | No Of OTF Events       | U2   | 0         | 32767     | 0       | events |
| Lifetimes         | Safety Events   | 0x4238  | Last OTF Event         | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes         | Safety Events   | 0x424A  | No Of PTO Events       | U2   | 0         | 32767     | 0       | events |
| Lifetimes         | Safety Events   | 0x424C  | Last PTO Event         | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes         | Safety Events   | 0x424E  | No Of CTO Events       | U2   | 0         | 32767     | 0       | events |
| Lifetimes         | Safety Events   | 0x4250  | Last CTO Event         | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes         | Safety Events   | 0x425A  | No Of HCOV Events      | U2   | 0         | 32767     | 0       | events |
| Lifetimes         | Safety Events   | 0x425C  | Last HCOV Event        | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes         | Safety Events   | 0x425E  | No Of HCUV Events      | U2   | 0         | 32767     | 0       | events |
| Lifetimes         | Safety Events   | 0x4260  | Last HCUV Event        | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes         | Safety Events   | 0x4262  | No Of HOCC Events      | U2   | 0         | 32767     | 0       | events |
| Lifetimes         | Safety Events   | 0x4264  | Last HOCC Event        | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes         | Safety Events   | 0x4266  | No Of HOCD Events      | U2   | 0         | 32767     | 0       | events |
| Lifetimes         | Safety Events   | 0x4268  | Last HOCD Event        | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes         | Charging Events | 0x423A  | No Valid Charge Term   | U2   | 0         | 32767     | 0       | events |
| Lifetimes         | Charging Events | 0x423C  | Last Valid Charge Term | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes         | Gauging Events  | 0x423E  | No Of Qmax Updates     | U2   | 0         | 32767     | 0       | events |
| Lifetimes         | Gauging Events  | 0x4240  | Last Qmax Update       | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes         | Gauging Events  | 0x4242  | No Of Ra Updates       | U2   | 0         | 32767     | 0       | events |
| Lifetimes         | Gauging Events  | 0x4244  | Last Ra Update         | U2   | 0         | 32767     | 0       | cycles |

**Table 18-1. Data Flash Table (continued)**

| Class     | Subclass           | Address | Name                     | Type | Min Value | Max Value      | Default | Units  |
|-----------|--------------------|---------|--------------------------|------|-----------|----------------|---------|--------|
| Lifetimes | Gauging Events     | 0x4246  | No Of Ra Disable         | U2   | 0         | 32767          | 0       | events |
| Lifetimes | Gauging Events     | 0x4248  | Last Ra Disable          | U2   | 0         | 32767          | 0       | cycles |
| Lifetimes | Discharging Events | 0x4256  | No Full Discharge        | U2   | 0         | 32767          | 0       | events |
| Lifetimes | Discharging Events | 0x4258  | Last Full Discharge      | U2   | 0         | 32767          | 0       | cycles |
| Lifetimes | Power Events       | 0x426A  | No Of Shutdowns          | U1   | 0         | 255            | 0       | events |
| Lifetimes | Time               | 0x426E  | Total Fw Runtime         | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x4272  | Total Charge Time        | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x4276  | Total Discharge Time     | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x427A  | Time Spent In UT RSOC A  | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x427E  | Time Spent In UT RSOC B  | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x4282  | Time Spent In UT RSOC C  | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x4286  | Time Spent In UT RSOC D  | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x428A  | Time Spent In UT RSOC E  | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x428E  | Time Spent In UT RSOC F  | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x4292  | Time Spent In UT RSOC G  | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x4296  | Time Spent In UT RSOC H  | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x429A  | Time Spent In LT RSOC A  | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x429E  | Time Spent In LT RSOC B  | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x42A2  | Time Spent In LT RSOC C  | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x42A6  | Time Spent In LT RSOC D  | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x42AA  | Time Spent In LT RSOC E  | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x42AE  | Time Spent In LT RSOC F  | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x42B2  | Time Spent In LT RSOC G  | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x42B6  | Time Spent In LT RSOC H  | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x42BA  | Time Spent In STL RSOC A | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x42BE  | Time Spent In STL RSOC B | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x42C2  | Time Spent In STL RSOC C | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x42C6  | Time Spent In STL RSOC D | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x42CA  | Time Spent In STL RSOC E | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x42CE  | Time Spent In STL RSOC F | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x42D2  | Time Spent In STL RSOC G | U4   | 0         | 429496729<br>5 | 0       | s      |
| Lifetimes | Time               | 0x42D6  | Time Spent In STL RSOC H | U4   | 0         | 429496729<br>5 | 0       | s      |

**Table 18-1. Data Flash Table (continued)**

| Class     | Subclass | Address | Name                     | Type | Min Value | Max Value      | Default | Units |
|-----------|----------|---------|--------------------------|------|-----------|----------------|---------|-------|
| Lifetimes | Time     | 0x42DA  | Time Spent In RT RSOC A  | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x42DE  | Time Spent In RT RSOC B  | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x42E2  | Time Spent In RT RSOC C  | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x42E6  | Time Spent In RT RSOC D  | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x42EA  | Time Spent In RT RSOC E  | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x42EE  | Time Spent In RT RSOC F  | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x42F2  | Time Spent In RT RSOC G  | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x42F6  | Time Spent In RT RSOC H  | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x42FA  | Time Spent In STH RSOC A | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x42FE  | Time Spent In STH RSOC B | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x4302  | Time Spent In STH RSOC C | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x4306  | Time Spent In STH RSOC D | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x430A  | Time Spent In STH RSOC E | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x430E  | Time Spent In STH RSOC F | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x4312  | Time Spent In STH RSOC G | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x4316  | Time Spent In STH RSOC H | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x431A  | Time Spent In HT RSOC A  | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x431E  | Time Spent In HT RSOC B  | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x4322  | Time Spent In HT RSOC C  | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x4326  | Time Spent In HT RSOC D  | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x432A  | Time Spent In HT RSOC E  | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x432E  | Time Spent In HT RSOC F  | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x4332  | Time Spent In HT RSOC G  | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x4336  | Time Spent In HT RSOC H  | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x433A  | Time Spent In OT RSOC A  | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x433E  | Time Spent In OT RSOC B  | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x4342  | Time Spent In OT RSOC C  | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x4346  | Time Spent In OT RSOC D  | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x434A  | Time Spent In OT RSOC E  | U4   | 0         | 429496729<br>5 | 0       | s     |
| Lifetimes | Time     | 0x434E  | Time Spent In OT RSOC F  | U4   | 0         | 429496729<br>5 | 0       | s     |

**Table 18-1. Data Flash Table (continued)**

| Class     | Subclass | Address | Name                    | Type | Min Value | Max Value  | Default | Units              |
|-----------|----------|---------|-------------------------|------|-----------|------------|---------|--------------------|
| Lifetimes | Time     | 0x4352  | Time Spent In OT RSOC G | U4   | 0         | 4294967295 | 0       | s                  |
| Lifetimes | Time     | 0x4356  | Time Spent In OT RSOC H | U4   | 0         | 4294967295 | 0       | s                  |
| Ra Table  | R_a0     | 0x4100  | Cell0 R_a flag          | H2   | 0x0       | 0xFFFF     | 0xFF55  | —                  |
| Ra Table  | R_a0     | 0x4102  | Cell0 R_a 0             | I2   | 0         | 32767      | 159     | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0     | 0x4104  | Cell0 R_a 1             | I2   | 0         | 32767      | 58      | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0     | 0x4106  | Cell0 R_a 2             | I2   | 0         | 32767      | 65      | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0     | 0x4108  | Cell0 R_a 3             | I2   | 0         | 32767      | 79      | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0     | 0x410A  | Cell0 R_a 4             | I2   | 0         | 32767      | 90      | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0     | 0x410C  | Cell0 R_a 5             | I2   | 0         | 32767      | 63      | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0     | 0x410E  | Cell0 R_a 6             | I2   | 0         | 32767      | 76      | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0     | 0x4110  | Cell0 R_a 7             | I2   | 0         | 32767      | 82      | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0     | 0x4112  | Cell0 R_a 8             | I2   | 0         | 32767      | 82      | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0     | 0x4114  | Cell0 R_a 9             | I2   | 0         | 32767      | 87      | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0     | 0x4116  | Cell0 R_a 10            | I2   | 0         | 32767      | 87      | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0     | 0x4118  | Cell0 R_a 11            | I2   | 0         | 32767      | 101     | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0     | 0x411A  | Cell0 R_a 12            | I2   | 0         | 32767      | 118     | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0     | 0x411C  | Cell0 R_a 13            | I2   | 0         | 32767      | 191     | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0     | 0x411E  | Cell0 R_a 14            | I2   | 0         | 32767      | 282     | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0x    | 0x4140  | xCell0 R_a flag         | H2   | 0x0       | 0xFFFF     | 0xFFFF  | —                  |
| Ra Table  | R_a0x    | 0x4142  | xCell0 R_a 0            | I2   | 0         | 32767      | 159     | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0x    | 0x4144  | xCell0 R_a 1            | I2   | 0         | 32767      | 58      | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0x    | 0x4146  | xCell0 R_a 2            | I2   | 0         | 32767      | 65      | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0x    | 0x4148  | xCell0 R_a 3            | I2   | 0         | 32767      | 79      | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0x    | 0x414A  | xCell0 R_a 4            | I2   | 0         | 32767      | 90      | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0x    | 0x414C  | xCell0 R_a 5            | I2   | 0         | 32767      | 63      | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0x    | 0x414E  | xCell0 R_a 6            | I2   | 0         | 32767      | 76      | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0x    | 0x4150  | xCell0 R_a 7            | I2   | 0         | 32767      | 82      | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0x    | 0x4152  | xCell0 R_a 8            | I2   | 0         | 32767      | 82      | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0x    | 0x4154  | xCell0 R_a 9            | I2   | 0         | 32767      | 87      | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0x    | 0x4156  | xCell0 R_a 10           | I2   | 0         | 32767      | 87      | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0x    | 0x4158  | xCell0 R_a 11           | I2   | 0         | 32767      | 101     | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0x    | 0x415A  | xCell0 R_a 12           | I2   | 0         | 32767      | 118     | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0x    | 0x415C  | xCell0 R_a 13           | I2   | 0         | 32767      | 191     | 2 <sup>-10</sup> Ω |
| Ra Table  | R_a0x    | 0x415E  | xCell0 R_a 14           | I2   | 0         | 32767      | 282     | 2 <sup>-10</sup> Ω |

## Revision History

---



NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

| <b>Changes from March 6, 2026 to April 30, 2026 (from Revision B (March 2026) to Revision C (April 2026))</b> | <b>Page</b>        |
|---|--------------------|
| • Added Note to Zero Volt Charging (ZVCHG) section.....   | <a href="#">78</a> |

---

This page intentionally left blank.

## IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you fully indemnify TI and its representatives against any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to [TI's Terms of Sale](#), [TI's General Quality Guidelines](#), or other applicable terms available either on [ti.com](#) or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products. Unless TI explicitly designates a product as custom or customer-specified, TI products are standard, catalog, general purpose devices.

TI objects to and rejects any additional or different terms you may propose.

Copyright © 2026, Texas Instruments Incorporated

Last updated 10/2025