



CAUTION: READ USER GUIDE BEFORE USE. USER GUIDE BEFORE USE. USER GUIDE BEFORE USE.

DRV81315-Q1 EVM MD127E2

MSPM0

DRV81315-Q1

LED STATUS

3V3_STATUS	D1	R12
*MCU_STATUS	D2	R13
*STATUS_U8	D3	R14
*STATUS_U9	D4	R15
*STATUS_U10	D5	R16

GND

BUCK 3V3 SUPPLY

CSA 1

U5, R27, R28, R29, C24, U8, R30, R23, R36, C30, D7, D10, VM, TP11, TP14, TP15, J8, OUT_U8, OUT_U8

CSA 2

R26, R27, R28, R29, C25, U9, R31, R32, R24, R37, C31, D8, D11, VM, TP12, TP16, TP17, J9, OUT_U9, OUT_U9

CSA 3

C26, U7, C29, R33, R34, R35, R25, U10, R38, C32, D9, D12, VM, TP13, TP18, TP19, J10, OUT_U10, OUT_U10

10-PIN ARM CONNECTOR

U1, J1, J2, TP1, TP2, TP3, TP4, TP5, TP6, TP7, R1, R2, R3, R4, R5, C1, C2, C3, C4

PA24, PA17, PA11, PA1, J3

DEV_ID1, DEV_ID2, DEV_ID3, R9, R6, R10, R7, R11, R8

6V TO 18V

TEXAS INSTRUMENTS

VM

GND

GND

VM

VM

For evaluation only; not FCC approved for resale.



