



Drive low = Corresponding phase enabled.
Drive high = Corresponding phase disabled.
If Phase 1 (Master) is disabled,
all other phases will also be disabled.

