
 
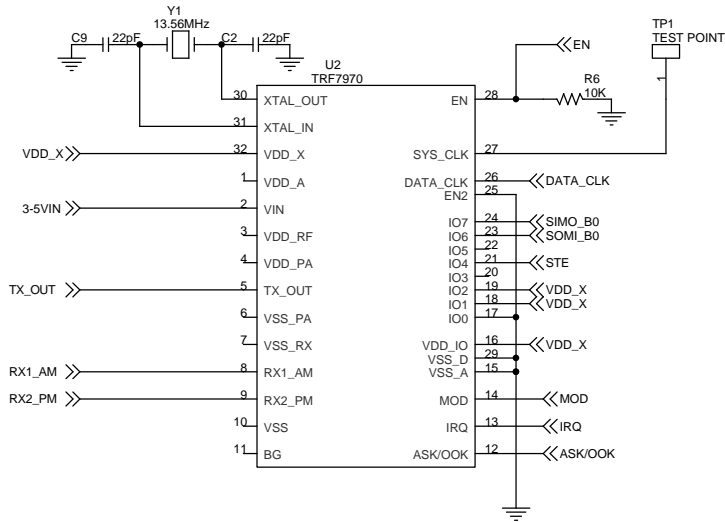




DLP-RFID2 v4.2 For BoosterPack

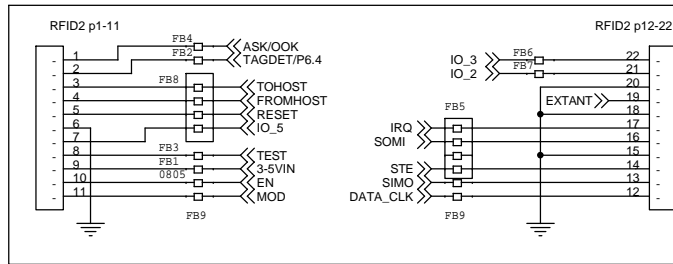

Port Pin P1.1:
High = RF1 = Internal Antenna
Low = RF2 = External Antenna

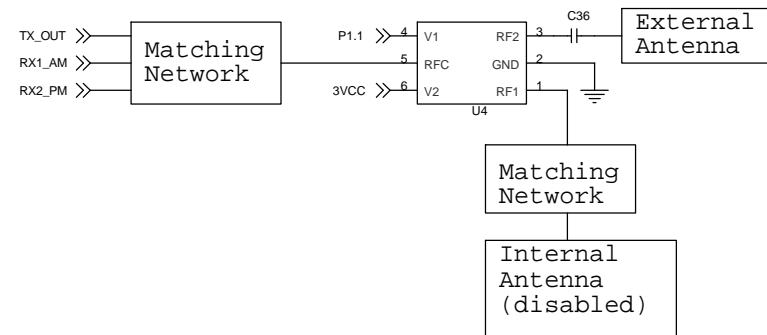

This micro is not installed for the DLP-7970ABP. The micro on the LaunchPad is used to operate the TRF7970A on the BoosterPack.

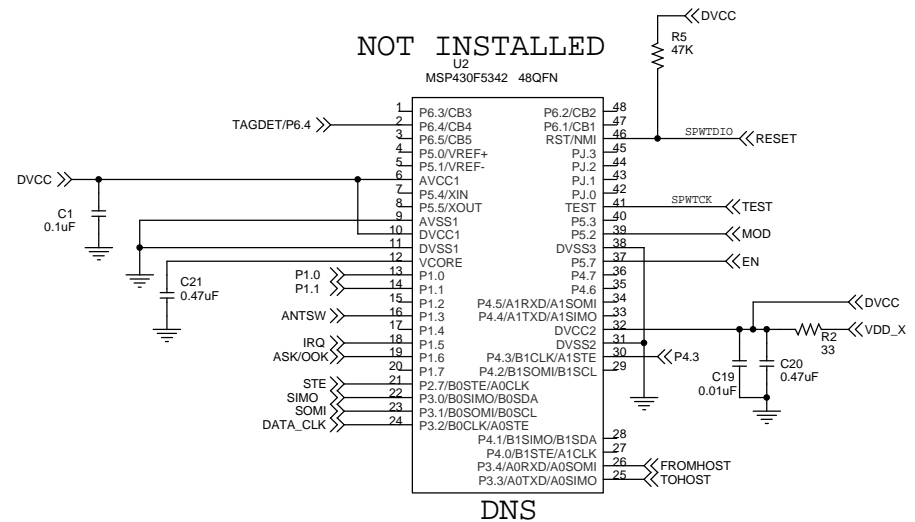

DNS