

Improving Resolution of SAR ADC

Sanjay Dixit, Leni Skariah, and Rahul Kulkarni

ABSTRACT

Real world parameters such as temperature, light intensity, and others are continuous in time and infinite in resolution. For digital processing, the analog signal must be converted to a digital code of fixed length, by process called ‘quantization’, at discrete time intervals, by a process called ‘sampling’. This quantization error sets the threshold beyond which the analog-to-digital converter (ADC) cannot distinguish or resolve the signal anymore. Hence, this is the noise level of an ideal ADC determined by the resolution of conversion.

Contents

1	Introduction	2
---	--------------------	---

List of Figures

1	Frequency Spectrum of ADC Oversampled K Times	2
2	Digital Filtering to Reduce the Noise After Oversampling	3
3	Stages Involved in Analog to Digital Conversion With Oversampling and Decimation	4

List of Tables

1	Comparison of Delta Sigma vs SAR ADC	4
2	Comparison of SAR ADC vs Delta Sigma ADC - Without Oversampling	4
3	Comparison of SAR ADC vs Delta Sigma ADC - For 100 KHz, With Oversampling and Decimation	5
4	Comparison of SAR ADC vs Delta Sigma - for 20 KHz, Sampling With Oversampling and Decimation	5
5	Using 2 MSPS ADS9110	6
6	Comparison of 2 MSPS SAR ADC With Delta Sigma ADC – for 20 KHz and 100 KHz With Oversampling and Decimation	6

Trademarks

All trademarks are the property of their respective owners.

1 Introduction

Let the least significant bit (LSB) be q , and resolution of the system be (N) . RMS value of the noise due to the quantization error is expressed by:

$$V_n = q / \sqrt{12}$$

Noise exists in a band from 0 to $fs/2$ where fs = sample rate. Assume a voltage swing of a sine wave with a peak to peak value of V .

$$V_{rms} = V / 2\sqrt{2}$$

$$\text{Also, } V = 2^N * q$$

$$V_{rms} = 2^N * q / 2\sqrt{2}$$

$$SNR = 20 \log (V_{rms} / V_n)$$

$$SNR = 20 \log (2^N * q * \sqrt{12} / 2\sqrt{2} * q)$$

$$SNR = 20 \log 2^N + 20 \log \sqrt{6} / 2$$

$$SNR = 6.02N + 1.76 \text{ dB}$$

This is the theoretical dynamic range, also known as SNR, achievable from a N -bit ADC.

ADCs are implemented in semiconductor process using passive and active elements depending on the conversion algorithm. These practical implementation blocks introduce other sources of noise such as thermal noise, flicker noise, and so forth. Hence, in a practical ADC the dynamic range is lesser than what is theoretically achievable.

A measure of the resolution of ADC with all the noise sources accounted for is effective-number-of-bits (ENOB).

Reworking,

$$(SNR_{\text{actual}} - 1.76) / 6.02 = N \text{ effective}$$

Where N is effective number of bits or ENOB supported by the ADC.

1.1 Relevance of Nyquist Sampling Theory

In a text-book ADC process, if the analog signal is sampled at frequency F_s , then all of the converted frequency components will be represented in the 0 to $F_s/2$ frequency domain.

This is a very relevant concept for noise in the system. Noise sources such as quantization noise and thermal noise are wide-band in nature that is they are present at all frequencies. In a sampled spectrum, the total energy of such wide-band noise sources remains constant, but gets evenly distributed over the 0 to $F_s/2$ frequency band. Hence, the dynamic range, or SNR, of the ADC is independent of the conversion speed. For example, ADS8920B (1-MHz ADC), ADS8922B (500-kHz ADC) and ADS8924B (250-kHz ADC) all have the same SNR performance of 96-dB.

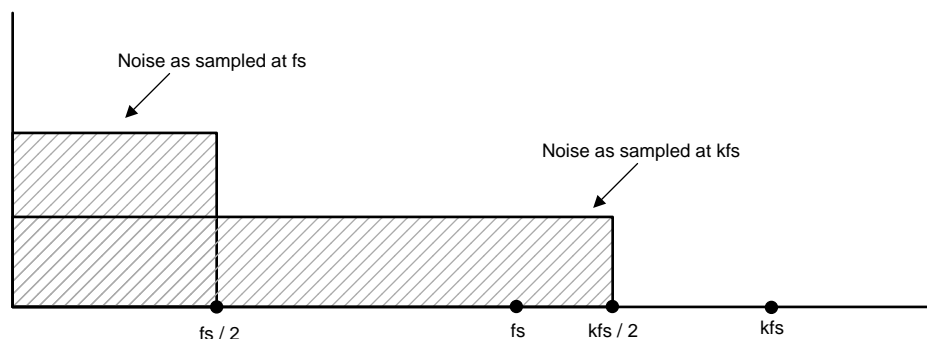


Figure 1. Frequency Spectrum of ADC Oversampled K Times

This shows whether the ADC is operated slower or faster, while keeping everything else same, the dynamic range will not be affected.

As the noise energy in the ADC remains the same with respect to conversion speed, a faster ADC would have lower noise density per frequency bin as compared to a lower speed counterpart. If the signal frequency of interest F_m is lesser than $F_s/2$, then the excess portion of frequency spectrum, that is, $F_m < F_{\text{excess}} < F_s/2$ can be filtered. The ADC noise energy in this filtered spectrum will be eliminated and this results in improved resolution in the 0 to F_m frequency range.

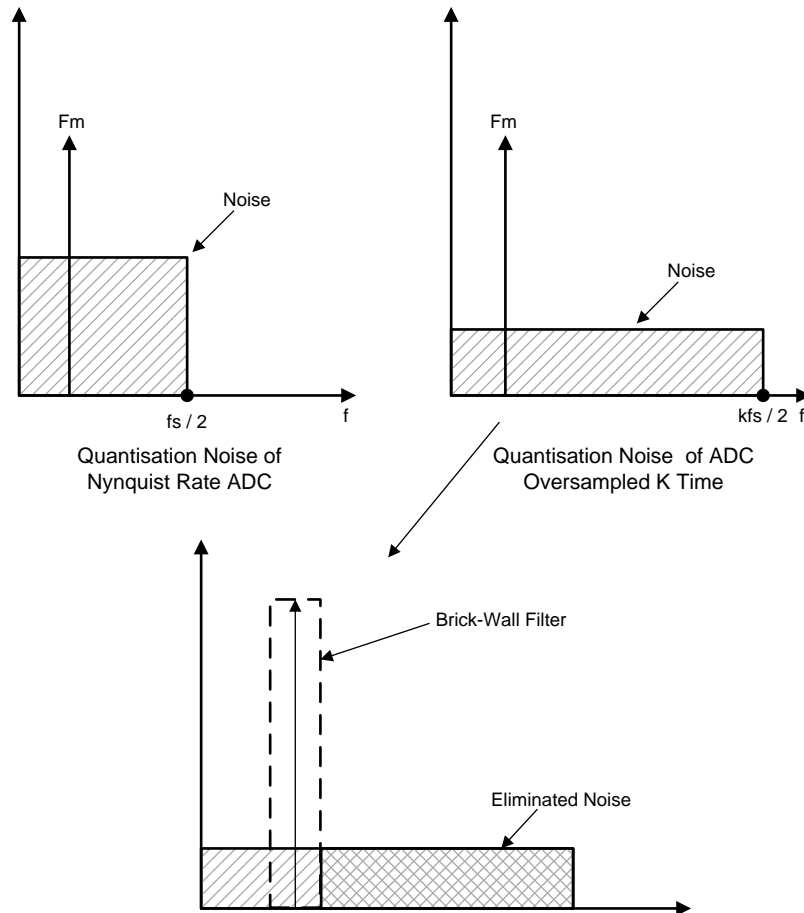


Figure 2. Digital Filtering to Reduce the Noise After Oversampling

Various digital filters can be implemented to attenuate the excess frequency spectrum with different combination of complexity and efficacy.

The over sampling ratio can be expressed as:

$$OSR = \frac{F_s}{2 \times F_m}$$

By Nyquist sampling theory, $F_s > 2 \times F_m$ which results in an $OSR = 1$. Improvement in resolution due to over sampling and filtering can be estimated as:

$$SNR = 6.02 N + 1.76 + 10 \log (OSR)$$

Using the above equation, it is also evident that $OSR = 4$ results in:

$$SNR = 6.02 N + 1.76 + 6.02$$

which is the same as:

$$SNR = 6.02 (N + 1) + 1.76$$

The results from the above equation show that OSR of 4 results in 1-bit of extra resolution.

It is important to note that the above information holds true if the digital filter used for chopping off the noise spectrum is ideal, that is, a brick-wall filter. Over sampling and filtering can help reduce uncorrelated noise sources that are random and wide band. It will not have any effect on noise sources that are correlated, deterministic and at specific frequency bands.

1.2 Oversampling and Decimation Improves Resolution

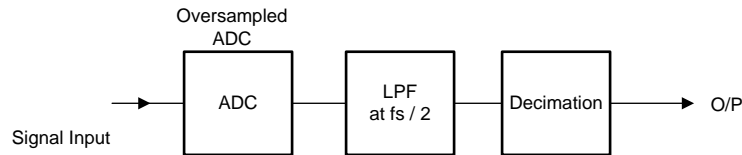


Figure 3. Stages Involved in Analog to Digital Conversion With Oversampling and Decimation

Decimation involves picking every k^{th} sample where $K = \text{OSR}$.

1.3 Comparison of Delta Sigma vs SAR ADC

Table 1. Comparison of Delta Sigma vs SAR ADC

DEVICE	ADS8900B – TI SAR ADC	ADS127L01- TI Delta Sigma
Type	SAR	Sigma Delta
F-Sample	1 MSPS	512 KSPS
N	20	24
SNR _{best}	104.5dB	105 dB at 512 KSPS

Case 1

Operating frequency of 100 KHz

$$f_s \geq 2f_m$$

$$f_s \geq 200 \text{ KHz}$$

1.3.1 ENOB Delta Sigma

$$N = (\text{SNR} - 1.76) / 6.02$$

$$N = (105 - 1.76) / 6.02$$

$$N = 17.2$$

1.3.2 ENOB SAR

$$N = (\text{SNR} - 1.76) / 6.02$$

$$N = (104.5 - 1.76) / 6.02$$

$$N = 17$$

Table 2. Comparison of SAR ADC vs Delta Sigma ADC - Without Oversampling

ADC Parameters	SAR	SIGMA DELTA
ENOB	17	17.2
BITS	20	24
SNR	104.5 dB	105 dB

The effective number of bits of both devices are close.

1.4 With Oversampling

1.4.1 Case 1: Operating Frequency of 100 KHz

$$f_s \geq 2f_m$$

$$f_s \geq 200 \text{ KHz}$$

$$\text{OSR} = f_{os}/2*f_m = 1 \text{ MHz} / 200 = 5, f_m = 100 \text{ KHz}$$

$$\text{SNR} = 6.02 N + 1.76 + 10 \log \text{OSR}$$

$$\text{With } N = 17$$

$$\text{SNR} = 6.02 \times 17 + 1.76 + 10 \log 5$$

$$\text{SNR} = 111.13$$

$$N = (\text{SNR} - 1.76) / 6.02 = (111.13 - 1.76) / 6.02$$

$$N = 18.1$$

Table 3. Comparison of SAR ADC vs Delta Sigma ADC - For 100 KHz, With Oversampling and Decimation

ADC Parameters	SAR	SIGMA DELTA
ENOB	18.1	17.2
BITS	20	24
SNR	111.13 dB	105 dB

1.4.2 Case 2: Operating Frequency of 20 KHz:

$$f_s \geq 2f_m$$

$$f_s \geq 40 \text{ KHz}$$

$$\text{OSR} = f_s/2f_m = 1 \text{ MHz} / 40 = 25, f_m = 20 \text{ KHz}$$

$$\text{SNR} = 6.02 N + 1.76 + 10 \log \text{OSR}$$

$$= 6.02 \times 17 + 1.76 + 10 \log 25$$

$$\text{SNR} = 118.07$$

$$N_{\text{eff}} = (\text{SNR} - 1.76)/6.02$$

$$= (118.07 - 1.76) / 6.02 = 19.03$$

1.4.2.1 Sigma Delta

$$N_{\text{eff}} = (\text{SNR} - 1.76)/6.02$$

$$= (105 - 1.76) / 6.02 = 17.2$$

Table 4. Comparison of SAR ADC vs Delta Sigma - for 20 KHz, Sampling With Oversampling and Decimation

ADC Parameters	SAR	SIGMA DELTA
ENOB	19.03	17.2
BITS	20	24
SNR	118.07 dB	105 dB

NOTE: OS is done inside the Delta Sigma converter.

1.4.3 Case 3: Using TI ADS9110
Table 5. Using 2 MSPS ADS9110

F_{samp}	2MSPS
N	18
SNR_{best}	100 dB

1.4.3.1 Operation at 100 KHz

$$\text{OSR} = 2 \text{ M} / 200 \text{ KHz} = 10$$

$$N_{\text{eff}} = \frac{(100 \text{ dB} - 1.76)}{6.02} = 16.3 \quad (1)$$

$$\text{SNR} = 6.02 \times 16.3 + 1.76 + 10 \log 10$$

$$\text{SNR} = 109.86$$

$$N = (\text{SNR} - 1.76) / 6.02 = 17.8$$

1.4.3.2 Operation at 20 KHz

$$\text{OSR} = 2 \text{ M} / 40 \text{ KHz} = 50$$

$$\text{SNR} = 6.02 \times 16.3 + 10 \log 50$$

$$6.02 \times 16.3 + 16.98$$

$$\text{SNR} = 115.06$$

$$N = (\text{SNR} - 1.76) / 6.02 = 18.8$$

Table 6. Comparison of 2 MSPS SAR ADC With Delta Sigma ADC – for 20 KHz and 100 KHz With Oversampling and Decimation

ADC Parameters	SIGMA DELTA	SAR @20 KHz	SAR @100 KHz
ENOB	17.2	18.8	17.8
BITS	24	18	18
SNR	105	115.06	109.86

IMPORTANT NOTICE FOR TI DESIGN INFORMATION AND RESOURCES

Texas Instruments Incorporated ("TI") technical, application or other design advice, services or information, including, but not limited to, reference designs and materials relating to evaluation modules, (collectively, "TI Resources") are intended to assist designers who are developing applications that incorporate TI products; by downloading, accessing or using any particular TI Resource in any way, you (individually or, if you are acting on behalf of a company, your company) agree to use it solely for this purpose and subject to the terms of this Notice.

TI's provision of TI Resources does not expand or otherwise alter TI's applicable published warranties or warranty disclaimers for TI products, and no additional obligations or liabilities arise from TI providing such TI Resources. TI reserves the right to make corrections, enhancements, improvements and other changes to its TI Resources.

You understand and agree that you remain responsible for using your independent analysis, evaluation and judgment in designing your applications and that you have full and exclusive responsibility to assure the safety of your applications and compliance of your applications (and of all TI products used in or for your applications) with all applicable regulations, laws and other applicable requirements. You represent that, with respect to your applications, you have all the necessary expertise to create and implement safeguards that (1) anticipate dangerous consequences of failures, (2) monitor failures and their consequences, and (3) lessen the likelihood of failures that might cause harm and take appropriate actions. You agree that prior to using or distributing any applications that include TI products, you will thoroughly test such applications and the functionality of such TI products as used in such applications. TI has not conducted any testing other than that specifically described in the published documentation for a particular TI Resource.

You are authorized to use, copy and modify any individual TI Resource only in connection with the development of applications that include the TI product(s) identified in such TI Resource. NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER TI INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT OF TI OR ANY THIRD PARTY IS GRANTED HEREIN, including but not limited to any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information regarding or referencing third-party products or services does not constitute a license to use such products or services, or a warranty or endorsement thereof. Use of TI Resources may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

TI RESOURCES ARE PROVIDED "AS IS" AND WITH ALL FAULTS. TI DISCLAIMS ALL OTHER WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, REGARDING TI RESOURCES OR USE THEREOF, INCLUDING BUT NOT LIMITED TO ACCURACY OR COMPLETENESS, TITLE, ANY EPIDEMIC FAILURE WARRANTY AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

TI SHALL NOT BE LIABLE FOR AND SHALL NOT DEFEND OR INDEMNIFY YOU AGAINST ANY CLAIM, INCLUDING BUT NOT LIMITED TO ANY INFRINGEMENT CLAIM THAT RELATES TO OR IS BASED ON ANY COMBINATION OF PRODUCTS EVEN IF DESCRIBED IN TI RESOURCES OR OTHERWISE. IN NO EVENT SHALL TI BE LIABLE FOR ANY ACTUAL, DIRECT, SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF TI RESOURCES OR USE THEREOF, AND REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

You agree to fully indemnify TI and its representatives against any damages, costs, losses, and/or liabilities arising out of your non-compliance with the terms and provisions of this Notice.

This Notice applies to TI Resources. Additional terms apply to the use and purchase of certain types of materials, TI products and services. These include; without limitation, TI's standard terms for semiconductor products (<http://www.ti.com/sc/docs/stdterms.htm>), [evaluation modules](#), and [samples](http://www.ti.com/sc/docs/sampterm.htm) (<http://www.ti.com/sc/docs/sampterm.htm>).

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2017, Texas Instruments Incorporated