

# Precision voltage references


By Perry Miller, Application Specialist—Data Converters, Texas Instruments, Dallas, and Doug Moore, Managing Director, Thaler Corp., Tucson, Arizona

## Introduction

One reason why designing a data conversion system is such a challenge is the fact that the system accuracy very much depends on the accuracy of the voltage established by the internal or external DC voltage reference. The voltage reference is used to produce a precise value of output voltage for setting the full-scale input of the data conversion system. In an analog-to-digital converter (ADC), the DC voltage reference together with the analog input signal is used to generate the digitized output signal. And in a digital-to-analog converter (DAC), the DAC selects and produces an analog output from the DC reference voltage according to the digital input signal presented at the input of the DAC. Any errors in the reference voltage over the operating temperature range will adversely affect the linearity and spurious free dynamic range (SFDR) of the ADC/DAC. Practically all voltage references vary with time or environmental factors such as humidity, pressure, and temperature. As a result most CMOS ADCs/DACs have internal references suitable only for applications demanding  $\leq 12$ -bit resolution even though the converter may be capable of higher resolution. Modern CMOS converters operate from 3.3-V or 5-V supplies, which limits the on-chip voltage reference to a band-gap reference. By way of the external reference pins provided on the chip, an external precision reference can also be connected to a CMOS ADC or DAC. A precision external voltage reference has a much lower temperature coefficient, thermal hysteresis, and long-term drift than an on-chip band-gap voltage reference; therefore, in applications demanding high accuracy (14-bit or 16-bit ADCs/DACs), an external precision voltage reference is often required.

Precision voltage references are available with varying degrees of precision and initial accuracy over some

Figure 1. Band-gap reference circuit

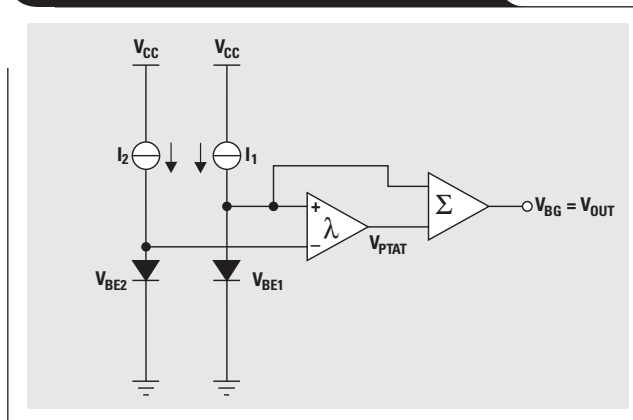

operating temperature range. But often what is not obvious when reading a manufacturer's data sheet is how the initial accuracy of the device is affected by other key device parameters such as line regulation, load regulation, initial voltage error, output voltage temperature coefficient (TC), output voltage noise, turn-on settling time, thermal hysteresis, quiescent supply current, and long-term stability.

## The design origins

Modern voltage references are constructed using the energy-band-gap voltage of integrated transistors, buried zener diodes, and junction field-effect transistors. Each technology offers inherent performance characteristics that can be enhanced with compensation networks or additional active circuitry. The basis topologies for the band-gap, buried zener, and XFET references are shown in Figures 1, 2, and 3, respectively.

Continued on next page

Figure 2. Buried zener reference circuit


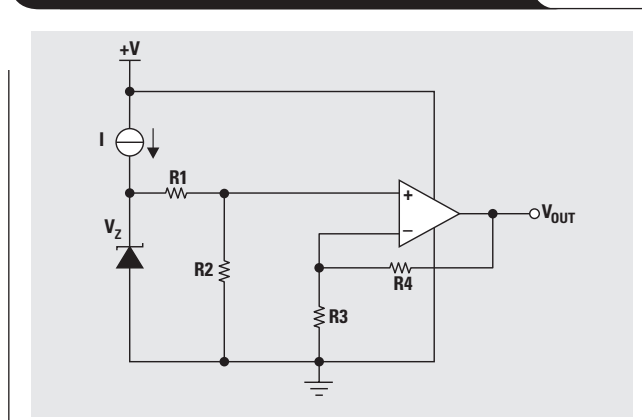


Figure 3. XFET reference circuit

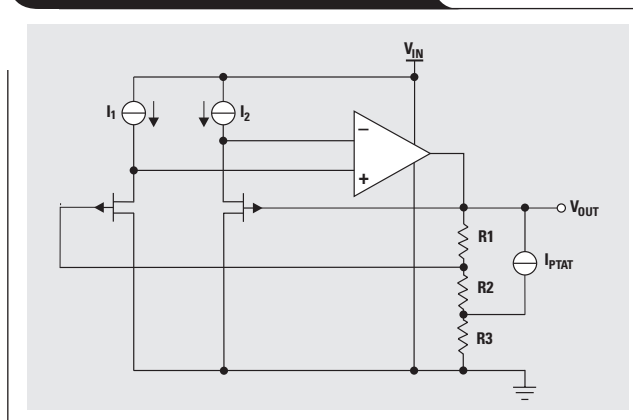

Continued from previous page

## Band-gap reference

At its simplest, a band-gap reference is simply two transistors with different emitter areas used for generating a voltage proportional to absolute temperature.  $V_{BE1}$  and  $V_{BE2}$  have opposite temperature coefficients. The voltage  $V_{CC}$  is converted to a current  $I_1$  and  $I_2$  that are mirrored to the output branch. The output equation is

$$V_O = V_{BE1} + \lambda(V_{BE1} - V_{BE2}), \quad (1)$$

where  $\lambda$  is the scale factor,  $V_{BE1}$  is the base-emitter voltage of the larger of the two transistors, and  $V_{BE2}$  is the base-emitter voltage of the second transistor.

The band-gap references are widely used in ADC/DAC converters as well as for external reference source because they are fairly inexpensive. Generally, they are used in system designs where a maximum accuracy of 10 bits is required. Band-gap references typically have an initial error of 0.5–1.0% and a TC of 25–50 ppm/°C. The output voltage noise is typically 15–30  $\mu V_{p-p}$  (0.1–10 Hz) with a long-term stability of 20–30 ppm/1000 hrs.

## Zener reference

The zener voltage reference and feedback amplifier shown in Figure 2 are used to provide a very stable output. A current source is used to bias a 6.3-V zener diode. The zener voltage is divided by the resistor network R1 and R2. This voltage is applied to the non-inverting input of the operational amplifier, which amplifies the voltage to the required output voltage. The amplifier gain is determined by the resistor networks R3 and R4, where  $G = 1 + R4/R3$ . A 6.3-V zener diode is used because it is the most stable zener diode over time and temperature.

The output equation is

$$V_O = \frac{R2}{R1 + R2} \left( 1 + \frac{R4}{R3} \right) \times V_Z. \quad (2)$$

Buried zener diode references are more expensive than band-gap references but provide a higher performance level. They typically have an initial error of 0.01–0.04%, a TC of 1–10 ppm/°C, and less than 10- $\mu V_{p-p}$  (0.1- to 10-Hz)

noise. The long-term stability is typically 6–15 ppm/1000 hrs. Buried zener-based references are frequently used for 12-bit, 14-bit, and higher resolution systems because the performance of the buried zener-based references can be extended by incorporating nonlinear temperature compensation networks into the design. The compensation network is trimmed at several temperatures to optimize the electrical performance over the operating temperature range.

## XFET reference

The XFET reference is a new reference technique that consists of two junction field-effect transistors, one of which has an extra channel implant to raise the pinch-off voltage. The two JFETs are run at the same drain current. The difference in pinch-off voltage is amplified and used to form a voltage reference. The general equation is

$$V_O = \Delta V_P \left( \frac{R1 + R2 + R3}{R1} \right) + (I_{PTAT})(R3), \quad (3)$$

where  $\Delta V_P$  is the difference in pinch-off voltage between the two FETs and  $I_{PTAT}$  is the positive temperature coefficient correction current.

The simplified schematic for the XFET reference is shown in Figure 3.

The XFET references are relatively new and provide a performance level between band-gap and zener references. The initial error is typically 0.06%, a TC of 10 ppm/°C, and 15- $\mu V_{p-p}$  (0.1- to 10-Hz) noise. The long-term stability is 0.2 ppm/1000 hrs.

## Reference selection for a 14-bit converter

Specified parameters for voltage references include line regulation, load regulation, initial voltage error, output voltage temperature coefficient (TC), output voltage noise, turn-on settling time, thermal hysteresis, quiescent supply current, and long term stability.

The most important parameters for data acquisition systems design are initial error, output voltage temperature coefficient (TC), thermal hysteresis, noise, and long-term stability of the voltage reference device.

Table 1 summarizes the major error sources for the three references that are compared in this application note. The data represents the highest grade for each

**Table 1. Voltage reference major error sources (all information is based on published data sheets)**

PARAMETER	THALER CORP. VRE3050 TEMPERATURE RANGE –40°C to +85°C	MAXIM MAX6250 TEMPERATURE RANGE –40°C to +85°C	ANALOG DEVICES ADR293 TEMPERATURE RANGE –40°C to +85°C
Output voltage	5.000 V	5.000 V	5.000 V
Initial error	0.01%	0.04%	0.06%
Temperature coefficient	0.6 ppm/°C	3.0 ppm/°C	8.00 ppm/°C
Noise (0.1–10 Hz)	3.0 $\mu V_{p-p}$	3.0 $\mu V_{p-p}$	15.0 $\mu V_{p-p}$
Thermal hysteresis 25°C→50°C→25°C	2 ppm	20 ppm	15 ppm
Long-term stability	6.0 ppm/1000 hrs.	20.0 ppm/1000 hrs.	0.2 ppm/1000 hrs.
Power supply	8.0 V–36 V	8.0 V–36 V	6.0 V–15 V
Turn-on settling time	10 $\mu s$	10 $\mu s$	<10 $\mu s$
Line regulation (8 V $\leq V_{IN}$ $\leq$ 10 V)	25 ppm/V	35.00 ppm/V	100.00 ppm/V
Load regulation (source 0 mA $\leq I_O$ $\leq$ 15 mA)	5 ppm/mA	7 ppm/mA	100 ppm/mA
PSRR (10 Hz–900 Hz)	95 dB	90 dB	40 dB

respective model in the 8-pin plastic DIP package over the industrial temperature range ( $-40^{\circ}\text{C}$  to  $+85^{\circ}\text{C}$ ). The poorest-performing references are band-gap type and are not included in this summary. Buried zener diodes have better overall performance than band-gap devices and the XFET references. The buried zener reference with a third-order temperature compensation network (VRE3050) is the best performer with respect to initial error, TC, and thermal hysteresis.


### Explanation of parameters

**Initial error**—The output voltage tolerance of a reference after the device is turned on and warmed up. It is usually measured without a load applied. In many applications, initial error is the most important specification. Often instrument manufacturers will specify a reference with a tight initial error so they do not have to perform room-temperature systems calibration after assembly.

**Temperature coefficient (TC)**—A change in output voltage due to change in temperature usually expressed in  $\text{ppm}/^{\circ}\text{C}$ . It is the second most important specification after initial accuracy. For many instrument manufacturers, a voltage reference with a temperature coefficient less than  $1 \text{ ppm}/^{\circ}\text{C}$  makes it possible not to have to perform a system temperature calibration, a slow and costly process. Of the three TC specification methods (slope, butterfly, and box), the box method is most commonly used. A box is formed by the min/max limits for the nominal output voltage over the operating temperature range. The equation follows.


$$\text{TC} = \left[ \frac{V_{\text{MAX}} - V_{\text{MIN}}}{V_{\text{nominal}} \times (T_{\text{MAX}} - T_{\text{MIN}})} \right] \times 10^6 \quad (4)$$

Figure 5. System performance vs. reference TC

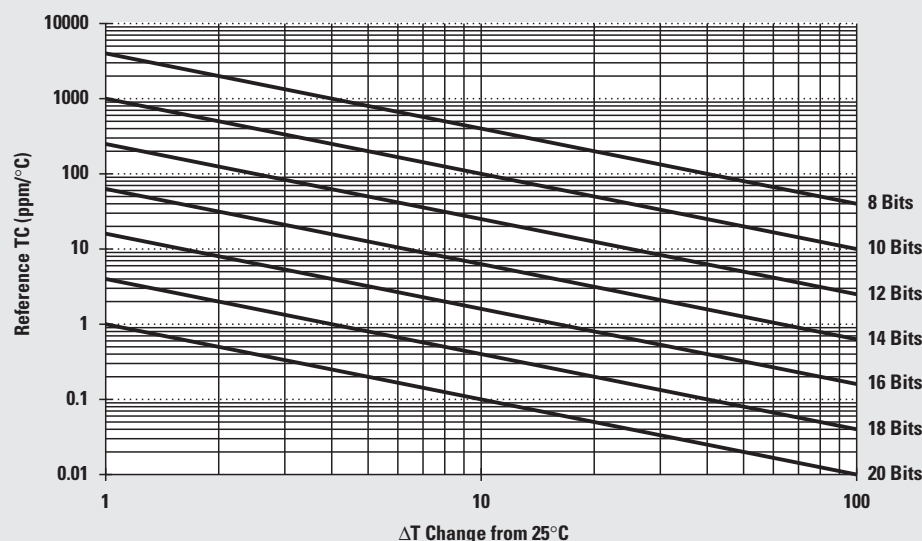

Reference TC vs.  $\Delta T$  change from  $25^{\circ}\text{C}$  for 1 LSB change

Figure 4.  $V_{\text{OUT}}$  vs. temperature

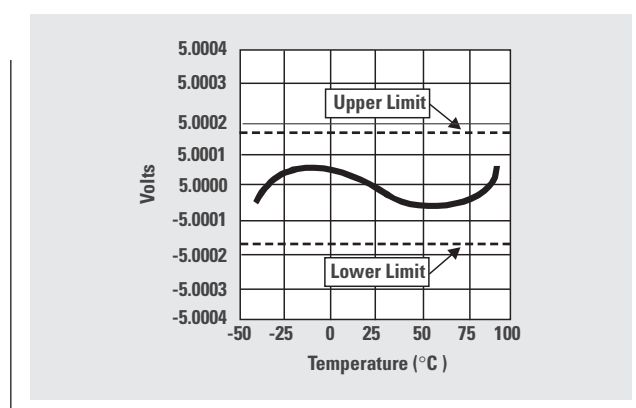

This method corresponds more accurately to the method of test and provides a closer estimate of actual error than the other methods. The box method guarantees limits for the temperature error but does not specify the exact shape and slope of the device under test. Assuming a 5-V reference with a  $0.6\text{-ppm}/^{\circ}\text{C}$  TC over the industrial temperature range, a plot of the box calculation method would appear as in Figure 4.

A designer who needs a 14-bit accurate data acquisition system over the industrial temperature range ( $-40^{\circ}\text{C}$  to  $+85^{\circ}\text{C}$ ) will need a voltage reference with a TC of  $1.0 \text{ ppm}/^{\circ}\text{C}$  if the reference is allowed to contribute an error equivalent to 1 LSB. For  $1/2$  LSB equivalent error from the reference, a voltage reference with a temperature coefficient of  $0.5 \text{ ppm}/^{\circ}\text{C}$  would be needed. Figure 5 shows the required reference TC vs.  $\Delta T$  change from  $25^{\circ}\text{C}$  for resolution ranging from 8 bits to 20 bits.

**Thermal hysteresis**—A change in output voltage as a result of a temperature change. When references experience a temperature change and return to the initial temperature, they do not always have the same initial output voltage. Thermal hysteresis is difficult to correct and is a major error source in systems that experience temperature changes of  $25^{\circ}\text{C}$  or more. Voltage reference manufacturers are starting to include this important specification in their datasheets.

Continued on next page

Continued from previous page

### Noise (1/f and broadband)—

Electrical noise on the output of a voltage reference. It can include wideband thermal noise and narrowband 1/f noise.

Wideband noise can be effectively filtered with a simple RC network. 1/f noise is inherent in the reference and cannot be filtered. It is specified in the 0.1- to 10-Hz range. Low 1/f noise references are important in precision designs.


**Long-term drift**—A slow change in output voltage that occurs over months of operation. Long-term drift is usually expressed in ppm/1000 hrs. In zener references, the long-term drift is typically 6 ppm/1000 hrs. and decreases at an exponential rate over time. Additional temperature burn-in of the reference can accelerate the stability of a zener reference. The XFET reference has excellent long-term stability—0.2 ppm/1000 hrs.

**Turn-on settling time**—A change in voltage over a specified time interval after the power is applied. Most references settle to 0.1% in less than 10  $\mu$ s. Turn-on settling time is important for portable battery systems that conserve energy by powering the circuitry only for short periods of time.

**Line regulation**—An error produced by a change in the input voltage. This dc specification does not include the effects of ripple voltage or line transients.

**Load regulation**—An error produced by a change in load current. Like line regulation, this dc specification does not include the effects of load transients.

Figure 6. 0.1-Hz to 10-Hz noise

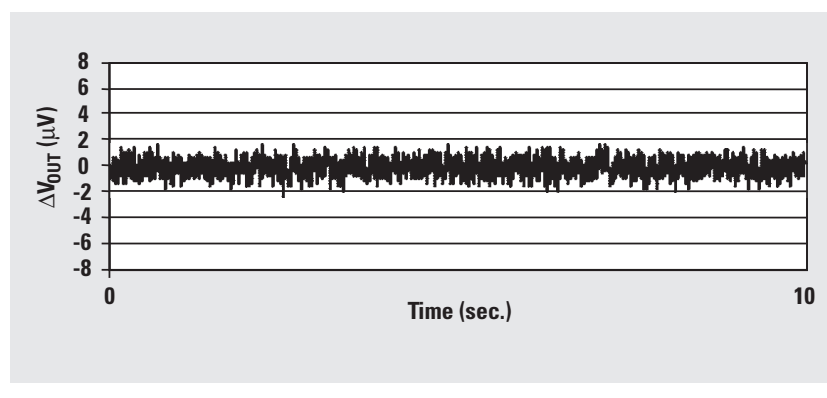


**PCB layout**—Poor printed circuit board layout can adversely affect the performance of the reference. Poor layout can affect the output voltage, noise, and thermal performance of the device. Inherent stress in the PCB can also be transferred to the reference and can shift the output voltage.

### Conclusion

It has been shown that a number of key parameters must be evaluated before selecting an external reference for a high-resolution data acquisition system. The XFET reference is suitable for systems that will be held at a constant temperature and where good long-term stability of the reference is important. In 14-bit conversion systems that are designed for the industrial operating temperature range, the VRE3050 is the preferred device because of its better initial error, TC, and thermal hysteresis performance.

Figure 7. VRE3050 long-term drift vs. hours

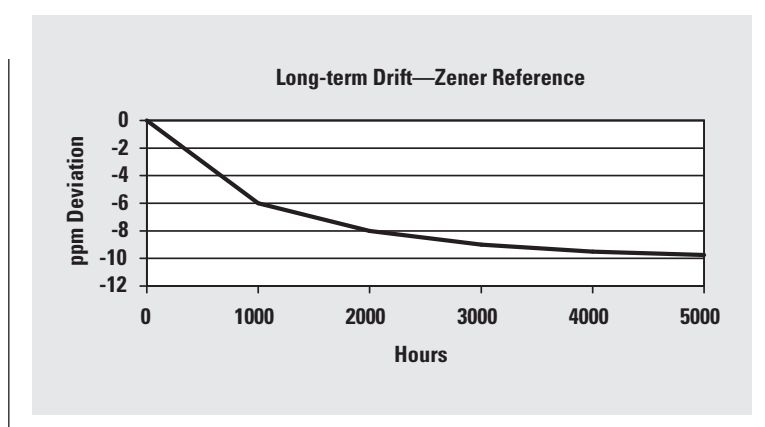

### References

1. Analog Devices Inc., Low Noise, Micropower, Precision Reference ADR293 Datasheet.
2. Paul R. Gray and Robert G. Meyer, *Analysis and Design of Analog Integrated Circuits*, 3rd ed. (John Wiley & Sons, Inc., 1992).
3. Maxim Corp., MAX6250, Low Noise Precision, +2.5 V +4.096 V +5 V Voltage Reference Datasheet.
4. Texas Instruments, THS1265, 12-bit, 65 MSPS, IF Sampling Communications A/D converter.
5. Texas Instruments, THS1470, 14-bit, 70 MSPS, IF Sampling Communications A/D converter.
6. Thaler Corp., Precision Reference VRE3050 Datasheet.

## IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

### Products

Amplifiers	<a href="http://amplifier.ti.com">amplifier.ti.com</a>
Data Converters	<a href="http://dataconverter.ti.com">dataconverter.ti.com</a>
DSP	<a href="http://dsp.ti.com">dsp.ti.com</a>
Interface	<a href="http://interface.ti.com">interface.ti.com</a>
Logic	<a href="http://logic.ti.com">logic.ti.com</a>
Power Mgmt	<a href="http://power.ti.com">power.ti.com</a>
Microcontrollers	<a href="http://microcontroller.ti.com">microcontroller.ti.com</a>

### Applications

Audio	<a href="http://www.ti.com/audio">www.ti.com/audio</a>
Automotive	<a href="http://www.ti.com/automotive">www.ti.com/automotive</a>
Broadband	<a href="http://www.ti.com/broadband">www.ti.com/broadband</a>
Digital control	<a href="http://www.ti.com/digitalcontrol">www.ti.com/digitalcontrol</a>
Military	<a href="http://www.ti.com/military">www.ti.com/military</a>
Optical Networking	<a href="http://www.ti.com/opticalnetwork">www.ti.com/opticalnetwork</a>
Security	<a href="http://www.ti.com/security">www.ti.com/security</a>
Telephony	<a href="http://www.ti.com/telephony">www.ti.com/telephony</a>
Video & Imaging	<a href="http://www.ti.com/video">www.ti.com/video</a>
Wireless	<a href="http://www.ti.com/wireless">www.ti.com/wireless</a>

## TI Worldwide Technical Support

### Internet

**TI Semiconductor Product Information Center Home Page**  
[support.ti.com](http://support.ti.com)

**TI Semiconductor KnowledgeBase Home Page**  
[support.ti.com/sc/knowledgebase](http://support.ti.com/sc/knowledgebase)

### Product Information Centers

#### Americas

Phone	+1(972) 644-5580	Fax	+1(972) 927-6377
Internet/Email	<a href="http://support.ti.com/sc/pic/americas.htm">support.ti.com/sc/pic/americas.htm</a>		

#### Europe, Middle East, and Africa

Phone			
Belgium (English)	+32 (0) 27 45 54 32	Netherlands (English)	+31 (0) 546 87 95 45
Finland (English)	+358 (0) 9 25173948	Russia	+7 (0) 95 7850415
France	+33 (0) 1 30 70 11 64	Spain	+34 902 35 40 28
Germany	+49 (0) 8161 80 33 11	Sweden (English)	+46 (0) 8587 555 22
Israel (English)	1800 949 0107	United Kingdom	+44 (0) 1604 66 33 99
Italy	800 79 11 37		
Fax	+(49) (0) 8161 80 2045		
Internet	<a href="http://support.ti.com/sc/pic/euro.htm">support.ti.com/sc/pic/euro.htm</a>		

#### Japan

Fax			
International	+81-3-3344-5317	Domestic	0120-81-0036
Internet/Email			
International	<a href="http://support.ti.com/sc/pic/japan.htm">support.ti.com/sc/pic/japan.htm</a>		
Domestic	<a href="http://www.tij.co.jp/pic">www.tij.co.jp/pic</a>		

#### Asia

Phone			
International	+886-2-23786800		
Domestic	Toll-Free Number		
Australia	1-800-999-084	New Zealand	0800-446-934
China	800-820-8682	Philippines	1-800-765-7404
Hong Kong	800-96-5941	Singapore	800-886-1028
Indonesia	001-803-8861-1006	Taiwan	0800-006800
Korea	080-551-2804	Thailand	001-800-886-0010
Malaysia	1-800-80-3973		
Fax	886-2-2378-6808	Email	<a href="mailto:tiasia@ti.com">tiasia@ti.com</a>
Internet	<a href="http://support.ti.com/sc/pic/asia.htm">support.ti.com/sc/pic/asia.htm</a>		<a href="mailto:ti-china@ti.com">ti-china@ti.com</a>

### C011905

**Safe Harbor Statement:** This publication may contain forward-looking statements that involve a number of risks and uncertainties. These "forward-looking statements" are intended to qualify for the safe harbor from liability established by the Private Securities Litigation Reform Act of 1995. These forward-looking statements generally can be identified by phrases such as "TI or its management believes," "expects," "anticipates," "foresees," "forecasts," "estimates" or other words or phrases of similar import. Similarly, such statements herein that describe the company's products, business strategy, outlook, objectives, plans, intentions or goals also are forward-looking statements. All such forward-looking statements are subject to certain risks and uncertainties that could cause actual results to differ materially from those in forward-looking statements. Please refer to TI's most recent Form 10-K for more information on the risks and uncertainties that could materially affect future results of operations. We disclaim any intention or obligation to update any forward-looking statements as a result of developments occurring after the date of this publication.

**Trademarks:** All trademarks are the property of their respective owners.

Mailing Address: Texas Instruments  
Post Office Box 655303  
Dallas, Texas 75265

© 2005 Texas Instruments Incorporated