

Angle Calculation Methods Using Position Sensor Output Data



Scott Bryson

Position Sensing

Introduction

Multi-axis, linear Hall-effect sensors, such as [TMAG5170](#), [TMAG5173](#), or [TMAG5273](#) offer the ability to track the directionality of the magnetic field of a rotating magnet. Given that the field vector components are naturally 90 degrees out of phase from each other, the absolute position of the magnet can quickly be determined.

While the previously-mentioned devices are capable of generating angle results using the CORDIC algorithm, it is sometimes desirable to apply a running averaging, get extended floating point accuracy, or to perform calculations for the complete vector in 3D space. Vector calculations can be performed using CORDIC to find planar, spherical, or cylindrical angles and magnitudes. These measurements require implementing the calculations within the microcontroller. When the magnet is rotating quickly, any unnecessary delays in this calculation can be minimized to achieve the least amount of system latency.

CORDIC

The Coordinate Rotation Digital Calculator (CORDIC) algorithm is a process by which an angle within a two-dimensional plane can be calculated by a series of binary search approximations. The process begins by performing coordinate space rotations with the target of ending with a vector in one dimension. In theory, this is most efficiently accomplished using a binary search, where the vector rotation begins at 45 degrees. At each step, the quadrant in which the vector lies is determined, and either a clockwise or counterclockwise rotation half of the previous rotation is applied. This process can run a fixed number of iterations and the output of the algorithm produces both the angle and magnitude of the original vector.

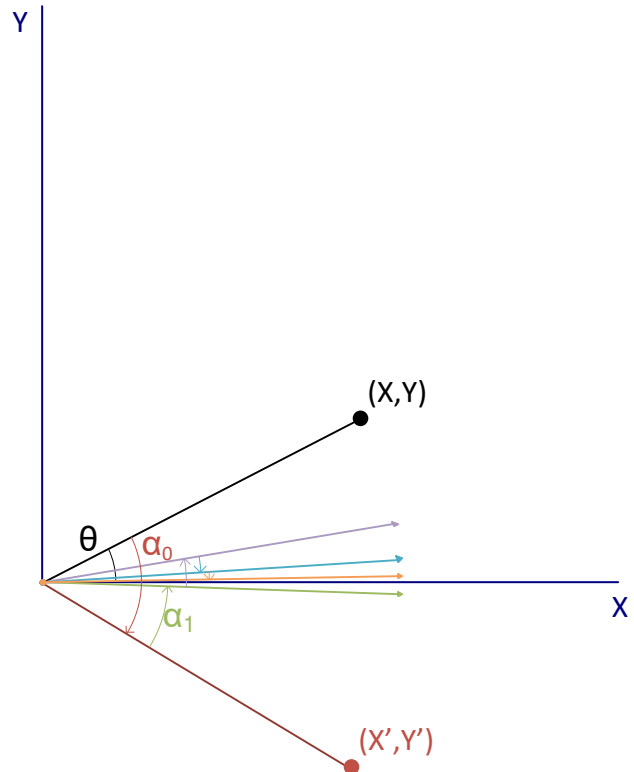


Figure 1. Five Step Vector Rotation

In application, establishing a rotation pattern is best and can easily be applied using digital logic. To produce a coordinate space rotation, multiply by the tangent of the rotation angle. When applied using a true binary search, the first 5 iterations require storing a floating point number for each step in a lookup table. This example is shown in [Arctangent Results of Rotation Angles](#).

Table 1. Arctangent Results of Rotation Angles

α_n - Rotation Angle in degrees	$\tan(\alpha_n)$
45	1
22.5	0.414
11.25	0.199
5.625	0.98
2.8125	0.049

As long as the rotation angle used is greater than or equal to each of these steps, converging to a final result is always possible. Therefore, an alternate method to multiplying by $\tan(\alpha_n)$ is to simply divide by two by performing a simple rightward bit shift. The effective rotation angles in [Rotation Angles of Rightward Bit Shifts](#) are the result of calculating the arctangent of 2^{-n} .

Table 2. Rotation Angles of Rightward Bit Shifts

2^{-n}	Effective Rotation Angle in Degrees
1	45
0.5	26.565
0.25	14.036
0.125	7.125
0.0625	3.576

For each step, the result of a rightward bit shift is somewhat larger than the true binary step size. The result is that the search can require one or two more iterations, but this is made up for by not requiring time to parse through a lookup table and load results. The bit shift operation is accomplished in much less time.

More step-by-step details regarding the derivation of equations used to apply this algorithm are found in the [Angle Measurement With Multi-Axis Hall-effect Sensors](#) application report. Code examples implementing CORDIC using [TMAG5170](#) and for translating into other coordinate spaces are available at [TMAG5170-CODE-EXAMPLE](#).

With the CORDIC implemented on the [TI-SCB](#) which runs with an internal clock of 120 MHz, calculation times as low as 3.4 μ s can be achieved for a single 10-iteration loop.

Planar Angle Calculation


With a fast method for angle calculations, it is now possible to extend calculations from two-dimensional angle and magnitude to a complete three dimensional space. Using planar angles, both the angle and magnitude of a vector in 3D space can be described. This method requires calculating the magnitude of the vector within two separate planes, such as ZY and XZ, and calculating the angle relative to the magnitude of the component that is normal to this.

[Equation 1](#) and [Equation 2](#) demonstrate how these angles are calculated:


$$\theta_{ZY} = \text{atan}\left(\frac{\sqrt{Z^2 + Y^2}}{X}\right) \quad (1)$$

$$\theta_{ZX} = \text{atan}\left(\frac{\sqrt{Z^2 + X^2}}{Y}\right) \quad (2)$$

For example, consider a B-field vector whose components are $B_X = 3$ mT, $B_Y = 6$ mT, and $B_Z = 8$ mT. Combined with the magnitude from the ZY plane, the first angle result produced by [Equation 1](#) describes any point along the circumference of a circle that is parallel to ZY, and separated by this angle.


Figure 2. YZ plane angle

Similarly, [Equation 2](#) describes a perpendicular circle which is parallel to the ZX plane.

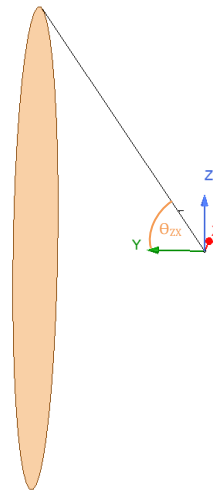
Figure 3. ZX plane angle

The original vector in Cartesian coordinates lies at the intersection of these two circles. This results in two intersections, so these results are constrained to cases where the Z component is always positive or always negative, such as can be observed in a joystick control.

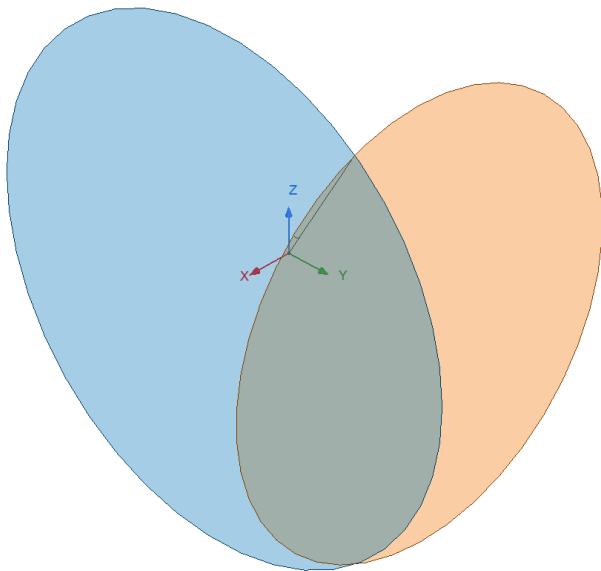


Figure 4. Combined Planar Angle Results

Since this format relies heavily on both angle and magnitude, a quick calculation of this result can be made using CORDIC. When executed, the planar angle calculation can be fully completed in 16.2 μs when using 10 iteration CORDIC calculations under the same conditions cited in CORDIC.

Spherical Coordinate Angles

Translations from Cartesian XYZ coordinates to spherical are helpful, particularly when the magnet remains at a fixed range from the sensor and orbits radially. Translations are demonstrated in the [Measuring 3D Motion with Absolute Position Sensors](#) application brief.

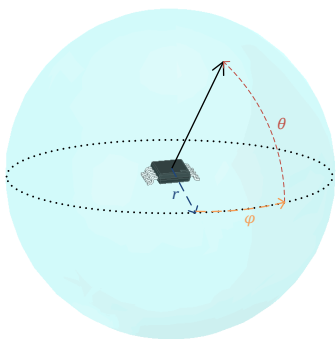


Figure 5. Spherical Coordinates

This process is achieved by finding the angle ϕ using the X and Y component. The angle θ is calculated using the Z component and the magnitude

of XY. Using CORDIC for this angle calculation also produces the radius as the final magnitude in two passes.

Spherical calculations require two CORDIC calculations to complete, so the total calculation time to translate from the Cartesian coordinate space is about 7 μs .

Cylindrical Coordinate Angle

Cylindrical Coordinate Translations are also simple. A single 3.4- μs pass using CORDIC on the X and Y results produces both a radius and angle. Z is not transformed when changing to this coordinate space.

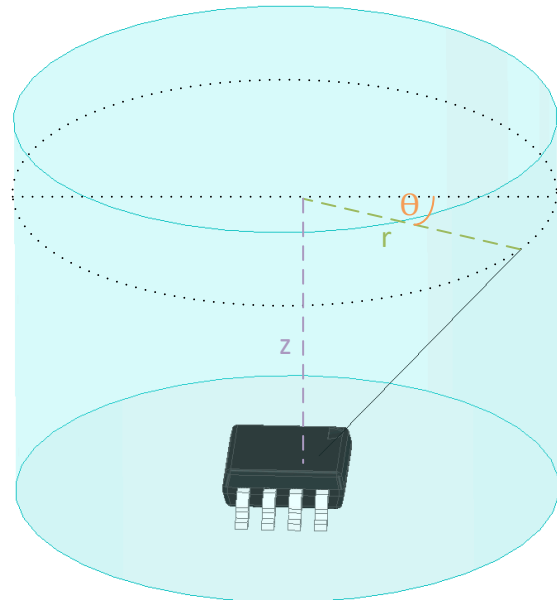


Figure 6. Cylindrical Coordinates

Conclusion

3D magnetic sensors offer an dramatic increase in measurements of an existing B-field. Depending on the type of motion being observed, there are several methods of applying data from each of the axes to map the result to a useful coordinate system. Joysticks and lever applications, such as those found in a steering column control or turn indicator in a video game controller particularly benefit from this ability.

For more details and guides related to using linear Hall-effect sensors for absolute position measurements with either one dimensional or 3D position sensors, see [Table 3](#) and [Table 4](#).

Table 3. Alternative Device Recommendation

Device	Characteristics	Design Considerations
TMAG5170 (TMAG5170-Q1)	Commercial (Automotive) grade linear 3D Hall-effect position sensor with SPI available in 8 pin DGK package	Complete magnetic vector sensitivity. This device is able to track a wide range of magnet positions, though careful planning is still required to make sure all input conditions map to a unique position.
TMAG5273	Commercial grade Linear 3D Hall-effect position sensor with I2C interface available in 6 pin SOT-23 package	Similar to the TMAG5170, but operates over I2C with wider sensitivity tolerance specifications.
TMAG5173-Q1	Automotive grade Linear 3D Hall-effect position sensor with I2C interface available in 6 pin SOT-23 package	Operates over I2C with comparable performance to TMAG5170.

Table 4. Related Technical Resources

Name	Description
Achieving Highest System Angle Sensing Accuracy	A guide to designing sensor arrays for tracking motion across long paths
Measuring 3D Motion With Absolute Position Sensors	A discussion on the differences between a linear output and switched output Hall effect sensors.
Absolute Angle Measurements for Rotational Motion Using Hall-effect Sensors	A discussion about the Hall effect and how the Hall effect is used to create magnetic sensors
Angle Measurement With Multi-Axis Hall-effect Sensors	A guide to monitoring absolute angle position using a 3D Hall effect sensor
TMAG5170 EVM	GUI and attachments incorporate angle measurement using a precise three dimensional linear Hall-effect sensor
TAMG5273 EVM	GUI and attachments incorporate angle measurement using a three dimensional linear Hall-effect sensor
TMAG5173EVM	GUI and attachments incorporate joystick measurement using a three dimensional linear Hall-effect sensor
TI Precision Labs - Magnetic Sensors	A helpful video series describing the Hall effect and how to use the Hall effect in various applications. A video on CORDIC calculations is included.

IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATA SHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to [TI's Terms of Sale](#) or other applicable terms available either on ti.com or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products.

TI objects to and rejects any additional or different terms you may have proposed.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2022, Texas Instruments Incorporated