

The problem of ADC and mixed-signal grounding and layout for dynamic performance while minimizing RFI/EMI



Literature Number: SNAA113

Technology Edge

The problem of ADC and mixed-signal grounding and layout for dynamic performance while minimizing RFI/EMI

Nicholas Gray, Staff Applications Engineer

Obtaining the best performance from Analog-to-Digital Converters (ADCs) has long eluded many circuit designers. Many designers have concluded that getting the performance claimed in data sheets is not possible in practical circuits. Previous articles^{1,2,3} describe methods that help improve the performance of mixed-signal circuits, particularly those using ADCs.

Inadequate grounding techniques in highspeed ADC and mixed-signal circuits and systems can lead to excessive noise when digital return (ground) currents find their way into analog circuit areas.

There are many ways to configure grounds for ADCs and other mixed-signal products and there are many opinions as to which is the best method. These opinions are generally based upon what we have found to be successful. An earlier article¹ discussed the limitations of a popular ADC-grounding technique and suggested a split ground plane, which has always yielded excellent first time noise performance. However, as good as this method is for obtaining good noise performance from highspeed ADCs, a split ground plane is not good for RFI/EMI (Radio Frequency Interference/Electro-Magnetic Interference) performance.

This article discusses how we handle grounding for a combination of good dynamic performance and minimization of RFI/EMI. The skin effect and the proximity effect are our guidelines.

The skin effect

We know that electrical current always seeks the path of lowest impedance. At relatively low frequencies this is the same as the path of least *resistance*. The path of least resistance is the path that causes the DC and low frequency current to fill the entire volume of the conductor. In a plane, the current would spread out to fill the entire volume of the plane and the resistance of that plane is dependent upon the cross-sectional area of that plane.

Once the frequency reaches a few MHz, however, the path of least impedance becomes the path of least *inductance*. As AC current flows through a conductor, the expanding and collapsing magnetic field around it is strongest at the center of the conductor and weakens with distance from that center. The result is a higher inductance at the center of the conductor that decreases with distance from the center, causing AC current to flow primarily near the outside surface of the conductor, or on its skin. This is known as the skin effect⁴. The skin effect tells us that, at high frequencies, the effective cross-sectional area of the conductor is reduced below what we would presume so that the AC resistance part of the conductor impedance is greater than we would measure with an ohmmeter. The frequency-dependent AC resistance of a flat conductor (such as a PCB trace) is defined as:

$$R_{ac} = \frac{2.61 \times 10^{-7} \sqrt{f \times \rho_r}}{2 \times (w + h)}$$

where:

R_{AC} = AC resistance, W/inch

f = frequency, Hz

ρ_r = conductor relative resistivity, compared to copper = 1.00

w = flat trace width in inches

h = flat trace height or thickness in inches

From this formula we see that, at 40 MHz, a typical PCB trace of 0.006 inches wide by 0.0015 inches high would have an AC resistance of 0.11W per inch. Doubling the trace thickness (height) to 0.003 inches would double the volume (cross-sectional area) of the conductor while reducing its AC resistance by only 17%. If the trace width is doubled to 0.012 inches, doubling the surface area and again increasing the trace cross-sectional area by a factor of 2, the AC resistance is reduced by 44%. So we see that the total surface area of a conductor is more important at higher frequencies than is its cross-

sectional area.

The skin effect is more prominent as frequency increases, where the conductor may as well be a hollow, thin-walled conductor as far as the current is concerned (Figure 1).

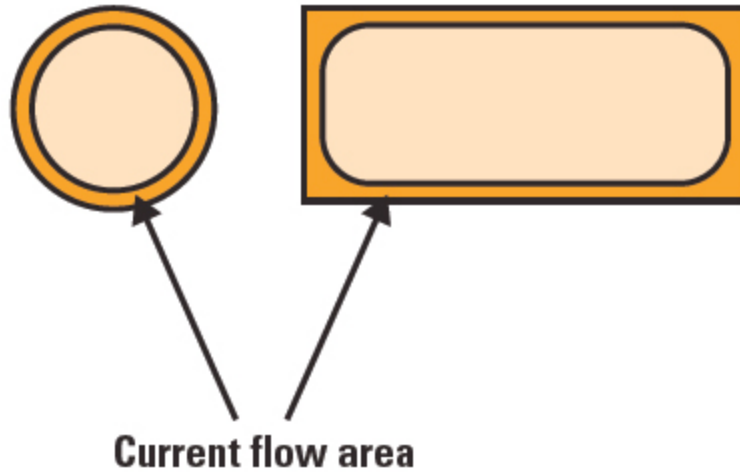


Fig. 1: Skin effect restricts current flow

The inductance of the wire or trace forces the current through it to flow only in its surface, so the effective cross-sectional area of that trace is drastically reduced, raising the conductor resistance as frequency increases. This is not the only effect upon the AC resistance of a conductor.

The proximity effect

The magnetic field surrounding outgoing and return currents causes those currents to want to flow in close proximity to each other to minimize the amount of energy required to establish and maintain that magnetic field. This causes the return current in a reference plane to flow through that plane in a path that is as close as possible to its corresponding outgoing current. The result is a flow of return current in the reference plane that is restricted to a narrow area below or above the trace carrying the corresponding outgoing current.

The reference plane current density at any point horizontally displaced from the trace carrying the outgoing current is defined⁵ as:

$$I_{RP} = \frac{i}{H \times \pi \times (1 + (D/H)^2)}$$

where:

I_{RP} = the reference plane current density at horizontal distance D from the outgoing signal trace

i = the signal current

H = the height of the signal trace above the reference plane

D = the horizontal distance from the edge of the trace.

A plot of this formula reveals that the reference plane current falls off rapidly with distance from the edge of the outgoing current trace. See Figure 2. The fact that return current in a reference plane tends to flow very close to the outgoing current is known as the proximity effect⁵.

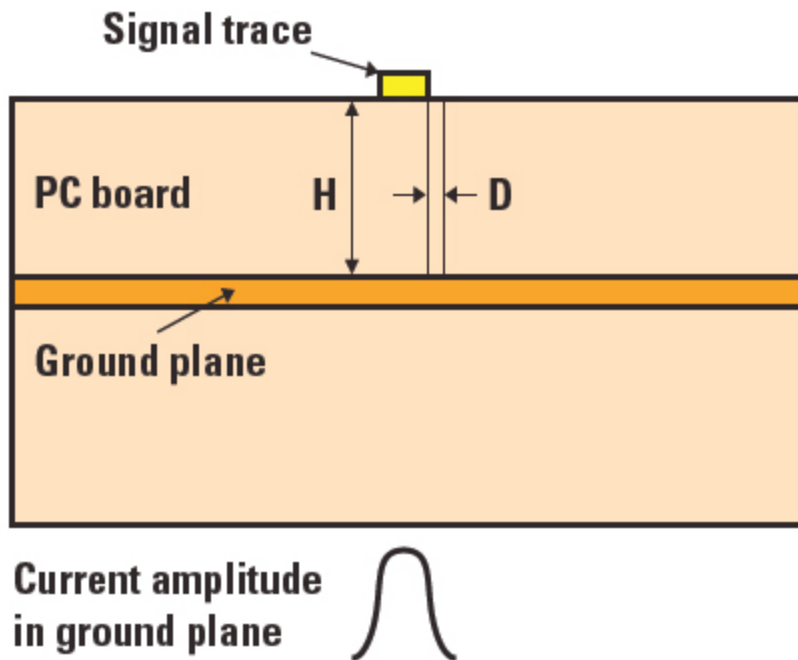


Fig. 2: Proximity effect reduces current flow

The proximity effect also causes outgoing current to flow mostly on the side of the conductor closest to the return current and the return current to flow mainly on the side of its conductor or plane closest to the outgoing conductor.

The skin effect and the two cases of the proximity effect combine to limit the current-carrying cross-sectional area of a conductor to a very small part of the full cross-sectional area of that conductor (Figure 3). Since current flows in a small portion of the conductor, the high-frequency AC resistance seen by the current is again much higher than we might expect it to be.

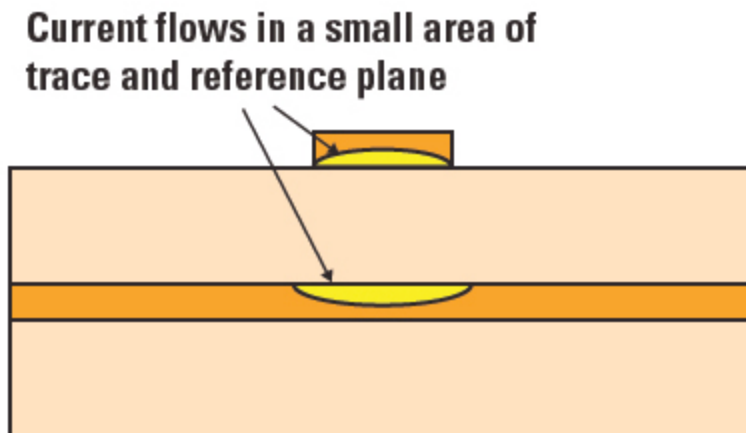


Fig. 3: Combined skin and proximity effect

Radiation

Whenever there are two conductors carrying outgoing and return currents, the amount of radiation from those conductors is a function of their length and separation. Therefore, radiation is a function of the loop area outlined by the current path. It does not matter whether one or both of these conductors is a piece of wire, a PCB trace, or a plane. Radiation increases with loop area because of the resulting increase in electromagnetic field fringing around the conductors. This loop area forms a loop antenna that radiates.

An area of copper, or other board plating metal, that is grounded at one point can also form an antenna that will radiate energy that is in the ground plane at that point. Figure 4 shows such a problem. It is best to either include a grounded via at the other end of this grounded copper or not include this area of copper at all.

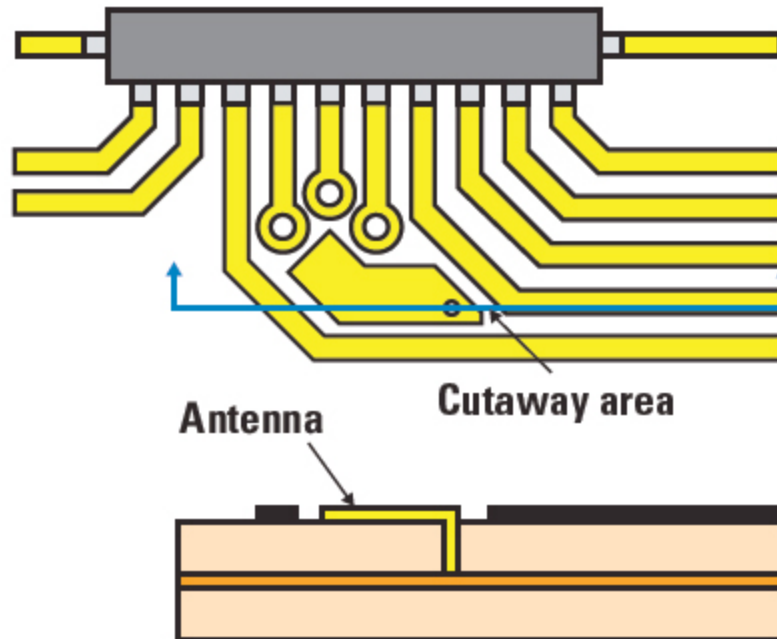


Fig. 4: Beware of ungrounded antennae

Many concepts underlie effective PCB layout design. These concepts are our guiding principles when designing the layout and grounding scheme. Our goal is to achieve the best noise performance possible while minimizing RFI/EMI.

Footnotes:

1. "Attack The Noise Gremlins That Plague High-Speed ADCs", ELECTRONIC DESIGN, December 17, 1999, p107ff
2. "Maintaining Signal Integrity Enhances ADC Circuit Performance", ELECTRONIC DESIGN, May 1, 2000, p115ff
3. "Pay Attention To The Clock And Output Bus To Improve High-Speed ADC Designs", ELECTRONIC DESIGN, June 26, 2000, p137ff
4. "High-Speed Digital Design: A Handbook of Black Magic", Howard Johnson & Martin Graham Prentis Hall, 1993, pg 151ff
5. "High-Speed Digital Design: A Handbook of Black Magic", Howard Johnson & Martin Graham Prentis Hall, 1993, pg 158

For more information visit the [A/D Converters Featured Community](#)

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

TI products are not authorized for use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of TI products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by TI. Further, Buyers must fully indemnify TI and its representatives against any damages arising out of the use of TI products in such safety-critical applications.

TI products are neither designed nor intended for use in military/aerospace applications or environments unless the TI products are specifically designated by TI as military-grade or "enhanced plastic." Only products designated by TI as military-grade meet military specifications. Buyers acknowledge and agree that any such use of TI products which TI has not designated as military-grade is solely at the Buyer's risk, and that they are solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI products are neither designed nor intended for use in automotive applications or environments unless the specific TI products are designated by TI as compliant with ISO/TS 16949 requirements. Buyers acknowledge and agree that, if they use any non-designated products in automotive applications, TI will not be responsible for any failure to meet such requirements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

Products

Audio	www.ti.com/audio
Amplifiers	amplifier.ti.com
Data Converters	dataconverter.ti.com
DLP® Products	www.dlp.com
DSP	dsp.ti.com
Clocks and Timers	www.ti.com/clocks
Interface	interface.ti.com
Logic	logic.ti.com
Power Mgmt	power.ti.com
Microcontrollers	microcontroller.ti.com
RFID	www.ti-rfid.com
OMAP Mobile Processors	www.ti.com/omap
Wireless Connectivity	www.ti.com/wirelessconnectivity

Applications

Communications and Telecom	www.ti.com/communications
Computers and Peripherals	www.ti.com/computers
Consumer Electronics	www.ti.com/consumer-apps
Energy and Lighting	www.ti.com/energy
Industrial	www.ti.com/industrial
Medical	www.ti.com/medical
Security	www.ti.com/security
Space, Avionics and Defense	www.ti.com/space-avionics-defense
Transportation and Automotive	www.ti.com/automotive
Video and Imaging	www.ti.com/video

TI E2E Community Home Page

e2e.ti.com

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2011, Texas Instruments Incorporated