

AN-1174 Startup Time, Profile Measurement of PLL VCOs and Crystal Oscillators

ABSTRACT

The startup time of a system clock is an important parameter in communication systems and PLL circuits. Whether it is a cell phone, disk drive, or palm communicator, they all shut-down periodically to save power. It is imperative that the clock “awakes” rapidly to its target frequency with minimum system latency and to conserve power. Especially in the radio communication arena, clock start-up conditions determine the performance, system specifications, and programming requirements. This note intends to alleviate the anxiety and pain that have been associated with startup time measurements, by introducing a test setup that is user friendly and convenient to build.

Contents

1	Introduction	2
2	Conventional Method	2
3	Complicated Method	2
4	Counter Method	2
5	Typical Bench Setup	2
6	Frequency vs Time Measurement	3
7	Measurement Tips	3
8	Summary	3

List of Figures

1	Sample Measurement Setup	2
2	Plot of a Xtal Oscillator Startup Time Profile	3

1 Introduction

The startup time of a system clock is an important parameter in communication systems and PLL circuits. Whether it is a cell phone, disk drive, or palm communicator, they all shut-down periodically to save power. It is imperative that the clock “awakes” rapidly to its target frequency with minimum system latency and to conserve power. Especially in the radio communication arena, clock start-up conditions determine the performance, system specifications, and programming requirements. This note intends to alleviate the anxiety and pain that have been associated with startup time measurements, by introducing a test setup that is user friendly and convenient to build.

2 Conventional Method

There are several ways of ascertaining the settling or lock time of a clock output. One is to utilize a storage or digital sampling oscilloscope. You would typically trigger it off the power-down signal, and monitor the clock output. If the instrument has sufficient memory and/or resolution capability, it may render you a crude estimate of the oscillation frequency or period as a function of time.

3 Complicated Method

Using more sophisticated equipment such as a Time Interval Analyzer or Domain Modulation Analyzer, you may examine the clock settling profile more accurately. Though they are “trickier” to setup, decent result may be obtained. However, characterizing oscillators and PLLs for wireless communications in particular, the aforementioned machines alone often required exorbitant patience and courage to cultivate meaningful, if repeatable, data. This is because these machines can handle frequency hops quite well, but not startup. Thus, arming and interfacing to test probe issues are among some of the culprits that often frustrate the users and hinder their progress.

4 Counter Method

The concept behind this method is to simply make a frequency or time interval measurement of the oscillator/clock output via a (user set) time window. The accuracy of which can easily render better than 1 ppm depending on the resolution of the counter employed. Moreover, since the apparatus is made up of two or three instruments, there are more hooks available for monitoring and for optimizing your test needs.

5 Typical Bench Setup

A sample measurement setup consists of the following instruments: An universal time interval counter such as a Stanford Research SR-620, or HP5370B UTIC; two Pulse/function generators such as SR-DG535 and/or HP3325B; a LeCroy- 9354L digital scope or equivalent; and a FET probe. The basic connection is depicted in [Figure 1](#).

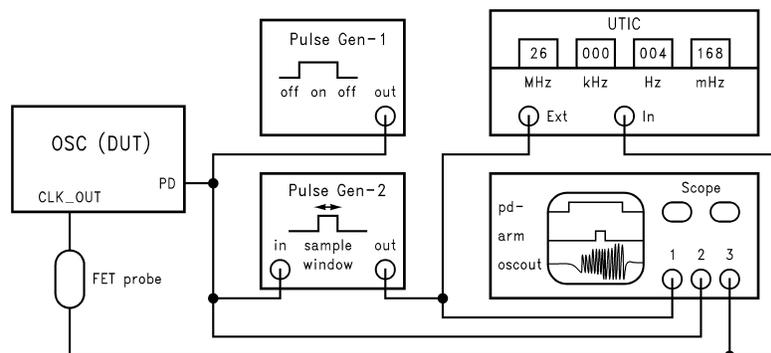


Figure 1. Sample Measurement Setup

Example: DUT with 26 MHz output

Pulse Gen-1:— Period=0.1s; CMOS levels

Pulse Gen-2:— Trigger off Pulse-Gen-1; $T_W=10 \mu\text{s}$; Delay=user

UTIC:— Ext. arm/trig by Pulse Gen-2; Input=FET Probe; Samples=10; Mode=Period or Frequency

Sampling Scope:—Trigger off Pulse Gen-1; Horizontal ≥ 200 Ms/s; Memory depth ≥ 200 Mpt

6 Frequency vs Time Measurement

By setting the “sample window” pulse delay and width appropriate for your system, you may record the oscillator frequency at any instance within the duration the oscillator is powered-up. Figure 1 shows a typical test connection where you would externally arm the counter with the “sample window” pulse, and use a FET probe to feed the signal to the scope/counter. When the signal amplitude becomes very low such as during startup, it is recommended to set the counter to “auto trigger”, and trim the probe's DC offset as necessary for an optimal triggering level.

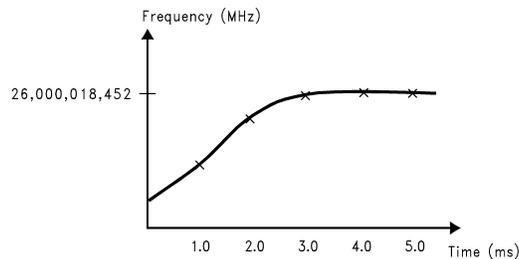


Figure 2. Plot of a Xtal Oscillator Startup Time Profile

7 Measurement Tips

1. Extraneous perturbations: As with any sensitive analog measurements, ensure your test environment is “clean and quiet”. Harmony between Heaven & Earth (radiation and grounding) is imperative to success. That is, not to ground your system to the “Earth” ground to avoid coupling noise from other systems (like an elevator or refrigerator). Allow no power cycling in your neighborhood such as from a cryo_thermo machine or a soldering iron with temperature regulation, microwave oven, etc. And avoid turning on your radio/cell-phone. Confine the test in a Faraday case as necessary and, lastly, do not turn on any fluorescent lamp while you are inside!

2. Choosing Probes: You should use a FET probe to monitor the oscillator output to minimize the loading effects. The HP85024A is a fine choice, but, the TEK P6201/02A has demonstrated exceptional performance in most cases. These probes exhibit CL=1.5 pF (when used with a X10 attenuation tip) and have DC offset adjustment to further facilitate triggering of the counter.

8 Summary

Oscillator startup or frequency pushing measurement setup described in this note is easy to assemble. It's made up of some low cost general purpose equipment, which produces a fixture capable of uncompromising precision and accuracy.

The test setup may be further automated with a PC and applicable software such as Visual Basic, which performs shifting the sampling window, capturing the data, and plotting the startup profile automatically.

Acknowledgement: *Jane Xin-Leblanc, Yuko Kanagy, your quest for better ways to make oscillator startup time measurement motivated this endeavor. Thanks for your critique and insightful comments, which made it fun to write this app note.*

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as "components") are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have **not** been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.

Products

Audio	www.ti.com/audio
Amplifiers	amplifier.ti.com
Data Converters	dataconverter.ti.com
DLP® Products	www.dlp.com
DSP	dsp.ti.com
Clocks and Timers	www.ti.com/clocks
Interface	interface.ti.com
Logic	logic.ti.com
Power Mgmt	power.ti.com
Microcontrollers	microcontroller.ti.com
RFID	www.ti-rfid.com
OMAP Applications Processors	www.ti.com/omap
Wireless Connectivity	www.ti.com/wirelessconnectivity

Applications

Automotive and Transportation	www.ti.com/automotive
Communications and Telecom	www.ti.com/communications
Computers and Peripherals	www.ti.com/computers
Consumer Electronics	www.ti.com/consumer-apps
Energy and Lighting	www.ti.com/energy
Industrial	www.ti.com/industrial
Medical	www.ti.com/medical
Security	www.ti.com/security
Space, Avionics and Defense	www.ti.com/space-avionics-defense
Video and Imaging	www.ti.com/video

TI E2E Community

e2e.ti.com