THIS DRAWING IS INTENDED TO HELP IN THE ASSEMBLY OF THE DESIGN.

1. REFER TO ODB++ FILE FOR SPECIFIC COMPONENT LOCATION INFORMATION.
2. REMOVE THE METAL TAB ON THE BANANA JACKS BEFORE MOUNTING THEM ON THE BOARD. USE LOCTITE THREADLOCKER BLUE 242 (OR EQUIVALENT) WHEN INSTALLING THE BANANA JACKS.
3. MOUNT THE RF FENCE ON THE TOP OF THE PCB AFTER BOARD ASSEMBLY. SOLDER THE FENCE DOWN TO THE BOARD AROUND THE EDGES, NO GAPS. PLACE THE COVER ON THE FENCE.
4. USE WATER SOLUBLE FLUX DURING BOARD ASSEMBLY. RoHS COMPLIANT AND LEAD FREE ASSEMBLY.

REVISIONS

ZONE	LTR	DESCRIPTION	DATE	APPROVED

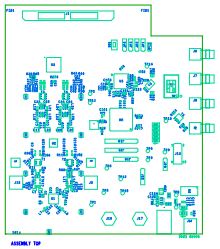

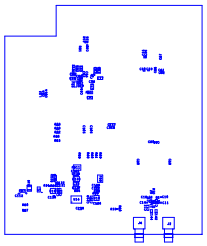

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE: FRACTIONS DECIMALS ANGLES +/- .XX +/-.01 +/- .XXX +/-.005	CONTRACT NO.	TEXAS INSTRUMENTS INC.
MATERIAL SEE NOTE 5	APPROVALS / DATE: DRAWN L. NGUYEN 12-05-11; ENGR M. GUIBORD 12-05-11	ASSEMBLY DRAWING TSW1265
FINISH SEE NOTES 7, 8, 9	SIZE B; CODE IDENT NO.; DRAWING NO.; REV. A	
DO NOT SCALE DRAWING	SCALE NONE	SHEET 1 OF 1