





**DRV8452** SLOSE84B - AUGUST 2022 - REVISED OCTOBER 2023

# DRV8452: 55 V, 5 A Stepper Motor Driver for High Efficiency and Noiseless Operation

#### 1 Features

- Stepper motor driver
  - SPI or H/W interface with STEP/DIR pins
  - Up to 1/256 microstepping indexer
- 4.5 V to 55 V operating supply voltage range
  - Supports standard 24 V and 36 V rails
- Low  $R_{DS(ON)}$ : **100 m\Omega** HS + LS at 24 V, 25°C
- High current capacity per bridge:
  - DDW Package: 5 A full-scale, 3.5A RMS
  - PWP Package: 4 A full-scale, 2.8A RMS
- DDW package pin-to-pin compatible with -
  - DRV8462/61: 65 V, 3-10A
- PWP package pin-to-pin compatible with -
  - SPI: DRV8434S: 48 V, 2.5 A
  - H/W Interface: DRV8424/26: 33 V, 1.5-2.5 A
- Integrated current sensing and regulation
  - 5% full-scale current accuracy
- Smart tune and mixed decay regulation options
- Silent step decay mode for silent operation at standstill and low speed
- Automatic Microstepping mode for step frequency interpolation
- Customizable microstepping indexer table
- **Auto-torque** for load dependent current control
- Standstill Power Saving mode
- Supports 1.8-V, 3.3-V, 5.0-V logic inputs
- Low-current sleep mode (3 µA)
- Separate logic supply voltage (VCC)
- Protection and diagnostic features
  - Sensorless Stall Detection
  - VM undervoltage lockout (UVLO)
  - Open-load detection (OL)
  - Overcurrent protection (OCP)
  - Thermal shutdown (OTSD)
  - Fault condition output (nFAULT)
  - Indexer zero position output (nHOME)

## 2 Applications

- Textile Machines, Sewing machines
- Factory Automation, Stepper Drives and Robotics
- Medical Imaging, Diagnostics and Equipment
- Stage Lighting
- ATMs, Currency Counters
- PLC, DCS & PAC
- **Multifunction Printers**
- 3D Printer
- **Outdoor IP Camera**

## 3 Description

The DRV8452 is a wide-voltage, high-power, highperformance stepper motor driver. The device supports up to 55-V supply voltage, and integrated MOSFETs with 100 mΩ HS + LS on-resistance allow up to 5-A current.


The auto-torque feature boosts efficiency by adjusting the current according to load torque. Standstill power saving mode reduces power loss during motor holding condition. Silent step guarantees noiseless operation at low speeds and standstill. Internal current sense eliminates the need for sense resistors, therefore saving PCB area and cost. Built-in indexer supports up to 1/256 microstepping, and the automatic microstepping mode interpolates the input STEP signal to reduce overhead on the controller. Sensorless stall detection eliminates end stops from the system. The device supports other protection and diagnostic features for robust and reliable operation.

The DRV8452 requires minimal tuning to configure the features. It supports higher power density than external FET drivers, with a smaller PCB area. High energy efficiency coupled with precise, noiseless operation makes the DRV8452 an ideal choice for high-performance stepper systems.

#### **Device Information**

Part Number	· lı	nterface	Package <sup>(1)</sup>	Body Size
DRV8452DDW	R SI	PI or H/W	HTSSOP (44)	14 x 6.1 mm
DRV8452SPWI	PR	SPI	HTSSOP (28)	9.7 x 4.4 mm
DRV8452PWP	R	H/W	HTSSOP (28)	9.7 x 4.4 mm

For all available packages, see the orderable addendum at the end of the data sheet.

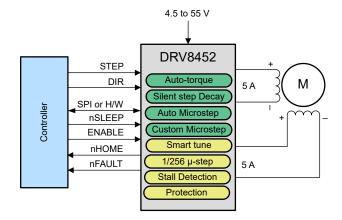

Simplified Schematic



## **Table of Contents**

1 Features	1	8.2 Typical Application	. 102
2 Applications		9 Thermal Considerations	108
3 Description	1	9.1 Thermal Pad	
4 Revision History	2	9.2 PCB Material Recommendation	.108
5 Pin Configuration and Functions	3	10 Power Supply Recommendations	.109
6 Specifications	7	10.1 Bulk Capacitance	
6.1 Absolute Maximum Ratings		10.2 Power Supplies	
6.2 ESD Ratings	. 7	11 Layout	111
6.3 Recommended Operating Conditions	7	11.1 Layout Guidelines	. 111
6.4 Thermal Information	8	11.2 Layout Example	. 111
6.5 Electrical Characteristics	8	12 Device and Documentation Support	.112
6.6 Typical Characteristics	12	12.1 Related Documentation	112
7 Detailed Description	15	12.2 Receiving Notification of Documentation Updates	s 112
7.1 Overview	15	12.3 Support Resources	. 112
7.2 Functional Block Diagram	16	12.4 Trademarks	. 112
7.3 Feature Description	.18	12.5 Electrostatic Discharge Caution	. 112
7.4 Programming	69	12.6 Glossary	. 112
7.5 Register Maps	73	13 Mechanical, Packaging, and Orderable	
8 Application and Implementation1	02	Information	. 113
8.1 Application Information1	02		

# **4 Revision History**

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

Changes from Revision A (December 2022) to Revision B (October 2023)	Page
<ul> <li>Increased voltage rating 48 V has been replaced by 55 V and 50 V has been replaced by 60</li> <li>PWP package has moved to production data.</li> </ul>	
Changes from Revision * (August 2022) to Revision A (December 2022)	Page
Updated device status to "Production Data" from "Advanced Information"	1



## **5 Pin Configuration and Functions**

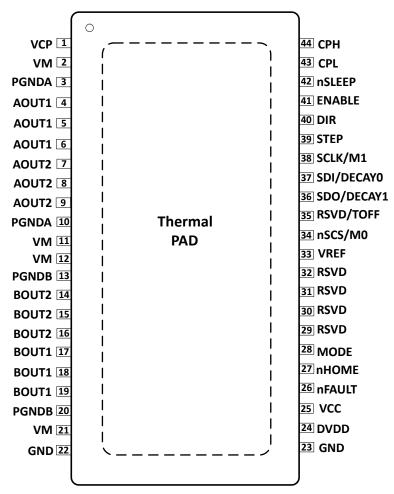


Figure 5-1. DDW Package (44-Pin HTSSOP), Top View



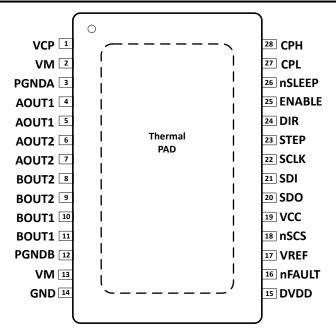


Figure 5-2. PWP Package (28-Pin HTSSOP) with SPI Interface, Top View

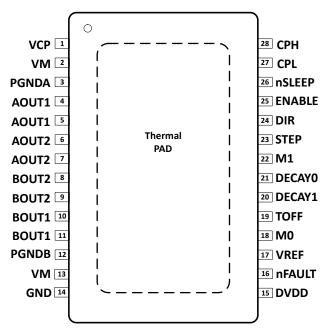


Figure 5-3. PWP Package (28-Pin HTSSOP) with H/W Interface, Top View

Table 5-1. Pin Functions

	PIN						
		PV	VP	TYPE	DESCRIPTION		
NAME	DDW	SPI Interface	H/W Interface	1172	DESCRIPTION		
vcc	25	19	-	Power	Supply voltage for internal logic blocks. When separate logic supply voltage is not available, tie the VCC pin to the DVDD pin. When configured with SPI interface, the VCC pin also acts as the supply pin for SDO output. See Section 7.3.16 for details.		

## **Table 5-1. Pin Functions (continued)**

	PIN	<u>'</u>			is (continued)		
		PWP					
NAME	DDW	SPI	H/W	TYPE	DESCRIPTION		
		Interface	Interface				
RSVD/TOFF	35	-	19	Input	This pin is not used with SPI interface. With H/W interface, this pin programs the OFF time for PWM current regulation.		
VCP	1		1	Power	Charge pump output. Connect a X7R, 1-µF, 16-V ceramic capacitor from VCP to VM.		
VM	2, 11, 12, 21	2,	13	Power	Power supply. Connect to motor supply voltage and bypass to PGNDA and PGNDB with two 0.01-µF ceramic capacitors plus a bulk capacitor rated for VM.		
PGNDA	3, 10	;	3	Power	Power ground. Connect to system ground.		
PGNDB	13, 20	1	2	Power	Power ground. Connect to system ground.		
AOUT1	4, 5, 6	4.	5	Output	Winding A output. Connect to motor winding.		
AOUT2	7, 8, 9	6.	7	Output	Winding A output. Connect to motor winding.		
BOUT2	14, 15, 16	8.	9	Output	Winding B output. Connect to motor winding.		
BOUT1	17, 18, 19	10	, 11	Output	Winding B output. Connect to motor winding.		
GND	22, 23	1	4	Power	Device ground. Connect to system ground.		
DVDD	24	1	5	Power	Internal LDO output. Connect a X7R, 1-µF, 6.3-V or 10-V rated ceramic capacitor to GND.		
nFAULT	26	1	6	Open Drain	Fault indication output. Pulled logic low with fault condition.  Open-drain nFAULT requires an external pullup resistor.		
nHOME	27		-	Open Drain	Pulled logic low when the internal indexer is at home position (45°) of step table. The nHOME pin outputs one low pulse per 360° electrical rotation (four fullsteps). See Section 7.3.5.1 for details. Only available with DDW package.		
MODE	28		-	Input	MODE pin programs the device to operate with either SPI or hardware (H/W) pin interface. See Section 7.3.1 for details.		
RSVD	29, 30, 31, 32		-	-	Reserved. Leave unconnected.		
VREF	33	1	7	Input	Voltage reference input for setting full-scale current. DVDD can be used to generate VREF through a resistor divider. When configured with SPI interface, the VREF pin can be left unconnected if VREF_INT_EN bit is 1b.		
nSCS/M0	34	1	8	Input	With SPI interface, this pin acts as serial chip select. An active low on this pin enables the serial interface communications. With H/W interface, this pin programs the microstepping mode.		
SDO/ DECAY1	36	2	0	Push-Pull/Input	With SPI interface, this pin acts as serial data output. Data is shifted out on the rising edge of the SCLK pin. With H/W interface, this pin programs the decay-mode.		
SDI/DECAY0	37	2	1	Input	With SPI interface, this pin acts as serial data input. Data is captured on the falling edge of the SCLK pin. With H/W interface, this pin programs the decay-mode.		
SCLK/M1	38	2	2	Input	With SPI interface, this pin acts as serial clock input. Serial data is shifted out and captured on the corresponding rising and falling edge on this pin. With H/W interface, this pin programs the microstepping mode.		
STEP	39	2	3	Input	Step input. An active edge causes the indexer to advance one step. With SPI interface, STEP active edge can be either rising edge or both rising and falling edge. With H/W interface, STEP active edge is always the rising edge.		
DIR	40	2	4	Input	Direction input. Logic level sets the direction of stepping.		



## **Table 5-1. Pin Functions (continued)**

	PIN						
		PWP		TYPE	DESCRIPTION		
NAME	DDW	SPI Interface	H/W Interface		DESCRIPTION		
ENABLE	41	25		Input	Logic low to disable device outputs; logic high to enable. When the device operates with H/W interface, the ENABLE pin also determines the OCP, OL and OTSD fault recovery methods.		
nSLEEP	42	26		Input	Sleep mode input. Logic high to enable device; logic low to enter low-power sleep mode. A narrow nSLEEP reset pulse clears latched faults.		
CPL	43	2	7	Power	Charge pump switching node. Connect a X7R, 0.1-µF, VM-		
СРН	44	2	8	Power	rated ceramic capacitor from CPH to CPL.		
PAD	-	-	-	-	Thermal pad. Connect to system ground.		

Product Folder Links: DRV8452

6

## **6 Specifications**

## **6.1 Absolute Maximum Ratings**

Over operating free-air temperature range (unless otherwise noted)<sup>(1)</sup> (2)

	MIN	MAX	UNIT
Power supply voltage (VM)	-0.3	60	V
Charge pump voltage (VCP, CPH)	-0.3	V <sub>VM</sub> + 5.75	V
Charge pump negative switching pin (CPL)	-0.3	V <sub>VM</sub>	V
nSLEEP pin voltage (nSLEEP)	-0.3	V <sub>VM</sub>	V
Internal regulator voltage (DVDD)	-0.3	5.75	V
External logic supply (VCC)	-0.3	5.75	V
Control pin voltage	-0.3	5.75	V
Reference input pin voltage (VREF)	-0.3	5.75	V
PGNDx to GND voltage	-0.5	0.5	V
PGNDx to GND voltage, < 1 µs	-2.5	2.5	V
Open drain output current (nFAULT, nHOME)	0	10	mA
Continuous Output pin voltage (AOUT1, AOUT2, BOUT1, BOUT2)	-1	V <sub>VM</sub> + 1	V
Transient 100 ns Output pin voltage (AOUT1, AOUT2, BOUT1, BOUT2)	-3	V <sub>VM</sub> + 3	V
Peak drive current (AOUT1, AOUT2, BOUT1, BOUT2)	Internal	y Limited	Α
Operating ambient temperature, T <sub>A</sub>	-40	125	°C
Operating junction temperature, T <sub>J</sub>	-40	150	°C
Storage temperature, T <sub>stg</sub>	-65	150	°C

- Stresses beyond those listed under absolute maximum ratings may cause permanent damage to the device.
  These are stress ratings only and functional operation of the device at these or any other conditions beyond
  those indicated under recommended operating conditions is not implied. Exposure to absolute-maximumrated conditions for extended periods may affect device reliability.
- 2. All voltage values are with respect to network ground terminal GND.

#### 6.2 ESD Ratings

				VALUE	UNIT
	Electrostatic (ESD)	Human-body model (HBM), per ANSI/ESDA/JEDEC JS-001	DA/JEDEC JS-001 <sup>1</sup>		
V <sub>(ESD)</sub>	discharge	Charged davice model (CDM), per ANSI/ESDA/JEDEC IS 002 <sup>2</sup>	Corner pins	±750	v
		Charged-device filoder (CDM), per ANGI/EGDAGEDEC 33-002	body model (HBM), per ANSI/ESDA/JEDEC JS-001 <sup>1</sup> ±2000		

- (1) JEDEC document JEP155 states that 500-V HBM allows safe manufacturing with a standard ESD control process.
- (2) JEDEC document JEP157 states that 250-V CDM allows safe manufacturing with a standard ESD control process.

### **6.3 Recommended Operating Conditions**

Over operating free-air temperature range (unless otherwise noted).

		MIN	MAX	UNIT
V <sub>VM</sub>	Supply voltage range for normal (DC) operation	4.5	55	V
V <sub>I</sub>	Logic level input voltage	0	5.5	V
V <sub>VCC</sub>	VCC pin voltage	3.05	5.5	V
V <sub>REF</sub>	Reference voltage (VREF)	0.05	3.3	V
$f_{STEP}$	Applied STEP signal (STEP)	0	100 (1)	kHz

Copyright © 2023 Texas Instruments Incorporated

Submit Document Feedback



## 6.3 Recommended Operating Conditions (continued)

Over operating free-air temperature range (unless otherwise noted).

		MIN	MAX	UNIT
I <sub>FS</sub>	Motor full-scale current with DDW package (xOUTx)	0	5 <sup>(2)</sup>	Α
I <sub>FS</sub>	Motor full-scale current with PWP package (xOUTx)	0	4 (2)	Α
I <sub>RMS</sub>	Motor RMS current with DDW package (xOUTx)	0	3.5 <sup>(2)</sup>	Α
I <sub>RMS</sub>	Motor RMS current with PWP package (xOUTx)	0	2.8 <sup>(2)</sup>	Α
T <sub>A</sub>	Operating ambient temperature	-40	125	°C
T <sub>J</sub>	Operating junction temperature	-40	150	°C

- 1. STEP input can operate up to 500 kHz, but system bandwidth is limited by the motor load.
- 2. Power dissipation and thermal limits must be observed.

#### **6.4 Thermal Information**

	THERMAL METRIC	DDW	PWP	UNIT
R <sub>θJA</sub>	Junction-to-ambient thermal resistance	22.5	24.5	°C/W
R <sub>0JC(top)</sub>	Junction-to-case (top) thermal resistance	9.8	13.5	°C/W
R <sub>θJB</sub>	Junction-to-board thermal resistance	5.9	5.2	°C/W
ΨЈТ	Junction-to-top characterization parameter	0.2	0.2	°C/W
ΨЈВ	Junction-to-board characterization parameter	5.8	5.1	°C/W
R <sub>0JC(bot)</sub>	Junction-to-case (bottom) thermal resistance	0.9	0.9	°C/W

#### 6.5 Electrical Characteristics

Typical values are at  $T_A$  = 25°C and  $V_{VM}$  = 24 V. All limits are over recommended operating conditions, unless otherwise noted.

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
POWER 9	SUPPLIES (VM, DVDD)					
	VM exercting cumply current	ENABLE = 1, nSLEEP = 1, No motor load, VCC = External 5V		5	8.5	A
I <sub>VM</sub>	VM operating supply current	ENABLE = 1, nSLEEP = 1, No motor load, VCC = DVDD		8		- mA
I <sub>VMQ</sub>	VM sleep mode supply current	nSLEEP = 0		3	8	μA
t <sub>SLEEP</sub>	Sleep time	nSLEEP = 0 to sleep-mode	120			μs
t <sub>RESET</sub>	nSLEEP reset pulse	nSLEEP low to clear fault	20		40	μs
t <sub>WAKE</sub> Wake-up time		H/W interface, nSLEEP = 1 to output transition		0.85	1.2	ms
	Wake-up time	SPI interface, nSLEEP = 1 to SPI ready		0.15	0.25	ms
t <sub>ON</sub>	Turn-on time <sup>(1)</sup>	VM > UVLO to output transition		1	1.3	ms
.,		No external load, 6 V < V <sub>VM</sub> < 55 V	4.75	5	5.25	V
$V_{DVDD}$	Internal regulator voltage	No external load, V <sub>VM</sub> = 4.5 V	4.35	4.45		V
CHARGE	PUMP (VCP, CPH, CPL)					
V <sub>VCP</sub>	VCP operating voltage	6 V < V <sub>VM</sub> < 55 V		V <sub>VM</sub> + 5		V
f VCP	Charge pump switching frequency	V <sub>VM</sub> > UVLO; nSLEEP = 1		357		kHz
f <sub>CLK</sub>	Internal digital clock frequency	V <sub>VM</sub> > UVLO; nSLEEP = 1		10		MHz

www.ti.com

Typical values are at  $T_A = 25$ °C and  $V_{VM} = 24$  V. All limits are over recommended operating conditions, unless otherwise noted.

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
LOGIC-LEV	EL INPUTS (STEP, DIR, MODE, D	ECAY1, nSCS, SCLK, SDI, nSLEEP)				
V <sub>IL</sub>	Input logic-low voltage		0		0.6	V
V <sub>IH</sub>	Input logic-high voltage (all pins except DECAY1)		1.5		5.5	V
V <sub>IH_DECAY1</sub>	Input logic-high voltage (DECAY1 pin)		2.7		5.5	V
$V_{HYS}$	Input logic hysteresis (all pins except nSLEEP)			100		mV
HYS_SLEEP	nSLEEP logic hysteresis			300		mV
IL	Input logic-low current (all pins except nSCS)	V <sub>IN</sub> = 0 V	-1		1	μA
IL_nSCS	nSCS logic-low current	nSCS = 0V	8		12	μΑ
IH	Input logic-high current (all pins except nSCS, 200k internal pull-down resistance)	V <sub>IN</sub> = DVDD			50	μА
IH_nSCS	nSCS logic-high current	nSCS = DVDD			0.1	μΑ
TRI-LEVEL	INPUTS (M0, DECAY0, ENABLE)					
V <sub>I1_tri</sub>	Input logic-low voltage	Tied to GND	0		0.6	V
V <sub>I2_tri</sub>	Input Hi-Z voltage	Hi-Z	1.8	2	2.2	V
V <sub>I3_tri</sub>	Input logic-high voltage	Tied to DVDD	2.7		5.5	V
I <sub>O_tri</sub>	Output pull-up current			10.5		μΑ
QUAD-LEVI	EL INPUTS (M1, TOFF)					
V <sub>I1_quad</sub>	Input logic-low voltage	Tied to GND	0		0.6	V
√ <sub>I2_quad</sub>	Input second level voltage	330kΩ ± 5% to GND	1	1.25	1.4	V
V <sub>I3_quad</sub>	Input Hi-Z voltage	Hi-Z	1.8	2	2.2	V
V <sub>I4_quad</sub>	Input logic-high voltage	Tied to DVDD	2.7		5.5	V
O_quad	Output pull-up current			10.5		μA
PUSH-PULL	OUTPUT (SDO)					
R <sub>PD,SDO</sub>	Internal pull-down resistance	5mA load, with respect to GND		30	70	Ω
R <sub>PU,SDO</sub>	Internal pull-up resistance	5mA load, with respect to VCC		60	110	Ω
SDO	SDO Leakage Current <sup>(1)</sup>	V <sub>VM</sub> > 6 V, SDO = VCC and 0V	-2.5		2.5	μΑ
CONTROL	OUTPUTS (nFAULT, nHOME)		I			
V <sub>OL</sub>	Output logic-low voltage	I <sub>O</sub> = 5 mA			0.35	V
Іон	Output logic-high leakage		-1		1	μΑ
MOTOR DR	IVER OUTPUTS (AOUT1, AOUT2,	BOUT1, BOUT2)			·	
		T <sub>J</sub> = 25 °C, I <sub>O</sub> = -5 A		53	60	mΩ
R <sub>DS(ONH,DD</sub> W)	High-side FET on resistance, DDW Package	T <sub>J</sub> = 125 °C, I <sub>O</sub> = -5 A		80	94	mΩ
/v)		T <sub>J</sub> = 150 °C, I <sub>O</sub> = -5 A		90	105	mΩ
		T <sub>J</sub> = 25 °C, I <sub>O</sub> = 5 A		53	60	mΩ
R <sub>DS(ONL,DD</sub>	Low-side FET on resistancec, DDW Package	T <sub>J</sub> = 125 °C, I <sub>O</sub> = 5 A		80	94	mΩ
W)	DDW Fackage	T <sub>J</sub> = 150 °C, I <sub>O</sub> = 5 A		90	105	mΩ



Typical values are at  $T_A$  = 25°C and  $V_{VM}$  = 24 V. All limits are over recommended operating conditions, unless otherwise noted.

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT	
		T <sub>J</sub> = 25 °C, I <sub>O</sub> = -4 A		57	68	mΩ	
R <sub>DS(ONH,PW</sub>	High-side FET on resistance, PWP Package	T <sub>J</sub> = 125 °C, I <sub>O</sub> = -4 A		76	100	mΩ	
-)		T <sub>J</sub> = 150 °C, I <sub>O</sub> = -4 A		86	112	mΩ	
		T <sub>J</sub> = 25 °C, I <sub>O</sub> = 4 A		60	72	mΩ	
RDS(ONL,PW	Low-side FET on resistance, PWP Package	T <sub>J</sub> = 125 °C, I <sub>O</sub> = 4 A		81	105	mΩ	
P)	T THE T GOING	T <sub>J</sub> = 150 °C, I <sub>O</sub> = 4 A		90	116	mΩ	
LEAK	Output leakage current to ground in Disable mode <sup>(1)</sup>	H-bridges are Hi-Z, V <sub>VM</sub> = 55 V			200	μΑ	
		H/W Interface, I <sub>O</sub> = 5 A, between 10% and 90%		140			
RF	Output rise/fall time	SPI Interface, SR = 0b, I <sub>O</sub> = 5 A, between 10% and 90%		140		ns	
		SPI Interface, SR = 1b, I <sub>O</sub> = 5 A, between 10% and 90%		70			
t <sub>D</sub>	Output dead time	VM = 24V, I <sub>O</sub> = 5 A		300		ns	
PWM CURR	ENT CONTROL (VREF)						
K <sub>V</sub>	Transimpedance gain	VREF = 3.3 V	0.625	0.66	0.695	V/A	
VREF	VREF Pin Leakage Current	VREF = 3.3 V			20	nA	
	PWM off-time	TOFF = 0 or TOFF = 00b		9			
055		TOFF = 1 or TOFF = 01b		19		μs	
OFF		TOFF = Hi-Z or TOFF = 10b		27			
		TOFF = $330k\Omega$ to GND or TOFF = 11b		35			
	Current trip accuracy, external VREF input	10% to 20% full-scale current	-12		12		
∆I <sub>TRIP_EXT</sub>		20% to 40% full-scale current	-7.5		7.5	%	
		40% to 100% full-scale current	-5		5		
		10% to 20% full-scale current	-12		12		
ΔI <sub>TRIP_INT</sub>	Current trip accuracy, internal VREF	20% to 40% full-scale current	-8		8	%	
	VIX.	40% to 100% full-scale current	-6		5		
O,CH	AOUT and BOUT current matching	100% full-scale current	-2.5		2.5	%	
		SPI interface, TBLANK_TIME = 00b		1			
t <sub>BLK</sub>	Current regulation blanking time	H/W interface or SPI interface, TBLANK_TIME = 01b		1.5		μs	
		SPI interface, TBLANK_TIME = 10b		2		'	
		SPI interface, TBLANK_TIME = 11b		2.5			
DEG	Current regulation deglitch time			0.5		μs	
PROTECTIO	ON CIRCUITS				1	ı	
	VM LIVI O lookout	VM falling	4.1	4.23	4.35	.,,	
$VM_{UVLO}$	VM UVLO lockout	VM rising	4.2	4.35	4.47	V	

www.ti.com

Typical values are at  $T_A = 25$ °C and  $V_{VM} = 24$  V. All limits are over recommended operating conditions, unless otherwise noted.

	PARAMETER	TEST CONDITIONS	MIN	TYP	TYP MAX		
VCC <sub>UVLO</sub> VCC UVLO lockout		VCC connected to external voltage, VCC falling	2.7	2.8	2.9	V	
VCCUVLO	VCC UVLO lockout	VCC connected to external voltage, VCC rising	2.75 2.92 3.05		3.05	V	
V <sub>UVLO,HYS</sub>	Undervoltage hysteresis	Rising to falling threshold		110		mV	
V <sub>RST</sub>	VM UVLO reset	VCC = DVDD, SPI Interface, VM falling, device reset, no SPI communications		3.4	V		
V <sub>CPUV</sub>	Charge pump undervoltage	VCP falling		V <sub>VM</sub> + 2		V	
I <sub>OCP</sub>	Overcurrent protection	Current through any FET	7.6			Α	
	Overcurrent detection delay	H/W Interface		2.2		μs	
t <sub>OCP</sub>		SPI Interface, TOCP = 0b		1.2			
		SPI Interface, TOCP = 1b		2.2			
t <sub>RETRY</sub>	Overcurrent retry time			4.1		ms	
		H/W Interface			60		
		SPI Interface, OL_T = 00b			30	- ms	
t <sub>OL</sub>	Open load detection time	SPI Interface, OL_T = 01b			60		
		SPI Interface, OL_T = 10b			120		
I <sub>OL</sub>	Open load current threshold			190		mA	
T <sub>OTW</sub>	Overtemperature warning	SPI Interface, Die temperature T <sub>J</sub>	135	150	165	°C	
T <sub>HYS_OTW</sub>	Overtemperature warning hysteresis	SPI Interface, Die temperature T <sub>J</sub>	T <sub>J</sub> 20			°C	
T <sub>OTSD</sub>	Thermal shutdown	Die temperature T <sub>J</sub>	150	165	180	°C	
T <sub>HYS_OTSD</sub>	Thermal shutdown hysteresis	Die temperature T <sub>J</sub>		20		°C	

## (1) Guaranteed by design


## **6.5.1 SPI Timing Requirements**

**SPI Timing Diagram** 

		MIN	NOM	MAX	UNIT
t <sub>READY</sub>	SPI ready, VM > V <sub>RST</sub>		1		ms
t <sub>SCLK</sub>	SCLK minimum period	100			ns
t <sub>SCLKH</sub>	SCLK minimum high time	50			ns
t <sub>SCLKL</sub>	SCLK minimum low time	50			ns
t <sub>SU_SDI</sub>	SDI input setup time	20			ns
t <sub>H_SDI</sub>	SDI input hold time	30			ns
t <sub>D_SDO</sub>	SDO output delay time, SCLK high to SDO valid, C <sub>L</sub> = 20 pF			30	ns
t <sub>SU_nSCS</sub>	nSCS input setup time	50			ns
t <sub>H_nSCS</sub>	nSCS input hold time	50			ns
t <sub>HI_nSCS</sub>	nSCS minimum high time before active low			2	μs
t <sub>DIS_nSCS</sub>	nSCS disable time, nSCS high to SDO high impedance		10		ns

Copyright © 2023 Texas Instruments Incorporated



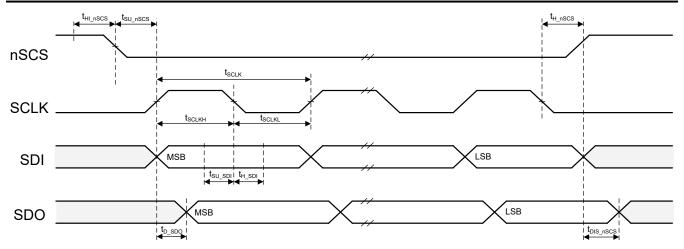

## 6.5.2 STEP and DIR Timing Requirements

Typical limits are at  $T_J$  = 25°C and  $V_{VM}$  = 24 V. Over recommended operating conditions unless otherwise noted.

NO.		, , , , , , , , , , , , , , , , , , ,	MIN	MAX	UNIT
1	$f_{STEP}$	Step frequency		500 <sup>(1)</sup>	kHz
2	t <sub>WH_STEP</sub>	Pulse duration, STEP high	970		ns
3	t <sub>WL_STEP</sub>	Pulse duration, STEP low	970		ns
4	t <sub>SU_DIR, Mx</sub>	Setup time, DIR or MODEx to STEP rising	200		ns
5	t <sub>H_DIR, Mx</sub>	Hold time, DIR or Mx to STEP rising	200		ns

(1) STEP input can operate up to 500 kHz, but system bandwidth is limited by the motor load.

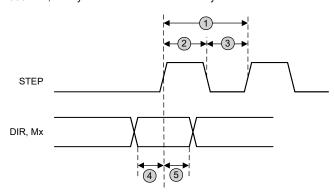


Figure 6-1. STEP and DIR Timing Diagram

## **6.6 Typical Characteristics**

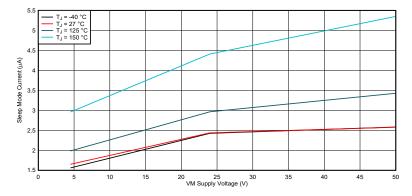


Figure 6-2. Sleep mode supply current

# **6.6 Typical Characteristics**

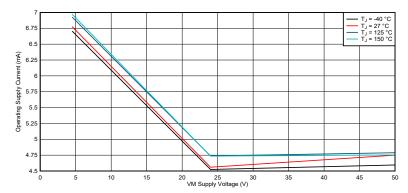


Figure 6-3. Operating supply current, VCC = External 5 V

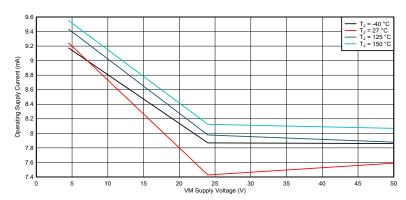


Figure 6-4. Operating supply current, VCC = DVDD

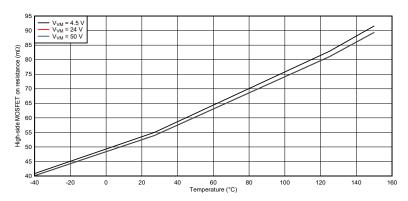


Figure 6-5. High-side FET on resistance, DDW Package



## **6.6 Typical Characteristics**

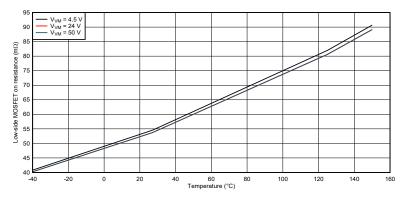


Figure 6-6. Low-side FET on resistance, DDW Package

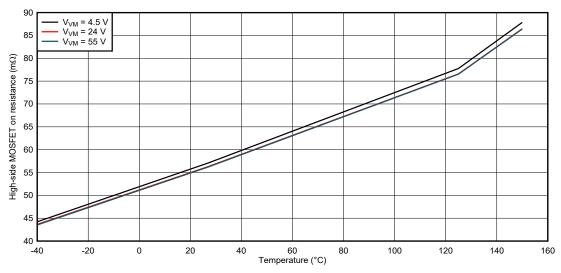


Figure 6-7. High-side FET on resistance, PWP Package

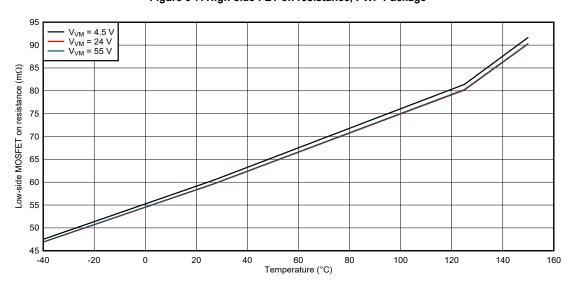


Figure 6-8. Low-side FET on resistance, PWP Package



## 7 Detailed Description

#### 7.1 Overview

The DRV8452 is an integrated motor-driver solution for bipolar stepper motors. The device integrates two N-channel power MOSFET H-bridges, current sense resistors, current regulation circuitry, and a microstepping indexer. The DRV8452 is capable of supporting wide supply voltage of 4.5 V to 55 V. The device is available in two packages - a 44-pin HTSSOP (DDW) package; and another 28-pin HTSSOP (PWP) package. The DDW package provides an output current up to 5-A full-scale, or 3.5-A root mean square (rms). The PWP package provides an output current up to 4-A full-scale, or 2.8-A root mean square (rms). The actual full-scale and rms current depends on the ambient temperature, supply voltage, and PCB thermal design. To provide scalable voltage and current solutions for the system design, the PWP package with SPI interface is pin-to-pin compatible with the DRV8434S. The PWP package with H/W interface is pin-to-pin compatible with the DRV8424, DRV8426 and DRV8434. The DDW package is pin-to-pin compatible with the DRV8461.

The DRV8452 integrates the auto-torque feature to reduce power loss and improve system efficiency by adjusting output current according to the load torque. The SPI interface provides various options to optimize the performance of the auto-torque algorithm for specific motor and system use case. The stall detection feature detects and reports a motor stall condition to the system controller when the motor is obstructed or has reached an end-of-travel stop. Additionally, the standstill power saving mode reduces power loss when the motor is at holding position.

The DRV8452 uses an integrated current-sense architecture which eliminates the need for two external power sense resistors, hence saving significant board space, BOM cost, design efforts and reduces significant power consumption. This architecture eliminates the power dissipated in the sense resistors by using a current mirror approach and using the internal power MOSFETs for current sensing. Optional external power sense resistors can also be connected between the PGND pins and board ground to monitor motor health and for implementing closed-loop algorithms such as Field Oriented Control. The current regulation set point is adjusted by the voltage at the VREF pin. For the SPI interface, an 8-bit register allows the controller to scale the output current without needing to scale the VREF voltage reference; and another 8-bit register allows configuration of the holding current level for the purpose of reducing power loss at motor standstill.

A STEP/DIR pin interface allows an external controller to manage the direction and step rate of the stepper motor. The internal microstepping indexer can execute high-accuracy micro-stepping without requiring the external controller to manage the winding current level. The indexer is capable of full step, half step, and 1/4,1/8, 1/16, 1/32, 1/64, 1/128, and 1/256 microstepping. High microstepping contributes to significant audible noise reduction and smooth motion. The automatic microstepping mode interpolates the input step frequency to high resolution, thereby improving current regulation and reducing audible noise while running with a low frequency step input from the controller. The custom microstepping table allows adjusting the current waveform to the needs of a particular motor.

Stepper motor drivers need to re-circulate the winding current by implementing several types of decay modes, such as slow decay, mixed decay and fast decay. The DRV8452 supports smart tune decay modes. The smart tune is an innovative decay mechanism that automatically adjusts for optimal current regulation performance agnostic of supply voltage and motor speed variations and aging effects. Smart tune Ripple Control uses a variable off-time ripple current control scheme to minimize distortion of the motor winding current. Smart tune Dynamic Decay uses a fixed off-time dynamic fast decay percentage scheme. Along with the smart tune decay modes, the DRV8452 also features a silent step decay mode for noiseless operation at standstill and low speeds of rotation.

The device integrates a spread spectrum clocking feature for both the internal digital oscillator and internal charge pump. This feature minimizes the electromagnetic emissions from the device. A low-power sleep mode is included which allows the system to save power when not actively driving the motor.



### 7.2 Functional Block Diagram

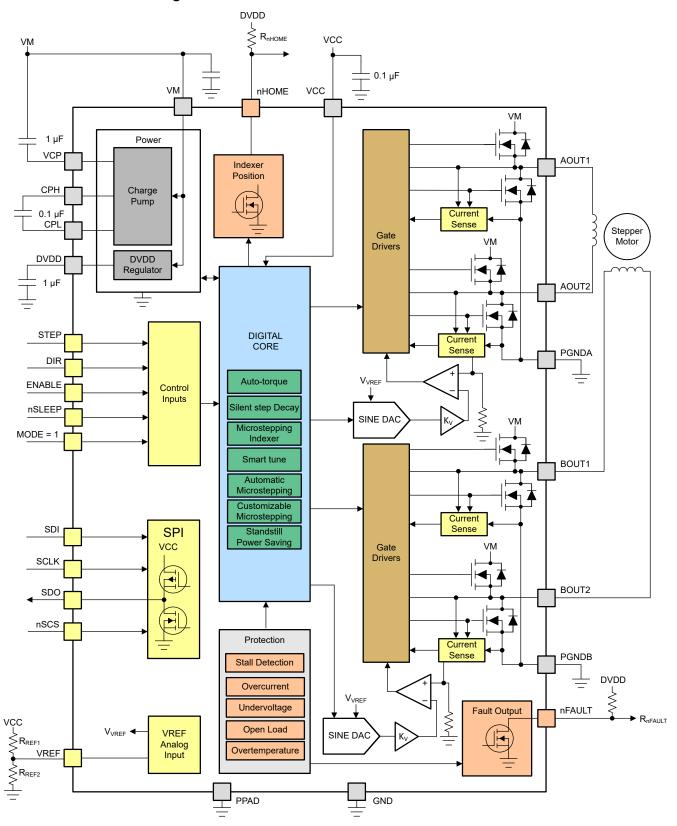


Figure 7-1. DRV8452 Block Diagram with SPI Interface

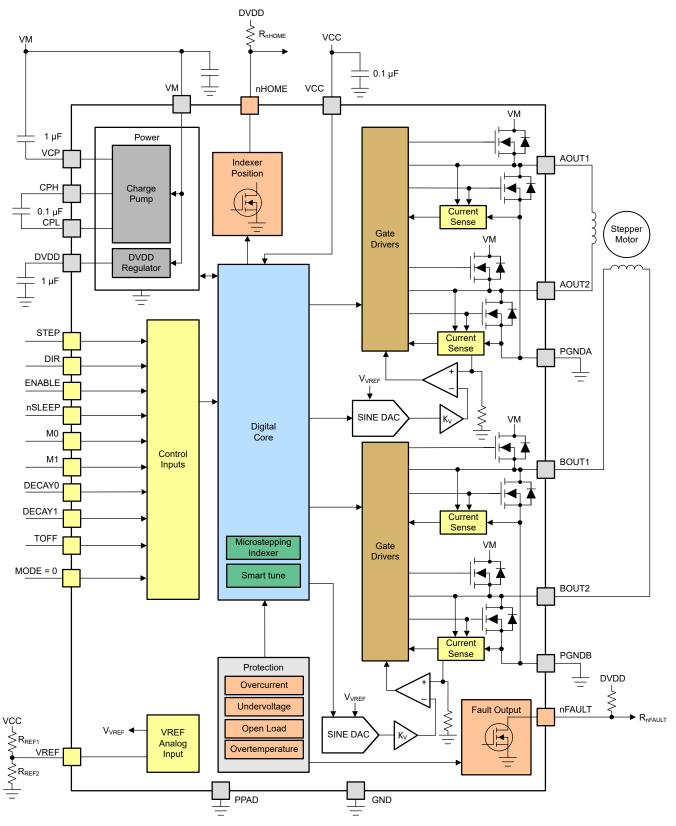


Figure 7-2. DRV8452 Block Diagram with H/W Interface



### 7.3 Feature Description

Table 7-1 lists the recommended external components for the DRV8452.

**Table 7-1. External Components** 

Table 1 ii External Components				
COMPONENT	PIN 1	PIN 2	RECOMMENDED	
C <sub>VM1</sub>	VM	PGNDA	X7R, 0.01-μF, VM-rated ceramic capacitors	
C <sub>VM2</sub>	VM	PGNDB	X7R, 0.01-μF, VM-rated ceramic capacitors	
C <sub>VM3</sub>	VM	PGNDA	Bulk, VM-rated capacitor	
C <sub>VCP</sub>	VCP	VM	X7R, 1-μF, 16-V ceramic capacitor	
C <sub>SW</sub>	СРН	CPL	X7R, 0.1-μF, VM-rated ceramic capacitor	
C <sub>DVDD</sub>	DVDD	GND	X7R, 1-μF, 6.3-V ceramic capacitor	
C <sub>VCC</sub>	VCC	GND	X7R, 0.1-μF, 6.3-V ceramic capacitor	
R <sub>nFAULT</sub>	DVDD or VCC	nFAULT	10-kΩ resistor	
R <sub>nHOME</sub> (only for DDW)	DVDD or VCC	nHOME	10-kΩ resistor	
R <sub>REF1</sub>	VREF	DVDD or VCC	Resistor to set chopping current. Not required if VREF_INT_EN = 1b.	
R <sub>REF2</sub>	VREF	GND	Thesistor to set Gropping current. Not required if VNEF_INT_EN = 1b.	

#### 7.3.1 Interface of Operation

The DRV8452 can operate with hardware (H/W) pin interface or SPI interface. When operating with SPI interface, the device supports additional features and detailed diagnostics, as shown in Table 7-4.

For the DDW package option, the logic-level MODE pin latches the operating interface information at power up or after nSLEEP cycling -

- If the MODE pin is grounded at this time, the device operates with H/W pin interface.
- If the MODE pin is logic high at this time, the device operates with SPI interface.

#### **Note**

Do not change MODE pin logic level on the fly after power up or after nSLEEP = 1.

The functionality of five pins depend on the interface of operation, as shown in Table 7-2 and Table 7-3 -

Table 7-2. Pin function, DDW package

Pin Number	H/W interface	SPI Interface
34	MO	nSCS
35	TOFF	Reserved
36	DECAY1	SDO
37	DECAY0	SDI
38	M1	SCLK

Table 7-3. Pin function, PWP package

Pin Number	DRV8452SPWPR (SPI Interface)	DRV8452PWPR (H/W Interface)
18	nSCS	MO
19	VCC	TOFF
20	SDO	DECAY1

Table 7-3. Pin function, PWP package (continued)

Pin Number	DRV8452SPWPR (SPI Interface)	DRV8452PWPR (H/W Interface)
21	SDI	DECAY0
22	SCLK	M1

Table 7-4 compares the feature set and diagnostic features for the two operating interfaces -

#### **Table 7-4. Feature Set Difference**

Feature	H/W interface	SPI interface
Smart tune	Yes	Yes
Up to 1/256 microstepping	Yes	Yes
VCC logic supply	Yes	Yes
nHOME output	Yes	Yes
nFAULT output	Yes	Yes
Automatic microstepping	No	Yes
Customizable microstepping	No	Yes
Indexer output	No	Yes
Internal 3.3V reference voltage	No	Yes
Dual STEP active edge	No	Yes
Silent step decay	No	Yes
Auto-torque	No	Yes
Standstill power saving	No	Yes
Spread spectrum	No	Yes
	Protection features	
VM and VCP UVLO	Yes	Yes
VCC Power on Reset	Yes	Yes
Overcurrent Protection	Yes	Yes
Open-load detection	Yes	Yes
Thermal shutdown	Yes	Yes
Stall detection	No	Yes
Overtemperature warning	No	Yes

#### 7.3.2 Stepper Motor Driver Current Ratings

Stepper motor drivers can be classified using three different numbers to describe the output current: peak, RMS, and full-scale.

### 7.3.2.1 Peak Current Rating

The peak current in a stepper driver is limited by the overcurrent protection trip threshold  $I_{OCP}$ . In general the minimum value of  $I_{OCP}$  specifies the peak current rating of the stepper motor driver. For the DRV8452, the peak current rating is 7.6 A per bridge.

#### 7.3.2.2 RMS Current Rating

The RMS current is determined by the thermal considerations of the IC. The RMS current is calculated based on the R<sub>DS(ON)</sub>, rise and fall time, PWM frequency, device quiescent current, and package thermal performance in a

typical system at 25°C. The actual operating RMS current may be higher or lower depending on heatsinking and ambient temperature. For the DRV8452 in DDW package, the RMS current rating is 3.5 A per bridge. For the PWP package, the RMS current rating is 2.8 A per bridge.

#### 7.3.2.3 Full-Scale Current Rating

The full-scale current describes the top of the sinusoid current waveform while microstepping. Because the sinusoid amplitude is related to the RMS current, the full-scale current is also determined by the thermal considerations of the device. The full-scale current rating is approximately  $\sqrt{2} \times I_{RMS}$  for a sinusoidal current waveform, and I<sub>RMS</sub> for a square wave current waveform (full step).

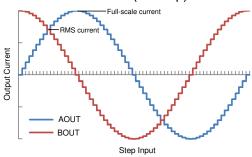


Figure 7-3. Full-Scale and RMS Current

#### 7.3.3 PWM Motor Drivers

The DRV8452 has drivers for two full H-bridges to drive the two windings of a bipolar stepper motor. Figure 7-4 shows the block diagram of the circuitry.

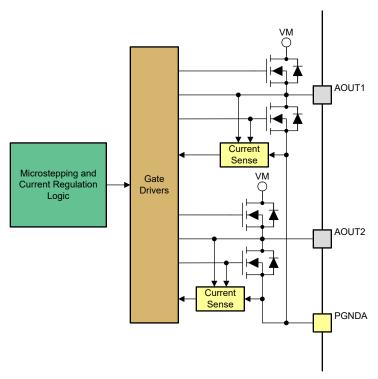


Figure 7-4. PWM Motor Driver Block Diagram

### 7.3.4 Microstepping Indexer

Built-in indexer logic in the device allows a number of different step modes. The MICROSTEP MODE bits in the SPI register or the M0 and M1 pins are used to configure the step mode as shown in Table 7-5.

**Table 7-5. Microstepping Indexer Settings** 

MODE = 1	MODE = 0		
MICROSTEP_MODE	МО	M1	STEP MODE
0000b	0	0	Full step (2-phase excitation) with 100% current
0001b	0	330 kΩ to GND	Full step (2-phase excitation) with 71% current
0010b	1	0	Non-circular 1/2 step
0011b	Hi-Z	0	1/2 step
0100b	0	1	1/4 step
0101b	1	1	1/8 step
0110b	Hi-Z	1	1/16 step
0111b	0	Hi-Z	1/32 step
1000b	Hi-Z	330kΩ to GND	1/64 step
1001b	Hi-Z	Hi-Z	1/128 step
1010b	1	Hi-Z	1/256 step

When operating with SPI interface, the device allows stepping and direction change over SPI interface as well, as shown in Table 7-6. Four bits are dedicated for this purpose -

Table 7-6. STEP and DIR control over SPI

Bit	0b (default)	1b				
SPI_DIR	Driver changes direction based on DIR pin inputs	Direction changes depend on the DIR bit				
SPI_STEP	Stepping depends on the STEP pin inputs	Step changes depend on the STEP bit				
DIR	Motor moves in the reverse direction	Motor moves in the forward direction				
STEP	×	Indexer advances by one step. STEP bit is self-clearing, becomes '0' after writing '1' to it.				

Table 7-7 shows the relative current and step directions for full-step (71% current), 1/2 step, 1/4 step and 1/8 step operation for the case when DIR pin is logic high or DIR bit is '1'. Higher microstepping resolutions follow the same pattern. The AOUT current is the sine of the electrical angle and the BOUT current is the cosine of the electrical angle. Positive current is defined as current flowing from the xOUT1 pin to the xOUT2 pin while driving.

Table 7-7. Relative Current and Step Directions

1/8 STEP	1/4 STEP	1/2 STEP	FULL STEP 71%	AOUT CURRENT (% FULL-SCALE)	BOUT CURRENT (% FULL-SCALE)	ELECTRICAL ANGLE (DEGREES)
1	1	1		0%	100%	0.00
2				20%	98%	11.25
3	2			38%	92%	22.50
4				56%	83%	33.75
5	3	2	1	71%	71%	45.00
6				83%	56%	56.25
7	4			92%	38%	67.50
8				98%	20%	78.75
9	5	3		100%	0%	90.00
10				98%	-20%	101.25

Copyright © 2023 Texas Instruments Incorporated

Submit Document Feedback



**Table 7-7. Relative Current and Step Directions (continued)** 

		ши стор эт сошеть (сетинасы)				
1/8 STEP	1/4 STEP	1/2 STEP	FULL STEP 71%	AOUT CURRENT (% FULL-SCALE)	BOUT CURRENT (% FULL-SCALE)	ELECTRICAL ANGLE (DEGREES)
11	6			92%	-38%	112.50
12				83%	-56%	123.75
13	7	4	2	71%	-71%	135.00
14				56%	-83%	146.25
15	8			38%	-92%	157.50
16				20%	-98%	168.75
17	9	5		0%	-100%	180.00
18				-20%	-98%	191.25
19	10			-38%	-92%	202.50
20				-56%	-83%	213.75
21	11	6	3	-71%	-71%	225.00
22				-83%	-56%	236.25
23	12			-92%	-38%	247.50
24				-98%	-20%	258.75
25	13	7		-100%	0%	270.00
26				-98%	20%	281.25
27	14			-92%	38%	292.50
28				-83%	56%	303.75
29	15	8	4	-71%	71%	315.00
30				-56%	83%	326.25
31	16			-38%	92%	337.50
32				-20%	98%	348.75

Table 7-8 shows the full step operation with 100% full-scale current for the DIR = 1 case. This stepping mode consumes more power than full-step mode with 71% current, but provides a higher torque at high motor RPM.

Table 7-8. Full Step with 100% Current

FILL STED 100%	AOUT CURRENT (% FULL-SCALE)	BOUT CURRENT (% FULL-SCALE)	ELECTRICAL ANGLE (DEGREES)
1	100	100	45
2	100	-100	135
3	-100	-100	225
4	-100	100	315

Table 7-9 shows the noncircular 1/2–step operation for the DIR = 1 case. This stepping mode consumes more power than circular 1/2-step operation, but provides a higher torque at high motor RPM.

Table 7-9. Non-Circular 1/2-Stepping Current

NON-CIRCULAR 1/2-STEP	AOUT CURRENT (% FULL-SCALE)	BOUT CURRENT (% FULL-SCALE)	ELECTRICAL ANGLE (DEGREES)
1	0	100	0
2	100	100	45
3	100	0	90
4	100	-100	135
5	0	-100	180
6	-100	-100	225
7	-100	0	270

Table 7-9. Non-Circular 1/2-Stepping Current (continued)

			ELECTRICAL ANGLE (DEGREES)
8	-100	100	315

When operating with the SPI interface, depending on the STEP\_EDGE bit, STEP active edge can be either rising edge or both rising and falling edge, as shown in Table 7-10. When configured with H/W interface, the STEP active edge is only the rising edge. For applications that need to run at high input STEP rate, configuring both edges as active edge reduces controller overhead by half, because the input STEP rate is effectively doubled.

Table 7-10. STEP Active Edge

Interface	STEP_EDGE	STEP Active Edge
SPI	0b (default)	Rising edge
GF1	1b	Rising edge and falling edge
H/W	X	Rising edge

At each active edge of the STEP input the indexer advances to the next state in the table. The direction shown is with the DIR pin logic high. If the DIR pin is logic low, the sequence table is reversed. If the step mode is changed dynamically while stepping, the indexer advances to the next valid state for the new step mode setting at the active edge of STEP.

After power-up, after exiting logic undervoltage lockout, or after exiting sleep mode, the indexer moves to an initial excitation state (home position) of 45° electrical angle, corresponding to 71% of full-scale current in both coils. All the registers are restored to their deafult values in such scenario.

When operating with the SPI interface, if the IDX\_RST bit is 1b, it resets the indexer to 45° electrical angle as shown in Figure 7-5, but the contents of the memory map registers do not change.

Traces from top to bottom: AOUT2, AOUT1, STEP, coil B current, coil A current, nSCS

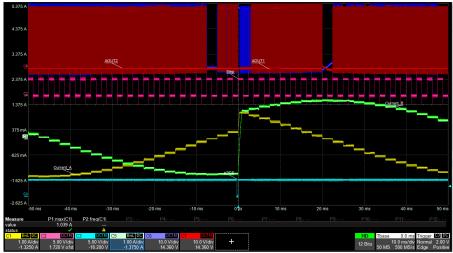


Figure 7-5. Indexer reset

If the STEP input frequency is jittery, the device filters the signal for the purpose of stall detection. The FRQ\_CHG and STEP\_FRQ\_TOL bits program the filter setting, as shown in Table 7-11. 2% filtering means up to 2% jitter around the center frequency will be filtered out to generate a clean STEP signal for internal circuits to detect motor stall.

Copyright © 2023 Texas Instruments Incorporated

Submit Document Feedback



Table 7-11. STEP frequency filtering

FRQ_CHG	STEP_FRQ_TOL	Filtering
	00b	1%
Ob (default)	01b (default)	2%
0b (default)	10b	4%
	11b	6%
1b	X	No filtering

#### 7.3.5 Indexer Output

The DRV8452 features the INDEX registers to indicate the expected microstep current and position of the motor to the user.

- CUR A POS register and CUR A SIGN bit indicate the position of coil A current in the indexer table.
- CUR B POS register and CUR B SIGN bit indicate the position of coil B current in the indexer table.
- CUR A register indicates the value of expected coil A current, which is sin (90° x CUR A POS / 255).
- Current will be positive if the corresponding sign bit is 1b and negative if the sign bit is 0b.

Table 7-12 shows the outputs of the CUR\_A\_POS and CUR\_B\_POS registers for a current waveform corresponding to 1/256 microstepping.

**Table 7-12. Indexer Output Table** 

Current Quadrant	CUR_A_POS	CUR_A_SIGN	CUR_B	CUR_B_SIGN
First (0° -> 90°)	0 -> 255	1b	255 -> 0	1b
Second (90° -> 180°)	255 -> 0	1b	0 -> 255	0b
Third (180° -> 270°)	0 -> 255	0b	255 -> 0	0b
Fourth (270° -> 360°)	255 -> 0	0b	0 -> 255	1b

The Indexer outputs together with the nHOME signal allow determination of the motor position within the electrical wave. They can be compared with an encoder output to detect discrepancies in the movement of the motor - such as detecting step loss.

#### 7.3.5.1 nHOME Output

For the DDW package, when the microstepping indexer reaches the home position (electrical angle of 45°), corresponding to 71% of full-scale current in both coils, the open-drain nHOME output is pulled low. At all other times, the nHOME output will be pulled high. When the device operates with SPI interface, additionally the NHOME bit in SPI register becomes 0b when the indexer reaches home position.

Therefore, the nHOME output gives one low pulse per electrical rotation, i.e. one pulse per each four fullsteps, as shown in Figure 7-6. The nHOME low pulse thus corresponds to a defined position of the motor for every four fullsteps. A more precise homing of the motor can be achieved by combining nHOME with a mechanical home switch.

Pull up the nHOME to a 5-V, 3.3-V or 1.8-V supply using a pull-up resistor. For a 5-V pullup, the nHOME pin can be tied to the DVDD pin with a resistor. For a 3.3-V or 1.8-V pullup, an external supply must be used.

Traces from top to bottom: BOUT2, BOUT1, coil B current, coil A current, nHOME

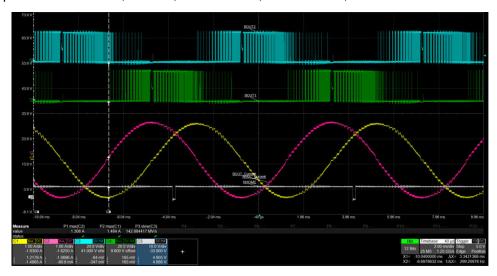


Figure 7-6. nHOME Output Waveform

#### 7.3.6 Automatic Microstepping Mode

When the DRV8452 is operating with SPI interface, automatic microstepping mode interpolates the input step pulses to generate a current waveform corresponding to higher resolution microstep. This results in smooth sinusoidal current and noiseless operation at any step frequency.

- If automatic microstepping is disabled, the system controller will be forced to output high frequency STEP signals to generate high resolution microstepping current waveforms.
- With automatic microstepping enabled, smooth current waveform can be generated by low frequency STEP signals.
  - This drastically reduces controller overhead and is beneficial for applications such as 3D printer, factory automation and medical.
- It should be ensured that the interpolated frequency does not fall in the resonant frequency band of the stepper motor.

The EN\_AUTO bit should be 1b to enable the automatic microstepping mode.

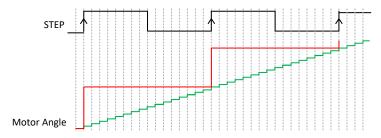


Figure 7-7. Automatic Microstepping Interpolation

Figure 7-7 shows increment in motor angle with and without automatic microstepping. Without automatic microstepping (red plot), the motor angle increments by a large amount on every step input active edge. Automatic microstepping (green plot) results in a much smoother change in motor angle.

The DRV8452 supports interpolation to 1/32, 1/64, 1/128 or 1/256 microstepping levels, configured by the RES\_AUTO bits as shown in Table 7-13. Interpolation setting can be changed on the fly.

Product Folder Links: DRV8452

Copyright © 2023 Texas Instruments Incorporated

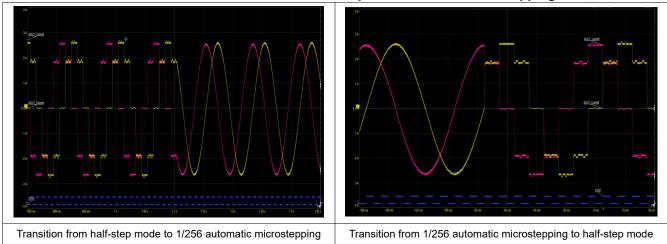


Table 7-13. Automatic Microstepping Interpolation Level

RES_AUTO	Interpolation
00b (default)	1/256
01b	1/128
10b	1/64
11b	1/32

Table 7-14 show both coil currents and the smooth transition between half-step mode and automatic microstepping mode by writing 1b and 0b respectively to the EN\_AUTO bit. Notice that the step frequency is same in both half-step and 1/256 automatic microstepping modes.

Table 7-14. Transition between half-step and automatic microstepping



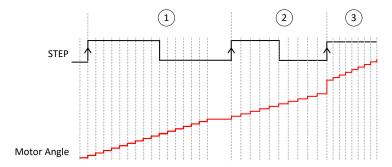


Figure 7-8. Automatic Microstepping with Changing STEP Frequency

As shown in Figure 7-8, the interpolation is done based on the time between the two previous step pulses. The previous interval time is interpolated to equal divisions, depending on the RES AUTO bit setting.

When input step frequency reduces from previous interval (shown in segment '1'), the motor holds its position till the next STEP active edge occurs. Device will go to standstill power saving mode if the EN STSL bit is 1b, and the next active edge does not come before t<sub>STSL\_DLY</sub> expires. Standstill power saving mode is exited on the next STEP active edge.

When step frequency increases from previous interval (shown in segment '2'), the motor angle smoothly autocorrects when the next STEP active edge comes, and the indexer moves to a position corresponding to the STEP input. In segment '3', the motor angle is incremented at a faster rate, corresponding to the step frequency of segment '2'.

#### Note

- The frequency of the STEP input in automatic microstepping mode should be between 10 Hz and 300 kHz.
- To realize automatic microstepping for lower than 10 Hz full step equivalent step frequency, use a higher resolution microstepping setting before enabling automatic microstepping.
  - For example, 1 Hz step frequency in full step mode corresponds to 16 Hz step frequency in 1/16 microstepping mode. So, if one wants to use automatic microstepping for a full step 1 Hz step input, MICROSTEP\_MODE can be set to 0110b (1/16 microstep), and use RES\_AUTO bits for desired interpolation level.

#### 7.3.7 Custom Microstepping Table

The performance and audible noise of any stepper motor system depends on the torque ripple generated by both the motor and the load. The torque ripple is defined by the variation in torque at each microstep. For most stepper motors, the standard sinusoidal microstep indexer is sufficient to achieve acceptable torque ripple and a good performance.

However, for some motor and load torque combinations, altering the current profile can reduce torque ripple, resulting in lower vibration and audible noise. When properly programmed, the customized current waveform ensures equally distanced microstep positions with constant torque and therefore also the best positional accuracy.

For example, in case of permanent magnet motors, variations in torque are more prominent due to larger step angle (3.6° to 18°) than that of hybrid motors (0.9° or 1.8°). Due to fewer number of stator teeths, less amount of flux interacts between the stator teeth and the rotor when the rotor is in between two stator teeths. If the current level is increased at these intermediate positions, the torque ripple will be lower compared to the default sinusoidal indexer.

The DRV8452 features a lookup table for tailoring the microstepping current profile to suit the requirements of a specific motor. The modified current profile is used in place of the default sinusoidal profile by writing '1' to the EN\_CUSTOM bit. The frequency of the STEP input in custom microstepping mode should not exceed 300 kHz. The details of the interpolation process is described below -

- The user should program the current (% of TRQ\_DAC) corresponding to the first quadrant of coil A current in a 1/8 microstepping setting.
- These current values are stored in CUSTOM CURRENT1 to CUSTOM CURRENT8 registers.
- The position for these current values correspond to 11.25°, 22.5°, 33.75°, 45°, 56.25°, 67.5°, 78.75° and 90° electrical angles.
- The current value for 0° position is assumed to be zero.
- The nine current values (including 0% full-scale current) are interpolated to a total of 256 points using a piecewise-linear approach to build the complete current waveform. The interpolated waveform always corresponds to 1/256 microstep, irrespective of the programmed microstepping mode.
- The values for the first quadrant are then mirrored and repeated for the other three quadrants of coil A and again for the four quadrants of coil B current to construct the complete current waveform.

Table 7-15 shows an example of the user inputs.

**Table 7-15. Custom Microstepping Table Values** 

Position (degrees)	Sine Indexer Value	Modified Value (CUSTOM_CURRENTx)
0	0	0
11.25	49.7	24
22.5	97.6	56
33.75	141.7	96
45	180.3	152



Position (degrees)	Sine Indexer Value	Modified Value (CUSTOM_CURRENTx)
56.25	212	192
67.5	235.6	224
78.75	250.1	240
90	255	255

Figure 7-9 shows the corresponding modified current waveform of coil A for one full electrical angle, compared to waveform generated by sine indexer.

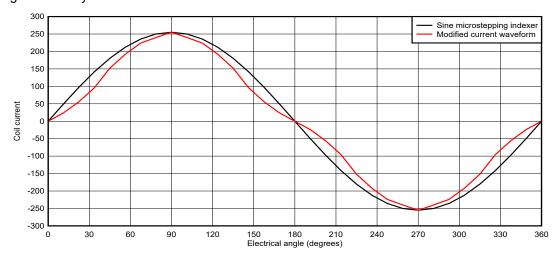


Figure 7-9. Customizable Microstepping

## 7.3.8 Current Regulation

The current through the motor windings is regulated by a PWM current-regulation circuit. When an H-bridge is enabled, current rises through the winding at a rate dependent on the supply voltage, inductance of the winding, and the magnitude of the back EMF present. When the current hits the current regulation threshold, the bridge enters a decay mode for the OFF time to decrease the current, as shown in Figure 7-10. After the off-time expires, the bridge is re-enabled, starting another PWM cycle.

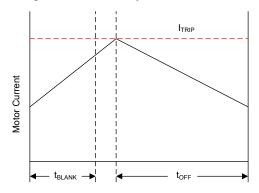


Figure 7-10. Current Chopping Waveform

The PWM regulation current is set by a comparator which monitors the voltage across the current sense MOSFETs in parallel with the low-side power MOSFETs. When the device is configured with H/W interface, the current sense MOSFETs are biased with a reference current that is the output of a current-mode sine-weighted DAC whose full-scale reference current is set by the voltage at the VREF pin. When operating with SPI interface, two registers (TRQ\_DAC and ISTSL) can further scale the reference current.

Use Equation 1 to calculate the full-scale regulation current for H/W interface.

$$I_{FS}(A) = VREF(V) / K_V(V/A)$$
(1)

For the SPI interface, the 8-bit TRQ\_DAC register further scales the full-scale current as shown in Equation 1. See Table 7-16 for TRQ\_DAC settings.

$$I_{FS}(A) = VREF(V) \times TRQ_DAC / K_V(V/A)$$
(2)

Table 7-16. TRQ DAC Settings

14.5.0 : 10. 11.4 <u>_</u>				
CURRENT SCALAR				
100%				
99.61%				
99.22%				
98.83%				
0.39%				

Another 8-bit register ISTSL programs the holding current (I<sub>HOLD</sub>) when STEP pulses are not applied and the motor is being held at same position. Transitioning to a lower value of holding current reduces motor and driver power loss. See Section 7.3.9 for details.

$$I_{HOID}(A) = VREF(V) \times ISTSL/K_V(V/A)$$
(3)

**Table 7-17. ISTSL Settings** 

ISTSL	Holding Current Value			
11111111b	100%			
11111110b	99.61%			
11111101b	99.22%			
11111110b	98.83%			
10000000b (default)	50.39%			
0000000b	0.39%			

#### 7.3.8.1 Internal Reference Voltage

When operating with the SPI interface, the DRV8452 supports an internal 3.3V reference voltage. This internal reference can be enabled by writing 1b to the VREF\_INT\_EN bit. The voltage on the VREF pin will be ignored in that case, and the VREF pin can be left open or connected to ground.

The full-scale current and the holding current will be calculated as shown in Equation 4 and Equation 4 -

$$I_{FS}(A) = 3.3 \text{ V x TRQ\_DAC / } K_V(V/A)$$
 (4)

$$I_{HOLD}(A) = 3.3 \text{ V x ISTSL} / K_V(V/A)$$
(5)

Using the internal 3.3V as reference will save BOM cost by eliminating the two resistors connected to the VREF pin.

Figure 7-11 shows current regulation with VREF\_INT\_EN = 1b and 5 A full-scale current.

Traces from top to bottom: AOUT2, coil A current, AOUT1

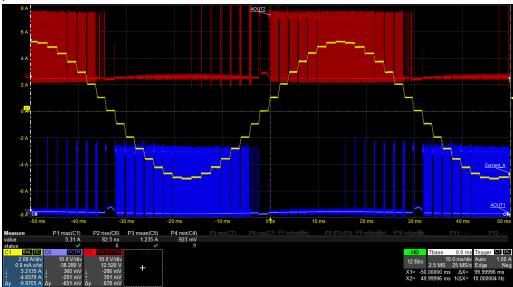


Figure 7-11. Current regulation with internal reference voltage

#### 7.3.9 Standstill Power Saving Mode

When the controller is not sending any step pulses and the motor is holding the same position, the DRV8452 can be configured to operate in the standstill power saving mode. When this mode is enabled by writing 1b to the EN\_STSL bit, the power dissipation of the system can be reduced by lowering the coil current from run current to holding current.

After the last STEP pulse, the device waits for an amount of time programmed by the TSTSL\_DLY register, after which the coil currents are ramped down from run current to holding current over a time period programmed by the TSTSL\_FALL register, as shown in Figure 7-12. The STSL flag goes up to indicate that the device is in standstill power saving mode. Once the next STEP pulse is detected, the coil current immediately ramps up to run current. The available options for TSTSL\_FALL and TSTSL\_DLY are shown in Table 7-18.

The run current is programmed by the TRQ\_DAC register and the holding current is programmed by the ISTSL register, as shown in Section 7.3.8.



Figure 7-12. Standstill Power Saving Mode

Table 7-18. Standstill fall time and delay time

Parameter	Description				
1 drameter	•				
TSTSL_FALL[3:0]	Controls the time taken by the current to reduce from TRQ_DAC to ISTSL after TSTSL_DLY time has elapsed. For each TSTSL_FALL, TRQ_DAC will fall by 1b til the current reaches ISTSL. Total fall time = (TRQ_DAC - ISTSL) * fall time for each current step.				
	• 0000b: fall time = 0				
	0001b: fall time for each current step = 1 ms				
	·				
	0100b: fall time for each current step = 4 ms (default)				
	•				
	1111b: fall time for each current step = 15 ms				
TSTSL_DLY[5:0]	Controls the delay between last STEP pulse and activation of standstill power saving mode.				
	000000b: Reserved				
	• 000001b: Delay = 1 x 16 ms = 16 ms				
	•				
	• 000100b: Delay = 4 x 16 ms = 64 ms (default)				
	·				
	• 111111b: Delay = 63 x 16 ms = 1.008 s				

#### Note

- If ISTSL has to be changed while the device is in standstill power saving mode, first cycle the EN STSL bit from 1b to 0b and then back to 1b.
- While auto-torque is disabled:
  - I<sub>HOLD</sub> = ISTSL if ISTSL < TRQ DAC
  - I<sub>HOLD</sub> = TRQ DAC if ISTSL > TRQ DAC
- While auto-torque is enabled:
  - I<sub>HOLD</sub> = ISTSL if ISTSL < TRQ DAC
  - I<sub>HOLD</sub> = ATQ TRQ DAC if ISTSL > ATQ TRQ DAC
  - Best practice will be to program ISTSL to a value lower than ATQ TRQ MIN

#### 7.3.10 Current Regulation Decay Modes

Copyright © 2023 Texas Instruments Incorporated

During PWM current chopping, the H-bridge is enabled to drive through the motor winding until the chopping current threshold is reached. This is shown in Figure 7-13, Item 1.

Once the chopping current threshold is reached, the H-bridge can operate in two different states, fast decay or slow decay.

- In fast decay mode, as soon as the PWM chopping current level is reached, the H-bridge reverses state by switching on the opposite arm MOSFETs to allow the winding current to flow in the opposite direction. As the winding current approaches zero, the H-bridge is disabled to prevent further reverse current flow. Fast decay mode is shown in Figure 7-13, item 2.
- In slow decay mode, the winding current is re-circulated by enabling both low-side MOSFETs in the H-bridge. This is shown in Figure 7-13, Item 3.



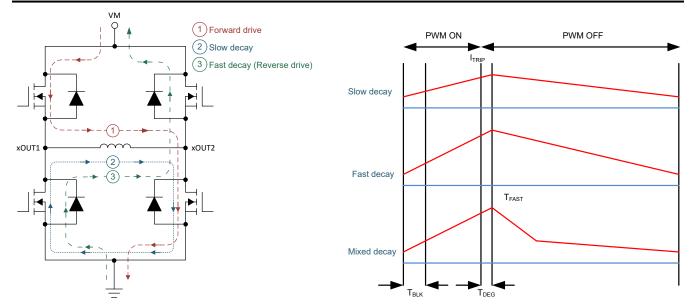


Figure 7-13. Decay Modes

The decay mode is selected by the DECAY register or the DECAY0 and DECAY1 pins, as shown in Table 7-19. The decay modes can be changed on the fly.

**Table 7-19. Decay Mode Settings** 


SPI Interface	H/W Interface		DECAY MODE
DECAY	DECAY0	DECAY1	DECAT MODE
000b	Hi-Z	1	Slow decay
100b	1	0	Mixed decay: 30% fast
101b	Hi-Z	0	Mixed decay: 60% fast
110b	0	0	Smart tune Dynamic Decay
111b (default)	0	1	Smart tune Ripple Control

#### Note

The remaining settings of DECAY bit (001b, 010b, 011b) and the (DECAY0 = 1, DECAY1 = 1) setting are reserved.

The DRV8452 also features the silent step decay mode for ultra-silent operation at low speed and standstill. See Section 7.3.12 for details.



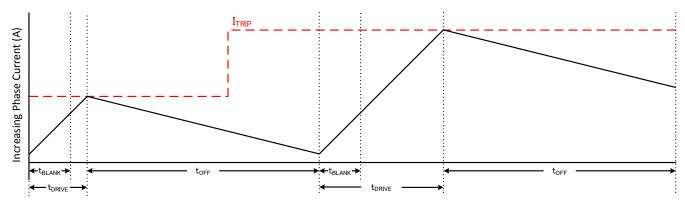

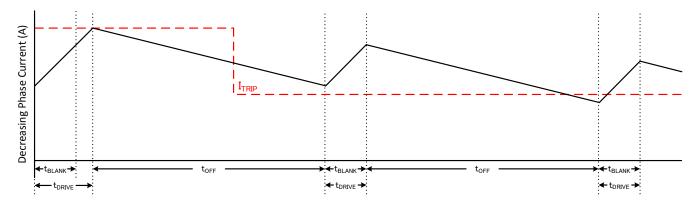


Figure 7-14. Slow Decay Mode

During slow decay, both the low-side FETs of the H-bridge are turned on, allowing the current to be recirculated. Here are the points to consider when selecting slow decay mode -

- Slow decay exhibits the least current ripple of the decay modes for a given t<sub>OFF</sub>.
- However on decreasing current steps, slow decay will take a long time to settle to the new I<sub>TRIP</sub> level because
  the current decreases very slowly.
  - If the current at the end of the off time is above the I<sub>TRIP</sub> level, slow decay will be extended for another off time duration and so on, till the current at the end of the off time is below I<sub>TRIP</sub> level.
- In cases where current is held at the same level for a long time (no STEP input), or the target regulation
  current level is low, or at very low stepping speeds, slow decay may not properly regulate current because
  the back-EMF across the motor windings may be very small to discharge the current during the off time. In
  this state, motor current can rise very quickly, and may require a large off time. In some cases this may cause
  a loss of current regulation, and a more aggressive decay mode is recommended.

Copyright © 2023 Texas Instruments Incorporated

Submit Document Feedback



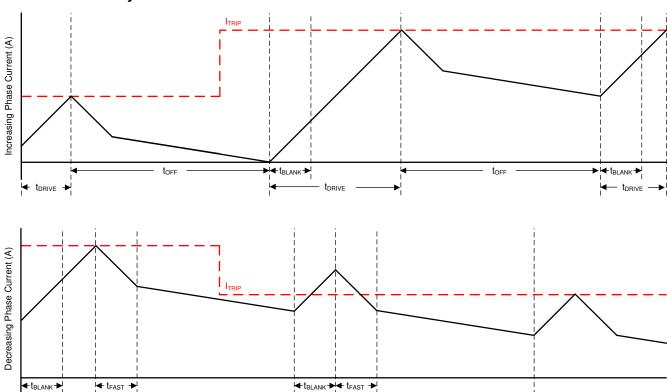


Figure 7-15. Mixed Decay Mode

◆ t<sub>DRIVE</sub> → !
◆

Mixed decay begins as fast decay for a fixed initial duration of the t<sub>OFF</sub> time (30% or 60%), followed by slow decay for the remainder of toef time. Following points should be considered when selecting mixed decay mode -

- This mode exhibits ripple larger than slow decay.
- On decreasing current steps, mixed decay settles to the new I<sub>TRIP</sub> level faster than slow decay.
- In cases where current is held at the same level for a long time (no STEP input), or at very low stepping speeds, mixed decay allows the current to stay in regulation when no back-EMF is present across the motor windings.
- Fixed 30% or 60% mixed decay schemes can result in repeated patterns in current regulation that fall in the audible frequency range, resulting in a noisy motor operation.

### 7.3.10.3 Smart tune Dynamic Decay

The smart tunes are advanced current regulation schemes compared to traditional mixed decay modes. Smart tune helps the stepper motor driver adjust the decay scheme based on changes in operating factors such as:

- Motor winding resistance and inductance
- Motor aging
- Motor dynamic speed and load
- Motor supply voltage variation
- Motor back-EMF difference on rising and falling steps
- Step transitions
- Low-current versus high-current dI/dt

The DRV8452 supports two different smart tune schemes - smart tune Dynamic Decay and smart tune Ripple Control.

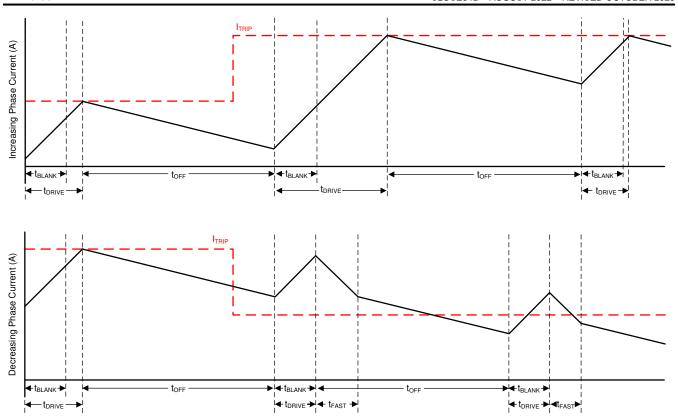


Figure 7-16. Smart tune Dynamic Decay Mode

Smart tune Dynamic Decay dynamically adjusts the fast decay percentage of the total mixed decay time. This eliminates the need for motor decay tuning by automatically determining the best mixed decay setting that results in the lowest ripple and best performance for the motor.

The fast decay percentage is optimized iteratively each PWM cycle. If the motor current overshoots the target  $I_{TRIP}$  level, then the mixed decay mode becomes more aggressive (by increasing fast decay percentage) on the next cycle to prevent loss of current regulation. If a long drive time must occur to reach the target  $I_{TRIP}$  level, the decay mode becomes less aggressive (by reducing fast decay percentage) on the next cycle to operate with less ripple. On falling steps, smart tune Dynamic Decay automatically switches to fast decay to reach the next step quickly.



#### 7.3.10.4 Smart tune Ripple Control

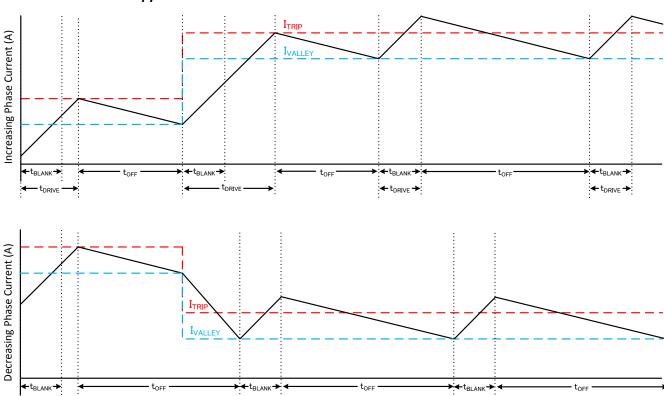


Figure 7-17. Smart tune Ripple Control Decay Mode

★ t<sub>DRIVE</sub> →

In smart tune Ripple Control decay mode, the PWM off time is variable depending on the current level and operating parameters. It operates by setting an  $I_{VALLEY}$  level along with the  $I_{TRIP}$  level. When the current level reaches  $I_{TRIP}$ , instead of entering slow decay until the  $t_{OFF}$  time expires, the driver enters slow decay until  $I_{VALLEY}$  is reached.

The magnitude of the ripple current in smart tune ripple control mode is programmed by the RC\_RIPPLE[1:0] bits or the TOFF pin, as shown in Table 7-20.

H/W Interface **SPI Interface** Current Ripple at a specific microstep level **TOFF** RC RIPPLE 25 mA + 1% of I<sub>TRIP</sub> 0 00b (default) 1 01b 25 mA + 2% of I<sub>TRIP</sub> Hi-Z 10b 25 mA + 4% of I<sub>TRIP</sub> 330kΩ to GND 11b 25 mA + 6% of I<sub>TRIP</sub>

**Table 7-20. Current Ripple Settings** 

The smart tune ripple control scheme allows much tighter regulation of the ripple current, thereby improving motor efficiency and reducing audible noise. Select a ripple current setting that ensures the PWM frequency is not in the audible range (< 20 kHz).

#### 7.3.10.5 PWM OFF Time

The TOFF bits or the TOFF pin configure the PWM OFF time for all decay modes, except smart tune ripple control and silent step decay modes, as shown in Table 7-21. The OFF time settings can be changed on-the-fly.

Table 7-21. OFF Time Settings

SPI Interface	H/W Interface	OFF Time
TOFF	TOFF	OFF Tillie
00b	0	9 μs
01b (default)	1	19 µs
10b	Hi-Z	27 μs
11b	330kΩ to GND	35 µs

## 7.3.10.6 Current Regulation Blanking Time and Deglitch Time

After the start of drive phase in an H-bridge, the current sense comparator is ignored for a period of time (blanking time) before enabling the current-sense circuitry. The blanking time also sets the minimum drive time of the PWM.

- When the device operates with hardware interface, the blanking time is fixed at 1.5 µs.
- When the device is operating with SPI interface, the blanking time can be programmed by the TBLANK\_TIME bits as shown in Table 7-22, with a default value of 1.5 µs.

Table 7-22. TBLANK\_TIME Settings

TBLANK_TIME	Blanking Time
00b	1 μs
01b (default)	1.5 µs
10b	2 µs
11b	2.5 µs

When the current is close to the I<sub>TRIP</sub> level, a 0.5 µs deglitch time is added to ensure proper current regulation.

### 7.3.11 Current Sensing with External Resistor

PWM current regulation is based on the voltage sensed across the internal sense resistor of the DRV8452. Optional external resistors can be placed between the PGND pins and system ground (or in series with the VM pins) to sense the coil current, as shown in Figure 7-18. The DRV8452 has two PGNDA pins and two PGNDB pins - one pair for each H-bridge. So, the current of each stepper motor coil can be sensed separately by placing sense resistors between PGND pins and system ground. All the four VM pins are shorted internally - so if a sense resistor is placed in the VM path, it will sense the combined current of both the H-bridges.

The voltage drop across the external sense resistor connected between PGND pins and system ground should not exceed 300 mV. The sensed coil current can be processed to monitor motor health, or used to generate necessary signals in a field-oriented-control loop to improve overall system efficiency.



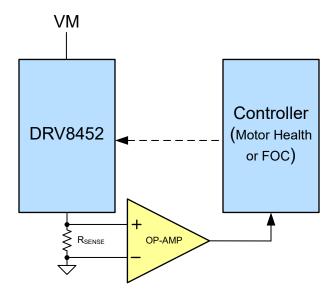


Figure 7-18. Current Sensing with External Resistor

No current flows through the sense resistor during the slow decay, so the sense resistor conducts less than the coil RMS current. Place the sense resistors as close as possible to the corresponding IC pins. Use a symmetrical sense resistor layout to ensure good matching. Low-inductance sense resistors should be used to prevent voltage spikes and ringing. For optimal performance, the sense resistor should be a surface-mount resistor rated for high enough power.

### 7.3.12 Silent step decay mode

Conventional peak current mode control looks at instantaneous current in the sensing MOSFETs to determine drive and decay durations. As a result, the motor driver reacts to instantaneous inaccuracies in the system. These sudden changes in current cause audible noise from the motor.

To ensure noiseless stepper motor operation, the DRV8452 features the silent step decay mode. The silent step is a voltage mode PWM regulation scheme to remove noise due to PWM switching at standstill and low speeds. Thus, silent step operated stepper motor applications are highly suitable for applications such as 3D printer, medical equipment and factory automation, where low noise operation is critical.

#### Note

When the device is operating with silent step decay mode -

- Open-load fault detection works only when the motor is in motion, but not if the motor is in standstill.
- Stall detection is not supported.
- · Spread spectrum feature is disabled.

The silent step loop is designed for low bandwidth operation, therefore at moderate to high motor speeds, the decay mode can be switched back to one of the conventional current-mode decay schemes programmed by the DECAY bits. Transition from silent step to another decay mode is immediate, whereas the transition from other decay modes to silent step happens at the boundary of electrical half-cycles.

Figure 7-19 shows the block diagram of the silent step decay mode implementation -

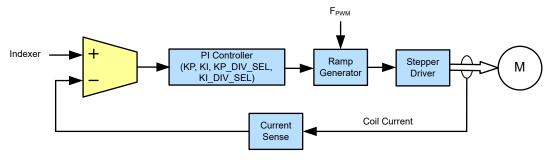


Figure 7-19. Silent step block diagram

Table 7-23 shows the SPI register parameters related to the silent step decay mode.

Table 7-23. Silent step Parameter Table

Parameter	Description
EN_SS	When EN_SS bit is 1b, silent step decay mode is enabled. Device starts operating with silent step after one zero cross each for currents in coil A and coil B. Writing 0b to EN_SS disables silent step decay mode, and the decay mode changes as per DECAY bit setting.
SS_PWM_FREQ[1:0]	Represents the PWM frequency (F <sub>PWM</sub> ) in silent step decay mode.  • 00b = 25 kHz (default)  • 01b = 33 kHz  • 10b = 42 kHz  • 11b = 50 kHz  Higher PWM frequency results in more switching loss.
SS_SMPL_SEL[1:0]	Silent step current zero cross sampling time. Default value is 2 $\mu$ s. If current waveform is distorted around zero crossing, increase the sampling time.  • $00b = 2 \mu s$ (default)  • $01b = 3 \mu s$ • $10b = 4 \mu s$ • $11b = 5 \mu s$
SS_KP[6:0]	Represents the proportional gain of the silent step PI controller. Has a range of 0 to 127, with a default value of 0.
SS_KI[6:0]	Represents the integral gain of the silent step PI controller. Has a range of 0 to 127, with a default value of 0.
SS_KP_DIV_SEL[2:0]	Divider factor for KP. Actual KP = SS_KP / SS_KP_DIV_SEL.  • 000b - SS_KP/32 (default)  • 001b - SS_KP/64  • 010b - SS_KP/128  • 011b - SS_KP/256  • 100b - SS_KP/512  • 101b - SS_KP/16  • 110b - SS_KP
SS_KI_DIV_SEL[2:0]	Divider factor for KI. Actual KI = SS_KI / SS_KI_DIV_SEL.  • 000b - SS_KI/32 (default)  • 001b - SS_KI/64  • 010b - SS_KI/128  • 011b - SS_KI/256  • 100b - SS_KI/512  • 101b - SS_KI/16  • 110b - SS_KI

Copyright © 2023 Texas Instruments Incorporated



Table 7-23. Silent step Parameter Table (continued)

table : = or orient ctop : arameter (commutes)				
Parameter	Description			
	Programs the frequency at which the device transitions from silent step decay mode to another decay mode programmed by the DECAY bits. This frequency corresponds to the frequency of the sinusoidal current waveform.  • 00000001b = 2 Hz  • 00000010b = 4 Hz  • .  • 11111111b = 510 Hz (default)			

To convert the SS\_THR threshold to STEP frequency (f<sub>STEP</sub>) for a specified microstepping setting, Equation 6 should be used -

$$f_{STEP} = (SS_THR * 1000 * usm) / 256$$
 (6)

Where usm corresponds to the number of microsteps (4, 16, 256 etc.). When the device is operating with custom microstepping mode, use usm = 256 in Equation 6 when calculating the STEP frequency.

The gain vs frequency plot of the silent step loop is shown below -

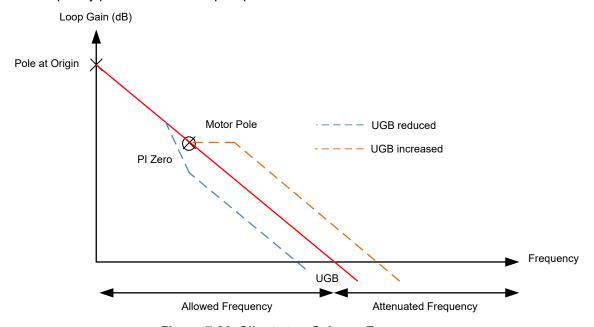


Figure 7-20. Silent step Gain vs. Frequency

The loop transfer function has two poles and one zero -

- One pole at origin
- One pole (f<sub>P</sub>) due to the motor coil resistance and inductance -

$$f_{P} = R_{MOTOR} / (2 * \pi * L_{MOTOR})$$

$$(7)$$

One zero (f<sub>7</sub>) created by the PI loop

$$f_Z = (KI * F_{PWM}) / (2 * \pi * KP)$$
 (8)

The proportional gain KP should be chosen to achieve the desired loop gain. Use the following equation to calculate the KP -



### $KP = 10 * \pi * UGB * L_{MOTOR} / VM$

(9)

Where UGB is the unity-gain bandwidth of the loop,  $R_{MOTOR}$  is the motor coil resistance,  $L_{MOTOR}$  is the motor coil inductance,  $I_{FS}$  is the full-scale current and VM is the supply voltage.

- If any frequency is less than UGB, it is allowed to pass.
- Frequencies higher than UGB, such as PWM frequency or STEP frequency are attenuated and do not contribute to motor noise.
- 200 Hz is a reasonable choice for UGB to attenuate most frequencies in the audible range.
- In the event of supply voltage change, UGB can be changed by modifying the value of KP. This way similar audio noise suppression can be achieved across a wide range of operating conditions.
- If the zero is chosen to be at a lower frequency than the motor pole, UGB will increase, as shown in the gain vs frequency plot.

The zero should be placed to cancel the motor pole. By equating  $f_P$  and  $f_Z$  for a discretized implementation, the following equation can be used to calculate KI.

$$KI = KP * R_{MOTOR} / (F_{PWM} * L_{MOTOR})$$
(10)

As an example, consider the following use case -

- VM = 24 V
- I<sub>FS</sub> = 5 A
- $R_{MOTOR} = 0.3 \Omega$
- L<sub>MOTOR</sub> = 0.7 mH
- UGB = 200 Hz
- F<sub>PWM</sub> = 25 kHz
- Above 50 RPM, the decay mode should change from silent step to smart tune ripple control.

Using the previous equations, KP = 0.18326 and KI = 0.00314. The following register values can be set -

- SS KP = 0101111b = 47
- SS KI = 0000001b = 1
- SS KP DIV SEL = 011b = 1/256
- SS KI DIV SEL = 011b = 1/256
- 50 RPM corresponds to roughly 42.6 kpps at 1/256 microstepping, which is equivalent to 42 Hz frequency of the sinusoidal current waveform. So SS THR = 00010101b = 21.

Copyright © 2023 Texas Instruments Incorporated



Figure 7-21 shows the smooth sinusoidal coil current waveforms when the motor operates in silent step decay mode.

Traces from top to bottom: coil A current, coil B current



Figure 7-21. Coil Current Waveform with Silent Step Decay

The SS\_SMPL\_SEL bits influence the smoothness of current waveform around zero crossing point. Default value of 2  $\mu$ s sampling time will work well for most motors and applications. In case current waveform distortion is oberved around the zero crossing, the value of sampling time can be increased to a maximum of 5  $\mu$ s. Figure 7-22 is an example of transition from silent step decay mode to smart tune ripple control decay mode with a sampling time of 5  $\mu$ s.

Traces from top to bottom: AOUT2, AOUT1, coil A current, coil B current, nSCS

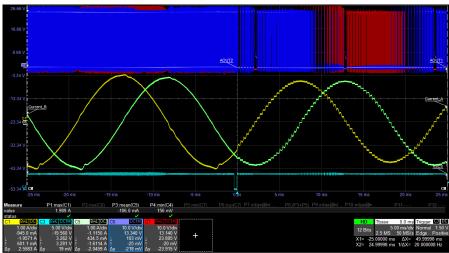


Figure 7-22. Silent step to smart tune transition

# 7.3.13 Auto-torque Dynamic Current Adjustment

For a typical stepper motor driver, the full-scale current is designed based on the peak load torque demand. This ensures that the motor does not lose steps any time peak load is demanded. The current therefore is constant irrespective of the load torque. As a result, when load torque is lower than the peak load, the driver and the motor dissipate some of the input power as resistive power loss as represented in Figure 7-23.

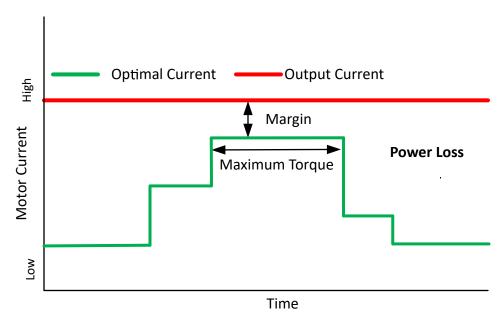


Figure 7-23. Power Loss with Conventional Stepper Driver

In most systems, the demand for peak load torque occurs only rarely. For example, in an ATM machine, the stepper motors might be needed to deliver peak load for less than 15% of their overall run time. A typical stepper driver though ends up delivering full-scale current to the motors all the time - leading to lower system efficiency due to the unwanted power loss, larger system size and shorter lifetime of components.

The Auto-torque algorithm implemented in the DRV8452 improves system efficiency by dynamically changing the output current according to the load torque. Whenever the load torque is low, the output current is lowered to reduce resistive losses; and when the load torque goes up, the output current increases immediately to prevent motor step loss. This concept is shown in Figure 7-24. As a result of improved efficiency due to auto-torque, the system runs at a lower temperature, which extends the lifetime of the components. Auto-torque can also enable the use of cheaper and smaller sized stepper motors.

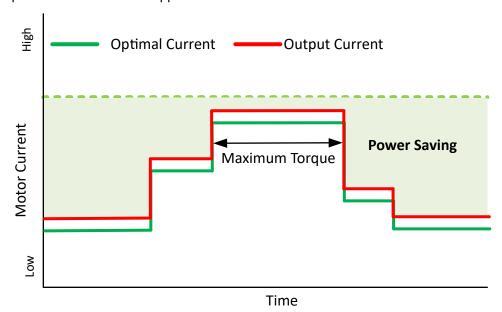


Figure 7-24. Power Saving with Auto-torque

The auto-torque feature is enabled by writing 1b to the ATQ EN bit.



## 7.3.13.1 Auto-torque Learning Routine

In a stepper motor system, the total power delivered by the power supply goes into providing for the torque requirement of the load and into power losses such as resistive losses caused by motor winding resistance and driver ON resistance. This is represented by Equation 11:

Power delivered by supply = Constant losses + 
$$\tau \times \omega$$
 (11)

where  $\tau$  is load torque and  $\omega$  is motor speed.

From Equation 11, we can observe that when the load torque increases, the power delivered by the supply increases as well. The auto-torque algorithm obtains information about the load-torque by monitoring the power delivered by the supply. The constant losses are represented by the ATQ\_LRN parameter, and the ATQ\_CNT parameter represents the power required to support the load torque.

For any given motor, ATQ\_LRN is directly proportional to the coil current. This can be expressed by Equation 12:

$$ATQ_{LRN} = \frac{k \times I_{M}}{V_{VM}}$$
 (12)

where  $I_M$  is the motor current,  $V_{VM}$  is the supply voltage to the driver and k is a constant. Equation 12 gives a linear relationship between the ATQ\_LRN and the motor current. The auto-torque learning routine learns ATQ\_LRN values at any two currents at no load, and then uses this relation to interpolate ATQ\_LRN value at any other current.

The ATQ\_CNT parameter represents the component of the delivered power that supports the load torque. This relation can be expressed by Equation 13.

$$ATQ\_CNT = \frac{k_1 \times \tau \times \omega}{I_{FS}}$$
 (13)

where  $k_1$  is a constant at a given operating condition and  $I_{FS}$  is the full-scale current (peak of the sinusoidal current waveform) of the stepper driver.

Equation 13 defines the basic working principle of the auto-torque algorithm. The ATQ\_CNT parameter can be used to perform motor coil current regulation based on applied load torque on the stepper motor.

Figure 7-25 shows (ATQ\_LRN + ATQ\_CNT) measured as a function of load torque at 2.5A full-scale current for a hybrid bipolar NEMA 24 stepper motor rated for 2.8A. ATQ\_LRN does not change with load torque, whereas ATQ\_CNT changes linearly with load torque.

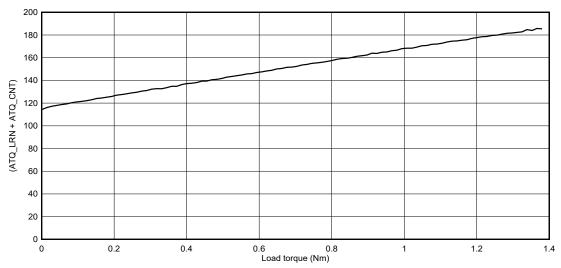


Figure 7-25. (ATQ\_LRN + ATQ\_CNT) vs. load torque

After auto-torque algorithm is enabled, the learning routine must be run to estimate the ATQ LRN parameters.

The learning routine uses the linear relation between ATQ\_LRN and motor current described in Equation 12. The user has to select two current values at which learning will be performed, with no load torque applied on the motor. These two current values are programmed by the ATQ\_LRN\_MIN\_CURRENT and ATQ\_LRN\_STEP registers.

- Initial current level = ATQ LRN MIN CURRENT x 8
- Final current level = Initial current level + ATQ\_LRN\_STEP

The ATQ\_LRN values at these two currents are saved in the ATQ\_LRN\_CONST1 and ATQ\_LRN\_CONST2 registers. These two registers are used to interpolate ATQ\_LRN value for all other currents within the operating range of the application.

Table 7-24 lists the registers associated with auto-torque learning routine.

Table 7-24. Registers for auto-torque learning routine

Register Name	Description
ATQ_LRN_MIN_CURRENT[4:0]	Represents the initial current level for auto-torque learning routine.
ATQ_LRN_STEP[1:0]	Represents the increment to initial current level. It supports four options -  • 00b : ATQ_LRN_STEP = 128  • 01b : ATQ_LRN_STEP = 16  • 10b : ATQ_LRN_STEP = 32  • 11b : ATQ_LRN_STEP = 64  Example : If ATQ_LRN_STEP = 10b and ATQ_LRN_MIN_CURRENT = 11000b, then -  • Initial learn current level = 24*8 = 192  • Final learn current level = 192 + 32 = 224
ATQ_LRN_CYCLE_SELECT[1:0]	Represents the number of electrical half cycles spent in one current level after which the learning routine allows the current to jump to the other level. It supports four options -  • 00b: 8 half-cycles  • 01b: 16 half-cycles  • 10b: 24 half-cycles  • 11b: 32 half-cycles
LRN_START	Writing 1b to this bit enables the auto-torque learning routine. After learning is completed, this bit automatically goes to 0b.
LRN_DONE	This bit becomes 1b after learning is complete.
ATQ_LRN_CONST1[10:0]	Indicates the ATQ_LRN parameter at the initial learning current level.
ATQ_LRN_CONST2[10:0]	Indicates the ATQ_LRN parameter at the final learning current level.
VM_SCALE	When this bit is 1b, the auto-torque algorithm automatically adjusts the ATQ_UL, ATQ_LL and ATQ_LRN parameters as per the supply voltage variation.

Here are few points to consider while setting up the learning routine parameters:

- It is recommended to select the initial current level between 30% to 50% of the maximum operating current.
- Final current level must not exceed 255 and can be selected between 80% and 100% of the maximum operating current.
- Current waveform distortions (due to high speed or low supply voltage) can cause incorrect reading of the ATQ\_LRN parameters. The learning current levels should be chosen away from the currents where waveform distortions are observed.
- Low values of ATQ\_LRN\_CYCLE\_SELECT result in quicker learning. However, in systems prone to noise, higher ATQ\_LRN\_CYCLE\_SELECT can result in more stable ATQ\_LRN parameter values.
- Learning should be done when the motor attains the steady-state speed.



• Re-learning should be done if the motor is changed, or the motor speed changes by ± 10%.

For a quick summary, following sequence of commands should be applied to enable automatic learning:

- Write 1b to ATQ EN
- · Run the motor with no load
- Program ATQ\_LRN\_MIN\_CURRENT
- Program ATQ\_LRN\_STEP
- Program ATQ LRN CYCLE SELECT
- Write 1b to ATQ LRN START
- The algorithm runs the motor with initial current level for ATQ\_LRN\_CYCLE\_SELECT number of electrical half cycles
- Next, the algorithm runs the motor with final current level for ATQ\_LRN\_CYCLE\_SELECT number of electrical half cycles
- · After learning is complete,
  - ATQ\_LRN\_START bit is auto cleared to 0b
  - ATQ LRN DONE bit becomes 1b
- ATQ\_LRN\_CONST1 and ATQ\_LRN\_CONST2 are populated in their respective registers
- Motor current goes to ATQ\_TRQ\_MAX

Once the ATQ\_LRN\_CONST1 and ATQ\_LRN\_CONST2 are known from the prototyping tests, they can be used for mass production without invoking the learning routine again. The following sequence of commands should be applied in mass production:

- VREF set to the same value as during learning in prototype tests
- Program ATQ\_LRN\_MIN\_CURRENT
- Program ATQ LRN STEP
- Program ATQ\_LRN\_CONST1
- Program ATQ LRN CONST2
- Write 1b to ATQ EN

Figure 7-26 shows the consolidated flowchart of the auto-torque learning routine.

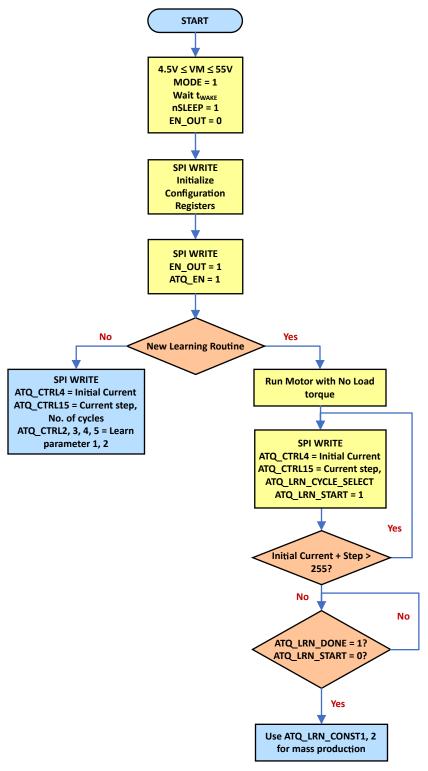


Figure 7-26. Auto-torque Learning Flowchart



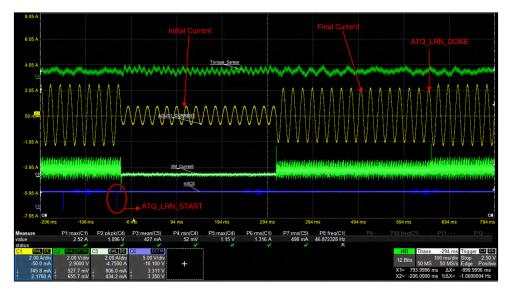


Figure 7-27. Auto-torque learning

Figure 7-27 shows an automatic learning process with 740 mA initial current (I<sub>FS1</sub>) and 2.2 A final current (I<sub>FS2</sub>). The ATQ\_LEARN\_CYCLE\_SELECT corresponds to 32 half-cycles.

## 7.3.13.2 Current Control Loop

Table 7-25 lists the registers associated with current control.

**Parameter** Description ATQ\_UL[7:0] Upper and lower boundaries of the hysteretic band within which ATQ\_CNT is controlled by ATQ\_LL[7:0] modifying the motor current. ATQ\_TRQ\_MIN[7:0] Programmable minimum and maximum current limit when auto-torque is enabled. ATQ\_TRQ\_MAX[7:0] Outputs the value of motor current when auto-torque is enabled. ATQ TRQ DAC can vary ATQ\_TRQ\_DAC[7:0] between ATQ\_TRQ\_MIN and ATQ\_TRQ\_MAX. The CNT OFLW flag becomes 1b if ATQ CNT is more than ATQ UL. CNT OFLW CNT\_UFLW the CNT\_UFLW flag becomes 1b if ATQ\_CNT is less than ATQ\_LL.

**Table 7-25. Registers for Current Control** 

The ATQ\_CNT parameter is proportional to the load torque and inversely proportional to the current setting of the stepper driver. An idealized representation of this relation is shown in Figure 7-28 -

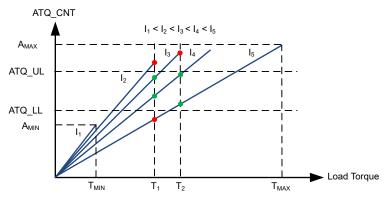


Figure 7-28. ATQ\_CNT as a function of load torque

The auto-torque algorithm confines the ATQ\_CNT within the hysteretic band defined by the user programmable ATQ\_UL and ATQ\_LL parameters, by modulating the motor current, as shown in Figure 7-28.

- If load torque demand increases (T<sub>1</sub> to T<sub>2</sub>), the ATQ\_CNT goes above the ATQ\_UL threshold, and in response, the algorithm brings the ATQ\_CNT within the band by increasing the current (I<sub>3</sub> to I<sub>4</sub>).
- When load torque demand drops (T<sub>2</sub> to T<sub>1</sub>) and ATQ\_CNT goes below ATQ\_LL, the algorithm reduces the current to bring the ATQ\_CNT within the hysteretic band (I<sub>5</sub> to I<sub>4</sub>).

The following methodology explains how user should select the values of the current control parameters -

- ATQ\_TRQ\_MIN is the minimum motor current needed to support the minimum load torque applied to the motor. To find this parameter -
  - Load the motor with minimum load torque (T<sub>MIN</sub>) and drive the motor with full-scale current (I<sub>FS</sub>)
  - Set ATQ UL and ATQ LL to zero and set KP as 1
  - Reduce current till the motor stalls
  - Note the current (I<sub>A</sub>) at which the motor stalls
  - Set ATQ\_TRQ\_MIN =  $1.1 \times I_A$
- To find ATQ\_TRQ\_MAX -
  - With the motor current at I<sub>A</sub>, load the motor with maximum load torque (T<sub>MAX</sub>). The motor will get stalled.
  - Start increasing the motor current
  - Note the current (I<sub>B</sub>) at which the motor comes out of stall
  - Set ATQ\_TRQ\_MAX = 1.1 x I<sub>B</sub>
  - Note the ATQ\_CNT (A<sub>MAX</sub>) with current at ATQ\_TRQ\_MAX and load torque at T<sub>MAX</sub>.
- · For the ATQ UL -
  - Set an initial value of 0.5 x A<sub>MAX</sub>.
  - Apply the load profile (peak load and idle load) specific to the application.
    - If the motor stalls, decrease the value ATQ\_UL till the motor is no longer stalled.
    - If the motor does not stall after applying the load profile, ATQ\_UL can be increased till the motor stalls.
  - Higher value of ATQ\_UL saves more power at peak load, but in case of a fast load transient, the motor can stall.
  - Lower value of ATQ\_UL reduces the power saving at peak load, but also reduces the chances of motor stall and step loss.
- For most applications, a difference of 2 between ATQ\_UL and ATQ\_LL is a good starting point.
- VM SCALE bit should be made 1b only after ATQ UL and ATQ LL have been set by the user.

The flowchart for selecting ATQ\_UL, ATQ\_LL, ATQ\_TRQ\_MAX and ATQ\_TRQ\_MIN parameters is shown below.



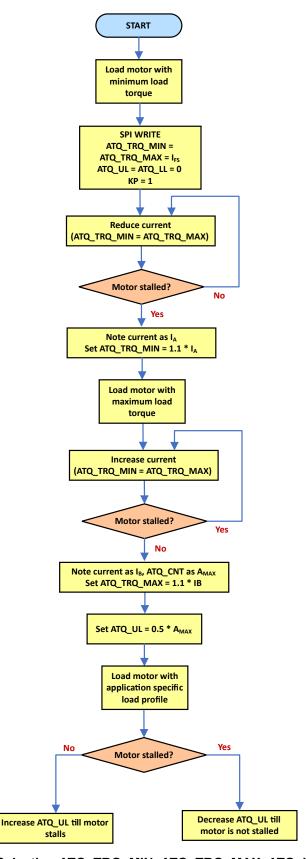


Figure 7-29. Selecting ATQ\_TRQ\_MIN, ATQ\_TRQ\_MAX, ATQ\_UL, ATQ\_LL



## 7.3.13.3 PD Control Loop

Table 7-26 describes the major parameters associated with the PD control loop -

Table 7-26. Parameters for PD control loop

Parameter	Description		
KP[7:0], KD[3:0]	Proportional and differential gain parameters for the PD control loop.		
ATQ_AVG[2:0]	The ATQ_CNT parameter is a moving average of ATQ_AVG number of half-cycles. Therefore, a high value for ATQ_AVG slows down the loop response time to a sudden peak load demand, but ensures smooth jerk-free transition to higher torque output. A low value causes the loop to respond immediately to a sudden load demand.  • 010b - 2 cycle average  • 100b - 4 cycle average  • 111b - 8 cycle average  • Other values : no averaging		
ATQ_FRZ[2:0]	Delay in electrical half-cycles after which current is changed in response to the PD loop. A small value increases the current quickly to meet peak load demand. This parameter has a range of 1 to 7. 001b - Fastest response time, but the loop can become unstable 111b - Slowest response, but the loop will be stable		
ATQ_D_THR[7:0]	If error change is less then ATQ_D_THR, then KD does not contribute to correction. KD contributes only when error change is greater than ATQ_D_THR.  For example: if ATQ_D_THR = 10,  If error change is 9, u(t) = KP * e(t)  If error change is 12, then u(t) = KP * e(t) + KD * de(t)/dt		
ATQ_ERROR_TRUNCATE[3:0]	Number of LSB bits truncated from error before used in PD loop equations. A high value reduces any oscillation in the current waveform.		

The PD control algorithm is expressed as -

$$u(t) = KP * e(t) + KD * de(t)/dt$$
 (14)

where,

KP and KD = PD loop constants

u(t) = output of controller

e(t) = error signal

- In general, increasing the KP will increase the speed of the control system response.
- However, if KP is too large, the current waveform will start to oscillate.
- If KP is increased further, the oscillations will become larger. The system will become unstable and may even oscillate out of control.
- Increasing the value of KD will cause the control system to react more strongly to changes in the error term and will increase the speed of the overall control system response.
- It is recommended to use small value of KD, because the derivative response is highly sensitive to noise.
- When non-zero values of KD is selected, to improve noise immunity of the system, a high value of ATQ\_D\_THR should be used.

Guidelines to tune the PD loop parameters are as follows -

- Set KP = 1, KD = 0, all other PD loop parameters should be at their default values
- Apply load profile specific to the application
- If the motor stalls, increase KP, KD and decrease ATQ\_D\_THR till the motor stops stalling
- · Once the motor does not stall any more, observe the current waveform at constant load torques
- If the current waveform has oscillations, increase ATQ\_FRZ, ATQ\_AVG and ATQ\_ERROR\_TRUNCATE

Copyright © 2023 Texas Instruments Incorporated



 Very high values of ATQ\_FRZ, ATQ\_AVG and ATQ\_ERROR\_TRUNCATE can deteriorate load transient response, so it is recommended to check load transient response once more to ensure the PD control loop is stable.

Figure 7-30 is the flowchart for selecting PD control loop parameters.

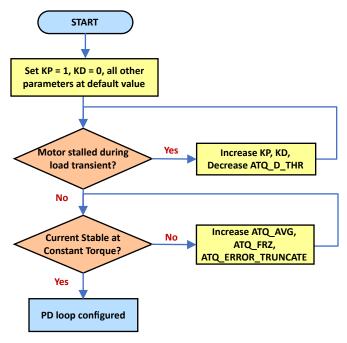


Figure 7-30. Selecting PD control loop parameters

# 7.3.13.4 Efficiency Improvement with Auto-torque

Table 7-27 shows the thermal performance improvements as a result of auto-torque. The thermal images are captured at the following condition:

VM = 24 V, 1/16 microstep, 4A full-scale current, 3000 pps speed, No load, Room temperature ambient

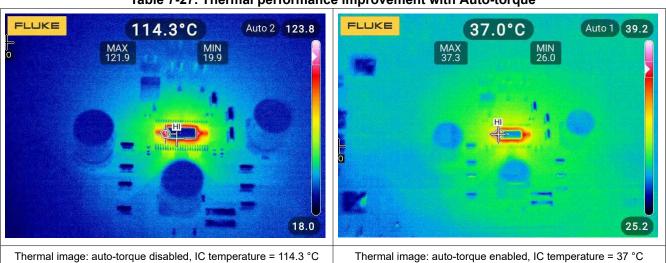


Table 7-27. Thermal performance improvement with Auto-torque

Submit Document Feedback

Copyright © 2023 Texas Instruments Incorporated

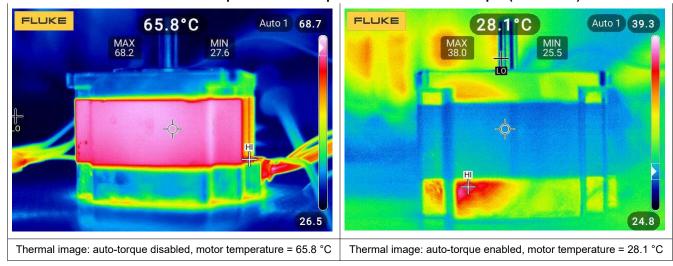


Table 7-27. Thermal performance improvement with Auto-torque (continued)

Reduction in IC and motor temperature as a result of auto-torque improves long term reliability of the stepper motor system.

## 7.3.14 Charge Pump

A charge pump is integrated to supply the high-side N-channel MOSFET gate-drive voltage. The charge pump requires a capacitor between the VM and VCP pins to act as the storage capacitor. Additionally a ceramic capacitor is required between the CPH and CPL pins to act as the flying capacitor.

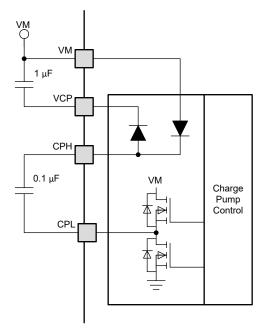


Figure 7-31. Charge Pump Block Diagram

## 7.3.15 Linear Voltage Regulator

A linear voltage regulator is integrated within the device. When the VCC pin is connected to DVDD, the DVDD regulator provides power to the low-side gate driver and all the internal circuits. For proper operation, bypass the DVDD pin to GND using a 1  $\mu$ F ceramic capacitor. The DVDD output is nominally 5 V. When the DVDD LDO current load exceeds 5 mA, the output voltage drops significantly.

Copyright © 2023 Texas Instruments Incorporated



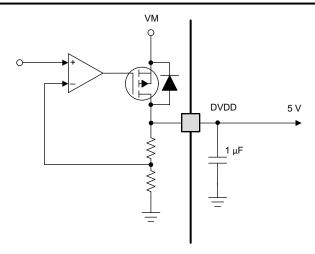


Figure 7-32. Linear Voltage Regulator Block Diagram

If a digital input must be tied permanently high, tying the input to the DVDD pin instead of an external regulator is preferred. This method saves power when the VM pin is not applied or in sleep mode: the DVDD regulator is disabled and current does not flow through the input pulldown resistors. For reference, logic level inputs have a typical pulldown of 200  $k\Omega$ .

The nSLEEP pin cannot be tied to DVDD, else the device will never exit sleep mode.

## 7.3.16 VCC Voltage Supply

An external voltage can be applied to the VCC pin to power the internal logic circuitry. The voltage on the VCC pin should be between 3.05V and 5.5V and should be well regulated. When an external supply is not available, VCC pin must be connected to the DVDD pin of the device.

When powered by the VCC, the internal logic blocks do not consume power from the VM supply rail - thereby reducing the power loss in the DRV8452. This is highly beneficial in high voltage applications, and when thermal conditions are critical. Bypass the VCC pin to ground using a 0.1 µF ceramic capacitor.

## 7.3.17 Logic Level, Tri-Level and Quad-Level Pin Diagrams

Figure 7-33 shows the input structure for M0, DECAY0 and ENABLE pins.

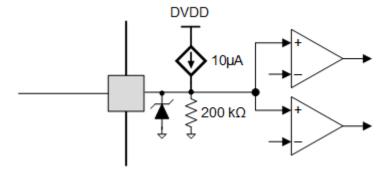


Figure 7-33. Tri-Level Input Pin Diagram

Figure 7-34 shows the input structure for M1 and TOFF pins.



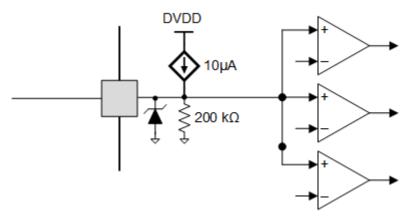


Figure 7-34. Quad-Level Input Pin Diagram

Figure 7-35 shows the input structure for STEP, DIR, MODE, SDI, SCLK, DECAY1 and nSLEEP pins.

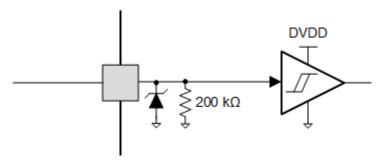


Figure 7-35. Logic-Level Input Pin Diagram

The following diagram shows the input structure for the logic-level pin nSCS.

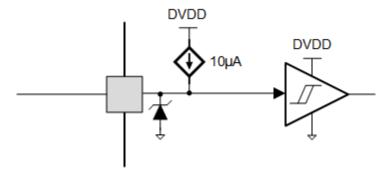


Figure 7-36. nSCS Input Pin Diagram

# 7.3.18 Spread Spectrum

Spread spectrum or frequency dithering is used to reduce the effect of EMI by converting a narrowband signal into a wideband signal, which will spread the energy across multiple frequencies. Figure 7-37 illustrates how manipulating the clock frequency over time has the effect of spreading the energy.

In the context of the DRV8452, the frequencies of the internal clock for digital circuits (10 MHz typical) and the clock for charge pump (357 kHz typical) are manipulated to reduce the peak energy and is distributed to other frequencies and their harmonics. This feature combined with output slew rate control minimizes the radiated emissions from the device and helps pass strict EMI standards.

Copyright © 2023 Texas Instruments Incorporated



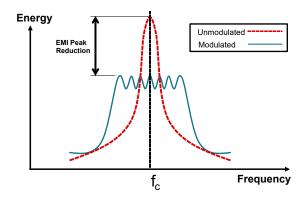


Figure 7-37. EMI Reduction by Spread Spectrum, Frequency Modulation

When the DRV8452 is configured with the SPI interface, spread spectrum can be enabled or disabled by the DIS\_SSC bit. By default, spread spectrum is disabled after power-up. Writing 0b to the DIS\_SSC bit enables spread spectrum. If the device is operating with silent step decay mode, spread spectrum is disabled. Additionally, when the DRV8452 is configured with the GPIO interface, spread spectrum is disabled.

There are many ways to implement spread spectrum. The DRV8452 uses the triangular analog modulation profile. Figure 7-38 and Figure 7-39 show the spread spectrum profiles of the internal digital clock and the charge pump clock around their respective centre frequencies. The digital clock varies by equal amounts over 14 steps between 9 MHz and 11 MHz.

Note that the centre frequencies themselves will vary with process and temperature changes, and the variations due to spread spectrum will be in addition to those.

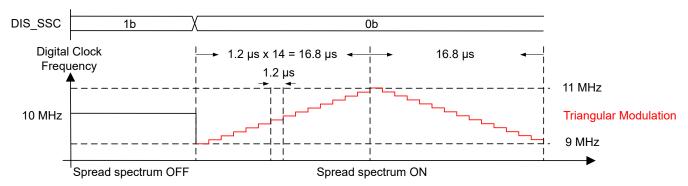


Figure 7-38. Triangular Spread Spectrum of Internal Digital Clock

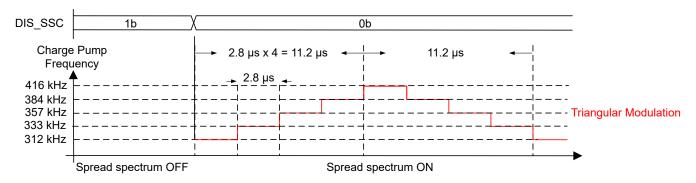


Figure 7-39. Triangular Spread Spectrum of Charge Pump Clock

#### 7.3.19 Protection Circuits

The device is fully protected against supply undervoltage, charge pump undervoltage, output overcurrent, open load, and device overtemperature events. In addition, when operating with SPI interface, the device is protected against stall detection in the event of overload or end-of-line movement.

## 7.3.19.1 VM Undervoltage Lockout

If at any time the voltage on the VM pin falls below the UVLO falling threshold voltage:

- All the outputs are disabled (High-Z)
- · The charge pump is disabled
- nFAULT is driven low

Normal operation resumes (motor driver and charge pump) when the VM voltage recovers above the UVLO rising threshold voltage.

When operating with SPI interface, if the voltage on the VM pin falls below the UVLO falling threshold voltage, but is above the  $V_{RST}$  or VCC UVLO (shown in Figure 7-40):

- · SPI communication is available and the digital core of the device is active
- · The FAULT and UVLO bits are made 1b
- · The nFAULT pin is driven low

From this condition, if the VM voltage recovers above the UVLO rising threshold voltage:

- nFAULT pin is released (is pulled-up to the external voltage)
- · The FAULT bit becomes 0b
- The UVLO bit remains latched 1b until cleared through the CLR\_FLT bit or an nSLEEP reset pulse.

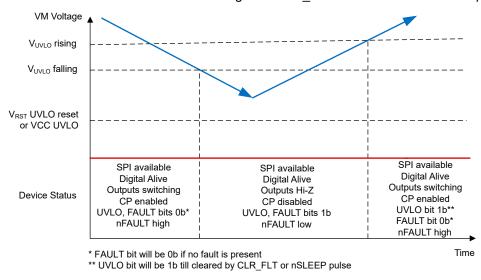


Figure 7-40. Supply Voltage Ramp Profile

When the voltage on the VM pin falls below the V<sub>RST</sub> or VCC UVLO (shown in Figure 7-41):

- · SPI communication is unavailable and the digital core is shutdown
- · The FAULT and UVLO bits are 0b
- · The nFAULT pin is high


During a subsequent power-up, when the VM voltage exceeds the V<sub>RST</sub> voltage:

- The digital core comes alive
- UVLO bit stays at 0b
- The FAULT bit is made 1b
- The nFAULT pin is pulled low
- When the VM voltage exceeds the VM UVLO rising threshold

Copyright © 2023 Texas Instruments Incorporated



- FAULT bit becomes 0b
- UVLO bit stays at 0b
- nFAULT pin is pulled high.

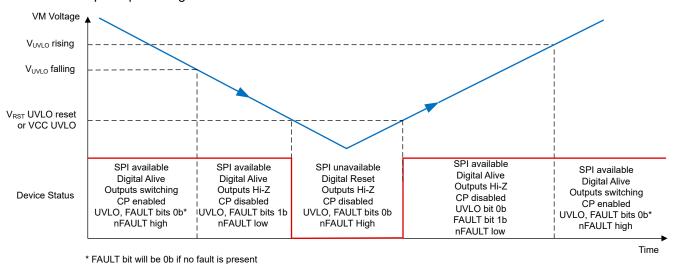

- -----

Figure 7-41. Supply Voltage Ramp Profile

# 7.3.19.2 VCP Undervoltage Lockout (CPUV)

If at any time the voltage on the VCP pin falls below the CPUV voltage:

- All the outputs are disabled (High-Z)
- nFAULT pin is driven low
- · The charge pump remains active
- · For the SPI version, the FAULT and CPUV bits are made 1b

Normal operation resumes (motor-driver operation and nFAULT released) when the VCP undervoltage condition is removed. The CPUV bit remains at 1b until it is cleared through the CLR FLT bit or an nSLEEP reset pulse.

## 7.3.19.3 Logic Supply Power on Reset (POR)

If at any time the voltage on the VCC pin falls below the VCC<sub>UVLO</sub> threshold:


- · All the outputs are disabled (High-Z)
- Charge pump is disabled.

VCC UVLO is not reported on the nFAULT pin. Normal motor-driver operation resumes when the VCC undervoltage condition is removed.

When device operates with SPI interface:

- The NPOR bit is reset and latched 0b once VCC goes above the UVLO threshold.
- NPOR remains in reset condition until cleared through the CLR FLT bit or nSLEEP reset pulse.
- After power up, NPOR is automatically latched 1b once the CLR\_FLT command is issued.

The VCC UVLO scenario is shown in Figure 7-42.

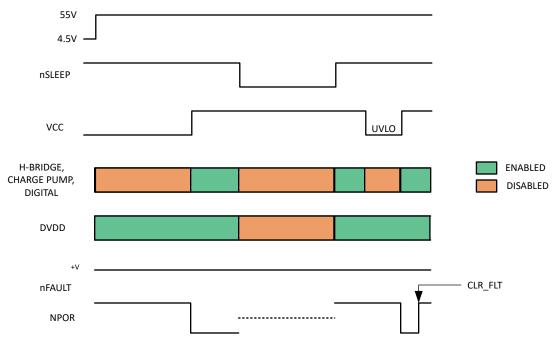

## Figure 7-42. Logic Supply POR

## 7.3.19.4 Overcurrent Protection (OCP)

An analog current-limit circuit on any MOSFET limits the current through that MOSFET by removing the gate drive. If this current limit persists for longer than the  $t_{OCP}$  time, an overcurrent fault is detected.

- · The MOSFETs in both H-bridges are disabled
- nFAULT is driven low
- · Charge pump remains active.
- When operating with SPI interface -
  - FAULT and OCP bits are latched 1b
  - For xOUTy to VM short, corresponding OCP LSy x bit becomes 1b
  - For xOUTy to ground short, corresponding OCP\_HSxy\_x bit becomes 1b
  - The TOCP bit programs the overcurrent protection deglitch time.

The overcurrent protection can operate in two different modes: latched shutdown and automatic retry. The operating modes can be changed on the fly.

#### 7.3.19.4.1 Latched Shutdown

To select latched shutdown mode:

- For H/W interface, the ENABLE pin has to be Hi-Z
- For SPI interface, the OCP\_MODE bit should be 0b

In this mode, once the OCP condition is removed, normal operation resumes after applying a CLR\_FLT command, an nSLEEP reset pulse or a power cycling.

#### 7.3.19.4.2 Automatic Retry

To select automatic retry mode:

- For H/W interface, the ENABLE pin has to be HIGH (> 2.7 V)
- For SPI interface, the OCP\_MODE bit should be 1b

In this mode, normal operation resumes automatically (motor-driver operation and nFAULT released) after the  $t_{RETRY}$  time has elapsed and the fault condition is removed.



#### 7.3.19.5 Stall Detection

When operating with the SPI interface, the DRV8452 supports stall detection.

Stepper motors have a distinct relation between the winding current, back-EMF, and mechanical torque load of the motor, as shown in Figure 7-43. For an unloaded motor, the back-EMF is 90° out-of-phase with the winding current. As motor load approaches the maximum torque capability of the motor for a given winding current, the back-EMF will move in phase with the winding current. By detecting back-EMF phase shift between rising and falling current quadrants of the motor current, the DRV8452 can detect a motor overload stall condition or an end-of-line travel.

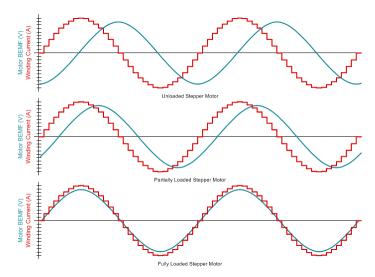


Figure 7-43. Stall Detection by Monitoring Motor Back-EMF

The Stall Detection algorithm is enabled when -

- The device is programmed to operate with the SPI interface (MODE = 1)
- The decay mode is programmed as smart tune Ripple Control (DECAY = 111b)
- EN STL is 1b
- No fault condition exists (UVLO, OCP, OL, OTSD etc.).

The algorithm compares the back-EMF between the rising and falling current quadrants by monitoring PWM off time and generates a parameter called torque count, represented by the TRQ\_COUNT register. The comparison is done in such a way that the TRQ\_COUNT is largely independent of motor current, ambient temperature and supply voltage. Motor stall can be detected even if the driver is operating in full step mode.

TRQ\_COUNT is calculated as a running average from the most recent four electrical half-cycles. TRQ\_COUNT register is updated once every electrical half-cycle. The updated TRQ\_COUNT is compared with the STALL\_TH, and if a stall condition is detected, stall fault will be reported and latched at the electrical half-cycle current zero crossing.

For a lightly loaded motor, the TRQ\_COUNT will be a non-zero value. As the motor approaches stall condition, TRQ\_COUNT will approach zero and can be used to detect stall condition.

- If anytime TRQ\_COUNT falls below the stall threshold (represented by the STALL\_TH register), the device
  will detect a stall.
- STALL, STL and FAULT bits are latched 1b in the SPI register.
- The STL\_REP bit controls how stall is reported.
  - If STL REP is 1b, the nFAULT pin will be driven low when a stall is detected.
  - If STEL\_REP is 0b, the nFAULT pin will stay high even if stall is detected.

In the stalled condition, the motor shaft does not spin. The motor starts to spin again when the stall condition is removed and the motor ramps to its target speed. The nFAULT is released and the fault registers are cleared when a clear faults command is issued either via the CLR FLT bit or an nSLEEP reset pulse.

High motor coil resistance can result in low TRQ\_COUNT. The TRQ\_SCALE bit allows scaling up low TRQ\_COUNT values, for ease of further processing.

- If the initially calculated TRQ\_COUNT value is less than 500 and the TRQ\_SCALE bit is 1b, then the TRQ\_COUNT output in register is multiplied by a factor of 8.
- If the TRQ SCALE bit is 0b, TRQ COUNT retains the value originally calculated by the algorithm.

Stall threshold can be set in two ways -

- The user can write the STALL\_TH bits by observing the behavior of the TRQ\_COUNT output at all operating conditions.
- The algorithm can learn the stall threshold using the automatic stall learning process, described below:
  - Before learning, ensure that the motor has reached its target speed. Do not learn stall threshold while the motor speed is ramping up or down.
  - Start learning by setting the STL\_LRN bit to 1b.
  - Run motor with no load.
  - Wait for 32 electrical cycles for the driver to learn the steady-state count.
  - Stall the motor.
  - Wait for 16 electrical cycles for the driver to learn the stall count.
  - The STL\_LRN\_OK bit becomes 1b if learning is successful.
  - Stall threshold is calculated as the average of steady count and stall count and stored in the STALL\_TH register.

The flowchart on how to set stall threshold is shown below.

Copyright © 2023 Texas Instruments Incorporated



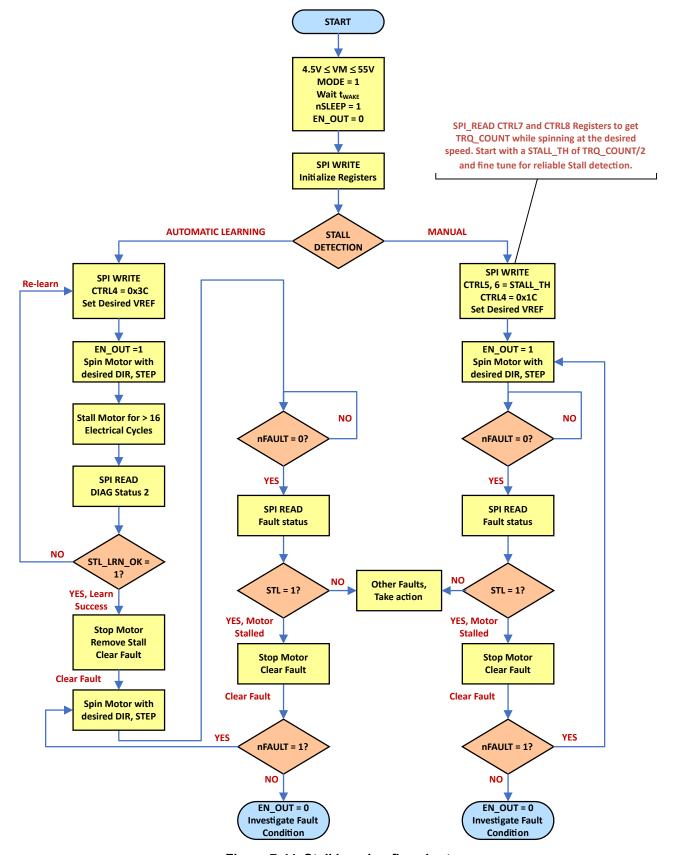


Figure 7-44. Stall learning flowchart

Sometimes the automatic stall learning process might not be successful due to unstable torque count while the motor is running or is stalled. For example, when the motor has high coil resistance or is running at very high or low speeds, the torque count might vary a lot over time and the difference between steady count and stall count might be small. In such cases, it is recommended not to use the automatic stall learning method. Instead, the user should carefully study the steady count and torque count across the range of operating conditions and set the threshold midway between the minimum steady count and the maximum stall count.

A stall threshold learnt at one speed may not work well for another speed. It is recommended to re-learn the stall threshold every time the motor speed is changed by more than ± 10%.

#### Note

- The stall detection algorithm depends on back-EMF modifying the PWM off time. The back-EMF
  is directly proportional to the speed of the motor. In order for stall detection to work reliably, motor
  speed should be sufficiently high to be able to generate back-EMF of sufficient amplitude. Higher
  motor coil resistance would require higher minimum speed for reliable stall detection.
- When the device goes from Disable mode (H-bridges Hi-z) to Active mode by toggling EN\_OUT bit or ENABLE pin; or when the device recovers from a fault by issuing a CLR\_FLT, stall detection fault may also be flagged. This is because of the time taken by TRQ\_CNT to reach a value higher than STL\_TH. As a result of the stall fault, nFAULT may stay low (if STL\_REP = 1b), and another CLR FLT will be needed to release stall fault and nFAULT pin. This can be prevented by -
  - Enabling stall detection after enabling active mode (write EN\_STALL = 1b only after writing EN OUT = 1b and making ENABLE = logic high)
  - By starting the STEP pulses only after the bridge is in active mode or after a CLR\_FLT command has been issued to clear a fault condition.
- If there is loss of current regulation due to low supply voltage, high coil resistance or high speed of the motor, stall detection may not work reliably, because the TRQ\_COUNT can be erratic and may jump to a high value. This can be checked and confirmed by looking at the coil current waveform. If the coil current has a standard sinusoidal waveform, and the peak of the sinusoid reaches the desired full-scale current, then stall detection will work reliably. If the current waveform is triangular due to high speed or low supply voltage, stall detection algorithm might not work reliably.
- If EN\_STL = 1b and auto-torque is also enabled, coil current goes to ATQ\_TRQ\_MAX when motor stall is detected.
- If EN\_STL = 0b and auto-torque is enabled, coil current goes to ATQ\_TRQ\_MIN when motor is stalled.

### 7.3.19.6 Open-Load Detection (OL)

Open-load fault is detected -

- · When the motor is running -
  - If coil current drops below the open-load current threshold (I<sub>OI</sub>)
- · When the motor is in a holding condition -
  - If coil current drops below the I<sub>TRIP</sub> level set by the indexer
- If either of the above conditions persists for more than the open-load detection time (t<sub>OL</sub>)

When the device is operating with SPI interface, the EN OL bit must be 1b to enable open-load detection.

The open-load detection time ( $t_{OL}$ ) is set as shown in Table 7-28 -

## Table 7-28. Open-load Detection Time

Interface	OL_T	Maximum t <sub>OL</sub> (ms)		
H/W interface	NA	60		

Copyright © 2023 Texas Instruments Incorporated



## Table 7-28. Open-load Detection Time (continued)

Interface	OL_T	Maximum t <sub>OL</sub> (ms)		
SPI interface	00b	30		
	01b (default)	60		
	10b	120		

Once the open-load fault is detected -

- nFAULT is pulled low.
- · If the device is operating with SPI interface -
  - OL and FAULT bits are latched 1b
  - If the OL A bit is 1b, it indicates an open load fault in winding A, between AOUT1 and AOUT2.
  - An open load fault between BOUT1 and BOUT2 causes the OL B bit to become 1b.

When the open-load condition is removed, the behavior depends on whether the device is configured with H/W interface or SPI interface.

When the device is configured with H/W interface and open-load condition is removed:

- If the ENABLE pin is logic HIGH, nFAULT is released immediately.
- If the ENABLE pin is Hi-Z, nFAULT is released after a nSLEEP reset pulse has been applied.

When the device is configured with SPI interface and open-load condition is removed:

- If the OL\_MODE bit is 1b, nFAULT is released immediately. OL bit in FAULT register and OL\_X bits in DIAG2
  register are cleared only after a clear faults command is issued either via the CLR\_FLT bit or an nSLEEP
  reset pulse.
- If the OL\_MODE bit is 0b, nFAULT and the fault bits are released after a clear faults command is issued either via the CLR FLT bit or an nSLEEP reset pulse.

The open-load fault also clears when the device is power cycled or comes out of sleep mode.

Figure 7-45 and Figure 7-46 show open-load detection in cases where coil A and coil B were opened respectively. The open load detection time was selected to be 60 ms maximum, and the OL\_MODE bit was 0b.

Traces from top to bottom: AOUT2, coil A current, coil B current, nFAULT

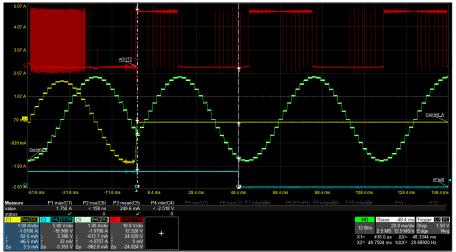


Figure 7-45. Coil A open-load detection

Traces from top to bottom: AOUT2, coil A current, coil B current, nFAULT

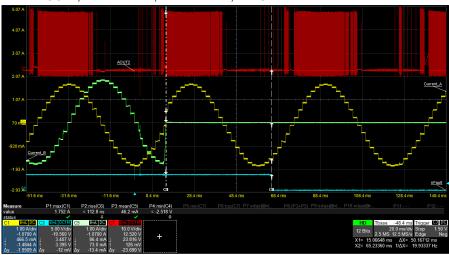


Figure 7-46. Coil B open-load detection

#### Note

- In silent step decay mode, open-load fault detection works only if the motor is in motion. If the motor is in standstill, open-load detection is not supported.
- · When open-load fault is detected -
  - If ENABLE pin is changed from logic HIGH to Hi-Z on-the-fly, apply a nSLEEP reset pulse once the open-load condition is removed.
  - If OL\_MODE is changed from 1b to 0b or EN\_OL is changed from 1b to 0b, apply a clear faults command once the open-load condition is removed.
- When the device is operating with auto-torque enabled, if open-load fault is detected, the coil current goes to a value corresponding to TRQ\_DAC.

Copyright © 2023 Texas Instruments Incorporated



## 7.3.19.7 Overtemperature Warning (OTW)

Overtemperature warning is detected if the die temperature exceeds the trip point of the overtemperature warning  $(T_{OTW})$ . This feature is supported only if the device is operating with SPI interface.

When the OTW is detected -

- OTW and TF bits are made 1b
- The device performs no additional action and continues to function.
- · The charge pump remains active.
- · If the TW REP bit is 1b -
  - nFAULT is pulled low in the event of OTW
  - FAULT bit is made 1b

When the die temperature falls below the hysteresis point (T<sub>HYS\_OTW</sub>) of the overtemperature warning, the OTW and TF bits clear automatically.

#### 7.3.19.8 Thermal Shutdown (OTSD)

Thermal shutdown is detected if the die temperature exceeds the thermal shutdown limit (T<sub>OTSD</sub>). When thermal shutdown is detected -

- · All MOSFETs in the H-bridges are disabled
- nFAULT is driven low
- Charge pump is disabled
- · For operation with SPI interface
  - FAULT, TF and OTS bits are set to 1b

The recovery from thermal shutdown protection can be in two different modes: latched shutdown and automatic retry. The recovery modes can be changed on the fly.

### 7.3.19.8.1 Latched Shutdown

To select latched shutdown mode.

- If device is operating with H/W interface, the ENABLE pin should be Hi-Z
- If device is operating with SPI interface, OTSD MODE should be 0b

In this mode, after the junction temperature falls below the overtemperature threshold limit minus the hysteresis  $(T_{OTSD} - T_{HYS\ OTSD})$ , normal operation resumes after applying an nSLEEP reset pulse or a power cycling.

## 7.3.19.8.2 Automatic Retry

To select automatic retry mode,

- For H/W interface, the ENABLE pin has to be logic HIGH (>2.7V)
- For SPI interface, OTSD MODE bit should be 1b

In this mode, normal operation resumes (motor-driver operation and the nFAULT line released) when the junction temperature falls below the overtemperature threshold limit minus the hysteresis ( $T_{OTSD} - T_{HYS\_OTSD}$ ). When operating with SPI interface, the TF and OTS bits remain latched to 1b indicating that a thermal event occurred until a clear faults command is issued either via the CLR\_FLT bit or an nSLEEP reset pulse.

## 7.3.19.9 Supply voltage sensing

An internal ADC monitors the supply voltage applied to the motor driver and outputs the value on the VM\_ADC bits in the CTRL14 register. The default value is 01011b, corresponding to 24 V.

This supply voltage reading can be used to implement overvoltage protection by the controller, by disabling the motor driver when the supply voltage exceeds a predetermined threshold.

### 7.3.19.10 nFAULT Output

The nFAULT pin has an open-drain output and should be pulled up to a 5-V, 3.3-V or 1.8-V supply. nFAULT pin will be high after power-up. When a fault is detected, the nFAULT pin will be logic low. For a 5-V pullup, the



nFAULT pin can be tied to the DVDD pin with a resistor. For a 3.3-V or 1.8-V pullup, an external supply must be used.




Figure 7-47. nFAULT Pin

# 7.3.19.11 Fault Condition Summary

# **Table 7-29. Fault Condition Summary**

14516 7 20.1					aiiiiiai y			
FAULT	CONDITION	CONFIGURATION	ERROR REPORT	H- BRIDGE	CHARGE PUMP	INDEXER	LOGIC	RECOVERY
VM undervoltage (UVLO)	VM < V <sub>UVLO</sub>	_	nFAULT / SPI	Disabled	Disabled	Disabled	Reset	VM > V <sub>UVLO</sub>
VCP undervoltage (CPUV)	VCP < V <sub>CPUV</sub>	_	nFAULT / SPI	Disabled	Operating	Operating	Operating	VCP > V <sub>CPUV</sub>
Logic Supply POR	VCC < VCC <sub>UVLO</sub>	_	SPI	Disabled	Disabled	Disbaled	Reset	VCC > VCC <sub>UVLO</sub>
Overcurrent (OCP) I <sub>OUT</sub> > I <sub>OCP</sub>	I <sub>OUT</sub> > I <sub>OCP</sub>	OCP_MODE = 0b / ENABLE = Hi-Z	nFAULT / SPI	Disabled	Operating	Operating	Operating	Latched: CLR_FLT / nSLEEP reset pulse
(==: /		OCP_MODE = 1b / ENABLE = 1	nFAULT / SPI	Disabled	Operating	Operating	Operating	Automatic retry: t <sub>RETRY</sub>
Unen Load (OL)	No load detected	OL_MODE = 1b / ENABLE = 1	nFAULT / SPI	Operating	Operating	Operating	Operating	Automatic
		OL_MODE = 0b / ENABLE = Hi-Z	nFAULT / SPI	Operating	Operating	Operating	Operating	Latched: CLR_FLT / nSLEEP reset pulse
		STL_REP = 0b	SPI	Operating	Operating	Operating	Operating	CLR_FLT /
Stall Detection (STALL)	Stall / stuck motor	STL_REP = 1b	nFAULT / SPI	Operating	Operating	Operating	Operating	nSLEEP reset pulse
Overtemperature Warning (OTW)	T <sub>J</sub> > T <sub>OTW</sub>	TW_REP = 1b	nFAULT / SPI	Operating	Operating	Operating	Operating	Automatic: T <sub>J</sub> < T <sub>OTW</sub> - T <sub>HYS OTW</sub>
waiting (01vv)		TW_REP = 0b	SPI	Operating	Operating	Operating	Operating	TOTW - THYS_OTW
Thermal Shutdown (OTSD)		OTSD_MODE = 0b / ENABLE = Hi-Z	nFAULT / SPI	Disabled	Disabled	Operating	Operating	Latched: CLR_FLT / nSLEEP reset pulse
		OTSD_MODE = 1b / ENABLE = 1	nFAULT/ SPI	Disabled	Disabled	Operating	Operating	Automatic: T <sub>J</sub> < T <sub>OTSD</sub> - T <sub>HYS_OTSD</sub>

# 7.3.20 Device Functional Modes

Copyright © 2023 Texas Instruments Incorporated



### 7.3.20.1 Sleep Mode

When the nSLEEP pin is low, the device enters a low-power sleep mode. In sleep mode, all the internal MOSFETs, the DVDD regulator, SPI and the charge pump is disabled. The t<sub>SLEEP</sub> time must elapse after a falling edge on the nSLEEP pin before the device enters sleep mode. The device is brought out of sleep automatically if the nSLEEP pin is brought high. The t<sub>WAKE</sub> time must elapse before the device is ready for inputs.

#### 7.3.20.2 Disable Mode

The ENABLE pin is used to enable or disable the half bridges in the device. When the ENABLE pin is low, the output drivers are disabled (Hi-Z). For operation with SPI interface, the EN\_OUT bit can also be used to disable the output drivers, as shown in Table 7-30. When the EN\_OUT bit is 0b, the output drivers are disabled (Hi-Z).

Table 7 00: Conditions to Enable of Disable Output Differs					
nSLEEP	ENABLE	EN_OUT	H-BRIDGE		
0	X	X	Disabled		
1	0	0b	Disabled		
1	0	1b	Disabled		
1	1	0b	Disabled		
1	1	1b	Enabled		

Table 7-30. Conditions to Enable or Disable Output Drivers

# 7.3.20.3 Operating Mode

This mode is enabled when -

- nSLEEP is high
- ENABLE pin is Hi-Z or logic high
- EN OUT = 1b for SPI interface
- VM > UVLO

The t<sub>WAKE</sub> time must elapse before the device is ready for inputs.

# 7.3.20.4 nSLEEP Reset Pulse

A latched fault can be cleared by an nSLEEP reset pulse. This pulse width must be greater than 20  $\mu$ s and smaller than 40  $\mu$ s. If nSLEEP is low for longer than 40  $\mu$ s, but less than 120  $\mu$ s, the faults are cleared and the device may or may not shutdown, as shown in Figure 7-48. This reset pulse does not affect the status of the charge pump or other functional blocks.

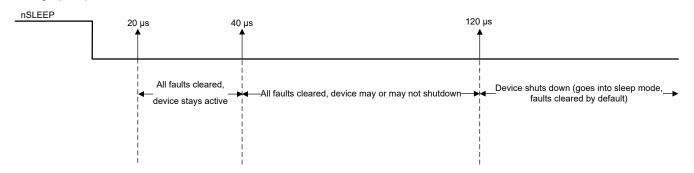


Figure 7-48. nSLEEP Reset Pulse



## 7.3.20.5 Functional Modes Summary

CON	IDITION	CONFIGURATION	H-BRIDGE	DVDD Regulator	CHARGE PUMP	INDEXER	Logic
Sleep mode	4.5 V < VM < 55 V	nSLEEP pin = 0	Disabled	Disbaled	Disabled	Disabled	Disabled
Operating	4.5 V < VM < 55 V	nSLEEP pin = 1 ENABLE = 1 and EN_OUT = 1b	Operating	Operating	Operating	Operating	Operating
Disabled	4.5 V < VM < 55 V	nSLEEP pin = 1 ENABLE pin = 0 or EN_OUT = 0b	Disabled	Operating	Operating	Operating	Operating

# 7.4 Programming

## 7.4.1 Serial Peripheral Interface (SPI) Communication

When configured to operate with SPI interface, the device has full duplex, 4-wire synchronous communication that is used to set device configurations, operating parameters, and read out diagnostic information from the device. This section describes the SPI protocol, the command structure, and the control and status registers. The SPI operates in target mode and can be connected with a controller in the following configurations:

- One target device
- Multiple target devices in parallel connection
- · Multiple target devices in series (daisy chain) connection

#### 7.4.1.1 SPI Format

The serial data input (SDI) word consists of a 16-bit word, with an 8 bit-command (A1), followed by 8-bit data (D1). The serial data output (SDO) word consists of 8 bits of status register with fault status indication (S1), followed by a report byte (R1). Figure 7-49 shows the data sequence between the controller and the SPI target driver.

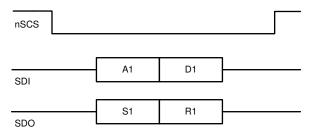


Figure 7-49. SPI Format - Standard "16-bit" Frame

A valid frame must meet the following conditions:

- The SCLK pin must be low when the nSCS pin goes low and when the nSCS pin goes high.
- The nSCS pin should be taken high for at least 500 ns between frames.
- When the nSCS pin is asserted high, any signals at the SCLK and SDI pins are ignored, and the SDO pin is in the high-impedance state (Hi-Z).
- A full 16 SCLK cycles must occur for a valid transaction for a standard frame, or alternately, for a daisy chainframe with "n" number of peripheral devices, 16 + (n x 16) SCLK cycles must occur for a valid transaction. Else, a frame error (SPI\_ERROR) is reported and the data is ignored if it is a WRITE operation.
- Data on SDO from the device is propagated on the rising edge of SCLK, while data on SDI is captured by thedevice on the subsequent falling edge of SCLK.
- · The most-significant bit (MSB) is shifted in and out first.

Copyright © 2023 Texas Instruments Incorporated



 For a write command, the existing data in the register being written to is shifted out on the SDO pin following the 8-bit command data.

The SDI input data word is 16 bits long and consists of the following format, as shown in Table 7-32:

- Command byte (first 8 bits)
  - MSB bit indicates frame type (bit B15 = 0 for standard frame).
  - Next to MSB bit, W0, indicates read or write operation (bit B14, write = 0, read = 1)
  - Followed by 6 address bits, A[5:0] (bits B13 through B8)
- Data byte (last 8 bits)
  - Last 8 bits indicate data, D[7:0] (bits B7 through B0). For a read operation, these bits are typically set to null values, while for a write operation, these bits have the data value for the addressed register.

Table 7-32. SDI - Standard Frame Format

	R/W	ADDRESS						DATA								
B15	B14	B13	B12	B11	B10	В9	B8	В7	В6	B5	B4	В3	B2	B1	В0	
0	W0	A5	A4	A3	A2	A1	A0	D7	D6	D5	D4	D3	D2	D1	D0	

The SDO output data word is 16 bits long and consists of the following format, as shown in Table 7-33:

- Status byte (first 8 bits)
  - 2 MSB bits are forced high (B15, B14 = 1).
  - Following 6 bits are from the FAULT register (bits B13 through B8)
- Report byte (last 8 bits)
  - The last 8 bits (B7:B0) are either the data currently in the register being read for a read operation (W0 = 1), or, existing data in the register being written to for a write command (W0 = 0).

**Table 7-33. SDO Output Data Word Format** 

STATUS								REPORT								
B15	B14	B13	B12	B11	B10	В9	B8	B7	В6	B5	B4	В3	B2	B1	В0	
1	1	UVLO	CPUV	OCP	STL	TF	OL	D7	D6	D5	D4	D3	D2	D1	D0	

#### 7.4.1.2 SPI for Multiple Target Devices in Daisy Chain Configuration

Multiple devices can be connected to the controller with and without the daisy chain. For connecting a 'n' number of devices to a controller without using a daisy chain, 'n' number of GPIO resources from controller have to be utilized for nSCS pins. Whereas, if the daisy chain configuration is used, a single nSCS line can be used for connecting multiple devices.

Figure 7-50 shows the topology when three devices are connected in daisy chain. This configuration saves GPIO ports when multiple devices are communicating to the same controller.

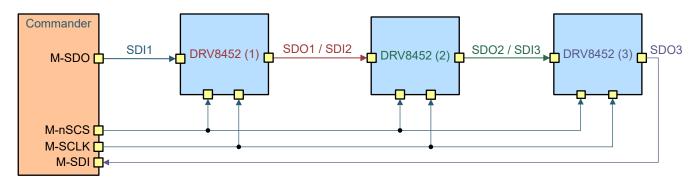


Figure 7-50. Three Devices Connected in Daisy Chain

The first device in the chain receives data from the MCU as shown in Figure 7-51 for 3-device configuration: 2 bytes of header (HDRx) followed by 3 bytes of address (Ax) followed by 3 bytes of data (Dx).

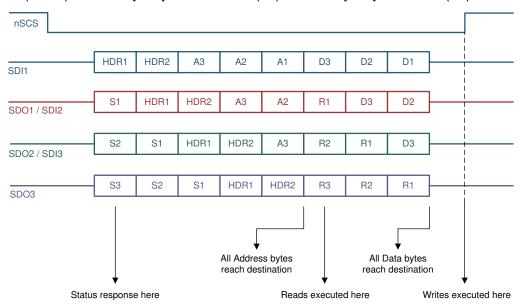


Figure 7-51. SPI Frame With Three Devices

After the data has been transmitted through the chain, the MCU receives the data string in the format shown in Figure 7-52 for 3-device configuration: 3 bytes of status (Sx) followed by 2 bytes of header followed by 3 bytes of report (Rx).




Figure 7-52. SPI Data Sequence for Three Devices

The header bytes contain information of the number of devices connected in the chain, and a global clear fault command that will clear the fault registers of all the devices on the rising edge of the chip select (nSCS) signal. Header values N5 through N0 are 6 bits dedicated to show the number of devices in the chain. Up to 63 devices can be connected in series for each daisy chain connection.

Copyright © 2023 Texas Instruments Incorporated

The 5 LSBs of the HDR2 register are don't care bits that can be used by the MCU to determine integrity of the daisy chain connection. Header bytes must start with 1 and 0 for the two MSBs.




Figure 7-53. Header Bytes

The status byte provides information about the fault status register for each device in the daisy chain so that the MCU does not have to initiate a read command to read the fault status from any particular device. This keeps additional read commands for the MCU and makes the system more efficient to determine fault conditions flagged in a device. Status bytes must start with 1 and 1 for the two MSBs.

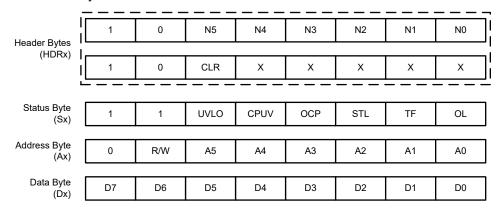


Figure 7-54. Contents of Header, Status, Address, and Data Bytes

When data passes through a device, it determines the position of itself in the chain by counting the number of status bytes it receives followed by the first header byte. For example, in this 3-device configuration, device 2 in the chain receives two status bytes before receiving the HDR1 byte which is then followed by the HDR2 byte.

From the two status bytes, the data can determine that its position is second in the chain. From the HDR2 byte, the data can determine how many devices are connected in the chain. In this way, the data only loads the relevant address and data byte in its buffer and bypasses the other bits. This protocol allows for faster communication without adding latency to the system for up to 63 devices in the chain.

The address and data bytes remain the same with respect to a 1-device connection. The report bytes (R1 through R3), as shown in Figure 7-51, are the content of the register being accessed.

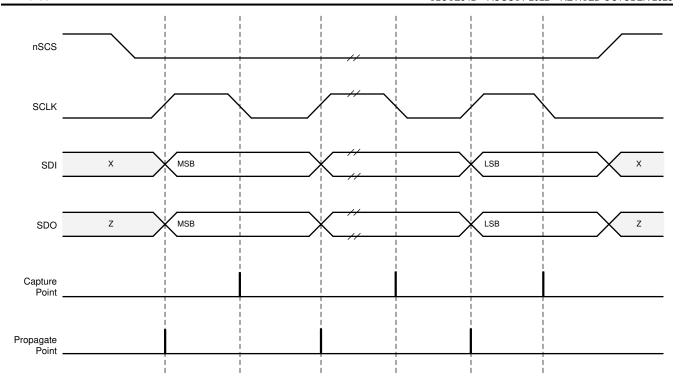


Figure 7-55. SPI Transaction

#### 7.4.1.3 SPI for Multiple Target Devices in Parallel Configuration

Figure 7-56 shows three DRV8452 devices connected in parallel configuration.

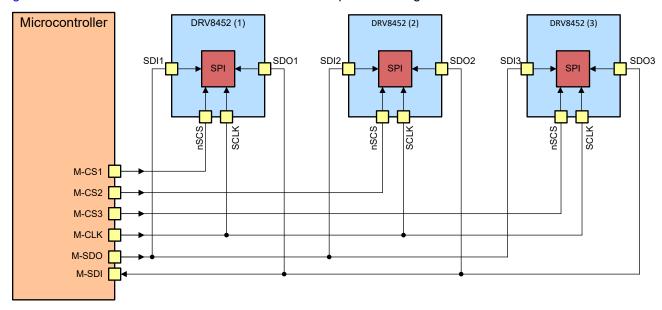


Figure 7-56. Three Devices Connected in Parallel Configuration

### 7.5 Register Maps

Table 7-34 lists the memory-mapped registers for the device. All register addresses not listed in Table 7-34 should be considered as reserved locations and the register contents must not be modified.



## Table 7-34. Memory Map

Property   Paul				•	abic 1-04.		p				
DAM	Register	7				3		1		Туре	Address
DAGG   STSL	FAULT		SPI_ERROR							R	0x00
DMG3	DIAG1	OCP_LS2_B	OCP_HS2_B	OCP_LS1_B	OCP_HS1_B	OCP_LS2_A	OCP_HS2_A	OCP_LS1_A	OCP_HS1_A	R	0x01
CTRL1	DIAG2	STSL	OTW	OTS	STL_LRN_OK	STALL	LRN_DONE	OL_B	OL_A	R	0x02
CTRL2	DIAG3	RSVD	NHOME	CNT_OFLW	CNT_UFLW	RSVD	NPOR	RS	SVD	R	0x03
CTR4.1	CTRL1	EN_OUT	OUT SR IDX_RST TOFF [1:0] DECAY [2:0]								0x04
CTRL4	CTRL2	DIR	STEP	STEP SPI_DIR SPI_STEP MICROSTEP_MODE [3:0]					RW	0x05	
CTRL5	CTRL3	CLR_FLT		LOCK [2:0] TOCP OCP_MODE OTSD_MODE OTW_RE							0x06
CTRL	CTRL4	TBLANK_	_TIME[1:0]	STL_LRN	EN_STL	STL_REP	STL_FRQ	STEP_FR	Q_TOL[1:0]	RW	0x07
CTRL'S	CTRL5		STALL_TH [7:0]								0x08
CTRL9         EN_OL         OL_MODE         OL_T(1:0)         STEP_EDGE         RES_AUTO(1:0)         EN_AUTO         RW         0x00           CTRL10         ISTSLT_0:0)         ISTSLT_0:0)         EN_AUTO(1:0)         EN_AUTO (1:0)         RW         0x00           CTRL10         ISTSL_DLY[0:0]         RSVD         RRV         0x11           INDEX3         CUR_B_RSID         CUR_A[0:2]         RRV         0x12           INDEXA         CUR_B_SIDN         RSVD         CUR_A[0:2]         RR         0x13           INDEXA         CUR_B_SIDN         RSVD         CUR_A[1:0]         RR         0x14           INDEXA         CUR_B_SIDN         RSVD         CUR_A[1:0]         RR         0x15           CUSTOM_CURRENTE[7:0]         CUR_A[1		RC_RIP	PLE[1:0]	DIS_SSC			STALL_	TH[11:8]			0x09
CTRL0	CTRL7				TRQ_CO	UNT [7:0]				R	0x0A
CTRL10         ISTSL[7:0]         RW         0:00           CTRL11         TRQ_DAC[7:0]         RW         0:00           CTRL12         EN_STSL         TSTSL_FALL[3:0]         RSVD         RW         0:00           CTRL13         TSTSL_DLY[5:0]         VREF_NT_EN         RSVD         RW         0:10           INDEX1         CUR_A_SIGN         RSVD         R         0:11           INDEX2         CUR_A_SIGN         RSVD         CUR_A_1:0]         R         0:13           INDEX3         CUR_B_SIGN         RSVD         CUR_A!:0]         R         0:13           INDEX4         CUR_B_SIGN         RSVD         CUR_A!:0]         R         0:41           INDEX5         CUR_B_SIGN         RSVD         RV         0:45           CUSTOM_CTRL1         RSVD         CUR_A!:0]         R         0:45           CUSTOM_CTRL1         RSVD         EN_CUSTOM         RW         0:45           CUSTOM_CTRL1         CUSTOM_CURRENTS[7:0]         RW         0:41           CUSTOM_CTRL2         CUSTOM_CURRENTS[7:0]         RW         0:41           CUSTOM_CTRL3         CUSTOM_CURRENTS[7:0]         RW         0:41           CUSTOM_CTRL5         CUSTOM_CURREN	CTRL8		RS	VD			TRQ_CO	UNT[11:8]		R	0x0B
CTRL11         TRO_DAC(7:0)         RSVD         RW         0:00E           CTRL12         EN_STSL         TSTSL_DLY(5:0)         VREF_INT_EN         RSVD         RW         0:00F           CTRL13         TSTSL_DLY(5:0)         VREF_INT_EN         RSVD         RSVD <td< td=""><td>CTRL9</td><td>EN_OL</td><td colspan="8">EN_OL         OL_MODE         OL_T[1:0]         STEP_EDGE         RES_AUTO[1:0]         EN_AUTO</td><td>0x0C</td></td<>	CTRL9	EN_OL	EN_OL         OL_MODE         OL_T[1:0]         STEP_EDGE         RES_AUTO[1:0]         EN_AUTO								0x0C
CTRL12         EN_STSL         TSTSL_FALISJO]         RSVD         RW         0x0f           CTRL13         TSTSL_DLY[50]         VREF_INT_EN         RSVD         RW         0x10           INDEX1         CUR_A_POS[7:0]         R         0x11           INDEX2         CUR_A_SIGN         RSVD         R         0x13           INDEX3         CUR_B_SIGN         RSVD         CUR_A[1:0]         R         0x14           INDEX5         CUR_B_SIGN         RSVD         CUR_A[1:0]         R         0x14           INDEX5         CUR_B_SIGN         RSVD         EN_CUSTOM_CTR         RW         0x16           CUSTOM_CTRL1         RSVD         EN_CUSTOM_CTR         RW         0x16           CUSTOM_CTRL2         CUSTOM_CURRENTI[7:0]         RW         0x16           CUSTOM_CTRL3         CUSTOM_CURRENTS[7:0]         RW         0x18           CUSTOM_CTRL4         CUSTOM_CURRENTS[7:0]         RW         0x16           CUSTOM_CTRL5         CUSTOM_CURRENTS[7:0]         RW         0x16           CUSTOM_CTRL6         CUSTOM_CURRENTS[7:0]         RW         0x16           CUSTOM_CTRL5         CUSTOM_CURRENTS[7:0]         RW         0x16           CUSTOM_CTRL6         CUS	CTRL10				ISTS	L[7:0]				RW	0x0D
CTRL13         TSTSL_DLY[50]         VREF_INT_EN         RSVD         RW         0x10           INDEX1         CUR_A_POS[7:0]         R         0x11           INDEX2         CUR_A_SIGN         RSVD         R         0x12           INDEX3         CUR_A_POS[7:0]         R         0x13           INDEX4         CUR_B_SIGN         RSVD         CUR_A[1:0]         R         0x14           INDEX5         CUR_A_POS[7:0]         RV         0x16         0x14         0x14         0x14           INDEX5         CUR_A_POS[7:0]         RV         0x16         0x17         0x16         0x16         0x17         0x16         0x17         0x16	CTRL11				TRQ_D	AC[7:0]				RW	0x0E
NOEX1	CTRL12	EN_STSL		TSTSL_I	FALL[3:0]			RSVD		RW	0x0F
NDEX2   CUR_A_SIGN   RSVD	CTRL13			TSTSL_	DLY[5:0]			VREF_INT_EN	RSVD	RW	0x10
NDEX1	INDEX1				CUR_A_	POS[7:0]				R	0x11
NDEX4	INDEX2	CUR_A_SIGN				RSVD				R	0x12
INDEX5	INDEX3		CUR_B_POS[7:0]							R	0x13
CUSTOM_CTRL1         RSVD         EN_CUSTOM         RW         0x16           CUSTOM_CTRL2         CUSTOM_CURRENT1[7:0]         RW         0x17           CUSTOM_CTRL3         CUSTOM_CURRENT2[7:0]         RW         0x18           CUSTOM_CTRL4         CUSTOM_CURRENT3[7:0]         RW         0x19           CUSTOM_CTRL5         CUSTOM_CURRENT4[7:0]         RW         0x10           CUSTOM_CTRL6         CUSTOM_CURRENT5[7:0]         RW         0x16           CUSTOM_CTRL7         CUSTOM_CURRENT5[7:0]         RW         0x10           CUSTOM_CTRL8         CUSTOM_CURRENT5[7:0]         RW         0x10           CUSTOM_CTRL9         CUSTOM_CURRENT5[7:0]         RW         0x10           CUSTOM_CURRENT5[7:0]         RW         0x10         0x16           ATQ_CTRL9         CUSTOM_CURRENT5[7:0]         RW         0x10           CUSTOM_CURRENT5[7:0]         RW         0x10         0x10           CUSTOM_CTRL9         CUSTOM_CURRENT5[7:0]         RW         0x10           ATQ_CTRL1         ATQ_CNT[10:8]         RSVD         ATQ_LRN_CONST1[10:8]         RW         0x20           ATQ_CTRL2         ATQ_LRN_MIN_CURRENT[4:0]         ATQ_LRN_CONST2[7:0]         RW         0x22           ATQ_CTRL	INDEX4	CUR_B_SIGN			RSVD			CUR_	_A[1:0]	R	0x14
CUSTOM_CTRL2         CUSTOM_CURRENT1[7:0]         RW         0x17           CUSTOM_CTRL3         CUSTOM_CURRENT2[7:0]         RW         0x18           CUSTOM_CTRL4         CUSTOM_CURRENT3[7:0]         RW         0x19           CUSTOM_CTRL5         CUSTOM_CURRENT3[7:0]         RW         0x1A           CUSTOM_CTRL6         CUSTOM_CURRENT3[7:0]         RW         0x1B           CUSTOM_CTRL7         CUSTOM_CURRENT3[7:0]         RW         0x1C           CUSTOM_CTRL8         CUSTOM_CURRENT3[7:0]         RW         0x1D           CUSTOM_CTRL8         CUSTOM_CURRENT3[7:0]         RW         0x1E           ATQ_CTRL1         ATQ_CNT[7:0]         RW         0x1E           ATQ_CTRL1         ATQ_CNT[7:0]         R         0x1F           ATQ_CTRL2         ATQ_CNT[10:8]         RSVD         ATQ_LRN_CONST1[10:8]         RW         0x20           ATQ_CTRL3         ATQ_LRN_CONST1[7:0]         RW         0x21           ATQ_CTRL4         ATQ_LRN_MIN_CURRENT[4:0]         ATQ_LRN_CONST2[10:8]         RW         0x22           ATQ_CTRL5         ATQ_LRN_CONST2[7:0]         RW         0x23           ATQ_CTRL6         ATQ_LTR_OLIT/10]         RW         0x24           ATQ_CTRL6         ATQ_LTR_OL	INDEX5				CUR_	_A[9:2]				R	0x15
CUSTOM_CTRL3         CUSTOM_CURRENT2[7:0]         RW         0x18           CUSTOM_CTRL4         CUSTOM_CURRENT3[7:0]         RW         0x19           CUSTOM_CTRL5         CUSTOM_CURRENT4[7:0]         RW         0x1A           CUSTOM_CTRL6         CUSTOM_CURRENT5[7:0]         RW         0x1B           CUSTOM_CTRL7         CUSTOM_CURRENT5[7:0]         RW         0x1C           CUSTOM_CTRL8         CUSTOM_CURRENT5[7:0]         RW         0x1D           CUSTOM_CTRL9         CUSTOM_CURRENT8[7:0]         RW         0x1E           ATQ_CTRL1         ATQ_CNT[7:0]         R         0x1F           ATQ_CTRL2         ATQ_CNT[10:8]         RSVD         ATQ_LRN_CONST1[10:8]         RW         0x20           ATQ_CTRL3         ATQ_LRN_CONST1[7:0]         RW         0x21           ATQ_CTRL4         ATQ_LRN_MIN_CURRENT[4:0]         ATQ_LRN_CONST2[10:8]         RW         0x22           ATQ_CTRL6         ATQ_LLT_00]         RW         0x23           ATQ_CTRL6         ATQ_LLT_10]         RW         0x24           ATQ_CTRL8         KP[7:0]         RW         0x26           ATQ_CTRL8         KP[7:0]         RW         0x27	CUSTOM_CTRL1				RSVD				EN_CUSTOM	RW	0x16
CUSTOM_CTRL4         CUSTOM_CURRENT3[7:0]         RW         0x19           CUSTOM_CTRL5         CUSTOM_CURRENT4[7:0]         RW         0x1A           CUSTOM_CTRL6         CUSTOM_CURRENT5[7:0]         RW         0x1B           CUSTOM_CTRL7         CUSTOM_CURRENT6[7:0]         RW         0x1C           CUSTOM_CTRL8         CUSTOM_CURRENT6[7:0]         RW         0x1D           CUSTOM_CTRL9         CUSTOM_CURRENT8[7:0]         RW         0x1E           ATQ_CTRL1         ATQ_CNT[10:8]         RSVD         ATQ_LRN_CONST1[10:8]         RW         0x20           ATQ_CTRL2         ATQ_CNT[10:8]         RSVD         ATQ_LRN_CONST1[10:8]         RW         0x21           ATQ_CTRL3         ATQ_LRN_CONST1[7:0]         RW         0x22           ATQ_CTRL4         ATQ_LRN_MIN_CURRENT[4:0]         ATQ_LRN_CONST2[10:8]         RW         0x22           ATQ_CTRL5         ATQ_LL[7:0]         RW         0x23           ATQ_CTRL6         ATQ_LL[7:0]         RW         0x24           ATQ_CTRL7         ATQ_LL[7:0]         RW         0x25           ATQ_CTRL8         KP[7:0]         RW         0x26           ATQ_CTRL8         RSVD         KD[3:0]         RW         0x27	CUSTOM_CTRL2				CUSTOM_CL	JRRENT1[7:0]				RW	0x17
CUSTOM_CTRL5         CUSTOM_CURRENT4[7:0]         RW         0x1A           CUSTOM_CTRL6         CUSTOM_CURRENT5[7:0]         RW         0x1B           CUSTOM_CTRL7         CUSTOM_CURRENT6[7:0]         RW         0x1C           CUSTOM_CTRL8         CUSTOM_CURRENT6[7:0]         RW         0x1D           CUSTOM_CTRL9         CUSTOM_CURRENT8[7:0]         RW         0x1E           ATQ_CTRL1         ATQ_CNT[7:0]         R         0x1F           ATQ_CTRL2         ATQ_CNT[10:8]         RSVD         ATQ_LRN_CONST1[10:8]         RW         0x20           ATQ_CTRL3         ATQ_LRN_CONST1[7:0]         RW         0x21           ATQ_CTRL4         ATQ_LRN_MIN_CURRENT[4:0]         ATQ_LRN_CONST2[10:8]         RW         0x22           ATQ_CTRL6         ATQ_LRN_CONST2[7:0]         RW         0x23           ATQ_CTRL6         ATQ_UL[7:0]         RW         0x24           ATQ_CTRL7         ATQ_LL[7:0]         RW         0x25           ATQ_CTRL8         RP[7:0]         RW         0x26           ATQ_CTRL8         RP[7:0]         RW         0x27	CUSTOM_CTRL3				CUSTOM_CL	JRRENT2[7:0]				RW	0x18
CUSTOM_CTRL6         CUSTOM_CURRENT5[7:0]         RW         0x1B           CUSTOM_CTRL7         CUSTOM_CURRENT6[7:0]         RW         0x1C           CUSTOM_CTRL8         CUSTOM_CURRENT7[7:0]         RW         0x1D           CUSTOM_CTRL9         CUSTOM_CURRENT8[7:0]         RW         0x1E           ATQ_CTRL1         ATQ_CNT[7:0]         R         0x1F           ATQ_CTRL2         ATQ_CNT[10:8]         RSVD         ATQ_LRN_CONST1[10:8]         RW         0x20           ATQ_CTRL3         ATQ_LRN_CONST1[7:0]         RW         0x21           ATQ_CTRL4         ATQ_LRN_GURRENT[4:0]         ATQ_LRN_CONST2[10:8]         RW         0x22           ATQ_CTRL4         ATQ_LRN_GURRENT[4:0]         ATQ_LRN_CONST2[10:8]         RW         0x23           ATQ_CTRL6         ATQ_LRN_CONST2[7:0]         RW         0x24           ATQ_CTRL6         ATQ_LL[7:0]         RW         0x25           ATQ_CTRL8         KP[7:0]         RW         0x26           ATQ_CTRL9         RSVD         KD[3:0]         RW         0x27	CUSTOM_CTRL4				CUSTOM_CL	JRRENT3[7:0]				RW	0x19
CUSTOM_CTRL7         CUSTOM_CURRENT6[7:0]         RW         0x1C           CUSTOM_CTRL8         CUSTOM_CURRENT7[7:0]         RW         0x1D           CUSTOM_CTRL9         CUSTOM_CURRENT8[7:0]         RW         0x1E           ATQ_CTRL1         ATQ_CNT[7:0]         R         0x1F           ATQ_CTRL2         ATQ_CNT[10:8]         RSVD         ATQ_LRN_CONST1[10:8]         RW         0x20           ATQ_CTRL3         ATQ_LRN_CONST1[7:0]         RW         0x21           ATQ_CTRL4         ATQ_LRN_MIN_CURRENT[4:0]         ATQ_LRN_CONST2[10:8]         RW         0x22           ATQ_CTRL5         ATQ_LRN_CONST2[7:0]         RW         0x23           ATQ_CTRL6         ATQ_UL[7:0]         RW         0x24           ATQ_CTRL6         ATQ_LL[7:0]         RW         0x25           ATQ_CTRL8         KP[7:0]         RW         0x26           ATQ_CTRL8         RW         0x27	CUSTOM_CTRL5				CUSTOM_CU	JRRENT4[7:0]				RW	0x1A
CUSTOM_CTRL8         CUSTOM_CURRENT7[7:0]         RW         0x1D           CUSTOM_CTRL9         CUSTOM_CURRENT8[7:0]         RW         0x1E           ATQ_CTRL1         ATQ_CNT[7:0]         R         0x1F           ATQ_CTRL2         ATQ_CNT[10:8]         RSVD         ATQ_LRN_CONST1[10:8]         RW         0x20           ATQ_CTRL3         ATQ_LRN_CONST1[7:0]         RW         0x21           ATQ_CTRL4         ATQ_LRN_MIN_CURRENT[4:0]         ATQ_LRN_CONST2[10:8]         RW         0x22           ATQ_CTRL5         ATQ_LRN_CONST2[7:0]         RW         0x23           ATQ_CTRL6         ATQ_UL[7:0]         RW         0x24           ATQ_CTRL6         ATQ_LL[7:0]         RW         0x25           ATQ_CTRL8         KP[7:0]         RW         0x26           ATQ_CTRL8         RSVD         KD[3:0]         RW         0x27	CUSTOM_CTRL6				CUSTOM_CL	JRRENT5[7:0]				RW	0x1B
CUSTOM_CTRL9         CUSTOM_CURRENT8[7:0]         RW         0x1E           ATQ_CTRL1         ATQ_CNT[7:0]         R         0x1F           ATQ_CTRL2         ATQ_CNT[10:8]         RSVD         ATQ_LRN_CONST1[10:8]         RW         0x20           ATQ_CTRL3         ATQ_LRN_CONST1[7:0]         RW         0x21           ATQ_CTRL4         ATQ_LRN_MIN_CURRENT[4:0]         ATQ_LRN_CONST2[10:8]         RW         0x22           ATQ_CTRL5         ATQ_LRN_CONST2[7:0]         RW         0x23           ATQ_CTRL6         ATQ_UL[7:0]         RW         0x24           ATQ_CTRL7         ATQ_LL[7:0]         RW         0x25           ATQ_CTRL8         KP[7:0]         RW         0x26           ATQ_CTRL9         RSVD         KD[3:0]         RW         0x27	CUSTOM_CTRL7				CUSTOM_CL	JRRENT6[7:0]				RW	0x1C
ATQ_CTRL1	CUSTOM_CTRL8				CUSTOM_CL	JRRENT7[7:0]				RW	0x1D
ATQ_CTRL2         ATQ_CNT[10:8]         RSVD         ATQ_LRN_CONST1[10:8]         RW         0x20           ATQ_CTRL3         ATQ_LRN_CONST1[7:0]         RW         0x21           ATQ_CTRL4         ATQ_LRN_MIN_CURRENT[4:0]         ATQ_LRN_CONST2[10:8]         RW         0x22           ATQ_CTRL5         ATQ_LRN_CONST2[7:0]         RW         0x23           ATQ_CTRL6         ATQ_UL[7:0]         RW         0x24           ATQ_CTRL7         ATQ_LL[7:0]         RW         0x25           ATQ_CTRL8         KP[7:0]         KD[3:0]         RW         0x27	CUSTOM_CTRL9				CUSTOM_CL	JRRENT8[7:0]				RW	0x1E
ATQ_CTRL3         ATQ_LRN_CONST1[7:0]         RW         0x21           ATQ_CTRL4         ATQ_LRN_MIN_CURRENT[4:0]         ATQ_LRN_CONST2[10:8]         RW         0x22           ATQ_CTRL5         ATQ_LRN_CONST2[7:0]         RW         0x23           ATQ_CTRL6         ATQ_UL[7:0]         RW         0x24           ATQ_CTRL7         ATQ_LL[7:0]         RW         0x25           ATQ_CTRL8         KP[7:0]         RW         0x26           ATQ_CTRL9         RSVD         KD[3:0]         RW         0x27	ATQ_CTRL1				ATQ_C	:NT[7:0]				R	0x1F
ATQ_CTRL4         ATQ_LRN_MIN_CURRENT[4:0]         ATQ_LRN_CONST2[10:8]         RW         0x22           ATQ_CTRL5         ATQ_LRN_CONST2[7:0]         RW         0x23           ATQ_CTRL6         ATQ_UL[7:0]         RW         0x24           ATQ_CTRL7         ATQ_LL[7:0]         RW         0x25           ATQ_CTRL8         KP[7:0]         RW         0x26           ATQ_CTRL9         RSVD         KD[3:0]         RW         0x27	ATQ_CTRL2		ATQ_CNT[10:8]		RS	SVD	ATC	LRN_CONST1[	10:8]	RW	0x20
ATQ_CTRL5         ATQ_LRN_CONST2[7:0]         RW         0x23           ATQ_CTRL6         ATQ_UL[7:0]         RW         0x24           ATQ_CTRL7         ATQ_LL[7:0]         RW         0x25           ATQ_CTRL8         KP[7:0]         RW         0x26           ATQ_CTRL9         RSVD         KD[3:0]         RW         0x27	ATQ_CTRL3		ATQ_LRN_CONST1[7:0]							RW	0x21
ATQ_CTRL6         ATQ_UL[7:0]         RW         0x24           ATQ_CTRL7         ATQ_LL[7:0]         RW         0x25           ATQ_CTRL8         KP[7:0]         RW         0x26           ATQ_CTRL9         RSVD         KD[3:0]         RW         0x27	ATQ_CTRL4		ATQ_LRN_MIN_CURRENT[4:0] ATQ_LRN_CONST2[10:8]							RW	0x22
ATQ_CTRL7         ATQ_LL[7:0]         RW         0x25           ATQ_CTRL8         KP[7:0]         RW         0x26           ATQ_CTRL9         RSVD         KD[3:0]         RW         0x27	ATQ_CTRL5		ATQ_LRN_CONST2[7:0]							RW	0x23
ATQ_CTRL8         KP[7:0]         RW         0x26           ATQ_CTRL9         RSVD         KD[3:0]         RW         0x27	ATQ_CTRL6		ATQ_UL[7:0]							RW	0x24
ATQ_CTRL9 RSVD KD[3:0] RW 0x27	ATQ_CTRL7				ATQ_I	LL[7:0]				RW	0x25
	ATQ_CTRL8				KP	[7:0]				RW	0x26
ATQ_CTRL10         ATQ_EN         LRN_START         ATQ_FRZ[2:0]         ATQ_AVG[2:0]         RW         0x28	ATQ_CTRL9		RS	VD			KD	[3:0]		RW	0x27
	ATQ_CTRL10	ATQ_EN	LRN_START		ATQ_FRZ[2:0]	1		ATQ_AVG[2:0]		RW	0x28

Instruments www.ti.com

Table 7-34. Memory Map (continued)

Danieten	-	•			) inap (o			•	T	A -1 -1
Register	7	6	5	4	3	2	1	0	Туре	Address
ATQ_CTRL11		ATQ_TRQ_MIN[7:0]								
ATQ_CTRL12				ATQ_TRO	Q_MAX[7:0]				RW	0x2A
ATQ_CTRL13				ATQ_D_	THR[7:0]				RW	0x2B
ATQ_CTRL14				RS	SVD				RW	0x2C
ATQ_CTRL15		ATQ_ERROR_TRUNCATE[3:0] ATQ_LRN_STEP[1:0] ATQ_LRN_CYCLE_SELECT[1:0]						RW	0x2D	
ATQ_CTRL16		ATQ_TRQ_DAC[7:0]							R	0x2E
ATQ_CTRL17	RSVD	RSVD VM_SCALE RSVD							RW	0x2F
ATQ_CTRL18				RS	SVD				RW	0x30
SS_CTRL1	SS_SMPL	_SEL[1:0]	RS	SVD	SS_PWM_	FREQ[1:0]	RSVD	EN_SS	RW	0x31
SS_CTRL2				SS_k	(P[7:0]				RW	0x32
SS_CTRL3				SS_I	KI[7:0]				RW	0x33
SS_CTRL4	RSVD	RSVD         SS_KI_DIV_SEL[2:0]         RSVD         SS_KP_DIV_SEL[2:0]						RW	0x34	
SS_CTRL5		SS_THR[7:0]							RW	0x35
CTRL 14			VM_ADC[4:0]				RSVD		RW	0x3C

Complex bit access types are encoded to fit into small table cells. Table 7-35 shows the codes that are used for access types in this section.

Table 7-35. Access Type Codes

14510 1 0017100000 1360 00400									
Access Type	Code	Description							
Read Type									
R	R	Read							
Write Type	Write Type								
W	W	Write							
Reset or Default	Value								
-n		Value after reset or the default value							

#### 7.5.1 Status Registers

The status registers are used to reporting warning and fault conditions. Status registers are read-only registers.

Table 7-36 lists the memory-mapped registers for the status registers. All register offset addresses not listed in Table 7-36 should be considered as reserved locations and the register contents should not be modified.

**Table 7-36. Status Registers Summary Table** 

Address	Register Name	Section
0x00	FAULT	Go
0x01	DIAG1	Go
0x02	DIAG2	Go
0x03	DIAG3	Go

## 7.5.1.1 FAULT (address = 0x00) [Default = 00h]

FAULT status is shown in Figure 7-57 and described in Table 7-37.

Read-only



### Return to the Register Maps Table

## Figure 7-57. FAULT Register

			0	•			
7	6	5	4	3	2	1	0
FAULT	SPI_ERROR	UVLO	CPUV	OCP	STL	TF	OL
R-0b	R-0b	R-0b	R-0b	R-0b	R-0b	R-0b	R-0b

## Table 7-37. FAULT Register Field Descriptions

Bit	Field	Туре	Default	Description
7	FAULT	R	0b	FAULT bit is 1b when device has any fault condition. During normal operation, FAULT bit is 0b. nFAULT pin is pulled down when FAULT bit is 1b. nFAULT pin is released during normal operation.
6	SPI_ERROR	R	Ob	Indicates SPI protocol errors, such as more SCLK pulses than are required or SCLK is absent even though nSCS is low. SPI_ERROR becomes 1b in fault and the nFAULT pin is driven low. Normal operation resumes when the protocol error is removed and a clear faults command has been issued either through the CLR_FLT bit or an nSLEEP reset pulse.
5	UVLO	R	0b	When this bit is 1b, it indicates an supply undervoltage lockout fault condition.
4	CPUV	R	0b	When this bit is 1b, it indicates charge pump undervoltage fault condition.
3	OCP	R	0b	When this bit is 1b, it indicates overcurrent fault condition
2	STL	R	0b	When this bit is 1b, it indicates motor stall condition.
1	TF	R	0b	Logic OR of the overtemperature warning (OTW) and overtemperature shutdown (OTSD). When this bit is 1b, it indicates overtemperature fault.
0	OL	R	0b	When this bit is 1b, it indicates open-load fault condition.

## 7.5.1.2 DIAG1 (address = 0x01) [Default = 00h]

DIAG1 is shown in Figure 7-58 and described in Table 7-38.

Read-only

Return to the Register Maps Table

Submit Document Feedback

### Figure 7-58. DIAG1 Register

7	6	5	4	3	2	1	0
OCP_LS2_B	OCP_HS2_B	OCP_LS1_B	OCP_HS1_B	OCP_LS2_A	OCP_HS2_A	OCP_LS1_A	OCP_HS1_A
R-0b							

## Table 7-38. DIAG1 Register Field Descriptions

Bit	Field	Туре	Default	Description
7	OCP_LS2_B	R	0b	When this bit is 1b, it indicates overcurrent fault on the low-side FET of half bridge connected to BOUT2
6	OCP_HS2_B	R	0b	When this bit is 1b, it indicates overcurrent fault on the high-side FET of half bridge connected to BOUT2
5	OCP_LS1_B	R	0b	When this bit is 1b, it indicates overcurrent fault on the low-side FET of half bridge connected to BOUT1
4	OCP_HS1_B	R	0b	When this bit is 1b, it indicates overcurrent fault on the high-side FET of half bridge connected to BOUT1
3	OCP_LS2_A	R	0b	When this bit is 1b, it indicates overcurrent fault on the low-side FET of half bridge connected to AOUT2

Table 7-38. DIAG1 Register Field Descriptions (continued)

	Table 1 del 20 to 1 toggette 1 tota 2 de dispuello (de l'unidada)									
Bit	Field	Туре	Default	Description						
2	OCP_HS2_A	R	0b	When this bit is 1b, it indicates overcurrent fault on the high-side FET of half bridge connected to AOUT2						
1	OCP_LS1_A	R	0b	When this bit is 1b, it indicates overcurrent fault on the low-side FET of half bridge connected to AOUT1						
0	OCP_HS1_A	R	0b	When this bit is 1b, it indicates overcurrent fault on the high-side FET of half bridge connected to AOUT1						

## $7.5.1.3 \, DIAG2 \, (address = 0x02) \, [Default = 00h]$

DIAG2 is shown in Figure 7-59 and described in Table 7-39.

Read-only

Return to the Register Maps Table

#### Figure 7-59. DIAG2 Register

7	6	5	4	3	2	1	0
STSL	OTW	OTS	STL_LRN_OK	STALL	LRN_DONE	OL_B	OL_A
R-0b	R-0b	R-0b	R-0b	R-0b	R-0b	R-0b	R-0b

Table 7-39. DIAG2 Register Field Descriptions

Bit	Field	Туре	Default	Description
7	STSL	R	0b	When this bit is 1b, it indicates that the device is operating with standstill power saving mode.
6	OTW	R	0b	When this bit is 1b, it indicates overtemperature warning.
5	OTS	R	0b	When this bit is 1b, it indicates overtemperature shutdown.
4	STL_LRN_OK	R	0b	When this bit is 1b, it indicates stall detection learning is successful.
3	STALL	R	0b	When this bit is 1b, it indicates motor is stalled.
2	LRN_DONE	R	0b	When this bit is 1b, it indicates auto torque learning is successful.
1	OL_B	R	0b	When this bit is 1b, it indicates open-load detection in BOUT coil.
0	OL_A	R	0b	When this bit is 1b, it indicates open-load detection in AOUT coil.

### $7.5.1.4 \, DIAG3 \, (address = 0x03) \, [Default = 00h]$

DIAG3 is shown in Figure 7-60 and described in Table 7-40.

Read-only

Return to the Register Maps Table

### Figure 7-60. DIAG3 Register

	7	6	5	4	3	2	1 0	
	<u> </u>	Ū	Ū	7	Ü	_		Ü
	RSVD	NHOME	CNT_OFLW	CNT_UFLW	RSVD	NPOR	RS	VD
ľ	R-0b	R-0b	R-0b	R-0b	R-0b	R-0b	R-00b	



Table 7-40. DIAG3 Register Field Descriptions

Bit	Field	Туре	Default	Description
7	RSVD	R	0b	Reserved
6	NHOME	R	0b	When this bit is 1b, it indicates indexer is at a position other than the home position.
5	CNT_OFLW	R	0b	When this bit is 1b, it indicates ATQ_CNT is more than ATQ_UL
4	CNT_UFLW	R	0b	When this bit is 1b, it indicates ATQ_CNT is less than ATQ_LL
3	RSVD	R	0b	Reserved
2	NPOR	R	0b	0b = Indicates a prior VCC UVLO event     1b = Indicates that the NPOR bit has been cleared by a CLR_FLT or nSLEEP reset pulse input after a VCC UVLO event
1-0	RSVD	R	00b	Reserved

#### 7.5.2 Control Registers

The IC control registers are used to configure the device. Control registers are read and write capable.

Table 7-41 lists the memory-mapped registers for the control registers. All register offset addresses not listed in Table 7-41 should be considered as reserved locations and the register contents should not be modified.

Table 7-41. Control Registers Summary Table

Address	Register Name	Section
0x04	CTRL1	Go
0x05	CTRL2	Go
0x06	CTRL3	Go
0x07	CTRL4	Go
0x08	CTRL5	Go
0x09	CTRL6	Go
0x0A	CTRL7	Go
0x0B	CTRL8	Go
0x0C	CTRL9	Go
0x0D	CTRL10	Go
0x0E	CTRL11	Go
0x0F	CTRL12	Go
0x1A	CTRL13	Go
0x3C	CTRL14	Go

### 7.5.2.1 CTRL1 (address = 0x04) [Default = 0Fh]

CTRL1 is shown in Figure 7-61 and described in Table 7-42.

Read/Write

Return to the Register Maps Table

Figure 7-61. CTRL1 Control Register

	rigate 7-01: Office Control Register											
7	6	5	4	3	2	1	0					
EN_OUT	SR	IDX_RST	TOFF [1:0]		DECAY [2:0]							
R/W-0b	R/W-0b	R/W-0b	R/W	-01b		R/W-111b						

Table 7-42. CTRL1 Control Register Field Descriptions

D.,				n · ··
Bit	Field	Туре	Default	Description
7	EN_OUT	R/W	0b	0b = All outputs are disabled 1b = All outputs are enabled
6	SR	R/W	0b	0b = Output rise/fall time 140 ns 1b = Output rise/fall time 70 ns
5	IDX_RST	R/W	0b	When this bit is 1b, it resets the indexer to 45° electrical angle, but the contents of the memory map registers will not change.
4-3	TOFF [1:0]	R/W	01b	<ul> <li>00b = 9.5 μs</li> <li>01b = 19 μs</li> <li>10b = 27 μs</li> <li>11b = 35 μs</li> </ul>
2-0	DECAY [2:0]	R/W	111b	<ul> <li>000b = Slow decay</li> <li>100b = Mixed 30% decay</li> <li>101b = Mixed 60% decay</li> <li>110b = Smart tune Dynamic Decay</li> <li>111b = Smart tune Ripple Control</li> <li>001b, 010b, 011b = Reserved</li> </ul>

## $7.5.2.2 \ CTRL2 \ (address = 0x05) \ [Default = 06h]$

CTRL2 is shown in Figure 7-62 and described in Table 7-43.

Read/Write

Return to the Register Maps Table

Figure 7-62. CTRL2 Control Register

1.94.0 1.422 001.101.109.00										
7	6	5	4	3 2		1	0			
DIR	STEP	SPI_DIR	SPI_STEP	MICROSTEP_MODE [3:0]						
R/W-0b	R/W-0b	R/W-0b	R/W-0b		R/W-	0110b				

Table 7-43. CTRL2 Control Register Field Descriptions

Bit	Field	Туре	Default	Description
7	DIR	R/W	Ob	Direction input. When SPI_DIR = 1b, if DIR = 1b, motor moves in the forward direction; and when DIR = 0b, motor moves in the reverse direction.
6	STEP	R/W	Ob	Step input. Logic 1b causes the indexer to advance one step, when SPI_STEP = 1b. This bit is self-clearing, automatically becomes 0b after writing 1b.
5	SPI_DIR	R/W	Ob	0b = Outputs follow input DIR pin for direction of stepping 1b = Outputs follow DIR bit in SPI register for direction of stepping
4	SPI_STEP	R/W	0b	0b = Outputs follow input STEP pin for stepping 1b = Outputs follow STEP bit in SPI register for stepping



**Table 7-43. CTRL2 Control Register Field Descriptions (continued)** 

Bit	Field	Туре	Default	Description
3-0	MICROSTEP_MODE [3:0]	R/W	0110b	<ul> <li>0000b = Full step (2-phase excitation) with 100% current</li> <li>0001b = Full step (2-phase excitation) with 71% current</li> </ul>
				0010b = Non-circular 1/2 step
				• 0011b = 1/2 step
				• 0100b = 1/4 step
				• 0101b = 1/8 step
				• 0110b = 1/16 step
				• 0111b = 1/32 step
				• 1000b = 1/64 step
				• 1001b = 1/128 step
				• 1010b = 1/256 step
				• 1011b to 1111b = Reserved

## $7.5.2.3 \ CTRL3 \ (address = 0x06) \ [Default = 38h]$

CTRL3 is shown in Figure 7-63 and described in Table 7-44.

Read/Write

Return to the Register Maps Table

Figure 7-63. CTRL3 Control Register

		9			9		
7	6	5 4		3	2	1	0
CLR_FLT		LOCK [2:0]		TOCP	OCP_MODE	OTSD_MODE	OTW_REP
R/W-0b		R/W-011b			R/W-0b	R/W-0b	R/W-0b

Table 7-44. CTRL3 Control Register Field Descriptions

Bit	Field	Туре	Default	Description
7	CLR_FLT	R/W	0b	Write 1b to this bit to clear all latched fault bits. This bit automatically resets to 0b after 1b is written.
6-4	LOCK [2:0]	R/W	011b	Write 110b to lock the settings by ignoring further register writes except to these bits and address 0x06h bit 7 (CLR_FLT). Writing any sequence other than 110b has no effect when unlocked.  Write 011b to this register to unlock all registers. Writing any sequence other than 011b has no effect when locked.
3	TOCP	R/W	1b	1b = Overcurrent protection deglitch time is 2.2 μs 0b = Overcurrent protection deglitch time is 1.2 μs
2	OCP_MODE	R/W	0b	0b = Overcurrent condition causes a latched fault 1b = Overcurrent condition fault recovery is auto-retry
1	OTSD_MODE	R/W	0b	0b = Overtemperature condition causes a latched fault 1b = Overtemperature condition fault recovery is auto-retry
0	TW_REP	R/W	0b	0b = Overtemperature or undertemperature warning is not reported on nFAULT 1b = Overtemperature or undertemperature warning is reported on nFAULT

### $7.5.2.4 \ CTRL4 \ (address = 0x07) \ [Default = 49h]$

CTRL4 control is shown in Figure 7-64 and described in Table 7-45.

Read/Write

Return to the Register Maps Table

INSTRUMENTS www.ti.com

Figure 7-64. CTRL4 Control Register

7	6	5	4	3	2	1	0
TBLANK_TIME[1:0] STL_LRN EN_STL		STL_REP	FRQ_CHG	STEP_FRE	Q_TOL[1:0]		
R/W	-01b	R/W-0b R/W-0b		R/W-1b	R/W-0b	R/W	′-01b

Table 7-45. CTRL4 Control Register Field Descriptions

Bit	Field		Default	Description
	rieiu	Туре		Description
7-6	TBLANK_TIME[1:0]	R/W	01b	Controls the current sense blanking time.
				• 00b = 1 µs blanking time
				• 01b = 1.5 μs blanking time
				• 10b = 2 µs blanking time
				• 11b = 2.5 µs blanking time
5	STL_LRN	R/W	0b	Write 1b to enable automatic learning of stall detection threshold. This bit
				automatically returns to 0b when the stall learning process is complete.
4	EN_STL	R/W	0b	0b = Stall detection is disabled
				1b = Stall detection is enabled
3	STL_REP	R/W	1b	0b = Stall detection is not reported on nFAULT
				1b = Stall detection is reported on nFAULT
2	FRQ_CHG	R/W	0b	0b = STEP input is filtered as per the STEP_FRQ_TOL bits
				1b = STEP input is not filtered
1-0	STEP_FRQ_TOL[1:	R/W	01b	Programs the filter setting for the STEP input.
	0]			• 00b = 1% filtering
				• 01b = 2% filtering
				• 10b = 4% filtering
				• 11b = 6% filtering

### $7.5.2.5 \ CTRL5 \ (address = 0x08) \ [Default = 03h]$

CTRL5 is shown in Figure 7-65 and described in Table 7-46.

Read/Write

Return to the Register Maps Table

### Figure 7-65. CTRL5 Control Register



### Table 7-46. CTRL5 Control Register Field Descriptions

Bit	Field	Туре	Default	Description
7-0	STALL_TH [7:0]	R/W	00000011b	Lower 8-bits of stall threshold.
				• 00000000000b = 0 count
				•
				• 00000000011b = 3 counts (default)
				•
				• 11111111111b = 4095 counts

### $7.5.2.6 \ CTRL6 \ (address = 0x09) \ [Default = 20h]$

CTRL6 is shown in Figure 7-66 and described in Table 7-47.



#### Read/Write

### Return to the Register Maps Table

#### Figure 7-66. CTRL6 Control Register

					,			
7	6	5	4	3 2 1				
RC_RIPI	PLE[1:0]	DIS_SSC	TRQ_SCALE	STALL_TH[11:8]				
R/W-	-00b	R/W-1b	R/W-0b		R/W-0	0000b		

#### **Table 7-47. CTRL6 Control Register Field Descriptions**

Bit	Field	Туре	Default	Description
7-6	RC_RIPPLE[1:0]	R/W	00b	Controls the current ripple in smart tune ripple control decay mode.  • 00b = 1% ripple (default)  • 01b = 2% ripple  • 10b = 4% ripple  • 11b = 6% ripple
5	DIS_SSC	R/W	1b	0b = spread-spectrum enabled 1b = spread-spectrum disabled
4	TRQ_SCALE	R/W	0b	0b = No torque count scaling is applied 1b = Torque count is scaled up by a factor of 8
3-0	STALL_TH[11:8]	R/W	0000b	4 MSB bits of stall threshold.


### 7.5.2.7 CTRL7 (address = 0x0A) [Default = FFh]

CTRL7 is shown in Figure 7-67 and described in Table 7-48.

Read-only

Return to the Register Maps Table

#### Figure 7-67. CTRL7 Control Register



### Table 7-48. CTRL7 Control Register Field Descriptions

Bit	Field	Туре	Default	Description
7-0	TRQ_COUNT[7:0]	R	11111111b	8 LSB bits of TRQ_COUNT.
				00000000000b = 0 count
				XXXXXXXXXXXb = 1 to 4094 counts
				111111111111 = 4095 counts

### 7.5.2.8 CTRL8 (address = 0x0B) [Default = 0Fh]

CTRL8 is shown in Figure 7-68 and described in Table 7-49.

Read-only

Return to the Register Maps Table

## Figure 7-68. CTRL8 Control Register

					,			
7	6	5	4	3	2	1	0	
	RS	VD		TRQ_COUNT[11:8]				
	R-00	000b			R-1	111b		

Table 7-49. CTRL8 Control Register Field Descriptions

	Bit	Field	Туре	Default	Description
	7-4	RSVD	R	0000b	Reserved.
Ī	3-0	TRQ_COUNT[11:8]	R	1111b	4 MSB bits of TRQ_COUNT.

## 7.5.2.9 CTRL9 (address = 0x0C) [Default = 10h]

CTRL9 is shown in Figure 7-69 and described in Table 7-50.

Read/Write

Return to the Register Maps Table

Figure 7-69. CTRL9 Control Register

	. iguiro i con o i i i i con							
7	6	5	4	3	2	1	0	
EN_OL	OL_MODE	OL_T[1:0]		STEP_EDGE	RES_AL	JTO[1:0]	EN_AUTO	
R/W-0b	R/W-0b	R/W	R/W-01b		R/W	-00b	R/W-0b	

Table 7-50. CTRL9 Control Register Field Descriptions

Bit	Field	Туре	Default	Description
7	EN_OL	R/W	0b	Write 1b to enable open load detection. When this bit is 0b, open load detection is disabled.
6	OL_MODE	R/W	0b	0b = nFAULT is released after latched OL fault is cleared using CLR_FLT bit or nSLEEP reset pulse 1b = nFAULT is released immediately after OL fault condition is removed
5-4	OL_T[1:0]	R/W	01b	Controls the open load fault detection time.  • 00b = 30 ms (max)  • 01b = 60 ms (max)  • 10b = 120 ms (max)  • 11b = Reserved
3	STEP_EDGE	R/W	0b	0b = Active edge for STEP input is only rising edge 1b = Active edge for STEP input is both rising and falling edges
2-1	RES_AUTO[1:0]	R/W	00Ь	Controls the microstepping resolution in automatic microstepping mode.  • 00b = 1/256  • 01b = 1/128  • 10b = 1/64  • 11b = 1/32
0	EN_AUTO	R/W	0b	0b = Automatic microstepping disabled 1b = Automatic microstepping enabled


## 7.5.2.10 CTRL10 (address = 0x0D) [Default = 80h]

CTRL10 control is shown in Figure 7-70 and described in Table 7-51.

Read/Write

Return to the Register Maps Table

Figure 7-70. CTRL10 Control Register



#### Figure 7-70. CTRL10 Control Register (continued)

R/W-10000000b

Table 7-51. CTRL10 Control Register Field Descriptions

Bit	Field	Туре	Default	Description
7-0	ISTSL[7:0]	R/W	10000000b	Determines the holding current.
				11111111b = 256/256 x 100%
				11111110b = 255/256 x 100%
				11111101b = 254/256 x 100%
				11111100b = 253/256 x 100%
				0000000b = 1/256 x 100%

### 7.5.2.11 CTRL11 (address = 0x0E) [Default = FFh]

CTRL11 control is shown in Figure 7-71 and described in Table 7-52.

Read/Write

Return to the Register Maps Table

Figure 7-71. CTRL11 Control Register




Table 7-52. CTRL11 Control Register Field Descriptions

Bit	Field	Туре	Default	Description
7-0	TRQ_DAC[7:0]	R/W	11111111b	Determines the run current.  11111111b = 256/256 x 100%  11111110b = 255/256 x 100%  11111101b = 254/256 x 100%  11111100b = 253/256 x 100%
				• • 00000000b = 1/256 x 100%

#### 7.5.2.12 CTRL12 (address = 0x0F) [Default = 20h]

CTRL12 is shown in Figure 7-72 and described in Table 7-53.

Read/Write

Return to the Register Maps Table

Figure 7-72. CTRL12 Control Register

					•			
7	6	6 5 4		3	2	1	0	
EN_STSL		TSTSL_F	FALL[3:0]		RSVD			
R/W-0b		R/W-0	0100b			R/W-000b		

Table 7-53. CTRL12 Control Register Field Descriptions

Bit Field Type De		Default	Description	
7	EN STSL	R/W	0b	0b = Standstill power saving mode disabled
	_			1b = Standstill power saving mode enabled

## Table 7-53. CTRL12 Control Register Field Descriptions (continued)

Bit	Field	Type	Default	Description	
6-3	TSTSL_FALL[3:0]	R/W	0100b	Controls the time it takes the current to reduce from TRQ_DAC to ISTSL after TSTSL_DLY time has elapsed  • 0000b: fall time = 0  • 0001b: fall time for each current step = 1 ms  •	
2-0	RSVD	R/W	000b	Reserved	

## $7.5.2.13 \ CTRL13 \ (address = 0x10) \ [Default = 10h]$

CTRL13 is shown in Figure 7-73 and described in Table 7-54.

Read/Write

Return to the Register Maps Table

#### Figure 7-73. CTRL13 Control Register

7	6	5	4	3	2	1	0
	VREF_INT_EN	RSVD					
		R/W-00	00100b			R/W-0b	R/W-0b

#### Table 7-54. CTRL13 Control Register Field Descriptions

Bit	Field	Туре	Default	Description
7-2	TSTSL_DLY[5:0]	R/W	000100Ь	Controls the delay between last STEP pulse and activation of standstill power saving mode.  • 000000b: Reserved  • 000001b: Delay = 1 x 16 ms = 16 ms  •
1	VREF_INT_EN	R/W	0b	When this bit is 1b, the device uses the internal 3.3 V reference for current regulation, and the voltage on the VREF pin is ignored.
0	RSVD	R/W	0b	Reserved

Note

Do not set TSTSL\_DLY to 000000b.

#### 7.5.3 Indexer Registers

The indexer registers provide current values for coil A, and the position in the microstep table for the currents in coil A and coil B. Indexer registers are read only.

Table 7-55 lists the memory-mapped registers for the indexer registers. All register offset addresses not listed in Table 7-55 should be considered as reserved locations and the register contents should not be modified.



Table 7-55. Indexer Registers Summary Table

Address	Register Name	Section
0x11	INDEX1	Go
0x12	INDEX2	Go
0x13	INDEX3	Go
0x14	INDEX4	Go
0x15	INDEX5	Go


### 7.5.3.1 INDEX1 (address = 0x11) [Default = 80h]

INDEX1 is shown in Figure 7-74 and described in Table 7-56.

Read only

Return to the Register Maps Table

#### Figure 7-74. INDEX1 Register



#### Table 7-56. INDEX1 Register Field Descriptions

Bit	Field	Туре	Default	Description
7-0	CUR_A_POS[7:0]	R	10000000b	Indicates the position of coil A current in the indexer table.


## 7.5.3.2 INDEX2 (address = 0x12) [Default = 80h]

INDEX2 is shown in Figure 7-75 and described in Table 7-57.

Read only

Return to the Register Maps Table

#### Figure 7-75. INDEX2 Register



### Table 7-57. INDEX2 Register Field Descriptions

Bit	Field	Туре	Default	Description
7	CUR_A_SIGN	R		Outputs the sign of coil A current for the position indicated by the CUR_A_POS bits.  1b = Coil A current is positive  0b = Coil A current is negative
6-0	RSVD	R	000000b	Reserved

### 7.5.3.3 INDEX3 (address = 0x13) [Default = 80h]

INDEX3 is shown in Figure 7-76 and described in Table 7-58.

Read only

Return to the Register Maps Table

#### Figure 7-76. INDEX3 Register

rigure 1-70. INDEXO Negleter									
7	6	5	4	3	2	1	0		

# Figure 7-76. INDEX3 Register (continued)

CUR\_B\_POS[7:0]

R-10000000b

#### Table 7-58. INDEX3 Register Field Descriptions

Bit	Field	Туре	Default	Description
7-0	CUR_B_POS[7:0]	R	10000000b	Indicates the position of coil B current in the indexer table.

#### 7.5.3.4 INDEX4 (address = 0x14) [Default = 82h]

INDEX4 is shown in Figure 7-77 and described in Table 7-59.

Read only

Return to the Register Maps Table

### Figure 7-77. INDEX4 Register

7	6	5	4	3	2	1	0
CUR_B_SIGN			CUR_A[1:0]				
R-1b			R-	10b			

#### Table 7-59. INDEX4 Register Field Descriptions

Bit	Field	Туре	Default	Description
7	CUR_B_SIGN	R	1b	Outputs the sign of coil B current for the position indicated by the CUR_B_POS bits.  1b = Coil B current is positive  0b = Coil B current is negative
6-2	RSVD	R	00000b	Reserved
1-0	CUR_A[1:0]	R	10b	Lower two LSBs of the current in coil A


#### 7.5.3.5 INDEX5 (address = 0x15) [Default = B5h]

INDEX5 is shown in Figure 7-78 and described in Table 7-60.

Read only

Return to the Register Maps Table

## Figure 7-78. INDEX5 Register



#### Table 7-60. INDEX5 Register Field Descriptions

Bit	Field	Туре	Default	Description
7-0	CUR_A[9:2]	R	10110101b	Outputs the upper 8 bits of the current in coil A

#### 7.5.4 Custom Microstepping Registers

The custom microstep registers store the current values corresponding to the first quadrant of coil A current. Custom microstep registers are read and write capable.



Table 7-61 lists the memory-mapped registers for the custom microstep registers. All register offset addresses not listed in Table 7-61 should be considered as reserved locations and the register contents should not be modified.

**Table 7-61. Custom microstep Registers Summary Table** 

Address	Register Name	Section
0x16	CUSTOM_CTRL1	Go
0x17	CUSTOM_CTRL2	Go
0x18	CUSTOM_CTRL3	Go
0x19	CUSTOM_CTRL4	Go
0x1A	CUSTOM_CTRL5	Go
0x1B	CUSTOM_CTRL6	Go
0x1C	CUSTOM_CTRL7	Go
0x1D	CUSTOM_CTRL8	Go
0x1E	CUSTOM_CTRL9	Go


## $7.5.4.1 \text{ CUSTOM\_CTRL1}$ (address = 0x16) [Default = 00h]

CUSTOM\_CTRL1 is shown in Figure 7-79 and described in Table 7-62.

Read/Write

Return to the Register Maps Table

#### Figure 7-79. CUSTOM\_CTRL1 Register



#### Table 7-62. CUSTOM\_CTRL1 Register Field Descriptions

Bit	t	Field	Туре	Default	Description
7-1		RSVD	R/W	000000b	Reserved
0		EN_CUSTOM	R/W	0b	0b = Custom microstepping table is disabled 1b = Custom microstepping table is enabled


### $7.5.4.2 \text{ CUSTOM\_CTRL2}$ (address = 0x17) [Default = 00h]

CUSTOM CTRL2 is shown in Figure 7-80 and described in Table 7-63.

Read/Write

Return to the Register Maps Table

## Figure 7-80. CUSTOM\_CTRL2 Register



### Table 7-63. CUSTOM\_CTRL2 Register Field Descriptions

Bit	Field	Type Default Description		Description
7-0	CUSTOM_CURRENT1[7:0]	R/W	0000000b	Current value for position 1 in first quadrant

## $7.5.4.3 \text{ CUSTOM\_CTRL3}$ (address = 0x18) [Default = 00h]

CUSTOM\_CTRL3 is shown in Figure 7-81 and described in Table 7-64.

Read/Write

Return to the Register Maps Table

Figure 7-81. CUSTOM\_CTRL3 Register




Table 7-64. CUSTOM\_CTRL3 Register Field Descriptions

Bit Field		Туре	Default	Description
7-0	CUSTOM_CURRENT2[7:0]	R/W	0000000b	Current value for position 2 in first quadrant

#### $7.5.4.4 \text{ CUSTOM\_CTRL4}$ (address = 0x19) [Default = 00h]

CUSTOM\_CTRL4 is shown in Figure 7-82 and described in Table 7-65.

Read/Write

Return to the Register Maps Table

Figure 7-82. CUSTOM\_CTRL4 Register



Table 7-65. CUSTOM\_CTRL4 Register Field Descriptions

Bit	Field	Туре	Default	Description
7-0	CUSTOM_CURRENT3[7:0]	R/W	0000000b	Current value for position 3 in first quadrant

#### 7.5.4.5 CUSTOM CTRL5 (address = 0x1A) [Default = 00h]

CUSTOM CTRL5 is shown in Figure 7-83 and described in Table 7-66.

Read/Write

Return to the Register Maps Table

Figure 7-83. CUSTOM\_CTRL5 Register




Table 7-66. CUSTOM CTRL5 Register Field Descriptions

	Bit	Field	Туре	Default	Description
İ	7-0	CUSTOM_CURRENT4[7:0]	R/W	0000000b	Current value for position 4 in first quadrant

#### 7.5.4.6 CUSTOM CTRL6 (address = 0x1B) [Default = 00h]

CUSTOM CTRL6 is shown in Figure 7-84 and described in Table 7-67.

Read/Write

Return to the Register Maps Table



Figure 7-84. CUSTOM CTRL6 Register

7 6 5 4 3 2 1 0													
	CUSTOM_CURRENT5[7:0]												
				R/W-000	000000b								

Table 7-67. CUSTOM\_CTRL6 Register Field Descriptions

Bit	Field	Туре	Default	Description
7-0	CUSTOM_CURRENT5[7:0]	R/W	0000000b	Current value for position 5 in first quadrant

### $7.5.4.7 \text{ CUSTOM\_CTRL7}$ (address = 0x1C) [Default = 00h]

CUSTOM CTRL7 is shown in Figure 7-85 and described in Table 7-68.

Read/Write

Return to the Register Maps Table

Figure 7-85. CUSTOM\_CTRL7 Register




Table 7-68. CUSTOM CTRL7 Register Field Descriptions

Bit	t Field Type Default Description		Description	
7-0	CUSTOM_CURRENT6[7:0]	R/W	0000000b	Current value for position 6 in first quadrant

## 7.5.4.8 CUSTOM CTRL8 (address = 0x1D) [Default = 00h]

CUSTOM CTRL8 is shown in Figure 7-86 and described in Table 7-69.

Read/Write

Return to the Register Maps Table

Figure 7-86. CUSTOM\_CTRL8 Register




Table 7-69. CUSTOM\_CTRL8 Register Field Descriptions

Bit	Field	Type Default Description		Description
7-0	CUSTOM_CURRENT7[7:0]	R/W	0000000b	Current value for position 7 in first quadrant

#### $7.5.4.9 \text{ CUSTOM\_CTRL9}$ (address = 0x1E) [Default = 00h]

CUSTOM\_CTRL9 is shown in Figure 7-87 and described in Table 7-70.

Read/Write

Return to the Register Maps Table

Submit Document Feedback

Figure 7-87. CUSTOM\_CTRL9 Register




Table 7-70. CUSTOM\_CTRL9 Register Field Descriptions

Bit	Field	Туре	Default	Description
7-0	CUSTOM_CURRENT8[7:0]	R/W	0000000b	Current value for position 8 in first quadrant

### 7.5.5 Auto torque Registers

The auto torque registers control the auto torque feature. Auto torque registers are read and write capable.

Table 7-71 lists the memory-mapped registers for the auto torque registers. All register offset addresses not listed in Table 7-71 should be considered as reserved locations and the register contents should not be modified.

Table 7-71. Auto torque Registers Summary Table

Address	Register Name	Section
0x1F	ATQ_CTRL1	Go
0x20	ATQ_CTRL2	Go
0x21	ATQ_CTRL3	Go
0x22	ATQ_CTRL4	Go
0x23	ATQ_CTRL5	Go
0x24	ATQ_CTRL6	Go
0x25	ATQ_CTRL7	Go
0x26	ATQ_CTRL8	Go
0x27	ATQ_CTRL9	Go
0x28	ATQ_CTRL10	Go
0x29	ATQ_CTRL11	Go
0x2A	ATQ_CTRL12	Go
0x2B	ATQ_CTRL13	Go
0x2C	ATQ_CTRL14	Go
0x2D	ATQ_CTRL15	Go
0x2E	ATQ_CTRL16	Go
0x2F	ATQ_CTRL17	Go
0x30	ATQ_CTRL18	Go


### 7.5.5.1 ATQ\_CTRL1 (address = 0x1F) [Default = 00h]

ATQ\_CTRL1 is shown in Figure 7-88 and described in Table 7-72.

Read ONLY

Return to the Register Maps Table

Figure 7-88. ATQ\_CTRL1 Register



#### Table 7-72. ATQ\_CTRL1 Register Field Descriptions

Bit	Field	Туре	Default	Description	
7-0	ATQ_CNT[7:0]	R	00000000b Read-only. Indicates the 8 LSB bits of the ATQ_CNT output.		
				ATQ_CNT is proportional to the mechanical load torque.	

Copyright © 2023 Texas Instruments Incorporated

Submit Document Feedback



### $7.5.5.2 ATQ\_CTRL2 (address = 0x20) [Default = 00h]$

ATQ\_CTRL2 is shown in Figure 7-89 and described in Table 7-73.

Read/Write

Return to the Register Maps Table

Figure 7-89. ATQ\_CTRL2 Register

		9		9 -				
7 6 5		4	3	2	1	0		
ATQ_CNT[10:8]			RS	VD	ATQ_LRN_CONST1[10:8]			
R/W-000b			R/W	-00b	R/W-000b			

Table 7-73. ATQ\_CTRL2 Register Field Descriptions

Bit	Field	Туре	Default	Description
7-5	ATQ_CNT[10:8]	R/W	000b	Indicates the 3 MSB bits of the ATQ_CNT output
4-3	RSVD	R/W	00b	Reserved
2-0	ATQ_LRN_CONST1[10:8]	R/W	000b	Indicates the 3 MSB bits of the ATQ_LRN parameter at the initial learning current level.

### $7.5.5.3 ATQ\_CTRL3 (address = 0x21) [Default = 00h]$

ATQ CTRL3 is shown in Figure 7-90 and described in Table 7-74.

Read/Write

Return to the Register Maps Table

Figure 7-90. ATQ\_CTRL3 Register




Table 7-74. ATQ\_CTRL3 Register Field Descriptions

Bit	Field	Type Default		Description
7-0	ATQ_LRN_CONST1[7:0]	R/W 0000000b		8 LSB bits of the ATQ_LRN parameter at the initial learning
				current level.

## $7.5.5.4 \text{ ATQ\_CTRL4}$ (address = 0x22) [Default = 20h]

ATQ\_CTRL4 is shown in Figure 7-91 and described in Table 7-75.

Read/Write

92

Return to the Register Maps Table

Figure 7-91. ATQ\_CTRL4 Register




Table 7-75. ATQ\_CTRL4 Register Field Descriptions

Bit	Field	Туре	Default	Description
7-3	ATQ_LRN_MIN_CURRENT[4:0]	R/W		Represents the initial current level for auto torque learning.  Initial learning current = ATQ_LRN_MIN_CURRENT * 8

Table 7-75. ATQ\_CTRL4 Register Field Descriptions (continued)

Bit	Field	Туре	Default	Description
2-0	ATQ_LRN_CONST2[10:8]	R/W	0000	3 MSB bits of the ATQ_LRN parameter at the final learning current level.

## $7.5.5.5 \text{ ATQ\_CTRL5}$ (address = 0x23) [Default = 00h]

ATQ\_CTRL5 is shown in Figure 7-92 and described in Table 7-76.

Read/Write

Return to the Register Maps Table

#### Figure 7-92. ATQ\_CTRL5 Register




Table 7-76. ATQ\_CTRL5 Register Field Descriptions

Bit	Field	Туре	Default	Description
7-0	ATQ_LRN_CONST2[7:0]	R/W	0000000b	8 LSB bits of the ATQ_LRN parameter at the final learning
				current level.


#### $7.5.5.6 ATQ\_CTRL6 (address = 0x24) [Default = 00h]$

ATQ\_CTRL6 is shown in Figure 7-93 and described in Table 7-77.

Read/Write

Return to the Register Maps Table

#### Figure 7-93. ATQ\_CTRL6 Register



#### Table 7-77. ATQ\_CTRL6 Register Field Descriptions

Bit	Field	Туре	Default	Description
7-0	ATQ_UL[7:0]	R/W	0000000b	Programs the upper limit of the auto torque hysterestic band.


## $7.5.5.7 ATQ\_CTRL7 (address = 0x25) [Default = 00h]$

ATQ\_CTRL7 is shown in Figure 7-94 and described in Table 7-78.

Read/Write

Return to the Register Maps Table

#### Figure 7-94. ATQ\_CTRL7 Register



Copyright © 2023 Texas Instruments Incorporated

Submit Document Feedback



Table 7-78. ATQ\_CTRL7 Register Field Descriptions

Bit	Field	Туре	Default	Description
7-0	ATQ_LL[7:0]	R/W	0000000b	Programs the lower limit of the auto torque hysterestic band.

## $7.5.5.8 \text{ ATQ\_CTRL8} (address = 0x26) [Default = 00h]$

ATQ\_CTRL8 is shown in Figure 7-95 and described in Table 7-79.

Read/Write

Return to the Register Maps Table

Figure 7-95. ATQ\_CTRL8 Register




Table 7-79. ATQ\_CTRL8 Register Field Descriptions

Bit	Field	Туре	Default	Description
7-0	KP[7:0]	R/W	0000000b	Proportional constant for tuning the auto torque PD control loop.

### 7.5.5.9 ATQ CTRL9 (address = 0x27) [Default = 00h]

ATQ CTRL9 is shown in Figure 7-96 and described in Table 7-80.

Read/Write

Return to the Register Maps Table

Figure 7-96. ATQ\_CTRL9 Register




Table 7-80. ATQ\_CTRL9 Register Field Descriptions

Bit Field Type Default		Description		
7-4	RSVD	R/W	0000b	Reserved.
3-0	KD[3:0]	R/W	0000b	Differential constant for tuning the auto torque PD control loop.

### $7.5.5.10 \text{ ATQ\_CTRL} 10 \text{ (address = } 0x28) \text{ [Default = } 08h]$

ATQ\_CTRL10 is shown in Figure 7-97 and described in Table 7-81.

Read/Write

Return to the Register Maps Table

Figure 7-97. ATQ\_CTRL10 Register

7	6	5	4	3	2	1	0
ATQ_EN	LRN_START		ATQ_FRZ[2:0]			ATQ_AVG[2:0]	
R/W-0b	R/W-0b		R/W-001b			R/W-000b	

Instruments www.ti.com

### Table 7-81. ATQ\_CTRL10 Register Field Descriptions

Bit	Field	Туре	Default	Description
7	ATQ_EN	R/W	0b	0 = auto torque is disabled 1 = auto torque is enabled
6	LRN_START	R/W	0b	Writing 1b to this bit enables the auto torque learning process.  After learning is completed, the bit automatically goes to 0b.
5-3	ATQ_FRZ[2:0]	R/W	001b	Delay in electrical half-cycles after which current is changed in response to the PD loop. A small value increases the current quickly to meet peak load demand. This parameter has a range of 1 to 7.  001b - Fastest response time, but the loop can become unstable 111b - Slowest response, but the loop will be stable
2-0	ATQ_AVG[2:0]	R/W	000b	The ATQ_CNT parameter is a moving average of ATQ_AVG number of half-cycles. Therefore, a high value for ATQ_AVG slows down the loop response time to a sudden peak load demand, but ensures smooth jerk-free transition to higher torque output. A low value causes the loop to respond immediately to a sudden load demand.  • 010b - 2 cycle average  • 100b - 4 cycle average  • 111b - 8 cycle average  • Other values : no averaging


## 7.5.5.11 ATQ\_CTRL11 (address = 0x29) [Default = 0Ah]

ATQ\_CTRL11 is shown in Figure 7-98 and described in Table 7-82.

Read/Write

Return to the Register Maps Table

## Figure 7-98. ATQ\_CTRL11 Register



## Table 7-82. ATQ\_CTRL11 Register Field Descriptions

Bit	Field	Туре	Default	Description
7-0	ATQ_TRQ_MIN[7:0]	R/W	00001010b	Minimum coil current when auto-torque is enabled.

### $7.5.5.12 ATQ\_CTRL12 (address = 0x2A) [Default = FFh]$

ATQ\_CTRL12 is shown in Figure 7-99 and described in Table 7-83.

Read/Write

Return to the Register Maps Table

### Figure 7-99. ATQ\_CTRL12 Register

7	6	5	4	3	2	1	0			
	ATQ_TRQ_MAX[7:0]									
	R/W-11111111b									

Copyright © 2023 Texas Instruments Incorporated Product Folder Links: DRV8452



Table 7-83. ATQ\_CTRL12 Register Field Descriptions

Bit	Field	Туре	Default	Description
7-0	ATQ_TRQ_MAX[7:0]	R/W	11111111b	Maximum coil current when auto-torque is enabled.

### $7.5.5.13 \text{ ATQ\_CTRL13} (address = 0x2B) [Default = 05h]$

ATQ\_CTRL13 is shown in Figure 7-100 and described in Table 7-84.

Read/Write

Return to the Register Maps Table

Figure 7-100. ATQ\_CTRL13 Register




Table 7-84. ATQ\_CTRL13 Register Field Descriptions

Bit	Field	Туре	Default	Description
7-0	ATQ_D_THR	R/W	00000101b	If error change is less then ATQ_D_THR, then KD does not
				contribute to correction. KD contributes only when error change
				is greater than ATQ_D_THR.
				For example: if ATQ_D_THR = 10,
				If error change is 9, u(t) = KP * e(t)
				If error change is 12, then u(t) = KP * e(t) + KD * de(t)/dt

### $7.5.5.14 \text{ ATQ\_CTRL}14 \text{ (address = 0x2C) [Default = 0Fh]}$

ATQ\_CTRL14 is shown in Figure 7-101 and described in Table 7-85.

Read/Write

Return to the Register Maps Table

Figure 7-101. ATQ\_CTRL14 Register




Table 7-85. ATQ\_CTRL14 Register Field Descriptions

Bit	Field	Туре	Default	Description
7-0	RSVD	R/W	00001111b	Reserved

### $7.5.5.15 \text{ ATQ\_CTRL15} (address = 0x2D) [Default = 00h]$

ATQ\_CTRL15 is shown in Figure 7-102 and described in Table 7-86.

Read/Write

Return to the Register Maps Table

Figure 7-102. ATQ CTRL15 Register

		gu.	0 / 10 <u>2</u> . / 11 Q		,.o.o.		
7 6 5 4			3	2	1	0	
ATQ_ERROR_TRUNCATE[3:0]				ATQ_LRN_	_STEP[1:0]	ATQ_LRN_CYC	LE_SELECT[1:0]
R/W-0000b			R/W	-00b	R/W	/-00b	

Table 7-86. ATQ\_CTRL15 Register Field Descriptions

		_	ister i leid Descriptions		
Bit	Field	Type	Default	Description	
7-4	ATQ_ERROR_TRUNCATE[3:0]	R/W	0000b	Number of LSB bits truncated from error before used in PD loop equations. This option helps removing noise in current.	
3-2	ATQ_LRN_STEP[1:0]	R/W	00b	Represents the increment to initial current level. It supports four options -  • 00b : ATQ_LRN_STEP = 128  • 01b : ATQ_LRN_STEP = 16  • 10b : ATQ_LRN_STEP = 32  • 11b : ATQ_LRN_STEP = 64  Example : If ATQ_LRN_STEP = 10b and ATQ_LRN_MIN_CURRENT = 11000b, then -  • Initial learn current level = 24*8 = 192  • Final learn current level = 192 + 32 = 224	
1-0	ATQ_LRN_CYCLE_SELECT[1:0]	R/W	00b	Represents the number of electrical half cycles spent in one current level after which the learning routine allows the current to jump to the other level. It supports four options -  • 00b: 8 half-cycles  • 01b: 16 half-cycles  • 10b: 24 half-cycles  • 11b: 32 half-cycles	

## $7.5.5.16 \text{ ATQ\_CTRL16} (address = 0x2E) [Default = FFh]$

ATQ\_CTRL16 is shown in Figure 7-103 and described in Table 7-87.

Read only

Return to the Register Maps Table

#### Figure 7-103. ATQ\_CTRL16 Register



#### Table 7-87. ATQ\_CTRL16 Register Field Descriptions

Bit	Field	Туре	Default	Description
7-0	ATQ_TRQ_DAC[7:0]	R		Outputs the value of motor current when auto-torque is enabled. ATQ_TRQ_DAC can vary between ATQ_TRQ_MIN and ATQ_TRQ_MAX.

#### Note

Product Folder Links: DRV8452

When auto-torque is disabled, ATQ\_TRQ\_DAC reads the value programmed to ATQ\_TRQ\_MAX.

## 7.5.5.17 ATQ\_CTRL17 (address = 0x2F) [Default = 00h]

ATQ\_CTRL17 is shown in Figure 7-104 and described in Table 7-88.

Read/Write

Return to the Register Maps Table



Figure 7-104. ATQ CTRL17 Register

7	6	5	4	3	2	1	0	
RSVD	VM_SCALE	RSVD						
R/W-0b	R/W-0b	R/W-00000b						

Table 7-88. ATQ\_CTRL17 Register Field Descriptions

Bit	Field	Туре	Default	Description
7	RSVD	R/W	0b	Reserved.
6	VM_SCALE	R/W	0b	When this bit is 1b, the learning routine will automatically modify the values of the learning parameters in the event of a supply voltage change.
5-0	RSVD	R/W	000000b	Reserved.

### 7.5.5.18 ATQ\_CTRL18 (address = 0x30) [Default = 00h]

ATQ\_CTRL18 is shown in Figure 7-105 and described in Table 7-89.

Read/Write

Return to the Register Maps Table

Figure 7-105. ATQ\_CTRL18 Register




Table 7-89, ATQ CTRL18 Register Field Descriptions

Bit	Field	Туре	Default	Description
7-0	RSVD	R/W	0000000b	Reserved.

### 7.5.6 Silent Step Registers

The silent step registers control the silent step decay mode. Silent step registers are read and write capable.

Table 7-90 lists the memory-mapped registers for the silent step registers. All register offset addresses not listed in Table 7-90 should be considered as reserved locations and the register contents should not be modified.

**Table 7-90. Silent step Registers Summary Table** 

Address	Register Name	Section
0x31	SS_CTRL1	Go
0x32	SS_CTRL2	Go
0x33	SS_CTRL3	Go
0x34	SS_CTRL4	Go
0x35	SS_CTRL5	Go

### 7.5.6.1 SS\_CTRL1 (address = 0x31) [Default = 00h]

SS\_CTRL1 is shown in Figure 7-106 and described in Table 7-91.

Read/Write

Return to the Register Maps Table

Figure	7-106	SS	CTRI 1	Register
i igui e	<i>1</i> - 100.	$\mathbf{J}\mathbf{J}$		Negistei

7 6 5 4 3 2 1
---------------

Submit Document Feedback

Product Folder Links: DRV8452

Figure 7-106. SS\_CTRL1 Register (continued)

SS_SMPL_SEL[1:0]	RSVD	SS_PWM_FREQ[1:0]	RSVD	EN_SS	
R/W-00b	R/W-00b	R/W-00b	R/W-0b	R/W-0b	

Table 7-91. SS\_CTRL1 Register Field Descriptions

Bit	Field	Туре	Default	Description		
7-6	SS_SMPL_SEL[1:0]	R/W	00b	Silent step current zero cross sampling time. Default value is 2 μs. If current waveform is distorted around zero crossing, increase the sampling time.  • 00b = 2 μs (default)  • 01b = 3 μs  • 10b = 4 μs  • 11b = 5 μs		
5-4	RSVD	R/W	00b	Reserved.		
3-2	SS_PWM_FREQ[1:0]	R/W	00b	Represents the PWM frequency (F <sub>PWM</sub> ) in silent step decay mode.  • 00b - 25KHz  • 01b - 33KHz  • 10b - 42KHz  • 11b - 50KHz		
1	RSVD	R/W	0b	Reserved		
0	EN_SS	R/W	0b	0b = silentstep decay mode is disabled 1b = silentstep decay mode is enabled		

## $7.5.6.2 SS\_CTRL2 (address = 0x32) [Default = 00h]$

SS\_CTRL2 is shown in Figure 7-107 and described in Table 7-92.

Read/Write

Return to the Register Maps Table

Figure 7-107. SS CTRL2 Register

		•		_				
7	6 5		4	3	2	1	0	
RSVD	SS_KP[6:0]							
R/W - 0b	R/W-0000000b							

Table 7-92. SS\_CTRL2 Register Field Descriptions

Bit	Field	Туре	Default	Description
7	RSVD	R/W	0b	Reserved.
6-0	SS_KP[6:0]			Represents the proportional gain of the silent step PI controller. Has a range of 0 to 127, with a default value of 0.

### 7.5.6.3 SS\_CTRL3 (address = 0x33) [Default = 00h]

SS\_CTRL3 is shown in Figure 7-108 and described in Table 7-93.

Read/Write

Return to the Register Maps Table



Figure 7-108. SS CTRL3 Register

7	6	5	4	3 2		1	0		
RSVD	SS_KI[6:0]								
R/W-0b	R/W-000000b								

Table 7-93. SS\_CTRL3 Register Field Descriptions

Bit	Field	Туре	Default	Description
7	RSVD	R/W	0b	Reserved.
6-0	SS_KI[6:0]			Represents the integral gain of the silent step PI controller. Has a range of 0 to 127, with a default value of 0.

## 7.5.6.4 SS\_CTRL4 (address = 0x34) [Default = 00h]

SS\_CTRL4 is shown in Figure 7-109 and described in Table 7-94.

Read/Write

Return to the Register Maps Table

Figure 7-109. SS CTRL4 Register

<u> </u>							
7	7 6 5 4		3	2	1	0	
RSVD	SS_KI_DIV_SEL[2:0]			RSVD	SS_KP_DIV_SEL[2:0]		
R/W-0b	R/W-000b			R/W-0b	R/W-000b		

Table 7-94. SS\_CTRL4 Register Field Descriptions

Bit	Field	Туре	Default	Description
7	RSVD	R/W	0b	Reserved
6-4	SS_KI_DIV_SEL[2:0]	R/W	000b	Divider factor for KI. Actual KI = SS_KI / SS_KI_DIV_SEL  000b - SS_KI/32  001b - SS_KI/64  010b - SS_KI/128  101b - SS_KI/256  100b - SS_KI/512  101b - SS_KI/16  110b - SS_KI
3-1	RSVD	R/W	0b	Reserved
0	SS_KP_DIV_SEL[2:0]	R/W	000b	Divider factor for KP. Actual KP = SS_KP / SS_KP_DIV_SEL.  000b - SS_KP/32  001b - SS_KP/64  010b - SS_KP/128  011b - SS_KP/256  100b - SS_KP/512  101b - SS_KP/16  110b - SS_KP

## $7.5.6.5 SS\_CTRL5 (address = 0x35) [Default = FFh]$


SS\_CTRL5 is shown in Figure 7-110 and described in Table 7-95.

Read/Write



## Return to the Register Maps Table

Figure 7-110. SS\_CTRL5 Register



## Table 7-95. SS\_CTRL5 Register Field Descriptions

Bit	Field	Туре	Default	Description
7-0	SS_THR[7:0]	R/W	11111111b	Programs the frequency at which the device transitions from silent step decay mode to another decay mode programmed by the DECAY bits. This frequency corresponds to the frequency of the sinusoidal current waveform.  • 00000001b = 2 Hz  • 00000010b = 4 Hz  • .
				• 11111111b = 510 Hz

Note

Do not set SS\_THR to 00000000b.



## 8 Application and Implementation

#### **Note**

Information in the following applications sections is not part of the TI component specification, and TI does not warrant its accuracy or completeness. TI's customers are responsible for determining suitability of components for their purposes, as well as validating and testing their design implementation to confirm system functionality.

#### 8.1 Application Information

The DRV8452 is used to control bipolar stepper motors.

#### 8.2 Typical Application

The following design procedure can be used to configure the DRV8452.

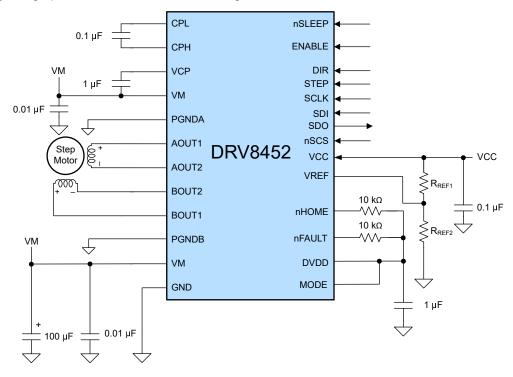


Figure 8-1. Typical Application Schematic

#### 8.2.1 Design Requirements

Table 8-1 lists the design input parameters for system design.

Table 8-1. Design Parameters

DESIGN PARAMETER	REFERENCE	EXAMPLE VALUE
Supply voltage	VM	24 V
Motor winding resistance	R <sub>L</sub>	0.5 Ω/phase
Motor winding inductance	LL	0.4 mH/phase
Motor full step angle	$\theta_{step}$	1.8°/step
Target microstepping level	n <sub>m</sub>	1/16 step
Target motor speed	V	7.5 rpm
Target full-scale current	I <sub>FS</sub>	5 A (DDW), 4 A (PWP)

#### 8.2.2 Detailed Design Procedure

#### 8.2.2.1 Stepper Motor Speed

The first step in configuring the DRV8452 requires the desired motor speed and microstepping level. If the target application requires a constant speed, then a square wave with frequency  $f_{\text{step}}$  must be applied to the STEP pin. If the target motor speed is too high, the motor does not spin. Make sure that the motor can support the target speed. Use Equation 15 to calculate  $f_{\text{step}}$  for a desired motor speed (v), microstepping level (n<sub>m</sub>), and motor full step angle ( $\theta_{\text{step}}$ )

$$f_{\text{step}} \text{ (steps / s)} = \frac{\text{v (rpm)} \times 360 (^{\circ} / \text{rot})}{\theta_{\text{step}} (^{\circ} / \text{step}) \times n_{\text{m}} \text{ (steps / microstep)} \times 60 \text{ (s / min)}}$$
(15)

The value of  $\theta_{\text{step}}$  can be found in the stepper motor data sheet, or written on the motor. For example, the motor in this application is required to rotate at 1.8°/step for a target of 7.5 rpm at 1/16 microstep mode. Using Equation 15,  $f_{\text{step}}$  can be calculated as 400 Hz.

The microstepping level is set by the M0 and M1 pins or the MICROSTEP\_MODE bits and can be any of the settings listed in Table 7-5. Higher microstepping results in a smoother motor motion and less audible noise, but requires a higher  $f_{\text{step}}$  to achieve the same motor speed.

#### 8.2.3 Application Performance Plots

Ch 1 = Coil A current, Ch 5 = Coil B current, Ch 6 = AOUT1, Ch 7 = AOUT2

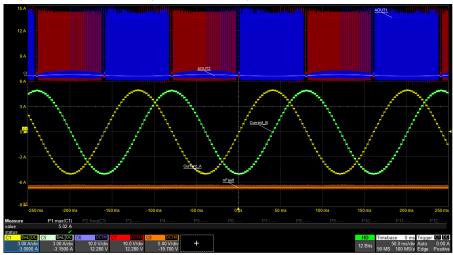


Figure 8-2. 1/16 microstepping at 400 pps with  $I_{FS} = 5$  A

Copyright © 2023 Texas Instruments Incorporated

Submit Document Feedback



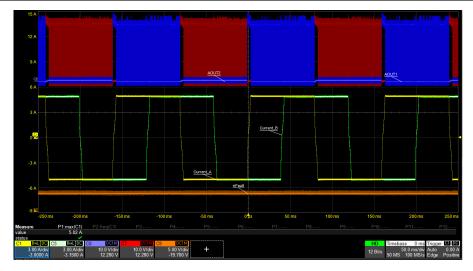


Figure 8-3. Full-step at 25 pps with  $I_{FS}$  = 5 A

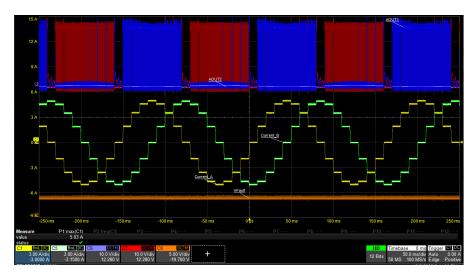


Figure 8-4. 1/4 microstepping at 100 pps with  $I_{FS}$  = 5 A

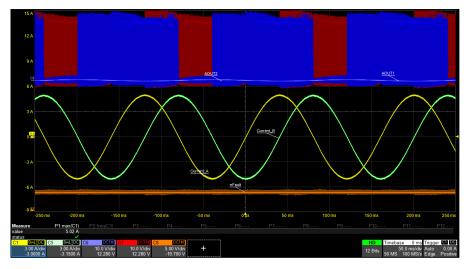


Figure 8-5. 1/256 microstepping at 6400 pps with  $I_{FS}$  = 5 A

#### 8.2.4 Thermal Application

This section presents the power dissipation calculation and junction temperature estimation of the device.

#### 8.2.4.1 Power Dissipation

The total power dissipation constitutes of three main components - conduction loss ( $P_{COND}$ ), switching loss ( $P_{SW}$ ) and power loss due to quiescent current consumption ( $P_{O}$ ).

#### 8.2.4.2 Conduction Loss

The current path for a motor connected in full-bridge is through the high-side FET of one half-bridge and low-side FET of the other half-bridge. The conduction loss ( $P_{COND}$ ) depends on the motor rms current ( $I_{RMS}$ ) and high-side ( $R_{DS(ONH)}$ ) and low-side ( $R_{DS(ONL)}$ ) on-state resistances as shown in Equation 16.

$$P_{COND} = 2 \times (I_{RMS})^2 \times (R_{DS(ONH)} + R_{DS(ONL)})$$
(16)

The conduction loss for the typical application shown in Table 8-1 is calculated below.

$$P_{COND} = 2 \times (I_{RMS})^2 \times (R_{DS(ONH)} + R_{DS(ONL)}) = 2 \times (5-A / \sqrt{2})^2 \times (0.106-Ω) = 2.65-W$$
, for the DDW package (17)

$$P_{COND} = 2 \text{ x } (I_{RMS})^2 \text{ x } (R_{DS(ONH)} + R_{DS(ONL)}) = 2 \text{ x } (4-A / \sqrt{2})^2 \text{ x } (0.117-\Omega) = 1.872-W, for the PWP package$$
 (18)

#### Note

This power calculation is highly dependent on the device temperature which significantly effects the high-side and low-side on-resistance of the FETs. For more accurate calculation, consider the dependency of on-resistance of FETs with device temperature.

#### 8.2.4.3 Switching Loss

Copyright © 2023 Texas Instruments Incorporated

The power loss due to the PWM switching frequency depends on the output voltage rise/fall time ( $t_{RF}$ ), supply voltage, motor RMS current and the PWM switching frequency. The switching losses in each H-bridge during rise-time and fall-time are calculated as shown in Equation 19 and Equation 20.

$$P_{SW RISE} = 0.5 \times V_{VM} \times I_{RMS} \times t_{RF} \times f_{PWM}$$
(19)

$$P_{SW FALL} = 0.5 \times V_{VM} \times I_{RMS} \times t_{RF} \times f_{PWM}$$
 (20)

The DRV8452 features two values of output rise/fall time ( $t_{RF}$ ) - 140 ns and 70 ns. The smaller rise/fall time obviously results in lesser switching loss. Assuming  $t_{RF}$  = 140 ns and 30-kHz PWM frequencyfor this exercise, and after substituting the values of various parameters, the switching losses in each H-bridge are calculated as shown below -

$$P_{SW RISE} = 0.5 \times 24 - V \times (5 - A / \sqrt{2}) \times (140 \text{ ns}) \times 30 - \text{kHz} = 0.178 - W$$
, for the DDW package (21)

$$P_{SW\_FALL} = 0.5 \times 24-V \times (5-A/\sqrt{2}) \times (140 \text{ ns}) \times 30-kHz = 0.178-W, \text{ for the DDW package}$$
 (22)

$$P_{SW RISF} = 0.5 \times 24 - V \times (4 - A / \sqrt{2}) \times (140 \text{ ns}) \times 30 - \text{kHz} = 0.143 - W, for the PWP package$$
 (23)

$$P_{SW\_FALL} = 0.5 \times 24-V \times (4-A/\sqrt{2}) \times (140 \text{ ns}) \times 30-kHz = 0.143-W, \text{ for the PWP package}$$
 (24)

The total switching loss for the stepper motor driver ( $P_{SW}$ ) is calculated as twice the sum of rise-time ( $P_{SW\_RISE}$ ) switching loss and fall-time ( $P_{SW\_FALL}$ ) switching loss as shown below -

$$P_{SW} = 2 \times (P_{SW RISE} + P_{SW FALL}) = 2 \times (0.178 - W + 0.178 - W) = 0.712 - W$$
 for the DDW package (25)



$$P_{SW} = 2 \times (P_{SW RISE} + P_{SW FALL}) = 2 \times (0.143-W + 0.143-W) = 0.572-W$$
 for the PWP package (26)

#### Note

The output rise/fall time (t<sub>RF</sub>) is expected to change based on the supply-voltage, temperature and device to device variation.

The switching loss is directly proportional to the PWM switching frequency. The PWM frequency in an application will depend on the supply voltage, inductance of the motor coil, back emf voltage and OFF time or the ripple current (for smart tune ripple control decay mode).

#### 8.2.4.4 Power Dissipation Due to Quiescent Current

When the VCC pin is connected to an external voltage, the quiescent current is typically 5 mA. The power dissipation due to the guiescent current consumed by the power supply is calculated as shown below -

$$P_{Q} = V_{VM} \times I_{VM} \tag{27}$$

Substituting the values, quiescent power loss can be calculated as shown below -

$$P_Q = 24-V \times 5-mA = 0.12-W$$
 (28)

#### Note

The quiescent power loss is calculated using the typical operating supply current (I<sub>VM</sub>) which is dependent on supply-voltage, temperature and device to device variations.

#### 8.2.4.5 Total Power Dissipation

The total power dissipation (P<sub>TOT</sub>) is calculated as the sum of conduction loss, switching loss and the quiescent power loss as shown below.

$$P_{TOT} = P_{COND} + P_{SW} + P_{Q} = 2.65 - W + 0.712 - W + 0.12 - W = 3.482 - W$$
 for the DDW package (29)

$$P_{TOT} = P_{COND} + P_{SW} + P_{Q} = 1.872 - W + 0.572 - W + 0.12 - W = 2.564 - W$$
 for the PWP package (30)

#### 8.2.4.6 Device Junction Temperature Estimation

For an ambient temperature of T<sub>A</sub> and total power dissipation (P<sub>TOT</sub>), the junction temperature (T<sub>J</sub>) is calculated

$$T_J = T_A + (P_{TOT} \times R_{\theta JA})$$

Considering a JEDEC standard 4-layer PCB, the junction-to-ambient thermal resistance (R<sub>0JA</sub>) is 22.5 °C/W for the DDW package and 24.5 °C/W for the PWP package.

Assuming 25°C ambient temperature, the junction temperature for the DDW package is calculated as shown below -

$$T_{IJ} = 25^{\circ}\text{C} + (3.482 - \text{W} \times 22.5^{\circ}\text{C/W}) = 103.3^{\circ}\text{C}$$
 (31)

The junction temperature for the PWP package is calculated as shown below -

$$T_{J} = 25^{\circ}\text{C} + (2.564 - \text{W x } 24.5^{\circ}\text{C/W}) = 87.8^{\circ}\text{C}$$
 (32)

As explained in Section 8.2.4.2, for more accurate calculation, consider the dependency of on-resistance of FETs with device junction temperature shown in Section 6.6.


For example,

#### www.ti.com

- At 103.3 °C junction temperature, the on-resistance will likely increase by a factor of 1.3 compared to the on-resistance at 25 °C.
- The initial estimate of conduction loss was 2.65 W.
- New estimate of conduction loss will therefore be 2.65 W x 1.3 = 3.445 W.
- New estimate of the total power loss will accordingly be 4.277 W.
- New estimate of junction temperature for the DDW package will be 121.2 °C.
- Further iterations are unlikely to increase the junction temperature estimate by significant amount.

#### 8.2.4.7 Thermal Images

Figure 8-6 and Figure 8-7 show the thermal images of the DRV8452 EVM at room temperature ambient for the DDW package at 24V, 5A, 1/16 microstep, 6 kpps speed; with and without auto-torque enabled.

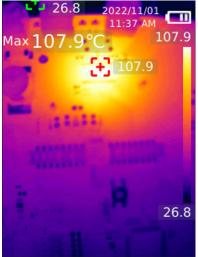



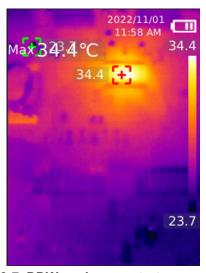


Figure 8-7. DDW package, auto-torque enabled



## 9 Thermal Considerations

### 9.1 Thermal Pad

Thermal pad of both DDW and PWP packages is attached at bottom of device to improve the thermal capability of the device. The thermal pad has to be soldered with a very good coverage on PCB in order to deliver the power specified in the datasheet. Refer to the Layout Guidelines section for more details.

### 9.2 PCB Material Recommendation

FR-4 Glass Epoxy material with 2 oz. (70 µm) copper on both top and bottom layer is recommended for improved thermal performance and better EMI margin (due to lower PCB trace inductance).

Product Folder Links: DRV8452

Submit Document Feedback

# 10 Power Supply Recommendations

- The DRV8452 is designed to operate from an input voltage supply (VM) from 4.5 V to 55 V.
- A 0.01-µF ceramic capacitor rated for VM must be placed close to the VM pins of DRV8452.
- · In addition, a bulk capacitor must be included on VM.

## 10.1 Bulk Capacitance

Having appropriate local bulk capacitance is an important factor in motor drive system design. It is generally beneficial to have more bulk capacitance, while the disadvantages are increased cost and physical size.

The amount of local capacitance needed depends on a variety of factors, including:

- · The highest current required by the motor system
- The power supply's capacitance and ability to source current
- · The amount of parasitic inductance between the power supply and motor system
- · The acceptable voltage ripple
- The type of motor used (brushed DC, brushless DC, stepper)
- · The motor braking method

The inductance between the power supply and motor drive system will limit the rate current can change from the power supply. If the local bulk capacitance is too small, the system will respond to excessive current demands or dumps from the motor with a change in voltage. When adequate bulk capacitance is used, the motor voltage remains stable and high current can be quickly supplied.

The data sheet generally provides a recommended value, but system-level testing is required to determine the appropriate sized bulk capacitor.

The voltage rating for bulk capacitors should be higher than the operating voltage, to provide margin for cases when the motor transfers energy to the supply.

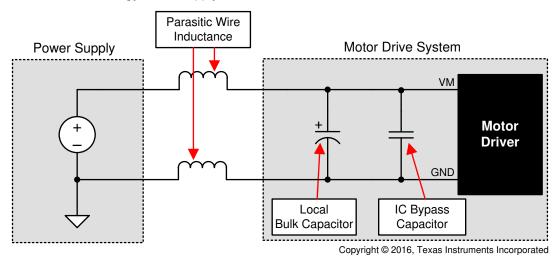


Figure 10-1. Example Setup of Motor Drive System With External Power Supply

# 10.2 Power Supplies

The DRV8452 needs only a single supply voltage connected to the VM pins to operate properly.

- The VM pin provides the power supply to the H-Bridges.
- An internal voltage regulator provides a 5V supply (DVDD) for the digital and low-voltage analog circuitry. The DVDD pin is not recommended to be used as a voltage source for external circuitry.
- An optional external low-voltage supply can be connected to the VCC pin to power the internal circuitry. A
   0.1-µF decoupling capacitor should be placed close to the VCC pin to provide a constant voltage during
   transient.

Copyright © 2023 Texas Instruments Incorporated



Additionally, the high-side gate drive requires a higher voltage supply, which is generated by the built-in charge pump. The charg pump requires external capacitors.

Product Folder Links: DRV8452

# 11 Layout

## 11.1 Layout Guidelines

- The VM pins should be bypassed to PGND pins using low-ESR ceramic bypass capacitors with a recommended value of 0.01 μF rated for VM. The capacitors should be placed as close to the VM pins as possible with a thick trace or ground plane connection to the device PGND pins.
- The VM pins should be bypassed to PGND using a bulk capacitor rated for VM. This component can be an
  electrolytic capacitor.
- A low-ESR ceramic capacitor must be placed in between the CPL and CPH pins. A value of 0.1 μF rated for VM is recommended. Place this component as close to the pins as possible.
- A low-ESR ceramic capacitor must be placed in between the VM and VCP pins. A value of 1 μF rated for 16
   V is recommended. Place this component as close to the pins as possible.
- Bypass the DVDD pin to ground with a low-ESR ceramic capacitor. A value of 1 μF rated for 6.3 V is recommended. Place this bypassing capacitor as close to the pin as possible.
- Bypass the VCC pin to ground with a low-ESR ceramic capacitor. A value of 0.1 µF rated for 6.3 V is recommended. Place this bypassing capacitor as close to the pin as possible.
- In general, inductance between the power supply pins and decoupling capacitors must be avoided.
- The thermal PAD of the package must be connected to system ground.
  - It is recommended to use a big unbroken single ground plane for the whole system / board. The ground plane can be made at bottom PCB layer.
  - In order to minimize the impedance and inductance, the traces from ground pins should be as short and wide as possible, before connecting to bottom layer ground plane through vias.
  - Multiple vias are suggested to reduce the impedance.
  - Try to clear the space around the device as much as possible especially at bottom PCB layer to improve the heat spreading.
  - Single or multiple internal ground planes connected to the thermal PAD will also help spreading the heat and reduce the thermal resistance.

#### 11.2 Layout Example

Follow the layout example of the DRV8452 EVM. The design files can be downloaded from the DRV8452EVM product folder.

Product Folder Links: DRV8452



# 12 Device and Documentation Support

TI offers an extensive line of development tools. Tools and software to evaluate the performance of the device, generate code, and develop solutions are listed below.

#### 12.1 Related Documentation

- Texas Instruments, Stepper motor system power loss reduction using auto-torque application report
- Texas Instruments, Integrated FETs vs External FETs: Performance Comparison of Motor Drivers application report
- Texas Instruments, How to Reduce Audible Noise in Stepper Motors application report
- Texas Instruments, How to Improve Motion Smoothness and Accuracy application report
- Texas Instruments, How smart tune regulates current in stepper motors application report
- Texas Instruments, Current Recirculation and Decay Modes application report
- Texas Instruments, How to Drive Unipolar Stepper Motors with DRV8xxx application report
- Texas Instruments, Understanding Motor Driver Current Ratings application report
- Texas Instruments, *Motor Drives Layout Guide* application report
- Texas Instruments, Semiconductor and IC Package Thermal Metrics application report

# 12.2 Receiving Notification of Documentation Updates

To receive notification of documentation updates, navigate to the device product folder on ti.com. Click on Subscribe to updates to register and receive a weekly digest of any product information that has changed. For change details, review the revision history included in any revised document.

### 12.3 Support Resources

TI E2E™ support forums are an engineer's go-to source for fast, verified answers and design help — straight from the experts. Search existing answers or ask your own question to get the guick design help you need.

Linked content is provided "AS IS" by the respective contributors. They do not constitute TI specifications and do not necessarily reflect TI's views; see TI's Terms of Use.

### 12.4 Trademarks

#### 12.5 Electrostatic Discharge Caution



This integrated circuit can be damaged by ESD. Texas Instruments recommends that all integrated circuits be handled with appropriate precautions. Failure to observe proper handling and installation procedures can cause damage.

ESD damage can range from subtle performance degradation to complete device failure. Precision integrated circuits may be more susceptible to damage because very small parametric changes could cause the device not to meet its published specifications.

#### 12.6 Glossary

TI Glossary

This glossary lists and explains terms, acronyms, and definitions.

Product Folder Links: DRV8452



# 13 Mechanical, Packaging, and Orderable Information

The following pages include mechanical, packaging, and orderable information. This information is the most current data available for the designated devices. This data is subject to change without notice and revision of this document. For browser-based versions of this data sheet, refer to the left-hand navigation.

Product Folder Links, DRV9

Copyright © 2023 Texas Instruments Incorporated

www.ti.com 23-Dec-2023

#### PACKAGING INFORMATION

Orderable Device	Status	Package Type	Package Drawing	Pins	Package Qty	Eco Plan	Lead finish/ Ball material	MSL Peak Temp	Op Temp (°C)	Device Marking (4/5)	Samples
							(6)				
DRV8452DDWR	ACTIVE	HTSSOP	DDW	44	2500	RoHS & Green	NIPDAU	Level-3-260C-168 HR	-40 to 125	DRV8452	Samples
DRV8452PWPR	ACTIVE	HTSSOP	PWP	28	2500	RoHS & Green	NIPDAU	Level-3-260C-168 HR	-40 to 125	DRV8452	Samples
DRV8452SPWPR	ACTIVE	HTSSOP	PWP	28	2500	RoHS & Green	NIPDAU	Level-3-260C-168 HR	-40 to 125	DRV8452S	Samples

(1) The marketing status values are defined as follows:

ACTIVE: Product device recommended for new designs.

LIFEBUY: TI has announced that the device will be discontinued, and a lifetime-buy period is in effect.

NRND: Not recommended for new designs. Device is in production to support existing customers, but TI does not recommend using this part in a new design.

PREVIEW: Device has been announced but is not in production. Samples may or may not be available.

**OBSOLETE:** TI has discontinued the production of the device.

(2) RoHS: TI defines "RoHS" to mean semiconductor products that are compliant with the current EU RoHS requirements for all 10 RoHS substances, including the requirement that RoHS substance do not exceed 0.1% by weight in homogeneous materials. Where designed to be soldered at high temperatures, "RoHS" products are suitable for use in specified lead-free processes. TI may reference these types of products as "Pb-Free".

RoHS Exempt: TI defines "RoHS Exempt" to mean products that contain lead but are compliant with EU RoHS pursuant to a specific EU RoHS exemption.

Green: TI defines "Green" to mean the content of Chlorine (CI) and Bromine (Br) based flame retardants meet JS709B low halogen requirements of <=1000ppm threshold. Antimony trioxide based flame retardants must also meet the <=1000ppm threshold requirement.

- (3) MSL, Peak Temp. The Moisture Sensitivity Level rating according to the JEDEC industry standard classifications, and peak solder temperature.
- (4) There may be additional marking, which relates to the logo, the lot trace code information, or the environmental category on the device.
- (5) Multiple Device Markings will be inside parentheses. Only one Device Marking contained in parentheses and separated by a "~" will appear on a device. If a line is indented then it is a continuation of the previous line and the two combined represent the entire Device Marking for that device.
- (6) Lead finish/Ball material Orderable Devices may have multiple material finish options. Finish options are separated by a vertical ruled line. Lead finish/Ball material values may wrap to two lines if the finish value exceeds the maximum column width.

**Important Information and Disclaimer:** The information provided on this page represents TI's knowledge and belief as of the date that it is provided. TI bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. TI has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. TI and TI suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.



# **PACKAGE OPTION ADDENDUM**

www.ti.com 23-Dec-2023

In no event shall TI's liability arising out of such information exceed the total purchase price of the TI part(s) at issue in this document sold by TI to Customer on an annual basis.

4.4 x 9.7, 0.65 mm pitch


SMALL OUTLINE PACKAGE

This image is a representation of the package family, actual package may vary. Refer to the product data sheet for package details.



# PowerPAD<sup>™</sup> TSSOP - 1.2 mm max height

SMALL OUTLINE PACKAGE

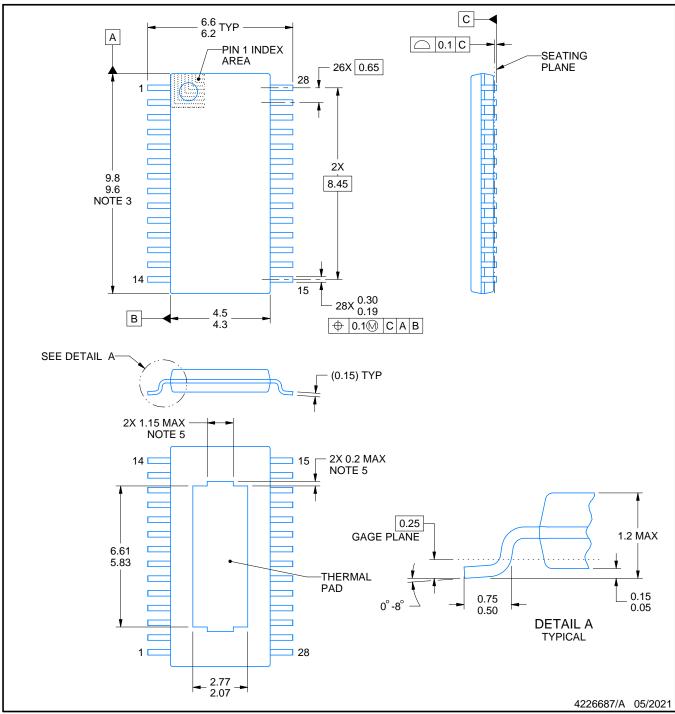

#### NOTES:

PowerPAD is a trademark of Texas Instruments.


- 1. All linear dimensions are in millimeters. Any dimensions in parenthesis are for reference only. Dimensioning and tolerancing per ASME Y14.5M.

  2. This drawing is subject to change without notice.

  3. This dimension does not include mold flash, protrusions, or gate burrs. Mold flash, protrusions, or gate burrs shall not
- exceed 0.15 mm per side.
  4. Reference JEDEC registration MO-153.
- 5. Features may differ or may not be present.




SMALL OUTLINE PACKAGE

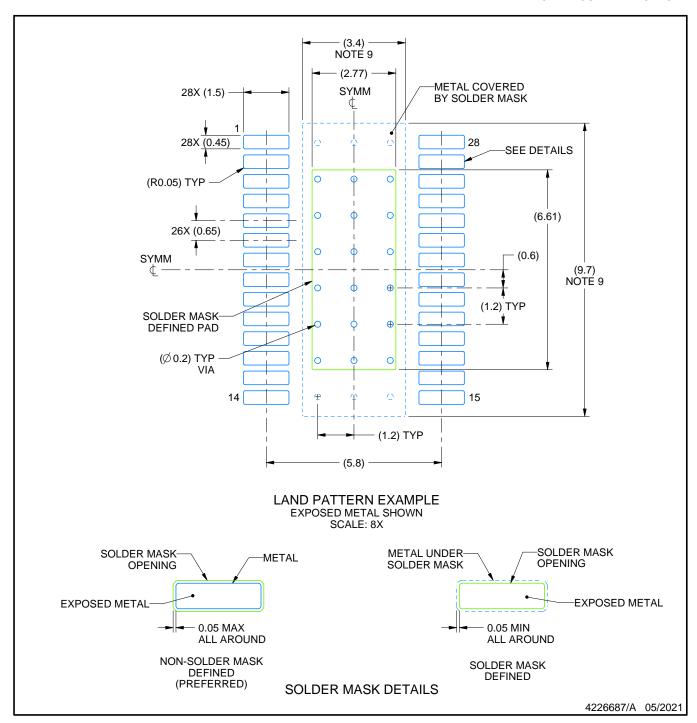

- 6. Publication IPC-7351 may have alternate designs.
- 7. Solder mask tolerances between and around signal pads can vary based on board fabrication site.
- 8. This package is designed to be soldered to a thermal pad on the board. For more information, see Texas Instruments literature numbers SLMA002 (www.ti.com/lit/slma002) and SLMA004 (www.ti.com/lit/slma004).
- 9. Size of metal pad may vary due to creepage requirement.
- 10. Vias are optional depending on application, refer to device data sheet. It is recommended that vias under paste be filled, plugged or tented.



SMALL OUTLINE PACKAGE

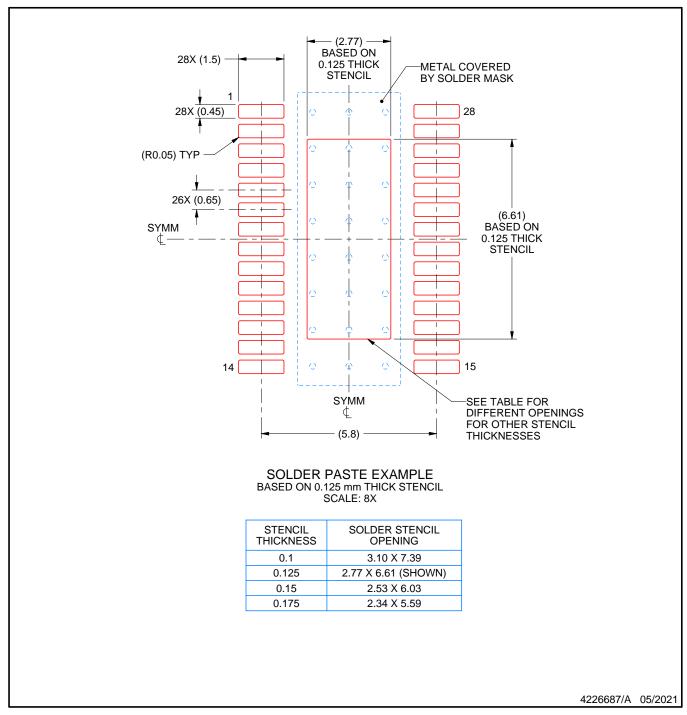


- 11. Laser cutting apertures with trapezoidal walls and rounded corners may offer better paste release. IPC-7525 may have alternate design recommendations.
- 12. Board assembly site may have different recommendations for stencil design.



6.1 x 14, 0.635 mm pitch

PLASTIC SMALL OUTLINE


This image is a representation of the package family, actual package may vary. Refer to the product data sheet for package details.

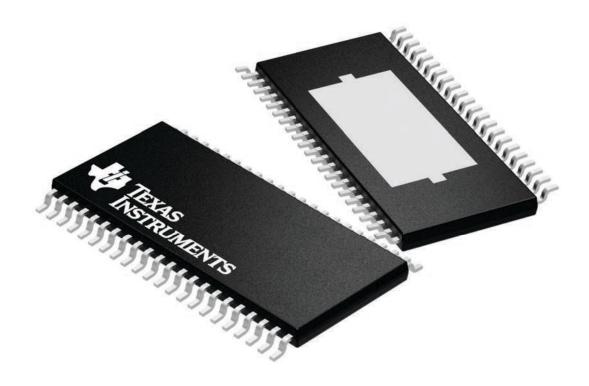

**Instruments** www.ti.com



PLASTIC SMALL OUTLINE

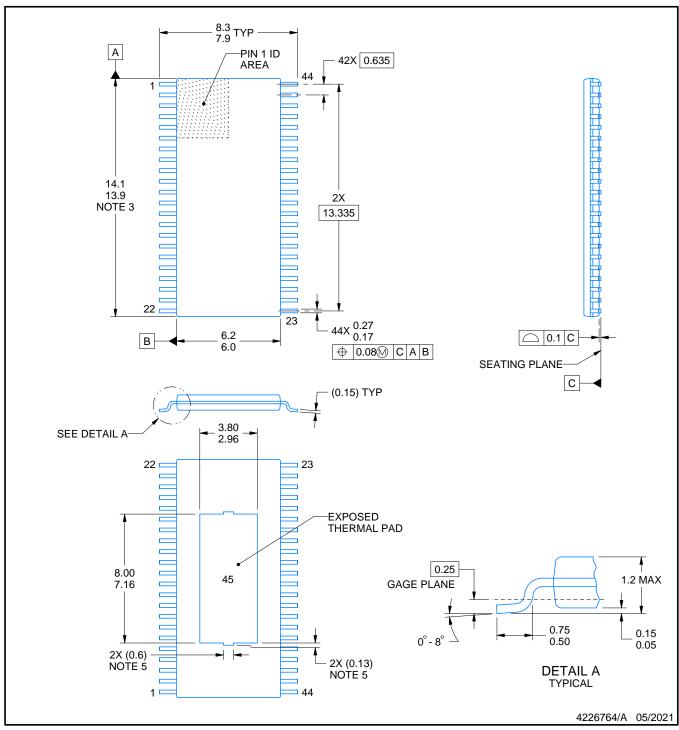


#### NOTES:

PowerPAD is a trademark of Texas Instruments.

- 1. All linear dimensions are in millimeters. Any dimensions in parenthesis are for reference only. Dimensioning and tolerancing per ASME Y14.5M.
- 2. This drawing is subject to change without notice.
- This dimension does not include mold flash, protrusions, or gate burrs. Mold flash, protrusions, or gate burrs shall not exceed 0.15 mm per side.
- 4. Reference JEDEC registration MO-153.
- 5. Features may differ or may not be present.




PLASTIC SMALL OUTLINE

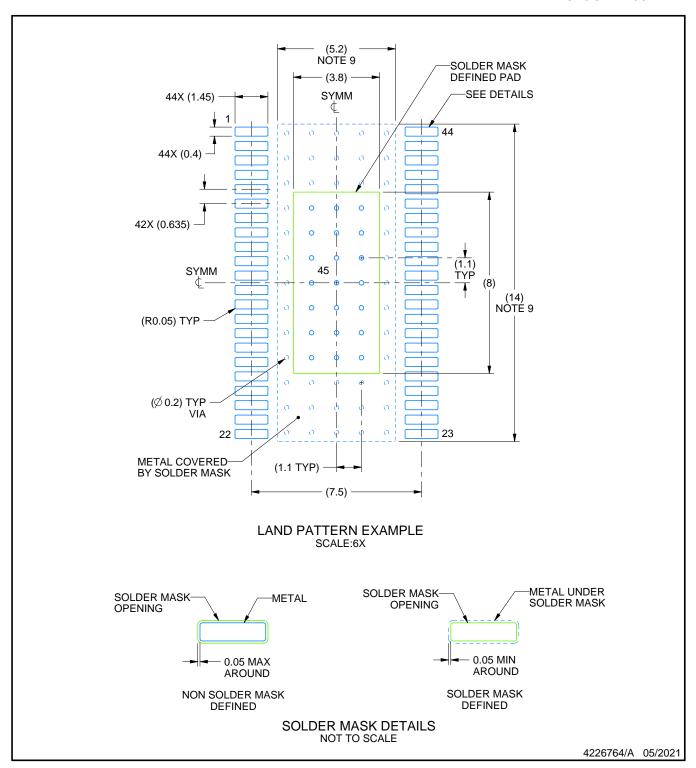

- 6. Publication IPC-7351 may have alternate designs.
- Solder mask tolerances between and around signal pads can vary based on board fabrication site.
   This package is designed to be soldered to a thermal pad on the board. For more information, see Texas Instruments literature numbers SLMA002 (www.ti.com/lit/slma002) and SLMA004 (www.ti.com/lit/slma004).
- 9. Size of metal pad may vary due to creepage requirement.



PLASTIC SMALL OUTLINE

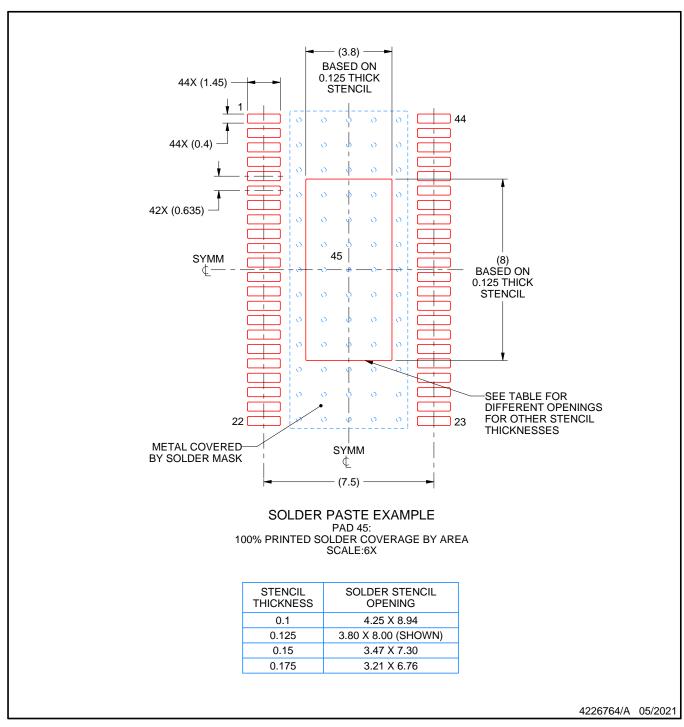

- 10. Laser cutting apertures with trapezoidal walls and rounded corners may offer better paste release. IPC-7525 may have alternate design recommendations.
- 11. Board assembly site may have different recommendations for stencil design.



## IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATA SHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to TI's Terms of Sale or other applicable terms available either on ti.com or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products.

TI objects to and rejects any additional or different terms you may have proposed.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2023, Texas Instruments Incorporated