

TPS382-Q1EVM (MSA011) Voltage Supervisor with Watchdog Timer User Guide

This user's guide describes the TPS382-Q1EVM evaluation module (EVM). This guide contains the EVM schematic, bill of materials (BOM), assembly drawing, and top and bottom board layouts.

Contents

| 1 | Introduction | 2 |
|----|--|---|
| 2 | Schematic, Bill of Materials, and Layout | 2 |
| 3 | EVM Connectors | |
| 4 | EVM Setup and Operation | 8 |
| | List of Figures | |
| 1 | TPS382-Q1EVM Board | 2 |
| 2 | TPS382-Q1EVM Schematic | 3 |
| 3 | Component Placement—Top Assembly | 5 |
| 4 | Component Placement—Bottom Assembly | 5 |
| 5 | Layout—Top | 5 |
| 6 | Layout—Bottom | 5 |
| 7 | Top Layer | 5 |
| 8 | Bottom Layer | 5 |
| 9 | Top Solder Mask | 6 |
| 10 | Bottom Solder Mask | 6 |
| 11 | TPS3820-33-Q1 RESET Asserted Due to Falling VCC | 8 |
| 12 | TPS3820-33-Q1 RESET De-Asserted Due to Rising VCC, With Delay t _d | 8 |
| 13 | TPS3828-33-Q1 RESET De-Asserted Due to Rising VCC, With Delay t _d | 8 |
| 14 | TPS3820-33-Q1 RESET Asserted Due to MR Being Pulled Low | 9 |
| 15 | TPS3820-33-Q1 RESET De-Asserted to MR Being Pulled High, With Delay t _d | 9 |
| 16 | TPS3823-25-Q1 RESET De-Asserted to MR Being Pulled High, With Delay t _d | 9 |
| 17 | TPS3820-33-Q1 Watchdog Timeout t _{tout} , From WDI Falling to RESET Falling | 9 |
| 18 | TPS3824-30-Q1 Watchdog Timeout t _{tout} , From WDI Falling to RESET Falling | 9 |
| | List of Tables | |
| 1 | BOM | 4 |
| 2 | Test Points | 6 |
| 3 | List of Onboard Jumpers | 7 |
| 4 | List of Input and Output Connectors | 7 |
| 5 | Nominal Supply and Typical Threshold Voltages | 8 |



Introduction www.ti.com

Trademarks

All trademarks are the property of their respective owners.

1 Introduction

The TPS382-Q1EVM is an evaluation module (EVM) for the TPS382x-Q1 family of voltage supervisors. The EVM has an operating voltage range of 1.1 V to 5.5 V, and offers input connections for all device input and output pins. All of the devices have separate supply connections, separate input and output lines, and all devices share a common ground. This allows the user to test multiple devices simultaneously with different supply voltages and different input conditions. Test points are provided to give the user access to multiple ground points.



Figure 1. TPS382-Q1EVM Board

1.1 Related Documentation

TPS382x-xx-Q1 Voltage Monitor With Watchdog Timer data sheet, SGLS143

1.2 TPS382x-Q1 Applications

- Automotive DSP's, Microcontrollers, or Microprocessors
- Safety-Critical Systems
- Automotive Systems

2 Schematic, Bill of Materials, and Layout

This section provides a detailed description of the TPS382-Q1EVM Schematic, bill of materials (BOM), and layout.



2.1 TPS382-Q1EVM Schematic

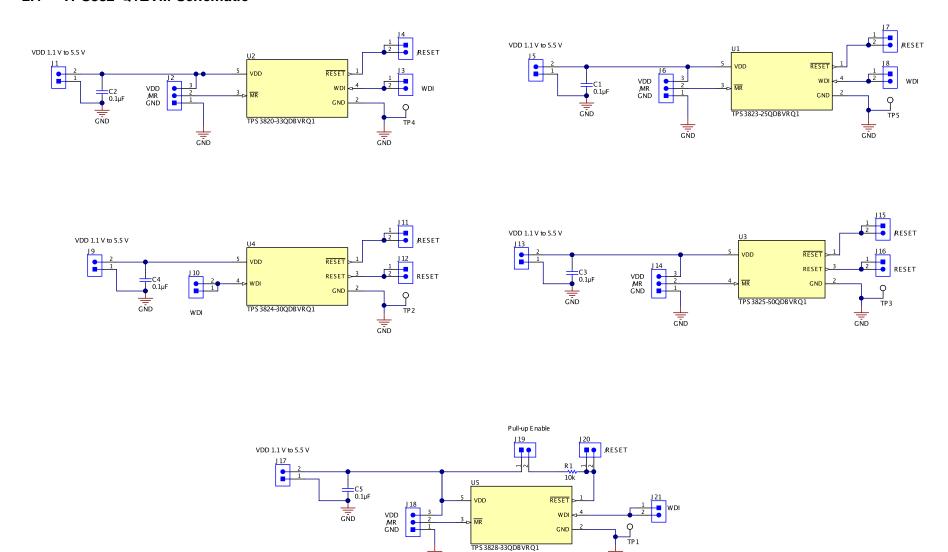


Figure 2. TPS382-Q1EVM Schematic

Copyright © 2016, Texas Instruments Incorporated



2.2 TPS382-Q1EVM Bill of Materials

Table 1. BOM

| DESIGNATOR | QUANTITY | VALUE | DESCRIPTION | PACKAGE REFERENCE | PART NUMBER | MANUFACTURER |
|---|----------|-------|--|-----------------------------------|--------------------|--------------------------------|
| !PCB | 1 | | Printed Circuit Board | | MSA011 | Any |
| C1, C2, C3, C4, C5 | 5 | 0.1uF | CAP, CERM, 0.1 µF, 16 V, ± 10%, X7R, AEC-Q200 Grade 1, 0603 | 0603 | GCM188R71C104KA37J | MuRata |
| J1, J3, J4, J5, J7, J8, J9, J10, J11, J12, J13, J15, J16, J17, J20, J21 | 16 | | Header, 2.54 mm, 2x1, Gold, R/A, SMT | Header, 2.54 mm, 2x1, R/A, SMT | 87898-0204 | Molex |
| J2, J6, J14, J18 | 4 | | Header, 100mil, 3x1, Tin, TH | Header, 3 PIN, 100mil, Tin | PEC03SAAN | Sullins Connector Solutions |
| J19 | 1 | | Header, 2.54mm, 1x2, Tin, Black, TH | Header, 2.54mm, 2x1, TH | PEC01DAAN | Sullins Connector Solutions |
| R1 | 1 | 10k | RES, 10 k, 5%, 0.1 W, 0603 | 0603 | CRCW060310K0JNEA | Vishay-Dale |
| SH-J1, SH-J2, SH-J3, SH- J4, SH-J5 | 5 | 1x2 | Shunt, 100mil, Gold plated, Black | Shunt | 969102-0000-DA | 3M |
| TP1, TP2, TP3, TP4, TP5 | 5 | | Test Point, Compact, SMT | Testpoint_Keystone_Comp act | 5016 | Keystone |
| U1 | 1 | | Voltage Monitor With Watchdog Timer, DBV0005A | DBV0005A | TPS3823-25QDBVRQ1 | Texas Instruments |
| U2 | 1 | | Voltage Monitor With Watchdog Timer, DBV0005A | DBV0005A | TPS3820-33QDBVRQ1 | Texas Instruments |
| U3 | 1 | | Voltage Monitor With Watchdog Timer, DBV0005A | DBV0005A | TPS3825-50QDBVRQ1 | Texas Instruments |
| U4 | 1 | | Voltage Monitor With Watchdog Timer, DBV0005A | DBV0005A | TPS3824-30QDBVRQ1 | Texas Instruments |
| U5 | 1 | | Voltage Monitor With Watchdog Timer, DBV0005A | DBV0005A | TPS3828-33QDBVRQ1 | Texas Instruments |
| FID1, FID2, FID3 | 0 | | Fiducial mark. There is nothing to buy or mount. | Fiducial | N/A | N/A |



2.3 Layout and Component Placement

Figure 3 and Figure 4 top and bottom assemblies of the printed circuit board (PCB) show the component placement on the EVM.

Figure 5 and Figure 6 show the top and bottom layouts, Figure 7 and Figure 8 show the top and bottom layers, and Figure 9 and Figure 10 show the top and bottom solder masks of the EVM.

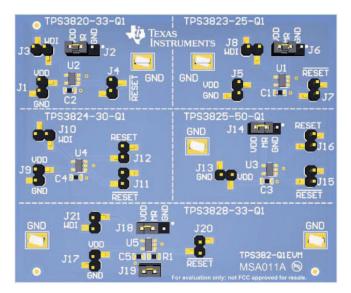
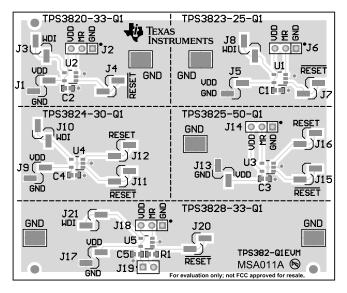



Figure 3. Component Placement—Top Assembly

Figure 4. Component Placement—Bottom Assembly






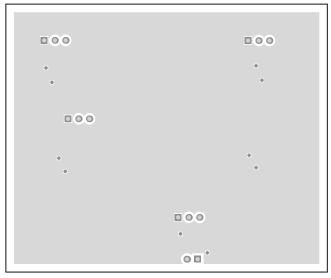


Figure 6. Layout—Bottom

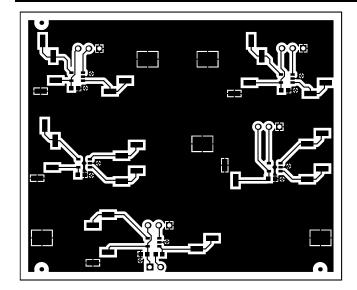

EVM Connectors www.ti.com



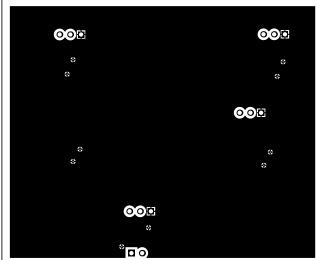
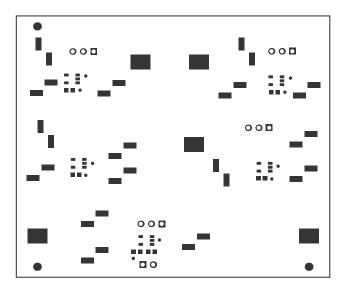


Figure 7. Top Layer

Figure 8. Bottom Layer





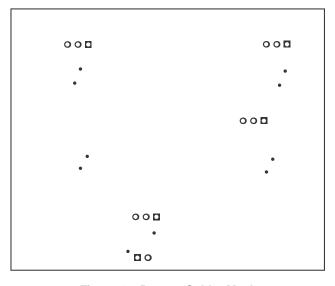


Figure 10. Bottom Solder Mask

3 EVM Connectors

This section describes the connectors, jumpers, and test points on the EVM as well as how to connect, set up, and properly use the EVM. Each device has an independent supply connection, but all grounds are connected on the board.

3.1 EVM Test Points

Table 2 lists the test points and functional descriptions.

Table 2. Test Points

| Test | Point | Function | Description |
|-----------|------------------|----------|--------------------------|
| Number | Silkscreen Label | | |
| TP1 – TP5 | GND | Ground | Common ground connection |

6



www.ti.com EVM Connectors

3.2 EVM Jumpers

Table 3 lists the jumpers onboard the TPS382-Q1EVM. As ordered, the TPS382-Q1EVM will have five jumpers installed.

Table 3. List of Onboard Jumpers

| Jumper | Device | Default Connection | Description |
|--------|---------------|--------------------|--|
| J2 | TPS3820-33-Q1 | VDD to MR | Connect $\overline{\text{MR}}$ to GND to force the device into reset. Otherwise, connect $\overline{\text{MR}}$ to VDD or leave $\overline{\text{MR}}$ floating. |
| J6 | TPS3823-25-Q1 | VDD to MR | Connect MR to GND to force the device into reset. Otherwise, connect MR to VDD or leave MR floating. |
| J14 | TPS3825-50-Q1 | VDD to MR | Connect MR to GND to force the device into reset. Otherwise, connect MR to VDD or leave MR floating. |
| J18 | TPS3828-33-Q1 | VDD to MR | Connect $\overline{\text{MR}}$ to GND to force the device into reset. Otherwise, connect $\overline{\text{MR}}$ to VDD or leave $\overline{\text{MR}}$ floating. |
| J19 | TPS3828-33-Q2 | Shorted | Enables the pullup to VDD for the open-drain reset output. To use a different pullup voltage, remove the shunt from J19 and supply a different voltage to J19 pin 2. |

3.3 EVM Input and Output Connectors

The following 2-pin headers are input and output connecters for each device.

Table 4. List of Input and Output Connectors

| Jumper | Device | Description | |
|-----------------|---------------|---|--|
| J1 | TPS3820-33-Q1 | Supply voltage for TPS3820-33-Q1 and common ground. | |
| J3 | | WDI pin for watchdog input. Leave floating if unused. | |
| J4 | | Active low reset output. | |
| J5 | TPS3823-25-Q1 | Supply voltage for TPS3823-25-Q1 and common ground. | |
| J7 Active low i | | Active low reset output. | |
| J8 | | WDI pin for watchdog. Leave floating if unused. | |
| J9 | TPS3824-30-Q1 | Supply voltage for TPS3824-30-Q1 and common ground. | |
| J10 | | WDI pin for watchdog. Leave floating if unused. | |
| J11 | | Active low reset output. | |
| J12 | | Active high reset output. | |
| J13 | TPS3825-50-Q1 | Supply voltage for TPS3825-50-Q1 and common ground. | |
| J15 | | Active low reset output. | |
| J16 | | Active high reset output. | |
| J17 | TPS3828-33-Q1 | Supply voltage for TPS3828-33-Q1 and common ground. | |
| J20 | | WDI pin for watchdog input. Leave floating if unused. | |
| J21 | | Active low reset output. | |



4 EVM Setup and Operation


This section describes the functionality and operation of the TPS382-Q1EVM. The user should read the TPS382x-Q1 datasheet for electrical characteristics of the device.

4.1 Input Power (VDD)

All VDD supplies are isolated from each other on the EVM, so all devices can be simultaneously powered at different voltages. Table 5 lists the nominal supply voltage and typical reset threshold voltage for each device. The supply voltage on any device should not exceed 5.5V.

Table 5. Nominal Supply and Typical Threshold Voltages

| Device | Nominal Supply Voltage (V) | Typical Threshold Voltage (V) |
|---------------|----------------------------|-------------------------------|
| TPS3820-33-Q1 | 3.3 | 2.93 |
| TPS3828-33-Q1 | 3.3 | 2.93 |
| TPS3823-25-Q1 | 2.5 | 2.25 |
| TPS3824-30-Q1 | 3.0 | 2.63 |
| TPS3825-50-Q1 | 5.0 | 4.55 |

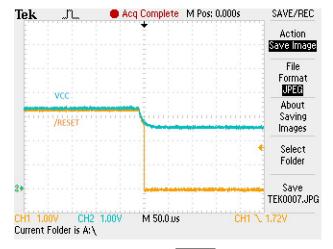

Acq Complete M Pos: -20.00ms SAVE/REC Tek JL. Action Save Image File Format JPEG About Saving Images Select Folder /RESET Save TEK0006.JPG CH2 1.00V M 5.00ms Current Folder is A:\

Figure 11. TPS3820-33-Q1 RESET Asserted Due to Falling VCC

Figure 12. TPS3820-33-Q1 RESET De-Asserted Due to Rising VCC, With Delay t_d

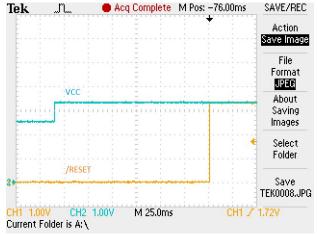


Figure 13. TPS3828-33-Q1 RESET De-Asserted Due to Rising VCC, With Delay t_d



4.2 Manual Reset (MR)

The TPS3820-Q1, TPS3823-Q1, TPS3825-Q1, and TPS3828-Q1 devices offer a manual reset pin. The EVM uses a 3-pin header for the $\overline{\text{MR}}$ pin of each device, and a jumper to connect the $\overline{\text{MR}}$ pin to VDD or GND. When $\overline{\text{MR}}$ is pulled low, the RESET output will be asserted (low for $\overline{\text{RESET}}$ pins and high for RESET pins). When this pin is pulled high or left floating, the reset output will be dependent on the supply voltage and WDI inputs on devices with WDI pin.



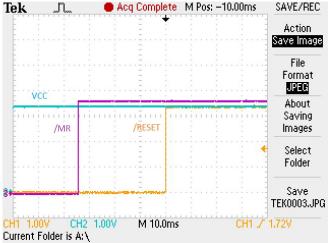


Figure 14. TPS3820-33-Q1 RESET Asserted Due to MR Being Pulled Low

Figure 15. TPS3820-33-Q1 RESET De-Asserted to MR Being Pulled High, With Delay t_d

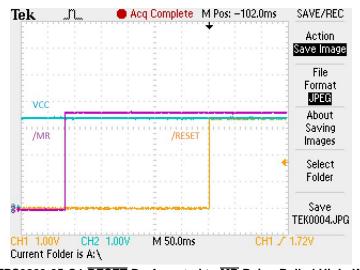


Figure 16. TPS3823-25-Q1 RESET De-Asserted to MR Being Pulled High, With Delay t_d

4.3 Watchdog Input (WDI)

The TPS3820-Q1, TPS3823-Q1, TPS3824-Q1, and TPS3828-Q1 have a watchdog to monitor a microcontroller. The EVM offers a 2-pin header for the WDI pin for each of these devices, and both header pins are connected to the device WDI pin. The device requires a positive or negative transition on the WDI pin within the t_{tout} time to avoid asserting the reset. If the device does not receive a transition on WDI, it will assert the reset output. When using the watchdog, the WDI pin should not exceed VDD by more than 0.3 V. When unused, the WDI pin can be left floating.



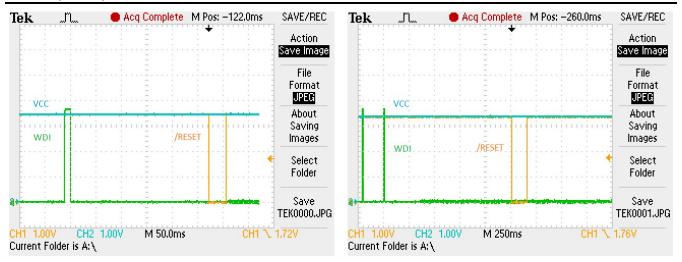


Figure 17. TPS3820-33-Q1 Watchdog Timeout t_{tout}, From WDI Falling to RESET Falling

Figure 18. TPS3824-30-Q1 Watchdog Timeout t_{tout} , From WDI Falling to RESET Falling

4.4 Reset Outputs (RESET and RESET)

All TPS382x-Q1 devices offer an active-low RESET signal, while TPS3824-Q1 and TPS3825-Q1 offer an additional active-high RESET signal. The EVM has a 2-pin header for each RESET and RESET pin, with both header pins shorted together. The reset signal will be asserted (low for RESET pins and high for RESET pins) when the supply voltage drops below the threshold voltage, when MR is pulled low, or when a trigger is not detected on the WDI pin for time t_{tout}. When VDD is higher than the threshold voltage, the MR pin is pulled high or floating, and WDI is triggered or left floating, then the reset pins will remain de-asserted

Revision History

| DATE | REVISION | NOTES |
|---------------|----------|-----------------|
| November 2016 | * | Initial Release |

STANDARD TERMS AND CONDITIONS FOR EVALUATION MODULES

- 1. Delivery: TI delivers TI evaluation boards, kits, or modules, including demonstration software, components, and/or documentation which may be provided together or separately (collectively, an "EVM" or "EVMs") to the User ("User") in accordance with the terms and conditions set forth herein. Acceptance of the EVM is expressly subject to the following terms and conditions.
 - 1.1 EVMs are intended solely for product or software developers for use in a research and development setting to facilitate feasibility evaluation, experimentation, or scientific analysis of TI semiconductors products. EVMs have no direct function and are not finished products. EVMs shall not be directly or indirectly assembled as a part or subassembly in any finished product. For clarification, any software or software tools provided with the EVM ("Software") shall not be subject to the terms and conditions set forth herein but rather shall be subject to the applicable terms and conditions that accompany such Software
 - 1.2 EVMs are not intended for consumer or household use. EVMs may not be sold, sublicensed, leased, rented, loaned, assigned, or otherwise distributed for commercial purposes by Users, in whole or in part, or used in any finished product or production system.
- 2 Limited Warranty and Related Remedies/Disclaimers:
 - 2.1 These terms and conditions do not apply to Software. The warranty, if any, for Software is covered in the applicable Software License Agreement.
 - 2.2 TI warrants that the TI EVM will conform to TI's published specifications for ninety (90) days after the date TI delivers such EVM to User. Notwithstanding the foregoing, TI shall not be liable for any defects that are caused by neglect, misuse or mistreatment by an entity other than TI, including improper installation or testing, or for any EVMs that have been altered or modified in any way by an entity other than TI. Moreover, TI shall not be liable for any defects that result from User's design, specifications or instructions for such EVMs. Testing and other quality control techniques are used to the extent TI deems necessary or as mandated by government requirements. TI does not test all parameters of each EVM.
 - 2.3 If any EVM fails to conform to the warranty set forth above, Tl's sole liability shall be at its option to repair or replace such EVM, or credit User's account for such EVM. Tl's liability under this warranty shall be limited to EVMs that are returned during the warranty period to the address designated by Tl and that are determined by Tl not to conform to such warranty. If Tl elects to repair or replace such EVM, Tl shall have a reasonable time to repair such EVM or provide replacements. Repaired EVMs shall be warranted for the remainder of the original warranty period. Replaced EVMs shall be warranted for a new full ninety (90) day warranty period.
- 3 Regulatory Notices:
 - 3.1 United States
 - 3.1.1 Notice applicable to EVMs not FCC-Approved:

This kit is designed to allow product developers to evaluate electronic components, circuitry, or software associated with the kit to determine whether to incorporate such items in a finished product and software developers to write software applications for use with the end product. This kit is not a finished product and when assembled may not be resold or otherwise marketed unless all required FCC equipment authorizations are first obtained. Operation is subject to the condition that this product not cause harmful interference to licensed radio stations and that this product accept harmful interference. Unless the assembled kit is designed to operate under part 15, part 18 or part 95 of this chapter, the operator of the kit must operate under the authority of an FCC license holder or must secure an experimental authorization under part 5 of this chapter.

3.1.2 For EVMs annotated as FCC - FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant:

CAUTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement for Class A EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Interference Statement for Class B EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

3.2 Canada

3.2.1 For EVMs issued with an Industry Canada Certificate of Conformance to RSS-210

Concerning EVMs Including Radio Transmitters:

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Concernant les EVMs avec appareils radio:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Concerning EVMs Including Detachable Antennas:

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. This radio transmitter has been approved by Industry Canada to operate with the antenna types listed in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante. Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur

3.3 Japan

- 3.3.1 Notice for EVMs delivered in Japan: Please see http://www.tij.co.jp/lsds/ti_ja/general/eStore/notice_01.page 日本国内に輸入される評価用キット、ボードについては、次のところをご覧ください。http://www.tij.co.jp/lsds/ti_ja/general/eStore/notice_01.page
- 3.3.2 Notice for Users of EVMs Considered "Radio Frequency Products" in Japan: EVMs entering Japan may not be certified by TI as conforming to Technical Regulations of Radio Law of Japan.

If User uses EVMs in Japan, not certified to Technical Regulations of Radio Law of Japan, User is required by Radio Law of Japan to follow the instructions below with respect to EVMs:

- Use EVMs in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
- 2. Use EVMs only after User obtains the license of Test Radio Station as provided in Radio Law of Japan with respect to EVMs, or
- 3. Use of EVMs only after User obtains the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to EVMs. Also, do not transfer EVMs, unless User gives the same notice above to the transferee. Please note that if User does not follow the instructions above, User will be subject to penalties of Radio Law of Japan.

【無線電波を送信する製品の開発キットをお使いになる際の注意事項】 開発キットの中には技術基準適合証明を受けていないものがあります。 技術適合証明を受けていないもののご使用に際しては、電波法遵守のため、以下のいずれかの措置を取っていただく必要がありますのでご注意ください。

- 1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用 いただく。
- 2. 実験局の免許を取得後ご使用いただく。
- 3. 技術基準適合証明を取得後ご使用いただく。
- なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。 上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。 日本テキサス・イ

東京都新宿区西新宿6丁目24番1号

西新宿三井ビル

ンスツルメンツ株式会社

- 3.3.3 Notice for EVMs for Power Line Communication: Please see http://www.tij.co.jp/lsds/ti_ja/general/eStore/notice_02.page 電力線搬送波通信についての開発キットをお使いになる際の注意事項については、次のところをご覧ください。http://www.tij.co.jp/lsds/ti_ja/general/eStore/notice_02.page
- 4 EVM Use Restrictions and Warnings:
 - 4.1 EVMS ARE NOT FOR USE IN FUNCTIONAL SAFETY AND/OR SAFETY CRITICAL EVALUATIONS, INCLUDING BUT NOT LIMITED TO EVALUATIONS OF LIFE SUPPORT APPLICATIONS.
 - 4.2 User must read and apply the user guide and other available documentation provided by TI regarding the EVM prior to handling or using the EVM, including without limitation any warning or restriction notices. The notices contain important safety information related to, for example, temperatures and voltages.
 - 4.3 Safety-Related Warnings and Restrictions:
 - 4.3.1 User shall operate the EVM within TI's recommended specifications and environmental considerations stated in the user guide, other available documentation provided by TI, and any other applicable requirements and employ reasonable and customary safeguards. Exceeding the specified performance ratings and specifications (including but not limited to input and output voltage, current, power, and environmental ranges) for the EVM may cause personal injury or death, or property damage. If there are questions concerning performance ratings and specifications, User should contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may also result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM user guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, even with the inputs and outputs kept within the specified allowable ranges, some circuit components may have elevated case temperatures. These components include but are not limited to linear regulators, switching transistors, pass transistors, current sense resistors, and heat sinks, which can be identified using the information in the associated documentation. When working with the EVM, please be aware that the EVM may become very warm.
 - 4.3.2 EVMs are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems. User assumes all responsibility and liability for proper and safe handling and use of the EVM by User or its employees, affiliates, contractors or designees. User assumes all responsibility and liability to ensure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard. User assumes all responsibility and liability for any improper or unsafe handling or use of the EVM by User or its employees, affiliates, contractors or designees.
 - 4.4 User assumes all responsibility and liability to determine whether the EVM is subject to any applicable international, federal, state, or local laws and regulations related to User's handling and use of the EVM and, if applicable, User assumes all responsibility and liability for compliance in all respects with such laws and regulations. User assumes all responsibility and liability for proper disposal and recycling of the EVM consistent with all applicable international, federal, state, and local requirements.
- 5. Accuracy of Information: To the extent TI provides information on the availability and function of EVMs, TI attempts to be as accurate as possible. However, TI does not warrant the accuracy of EVM descriptions, EVM availability or other information on its websites as accurate, complete, reliable, current, or error-free.

6. Disclaimers:

- 6.1 EXCEPT AS SET FORTH ABOVE, EVMS AND ANY WRITTEN DESIGN MATERIALS PROVIDED WITH THE EVM (AND THE DESIGN OF THE EVM ITSELF) ARE PROVIDED "AS IS" AND "WITH ALL FAULTS." TI DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, REGARDING SUCH ITEMS, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADE SECRETS OR OTHER INTELLECTUAL PROPERTY RIGHTS.
- 6.2 EXCEPT FOR THE LIMITED RIGHT TO USE THE EVM SET FORTH HEREIN, NOTHING IN THESE TERMS AND CONDITIONS SHALL BE CONSTRUED AS GRANTING OR CONFERRING ANY RIGHTS BY LICENSE, PATENT, OR ANY OTHER INDUSTRIAL OR INTELLECTUAL PROPERTY RIGHT OF TI, ITS SUPPLIERS/LICENSORS OR ANY OTHER THIRD PARTY, TO USE THE EVM IN ANY FINISHED END-USER OR READY-TO-USE FINAL PRODUCT, OR FOR ANY INVENTION, DISCOVERY OR IMPROVEMENT MADE, CONCEIVED OR ACQUIRED PRIOR TO OR AFTER DELIVERY OF THE EVM
- 7. USER'S INDEMNITY OBLIGATIONS AND REPRESENTATIONS. USER WILL DEFEND, INDEMNIFY AND HOLD TI, ITS LICENSORS AND THEIR REPRESENTATIVES HARMLESS FROM AND AGAINST ANY AND ALL CLAIMS, DAMAGES, LOSSES, EXPENSES, COSTS AND LIABILITIES (COLLECTIVELY, "CLAIMS") ARISING OUT OF OR IN CONNECTION WITH ANY HANDLING OR USE OF THE EVM THAT IS NOT IN ACCORDANCE WITH THESE TERMS AND CONDITIONS. THIS OBLIGATION SHALL APPLY WHETHER CLAIMS ARISE UNDER STATUTE, REGULATION, OR THE LAW OF TORT, CONTRACT OR ANY OTHER LEGAL THEORY, AND EVEN IF THE EVM FAILS TO PERFORM AS DESCRIBED OR EXPECTED.
- 8. Limitations on Damages and Liability:
 - 8.1 General Limitations. IN NO EVENT SHALL TI BE LIABLE FOR ANY SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL, OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF THESE TERMS ANDCONDITIONS OR THE USE OF THE EVMS PROVIDED HEREUNDER, REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCLUDED DAMAGES INCLUDE, BUT ARE NOT LIMITED TO, COST OF REMOVAL OR REINSTALLATION, ANCILLARY COSTS TO THE PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, RETESTING, OUTSIDE COMPUTER TIME, LABOR COSTS, LOSS OF GOODWILL, LOSS OF PROFITS, LOSS OF SAVINGS, LOSS OF USE, LOSS OF DATA, OR BUSINESS INTERRUPTION. NO CLAIM, SUIT OR ACTION SHALL BE BROUGHT AGAINST TI MORE THAN ONE YEAR AFTER THE RELATED CAUSE OF ACTION HAS OCCURRED.
 - 8.2 Specific Limitations. IN NO EVENT SHALL TI'S AGGREGATE LIABILITY FROM ANY WARRANTY OR OTHER OBLIGATION ARISING OUT OF OR IN CONNECTION WITH THESE TERMS AND CONDITIONS, OR ANY USE OF ANY TI EVM PROVIDED HEREUNDER, EXCEED THE TOTAL AMOUNT PAID TO TI FOR THE PARTICULAR UNITS SOLD UNDER THESE TERMS AND CONDITIONS WITH RESPECT TO WHICH LOSSES OR DAMAGES ARE CLAIMED. THE EXISTENCE OF MORE THAN ONE CLAIM AGAINST THE PARTICULAR UNITS SOLD TO USER UNDER THESE TERMS AND CONDITIONS SHALL NOT ENLARGE OR EXTEND THIS LIMIT.
- 9. Return Policy. Except as otherwise provided, TI does not offer any refunds, returns, or exchanges. Furthermore, no return of EVM(s) will be accepted if the package has been opened and no return of the EVM(s) will be accepted if they are damaged or otherwise not in a resalable condition. If User feels it has been incorrectly charged for the EVM(s) it ordered or that delivery violates the applicable order, User should contact TI. All refunds will be made in full within thirty (30) working days from the return of the components(s), excluding any postage or packaging costs.
- 10. Governing Law: These terms and conditions shall be governed by and interpreted in accordance with the laws of the State of Texas, without reference to conflict-of-laws principles. User agrees that non-exclusive jurisdiction for any dispute arising out of or relating to these terms and conditions lies within courts located in the State of Texas and consents to venue in Dallas County, Texas. Notwithstanding the foregoing, any judgment may be enforced in any United States or foreign court, and TI may seek injunctive relief in any United States or foreign court.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2016, Texas Instruments Incorporated

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as "components") are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have *not* been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.

Products Applications

Audio www.ti.com/audio Automotive and Transportation www.ti.com/automotive **Amplifiers** amplifier.ti.com Communications and Telecom www.ti.com/communications **Data Converters** dataconverter.ti.com Computers and Peripherals www.ti.com/computers **DLP® Products** www.dlp.com Consumer Electronics www.ti.com/consumer-apps DSP dsp.ti.com **Energy and Lighting** www.ti.com/energy Clocks and Timers www.ti.com/clocks Industrial www.ti.com/industrial Interface interface.ti.com Medical www.ti.com/medical Logic Security www.ti.com/security logic.ti.com

Power Mgmt power.ti.com Space, Avionics and Defense www.ti.com/space-avionics-defense

Microcontrollers microcontroller.ti.com Video and Imaging www.ti.com/video

RFID www.ti-rfid.com

OMAP Applications Processors www.ti.com/omap TI E2E Community e2e.ti.com

Wireless Connectivity www.ti.com/wirelessconnectivity