



DRV2605EVM-BT Test Report

TIDA-00266

Haptic Products

ABSTRACT

The DRV2605EVM-BT is a Bluetooth low energy controlled DRV2605 evaluation kit for prototyping and integrating haptics. This document briefly describes the output of the DRV2605EVM-BT.

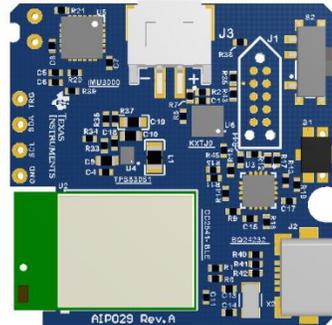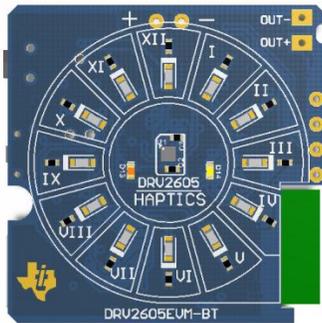

Document History

Version	Date	Author	Notes
1.0	June 2014	B. Burk, G. Ramachandran	First release
2.0	October 2014	B. Burk	Updated App Menu Screen

WARNING: EXPORT NOTICE

Recipient agrees to not knowingly export or re-export, directly or indirectly, any product or technical data (as defined by the U.S., EU, and other Export Administration Regulations) including software, or any controlled product restricted by other applicable national regulations, received from Disclosing party under this Agreement, or any direct product of such technology, to any destination to which such export or re-export is restricted or prohibited by U.S. or other applicable laws, without obtaining prior authorization from U.S. Department of Commerce and other competent Government authorities to the extent required by those laws. This provision shall survive termination or expiration of this Agreement.

According to our best knowledge of the state and end-use of this product or technology, and in compliance with the export control regulations of dual-use goods in force in the origin and exporting countries, this technology is classified as follows:

US ECCN: 3E991
 EU ECCN: EAR99

And may require export or re-export license for shipping it in compliance with the applicable regulations of certain countries.

Contents

Bench Setup	3
iOS App Setup	3
Graphs	4
Haptic Waveforms	6
Effect – Alert.....	6
Effect – Buzz.....	7
Effect – Strong Click.....	8
Effect – Sharp Tick 100%.....	9
Effect – Transition Ramp Down Short Smooth 1 – 100 %.....	10
Effect Sequence – Heart Beat.....	11

Figures

Lab Bench Setup	3
App – Menu Screen	3
App – Stock Waveforms	3
App – Waveform Sequencer	3
DRV2605EVM-BT Measurements with Low Pass Filter	4
Oscilloscope Labels	5
DRV2605 Alert Effect	6
DRV2605 Buzz 1 Effect	7
DRV2605 Strong Click Effect	8
DRV2605 Sharp Tick 100% Effect	9
DRV2605 Transition Ramp Down Short Smooth 1-100%	10
Heartbeat Waveform Control in iOS App	11
Heart Beat every 510ms	11
Heart Beat every 1ms	11

Tables

Document History	1
Table 1. Measurement Conditions	4

Bench Setup

The DRV2605EVM-BT was measured on the bench with the linear resonant actuator mounted to a 100g aluminum block as shown in the figure below. Below the metal block is a silicone gel block, which allows the metal block to vibrate without being interrupted by the solid table surface below.




Lab Bench Setup

The acceleration was measured using an accelerometer that converts peak voltage to acceleration equal to $57\text{mVp} = 1\text{Gp}$.

iOS App Setup


The Haptic Bluetooth Kit iOS app was used to control the DRV2605. See the Haptic Bluetooth Kit User's Guide for more information on connecting the app to the board.

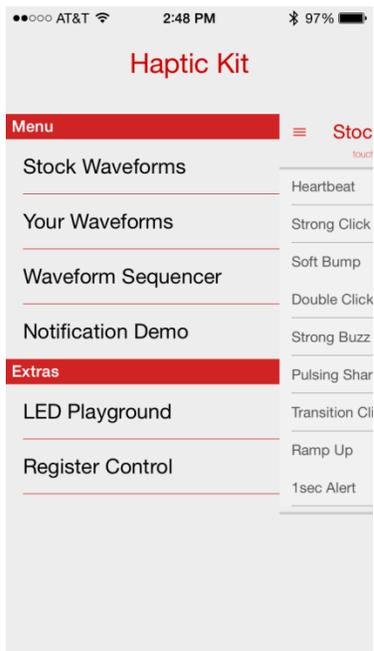

App – Menu Screen



App – Stock Waveforms

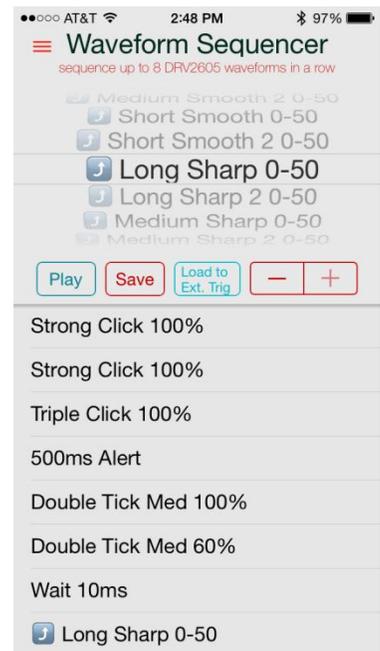

App – Waveform Sequencer


Graphs

The graphs in this document show three measurements: output voltage, supply current, and acceleration.

Table 1. Measurement Conditions


Measurement	Unit
Output Voltage	V_{rms}
Supply Current	A
Acceleration	mV_p

- Output Voltage is the differential output between OUT+ and OUT-. In the oscilloscope plots a low pass filter was used so that the underlying waveform could be identified easily.

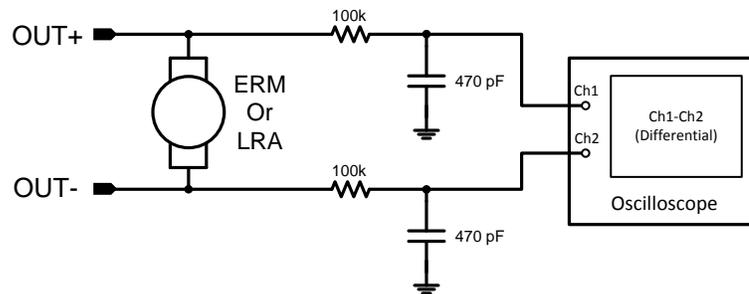

DRV2605EVM-BT Measurements with Low Pass Filter

- Supply Current – the supply current was measured using an inductive current sensor.
- Acceleration – the accelerometer was used to obtain a quantifiable measure of acceleration. The accelerometer converts 1G of peak acceleration to 57mV of peak voltage. This means that if the oscilloscope show 114mV at the peak of the acceleration waveform then the acceleration is equal to $2G = 114mV_p / 2$. G represents the unit of gravity.

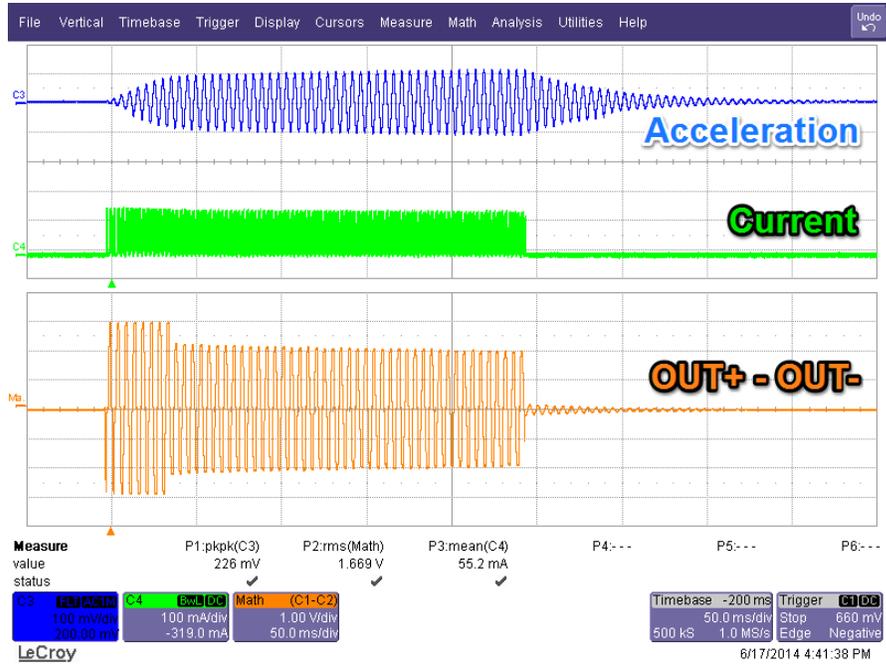

Oscilloscope Labels


Haptic Waveforms

The sections below describe various waveforms and sequences that can be created using the DRV2605EVM-BT.

Effect – Alert

The alert waveform is a long buzz waveform used for alerting users. This is similar to a silent alert on a mobile phone.

Output Voltage	Acceleration	Supply Current (Avg.)
1.5 Vrms	2.02 G	48.9 mA

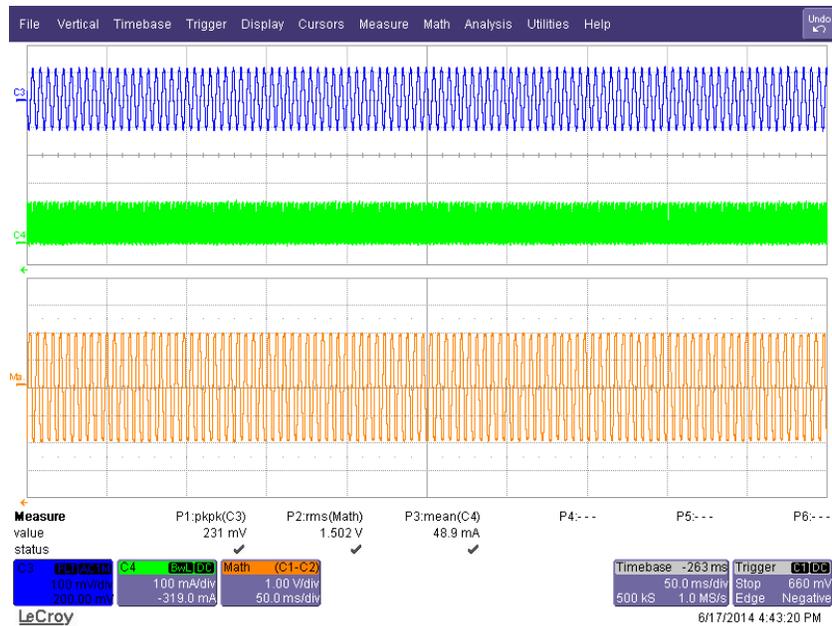


DRV2605 Alert Effect

Effect – Buzz

The buzz waveform is a short version of the alert. Notice the overdrive at the beginning of the output voltage waveform. This helps the actuator reach peak acceleration quick.

Output Voltage	Acceleration	Supply Current (Avg.)	Duration	Energy Consumption
1.67 Vrms	1.98 G	55.2 mA	240 ms	3.68 uAh

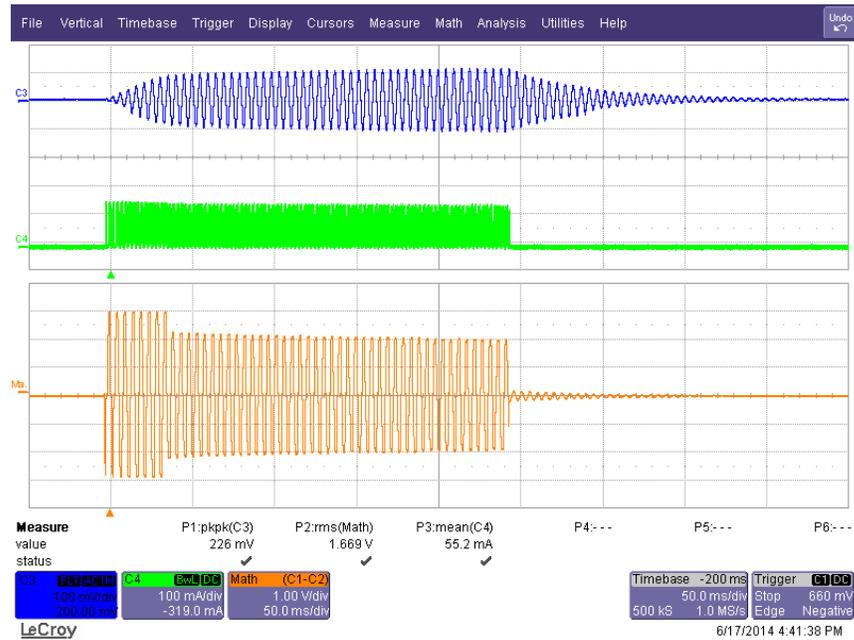


DRV2605 Buzz 1 Effect

Effect – Strong Click

The strong click waveform can be used to create feedback when a button is pressed or an action is triggered in an end application.

Notice that the acceleration is not as high as the buzz. This is a result of the short duration waveform. This is perfectly acceptable for a click. The DRV2605 overdrive feature helps speed the startup time of the actuator by applying a higher voltage at the beginning.

Output Voltage	Acceleration	Supply Current (Avg.)	Duration	Energy Consumption
2.05 Vrms	1.58 G	69.8 mA	60 ms	1.16 uAh

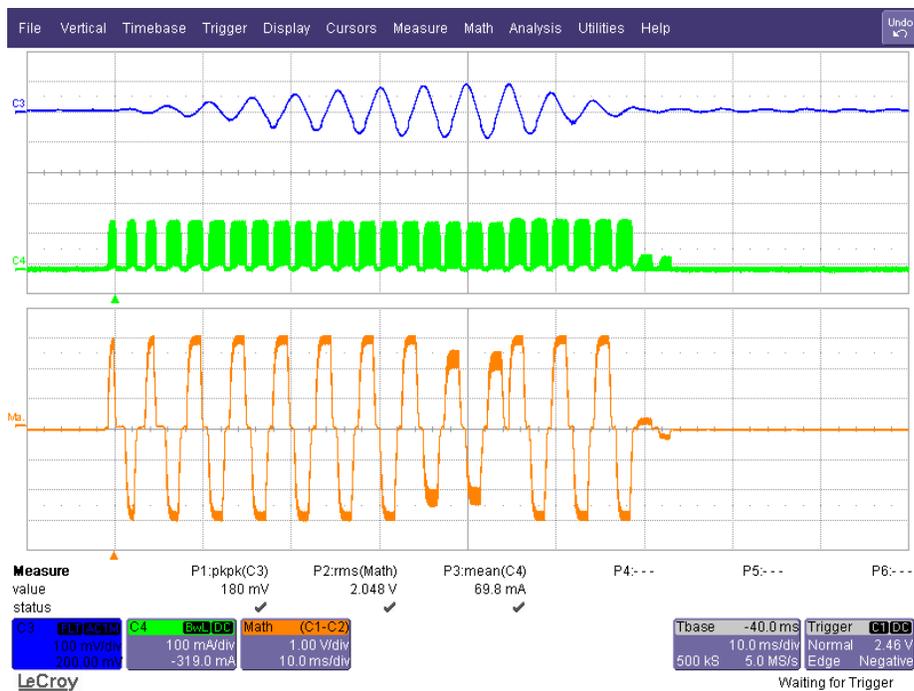


DRV2605 Strong Click Effect

Effect – Sharp Tick 100%

Sharp tick is similar to the Strong Click except the duration of the waveform is about half. This will result in a much sharp, but less powerful click.

Output Voltage	Acceleration	Supply Current (Avg.)	Duration	Energy Consumption
1.98 Vrms	0.68 G	67.7 mA	25 ms	0.47 uAh

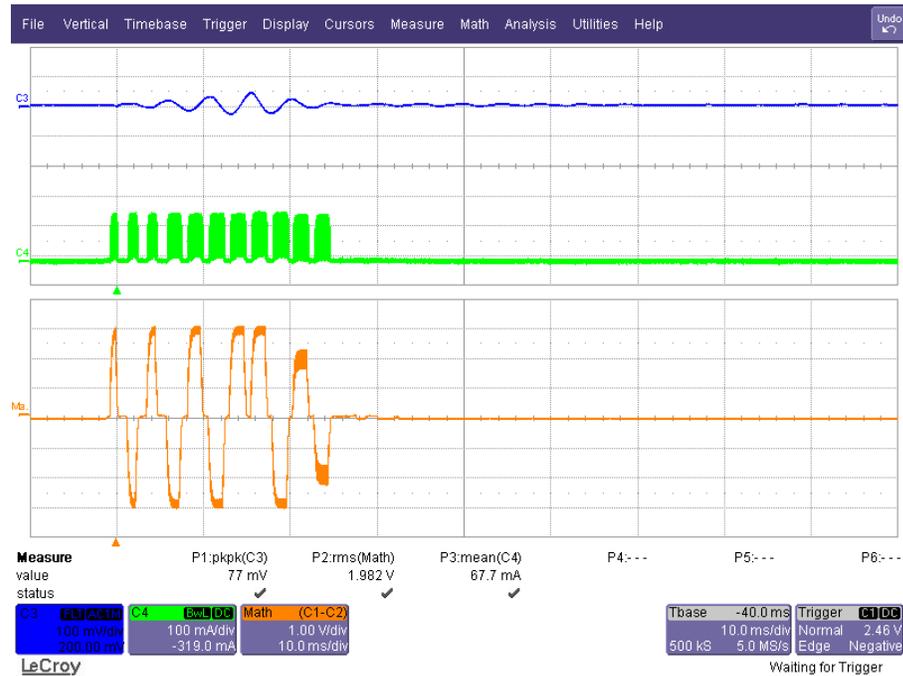


DRV2605 Sharp Tick 100% Effect

Effect – Transition Ramp Down Short Smooth 1 – 100 %

The waveform below shows a ramp down (also known as a transition).


Output Voltage	Acceleration	Supply Current (Avg.)	Duration	Energy Consumption
1.18 Vrms	1.55 G	35.1 mA	275 ms	2.68 uAh

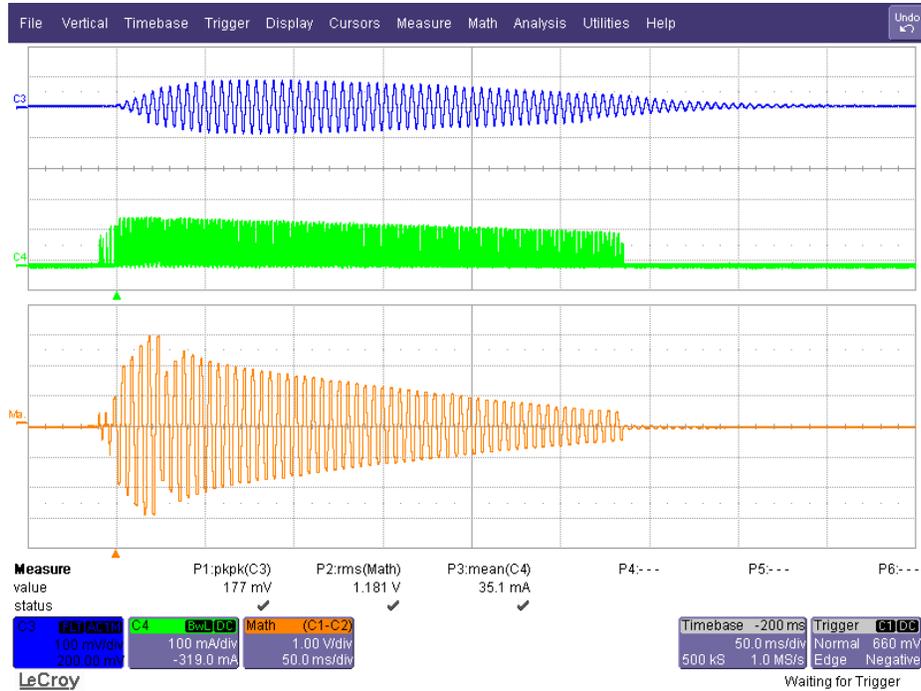

DRV2605 Transition Ramp Down Short Smooth 1-100%


Effect Sequence – Heart Beat

The Heart Beat in the Stock Waveforms section of the iOS app is a sequence of effects. The Heart Beat effect is a combination of double click effects with different timing intervals depending on the beats per minute selected.

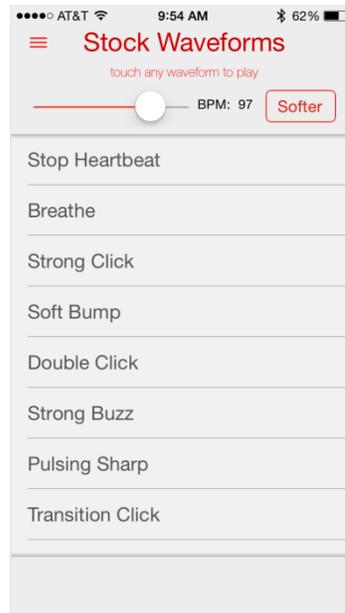

Heartbeat Waveform Control in iOS App

The graphs below show two different speeds of the heart beat effect. The image on the left shows a double click every 510 millisecond and the image on the right shows a double click every 1 second.

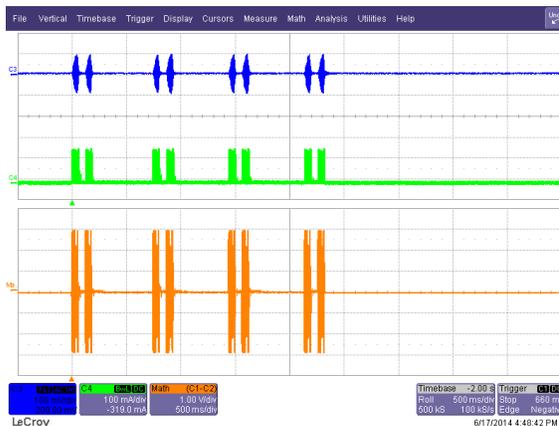

Heart Beat every 510ms



Heart Beat every 1ms

The DRV2605 can control the timing between effects and even allows the use of different timing within the same sequence. The image below shows the timing was changed between four double click effects.



Heart Beat Transition

IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATA SHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to [TI's Terms of Sale](#) or other applicable terms available either on ti.com or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products.

TI objects to and rejects any additional or different terms you may have proposed.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2021, Texas Instruments Incorporated