

UCC27710-005 Evaluation Module

This user's guide describes the characteristics, operation, and use of the UCC27710 evaluation module (EVM). A complete schematic diagram, printed-circuit board layouts, and list of materials are included in this document.

		Contents	
1	Introd	uction	2
2		iption	
	2.1	Features	2
	2.2	I/O Description	3
3	Electr	ical Specifications	3
4	Test S	Summary	4
	4.1	Definitions	4
	4.2	Equipment	4
	4.3	Equipment Setup	4
5	Power	r Up and Power Down Procedure	6
	5.1	Power Up	6
	5.2	Power Down	7
6	Typica	al Performance Waveforms ($C_L = 1000 \text{ pF}$)	7
	6.1	Input Signals With Greater Than 150-ns Dead Time	7
7	Scher	natic	8
8	Layou	t Diagrams	9
9	List of	Materials	11
		List of Figures	
1	Bench	Setup Diagram and Configuration	5
2	Exam Inputs	ple Input and Output Waveforms with Complimentary Input Signals (Green and Magenta are PWM , Yellow and Blue are Driver Outputs)	6
3		d HO Waveforms if Input Dead Time is Greater Than Internal Dead Time (Yellow and Magenta are	7

	PWM Inputs, Green and Blue are Driver Outputs)	1
4	LI and LO Waveforms if Input Dead Time is Greater Than Internal Dead Time (Yellow and Magenta are PWM Inputs, Green and Blue are Driver Outputs)	7
5	UCC27710EVM-005 Schematic	8
6	Top Overlay	9
7	Top Layer	9
8	Bottom Layer	10
9	Bottom Overlay	10

List of Tables

1	Connection Descriptions	3
2	UCC27710EVM-005 Electrical Specifications	3
3	Two-Channel Function Generator Settings	4
4	Oscilloscope Settings	4
5	UCC27710EVM-005 List of Materials	11

Trademarks

TEXAS INSTRUMENTS

www.ti.com

All trademarks are the property of their respective owners.

1 Introduction

The UCC27710EVM-005 evaluation module is designed for evaluation of the UCC27710, a member of TI's 620-V high-side and low-side gate-driver family. This driver is a 620-V, 0.5-A source, and 1.0-A sink peak current device for driving two MOSFETs or IGBTs. The pullup and pulldown resistance of the UCC27710 allows for driving large power MOSFETs at modest switching frequencies in VFD or inverter applications, or lower charge power devices at higher switching frequencies. It has excellent propagation delay matching between the high-side and low-side drivers and rising and falling edges for reliable timing of the gate-drive signals. Gate-drive robustness is enhanced by the output interlock feature which guarantees a 150-ns dead time between the output signals in the case of input signals with no dead time or overlapping. The UCC27710 inputs can tolerate negative voltage and signals as high as 20 V, regardless of the VDD voltage which allow for interface to pulse transformers and enhances device robustness.

The UCC27710 driver HS node can tolerate significant short-term negative voltage spikes and maintain the correct output behavior, a key consideration with many high-voltage power trains.

2 Description

The board is developed so the UCC27710 driver performance can be evaluated compared to data sheet parameters, or externally connected to power devices with provisions for source and sink gate resistance flexibility. The UCC27710EVM-005 evaluation board uses surface-mount test points that allow connection to LI, HI, VCC, and VHB inputs. A variety of test points are available for probing the UCC27710. The input bias is configured so the VHB-VHS high-side bias can be sourced from VCC, or an external additional bias can be added to provide VHB-VHS directly. The high-side and low-side driver output returns are separated on HS and GND to allow evaluation of the UCC27710 HS negative voltage capabilities. Moreover, the PCB layout is optimized with minimized loop area in each gate-driver loop and power-supply loop with bypassing capacitors. For detailed device information, refer to the UCC27710 data sheet (SLUSD05).

2.1 Features

The EVM has the following features:

- Evaluation module for the low-voltage features of UCC27710 gate driver
- 10-V to 20-V VCC power-supply range
- TTL-compatible inputs
- PCB layout optimized for power supply bypassing capacitor, gate-driver loop
- · Capacitive load with external gate-drive resistor and diode for power and thermal testing
- Allows quick verification of most of the data sheet parameters
- Test points allow probing all the key pins of the UCC27710EVM-005



2.2 I/O Description

Table 1 lists and describes the pins on the EVM.

Pins	Description
VCC	VCC positive input. Powers IC VDD pin, use 10-V to 20-V range.
GND	Multiple test points. VCC negative input, PWMIN and PWMINx negative input, and primary ground at U1
PWMIN	High-side input to driver
PWMINx	Low-side input to driver
VDD	VDD positive input of UCC27710 IC
Н	High-side HI input pin
LI	Low-side LI input pin
НО	High-side output pin
LO	Low-side output pin
HO LD	High-side output at capacitive load
LO LD	Low-side output at capacitive load
VHB	HB pin voltage

3 Electrical Specifications

Table 2 displays the EVM electrical specifications.

Table 2. UCC27710EVM-005 Electrical Specifications

	Description	MIN	TYP	MAX	Unit
V _{cc}	Input bias power supply	10		20	V
Fs	Switching frequency	0		500	kHz
TJ	Operating junction temperature range	-40		125	°C

NOTE: The UCC27710EVM-005 is designed for low voltage evaluation only, and is not certified for evaluation with voltages beyond the absolute maximums listed in the electrical specifications. **Do not evaluate high-voltage parameters with this board.**

3

Description

4 Test Summary

4.1 Definitions

This procedure details how to configure the UCC27710EVM-005 evaluation board. Within this test procedure, the following naming conventions are followed.

DMM: Digital multimeter

EVM: Evaluation module assembly

Refer to Bench Setup Diagram and Configuration for details.

4.2 Equipment

4.2.1 **Power Supplies**

A DC power supply with voltage and current above 25 V and 1 A, for example: Agilent E3634A

4.2.2 Function Generators

One two-channel function generator over 20 MHz, for example, Tektronics AFG3252

4.3 Equipment Setup

4.3.1 DC Power Supply Settings

- DC power supply #1
 - Voltage setting: 15 V
 - Current limit: 0.05 A

4.3.2 Digital Multimeter Settings

- Digital multimeter #1
 - DC current measurement, auto-range, the expected current is from 1 mA to 15 mA

4.3.3 Two-Channel Function Generator Settings

Table 3 lists the two-channel function generator settings.

Table 3. Two-Channel Function Generator Settings

	Mode	Frequency	Width	Delay	High	Low	Output Impedance
Channel A	Pulse	100 kHz	5 µs	0 µs	5 V	0 V	High 7
Channel B		100 KHZ	5 µs	5 µs	- 5V	0 V	High Z

4.3.4 Oscilloscope Settings

Table 4 details the oscilloscope settings.

Table 4. Oscilloscope Settings

	Bandwidth	Coupling	Termination	Scale Settings	Inverting	
Channel A	500 MHz or above	DC	1 M Ω or automatic	10× or automatic	OFF	
Channel B					OFF	



4.3.5 Bench Setup Diagram

The bench setup diagram includes the function generator and oscilloscope connections.

- Use the following connection procedure, and Figure 1 as a reference:
- Make sure the output of the function generator and power supplies are disabled before connection.
- Apply function generator channel-A on PWMIN and GND.
- Apply function generator channel-B on PWMINx and GND.
- Power supply #1: apply positive lead to current input of DMM #1 and current output of DMM #1 to test point VCC; apply negative lead to test point GND.
- Apply oscilloscope channel-1 probes on HO LD and HS, minimizing the loop area as much as possible. Note the scope ground is connected to the HS test point.
- Apply oscilloscope channel-2 probes on LO LD and GND, minimizing the loop area as much as possible.

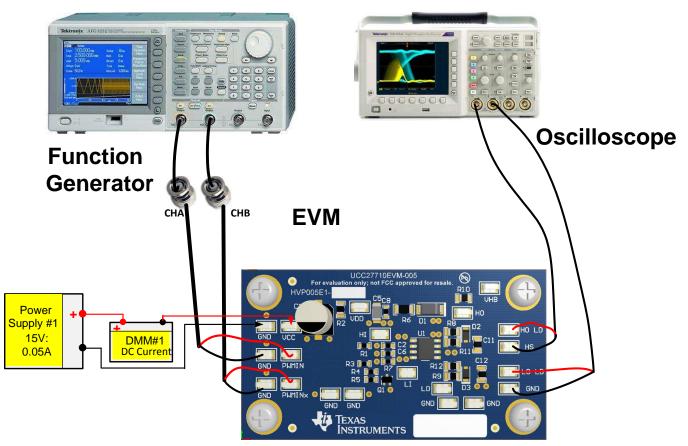


Figure 1. Bench Setup Diagram and Configuration

5

Test Summary

Тек 🗕 🗙

Power Up and Power Down Procedure

5 Power Up and Power Down Procedure

5.1 Power Up

Use the following steps for power up:

- 1. Before beginning the power-up test procedure, verify the connections using Section 4.3.5.
- 2. Enable supply #1, if the quiescent current on DMM1 is less than 350 µA, everything is set correctly.
- 3. Enable function generator outputs channel-A and channel-B.
- 4. The following conditions exist:
 - 1. A stable pulse output on channel-1 and channel-2 in the oscilloscope, refer to Figure 2
 - 2. The frequency measurement should be 100 kHz, ±5 kHz, or equal to the programmed function generator frequency
 - DMM #1 displays around 3.6 mA, ±1 mA. For more information about operating current, refer to the UCC27710 data sheet (SLUSD05).

NOTE: With complimentary input signals as in this setup, the UCC27710 will have approximately 150-ns dead time on the outputs.

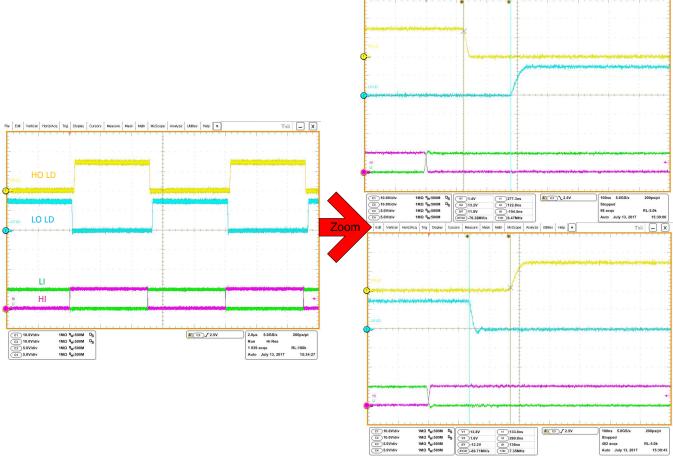


Figure 2. Example Input and Output Waveforms with Complimentary Input Signals (Green and Magenta are PWM Inputs, Yellow and Blue are Driver Outputs)

5.2 Power Down

Use the following steps to power down the EVM:

- 1. Disable the function generator.
- 2. Disable power supply #1.
- 3. Disconnect the cables and probes.

6 Typical Performance Waveforms ($C_L = 1000 \text{ pF}$)

6.1 Input Signals With Greater Than 150-ns Dead Time

To evaluate propagation delay, the input signals must have dead time greater than the internal 150-ns dead time. See Figure 3 and Figure 4.

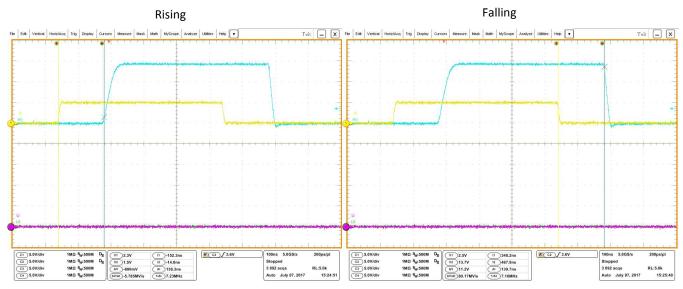


Figure 3. HI and HO Waveforms if Input Dead Time is Greater Than Internal Dead Time (Yellow and Magenta are PWM Inputs, Green and Blue are Driver Outputs)

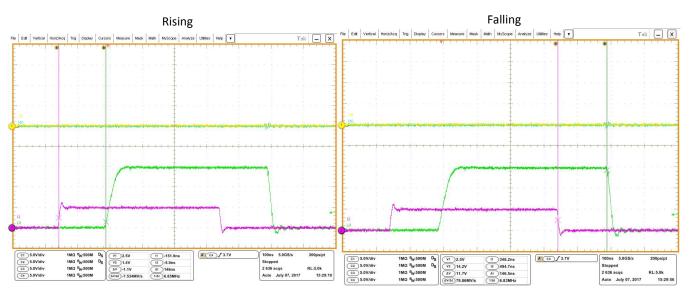


Figure 4. LI and LO Waveforms if Input Dead Time is Greater Than Internal Dead Time (Yellow and Magenta are PWM Inputs, Green and Blue are Driver Outputs)

Power Up and Power Down Procedure

7 Schematic

Figure 5 shows the schematic diagram for the UCC27710EVM-005.

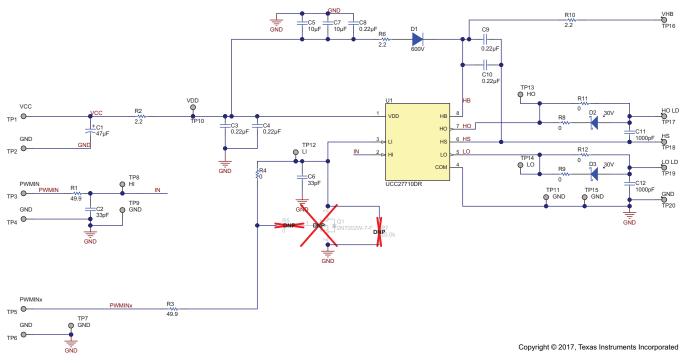


Figure 5. UCC27710EVM-005 Schematic



8 Layout Diagrams

The PCB layout information for UCC27710EVM-005 is shown in Figure 6, Figure 7, Figure 8 and Figure 9.

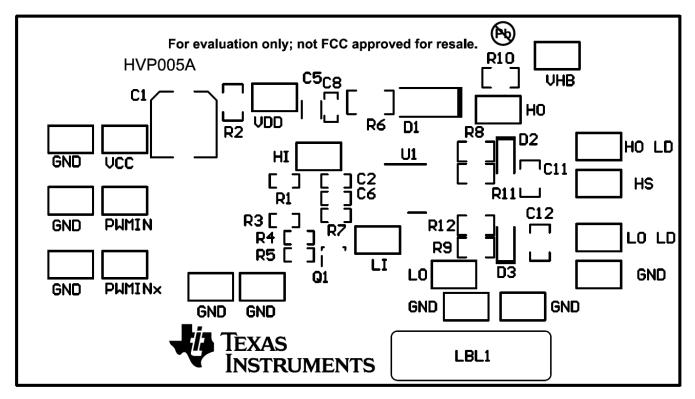


Figure 6. Top Overlay

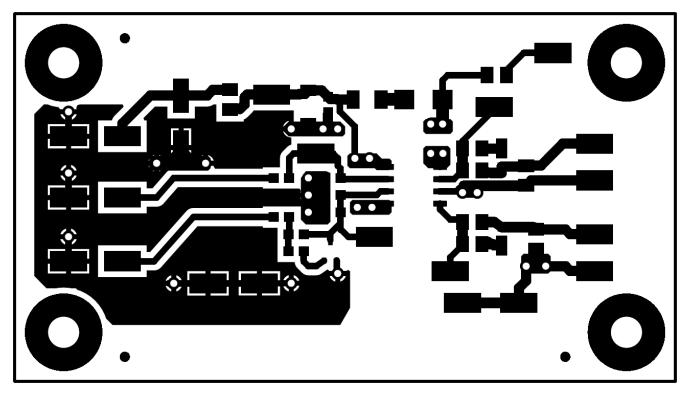


Figure 7. Top Layer



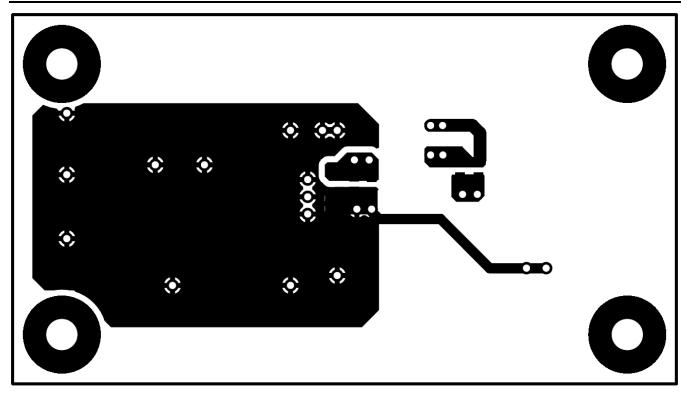


Figure 8. Bottom Layer

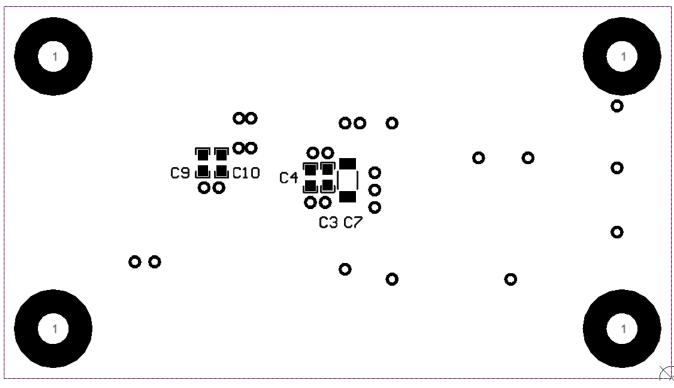


Figure 9. Bottom Overlay



9 List of Materials

Table 5 displays the EVM list of materials.

Item #	Designator	Qty	Value	Part Number	Manufacturer	Description	Package Reference
1	!PCB?	1		HVP005	Any	Printed Circuit Board	
2	C1	1	47uF	UUD1H470MCL1GS	Nichicon	CAP, AL, 47 µF, 50 V, +/- 20%, 0.68 ohm, SMD	6.3x7.7
3	C2, C6	2	33pF	C0603C330J5GACTU	Kemet	CAP, CERM, 33 pF, 50 V,+/- 5%, C0G/NP0, 0603	0603
4	C3, C4, C8, C9, C10	5	0.22uF	C1608X7R1H224K080AB	TDK	CAP, CERM, 0.22 µF, 50 V, +/- 10%, X7R, 0603	0603
5	C5, C7	2	10uF	C3216X7R1V106M160AC	TDK	CAP, CERM, 10 μF, 35 V, +/- 20%, X7R, 1206_190	1206_190
6	C11, C12	2	1000pF	C0805C102J5RACTU	Kemet	CAP, CERM, 1000 pF, 50 V, +/- 5%, X7R, 0805	0805
7	D1	1	600V	MURA160T3G	ON Semiconductor	Diode, Ultrafast, 600 V, 1 A, AEC-Q101, SMA	SMA
8	D2, D3	2	30V	MSS1P3L-M3/89A	Vishay-Semiconductor	Diode, Schottky, 30 V, 1 A, AEC-Q101, MicroSMP	MicroSMP
9	H1, H2, H3, H4	4		NY PMS 440 0025 PH	B&F Fastener Supply	Machine Screw, Round, #4-40 x 1/4, Nylon, Philips panhead	Screw
10	H5, H6, H7, H8	4		1902C	Keystone	Standoff, Hex, 0.5"L #4-40 Nylon	Standoff
11	LBL1	1		THT-14-423-10	Brady	Thermal Transfer Printable Labels, 0.650" W x 0.200" H - 10,000 per roll	PCB Label 0.650"H x 0.200"W
12	R1, R3	2	49.9	CRCW060349R9FKEA	Vishay-Dale	RES, 49.9, 1%, 0.1 W, 0603	0603
13	R2, R10	2	2.2	CRCW08052R20JNEA	Vishay-Dale	RES, 2.2, 5%, 0.125 W, 0805	0805
14	R4	1	0	CRCW06030000Z0EA	Vishay-Dale	RES, 0, 5%, 0.1 W, 0603	0603
15	R6	1	2.2	CRCW12062R20JNEA	Vishay-Dale	RES, 2.2, 5%, 0.25 W, 1206	1206
16	R8, R9, R11, R12	4	0	ERJ-6GEY0R00V	Panasonic	RES, 0, 5%, 0.125 W, 0805	0805
17	TP1, TP2, TP3, TP4, TP5, TP6, TP7, TP8, TP9, TP10, TP11, TP12, TP13, TP14, TP15, TP16, TP17, TP18, TP19, TP20	20		5019	Keystone	Test Point, Miniature, SMT	Test Point, Miniature, SMT
18	U1	1		UCC27710DR	Texas Instruments	620-V High-Side Low-Side Gate Driver with 0.5/1.0A Peak Output and RobustDrive, D0008B (SOIC-8)	D0008B
19	FID1, FID2, FID3	0		N/A	N/A	Fiducial mark. There is nothing to buy or mount.	Fiducial
20	Q1	0	60V	2N7002W-7-F	Diodes Inc.	MOSFET, N-CH, 60 V, 0.115 A, SOT-323	SOT-323
21	R5	0	0	CRCW06030000Z0EA	Vishay-Dale	RES, 0, 5%, 0.1 W, 0603	0603
22	R7	0	20.0k	RC0603FR-0720KL	Yageo America	RES, 20.0 k, 1%, 0.1 W, 0603	0603

Table 5. UCC27710EVM-005 List of Materials



Revision History

www.ti.com

Revision History

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

CI	Changes from Original (August 2017) to A Revision					
•	Deleted 'CMOS' from the inputs listed in <i>Features</i>	. 2				
•	Deleted reference to power supply #3 in Bench Setup Diagram	. 5				

STANDARD TERMS FOR EVALUATION MODULES

- 1. Delivery: TI delivers TI evaluation boards, kits, or modules, including any accompanying demonstration software, components, and/or documentation which may be provided together or separately (collectively, an "EVM" or "EVMs") to the User ("User") in accordance with the terms set forth herein. User's acceptance of the EVM is expressly subject to the following terms.
 - 1.1 EVMs are intended solely for product or software developers for use in a research and development setting to facilitate feasibility evaluation, experimentation, or scientific analysis of TI semiconductors products. EVMs have no direct function and are not finished products. EVMs shall not be directly or indirectly assembled as a part or subassembly in any finished product. For clarification, any software or software tools provided with the EVM ("Software") shall not be subject to the terms and conditions set forth herein but rather shall be subject to the applicable terms that accompany such Software
 - 1.2 EVMs are not intended for consumer or household use. EVMs may not be sold, sublicensed, leased, rented, loaned, assigned, or otherwise distributed for commercial purposes by Users, in whole or in part, or used in any finished product or production system.
- 2 Limited Warranty and Related Remedies/Disclaimers:
 - 2.1 These terms do not apply to Software. The warranty, if any, for Software is covered in the applicable Software License Agreement.
 - 2.2 TI warrants that the TI EVM will conform to TI's published specifications for ninety (90) days after the date TI delivers such EVM to User. Notwithstanding the foregoing, TI shall not be liable for a nonconforming EVM if (a) the nonconformity was caused by neglect, misuse or mistreatment by an entity other than TI, including improper installation or testing, or for any EVMs that have been altered or modified in any way by an entity other than TI, (b) the nonconformity resulted from User's design, specifications or instructions for such EVMs or improper system design, or (c) User has not paid on time. Testing and other quality control techniques are used to the extent TI deems necessary. TI does not test all parameters of each EVM. User's claims against TI under this Section 2 are void if User fails to notify TI of any apparent defects in the EVMs within ten (10) business days after delivery, or of any hidden defects with ten (10) business days after the defect has been detected.
 - 2.3 TI's sole liability shall be at its option to repair or replace EVMs that fail to conform to the warranty set forth above, or credit User's account for such EVM. TI's liability under this warranty shall be limited to EVMs that are returned during the warranty period to the address designated by TI and that are determined by TI not to conform to such warranty. If TI elects to repair or replace such EVM, TI shall have a reasonable time to repair such EVM or provide replacements. Repaired EVMs shall be warranted for the remainder of the original warranty period. Replaced EVMs shall be warranted for a new full ninety (90) day warranty period.
- 3 Regulatory Notices:

3.1 United States

3.1.1 Notice applicable to EVMs not FCC-Approved:

FCC NOTICE: This kit is designed to allow product developers to evaluate electronic components, circuitry, or software associated with the kit to determine whether to incorporate such items in a finished product and software developers to write software applications for use with the end product. This kit is not a finished product and when assembled may not be resold or otherwise marketed unless all required FCC equipment authorizations are first obtained. Operation is subject to the condition that this product not cause harmful interference to licensed radio stations and that this product accept harmful interference. Unless the assembled kit is designed to operate under part 15, part 18 or part 95 of this chapter, the operator of the kit must operate under the authority of an FCC license holder or must secure an experimental authorization under part 5 of this chapter.

3.1.2 For EVMs annotated as FCC – FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant:

CAUTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement for Class A EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Interference Statement for Class B EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

3.2 Canada

3.2.1 For EVMs issued with an Industry Canada Certificate of Conformance to RSS-210 or RSS-247

Concerning EVMs Including Radio Transmitters:

This device complies with Industry Canada license-exempt RSSs. Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Concernant les EVMs avec appareils radio:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Concerning EVMs Including Detachable Antennas:

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. This radio transmitter has been approved by Industry Canada to operate with the antenna types listed in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante. Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur

- 3.3 Japan
 - 3.3.1 Notice for EVMs delivered in Japan: Please see http://www.tij.co.jp/lsds/ti_ja/general/eStore/notice_01.page 日本国内に 輸入される評価用キット、ボードについては、次のところをご覧ください。 http://www.tij.co.jp/lsds/ti_ja/general/eStore/notice_01.page
 - 3.3.2 Notice for Users of EVMs Considered "Radio Frequency Products" in Japan: EVMs entering Japan may not be certified by TI as conforming to Technical Regulations of Radio Law of Japan.

If User uses EVMs in Japan, not certified to Technical Regulations of Radio Law of Japan, User is required to follow the instructions set forth by Radio Law of Japan, which includes, but is not limited to, the instructions below with respect to EVMs (which for the avoidance of doubt are stated strictly for convenience and should be verified by User):

- 1. Use EVMs in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
- 2. Use EVMs only after User obtains the license of Test Radio Station as provided in Radio Law of Japan with respect to EVMs, or
- 3. Use of EVMs only after User obtains the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to EVMs. Also, do not transfer EVMs, unless User gives the same notice above to the transferee. Please note that if User does not follow the instructions above, User will be subject to penalties of Radio Law of Japan.

【無線電波を送信する製品の開発キットをお使いになる際の注意事項】開発キットの中には技術基準適合証明を受けて いないものがあります。 技術適合証明を受けていないもののご使用に際しては、電波法遵守のため、以下のいずれかの 措置を取っていただく必要がありますのでご注意ください。

- 1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用 いただく。
- 2. 実験局の免許を取得後ご使用いただく。
- 3. 技術基準適合証明を取得後ご使用いただく。
- なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。 上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。 日本テキサス・イ

ンスツルメンツ株式会社

東京都新宿区西新宿6丁目24番1号

西新宿三井ビル

- 3.3.3 Notice for EVMs for Power Line Communication: Please see http://www.tij.co.jp/lsds/ti_ja/general/eStore/notice_02.page 電力線搬送波通信についての開発キットをお使いになる際の注意事項については、次のところをご覧ください。http://www.tij.co.jp/lsds/ti_ja/general/eStore/notice_02.page
- 3.4 European Union
 - 3.4.1 For EVMs subject to EU Directive 2014/30/EU (Electromagnetic Compatibility Directive):

This is a class A product intended for use in environments other than domestic environments that are connected to a low-voltage power-supply network that supplies buildings used for domestic purposes. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

- 4 EVM Use Restrictions and Warnings:
 - 4.1 EVMS ARE NOT FOR USE IN FUNCTIONAL SAFETY AND/OR SAFETY CRITICAL EVALUATIONS, INCLUDING BUT NOT LIMITED TO EVALUATIONS OF LIFE SUPPORT APPLICATIONS.
 - 4.2 User must read and apply the user guide and other available documentation provided by TI regarding the EVM prior to handling or using the EVM, including without limitation any warning or restriction notices. The notices contain important safety information related to, for example, temperatures and voltages.
 - 4.3 Safety-Related Warnings and Restrictions:
 - 4.3.1 User shall operate the EVM within TI's recommended specifications and environmental considerations stated in the user guide, other available documentation provided by TI, and any other applicable requirements and employ reasonable and customary safeguards. Exceeding the specified performance ratings and specifications (including but not limited to input and output voltage, current, power, and environmental ranges) for the EVM may cause personal injury or death, or property damage. If there are questions concerning performance ratings and specifications, User should contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may also result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM user guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, even with the inputs and outputs kept within the specified allowable ranges, some circuit components may have elevated case temperatures. These components include but are not limited to linear regulators, switching transistors, pass transistors, current sense resistors, and heat sinks, which can be identified using the information in the associated documentation. When working with the EVM, please be aware that the EVM may become very warm.
 - 4.3.2 EVMs are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems. User assumes all responsibility and liability for proper and safe handling and use of the EVM by User or its employees, affiliates, contractors or designees. User assumes all responsibility and liability to ensure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard. User assumes all responsibility and liability for any improper or unsafe handling or use of the EVM by User or its employees, affiliates, contractors or designees.
 - 4.4 User assumes all responsibility and liability to determine whether the EVM is subject to any applicable international, federal, state, or local laws and regulations related to User's handling and use of the EVM and, if applicable, User assumes all responsibility and liability for compliance in all respects with such laws and regulations. User assumes all responsibility and liability for proper disposal and recycling of the EVM consistent with all applicable international, federal, state, and local requirements.
- Accuracy of Information: To the extent TI provides information on the availability and function of EVMs, TI attempts to be as accurate as possible. However, TI does not warrant the accuracy of EVM descriptions, EVM availability or other information on its websites as accurate, complete, reliable, current, or error-free.

6. Disclaimers:

- 6.1 EXCEPT AS SET FORTH ABOVE, EVMS AND ANY MATERIALS PROVIDED WITH THE EVM (INCLUDING, BUT NOT LIMITED TO, REFERENCE DESIGNS AND THE DESIGN OF THE EVM ITSELF) ARE PROVIDED "AS IS" AND "WITH ALL FAULTS." TI DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, REGARDING SUCH ITEMS, INCLUDING BUT NOT LIMITED TO ANY EPIDEMIC FAILURE WARRANTY OR IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADE SECRETS OR OTHER INTELLECTUAL PROPERTY RIGHTS.
- 6.2 EXCEPT FOR THE LIMITED RIGHT TO USE THE EVM SET FORTH HEREIN, NOTHING IN THESE TERMS SHALL BE CONSTRUED AS GRANTING OR CONFERRING ANY RIGHTS BY LICENSE, PATENT, OR ANY OTHER INDUSTRIAL OR INTELLECTUAL PROPERTY RIGHT OF TI, ITS SUPPLIERS/LICENSORS OR ANY OTHER THIRD PARTY, TO USE THE EVM IN ANY FINISHED END-USER OR READY-TO-USE FINAL PRODUCT, OR FOR ANY INVENTION, DISCOVERY OR IMPROVEMENT, REGARDLESS OF WHEN MADE, CONCEIVED OR ACQUIRED.
- 7. USER'S INDEMNITY OBLIGATIONS AND REPRESENTATIONS. USER WILL DEFEND, INDEMNIFY AND HOLD TI, ITS LICENSORS AND THEIR REPRESENTATIVES HARMLESS FROM AND AGAINST ANY AND ALL CLAIMS, DAMAGES, LOSSES, EXPENSES, COSTS AND LIABILITIES (COLLECTIVELY, "CLAIMS") ARISING OUT OF OR IN CONNECTION WITH ANY HANDLING OR USE OF THE EVM THAT IS NOT IN ACCORDANCE WITH THESE TERMS. THIS OBLIGATION SHALL APPLY WHETHER CLAIMS ARISE UNDER STATUTE, REGULATION, OR THE LAW OF TORT, CONTRACT OR ANY OTHER LEGAL THEORY, AND EVEN IF THE EVM FAILS TO PERFORM AS DESCRIBED OR EXPECTED.
- 8. Limitations on Damages and Liability:
 - 8.1 General Limitations. IN NO EVENT SHALL TI BE LIABLE FOR ANY SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL, OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF THESE TERMS OR THE USE OF THE EVMS, REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCLUDED DAMAGES INCLUDE, BUT ARE NOT LIMITED TO, COST OF REMOVAL OR REINSTALLATION, ANCILLARY COSTS TO THE PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, RETESTING, OUTSIDE COMPUTER TIME, LABOR COSTS, LOSS OF GOODWILL, LOSS OF PROFITS, LOSS OF SAVINGS, LOSS OF USE, LOSS OF DATA, OR BUSINESS INTERRUPTION. NO CLAIM, SUIT OR ACTION SHALL BE BROUGHT AGAINST TI MORE THAN TWELVE (12) MONTHS AFTER THE EVENT THAT GAVE RISE TO THE CAUSE OF ACTION HAS OCCURRED.
 - 8.2 Specific Limitations. IN NO EVENT SHALL TI'S AGGREGATE LIABILITY FROM ANY USE OF AN EVM PROVIDED HEREUNDER, INCLUDING FROM ANY WARRANTY, INDEMITY OR OTHER OBLIGATION ARISING OUT OF OR IN CONNECTION WITH THESE TERMS, EXCEED THE TOTAL AMOUNT PAID TO TI BY USER FOR THE PARTICULAR EVM(S) AT ISSUE DURING THE PRIOR TWELVE (12) MONTHS WITH RESPECT TO WHICH LOSSES OR DAMAGES ARE CLAIMED. THE EXISTENCE OF MORE THAN ONE CLAIM SHALL NOT ENLARGE OR EXTEND THIS LIMIT.
- 9. Return Policy. Except as otherwise provided, TI does not offer any refunds, returns, or exchanges. Furthermore, no return of EVM(s) will be accepted if the package has been opened and no return of the EVM(s) will be accepted if they are damaged or otherwise not in a resalable condition. If User feels it has been incorrectly charged for the EVM(s) it ordered or that delivery violates the applicable order, User should contact TI. All refunds will be made in full within thirty (30) working days from the return of the components(s), excluding any postage or packaging costs.
- 10. Governing Law: These terms and conditions shall be governed by and interpreted in accordance with the laws of the State of Texas, without reference to conflict-of-laws principles. User agrees that non-exclusive jurisdiction for any dispute arising out of or relating to these terms and conditions lies within courts located in the State of Texas and consents to venue in Dallas County, Texas. Notwithstanding the foregoing, any judgment may be enforced in any United States or foreign court, and TI may seek injunctive relief in any United States or foreign court.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2017, Texas Instruments Incorporated

IMPORTANT NOTICE FOR TI DESIGN INFORMATION AND RESOURCES

Texas Instruments Incorporated ('TI") technical, application or other design advice, services or information, including, but not limited to, reference designs and materials relating to evaluation modules, (collectively, "TI Resources") are intended to assist designers who are developing applications that incorporate TI products; by downloading, accessing or using any particular TI Resource in any way, you (individually or, if you are acting on behalf of a company, your company) agree to use it solely for this purpose and subject to the terms of this Notice.

TI's provision of TI Resources does not expand or otherwise alter TI's applicable published warranties or warranty disclaimers for TI products, and no additional obligations or liabilities arise from TI providing such TI Resources. TI reserves the right to make corrections, enhancements, improvements and other changes to its TI Resources.

You understand and agree that you remain responsible for using your independent analysis, evaluation and judgment in designing your applications and that you have full and exclusive responsibility to assure the safety of your applications and compliance of your applications (and of all TI products used in or for your applications) with all applicable regulations, laws and other applicable requirements. You represent that, with respect to your applications, you have all the necessary expertise to create and implement safeguards that (1) anticipate dangerous consequences of failures, (2) monitor failures and their consequences, and (3) lessen the likelihood of failures that might cause harm and take appropriate actions. You agree that prior to using or distributing any applications. TI has not conducted any testing other than that specifically described in the published documentation for a particular TI Resource.

You are authorized to use, copy and modify any individual TI Resource only in connection with the development of applications that include the TI product(s) identified in such TI Resource. NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER TI INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT OF TI OR ANY THIRD PARTY IS GRANTED HEREIN, including but not limited to any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information regarding or referencing third-party products or services does not constitute a license to use such products or services, or a warranty or endorsement thereof. Use of TI Resources may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

TI RESOURCES ARE PROVIDED "AS IS" AND WITH ALL FAULTS. TI DISCLAIMS ALL OTHER WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, REGARDING TI RESOURCES OR USE THEREOF, INCLUDING BUT NOT LIMITED TO ACCURACY OR COMPLETENESS, TITLE, ANY EPIDEMIC FAILURE WARRANTY AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

TI SHALL NOT BE LIABLE FOR AND SHALL NOT DEFEND OR INDEMNIFY YOU AGAINST ANY CLAIM, INCLUDING BUT NOT LIMITED TO ANY INFRINGEMENT CLAIM THAT RELATES TO OR IS BASED ON ANY COMBINATION OF PRODUCTS EVEN IF DESCRIBED IN TI RESOURCES OR OTHERWISE. IN NO EVENT SHALL TI BE LIABLE FOR ANY ACTUAL, DIRECT, SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF TI RESOURCES OR USE THEREOF, AND REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

You agree to fully indemnify TI and its representatives against any damages, costs, losses, and/or liabilities arising out of your noncompliance with the terms and provisions of this Notice.

This Notice applies to TI Resources. Additional terms apply to the use and purchase of certain types of materials, TI products and services. These include; without limitation, TI's standard terms for semiconductor products http://www.ti.com/sc/docs/stdterms.htm), evaluation modules, and samples (http://www.ti.com/sc/docs/stdterms.htm), evaluation

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2017, Texas Instruments Incorporated