

TPS2384 Evaluation Module

This user's guide describes the TPS2384 HPA109 evaluation module (EVM) and contains the EVM schematic, bill of materials, assembly drawing, and top and bottom board layouts.

Contents

1	Related Equipment and Documentation from Texas Instruments.....	1
2	Introduction	2
3	Hardware Overview.....	2
4	EVM Operation.....	3
5	TPS2384 Graphical User Interface Operation	5
6	Bill of Materials	8
7	EVM Schematic and Layouts	10

List of Figures

1	Screen Shot of TPS2384 GUI – <i>Enable Auto Read</i> Selected	6
2	Screen Shot of the GUI – <i>Port Function Pulldown</i> Selected	7

List of Tables

1	Output RJ-45 Connectors	3
2	HPA109 Bill of Materials	8

1 Related Equipment and Documentation from Texas Instruments

1.1 Related Equipment

The TI EV2400 USB-Based PC Interface Board is required to communicate with the TPS2384 EVM from the EVM's Windows-based control/monitor GUI. This interface EVM can be ordered from the TI website at www.ti.com.

1.2 Related Documentation

- Data Sheet, *TPS2384 Quad Integrated Power Sourcing Equipment Power Manager*, [SLUS634](#).
- *EV2400 Evaluation Module Interface Board User's Guide*, [SLUU446](#).
- USB Drivers for Windows XP and Windows 2000, [SLUC578](#). (ZIP file, USB drivers for EV2400 board for Windows PC.)
- Software Files for TPS2384EVM, [SLVC078](#). (ZIP file, installation files for TPS2384EVM control GUI.)

2 Introduction

This user's guide describes the setup and operation of the TPS2384 HPA109 evaluation module (EVM). Information and instruction presented throughout this document assumes user familiarity with the TPS2384 and with the IEEE 802.3af Specification for Power Over Ethernet.

3 Hardware Overview

The HPA109 EVM features the TPS2384 made by Texas Instruments. This EVM can be configured as an endpoint power sourcing equipment (PSE) or as a midspan PSE. Four-input and four-output RJ-45 connectors are provided to connect directly to an Ethernet cable.

According to the IEEE 802.3af specification, the PSE can apply power over the data lines or over the spare lines on the Ethernet cable. The HPA109 EVM has been designed with jumpers for applying power in either configuration.

The HPA109 EVM is designed such that the TPS2384 device can operate in either *Auto Mode* or *Power Management Mode*. A graphical user interface (GUI) has also been developed to read and write to the TPS2384 internal registers using the I²C interface.

4 EVM Operation

4.1 Operation

An external 48-V power supply connected to J3 pin 1 (positive) and J3 pin 3 (negative) is required. JV1 is installed at the factory to apply the 48 volts coming out of the TPS2490 hot-swap controller to the TPS2384 device. JP2 and JP3 also are installed at the factory to give the user the capability to use the S1 reset switch. Depressing S1 generates a logic low signal to the PORB input of the TPS2384 which resets all internal state machines and registers.

The JMS1 jumper is also installed at the factory between pin 1 and pin 2. This sets the Mode Select (MS) to *Auto Mode*. In *Auto Mode*, the TPS2384 automatically discovers, classifies, and powers up IEEE 802.3af-compliant powered devices (PD). Power is applied to the Ethernet port on either the spare pairs or on the data lines of the RJ-45 connector. The TPS2384 EVM has jumper blocks that allow the user to configure the method in which power is applied to the PD. [Table 1](#) can help the user to set the appropriate jumpers depending on the desired power delivery configuration. Although the table shows only the connections for the P1_OUT1 connector, the information applies to all four output RJ-45 connectors.

Table 1. Output RJ-45 Connectors

Insert 48 volts on spare pins of RJ-45 connector, P1_OUT1 (positive on pins 4 and 5 and negative on pins 7 and 8).	
Jumper Block P1P1	Install jumper between the center pin and 1P.
Jumper Block P1N1	Install jumper between the center pin and 1N.
Jumper Block P1PX1	Do not install jumper.
Jumper Block P1NX1	Do not install jumper.
Insert 48 volts on spare pins of RJ-45 connector, P1_OUT1 (positive on pins 7 and 8 and negative on pins 4 and 5).	
Jumper Block P1P1	Install jumper between the center pin and 1N.
Jumper Block P1N1	Install jumper between the center pin and 1P.
Jumper Block P1PX1	Do not install jumper.
Jumper Block P1NX1	Do not install jumper.
Insert 48 volts on data pairs of RJ-45 connector, P1_OUT1 (positive on pins 1 and 2 and negative on pins 3 and 6).	
Jumper Block P1P1	Do not install jumper.
Jumper Block P1N1	Do not install jumper.
Jumper Block P1PX1	Install jumper between center pin and 1P.
Jumper Block P1NX1	Install jumper between center pin and 1N.
Insert 48 volts on data pairs of RJ-45 connector, P1_OUT1 (positive on pins 3 and 6 and negative on pins 1 and 2).	
Jumper Block P1P1	Do not install jumper.
Jumper Block P1N1	Do not install jumper.
Jumper Block P1PX1	Install jumper between center pin and 1N.
Jumper Block P1NX1	Install jumper between center pin and 1P.

While operating in *Auto Mode*, the I²C interface provided on the TPS2384 EVM can be used to monitor the internal TPS2384 registers. Information such as detection status, port status, classification status, and fault information is available over the I²C interface.

In *Power Management Mode*, the I²C interface can be used to manually power up and control the ports. For a complete description of *Power Management Mode* functions, see the TPS2384 data sheet ([SLUS634](#)).

4.2 Connectors

J1	I ² C Connector
J2	Alternate Power Extraction Port Connector
J3	Power Input Connector
J4	Allows an external voltage source to be used instead of the VCC_I2C power on the J1 connector.
J5	Connector for an external optocoupler voltage source
J6 (V3.3)	Allows the V3.3 output of the TPS2384 to be used to drive the optocouplers.
J11	Connects PORB from the I2C interface (via the optocoupler) to the TPS2384
J7-J10	Connects the powered port LED to the respective port

4.3 Jumpers

JV1	Connects 48 volts from the output of the hot-swap controller to the TPS2384.
JP1	Connects the CT pin of the TPS2384 to ground. See the TPS2384 data sheet for further information.
JP2	Connects the manual reset switch and RC network to the POR pin of the TPS2384.
JP3	Used to connect a pullup resistor, R25, to the PORB pin of the TPS2384
JSDA_OUT1	Connects the SDA_O pin of the TPS2384 to the I ² C data send optocoupler.
JSDA_IN1	Connects the SDA_I pin of the TPS2384 to the I ² C data receive optocoupler.
JSCL1	Connects the SCL pin of the TPS2384 to the I ² C clock receive optocoupler.
JALT1	Connects the ALT A/B pin of the TPS2384 to ground or to V3.3. See the TPS2384 data sheet for further information.
WDIS1	Connects the WD_DIS pin of the TPS2384 to ground or to V3.3. See the TPS2384 data sheet for further information.
JMS1	Connects the MS pin of the TPS2384 to ground or to V3.3. See the TPS2384 data sheet for further information.

4.4 Test Points

TEST POINTS	DESCRIPTION
TPV10	Test point for monitoring the 10-V internal bias source.
TPV6P3	Test point for monitoring the 6.3-V internal bias source.
TP3.3	Test point for monitoring the 3.3-V voltage source.
TPV2.5	Test point for monitoring the 2.5-V internal bias source.
TPG1, TPG2	Ground test points.
TPSCL1	Test point for monitoring the I ² C clock input to the TPS2384.
TPSDAI1	Test point for monitoring the I ² C data input to the TPS2384.
TPSDAO1	Test point for monitoring the I ² C data output from the TPS2384.
TPCINT1, TPCINT2, TPCINT3, TPCINT4	Test points for monitoring the voltage ramp on the A/D integration capacitors for each port. These are high-impedance inputs, and performance may be affected by any additional impedance. It is recommended that a low-capacitance/FET input buffer be used when monitoring these test points.
TPPORB1	Test point for monitoring the status of the PORB input to the TPS2384.
TPINT1	Test point for monitoring the INTB output of the TPS2384.
TPSYN1	Test point for monitoring the SYN pin of the TPS2384.
TPCT1	Test point for monitoring the CT input pin to the TPS2384. This is a high impedance input and performance may be affected by any additional impedance. It is recommended that a low-capacitance/FET input buffer be used when monitoring this test point.
TPWD1	Test point for monitoring the WD_DIS input pin to the TPS2384.
TPAC_HI1	Test point for monitoring the AC_HI output of the TPS2384.
TPAC_LO1	Test point for monitoring the AC_LO output of the TPS2384.

4.5 I²C Interface

The I²C interface on the TPS2384 EVM can be used to read and write to the TPS2384 internal registers. For simplicity, an EVM available from Texas Instruments, the EV2400, can be used to connect the USB port of a personal computer (PC) to the I²C interface of the TPS2384 EVM. A graphical user interface (GUI) also has been developed specifically for the TPS2384 EVM. Section 5 of this document describes the connections and operation of the TPS2384 GUI.

For I²C operation, an external 3.3-V supply must be connected to J3 pin 4 and referenced to J3 pin 3, or J6 must be installed. Also, the jumpers JSDA_OUT1, JSDA_IN1, and JSCL1 must be installed.

Ensure that S2 address select switch is set for I²C binary address of 00001 (S2-1 closed and S2-2, S2-3, S2-4, and S2-5 open).

5 TPS2384 Graphical User Interface Operation

This section describes the setup and operation of the TPS2384 GUI for the HPA109 evaluation module. Two files, TPS2384EVM and TPS2384EVM.exe, must be downloaded from the TI Web site. These files are located at <http://focus.ti.com/docs/toolsw/folders/print/tps2384evm.html#supportsoftware>. Click on the word *Zip* beneath Product Description, Software Support at this location.

5.1 EV2400 Software

The EV2400 software is available for download from the TI Web site at the following location:

<http://focus.ti.com/docs/toolsw/folders/print/EV2400.html>

5.2 Connecting the PC to the EV2400

Using a standard USB cable, connect the USB port of the PC to the USB port of the EV2400.

5.3 Connecting the EV2400 to the HPA109 EVM

Using the wiring assembly provided with the EV2400, connect one end to the I²C port of the EV2400. Connect the other end to the I²C interface connector of the HPA109 EVM as follows:

- Red wire to J1 pin 1
- White wire to J1 pin 3
- Brown wire to J1 pin 5
- Black wire to J1 pin 8

5.4 Starting the GUI

After installing all the necessary files for both the EV2400 and the HPA109, start the TPS2384 GUI by executing the TPS2384EVM.exe file.

5.5 GUI Operation for TPS2384 Auto Mode (JMS1 Jumper Connected Between Pin 1 and Pin 2)

On the TPS2384 GUI, click on the *Start access* button. The *Enable Auto Read* button should be selected (this is the default mode). As a point of reference, a screen shot of the TPS2384 GUI is shown in [Figure 1](#). The GUI register numbers shown on the GUI screen correspond to the register numbers on the TPS2384 data sheet.

- Register 0 shows the Chip ID and Chip Revision.
- Register 100 shows the classification and port status for each of the four ports. This register also shows the *Discovery Fail* and *Function Done* for each port.
- Register 101 shows the *Detect Status* for each of the four ports along with the *AtoD Active* status of each port.
- Registers 110 to 1101 show the raw data and converted data for resistance, voltage, and current. Temperature data is not sampled in Auto Mode. Temperature data is only available in Power Management Mode.

In *Auto Mode*, only the read registers within the TPS2384 device are accessible.

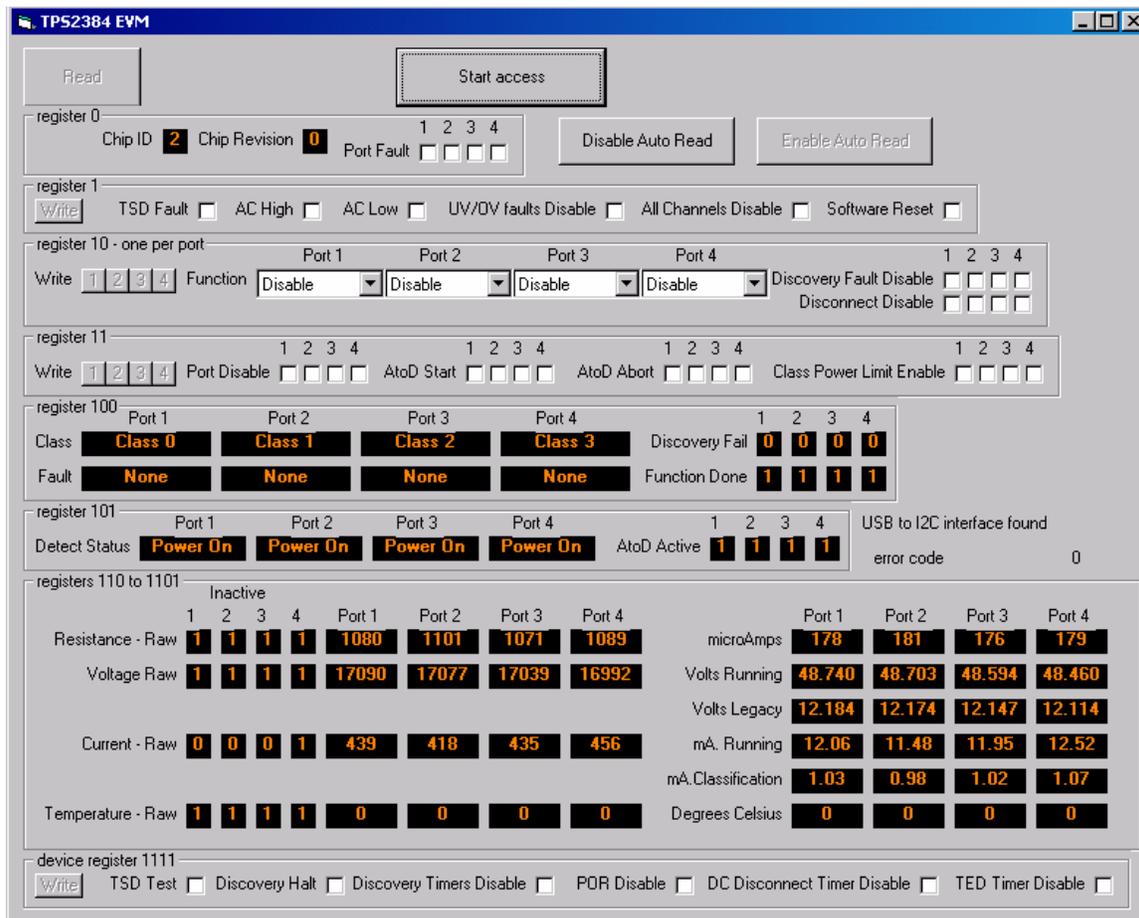


Figure 1. Screen Shot of TPS2384 GUI – *Enable Auto Read Selected*

5.6 GUI Operation for TPS2384 Power Management Mode (JMS1 Jumper Connected Between Pin 2 and Pin 3)

After starting the TPS2384 GUI, click on the *Start access* button. This allows the GUI to report the TPS2384 status registers. In order to control the TPS2384 write registers, depress the *Disable Auto Read* button.

Select the desired function in register 10 by selecting the pulldown arrow button under the desired port. The default function is shown as *Disable* (see Figure 2). All the functions appearing when the pulldown arrow button is selected correspond to the functions shown in the TPS2384 data sheet for the individual Port Write Control Register. For a description of each of the functions, see the *Power Management Mode* section of the TPS2384 data sheet (SLUS634).

After selecting the desired function, depress the corresponding port number on the left side of the GUI in the register 10 section. This writes the command into the TPS2384 register and thereby performs that operation.

To view the status, depress the *Read* button on the top left of the GUI. This is a one-time event that takes a snapshot of the TPS2384 status registers. For a continuous update of the status registers, depress the *Enable Auto Read* button on the GUI.

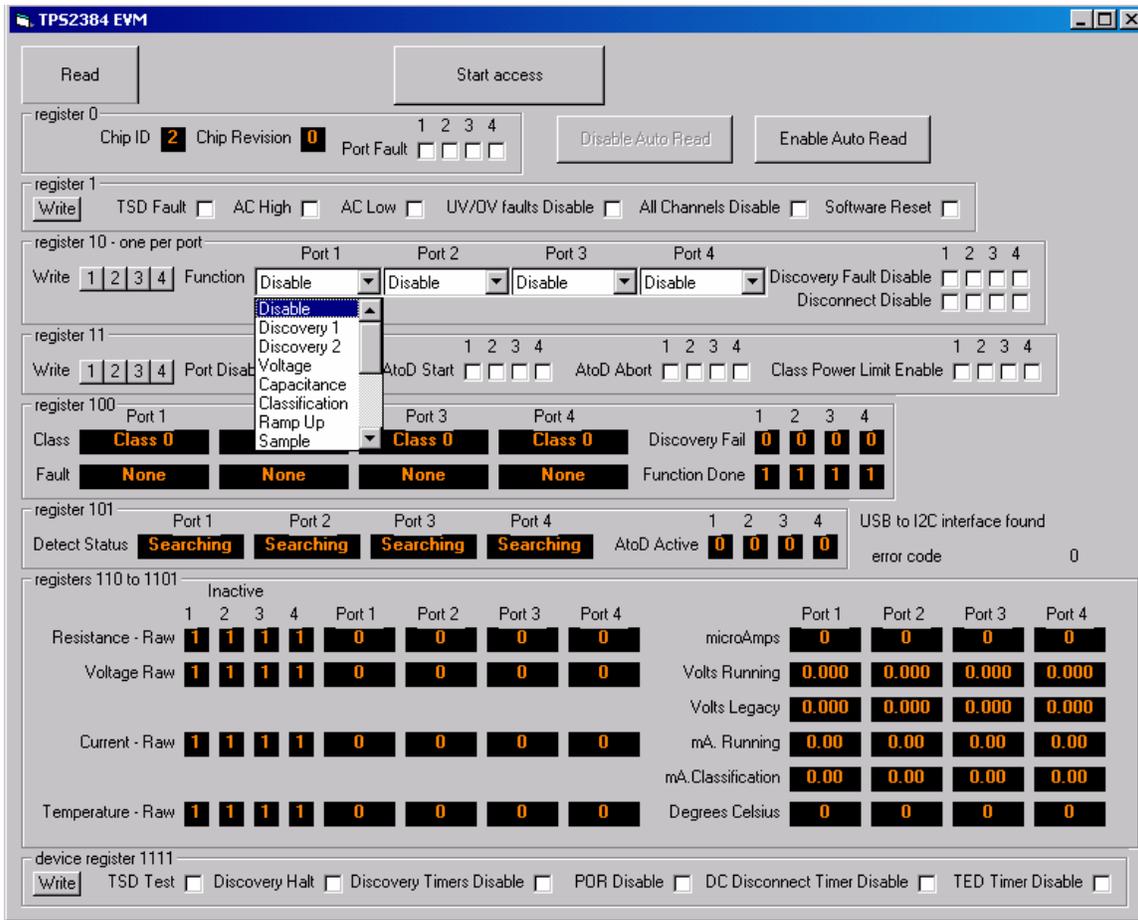


Figure 2. Screen Shot of the GUI – Port Function Pulldown Selected

6 Bill of Materials

Table 2 contains the bill of materials for the TPS2384 HPA109 evaluation module.

Table 2. HPA109 Bill of Materials

Count	Ref Des	Value	Size	MFR	Part Number	Description ^{(1) (2) (3) (4) (5)}
4	1GND1, 2GND1 3GND1, 4GND1	GND	SMD	Keystone	5016	Test Point, SM, 0.150 x 0.090"
7	C1, C7, C8, C10, C11, C16, C20	0.1 μ F	1206	KEMET	C1206C104K1RACTU	CAP CER 0.1UF 100-V X7R 1206 \pm 10%
4	C12, C13, C14, C15	0.027 μ F	SM	Panasonic	ECHU1H273GX5	Capacitor, Film Chip, .027- μ F, 50-V, 2%
3	C17, C18, C19	0.1 μ F	805	AVX Corporation	0805ZC104KAT2A	Capacitor, Ceramic, 10-V, X7R, 10%
1	C2	0.1 μ F	805	KEMET	C0805C104K9RACTU	Capacitor, Ceramic, 0.1- μ F, 6.3-V, X7R, 10%
4	C1A1, C2A1, C3A1, C4A1	0.22 μ F	1210	Yageo	CC1210KKX7R0BB224	Capacitor, Ceramic, 0.22- μ F, 100-V, X7R, 10%
1	C3	0.1 μ F	1206	KEMET	C1206Y104K9RAC7800	Capacitor, Ceramic, 0.1- μ F, 6.3-V, X7R, 10%
1	C4	220 μ F	SMD	Panasonic	EEVFK2A221M	Capacitor, Aluminum, 220- μ F, 100-V, 20%
1	C5	1 μ F	805	Taiyo Yuden	UMK212B7105KG-T	CAP CER 1UF 50-V X7R 0805 \pm 10%
1	C6	68 μ F	SMD	Panasonic	EEV-FK2A680Q	Capacitor, Aluminum, SM, 68 μ F, 100-V
1	C9	220 pF	805	AVX Corporation	08051A221FAT2A	Capacitor, Ceramic, 220 pF, 100-V, NP0, 1%
8	CF1, CF2, CF5, CF6, CF9, CF10, CF13, CF14	1000 pF	1808	TDK Corporation	C4520X7R3D102K130KE	CAP CER 1000PF 2KV X7R 1808 \pm 10%
8	CF3, CF4, CF7, CF8, CF11, CF12, CF15, CF16	0.01 μ F	805	Yageo	CX0805MRX7R0BB103	Capacitor, Ceramic, 0.01 μ F, 100-V, X7R, 20%
8	D13, D14, D15, D16, D21, D22, D23, D24	GBLC03C	SOD-323	Protek Devices	GBLC03C	Diode, TVS, 19 Clamping Voltage, 350W
4	D25, D26, D27, D28	1SMB5932BT3		ON Semiconductor	1SMB5932BT3G	DIODE ZENER 20-V 3W SMB
4	D29, D30, D31, D32	SMAJ10A	SMA	Vishay Semiconductor Diodes Division	P4SMA10A-E3/61	TVS DIODE 8.55VWM 14.5VC SMA
6	D3, D7, D17, D18, D19, D20	LN1371G	SMD	Lite On	LTST-C170GKT	Diode, LED, Water Clear, 120-mA, 6-mcd
1	D33	1SMA5919BT3	SMA	ON Semiconductor	SZ1SMA5919BT3G	DIODE ZENER 5.6-V 1.5W SMA
1	D4	SMAJ58A	SMA	Vishay	SMAJ58A	Diode, Switching, 58-V, 400W
1	D8	SMAJ12A	SMA	Vishay Semiconductor Diodes Division	P4SMA12A-E3/61	TVS DIODE 10.2VWM 16.7VC SMA
8	DAC1, DAC2, DAC4, DAC5, DAC7, DAC8, DAC11, DAC13	STPS1H100A	SMA	ST	STPS1H100A	Diode, Schottky, 1-A, 100 V
1	DAC3	S2B	SMB	Diodes Inc.	ES2B-13-F	DIODE GEN PURP 100-V 2-A SMB
4	DAC6, DAC9, DAC10, DAC12	ES2B/A	SMA	Diodes, Inc.	ES2BA-13-F	DIODE GEN PURP 100-V 2-A SMA
4	F1, F2, F3, F4	RXE090	TH	Littelfuse Inc.	RXE090	POLYSWITCH RXE SERIES 0.90A HOLD
1	J1	1793840000	TH	Weidmüller	1793840000	Header, 8-pin, 150 mil spacing
1	J1 Socket	1798900000		Weidmüller	1798900000	Header, 8-pin, Socket, 150 mil spacing
1	J2	PTC36SAAN	TH	Sullins Connector Solutions	PEC36SAAN	CONN HEADER .100 SINGL STR 36POS
1	J3	1793830000	TH	Weidmüller	1793830000	Header, 6-pin, 150 mil spacing
1	J3 Socket	1798890000		Weidmüller	1798890000	Header, 6-pin, Socket, 150 mil spacing
11	J4, J5, J6, J7, J8, J9, J10, J11, JP1, JP2, JP3	PTC36SAAN	TH	Sullins Connector Solutions	PEC36SAAN	CONN HEADER .100 SINGL STR 36POS
3	JALT1, WDIS1, JMS1	PTC36SAAN	TH	Sullins Connector Solutions	PEC36SAAN	CONN HEADER .100 SINGL STR 36POS

(1) These assemblies are ESD sensitive, ESD precautions shall be observed.

(2) These assemblies must be clean and free from flux and all contaminants. Use of no clean flux is not acceptable.

(3) These assemblies must comply with workmanship standards IPC-A-610 Class 2.

(4) Ref designators marked with an asterisk (***) cannot be substituted. All other components can be substituted with equivalent MFG's components.

(5) Add 6 rubber bumpers to the bottom side of the board.

Table 2. HPA109 Bill of Materials (continued)

Count	Ref Des	Value	Size	MFR	Part Number	Description ^{(1) (2) (3) (4) (5)}
4	JSC11, JSDA_IN1, JSDA_OUT1, JV1	PTC36SAAN	TH	Sullins Connector Solutions	PEC36SAAN	CONN HEADER .100 SINGL STR 36POS
4	L1, L2, L3, L4	TTDLF2500	SMD	Coilcraft	TTDLF2500	Inductor, 2 Lines, 0.500A, 5 µH
8	P1_IN1, P1_OUT1, P2_IN1, P2_OUT1, P3_IN1, P3_OUT1, P4_IN1, P4_OUT1	RJ-45	TH	TE Connectivity AMP Connectors	556416-1	CONN MOD JACK 8P8C VERT UNSHLD
16	P1N1, P1NX1, P1P1, P1PX1, P2N1, P2NX1, P2P1, P2PX1, P3N1, P3NX1, P3P1, P3PX1, P4N1, P4NX1, P4P1, P4PX1	PTC36SAAN	TH	Sullins Connector Solutions	PTC36SAAN	CONN HEADER .100 SINGL STR 36POS
1	Q1	IRF540NS	D2PAK	Infineon Technologies	IRF540NSTRLPBF	MOSFET N-CH 100-V 33-A D2PAK
1	Q2	BSS119	SOT23	Fairchild semiconductor corporation	BSS123	Trans MOSFET, N-ch, 100-V, 0.17-A, 3-Pin SOT-23 T/R
1	Q3	FDV301N	SOT23	Fairchild	FDV301N	MOSFET, Nch, 25 V, 220-mA, 5 Ω
1	R1	7.15 K	805	TE Connectivity Passive Product	RN73C2A7K15BTDF	RES SMD 7.15KOHM 0.1% 1/10W 0805
4	R11, R13, R14, R15	2 K	805	Stackpole Electronics Inc.	RNCS0805BKE2K00	RES SMD 2K OHM 0.1% 1/10W 0805
4	R35, R36, R37, R38	10 K	805	Susumu	RR1220P-103-D	RES SMD 10K OHM 0.5% 1/10W 0805
1	R21	1 K	805	Susumu	RR1220P-102-D	RES SMD 1K OHM 0.5% 1/10W 0805
1	R18	0.01	2512	Bourns Inc.	CRF2512-FZ-R010ELF-ND	RES SMD 0.01 OHM 1% 2W 2512
1	R19	0.0 Ω	805	Yageo	RC0805JR-070RL	RES SMD 0.0 OHM JUMPER 1/8W 0805
3	R2, R3, R4	200 Ω	805	Susumu	RR1220P-201-D	RES SMD 200 OHM 0.5% 1/10W 0805
1	R20	330	805	Susumu	RR1220P-331-D	RES SMD 330 OHM 0.5% 1/10W 0805
1	R22	100 Ω	805	Susumu	RR1220P-101-D	RES SMD 100 OHM 0.5% 1/10W 0805
1	R25	10 K	805	Vishay Foil Resistors (Division of Vishay Precision Group)	Y162910K0000F9R	RES SMD 10K OHM 1% 1/10W 0805
1	R26	124 K	805	TE Connectivity Passive Product	RN73C2A124KBTDF	RES SMD 124K OHM 0.1% 1/10W 0805
1	R5	69.8 K	805	TE Connectivity Passive Product	RN73C2A69K8BTDF	RES SMD 69.8KOHM 0.1% 1/10W 0805
4	R6, R9, R12, R17	3.3 K	805	Susumu	RR1220P-332-D	RES SMD 3.3K OHM 0.5% 1/10W 0805
1	R7	187 K	805	Susumu	RR1220P-1873-D-M	RES SMD 187K OHM 0.5% 1/10W 0805
1	R8	100 K	805	Panasonic Electronic Components	ERJ-6GEYJ104V	RES SMD 100K OHM 5% 1/8W 0805
4	RAC1, RAC2, RAC3, RAC4	7.5 K	805	Susumu	RR1220P-752-D	RES SMD 7.5K OHM 0.5% 1/10W 0805
16	RF1, RF2, RF3, RF4, RF5, RF6, RF7, RF8, RF9, RF10, RF11, RF12, RF13, RF14, RF15, RF16	75	603	Yageo	RC0603JR-0775RL	RES SMD 75 OHM 5% 1/10W 0603
1	S1	KT11P2JM	SMD	C & K	KT11P2JM34LFS	SWITCH TACTILE SPST-NO 1VA 32 V
1	S2	76SB06S	TH	Grayhill	76SB06ST	SWITCH ROCKER DIP SPST 150MA 30 V
4	T1, T2, T3, T4	H2019	SMD	Pulse Electronics Corporation	H2019FNLT	XFRMR MAGNT MOD 1PORT POE 10/100
20	TP3.3, TPAC_HI1, TPAC_LO1, TPCINT1, TPCINT2, TPCINT3, TPCINT4, TPCT1, TPG1, TPG2, TPINT1, TPORB1, TPSC1, TPSDA1, TPSDAO1, TPSYN1, TPV10, TPV6P3, TPWD1, TVP2.5	G10	TH	Keystone	5012	Test Point, White, 0.062 Hole
1	U1	PS8802-1-F3-AX	SO-8	CEL	PS8802-1-F3-AX	IC, Optocoupler, Single Open Collector Out Put
1	U3	PS8802-1-F3-AX	SO-8	CEL	PS8802-1-F3-AX	IC, Optocoupler, Single Open Collector Out Put
1	U2	PS8802-2-AX	SO-8	CEL	PS8802-2-AX	OPTOISO 2.5KV 2CH TRANS 8SOIC
1	U4	TPS2490DGS	DGS10	Texas Instruments	TPS2490DGS	IC, TPS2490DGS

Table 2. HPA109 Bill of Materials (continued)

Count	Ref Des	Value	Size	MFR	Part Number	Description ^{(1) (2) (3) (4) (5)}
1	U5	SN74LVC06A	SO14	Texas Instruments	SN74LVC06AD	IC, High-Speed CMOS Logic Hex Inverting Schmitt Trigger
1	U6	TPS2384PAP	PQFQ-64	Texas Instruments	TPS2384PAP	IC, Quad Ethernet Power Sourcing
1	–			Any	HPA109B	PCB, 9.3 In x 4.9 In x 0.062 In
1	Shunt			3M Interconnect	929950-00	SHORTING JUMBER UNPLATED BLK

7 EVM Schematic and Layouts

The EVM schematic and top and bottom board layouts are appended.

Revision History

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

Changes from D Revision (July 2011) to E Revision	Page
• Changed all EV2300 to EV2400 throughout the document.....	1

IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATA SHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to [TI's Terms of Sale](#) or other applicable terms available either on ti.com or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products.

TI objects to and rejects any additional or different terms you may have proposed.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2022, Texas Instruments Incorporated