

# TPS62770EVM-734 Evaluation Module

This user's guide describes the characteristics, operation, and use of Tl's TPS62770 evaluation module (EVM). This EVM is designed to help evaluate and test the operation and functionality of the TPS62770. A step-down and a step-up converter are integrated in the TPS62770. The EVM converts a 2.5-V to 5.5-V input voltage to two regulated output voltages. The output voltage of the integrated buck converter is set between 1.0 V and 3.0 V. It has an ultra-low quiescent current of 360 nA. The integrated boost converter is adjustable from 4.5 V to 15 V output voltage. This user's guide includes setup instructions for the hardware, a printed-circuit board layout for the EVM, a schematic diagram, a bill of materials, and test results for the EVM.

## Contents

1	Introduction	2
2	Setup	3
3	Common Efficiency Measurement Errors with Ultra-Low Iq Devices	5
4	Board Layout	
5	Schematic and Bill of Materials	11
	List of Figures	
1	Assembly Layer	6
2	Top Layer	
3	Signal 1 Layer	8
4	Signal 2 Layer	9
5	Bottom Layer	10
6	TPS62770EVM-734 Schematic U1	
7	TPS62770EVM-734 Schematic U2	12
	List of Tables	
1	Output Voltage Settings	4
2	TPS62770EVM-734 Bill of Materials	



Introduction www.ti.com

## 1 Introduction

The TPS62770 is a single-chip solution with an integrated 360-nA step-down converter and a step-up converter with output voltages up to 15 V in a tiny  $1.65\text{-mm} \times 1.65\text{-mm}$ , 16-ball DSBGA package. The EVM comes with two independent TPS62770 circuits. U1 has the ability to adjust the output voltage of the boost converter. In addition, the flexibility is given to use the boost converter as a constant-current LED driver. The brightness can be adjusted by an integrated PWM-to-analog converter. With the circuit of U2, the output voltage of the boost converter is 12 V fixed with no resistive divider, achieving a total solution size of  $26.5 \text{ mm}^2$ .

# 1.1 Background

The TPS62770EVM-734 uses the TPS62770 device. The EVM operates with full-rated performance with an input voltage between 2.5 V and 5.5 V.

# 1.2 Application Example

One application is to use the TPS62770 for wearable devices, where a small solution size is required. Here the device supplies a PMOLED display using the step-up converter while the Bluetooth<sup>™</sup> low energy SoC is supplied by the ultra-low Iq step-down converter, enabling always-on functionality and a small total solution size. For further information go to the *PMOLED Wearable Reference Design PMP9792*.



www.ti.com Setup

# 2 Setup

This section describes how to properly use the TPS62770EVM-734.

# 2.1 Input and Output Connector Descriptions for U1

J1, Pin 1 and 2 – VIN,	Positive input connection from the input supply for the EVM.
J1, Pin 3 and 4 – S+/S-	Input voltage sense connections. Measure the input voltage at this point.
J1, Pin 5 and 6 – GND	Return connection from the input supply for the EVM.
J2, Pin 1 and 2 – VOUT	Output voltage connection. Buck
J2, Pin 3 and 4 - S+/S-	Output voltage sense connections. Measure the output voltage at this point. Buck
J2, Pin 5 and 6 – GND	Output return connection. Buck
J3, Pin 1 and 2 – VOUT	Output voltage connection. Boost
J3, Pin 3 and 4 – S+/S-	Output voltage sense connections. Measure the output voltage at this point. Boost
J3, Pin 5 and 6 – GND	Output return connection. Boost
J4 - Vin	Connects FB to Vin for internal feedback divider use
J5 - FBLED	Feedback for LED mode. Short in LED mode
J6 – VO2	Short for LED mode, open for normal operation
J7, Pin 1 - LOAD	Load switch output connection.
J7, Pin 2 - LOAD	Load switch output return connection.
J8, J9 – GND	Ground
JP1 – EN1	EN pin input jumper. Place the supplied jumper across ON and EN to turn on the step-down converter. Place the jumper across OFF and EN to turn off the IC.
JP2 – EN2	EN pin input jumper. Place the supplied jumper across ON and EN to turn on the step-up converter. Place the jumper across OFF and EN to turn off the IC. A PWM signal can be applied between ON and OFF, when used as a constant-current driver.
JP3 – BM1	This pin controls the operation mode of the boost converter. With BM = high, the device features a low feedback voltage of 200mV, which can be scaled down by the integrated PWM to analog converter. With BM = low, the device operates with a 0.8V feedback voltage and operates as a boost converter with voltage regulation.
JP4 - CTRL	CTRL pin input jumper. Place the supplied jumper across LOAD_ON and CTRL to activate (close) the internal load switch. Place the jumper across LOAD_OFF and CTRL to de-activate (open) the internal load switch.
JP5 through JP7 - VSELx	These three inputs set the output voltage. By connecting each pin high or low, the output voltage is programmed per Table 1. Do not leave any jumper open for proper operation. Buck converter

# 2.2 Input / Output Connector Descriptions for U2

J10	, Pin 1 and 2 – VIN,	Positive input connection from the input supply for the EVM.
J10	, Pin 3 and 4 – S+/S–	Input voltage sense connections. Measure the input voltage at this point.
J10	, Pin 5 and 6 – GND	Return connection from the input supply for the EVM.
J11	, Pin 1 and 2 – VOUT	Output voltage connection. Buck
J11	, Pin 3 and 4 – S+/S–	Output voltage sense connections. Measure the output voltage at this point. Buck



Setup www.ti.com

J11, Pin 5 and 6 - GND	Output return connection. Buck
J12, Pin 1 and 2 – VOUT	Output voltage connection. Boost
J12, Pin 3 and 4 – S+/S-	Output voltage sense connections. Measure the output voltage at this point. Boost
J12, Pin 5 and 6 – GND	Output return connection. Boost
J13, Pin 1 - LOAD	Load switch output connection.
J13, Pin 2 - LOAD	Load switch output return connection.
J14, J15 – GND	Ground
JP8 – EN1	EN pin input jumper. Place the supplied jumper across ON and EN to turn on the step-down converter. Place the jumper across OFF and EN to turn off the IC.
JP9 – EN2	EN pin input jumper. Place the supplied jumper across ON and EN to turn on the step-up converter. Place the jumper across OFF and EN to turn off the IC. A PWM signal can be applied between ON and OFF, when used as a constant-current driver.
JP10 – BM1	This pin controls the operation mode of the boost converter. With BM = high, the device features a low feedback voltage of 200 mV, which can be scaled down by the integrated PWM to analog converter. With BM = low, the device operates with a 0.8-V feedback voltage and operates as a boost converter with voltage regulation.
JP11 - CTRL	CTRL pin input jumper. Place the supplied jumper across LOAD_ON and CTRL to activate (close) the internal load switch. Place the jumper across LOAD_OFF and CTRL to deactivate (open) the internal load switch.
JP5 through JP7 - VSELx	These three inputs set the output voltage. By connecting each pin high or low, the output voltage is programmed per Table 1. Do not leave any jumper open for proper operation. Buck converter

# 2.3 Output Voltage Settings

Table 1 provides the output voltage settings for the TPS62770EVM-734. A 0 refers to logic low, while 1 refers to logic high.

VSEL 2 VOUT VSEL 3 VSEL 1 1.0 0 0 0 1.05 0 0 1 0 1.1 0 1 1.2 0 1 1 0 0 1.8 1 1.9 1 0 1 2.0 1 1 0 3.0 1 1 1

**Table 1. Output Voltage Settings** 

# 2.4 Operation

To operate U1 of the EVM, set jumpers JP1 through JP7 to the desired positions per Section 2.1. Connect the input supply to J1 and connect the load to J2 and J3.

To operate U2 of the EVM, set jumpers JP8 through JP14 to the desired positions per Section 2.2. Connect the input supply to J10 and connect the load to J11 and J12.



# 3 Common Efficiency Measurement Errors with Ultra-Low Iq Devices

Efficiency is a common measurement for a power supply. With an ultra-low quiescent current device, such as the TPS62770, measurement errors can have a large impact on the measured efficiency, especially at very low load currents ( $< 100 \mu A$ ).

# 3.1 Efficiency Measurement Setup

To accurately measure the efficiency of the TPS62770EVM-734, use the setup described in <a href="SLVA236">SLVA236</a>, Figure 6. To measure the quiescent current of the step-down converter, disable the step-up converter of the TPS62770 by placing the jumper across OFF and EN of JP2 or JP9. The 'Additional Input Capacitor' referred to in that application report is not needed as C5 is already included on the TPS62770EVM-734. Any additional input capacitance is not recommended as it incurs increased leakage on the input which lowers the measured efficiency. When measuring the efficiency through the setup as described in <a href="SLVA236">SLVA236</a>, special care must be taken to remove the current consumed by the measurement instruments from the efficiency calculations. Such measurement instruments typically include the input voltage and output voltage multimeters as well as the remote sense lines of the input power supply (if it has this capability). The current into these points affects the measured efficiency at very light loads. Two possible methods to overcome this are: measuring the current into these points (measure the current into the multimeters or remote sense lines) and then subtracting this current from the efficiency calculation or simply removing these instruments from the test setup. At very light load currents, it is typically best to remove the remote sense lines of the input power supply and then measure the current into the input and output voltage multimeters to get the most accurate efficiency measurement.

# 3.2 Pullup and Pulldown Resistors

In addition to the input capacitor and remote sense lines noted in Section 3.1, any pullup or pulldown resistors can draw significant current and affect the measured efficiency. For example, if the VSEL2 pin were pulled up to the input voltage with a 1-M $\Omega$  resistor and the pin were tied low through JP4, this would draw an extra 3.6  $\mu$ A from the input source at a 3.6-V input voltage. This would greatly affect the efficiency at very light loads. For this reason, no pullup or pulldown resistors have been used on the TPS62770EVM-734. The final application circuit should ensure that all digital inputs to the TPS62770 are terminated either high or low and not left floating, per the device data sheet (SLVSCX0).



Board Layout www.ti.com

## 4 Board Layout

This section provides the TPS62770EVM-734 board layout and illustrations. The gerbers are available on the EVM product page: TPS62770EVM-734.

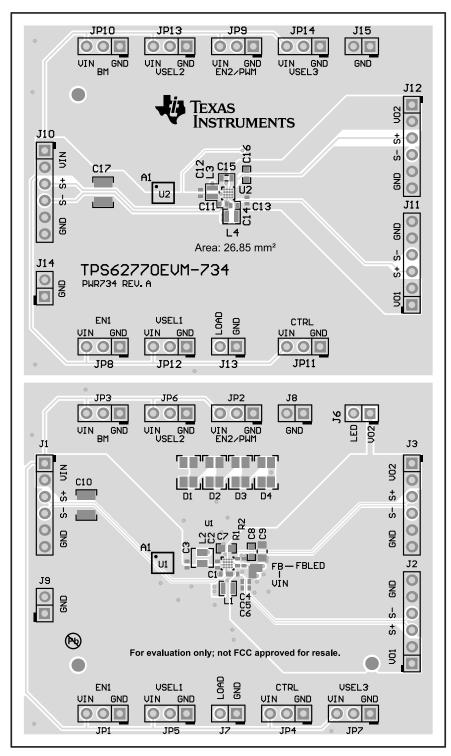


Figure 1. Assembly Layer



www.ti.com Board Layout

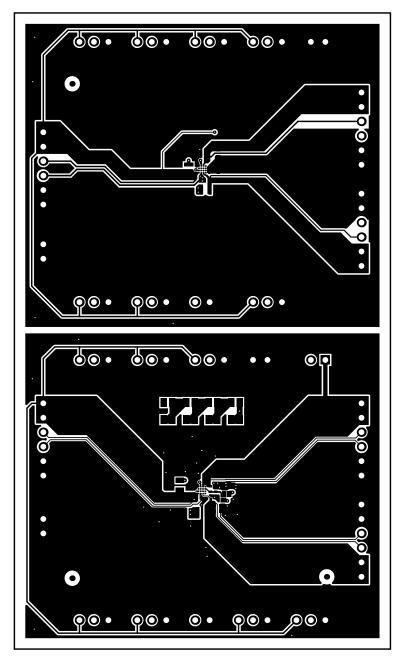


Figure 2. Top Layer



Board Layout www.ti.com

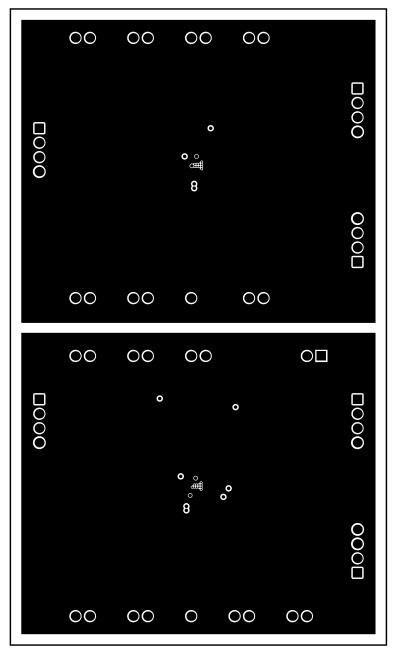


Figure 3. Signal 1 Layer



www.ti.com Board Layout

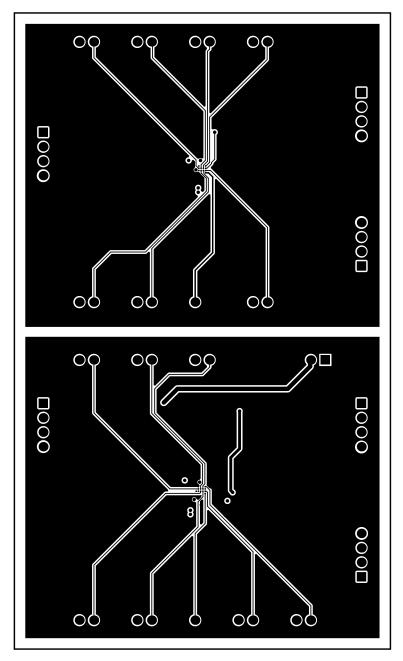


Figure 4. Signal 2 Layer



Board Layout www.ti.com

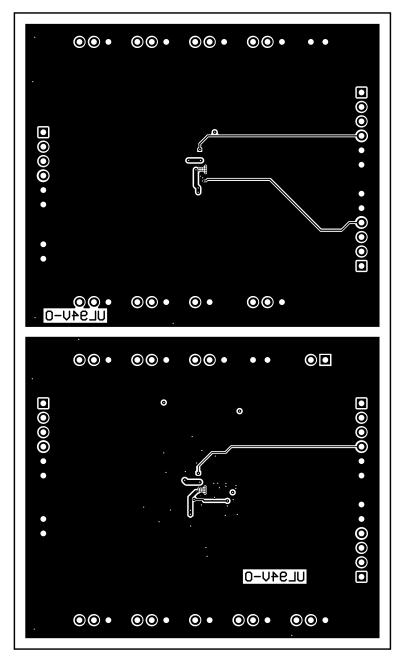


Figure 5. Bottom Layer



Schematic and Bill of Materials www.ti.com

#### **Schematic and Bill of Materials** 5

This section provides the TPS62770EVM-734 schematic and bill of materials.

#### 5.1 Schematic U1

Figure 6 illustrates the TPS62770EVM-734 U1 schematic.

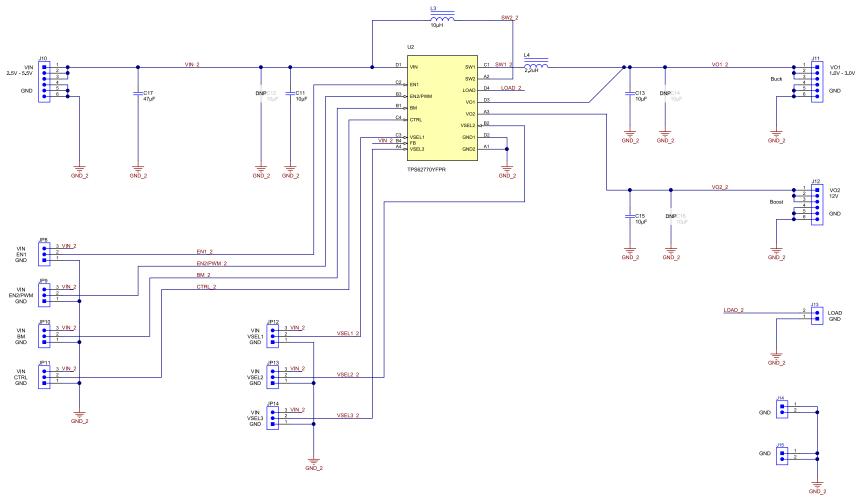


Figure 6. TPS62770EVM-734 Schematic U1



Schematic and Bill of Materials www.ti.com

Figure 7 illustrates the TPS62770EVM-734 U2 schematic.

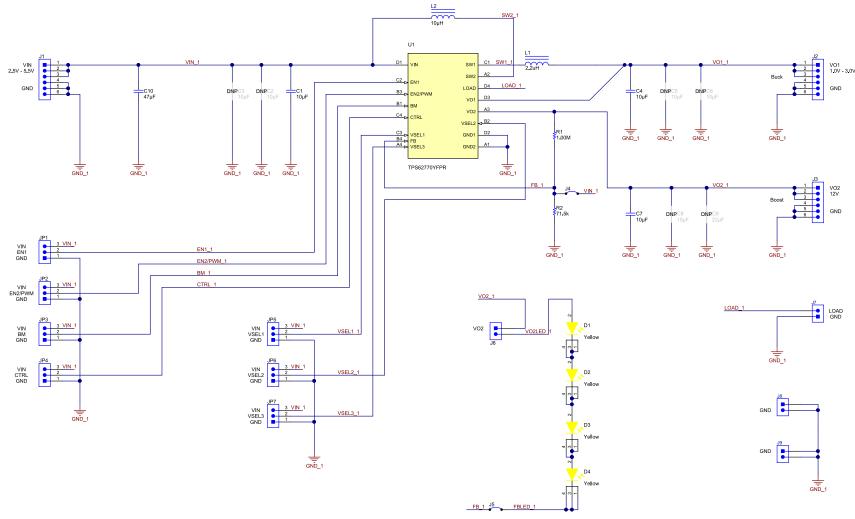


Figure 7. TPS62770EVM-734 Schematic U2



# 5.2 Bill of Materials

Table 2 lists the TPS62770EVM-734 bill of materials.

# Table 2. TPS62770EVM-734 Bill of Materials

Count	RefDes	Value	Description	Size	Part Number	MFR
4	C1, C4, C11, C13	10uF	Capacitor, Ceramic, X5R, 6.3V, 20%	0402	GRM155R60J106ME15D	Murata
4	C7, C15	10uF	Capacitor, Ceramic, X5R, 25V, 20%	0603	GRM188R61E106MA73	Murata
2	C10, C17	47uF	Capacitor, Ceramic, X5R, 16V, 20%	1210	GRM32ER61C476ME15L	Murata
6	C2, C3, C5, C6, C12, C14	not populated		0402		
2	C8, C16	not populated		0603		
1	C9	not populated		0805		
4	D1, D2, D3, D4	Yellow	LED, Yellow, SMD	2.8x3.2mm	LTW-E670DS	Lite-On
2	L1, L4	2.2uH	Inductor, SMD, 1.2A, 204-mΩ	1.6x2.0mm	1285AS-H-2R2M	Toko
1	L2	10uH	Inductor, SMD, shielded, 10 $\mu$ H, 0.71 A, 152-m $\Omega$	3.0x1.5x3.0mm	VLF302515MT-100M	TDK
1	L3	10uH	Inductor, SMD, shielded, 10 $\mu$ H, 0.47 A, 1026-m $\Omega$	2.0x1.2x1.6mm	VLS201612ET-100M	TDK
1	R1	1.00ΜΩ	Resistor, SMD, 1.00MΩ, 1%	0402	CRCW04021M00FKED	Vishay-Dale
1	R2	71.5kΩ	Resistor, SMD, 71.5kΩ, 1%	0402	CRCW040271K5FKED	Vishay-Dale
2	U1, U2	TPS62770	Multi Rail DC/DC Converter For Wearable Applications	1.65mmx1.65mm 16-Ball DSBGA	TPS62770YFP	TI

### STANDARD TERMS AND CONDITIONS FOR EVALUATION MODULES

- 1. Delivery: TI delivers TI evaluation boards, kits, or modules, including any accompanying demonstration software, components, or documentation (collectively, an "EVM" or "EVMs") to the User ("User") in accordance with the terms and conditions set forth herein. Acceptance of the EVM is expressly subject to the following terms and conditions.
  - 1.1 EVMs are intended solely for product or software developers for use in a research and development setting to facilitate feasibility evaluation, experimentation, or scientific analysis of TI semiconductors products. EVMs have no direct function and are not finished products. EVMs shall not be directly or indirectly assembled as a part or subassembly in any finished product. For clarification, any software or software tools provided with the EVM ("Software") shall not be subject to the terms and conditions set forth herein but rather shall be subject to the applicable terms and conditions that accompany such Software
  - 1.2 EVMs are not intended for consumer or household use. EVMs may not be sold, sublicensed, leased, rented, loaned, assigned, or otherwise distributed for commercial purposes by Users, in whole or in part, or used in any finished product or production system.
- 2 Limited Warranty and Related Remedies/Disclaimers:
  - 2.1 These terms and conditions do not apply to Software. The warranty, if any, for Software is covered in the applicable Software License Agreement.
  - 2.2 TI warrants that the TI EVM will conform to TI's published specifications for ninety (90) days after the date TI delivers such EVM to User. Notwithstanding the foregoing, TI shall not be liable for any defects that are caused by neglect, misuse or mistreatment by an entity other than TI, including improper installation or testing, or for any EVMs that have been altered or modified in any way by an entity other than TI. Moreover, TI shall not be liable for any defects that result from User's design, specifications or instructions for such EVMs. Testing and other quality control techniques are used to the extent TI deems necessary or as mandated by government requirements. TI does not test all parameters of each EVM.
  - 2.3 If any EVM fails to conform to the warranty set forth above, Tl's sole liability shall be at its option to repair or replace such EVM, or credit User's account for such EVM. Tl's liability under this warranty shall be limited to EVMs that are returned during the warranty period to the address designated by Tl and that are determined by Tl not to conform to such warranty. If Tl elects to repair or replace such EVM, Tl shall have a reasonable time to repair such EVM or provide replacements. Repaired EVMs shall be warranted for the remainder of the original warranty period. Replaced EVMs shall be warranted for a new full ninety (90) day warranty period.
- 3 Regulatory Notices:
  - 3.1 United States
    - 3.1.1 Notice applicable to EVMs not FCC-Approved:

This kit is designed to allow product developers to evaluate electronic components, circuitry, or software associated with the kit to determine whether to incorporate such items in a finished product and software developers to write software applications for use with the end product. This kit is not a finished product and when assembled may not be resold or otherwise marketed unless all required FCC equipment authorizations are first obtained. Operation is subject to the condition that this product not cause harmful interference to licensed radio stations and that this product accept harmful interference. Unless the assembled kit is designed to operate under part 15, part 18 or part 95 of this chapter, the operator of the kit must operate under the authority of an FCC license holder or must secure an experimental authorization under part 5 of this chapter.

3.1.2 For EVMs annotated as FCC - FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant:

### **CAUTION**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### FCC Interference Statement for Class A EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

#### FCC Interference Statement for Class B EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### 3.2 Canada

3.2.1 For EVMs issued with an Industry Canada Certificate of Conformance to RSS-210

### **Concerning EVMs Including Radio Transmitters:**

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

#### Concernant les EVMs avec appareils radio:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

#### Concerning EVMs Including Detachable Antennas:

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. This radio transmitter has been approved by Industry Canada to operate with the antenna types listed in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

## Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante. Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur

### 3.3 Japan

- 3.3.1 Notice for EVMs delivered in Japan: Please see <a href="http://www.tij.co.jp/lsds/ti\_ja/general/eStore/notice\_01.page">http://www.tij.co.jp/lsds/ti\_ja/general/eStore/notice\_01.page</a> 日本国内に輸入される評価用キット、ボードについては、次のところをご覧ください。
  http://www.tij.co.jp/lsds/ti\_ja/general/eStore/notice\_01.page
- 3.3.2 Notice for Users of EVMs Considered "Radio Frequency Products" in Japan: EVMs entering Japan may not be certified by TI as conforming to Technical Regulations of Radio Law of Japan.

If User uses EVMs in Japan, not certified to Technical Regulations of Radio Law of Japan, User is required by Radio Law of Japan to follow the instructions below with respect to EVMs:

- Use EVMs in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
- 2. Use EVMs only after User obtains the license of Test Radio Station as provided in Radio Law of Japan with respect to EVMs, or
- 3. Use of EVMs only after User obtains the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to EVMs. Also, do not transfer EVMs, unless User gives the same notice above to the transferee. Please note that if User does not follow the instructions above, User will be subject to penalties of Radio Law of Japan.

【無線電波を送信する製品の開発キットをお使いになる際の注意事項】 開発キットの中には技術基準適合証明を受けていないものがあります。 技術適合証明を受けていないもののご使用に際しては、電波法遵守のため、以下のいずれかの措置を取っていただく必要がありますのでご注意ください。

- 1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用 いただく。
- 2. 実験局の免許を取得後ご使用いただく。
- 3. 技術基準適合証明を取得後ご使用いただく。
- なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。 上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。 日本テキサス・イ

ンスツルメンツ株式会社

東京都新宿区西新宿6丁目24番1号

西新宿三井ビル

- 3.3.3 Notice for EVMs for Power Line Communication: Please see <a href="http://www.tij.co.jp/lsds/ti\_ja/general/eStore/notice\_02.page">http://www.tij.co.jp/lsds/ti\_ja/general/eStore/notice\_02.page</a> 電力線搬送波通信についての開発キットをお使いになる際の注意事項については、次のところをご覧ください。 http://www.tij.co.jp/lsds/ti\_ja/general/eStore/notice\_02.page
- 4 EVM Use Restrictions and Warnings:
  - 4.1 EVMS ARE NOT FOR USE IN FUNCTIONAL SAFETY AND/OR SAFETY CRITICAL EVALUATIONS, INCLUDING BUT NOT LIMITED TO EVALUATIONS OF LIFE SUPPORT APPLICATIONS.
  - 4.2 User must read and apply the user guide and other available documentation provided by TI regarding the EVM prior to handling or using the EVM, including without limitation any warning or restriction notices. The notices contain important safety information related to, for example, temperatures and voltages.
  - 4.3 Safety-Related Warnings and Restrictions:
    - 4.3.1 User shall operate the EVM within TI's recommended specifications and environmental considerations stated in the user guide, other available documentation provided by TI, and any other applicable requirements and employ reasonable and customary safeguards. Exceeding the specified performance ratings and specifications (including but not limited to input and output voltage, current, power, and environmental ranges) for the EVM may cause personal injury or death, or property damage. If there are questions concerning performance ratings and specifications, User should contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may also result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM user guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, even with the inputs and outputs kept within the specified allowable ranges, some circuit components may have elevated case temperatures. These components include but are not limited to linear regulators, switching transistors, pass transistors, current sense resistors, and heat sinks, which can be identified using the information in the associated documentation. When working with the EVM, please be aware that the EVM may become very warm.
    - 4.3.2 EVMs are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems. User assumes all responsibility and liability for proper and safe handling and use of the EVM by User or its employees, affiliates, contractors or designees. User assumes all responsibility and liability to ensure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard. User assumes all responsibility and liability for any improper or unsafe handling or use of the EVM by User or its employees, affiliates, contractors or designees.
  - 4.4 User assumes all responsibility and liability to determine whether the EVM is subject to any applicable international, federal, state, or local laws and regulations related to User's handling and use of the EVM and, if applicable, User assumes all responsibility and liability for compliance in all respects with such laws and regulations. User assumes all responsibility and liability for proper disposal and recycling of the EVM consistent with all applicable international, federal, state, and local requirements.
- 5. Accuracy of Information: To the extent TI provides information on the availability and function of EVMs, TI attempts to be as accurate as possible. However, TI does not warrant the accuracy of EVM descriptions, EVM availability or other information on its websites as accurate, complete, reliable, current, or error-free.

#### 6. Disclaimers:

- 6.1 EXCEPT AS SET FORTH ABOVE, EVMS AND ANY WRITTEN DESIGN MATERIALS PROVIDED WITH THE EVM (AND THE DESIGN OF THE EVM ITSELF) ARE PROVIDED "AS IS" AND "WITH ALL FAULTS." TI DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, REGARDING SUCH ITEMS, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADE SECRETS OR OTHER INTELLECTUAL PROPERTY RIGHTS.
- 6.2 EXCEPT FOR THE LIMITED RIGHT TO USE THE EVM SET FORTH HEREIN, NOTHING IN THESE TERMS AND CONDITIONS SHALL BE CONSTRUED AS GRANTING OR CONFERRING ANY RIGHTS BY LICENSE, PATENT, OR ANY OTHER INDUSTRIAL OR INTELLECTUAL PROPERTY RIGHT OF TI, ITS SUPPLIERS/LICENSORS OR ANY OTHER THIRD PARTY, TO USE THE EVM IN ANY FINISHED END-USER OR READY-TO-USE FINAL PRODUCT, OR FOR ANY INVENTION, DISCOVERY OR IMPROVEMENT MADE, CONCEIVED OR ACQUIRED PRIOR TO OR AFTER DELIVERY OF THE EVM
- 7. USER'S INDEMNITY OBLIGATIONS AND REPRESENTATIONS. USER WILL DEFEND, INDEMNIFY AND HOLD TI, ITS LICENSORS AND THEIR REPRESENTATIVES HARMLESS FROM AND AGAINST ANY AND ALL CLAIMS, DAMAGES, LOSSES, EXPENSES, COSTS AND LIABILITIES (COLLECTIVELY, "CLAIMS") ARISING OUT OF OR IN CONNECTION WITH ANY HANDLING OR USE OF THE EVM THAT IS NOT IN ACCORDANCE WITH THESE TERMS AND CONDITIONS. THIS OBLIGATION SHALL APPLY WHETHER CLAIMS ARISE UNDER STATUTE, REGULATION, OR THE LAW OF TORT, CONTRACT OR ANY OTHER LEGAL THEORY, AND EVEN IF THE EVM FAILS TO PERFORM AS DESCRIBED OR EXPECTED.
- 8. Limitations on Damages and Liability:
  - 8.1 General Limitations. IN NO EVENT SHALL TI BE LIABLE FOR ANY SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL, OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF THESE TERMS ANDCONDITIONS OR THE USE OF THE EVMS PROVIDED HEREUNDER, REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCLUDED DAMAGES INCLUDE, BUT ARE NOT LIMITED TO, COST OF REMOVAL OR REINSTALLATION, ANCILLARY COSTS TO THE PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, RETESTING, OUTSIDE COMPUTER TIME, LABOR COSTS, LOSS OF GOODWILL, LOSS OF PROFITS, LOSS OF SAVINGS, LOSS OF USE, LOSS OF DATA, OR BUSINESS INTERRUPTION. NO CLAIM, SUIT OR ACTION SHALL BE BROUGHT AGAINST TI MORE THAN ONE YEAR AFTER THE RELATED CAUSE OF ACTION HAS OCCURRED.
  - 8.2 Specific Limitations. IN NO EVENT SHALL TI'S AGGREGATE LIABILITY FROM ANY WARRANTY OR OTHER OBLIGATION ARISING OUT OF OR IN CONNECTION WITH THESE TERMS AND CONDITIONS, OR ANY USE OF ANY TI EVM PROVIDED HEREUNDER, EXCEED THE TOTAL AMOUNT PAID TO TI FOR THE PARTICULAR UNITS SOLD UNDER THESE TERMS AND CONDITIONS WITH RESPECT TO WHICH LOSSES OR DAMAGES ARE CLAIMED. THE EXISTENCE OF MORE THAN ONE CLAIM AGAINST THE PARTICULAR UNITS SOLD TO USER UNDER THESE TERMS AND CONDITIONS SHALL NOT ENLARGE OR EXTEND THIS LIMIT.
- 9. Return Policy. Except as otherwise provided, TI does not offer any refunds, returns, or exchanges. Furthermore, no return of EVM(s) will be accepted if the package has been opened and no return of the EVM(s) will be accepted if they are damaged or otherwise not in a resalable condition. If User feels it has been incorrectly charged for the EVM(s) it ordered or that delivery violates the applicable order, User should contact TI. All refunds will be made in full within thirty (30) working days from the return of the components(s), excluding any postage or packaging costs.
- 10. Governing Law: These terms and conditions shall be governed by and interpreted in accordance with the laws of the State of Texas, without reference to conflict-of-laws principles. User agrees that non-exclusive jurisdiction for any dispute arising out of or relating to these terms and conditions lies within courts located in the State of Texas and consents to venue in Dallas County, Texas. Notwithstanding the foregoing, any judgment may be enforced in any United States or foreign court, and TI may seek injunctive relief in any United States or foreign court.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2015, Texas Instruments Incorporated

#### IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as "components") are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have *not* been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.

### Products Applications

Audio www.ti.com/audio Automotive and Transportation www.ti.com/automotive **Amplifiers** amplifier.ti.com Communications and Telecom www.ti.com/communications **Data Converters** dataconverter.ti.com Computers and Peripherals www.ti.com/computers **DLP® Products** www.dlp.com Consumer Electronics www.ti.com/consumer-apps DSP dsp.ti.com **Energy and Lighting** www.ti.com/energy Clocks and Timers www.ti.com/clocks Industrial www.ti.com/industrial Interface interface.ti.com Medical www.ti.com/medical Logic Security www.ti.com/security logic.ti.com

Power Mgmt power.ti.com Space, Avionics and Defense www.ti.com/space-avionics-defense

Microcontrollers <u>microcontroller.ti.com</u> Video and Imaging <u>www.ti.com/video</u>

RFID www.ti-rfid.com

OMAP Applications Processors <u>www.ti.com/omap</u> TI E2E Community <u>e2e.ti.com</u>

Wireless Connectivity www.ti.com/wirelessconnectivity