SUPER-485 EVM Test Procedure

Test Plan # Super-485 Revision N/A Elliott Cole HVD/Interface/Data Transmission Applications Engineering

03 April, 2002

Revision History:

Version	Date	Author	Change
Rev -	4-3-02	E.Cole	Originated



IMPORTANT NOTICE

Texas Instruments (TI) reserves the right to make changes to its products or to discontinue any semiconductor product or service without notice, and advises its customers to obtain the latest version of relevant information to verify, before placing orders, that the information being relied upon is current.

All test equipment used for production testing of the Super-485 EVM shall be current calibrated equipment.

Copyright ©2002 Texas Instruments Incorporated **SUPER-485 EVM Test Procedure**

The SN65HVDV2x devices are TIA/EIA-485 (a.k.a. RS-485) transceivers installed on the circuit board. The SN65HVD22, the device installed on the initial release of the EVMs, is an individual transceiver (SN75176 Footprint, U2). The EVM as delivered incorporates termination resistors at the transceiver I/O, driver input, and receiver output. These aid in testing a single transceiver while not having to deal with a transmission line or additional I/Os. This procedure outlines the necessary tests and adjustments that must be performed by the manufacturer in order to confirm that the EVM is functioning properly.

NOTE:

This test procedure should be read in conjunction with the Super-485 EVM Users Guide, which contains the user, notes for the EVM, as well as schematics, bill-of-material (BOM) information and PCB layout drawings. This information is not repeated in this document


Recommended test equipment

In Table 1 is a list of the test equipment required to test the Super-485 EVM. Equipment other than the recommended model may be used if it satisfies the specification listed in Table 1.

Equipment required	Signals/functionality required	
Oscilloscope, Tektronix TDS784D	General purpose (1GHz bandwidth, 10	
Oscilloscope, Tektronix TD3784D	mV/div min., 1 channel)	
Active Voltage Probe, Tektronix P6245	1.5 GHz, 10X, <1pF, 1MÙ	
Differential Probe, Tektronix P6247	1GHz, <5pf, 1MÙ	
1 Power supply	7mV-30V dc, 0.1mV accuracy and resolution	
DMM	4 ¹ / ₂ digit resolution	
Function or Pattern Generator	15MHz, 3.3Vpp min, 50-Ohm output	
	2-Banana jack to banana jack cables,	
Jumper cables/ Patch cords	2-SMA to BNC 50-Ohm cable assemblies	
	1-Clip lead to BNC 50-Ohm cable assembly	

Table 1: Test equipment

The test set-up is shown below in Figure 1.

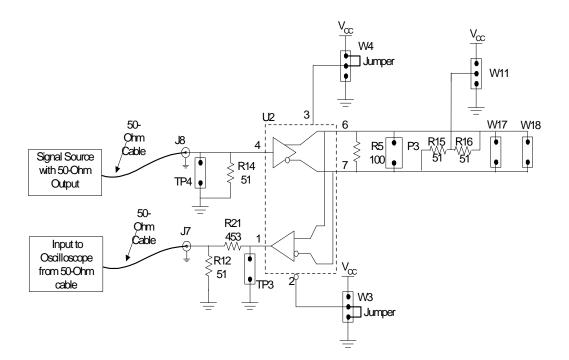

The operator shall perform the following steps:

1. Verify all installed jumper settings against Table 2 Jumper Positions.

Table 2 Transceiver	Test Jumper Positions
---------------------	-----------------------

Jumper	Position
W11	Not Installed
W3	LO (pin 2 to pin 3)
W4	HI (pin 2 to pin 1)

- 2. Set the DC power supply to read +5.0V at the output terminals. Connect the positive output of the power supply to J17 and the minus output to J18 of the EVM.
- 3. Switch the power supply on, verify the current does not exceed 100mA.



- 4. Set function generator to output a 500 KHz square wave, 3.3 volts p-p, 50% duty cycle, with a 1.5V positive offset.
- 5. Use a 50-Ohm coaxial cable, with BNC/SMA connectors, to connect the function generator output to EVM coaxial connector J8.
- 6. Use a 50-Ohm coaxial cable, with BNC/SMA connectors, to connect the oscilloscope input to J7. Make sure channel 2 of oscilloscope is set to 50 ohm input impedance.
- 7. Set the oscilloscope as follows:

Vertical Menu	Horizontal Menu	Trigger Menu
100mV/Div	Time Base – Main	Edge
Bandwidth - Full	Trigger Position – 10%	Source – Ch1
Offset – 0V	Horizontal Position – Frame 1	Coupling – DC
Coupling DC 50Ù	500nS/Div	Slope – Rising
		Level – 170mV

8. The trace on the oscilloscope should look as shown in Figure 2.

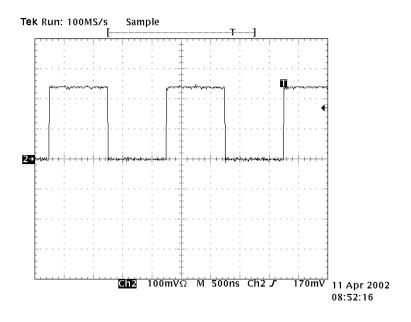


Figure 2 Transceiver Output Test Signal at J7

9. Using a differential scope probe (Tek P6247 or equivalent) connected to W17, and the vertical scale set to 1.00v/div, the trace on the oscilloscope should appear as shown in Figure 3.



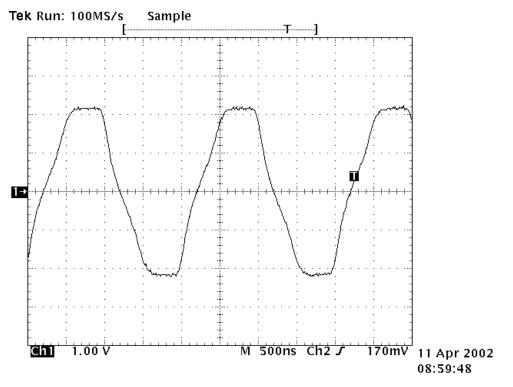


Figure 3 Transceiver Output Test Signal at W17

10. Turn the Power Supply Off

ALL Tests Completed

IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATA SHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to TI's Terms of Sale or other applicable terms available either on ti.com or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products.

TI objects to and rejects any additional or different terms you may have proposed.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2021, Texas Instruments Incorporated