




# *SmartRF Transceiver* *Evaluation Board* **“TrxEBoard”**

## *User’s Guide*

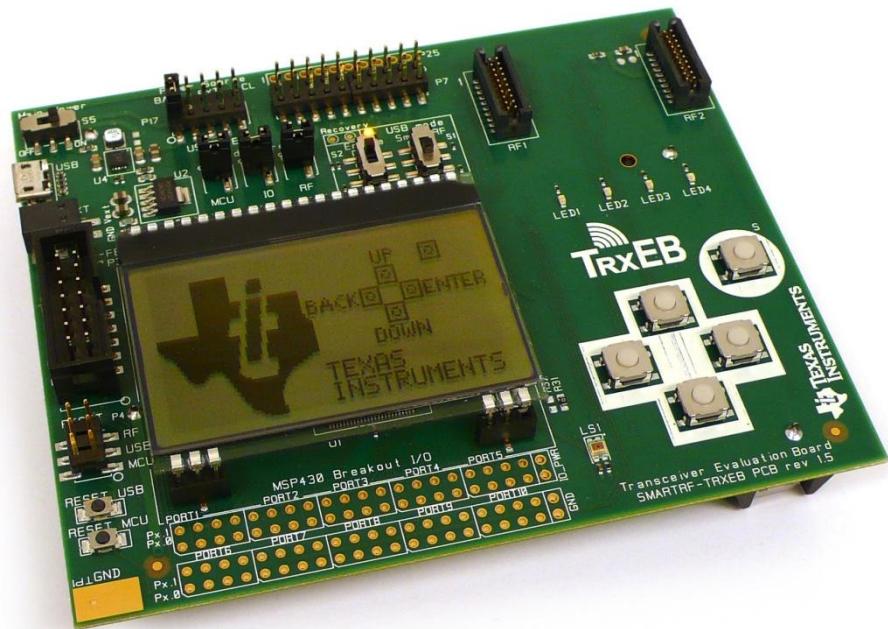

**SWRU294A**

## Table of Contents

<b>TABLE OF CONTENTS .....</b>	<b>2</b>
<b>LIST OF FIGURES .....</b>	<b>4</b>
<b>LIST OF TABLES .....</b>	<b>4</b>
<b>1 INTRODUCTION.....</b>	<b>5</b>
<b>2 ABOUT THIS MANUAL.....</b>	<b>5</b>
<b>3 ACRONYMS AND ABBREVIATIONS.....</b>	<b>6</b>
<b>4 GETTING STARTED .....</b>	<b>7</b>
4.1    SMARTRF STUDIO .....	7
4.2    INSTALLING SMARTRF STUDIO AND USB DRIVERS .....	7
4.2.1    Cebal USB driver .....	7
4.2.2    Virtual COM port USB driver .....	8
<b>5 USING THE SMARTRF TRANSCEIVER EVALUATION BOARD .....</b>	<b>9</b>
5.1    ABSOLUTE MAXIMUM RATINGS.....	10
<b>6 SMARTRF TRANSCEIVER EVALUATION BOARD OVERVIEW .....</b>	<b>11</b>
6.1    USB MCU .....	12
6.1.1    SmartRF Mode .....	13
6.1.2    UART Mode .....	13
6.1.3    Disabled Mode .....	14
6.2    MSP430 MCU .....	15
6.3    POWER SOURCES .....	15
6.3.1    Battery Power .....	16
6.3.2    USB Power .....	16
6.3.3    External Power Supply .....	17
6.3.4    MSP-FET Power.....	18
6.4    LCD .....	18
6.5    ACCELEROMETER .....	18
6.6    AMBIENT LIGHT SENSOR .....	18
6.7    SERIAL FLASH.....	18
6.8    BUTTONS.....	19
6.9    LEDs .....	19
6.9.1    General Purpose LEDs.....	19
6.9.2    USB LED .....	19
6.10    EM CONNECTORS.....	20
6.11    BREAKOUT HEADERS AND JUMPERS .....	23
6.11.1    EM I/O breakout headers .....	23
6.11.2    MSP430 I/O breakout .....	23
6.12    CURRENT MEASUREMENT JUMPERS .....	26
<b>7 CONNECTING AN EXTERNAL MCU TO SMARTRF TRXEB .....</b>	<b>28</b>
7.1    DISABLE MCUS ONBOARD SMARTRF TRXEB.....	28
7.2    SELECT POWER SOURCE .....	28
7.2.1    Power external MCU from SmartRF TrxEb.....	28
7.2.2    Power SmartRF TrxEb from external power source .....	28
7.3    CONNECT SIGNALS.....	29
7.3.1    Common signals .....	29
7.3.2    Transceiver GPIO signals.....	29
<b>8 SMARTRF TRXEB REV. 1.3.0 .....</b>	<b>30</b>
8.1    BOARD OVERVIEW .....	30
8.2    SOFTWARE CONSIDERATIONS.....	30
8.2.1    Virtual COM port over USB .....	30
8.2.2    Accelerometer.....	30
8.3    USB MCU PIN-OUT .....	31
8.4    MSP430 MCU PIN-OUT .....	31
<b>9 SMARTRF TRXEB REV. 1.5.0 .....</b>	<b>32</b>
9.1    BOARD OVERVIEW .....	32
9.2    CHANGES FROM REV. 1.3.0 .....	32

9.2.1	<i>RC filter on USB MCU reset line</i> .....	32
9.2.2	<i>Accelerometer</i> .....	32
9.2.3	<i>Silk print</i> .....	33
9.3	USB MCU PIN-OUT .....	33
9.4	MSP430 MCU PIN-OUT .....	33
<b>10</b>	<b>SMARTRF TRXEB REV. 1.7.0</b> .....	<b>34</b>
10.1	BOARD OVERVIEW .....	34
10.2	CHANGES FROM REV. 1.5.0 .....	34
10.2.1	<i>Switch added to enable combo EM support</i> .....	34
10.2.2	<i>Connector type for external power sources</i> .....	35
10.2.3	<i>Connector type for LCD</i> .....	35
10.2.4	<i>Ground pad between P17 and P7</i> .....	35
10.2.5	<i>Silk print</i> .....	36
10.3	USB MCU PIN-OUT .....	36
10.4	MSP430 MCU PIN-OUT .....	36
<b>11</b>	<b>UPDATING THE FIRMWARE</b> .....	<b>37</b>
11.1	FORCED BOOT RECOVERY MODE .....	38
11.2	BOARD RESURRECTION.....	39
<b>12</b>	<b>FREQUENTLY ASKED QUESTIONS</b> .....	<b>41</b>
<b>13</b>	<b>REFERENCES</b> .....	<b>43</b>
<b>14</b>	<b>DOCUMENT HISTORY</b> .....	<b>44</b>

## List of Figures

Figure 1 – Install virtual COM port USB driver using the Windows Hardware Wizard .....	8
Figure 2 – SmartRF TrxEB (rev. 1.5.0) with EM connected .....	9
Figure 3 – SmartRF TrxEB architecture.....	11
Figure 4 – Flow chart of the USB MCU bootloader and standard firmware .....	12
Figure 5 – UART lines connected between the USB MCU and the onboard MSP430 MCU.....	14
Figure 6 – Main power selection header (P17) and power switch (P5) .....	15
Figure 7 – P17 jumper settings to power TrxEB using batteries.....	16
Figure 8 – P17 jumper settings to power TrxEB via the USB cable .....	16
Figure 9 – P17 jumper settings to power TrxEB using external power supply .....	17
Figure 10 – Powering TrxEB rev. $\leq$ 1.5.0 via the external power supply connector (P201) .....	17
Figure 11 – TrxEB rev. 1.7.0 external power supply header (P1).....	17
Figure 12 – P17 jumper settings to power EB using a MSP-FET.....	18
Figure 13 – SmartRF TrxEB EM connectors RF1 and RF2.....	20
Figure 14 – EM interface.....	20
Figure 15 – SmartRF TrxEB I/O breakout overview .....	23
Figure 16 – I/O connector P25A-E PCB layout.....	23
Figure 17 – MSP430 I/O breakout on SmartRF TrxEB.....	23
Figure 18 – Current measurement jumpers .....	26
Figure 19 – Current measurement setup .....	26
Figure 20 – Switch and jumper settings to disable both SmartRF TrxEB MCUs.....	28
Figure 21 – Power external MCU board by connecting it to IO_PWR and GND.....	28
Figure 22 – P7 with strapping to connect external MCU to SmartRF TrxEB .....	29
Figure 23 – SmartRF TrxEB revision 1.3.0 overview.....	30
Figure 24 – Accelerometer axes on SmartRF TrxEB rev. 1.3.0 .....	30
Figure 25 – SmartRF TrxEB revision 1.5.0 overview.....	32
Figure 26 – Accelerometer axes on SmartRF TrxEB rev. $\geq$ 1.5.0 .....	32
Figure 27 – Correct silk print for MCLK and SMCLK test points.....	33
Figure 28 – SmartRF TrxEB revision 1.7.0 overview.....	34
Figure 29 – Signal overview for switch TS3A44159 added for SmartRF TrxEB rev. 1.7.0 .....	35
Figure 30 – Added ground pad on SmartRF TrxEB rev. 1.7.0.....	35
Figure 31 – Firmware upgrade steps in SmartRF Studio .....	37
Figure 32 – Enter forced boot recovery mode .....	38
Figure 33 – Proper connection for board resurrection .....	39

## List of Tables

Table 1 – Available features on the SmartRF TrxEB .....	5
Table 2 – Supply voltage: Recommended operating conditions and absolute max. ratings .....	10
Table 3 – Temperature: Recommended operating conditions and storage temperatures .....	10
Table 4 – SmartRF TrxEB operating modes .....	13
Table 5 – Data rates supported by the USB MCU in UART Mode .....	13
Table 6 – USB LED state descriptions.....	19
Table 7 – EM connector RF1 pin-out .....	21
Table 8 – EM connector RF2 pin-out .....	22
Table 9 – MSP430 Port 1-5 pin-out .....	24
Table 10 – MSP430 Port 6-10 pin-out .....	25
Table 11 – Component/Power segment overview .....	27
Table 12 – Strapping overview to connect common signals to an external MCU .....	29
Table 13 – Strapping overview to strap CC1120 GPIO to an external MCU .....	29
Table 14 – USB MCU pin-out on SmartRF TrxEB rev. 1.3.0 .....	31
Table 15 – MSP430 miscellaneous signal pin-out.....	31
Table 16 – S1 control over TS3A44159 switch for SmartRF TrxEB rev. 1.7.0 .....	35
Table 17 – USB MCU pin-out on SmartRF TrxEB rev. 1.7.0 .....	36

## 1 Introduction

The SmartRF Transceiver Evaluation Board (SmartRF TrxEB or simply EB) is the motherboard in a number of development kits for Low Power RF transceiver devices from Texas Instruments. The board has a wide range of features, listed in Table 1 below.

Component	Description
MSP430 MCU	The Ultra-low Power MSP430 serves as a platform for software development, testing and debugging.
Full-speed USB 2.0 interface	Easy plug and play access to full transceiver control using SmartRF™ Studio PC software. Integrated serial port over USB enables communication between onboard MSP430 and PC.
64x128 pixels serial LCD	Big LCD display for demo use and user interface development.
LEDs	Four general purpose LEDs for demo use or debugging.
Serial Flash	External flash for extra storage, over-the-air upgrades and more.
Buttons	Five push-buttons for demo use and user interfacing.
Accelerometer	Three-axis highly configurable digital accelerometer for application development and demo use.
Light Sensor	Ambient Light Sensor for application development and demo use.
Breakout pins	Easy access to GPIO pins for quick and easy debugging.

**Table 1 – Available features on the SmartRF TrxEB**

## 2 About this manual

This manual contains reference information about the SmartRF TrxEB.

Chapter 4 will give a quick introduction on how to get started with the SmartRF TrxEB. It describes how to install SmartRF Studio and to get the required USB drivers for the evaluation board. Chapter 5 briefly explains how the EB can be used throughout a project's development cycle. Chapter 6 gives an overview of the various features and functionality provided by the board.

Chapter 8, 9 and 10 provide additional details about the different versions of SmartRF TrxEB, revision 1.3.0, 1.5.0 and 1.7.0, respectively. Chapter 11 gives details on how to update the EB firmware, while a troubleshooting guide is found in chapter 12.

Appendices A, B and C contain the schematics for the different versions of SmartRF TrxEB.

The PC tools SmartRF Studio and SmartRF Flash Programmer have their own user manual.

See chapter 13 for references to relevant documents and web pages.

### 3 Acronyms and Abbreviations

ACM	Abstract Control Model
ALS	Ambient Light Sensor
CEBAL	CC Evaluation Board Abstraction Layer
CDC	Communication Device Class
CTS	Clear to Send
CW	Continuous Wave
DK	Development Kit
DUT	Device Under Test
EB	Evaluation Board
EM	Evaluation Module
IC	Integrated Circuit
I/O	Input/Output
KB	Kibi Byte (1024 byte)
LCD	Liquid Crystal Display
LED	Light Emitting Diode
LPRF	Low Power RF
MCU	Micro Controller
MISO	Master In, Slave Out (SPI signal)
MOSI	Master Out, Slave In (SPI signal)
NA	Not Applicable / Not Available
NC	Not Connected
PER	Packet Error Rate
RF	Radio Frequency
RX	Receive
RTS	Request to Send
Soc	System on Chip
SPI	Serial Peripheral Interface
TI	Texas Instruments
TrxEB	Transceiver Evaluation Board
TX	Transmit
TRX	Transmit / Receive
UART	Universal Asynchronous Receive Transmit
USB	Universal Serial Bus

## 4 Getting Started

Before connecting the SmartRF TrxEB to the PC via the USB connector, it is highly recommended to install the USB drivers needed for proper communication between the TrxEB and applicable PC tools. The drivers are bundled and installed together with SmartRF™ Studio.

### 4.1 SmartRF Studio

SmartRF Studio is a PC application developed for evaluation of the low power RF IC products from Texas Instruments. The application is designed for use with SmartRF Evaluation Boards, such as SmartRF TrxEB, and runs on Microsoft Windows operating systems.

SmartRF Studio gives the user full overview of and access to the devices' registers for configuration of the radio parameters and behavior. It also provides a control interface for performing operations like sending and receiving packets and setting up a continuous wave signal. In addition, it offers a flexible system for exporting radio register values to a user defined format for easy integration in software.

The latest version of SmartRF Studio can be downloaded from the Texas Instruments website [1].

### 4.2 Installing SmartRF Studio and USB drivers

Before your PC can communicate with the SmartRF TrxEB over USB, you will need to install the USB drivers for the EB. The latest SmartRF Studio installer [1] includes the required USB drivers both for Windows x86 and Windows x64 platforms.

After you have downloaded SmartRF Studio from the web, extract the zip-file, run the installer and follow the instructions. Select the complete installation to include the SmartRF Studio program, the SmartRF Studio documentation and the USB drivers. There are two drivers needed for TrxEB: Cebal and a virtual COM port driver.

#### 4.2.1 Cebal USB driver

**NOTE:** The SmartRF TrxEB must be in "SmartRF Mode" in order to be recognized by the PC as a Cebal device. The EB is in SmartRF Mode when hardware switches S1 and S2 are in positions "SmartRF" and "Enable", respectively. See section 6.1 for more information about the SmartRF TrxEB operating modes.

SmartRF PC software such as SmartRF Studio uses a proprietary USB driver, Cebal, to communicate with evaluation boards. Connect your SmartRF TrxEB to the computer with a USB cable, set the mode switches to "SmartRF" and "Enable", and turn it on. If you did a complete install of SmartRF Studio, Windows will recognize the device automatically and the SmartRF TrxEB is ready for use!


For more information regarding the USB drivers, please consult the SmartRF Studio documentation, the USB driver installation guide [2] or chapter 11.

#### 4.2.2 Virtual COM port USB driver

**NOTE:** The SmartRF TrxEB must be in “UART Mode” in order to be recognized as a virtual COM port. The EB is in UART Mode when hardware switches S1 and S2 are in positions “UART” and “Enable”, respectively. See section 6.1 for more information about the SmartRF TrxEB operating modes.

If you are using SmartRF TrxEB in UART Mode (see section 6.1.2), a standard driver for a virtual COM port over USB is used (USB CDC-ACM). If you did a complete install of SmartRF Studio, Windows will recognize the device automatically. If prompted with the Windows Hardware Wizard, select “Install the software automatically (recommended)” and click next to finish the installation. The SmartRF TrxEB is now ready for use!

If the SmartRF TrxEB CDC-ACM driver is not found by the Hardware Wizard, make sure you have installed the latest version of SmartRF Studio [1]. In the Windows Hardware Wizard, select “Install from a list or specific location (Advanced)”. You will see below window.

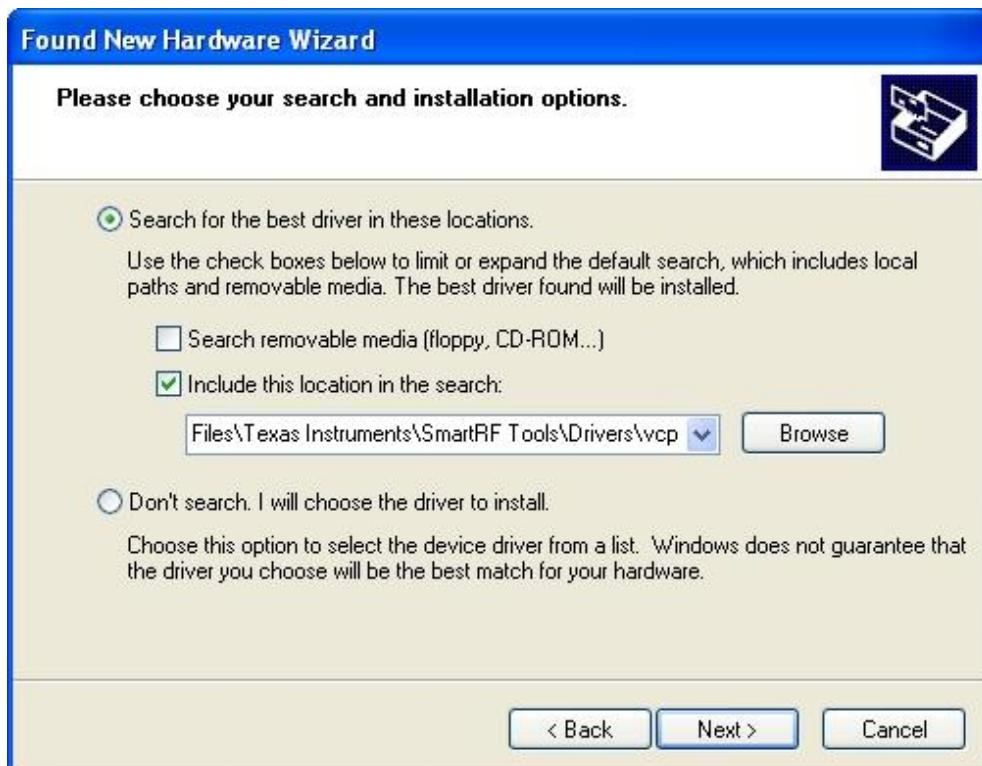

**Figure 1 – Install virtual COM port USB driver using the Windows Hardware Wizard**

The driver for the Virtual COM Port (VCP) is typically located in the directory *C:\Program Files\Texas Instruments\SmartRF Tools\Drivers\vcp*, where *C:\Program Files\Texas Instruments\SmartRF Tools\* is the root installation directory for SmartRF Tools such as SmartRF Studio. The path may be different if you have chosen a different installation directory for SmartRF Studio.

If the above fails, select “Don’t Search. I will choose the driver to install.” A new window will open, asking for a location of where the drivers can be found. Locate the *trxeb\_cdc\_uart.inf* file and select that driver for installation.

## 5 Using the SmartRF Transceiver Evaluation Board


The SmartRF TrxEBoard is a flexible test and development platform that works together with RF Evaluation Modules from Texas Instruments.

An Evaluation Module is a small RF module with RF chip, balun, matching filter, antenna, and I/O connectors. The modules can be plugged into the SmartRF TrxEBoard which lets the PC take direct control of the RF device on the EM over the USB interface.

Currently, SmartRF TrxEBoard supports:

- CC1120EM
- CC1121EM
- CC1175EM
- CC1101EM
- CC1100EM
- CC1100EEM
- CC110LEM
- CC113LEM
- CC115LEM
- CC2520EM

SmartRF TrxEBoard is included in e.g. the CC1120 development kit. Some of the above EMs comes in variants combined with a RF front-end such as CC1190, CC2590, or CC2591. Such variants are called combo EMs and are also supported by the SmartRF TrxEBoard<sup>1</sup>.

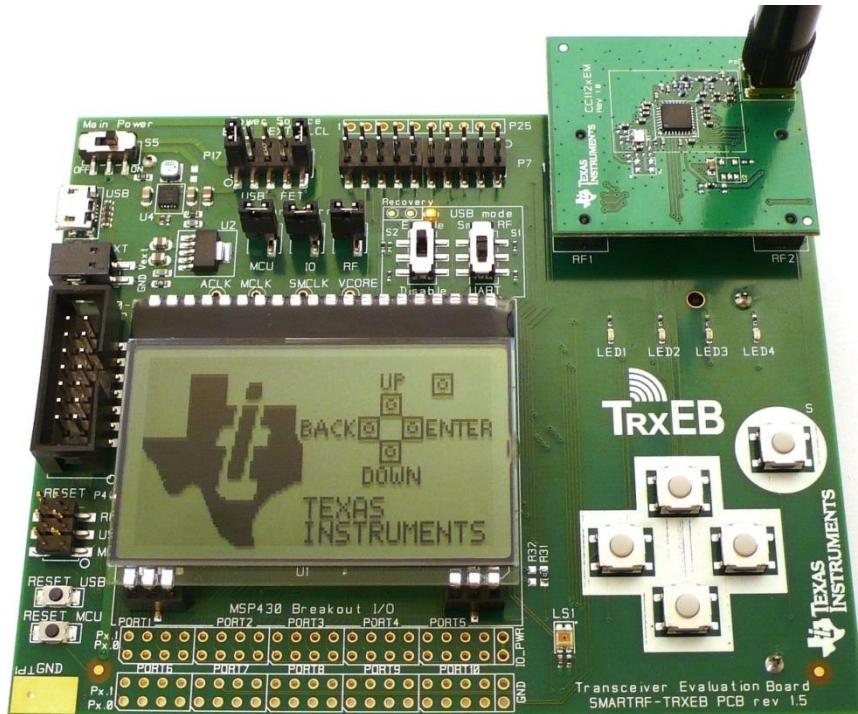

**Figure 2 – SmartRF TrxEBoard (rev. 1.5.0) with EM connected**

<sup>1</sup> Some limitations exist for boards prior to version 1.7.0.

The PC software that controls the SmartRF TrxEB + EM is SmartRF Studio. Studio can be used to perform several RF tests and measurements, e.g. to set up a CW signal and send and receive packets.

The EB+EM can be of great help during the whole development cycle for a new RF product.

- Perform comparative studies. Compare results obtained with EB+EM with results from your own system.
- Perform basic functional tests of your own hardware by connecting the radio on your board to SmartRF TrxEB. SmartRF Studio can be used to exercise the radio.
- Verify your own software with known good RF hardware, by simply connecting your own microcontroller to an EM via the EB. Test the send function by transmitting packets from your SW and receive with another board using SmartRF Studio. Then transmit using SmartRF Studio and receive with your own software.
- Develop code for the MSP430 MCU.
- Use the SmartRF TrxEB as a debugger interface to the low power RF 8051-based SoCs with IAR Embedded Workbench.

## 5.1 Absolute maximum ratings

The minimum and maximum operating supply voltages and absolute maximum ratings for the active components onboard the SmartRF TrxEB are summarized in Table 2. Table 3 lists the recommended operating temperature and storage temperature ratings. Please refer to the respective component's datasheet for further details.

Component	Operating voltage		Absolute max. rating	
	Min. [V]	Max. [V]	Min. [V]	Max. [V]
USB MCU [3]	+3.0	+3.6	-0.3	+3.9
MSP430 MCU [6]	+1.8	+3.6	-0.3	+4.1
LCD [7]	+3.0	+3.3	-0.3	+3.6
Accelerometer [8]	+1.7	+3.6	-0.3	+3.6
Ambient light sensor [9]	+2.3	+5.5	NA	+6
Serial Flash [10]	+2.7	+3.6	-0.4	+4.0

**Table 2 – Supply voltage: Recommended operating conditions and absolute max. ratings**


Component	Operating temperature		Storage temperature	
	Min. [°C]	Max. [°C]	Min. [°C]	Max. [°C]
USB MCU [3]	0	+85	-50	+150
MSP430 MCU [6]	-40	+85	-55	+105
LCD [7]	-20	+70	-30	+80
Accelerometer [8]	-40	+85	-40	+125
Ambient light sensor [9]	-40	+85	-40	+85
Serial Flash [10]	-40	+85	-65	+150

**Table 3 – Temperature: Recommended operating conditions and storage temperatures**

## 6 SmartRF Transceiver Evaluation Board Overview

SmartRF TrxEB acts as the motherboard in several development kits for low power RF ICs from Texas Instruments. The board has several user interfaces and connections to external interfaces, allowing fast prototyping and testing of both software and hardware.

This chapter will give an overview of the general architecture of the board and describe the available I/O. The following sub-sections will explain the I/O in more detail. Pin connections between the evaluation board I/O and EM can be found in section 6.10.

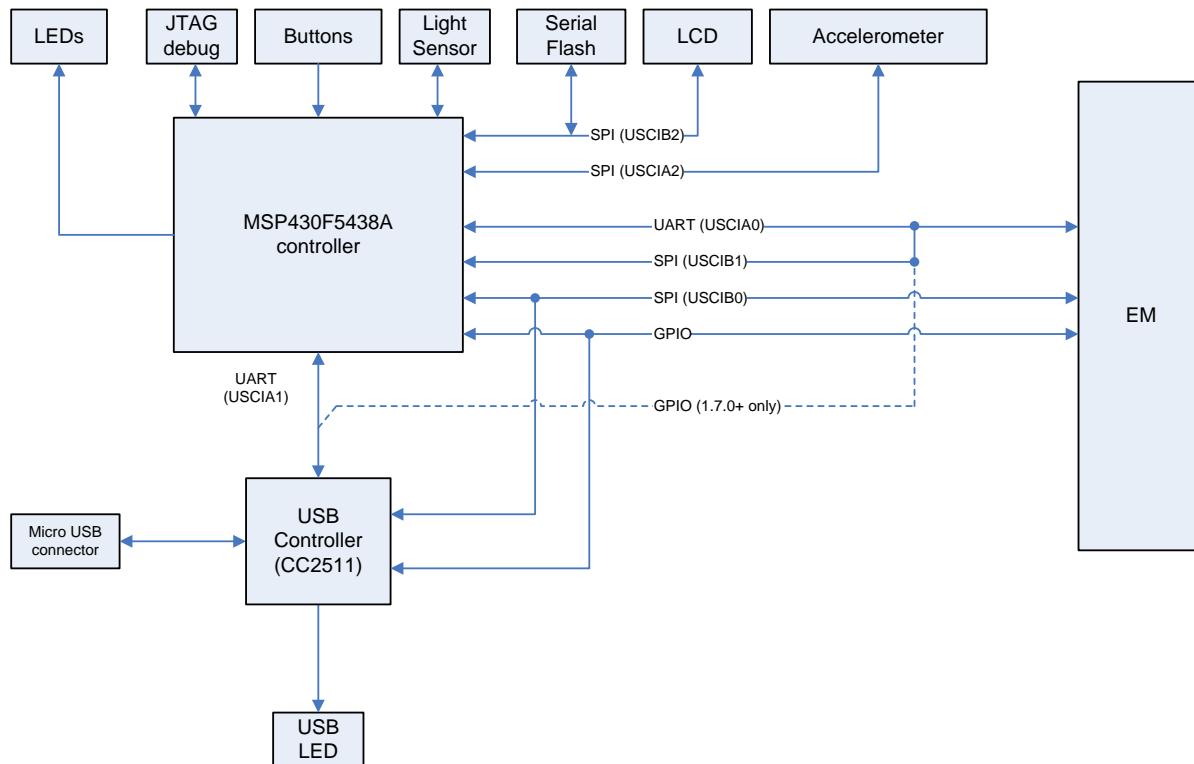


**Figure 3 – SmartRF TrxEB architecture**

**NOTE:** Signal names used in this user's guide and in the SmartRF TrxEB schematics, are named "as seen" from the onboard MSP430 MCU. E.g. signal name "P1\_3" refers to the signal connected to MSP430 port 1, pin 3.

## 6.1 USB MCU

The USB MCU is the CC2511F32 from Texas Instruments. Please see the CC2511 product page [3] on the TI web for detailed information about this controller. The recommended operating condition for the CC2511 is a supply voltage between 3.0 V and 3.6 V. The min (max) operating temperature is 0 (+85) °C.

The USB controller is programmed with a bootloader and the standard SmartRF TrxEB firmware when it is shipped from the factory. A flow chart over the USB MCU bootloader and standard firmware is shown in Figure 4.



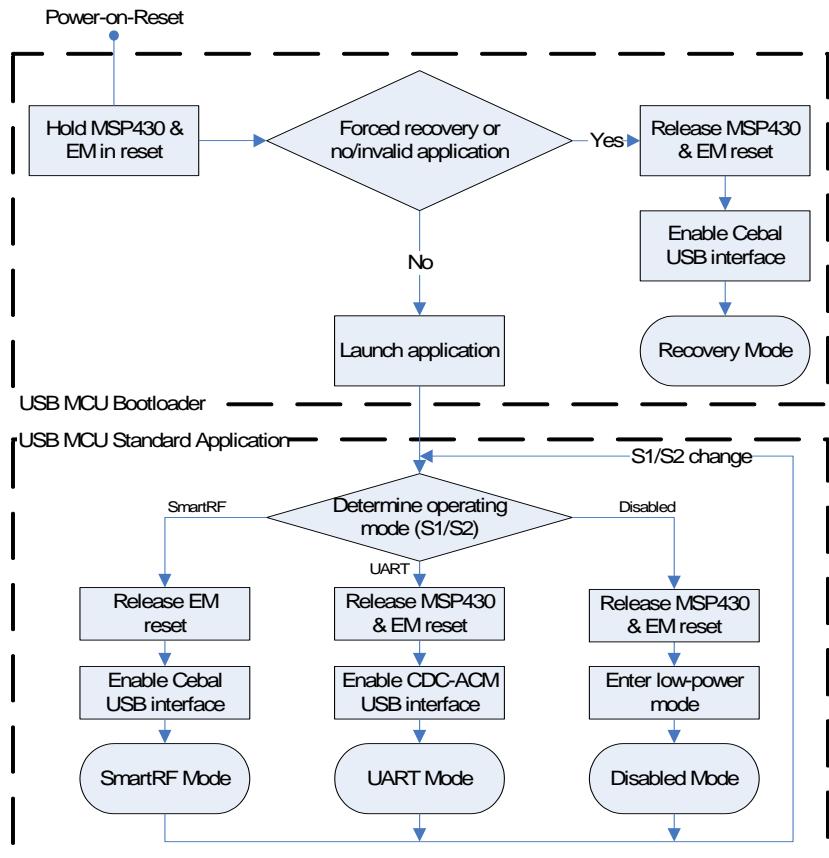


**Figure 4 – Flow chart of the USB MCU bootloader and standard firmware**

When the bootloader starts running, it will check for a valid application in the CC2511 flash memory. If detection is successful, the application is started and the board can be operated normally. If no application is detected (e.g. blank flash or firmware upgrade failed) the USB LED (D6) will start blinking rapidly – indicating failure. See section 6.9.2 for more details on USB LED states.

The USB MCU bootloader will allow programming/upgrading of the USB MCU firmware over the USB interface. No additional hardware or programmers are needed. Both SmartRF Studio and SmartRF Flash Programmer [4] can be used for this purpose. Please refer to chapter 11 for details.

The standard firmware application has three operating modes, controlled by hardware switches S1 and S2. The three modes are named “SmartRF Mode”, “UART Mode” and “Disabled Mode”. Table 4 shows which S1 and S2 positions that give the different operation modes. The following sections will discuss the different operating modes in more detail.

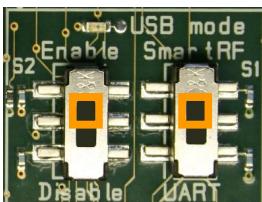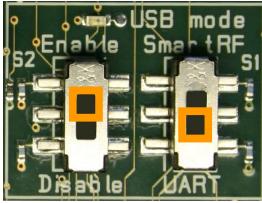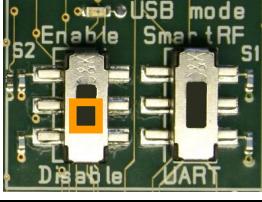	<b>S2</b>	<b>S1</b>	<b>Operating Mode</b>	<b>Key features</b>
	Enable	SmartRF	SmartRF Mode	<ul style="list-style-type: none"> <li>- Cebal USB interface</li> <li>- MSP430 disabled</li> <li>- Control RF-IC using SmartRF PC software</li> </ul>
	Enable	UART	UART Mode	<ul style="list-style-type: none"> <li>- CDC-ACM USB interface</li> <li>- MSP430 enabled</li> <li>- UART bridge between PC and MSP430</li> <li>- Control RF-IC using MSP430 or external MCU</li> </ul>
	Disable	x	Disabled Mode	<ul style="list-style-type: none"> <li>- USB interface disabled</li> <li>- MSP430 enabled</li> <li>- Control RF-IC using MSP430 or external MCU</li> </ul>

**Table 4 – SmartRF TrxEB operating modes**

### 6.1.1 SmartRF Mode

SmartRF Mode is the standard operating mode and is obtained by setting hardware switches S1 and S2 on the EB to “SmartRF” and “Enable”, respectively (see Table 4).

In SmartRF mode the EB is recognized over USB as a Cebal device, enabling PC software like SmartRF Studio to configure and control the RF-IC connected to the EB’s EM connectors.

The onboard MSP430 microcontroller is in this operating mode held in reset by the USB MCU.

### 6.1.2 UART Mode


UART Mode is obtained by setting hardware switches S1 and S2 on the EB to “UART” and “Enable”, respectively (see Table 4).

In UART mode, the EB is recognized over USB as a virtual serial port (CDC-ACM). The USB MCU works as a UART bridge between the onboard MSP430 and the PC. The hardware connection between the USB MCU and the MSP430 is shown in Figure 5. The supported data rates are listed in Table 5.

It is not possible to use SmartRF Studio or other PC software to communicate with a connected RF-IC when operating in UART Mode. To communicate with a connected RF-IC, the onboard MSP430 or an external MCU must be programmed with custom firmware. Please refer to the MSP430 User’s Guide [5] for more information about the MSP430 MCU.

<b>Data rate [baud]</b>
9 600
38 400
56 700
115 200

**Table 5 – Data rates supported by the USB MCU in UART Mode**

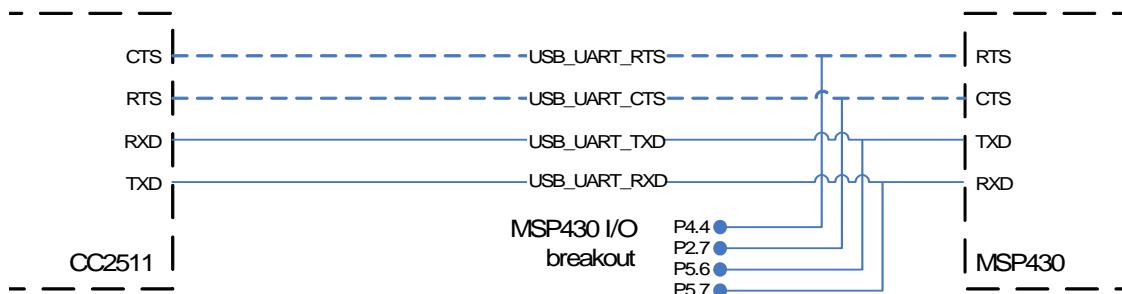

**Figure 5 – UART lines connected between the USB MCU and the onboard MSP430 MCU. CTS and RTS lines are dotted to indicate that the USB MCU standard firmware only implements a two-line UART interface to the MSP430 MCU.**

**NOTE:** Figure 5 shows the four hardware connected UART lines between the USB MCU and the MSP430 MCU. The MSP430 does not support hardware flow control (RTS and CTS lines). Such support must be manually implemented in the MSP430 software. To ease MSP430 application development, the standard USB MCU firmware uses a two-line UART interface to the MSP430, i.e. hardware flow control is not implemented.

### 6.1.3 Disabled Mode

Disabled Mode is obtained by setting hardware switch S2 on the EB to “Disable” position (see Table 4). The position of S1 is disregarded by the USB MCU when S2 is in the “Disable” position.

In Disabled Mode, the USB MCU is in power-down mode and no USB communication is possible between a PC and the EB. It is however still possible to power the EB via the USB cable, see section 6.3.2.

## 6.2 MSP430 MCU

The SmartRF TrxEB is equipped with an MSP430F5438A micro controller from Texas Instruments. Please see the MSP430F5438A product page [6] on the TI website for detailed information about this controller.

All of the EB's user interface peripherals are available to the MSP430 (Figure 3 on page 11). Excluding the EM, the list of available peripherals consists of

- LCD
- 5x Buttons
- 4x LEDs
- Ambient Light Sensor
- Accelerometer
- SPI Flash.

The recommended operating condition for the MSP430 is a supply voltage ( $V_{CC}$ ) between 1.8 V and 3.6 V. The min (max) operating temperature is -40 (+85) °C.

**NOTE:** The onboard MSP430 MCU is held in reset by the USB MCU in SmartRF Mode. In order to use the MSP430, make sure the USB MCU is set to Disabled Mode or UART Mode. See section 6.1 for details.

## 6.3 Power Sources

There are four possible solutions for applying power to the SmartRF TrxEB; batteries, USB bus, external power supply and MSP-FET. The power source can be selected using the power source selection jumpers on header P17 (Figure 6). The main power supply switch (S5) turns off all power sources.




Figure 6 – Main power selection header (P17) and power switch (P5)

**WARNING!** Do not use multiple power sources to power the SmartRF TrxEB at the same time. Doing so may lead to excessive currents, causing onboard components to break.

**WARNING!** When using the SmartRF TrxEB with a MSP430 debugger (e.g. MSP-FET430UIF), while powering the EB with a different power source (batteries, USB or external power supply), a jumper should short circuit pin 9-10 of header P17 ("LCL"). This will prevent the MSP-FET from supplying power to the EB.

### 6.3.1 Battery Power

The SmartRF TrxEB includes a battery holder for two 1.5 V AA batteries on the reverse side of the PCB. Normal AA batteries can be used and the onboard regulator supplies 3.3 V to the board. The power source selection jumpers should short circuit pin 1-2 ("BATT") and 9-10 ("LCL") of header P17, see Figure 7.

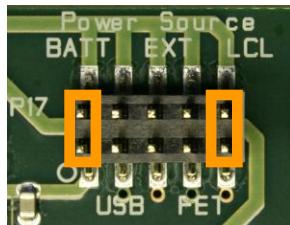


**Figure 7 – P17 jumper settings to power TrxEB using batteries**

The maximum current consumption is limited by the regulator to 800 mA.

### 6.3.2 USB Power

When the SmartRF TrxEB is connected to a PC via a USB cable, it can draw power from the USB bus. The onboard voltage regulator supplies approximately 3.3 V to the board. The power source selection jumpers should short circuit pin 3-4 ("USB") and 9-10 ("LCL") of header P17 (Figure 8).

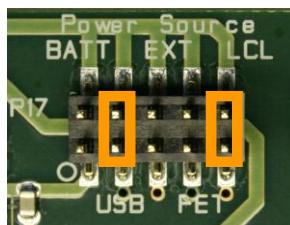

**Figure 8 – P17 jumper settings to power TrxEB via the USB cable**

The maximum current consumption is limited by the regulator to 1500 mA<sup>2</sup>.

<sup>2</sup> Note that most USB power sources are limited to 500 mA.

### 6.3.3 External Power Supply

The SmartRF TrxEB has a connector for powering the board using an external power supply. The power source selection jumpers should short circuit pin 5-6 ("EXT") and 9-10 ("LCL") of header P16 as shown in Figure 9.

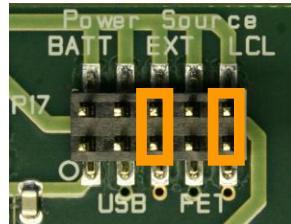


Figure 9 – P17 jumper settings to power TrxEB using external power supply

**WARNING!** When using an external power source, all onboard voltage regulators are bypassed. There is a risk of damaging the onboard components if the applied voltage on the external power connector/header is lower than -0.3 V or higher than 3.6 V (combined absolute maximum ratings for onboard components. See section 5.1 for further information.

#### 6.3.3.1 SmartRF TrxEB revision $\leq$ 1.5.0

The external supply's ground should be connected to pin 2 of P201. Apply a voltage in the range from 3.0 V to 3.3 V to pin 1 (see Figure 10). Pin 1 and pin 2 of P201 are marked "Vext" and "GND", respectively, on SmartRF TrxEB revision 1.5.0.

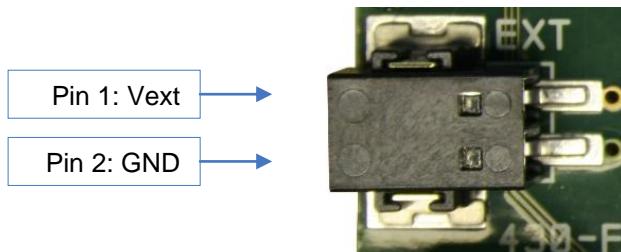


Figure 10 – Powering TrxEB rev.  $\leq$ 1.5.0 via the external power supply connector (P201)

#### 6.3.3.2 SmartRF TrxEB revision 1.7.0

The external supply's ground should be connected to the TrxEB ground, e.g. to the ground pad in the bottom left corner of the EB. Connect the positive supply connector to either of the two pins on the external power header P1 (Figure 11). The applied voltage must be in the range from 3.0 V to 3.3 V.



Figure 11 – TrxEB rev. 1.7.0 external power supply header (P1)

### 6.3.4 MSP-FET Power

The SmartRF TrxEB can be powered via an MSP430 debugger such as MSP-FET430UIF. The power source selection jumpers should in that case short circuit pin 7-8 of header P17 (Figure 12). Note that the MSP-FET will not power the EB if pin 9-10 of header P17 ("LCL") is short circuited.

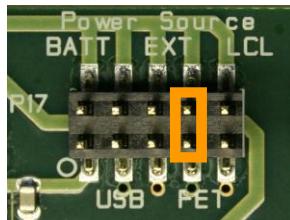


Figure 12 – P17 jumper settings to power EB using a MSP-FET

## 6.4 LCD

The SmartRF TrxEB comes with a 128x64 pixels display from Electronic Assembly (DOGM128E-6) [7]. The LCD display is available to the onboard MSP430 via an SPI interface, enabling software development of user interfaces and demo use. The LCD display shares SPI interface with the serial flash device (section 6.7).

The recommended operating condition for the LCD display is a supply voltage between 3.0 V and 3.3 V. The min (max) operating temperature is -20 (+70) °C.

## 6.5 Accelerometer

The SmartRF TrxEB is equipped with a digital accelerometer from VTI Technologies (CMA3000-D01) [8]. The accelerometer is available to the onboard MSP430 MCU via an SPI interface and has a dedicated interrupt line to the MCU. The onboard accelerometer is suitable for application development, prototyping and demo use. See sections 8.2.2 and 9.2.2 for details on accelerometer axis orientation for EB revision 1.3.0 and ≥1.5.0, respectively.

The recommended operating condition for the accelerometer is a supply voltage between 1.7 V and 3.6 V. The min (max) operating temperature is -40 (+85) °C.

## 6.6 Ambient Light Sensor

The SmartRF TrxEB has an analog SFH 5711 ambient light sensor from Osram [9] that is available to the onboard MSP430, enabling quick application development for demo use and prototyping. The light sensor is placed outside the bottom right corner of the LCD display.

The recommended operating condition for the ambient light sensor is a supply voltage between 2.3 V and 5.5 V. The min (max) operating temperature is -40 (+85) °C.

## 6.7 Serial Flash

SmartRF TrxEB has a M25PE20 flash device – a paged 256 KB serial flash memory from Micron [10]. The device gives the MSP430 access to extra flash, enabling over-the-air upgrades and more. The serial device shares SPI bus with the LCD display (section 6.4).

The recommended operating condition for the serial flash device is a supply voltage between 2.7 V and 3.6 V. The min (max) operating temperature is -40 (+85) °C.

## 6.8 Buttons

There are 7 buttons on the SmartRF TrxEB. Status of BTN\_LEFT, BTN\_RIGHT, BTN\_UP, BTN\_DOWN and BTN\_SELECT can be read by the onboard MSP430. These buttons are intended for user interfacing and development of demo applications.

The RESET MCU button resets the MSP430 MCU by pulling its reset line low (MCU\_RESET\_N). The RESET USB button similarly resets the USB controller (pulling USB\_RESET\_N low). Note that the standard firmware on the USB controller will reset the EM and MSP430 during startup, so pushing the RESET USB button also resets the controller on the EM board and the MSP430.

## 6.9 LEDs

### 6.9.1 General Purpose LEDs

The four LEDs D3, D4, D5, D7 can be controlled from the onboard MSP430 and are suitable for demo use and debugging. The LEDs are active low.

### 6.9.2 USB LED


LED D6 (USB LED) is controlled by the USB controller and is used to indicate the status of the EB. The USB LED has several states, listed in Table 6.

USB LED state	Description
OFF	Power is turned off, the USB controller is in Disabled Mode or the software on the USB controller is corrupt.
ON	<b>SmartRF Mode:</b> The standard firmware is running and a RF-IC has been detected. <b>UART Mode:</b> The standard firmware is running. The USB LED is quickly toggled OFF/ON when UART traffic. This is typically seen as slight variations in emitted intensity.
BLINKING (100 ms ON – 900 ms OFF)	<b>SmartRF Mode:</b> No RF-IC is detected.
BLINKING (1 Hz)	The USB MCU has entered the boot recovery mode. See chapter 11 for further details.
BLINKING (10 Hz)	The bootloader on the USB MCU could not find a valid application to boot. Basic USB services are available and both SmartRF Studio and SmartRF Flash Programmer can be used to program an application to the USB controller's flash. See chapter 11 for further details.

Table 6 – USB LED state descriptions

## 6.10 EM Connectors

The EM connectors (TFM-110-02-S-D-A from Samtec), shown in Figure 13, are used for connecting an EM board to the SmartRF TrxEB. The connectors RF1 and RF2 are the main interface and are designed to avoid incorrect mounting of the EM board.

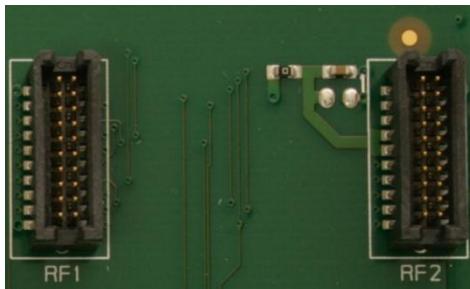


**Figure 13 – SmartRF TrxEB EM connectors RF1 and RF2**

The signals from the EM are primarily connected to the MSP430 on the TrxEB. Some of the signals are also connected to the USB controller in order to allow control of the RF device from the PC with SmartRF Studio. The figure below (Figure 14) illustrates how the signals are connected to the MSP430 and which serial peripheral modules on the MSP430 that can potentially be used for communication with the EM.

The main serial interface to the EM (transceiver) is over SPI using USCIB0. To support some of the network processors and other EMs with alternative pin-out, some of the signals from the EM are connected to **both** USCIB1 (for SPI) and USCIA0 (for UART). If the serial peripheral modules are not needed, the same pins on the MSP430 can be used as general purpose IOs.

Also note that most of the general purpose control signals from the EM (i.e. the signals not used for serial communication) are connected to interrupt capable pins on the MSP430 (port 1 and 2).

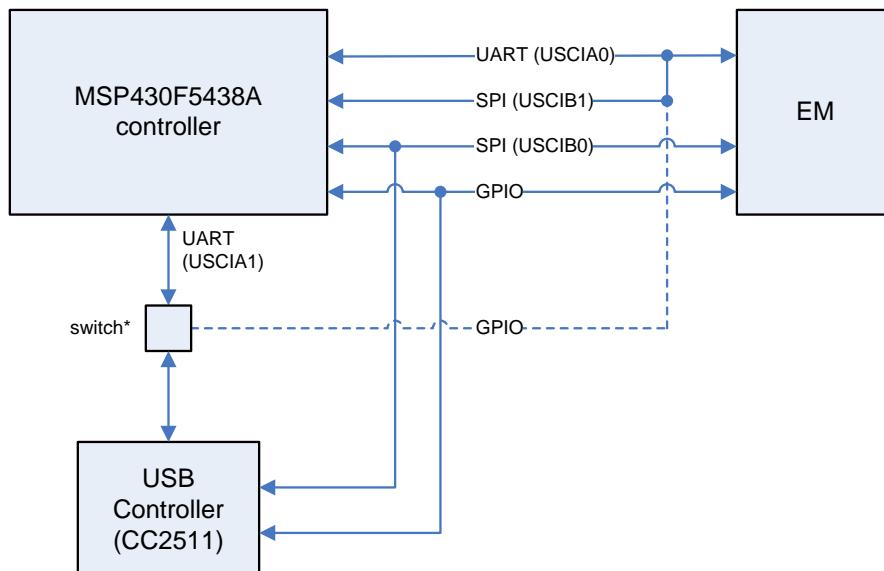

**Figure 14 – EM interface**

(\*) Note that the switch is only present on rev 1.7.0 and newer of the TrxEB (see 10.2.1)

The pin-out of the EM connectors is given in Table 7 and Table 8 below. The signals from the EM connectors are all accessible from either the EM I/O breakout headers (see section 6.11.1) and/or the MSP430 I/O breakout (section 6.11.2).

EM pin	Signal name	Description	Breakout header	MSP430
RF1.1	GND	Ground		
RF1.2	NC	Not connected		
RF1.3	P1_4 / RF_SPI1_CS_N	GPIO signal to EM board / Alt. SPI	P7.5	P1.4
RF1.4	P1_1	GPIO signal to EM board	P7.2	P1.1
RF1.5	P8_2	GPIO signal to EM board	P7.13	P8.2
RF1.6	P1_5	GPIO signal to EM board	P7.6	P1.5
RF1.7	RF_UART_TXD / RF_SPI1_MISO	2-line UART to EM board / Alt. SPI	P7.9	P3.4 / P5.4
RF1.8	(breakout)	GPIO signal	P25A.1	
RF1.9	RF_UART_RXD / RF_SPI1_MOSI	2-line UART to EM board / Alt. SPI	P7.7	P3.5 / P3.7
RF1.10	P1_7	GPIO signal to EM board	P7.8	P1.7
RF1.11	P8_3	GPIO signal to EM board	P7.15	P8.3
RF1.12	P1_3	GPIO signal to EM board	P7.4	P1.3
RF1.13	(breakout)	GPIO signal	P25A.2	
RF1.14	RF_SPI0_CS_N	EM SPI Chip Select	P7.14	P3.0
RF1.15	P8_4	GPIO signal to EM board	P7.17	P8.4
RF1.16	RF_SPI0_SCLK	EM SPI Clock	P7.12	P3.3
RF1.17	P8_5	GPIO signal to EM board	P7.19	P8.5
RF1.18	RF_SPI0_MOSI	EM SPI MOSI	P7.16	P3.1
RF1.19	GND	Ground	P7.20	
RF1.20	RF_SPI0_MISO	EM_SPI_MISO	P7.18	P3.2

**Table 7 – EM connector RF1 pin-out**

EM pin	Signal name	Description	Breakout header	MSP430
RF2.1	NC	Not connected		
RF2.2	GND	Ground		
RF2.3	NC	Not connected		
RF2.4	NC	Not connected		
RF2.5	NC	Not connected		
RF2.6	(breakout)	GPIO signal	P25C.1	
RF2.7	RF_PWR	EM power		
RF2.8	(breakout)	GPIO signal	P25C.2	
RF2.9	RF_PWR	EM power		
RF2.10	(breakout)	GPIO signal	P25D.1	
RF2.11	(breakout)	GPIO signal	P25B.1	
RF2.12	(breakout)	GPIO signal	P25D.2	
RF2.13	(breakout)	GPIO signal	P25B.2	
RF2.14	(breakout)	GPIO signal	P25E.1	
RF2.15	RF_RESET_N	Signal used to reset EM board	P7.10	P8.0
RF2.16	NC	Not connected		
RF2.17	P8_1	GPIO signal to EM board	P7.11	P8.1
RF2.18	P1_2 / RF_SPI1_SCLK	GPIO signal to EM board / Alt. SPI	P7.3	P1.2 / P5.5
RF2.19	P1_0	GPIO signal to EM board	P7.1	P1.0
RF2.20	GND (NC on rev < 1.7.0)	Ground		

**Table 8 – EM connector RF2 pin-out**

## 6.11 Breakout Headers and Jumpers

Header P7 and P25A-E give access to main EM connector pins, while P11, P14, P16 and P18-P24 give access to the MSP430 I/O (section 6.11.2). Some signals can be accessed from both the EM I/O breakout headers and the MSP430 I/O breakout as indicated by Figure 15.

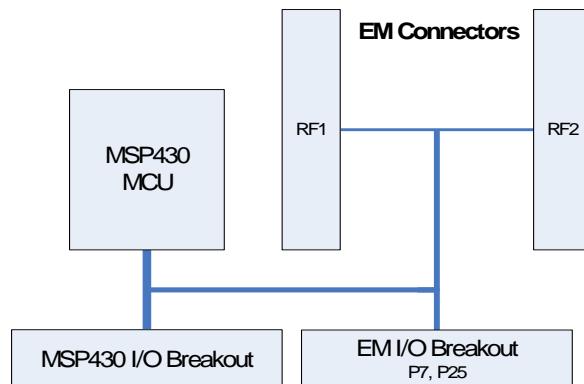


Figure 15 – SmartRF TrxEB I/O breakout overview

### 6.11.1 EM I/O breakout headers

The EM I/O breakout headers on SmartRF TrxEB consist of header P7 and I/O connector P25. P25 is made out of five 2-pin connectors (P25A-E). The layout of these connectors is shown in Figure 16. Table 7 and Table 8 in section 6.10 shows how the EM I/O connector headers are mapped to EM connector RF1 and RF2, respectively.

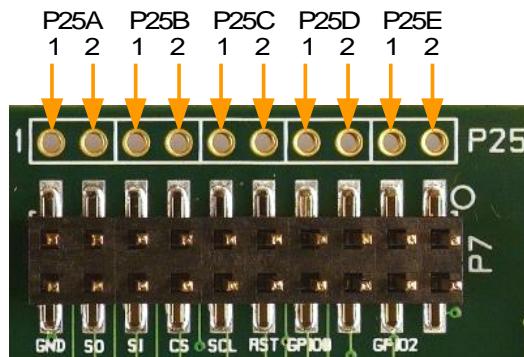


Figure 16 – I/O connector P25A-E PCB layout

### 6.11.2 MSP430 I/O breakout

MSP430 ports 1-10 are on SmartRF TrxEB available through the MSP430 I/O breakout shown in Figure 17. Table 9 lists I/O breakout for ports 1-5, while Table 10 covers ports 6-10. Both tables indicate if the given MSP430 pin is connected to an EM connector pin. For additional info on the MSP430 pin-out on SmartRF TrxEB, please refer to section 8.4.

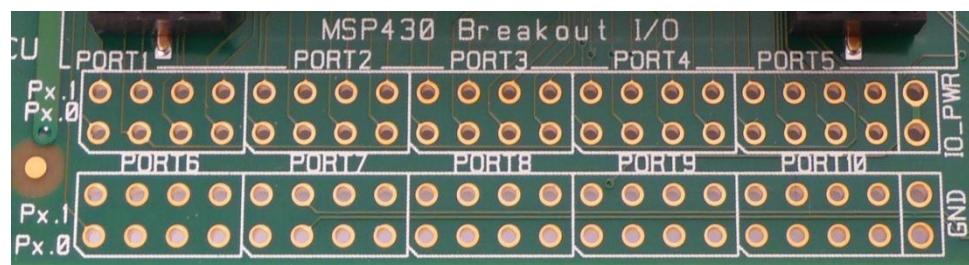


Figure 17 – MSP430 I/O breakout on SmartRF TrxEB

MSP430	Signal Name	Description	EM pin
P1.0	P1_0	Unused GPIO	RF2.19
P1.1	P1_1	GPIO signal to EM board	RF1.4
P1.2	P1_2 / RF_SPI1_SCLK	Alternative EM SPI Clock	RF2.18
P1.3	P1_3	GPIO signal to EM board	RF1.12
P1.4	P1_4 / RF_SPI1_CS_N	Alternative EM SPI Chip Select	RF1.3
P1.5	P1_5	GPIO signal to EM board	RF1.6
P1.6	P1_6	Unused GPIO	
P1.7	P1_7	GPIO signal to EM board	RF1.10
P2.0	ACC_INT	Accelerometer interrupt line	
P2.1	BTN_LEFT	Left button input line	
P2.2	BTN_RIGHT	Right button input line	
P2.3	BTN_SELECT	Select button input line	
P2.4	BTN_UP	Up button input line	
P2.5	BTN_DOWN	Down button input line	
P2.6	P2_6	Unused GPIO	
P2.7	USB_UART_CTS	CTS line to USB MCU	
P3.0	RF_SPI0_CS_N	EM SPI Chip Select	RF1.14
P3.1	RF_SPI0_MOSI	EM SPI MOSI	RF1.18
P3.2	RF_SPI0_MISO	EM SPI MISO	RF1.20
P3.3	RF_SPI0_SCLK	EM SPI Clock	RF1.16
P3.4	RF_UART_RXD / RF_SPI1_MISO	2-line UART to EM board	RF1.7
P3.5	RF_UART_RXD / RF_SPI1_MOSI	2-line UART to EM board	RF1.9
P3.6	LCD_BL	LCD backlight module enable line <sup>3</sup>	
P3.7	RF_UART_RXD / RF_SPI1_MOSI	Alternative EM SPI MOSI	RF1.9
P4.0	LED_1	General purpose LED 1 line	
P4.1	LED_2	General purpose LED 2 line	
P4.2	LED_3	General purpose LED 3 line	
P4.3	LED_4	General purpose LED 4 line	
P4.4	USB_UART_RTS	RTS line to USB MCU	
P4.5	P4_5	Unused GPIO	
P4.6	P4_6	Unused GPIO	
P4.7	P4_7	Unused GPIO	
P5.0	P5_0	GPIO or VREF+	
P5.1	P5_1	GPIO or VREF-	
P5.2	P5_2 / XT2IN	Unused GPIO / External crystal oscillator line	
P5.3	P5_3 / XT2OUT	Unused GPIO / External crystal oscillator line	
P5.4	RF_UART_RXD / RF_SPI1_MISO	Alternative EM SPI MISO	RF1.7
P5.5	P1_2 / RF_SPI1_SCLK	Alternative EM SPI Clock	RF2.18
P5.6	USB_UART_RXD	TXD line to USB MCU	
P5.7	USB_UART_RXD	RXD line to USB MCU	

Table 9 – MSP430 Port 1-5 pin-out

<sup>3</sup> LCD backlight module is not included. Additional components needed to use backlight module.

MSP430	Signal Name	Description	EM pin
P6.0	ACC_PWR	Accelerometer power, enable high	
P6.1	ALS_PWR	Ambient light sensor power, enable high	
P6.2	ALS_OUT	Ambient light sensor output line	
P6.3	P6_3	Unused GPIO	
P6.4	P6_4	Unused GPIO	
P6.5	P6_5	Unused GPIO	
P6.6	P6_6	Unused GPIO	
P6.7	P6_7	Unused GPIO	
P7.0	P7_0 / XIN	External crystal oscillator line	
P7.1	P7_1 / XOUT	External crystal oscillator line	
P7.2	FLASH_RESET_N	Serial flash reset line, active low	
P7.3	LCD_RESET_N	LCD reset line, active low	
P7.4	P7_4	Unused GPIO	
P7.5	P7_5	Unused GPIO	
P7.6	FLASH_PWR	Serial flash power, enable high	
P7.7	LCD_PWR	LCD power, enable high	
P8.0	RF_RESET_N	Signal used to reset EM board	RF2.15
P8.1	P8_1	GPIO signal to EM board	RF2.17
P8.2	P8_2	GPIO signal to EM board	RF1.5
P8.3	P8_3	GPIO signal to EM board	RF1.11
P8.4	P8_4	GPIO signal to EM board	RF1.15
P8.5	P8_5	GPIO signal to EM board	RF1.17
P8.6	FLASH_CS_N	SPI Chip Select for serial flash, active low	
P8.7	ACC_CS_N	SPI Chip Select for accelerometer, active low	
P9.0	IO_SPI1_SCLK	SPI Clock (interface used by accelerometer)	
P9.1	IO_SPI0_MOSI	SPI MOSI (interface shared by LCD, serial flash)	
P9.2	IO_SPI0_MISO	SPI MISO (interface shared by LCD, serial flash)	
P9.3	IO_SPI0_SCLK	SPI SCLK (interface shared by LCD, serial flash)	
P9.4	IO_SPI1_MOSI	SPI MOSI (interface used by accelerometer)	
P9.5	IO_SPI1_MISO	SPI MISO (interface used by accelerometer)	
P9.6	LCD_CS_N	SPI Chip Select for LCD, active low	
P9.7	LCD_MODE	LCD mode select signal [7]	
P10.0	P10_0	Unused GPIO	
P10.1	P10_1	Unused GPIO	
P10.2	P10_2	Unused GPIO	
P10.3	P10_3	Unused GPIO	
P10.4	P10_4	Unused GPIO	
P10.5	P10_5	Unused GPIO	
P10.6	P10_6	Unused GPIO	
P10.7	P10_7	Unused GPIO	

**Table 10 – MSP430 Port 6-10 pin-out**

## 6.12 Current Measurement Jumpers

SmartRF TrxEBoard has three current measurement jumpers, MCU\_PWR, IO\_PWR and RF\_PWR, as shown in Figure 18. By removing one of the jumpers, an ammeter can easily be connected to the board and perform current consumption measurements on the different segments of the EB. Similarly, a separate, regulated power supply for the EM can be connected. Table 11 shows an overview of what onboard components are connected to which power segment.

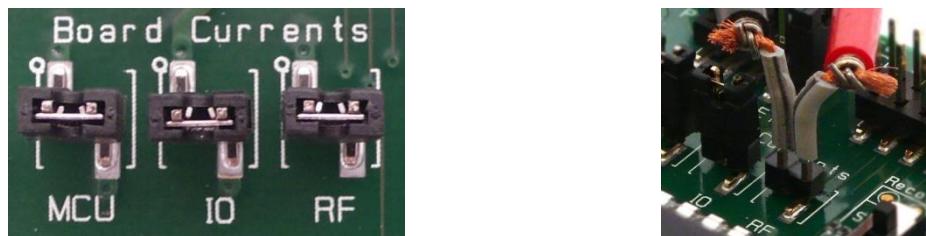


Figure 18 – Current measurement jumpers

If the EM is powered by a different source than the rest of the board, the same voltage should be used on the EM as on the EB. The digital signals between the EB and the EM are not isolated from each other, and different voltage levels can cause excessive current consumption or erroneous interaction between the EB and the EM.

**NOTE:** On SmartRF TrxEBoard revision 1.3.0, the “IO” and “RF” labels in the silk print are switched around. For all revisions, IO and RF current should be measured on the jumpers indicated by the silk print in Figure 18. See chapter 8 for details about EB revision 1.3.0.

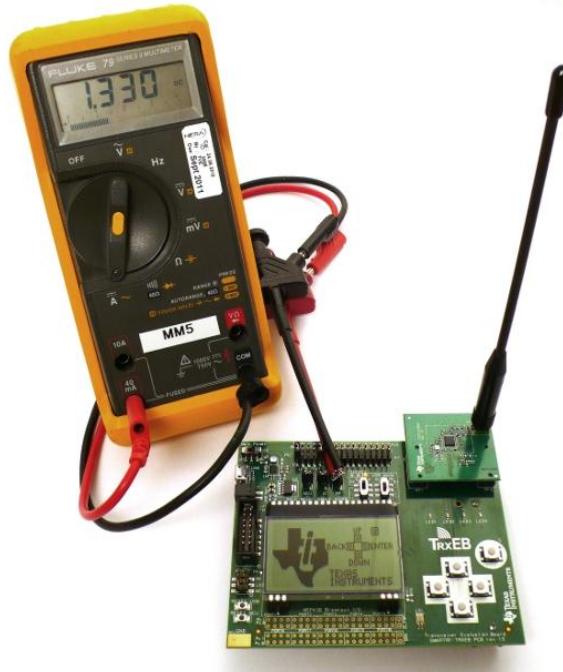


Figure 19 – Current measurement setup

Component	Default power	Alternative power
Evaluation Module	RF_PWR	NA
MSP430 MCU	MCU_PWR	NA
USB MCU	IO_PWR	NA
General Purpose LEDs	IO_PWR	NA
USB LED	IO_PWR	NA
Accelerometer	MCU_PWR (MSP430 P6.0)	NA
Ambient Light Sensor	MCU_PWR (MSP430 P6.1)	NA
SPI Flash	MCU_PWR (MSP430 P7.6)	IO_PWR (swap R17/R18)
LCD	MCU_PWR (MSP430 P7.7)	IO_PWR (swap R29/R30)

**Table 11 – Component/Power segment overview**

## 7 Connecting an external MCU to SmartRF TrxEB


You can easily connect an external MCU to a SmartRF TrxEB and use it to control the EM board mounted on the TrxEB. This chapter gives a quick overview over the signals that must be connected to enable your external MCU to control the EM.

### 7.1 Disable MCUs onboard SmartRF TrxEB


To avoid any signal conflicts between the MCUs onboard the SmartRF TrxEB (MSP430 and USB MCU) and the external MCU, both onboard MCUs should be disabled.

Disable the USB MCU by setting mode selection switch S2 to “Disable” position (Figure 20a).

To hold the onboard MSP430 MCU in reset state, short circuit pins 1-2 on header P4 as shown in Figure 20b. An alternative, more power efficient option is to program the onboard MSP430 with your own, custom software which configures the MSP430 pins to minimize current consumption and makes the MSP430 enter a low-power mode [5].

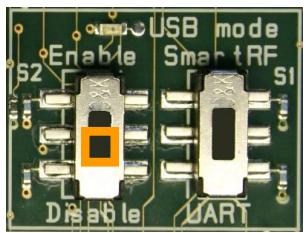

a) Disable USB MCU

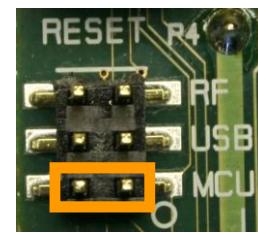

b) Hold MSP430 in reset

Figure 20 – Switch and jumper settings to disable both SmartRF TrxEB MCUs

### 7.2 Select power source

When connecting an external MCU board to the SmartRF TrxEB, there are typically two options for powering the boards, both consisting of sharing a power source. The first is to let the external MCU board draw power from the SmartRF TrxEB; the second is to power the SmartRF TrxEB from an external power source. It is in both cases important that the voltage levels on shared signals are the same.

#### 7.2.1 Power external MCU from SmartRF TrxEB

Power the external MCU board by connecting it to IO\_PWR (P9) and GND (P6) on SmartRF TrxEB, shown in Figure 21.

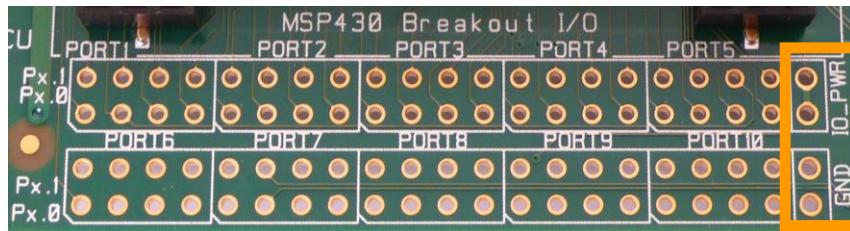


Figure 21 – Power external MCU board by connecting it to IO\_PWR and GND

#### 7.2.2 Power SmartRF TrxEB from external power source

Connect the power from the external power source to the external power source connector on SmartRF TrxEB and set the power source selection jumpers accordingly. Please see section 6.3.3 for a detailed description on how to power the SmartRF TrxEB from an external power source.

**NOTE:** When powering the SmartRF TrxEB from an external power source, the TrxEB main power switch must be in on position for the EB to be powered up.

## 7.3 Connect signals

### 7.3.1 Common signals

Table 12 shows the common signals needed to communicate with transceivers on a mounted EM board. Figure 22 shows where the signals listed Table 12 and Table 13 can be found on the P7 EM I/O breakout header on SmartRF TrxEB.

TrxEB Signal Name	TrxEB breakout pin	Description
RF_RESET_N	P7.10	Signal used to reset EM board
RF_SPI0_SCLK	P7.12	EM SPI interface clock signal
RF_SPI0_CS_N	P7.14	EM SPI interface chip select signal, active low
RF_SPI0_MOSI	P7.16	EM SPI interface MOSI signal
RF_SPI0_MISO	P7.18	EM SPI interface MISO signal
GND	P7.20	Common ground for EB and external MCU board

Table 12 – Strapping overview to connect common signals to an external MCU

### 7.3.2 Transceiver GPIO signals

The CC1120 GPIO pins available through the EM connectors on the SmartRF TrxEB are listed in Table 13. Figure 22 shows where the signals listed Table 12 and Table 13 can be found on the P7 EM I/O breakout header on SmartRF TrxEB. On SmartRF TrxEB rev. 1.7.0, silk print indicates where the most important EM I/O signals on header P7 are located.

**NOTE:** Transceiver EM boards from Texas Instruments share much of the same GPIO routing to the EM connectors. However, the number of GPIO signals available depends on the transceiver. Please refer to the schematics of your EM board for further details on the available GPIO.

TrxEB Signal Name	TrxEB Breakout Pin	Description
P1_7	P7.8	Transceiver GPIO0
RF_SPI0_MISO	P7.18	Transceiver GPIO1 (Shared with EM SPI MISO)
P1_3	P7.4	Transceiver GPIO2
P1_2 / RF_SPI1_SCLK	P7.3	Transceiver GPIO3

Table 13 – Strapping overview to strap CC1120 GPIO to an external MCU

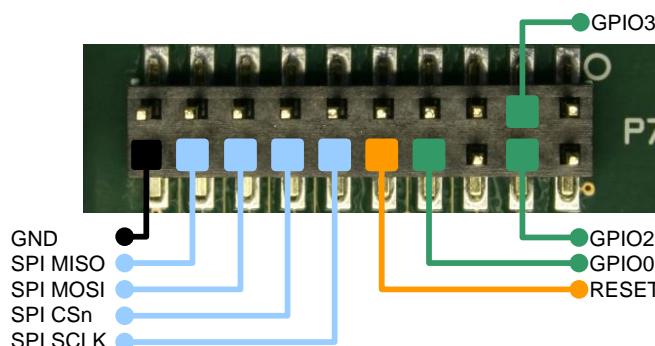


Figure 22 – P7 with strapping to connect external MCU to SmartRF TrxEB

## 8 SmartRF TrxEBoard rev. 1.3.0

### 8.1 Board Overview

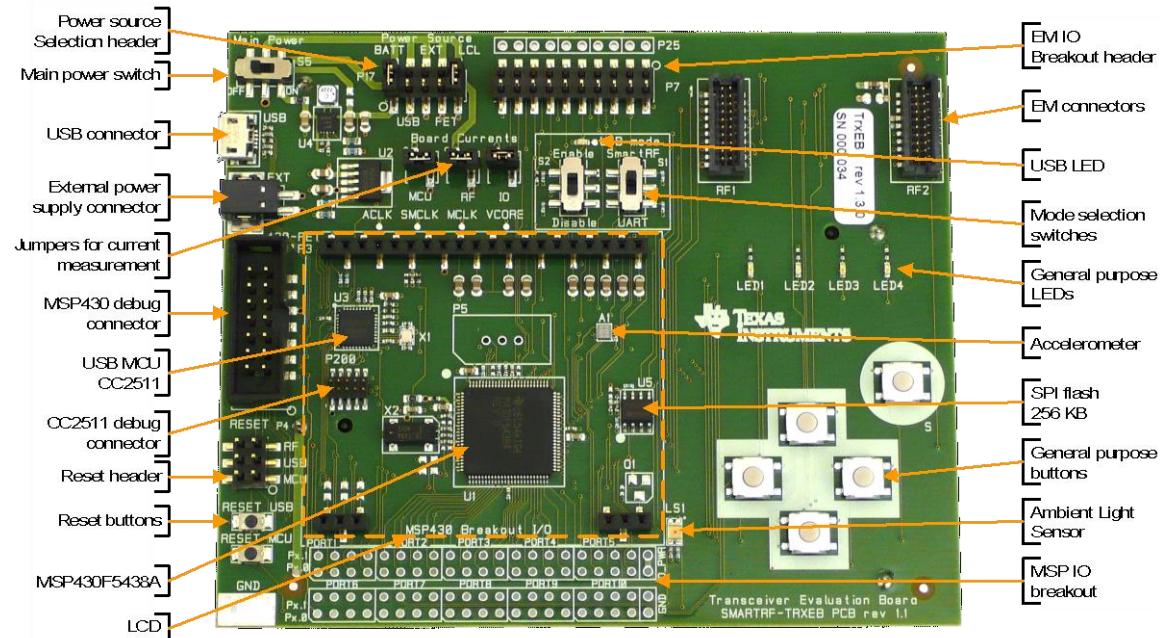


Figure 23 – SmartRF TrxEBoard revision 1.3.0 overview

### 8.2 Software Considerations

#### 8.2.1 Virtual COM port over USB

The onboard MSP430 MCU can communicate with a PC over a virtual serial port when the USB MCU is in UART Mode (described in section 6.1.2). When developing MSP430 code to communicate via the USB MCU, keep in mind that the standard USB MCU firmware only supports a two-line UART interface (see section 6.1.2 for further details).

#### 8.2.2 Accelerometer

The onboard MSP430 MCU has access to accelerometer A1. On SmartRF TrxEBoard revision 1.3.0, the accelerometer axes are as shown in Figure 24.

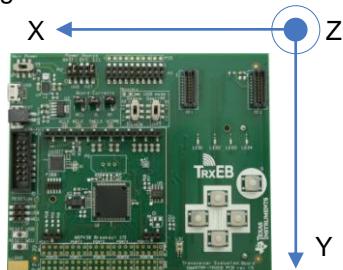


Figure 24 – Accelerometer axes on SmartRF TrxEBoard rev. 1.3.0

### 8.3 USB MCU pin-out

Table 14 shows how the USB MCU's pins are connected to the different functionalities on EB revision 1.3.0.

CC2511	Signal name	Description	EM pin
P0.0	MCU_RESET_N	Signal used to reset MSP430 MCU	
P0.1	RF_RESET_N	Signal used to reset EM board	RF2.15
P0.2	RF_SPI0_CS_N	EM SPI Chip Select	RF1.14
P0.3	RF_SPI0_SCLK	EM SPI Clock	RF1.16
P0.4	RF_SPI0_MOSI	EM SPI MOSI	RF1.18
P0.5	RF_SPI0_MISO	EM SPI MISO	RF1.20
P1.0	USB_PULLUP	Enable USB Interface pull-up resistor	
P1.1	P1_3	CC Debug Clock	RF1.12
P1.2	USB_UART_RTS	MSP430 UART (CC2511 CTS)	
P1.3	USB_UART_CTS	MSP430 UART (CC2511 RTS)	
P1.4	USB_UART_TXD	MSP430 UART (CC2511 RXD)	
P1.5	USB_UART_RXD	MSP430 UART (CC2511 TXD)	
P1.6	USB_ENABLE	Switch S2 input	
P1.7	P1_7	CC Debug Data	RF1.10
P2.0	RF_UART_RXD / RF_SPI1_MOSI	GPIO signal to EM board	RF1.9
P2.1	USB_DBG_DD	CC2511 CC Debug Interface Data	
P2.2	USB_DBG_DC	CC2511 CC Debug Interface Clock	
P2.3	USB_MODE	Switch S1 input	
P2.4	USB_LED	USB LED and Forced Recovery signal	

Table 14 – USB MCU pin-out on SmartRF TrxEB rev. 1.3.0

### 8.4 MSP430 MCU pin-out

For details on the pin-out for MSP430 port 1-10, please refer to Table 9 and Table 10 in section 6.11.2. Table 15 below shows the MSP430 pin-out not listed in section 6.11.2.

MSP430	Signal Name	Description
P11.0	ACLK	MSP430 ACLK output to test point TP5
P11.1	MCLK	MSP430 MCLK output to test point TP6
P11.2	SMCLK	MSP430 SMCLK output to test point TP7
VCORE	VCORE	MSP430 VCORE output to test point TP8
PJ.0	TDO	JTAG Test Data Out
PJ.1	TDI	JTAG Test Data In
PJ.2	TMS	JTAG Test Mode Select
PJ.3	TCK	JTAG Test Clock

Table 15 – MSP430 miscellaneous signal pin-out

## 9 SmartRF TrxEBoard rev. 1.5.0

### 9.1 Board Overview

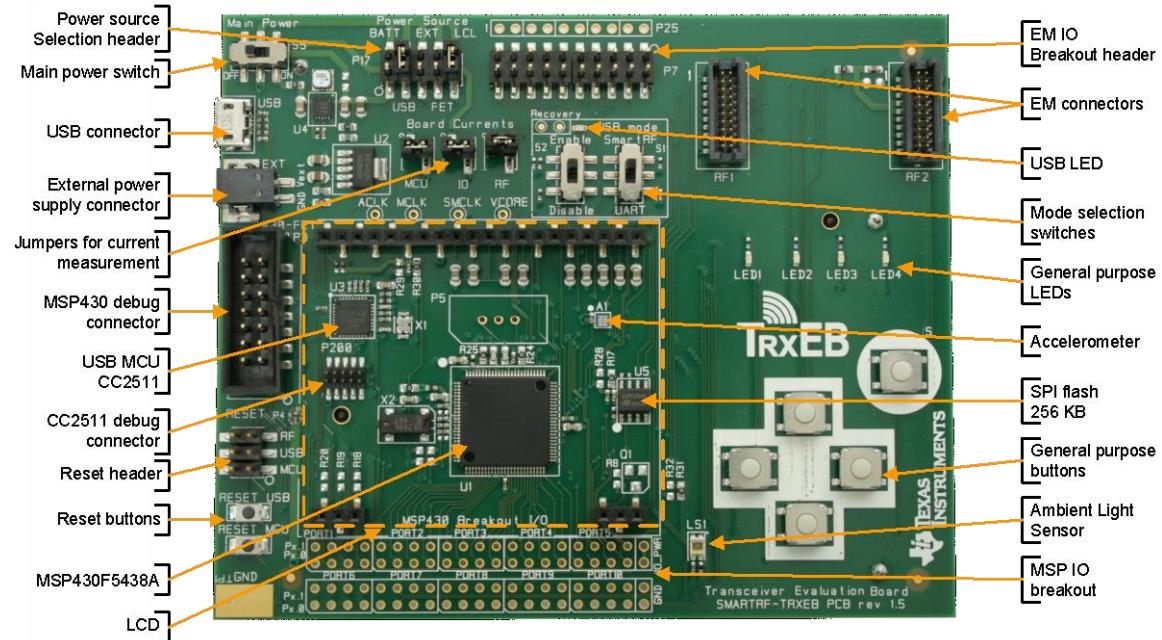


Figure 25 – SmartRF TrxEBoard revision 1.5.0 overview

### 9.2 Changes from rev. 1.3.0

#### 9.2.1 RC filter on USB MCU reset line

The pull-up resistor R22 on the USB MCU's reset line (USB\_RESET\_N) has been removed. It is replaced by a RC filter (R22 and C50) to remove ripple during reset line state transitions. See the schematics for EB revision 1.5.0 for more details.

#### 9.2.2 Accelerometer

The onboard accelerometer (A1) has been rotated 180 degrees compared to EB revision 1.3.0. The accelerometer axes are given in Figure 26. Silk print has been added on the EB backside indicating the accelerometer axes.


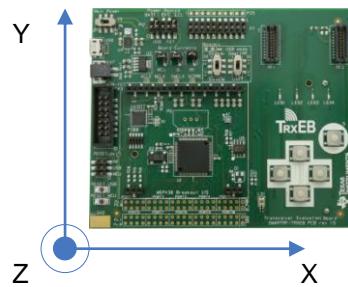


Figure 26 – Accelerometer axes on SmartRF TrxEBoard rev.  $\geq 1.5.0$

### 9.2.3 Silk print

Silk print text "IO" and "RF" near board current measurement jumpers P10 and P15 were on EB revision 1.3.0 placed next to the wrong jumper. This has been corrected as seen in Figure 27.

Silk print text "MCLK" and "SMCLK" near test points TP6 and TP7 were on EB revision 1.3.0 swapped, and placed next to the wrong test point. This has been corrected as seen in Figure 27.

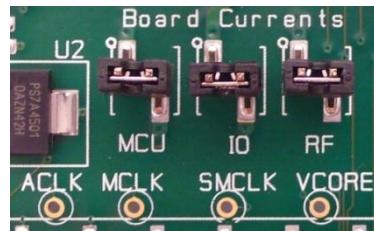

**Figure 27 – Correct silk print for MCLK and SMCLK test points**

Silk print has been added to the backside for EB revision 1.5.0. The silk print indicates the orientation of the accelerometer axes (see section 9.2.1) and power source jumper configurations (see section 6.3).

### 9.3 *USB MCU pin-out*

Same as revision 1.3.0, see section 8.3.

### 9.4 *MSP430 MCU pin-out*

Same as revision 1.3.0, see section 8.4.

## 10 SmartRF TrxEBoard rev. 1.7.0

### 10.1 Board Overview

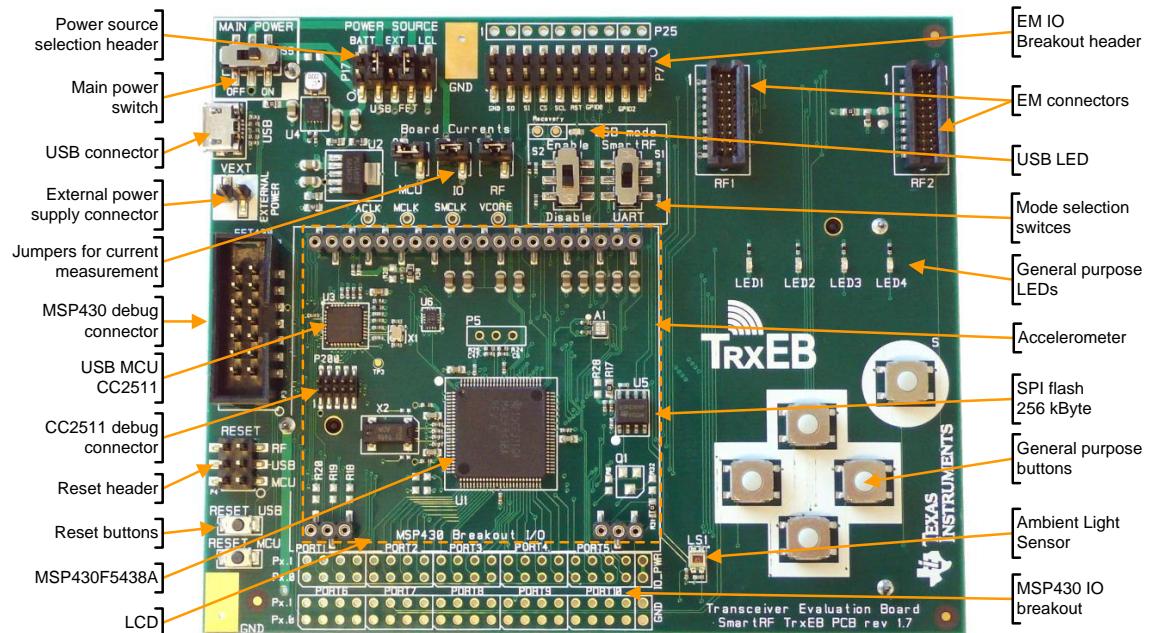



Figure 28 – SmartRF TrxEBoard revision 1.7.0 overview

### 10.2 Changes from rev. 1.5.0

#### 10.2.1 Switch added to enable combo EM support

In order to support all combo EMs (e.g. CC1101-CC1190), a switch (TS3A44159) has been added in EB revision 1.7.0. The switch is placed between the four UART lines between the USB MCU and the MSP430 as shown in Figure 29. Hardware switch S1 controls the switch as given in Table 16.

With the USB MCU in UART Mode (see section 6.1.2), the switch connects COMx lines to NCx lines resulting in the same behavior as for older revisions of SmartRF TrxEBoard. In SmartRF Mode (see section 6.1.1), COMx lines are connected to NOx giving the USB MCU extra access to the EM interface, enabling support of combo EMs in SmartRF Studio.

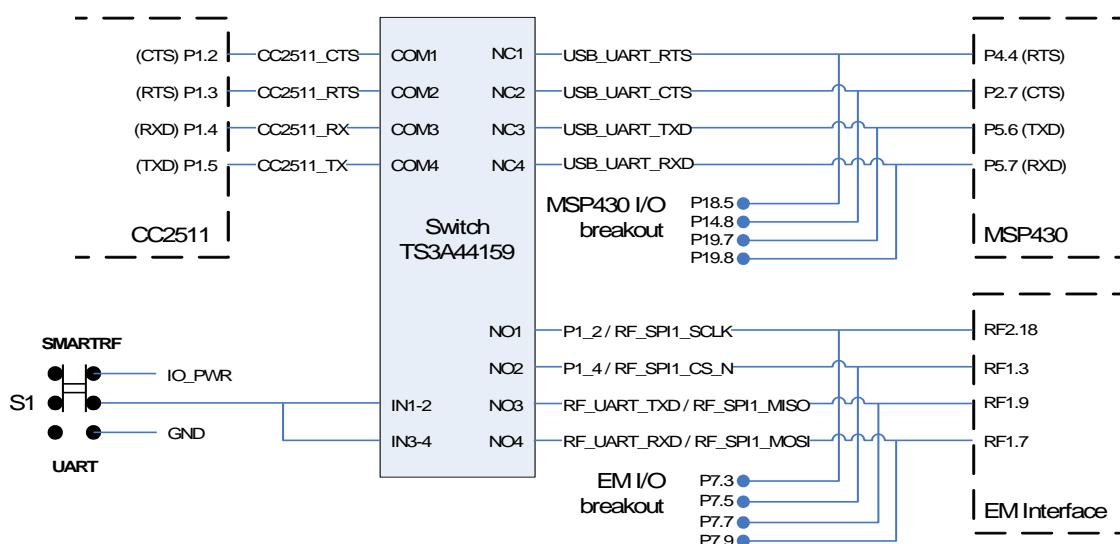

**Figure 29 – Signal overview for switch TS3A44159 added for SmartRF TrxEB rev. 1.7.0**

S1 position	Switch TS3A44159 connection
UART	COMx ↔ NCx
SMARTRF	COMx ↔ NOx

**Table 16 – S1 control over TS3A44159 switch for SmartRF TrxEB rev. 1.7.0**

### 10.2.2 Connector type for external power sources

On SmartRF TrxEB rev. 1.7.0, the external power source connector has been switched to a two-pin header (P1). See section 6.3.3.2 for more details on how to power SmartRF TrxEB rev. 1.7.0 using an external power supply.


### 10.2.3 Connector type for LCD

SmartRF TrxEB rev. 1.7.0 comes with a different LCD connector type than previous revisions to ensure proper connection to the LCD.

**WARNING!** The LCD connector on SmartRF TrxEB rev. 1.7.0 is very tight. Be extremely cautious when removing the LCD display to avoid the LCD display from breaking.

### 10.2.4 Ground pad between P17 and P7

A new ground pad has been added between the power source header (P17) and the EM I/O breakout header (P7) to ease connection of probes with these headers. The new ground pad is shown in Figure 30.

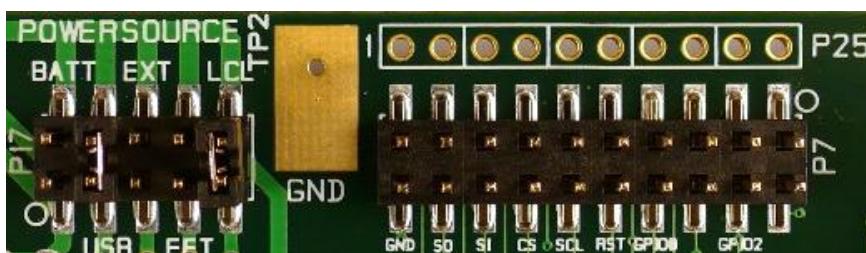

**Figure 30 – Added ground pad on SmartRF TrxEB rev. 1.7.0.**

### 10.2.5 Silk print

There has been made several minor additions to the silk print on SmartRF TrxEB 1.7.0, e.g. EM I/O breakout pins on header P7 are now marked (see Figure 30).

### 10.3 USB MCU pin-out

Table 17 shows how the USB MCU's pins are connected to the different functionalities on EB revision 1.7.0. Changes from previous EB revision are in bold.

CC2511	Signal name	Description	EM pin
P0.0	MCU_RESET_N	Signal used to reset MSP430 MCU	
P0.1	RF_RESET_N	Signal used to reset EM board	RF2.15
P0.2	RF_SPI0_CS_N	EM SPI Chip Select	RF1.14
P0.3	RF_SPI0_SCLK	EM SPI Clock	RF1.16
P0.4	RF_SPI0_MOSI	EM SPI MOSI (Master Out, Slave In)	RF1.18
P0.5	RF_SPI0_MISO	EM SPI MISO (Master in, slave out)	RF1.20
P1.0	USB_PULLUP	Enable USB Interface pull-up resistor	
P1.1	P1_3	CC Debug Clock	RF1.12
P1.2	<b>CC2511_CTS</b>	MSP430 UART / <b>GPIO connected to EM board</b>	<b>RF2.18</b> <sup>4</sup>
P1.3	<b>CC2511_RTS</b>	MSP430 UART / <b>GPIO connected to EM board</b>	<b>RF1.3</b> 4
P1.4	<b>CC2511_RX</b>	MSP430 UART / <b>GPIO connected to EM board</b>	<b>RF1.9</b> 4
P1.5	<b>CC2511_TX</b>	MSP430 UART / <b>GPIO connected to EM board</b>	<b>RF1.7</b> 4
P1.6	USB_ENABLE	Switch S2 input	
P1.7	P1_7	CC Debug Data	RF1.10
P2.0	<b>TP3</b>	<b>GPIO connected to test point TP3</b>	<b>NC</b>
P2.1	USB_DBG_DD	CC2511 CC Debug Interface Data	
P2.2	USB_DBG_DC	CC2511 CC Debug Interface Clock	
P2.3	USB_MODE	Switch S1 input	
P2.4	USB_LED	USB LED and Forced Recovery signal	

Table 17 – USB MCU pin-out on SmartRF TrxEB rev. 1.7.0

### 10.4 MSP430 MCU pin-out

Same as revision 1.3.0, see section 8.4.

<sup>4</sup> USB MCU pin is GPIO connected to the EM board in SmartRF Mode (section 6.1.1).

## 11 Updating the firmware

**NOTE:** This chapter only describes how to program the firmware on the USB controller on the TrxEB. To program the MSP430, use the MSP-FET430UIF tool and connect it to the FET430 connector on the EB. Programming can be done using IAR EW430, CCS or SmartRF Flash Programmer.

Updating the EB firmware is done automatically by SmartRF Studio and SmartRF Flash Programmer if an old or incompatible firmware version is found on the USB MCU. SmartRF Flash Programmer also allows manual programming of the EB firmware. Please refer to the respective user's guides for detailed instructions. A simple step-by-step guide for updating the USB MCU firmware using SmartRF Studio is provided below.

1. Turn off the evaluation board (EB).
2. Disconnect any connected evaluation module (EM).
3. Plug in the USB cable and turn the power switch on.
4. The SmartRF TrxEB device should appear in the SmartRF Studio main window as seen in Figure 31a.
5. Double click the TrxEB device. SmartRF Studio will prompt if you wish to update the EB firmware (Figure 31b).
6. Confirm that you wish to update the EB firmware and wait for the upgrade process to complete (Figure 31c). This may take several seconds.
7. The EB will re-appear as a connected device in the SmartRF Studio window when the update is completed.

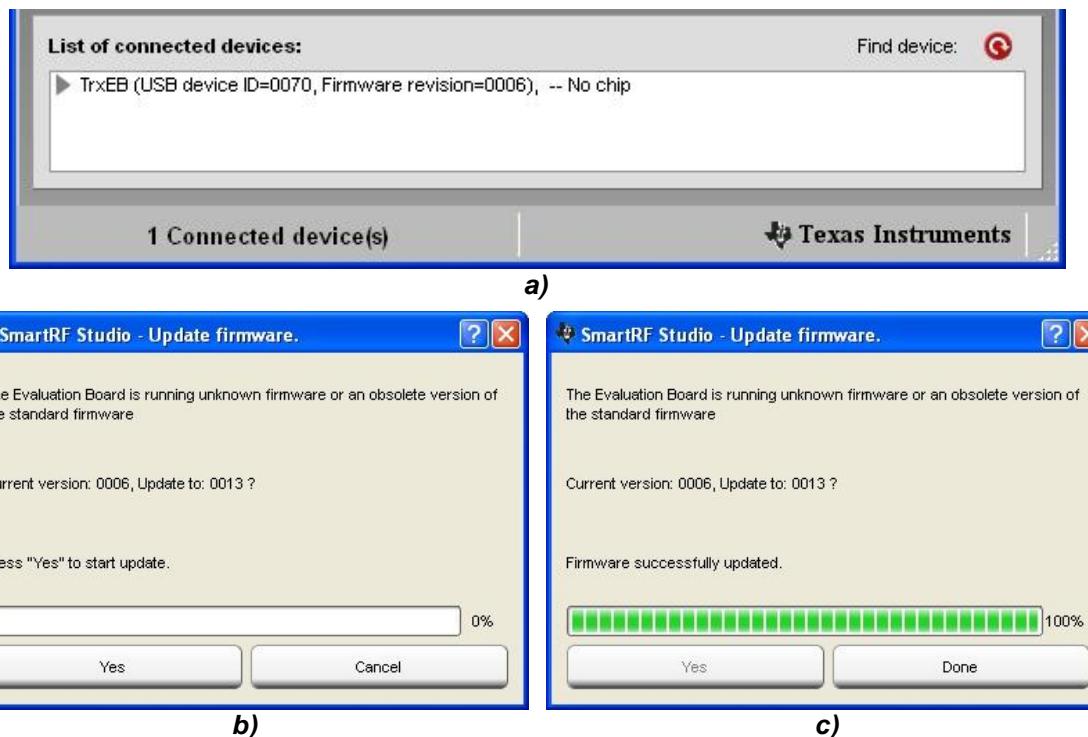


Figure 31 – Firmware upgrade steps in SmartRF Studio


## 11.1 Forced Boot Recovery Mode

If the firmware update fails and the evaluation board appears to be dead, there is a way to force the board to only run the bootloader and stop all further execution. No attempts will be made to start the EB firmware.


1. Turn the EB power off.
2. Rev. 1.3.0: Ground the USB LED test point shown in Figure 32a.  
Rev.  $\geq 1.5.0$ : Ground the USB LED test point with the GND test point in Figure 32b.
3. While doing as explained in the second step, turn the EB power on.

When the board is powered up, the bootloader will not attempt to start the firmware and it will remain in control of the board. LED D6 (USB LED) will be blinking with a 1 second interval, indicating that the bootloader is running. You can use the USB LED state as an indicator to whether you have a working bootloader or not.

When the bootloader is running, the only functionality that is offered from SmartRF Studio and SmartRF Flash Programmer is to load a new version of the standard firmware.

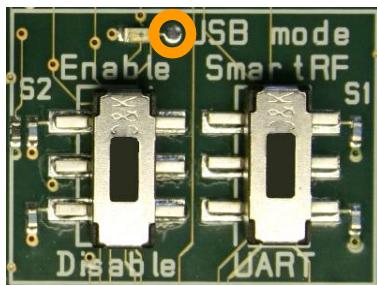

a) Revision 1.3.0

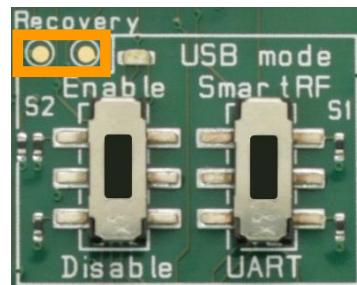

b) Revision  $\geq 1.5.0$


**Figure 32 – Enter forced boot recovery mode**

## 11.2 Board Resurrection

If the forced boot recovery method above also fails, the board might be faulty or the flash on the CC2511 device has been inadvertently deleted. If the latter has happened, you can try to reprogram the boot loader on the CC2511. This will require that you have a CC Debugger [11].

First, you will have to remove the LCD from the TrxEB to get access to the debug connector for the CC2511 (P200). The LCD might be difficult to remove and can easily break if you use excessive force. Once the LCD is removed, connect the CC Debugger to P200 with the small flat-cable and adapter board included with the debugger.

Next, apply power to the TrxEB board from a suitable power source (e.g. USB). Then connect the CC Debugger to the PC via a USB cable and press the reset button on the debugger. The GREEN LED on the debugger should now be turned on to indicate that it has detected the CC2511 device on the TrxEB. If the RED LED is turned on, verify that the voltage level on the TrxEB is 3.3V and that the debugger is connected correctly (note the orientation of pin 1 on the debugger cable).

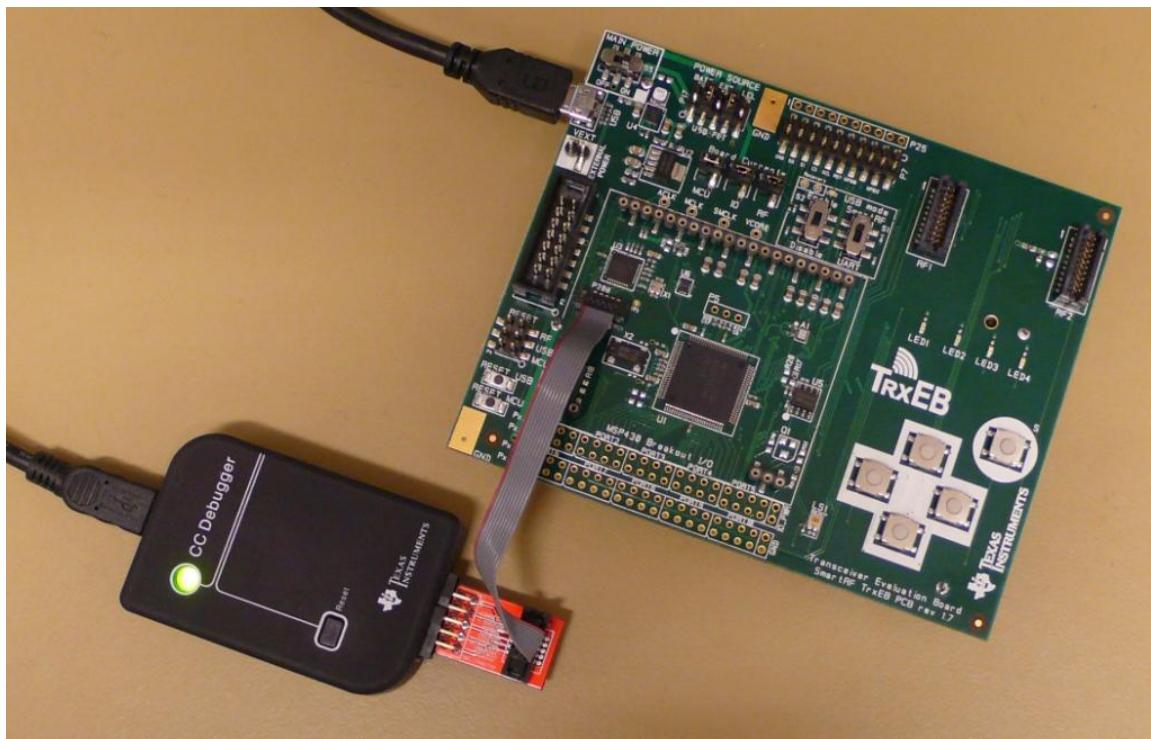


**Figure 33 – Proper connection for board resurrection.**

If the RED LED on the debugger remains on, the TrxEB is most likely broken. Please contact your TI representative for a possible replacement.

If the GREEN LED on the debugger is on, you can proceed with programming the boot loader from SmartRF Flash Programmer.

In SmartRF Flash Programmer, first select “Program Evaluation Board” and then go to the “EB bootloader” tab. The screenshot below shows the settings you will need to use.

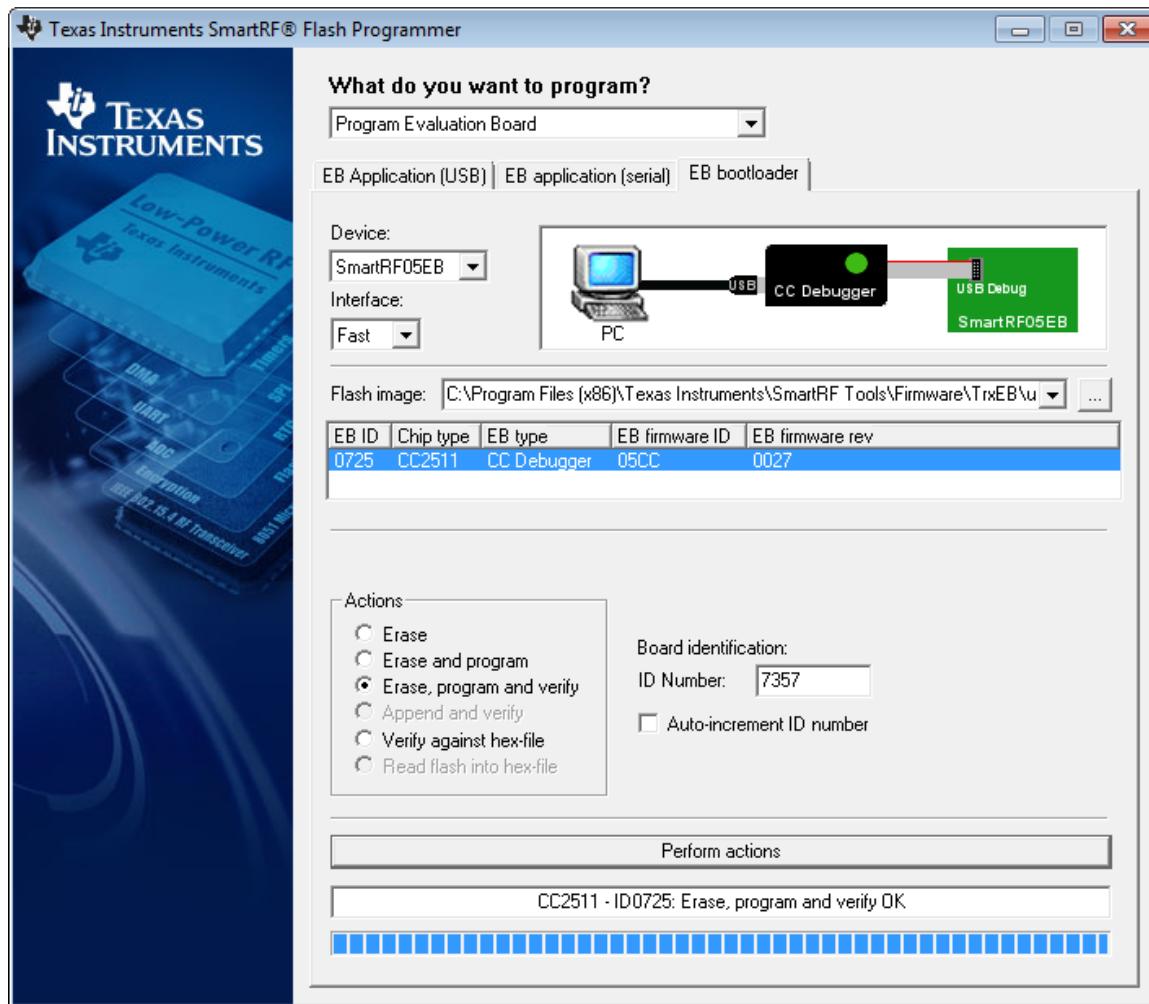

- In the Device drop down list, select SmartRF05EB.
- The interface speed can be set to Fast.
- The flash image to program is C:\Program Files (x86)\Texas Instruments\SmartRF Tools\Firmware\TrxEb\usb\_bootloader\_trxeb.hex
- In the list of connected devices, you should see the CC Debugger connected to the CC2511.
- Select “Erase, program and verify” from the list of actions.
- Give the board a unique ID number.

When all of the above is set, press the “Perform actions” button.

If everything went well, the yellow USB Led on the TrxEb should start blinking rapidly. This means that the boot loader is running and that it is waiting for the firmware to be programmed. Follow the steps in the first section of this chapter to program the firmware.

## 12 Frequently Asked Questions

**Q1 I have a SmartRF TrxEB that says revision 1.1 on the PCB, but rev. 1.1 is not mentioned in the User's Guide. Why?**

**A1** Your SmartRF TrxEB is what this document calls revision 1.3.0. This user's guide refers to the assembly revision of the EB. On SmartRF TrxEB (assembly) revision 1.3.0, the PCB revision is 1.1. For EB revisions 1.5.0 and 1.7.0, PCB revisions are synchronized with the assembly revision, being 1.5 and 1.7, respectively.

**Q2 How do I check the firmware revision on the evaluation board?**

**A2** You can use both SmartRF Studio and SmartRF Flash Programmer to check the firmware revision. Connect the EB to a PC via USB and launch e.g. the SmartRF Flash Programmer. Select the "EB application (USB)" tab. The SmartRF board should be listed with relevant information about the firmware running on the board. In the below example, the EB firmware revision is 0009.



**Q3 Installation of USB drivers for the evaluation board fails. Help!**

**A3** Please refer to design note DN304 [2] on the TI web for help regarding installation of the Cxxxx Development Tools USB driver (Cebal).

**Q4 Nothing happens when I power up the evaluation board. Why?**

**A4** Make sure the power selection jumpers on header P17 are set according to your power source (see section 6.3). Check that the Mode Selection switches (section 6.1) are not set to disable the USB MCU. Also, make sure the board current jumpers (P10, P13 and P15) are all short circuited.

**Q5 When powering up the evaluation board, LED D6 starts blinking. Why?**

**A5** LED D6 (aka. USB LED) indicates the state of the TrxEB. If the observed behavior is short blinks with long pauses (0.1 s ON, 0.9 s OFF), the EB firmware does not detect any connected chip. If an EM is connected, the firmware does not support the connected EM. Try updating the EB firmware using SmartRF Studio or SmartRF Flash Programmer (see chapter 11).

If the blink frequency is about 1 Hz (0.5 s ON, 0.5 s OFF), the USB MCU bootloader has entered a forced boot recovery mode (set during programming of the device). Power off the system and turn it back on to start the application.

If the blinking is more rapid (10 times per second) the bootloader could not find a valid application in flash. Use SmartRF Studio or SmartRF Flash Programmer to program a new firmware on the board.

See section 6.9.2 for more details on LED D6 states.

**Q6 I already have a SmartRF TrxEB revision 1.3.0/1.5.0 and I have written a lot of software for the MSP430 MCU on that board. Now, I get revision 1.7.0 in new development kits. Do I need to rewrite all of my software?**

**A6** No, you do not need to rewrite your software. The hardware connection between the onboard MSP430 and the EM remains the same in revision 1.7.0. The difference is that in revision 1.7.0, an extra switch has been added between the USB MCU and the MSP430/EM. This

switch gives the USB MCU access to extra EM I/O in SmartRF Mode, allowing support for combo EMs (e.g. CC1101-CC1190). See section 10.2 for further details on hardware changes in EB revision 1.7.0 and chapter.

**Q7 I have a CC1101-CC1190EM combo board. Will it work with SmartRF TrxEB and SmartRF Studio?**

**A7** Yes and no. Yes, you can connect the CC1101-CC1190EM to the TrxEB and control the combo board from the MSP430. However, this assembly is not yet fully supported by SmartRF Studio. Studio does support the CC1101-CC1190 combo, but the automatic control of the signals to the CC1190 device is currently only supported on SmartRF04EB.

You can of course still use TrxEB + CC1101-CC1190EM in SmartRF Studio, as all the relevant RF registers will be correct, but you need to “help” the system to set the CC1190 device in the right mode. Use the jumpers on the EM to control the LNA/PA/HGM signals. For all RX tests, the LNA signal should be high (PA low) and for all TX tests, the PA signal should be high (LNA low).

## 13 References

- [1] **SmartRF Studio Product Page**  
[www.ti.com/smartrfstudio](http://www.ti.com/smartrfstudio)
- [2] **DN304 – CCxxxx Development Tools USB Driver Installation Guide**  
[www.ti.com/lit/swra366](http://www.ti.com/lit/swra366)
- [3] **CC2511F32 Product Page**  
[www.ti.com/product/cc2511f32](http://www.ti.com/product/cc2511f32)
- [4] **SmartRF Flash Programmer Product Page**  
[www.ti.com/tool/flash-programmer](http://www.ti.com/tool/flash-programmer)
- [5] **MSP430x5xx/MSP430x6xx Family User's Guide**  
[www.ti.com/lit/slau208](http://www.ti.com/lit/slau208)
- [6] **MSP430F5438A Product Page**  
[www.ti.com/product/msp430f5438a](http://www.ti.com/product/msp430f5438a)
- [7] **Electronic Assembly DOGM128-6 Datasheet**  
<http://www.lcd-module.com/eng/pdf/grafik/dogm128e.pdf>
- [8] **VTI CMA3000-D01**  
[http://www.vti.fi/en/products/accelerometers/consumer\\_electronics/cma3000\\_series/](http://www.vti.fi/en/products/accelerometers/consumer_electronics/cma3000_series/)
- [9] **Osram SFH 5711**  
<http://www.osram-os.com/>
- [10] **Micron M25PE Datasheet**  
[http://www.micron.com/~/media/Products/Components/Flash/5965M25PE20\\_10.ashx](http://www.micron.com/~/media/Products/Components/Flash/5965M25PE20_10.ashx)
- [11] **CC Debugger**  
[www.ti.com/tool/cc-debugger](http://www.ti.com/tool/cc-debugger)

## 14 Document History

Revision	Date	Description/Changes
SWRU294A	2012-02-10	Updated with information about revision 1.7.0. Corrected information about use of CC1101-CC1190EM on TrxEB. Added information about board resurrection. Added some more information about the EM connector/interface.
SWRU294	2011-06-30	Initial release.

**Appendix A**  
**Schematics**  
**SmartRF TrxEB 1.3.0**

## USB Interface

- CC2511
- CC2511 debug
- USB enable switch
- USB mode select switch
- USB port

RF\_UART\_RXD/RF\_SPI1\_MOSI  
PI\_3  
USB\_UART\_RTS  
USB\_UART\_CTS  
USB\_UART\_TXD  
USB\_UART\_RXD  
PI\_7  
MCU\_RESET\_N  
RF\_RESET\_N  
RF\_SPI0\_CS\_N  
RF\_SPI0\_SCLK  
RF\_SPI0\_MOSI  
RF\_SPI0\_MISO  
USB\_RESET\_N

Sheet 2

## EXT I/O

Sheet 7

## Power Supply


- Power ON/OFF switch
- External power terminals
- Regulators
- Power jumpers
- Batteries


Sheet 3


## RF Interface


- RF connection

RF\_PWR  
PI\_0  
PI\_1  
PI\_2/RF\_SPI1\_SCLK  
PI\_3  
PI\_4/RF\_SPI1\_CS\_N  
PI\_5  
PI\_6  
PI\_7  
PI\_8  
PI\_9  
PI\_10  
PI\_11  
PI\_12  
PI\_13  
PI\_14  
PI\_15  
PI\_16  
PI\_17  
PI\_18  
PI\_19  
PI\_20  
PI\_21  
PI\_22  
PI\_23  
PI\_24  
PI\_25  
PI\_26  
PI\_27  
PI\_28  
PI\_29  
PI\_30  
PI\_31  
PI\_32  
PI\_33  
PI\_34  
PI\_35  
PI\_36  
PI\_37  
PI\_38  
PI\_39  
PI\_40  
PI\_41  
PI\_42  
PI\_43  
PI\_44  
PI\_45  
PI\_46  
PI\_47  
PI\_48  
PI\_49  
PI\_50  
PI\_51  
PI\_52  
PI\_53  
PI\_54  
PI\_55  
PI\_56  
PI\_57  
PI\_58  
PI\_59  
PI\_60  
PI\_61  
PI\_62  
PI\_63  
PI\_64  
PI\_65  
PI\_66  
PI\_67  
PI\_68  
PI\_69  
PI\_70  
PI\_71  
PI\_72  
PI\_73  
PI\_74  
PI\_75  
PI\_76  
PI\_77  
PI\_78  
PI\_79  
PI\_80  
PI\_81  
PI\_82  
PI\_83  
PI\_84  
PI\_85  
PI\_86  
PI\_87  
PI\_88  
PI\_89  
PI\_90  
PI\_91  
PI\_92  
PI\_93  
PI\_94  
PI\_95  
PI\_96  
PI\_97  
PI\_98  
PI\_99  
PI\_100  
PI\_101  
PI\_102  
PI\_103  
PI\_104  
PI\_105  
PI\_106  
PI\_107  
PI\_108  
PI\_109  
PI\_110  
PI\_111  
PI\_112  
PI\_113  
PI\_114  
PI\_115  
PI\_116  
PI\_117  
PI\_118  
PI\_119  
PI\_120  
PI\_121  
PI\_122  
PI\_123  
PI\_124  
PI\_125  
PI\_126  
PI\_127  
PI\_128  
PI\_129  
PI\_130  
PI\_131  
PI\_132  
PI\_133  
PI\_134  
PI\_135  
PI\_136  
PI\_137  
PI\_138  
PI\_139  
PI\_140  
PI\_141  
PI\_142  
PI\_143  
PI\_144  
PI\_145  
PI\_146  
PI\_147  
PI\_148  
PI\_149  
PI\_150  
PI\_151  
PI\_152  
PI\_153  
PI\_154  
PI\_155  
PI\_156  
PI\_157  
PI\_158  
PI\_159  
PI\_160  
PI\_161  
PI\_162  
PI\_163  
PI\_164  
PI\_165  
PI\_166  
PI\_167  
PI\_168  
PI\_169  
PI\_170  
PI\_171  
PI\_172  
PI\_173  
PI\_174  
PI\_175  
PI\_176  
PI\_177  
PI\_178  
PI\_179  
PI\_180  
PI\_181  
PI\_182  
PI\_183  
PI\_184  
PI\_185  
PI\_186  
PI\_187  
PI\_188  
PI\_189  
PI\_190  
PI\_191  
PI\_192  
PI\_193  
PI\_194  
PI\_195  
PI\_196  
PI\_197  
PI\_198  
PI\_199  
PI\_200  
PI\_201  
PI\_202  
PI\_203  
PI\_204  
PI\_205  
PI\_206  
PI\_207  
PI\_208  
PI\_209  
PI\_210  
PI\_211  
PI\_212  
PI\_213  
PI\_214  
PI\_215  
PI\_216  
PI\_217  
PI\_218  
PI\_219  
PI\_220  
PI\_221  
PI\_222  
PI\_223  
PI\_224  
PI\_225  
PI\_226  
PI\_227  
PI\_228  
PI\_229  
PI\_230  
PI\_231  
PI\_232  
PI\_233  
PI\_234  
PI\_235  
PI\_236  
PI\_237  
PI\_238  
PI\_239  
PI\_240  
PI\_241  
PI\_242  
PI\_243  
PI\_244  
PI\_245  
PI\_246  
PI\_247  
PI\_248  
PI\_249  
PI\_250  
PI\_251  
PI\_252  
PI\_253  
PI\_254  
PI\_255  
PI\_256  
PI\_257  
PI\_258  
PI\_259  
PI\_260  
PI\_261  
PI\_262  
PI\_263  
PI\_264  
PI\_265  
PI\_266  
PI\_267  
PI\_268  
PI\_269  
PI\_270  
PI\_271  
PI\_272  
PI\_273  
PI\_274  
PI\_275  
PI\_276  
PI\_277  
PI\_278  
PI\_279  
PI\_280  
PI\_281  
PI\_282  
PI\_283  
PI\_284  
PI\_285  
PI\_286  
PI\_287  
PI\_288  
PI\_289  
PI\_290  
PI\_291  
PI\_292  
PI\_293  
PI\_294  
PI\_295  
PI\_296  
PI\_297  
PI\_298  
PI\_299  
PI\_299  
PI\_300  
PI\_301  
PI\_302  
PI\_303  
PI\_304  
PI\_305  
PI\_306  
PI\_307  
PI\_308  
PI\_309  
PI\_310  
PI\_311  
PI\_312  
PI\_313  
PI\_314  
PI\_315  
PI\_316  
PI\_317  
PI\_318  
PI\_319  
PI\_320  
PI\_321  
PI\_322  
PI\_323  
PI\_324  
PI\_325  
PI\_326  
PI\_327  
PI\_328  
PI\_329  
PI\_330  
PI\_331  
PI\_332  
PI\_333  
PI\_334  
PI\_335  
PI\_336  
PI\_337  
PI\_338  
PI\_339  
PI\_340  
PI\_341  
PI\_342  
PI\_343  
PI\_344  
PI\_345  
PI\_346  
PI\_347  
PI\_348  
PI\_349  
PI\_350  
PI\_351  
PI\_352  
PI\_353  
PI\_354  
PI\_355  
PI\_356  
PI\_357  
PI\_358  
PI\_359  
PI\_360  
PI\_361  
PI\_362  
PI\_363  
PI\_364  
PI\_365  
PI\_366  
PI\_367  
PI\_368  
PI\_369  
PI\_370  
PI\_371  
PI\_372  
PI\_373  
PI\_374  
PI\_375  
PI\_376  
PI\_377  
PI\_378  
PI\_379  
PI\_380  
PI\_381  
PI\_382  
PI\_383  
PI\_384  
PI\_385  
PI\_386  
PI\_387  
PI\_388  
PI\_389  
PI\_390  
PI\_391  
PI\_392  
PI\_393  
PI\_394  
PI\_395  
PI\_396  
PI\_397  
PI\_398  
PI\_399  
PI\_399  
PI\_400  
PI\_401  
PI\_402  
PI\_403  
PI\_404  
PI\_405  
PI\_406  
PI\_407  
PI\_408  
PI\_409  
PI\_409  
PI\_410  
PI\_411  
PI\_412  
PI\_413  
PI\_414  
PI\_415  
PI\_416  
PI\_417  
PI\_418  
PI\_419  
PI\_419  
PI\_420  
PI\_421  
PI\_422  
PI\_423  
PI\_424  
PI\_425  
PI\_426  
PI\_427  
PI\_428  
PI\_429  
PI\_429  
PI\_430  
PI\_431  
PI\_432  
PI\_433  
PI\_434  
PI\_435  
PI\_436  
PI\_437  
PI\_438  
PI\_439  
PI\_439  
PI\_440  
PI\_441  
PI\_442  
PI\_443  
PI\_444  
PI\_445  
PI\_446  
PI\_447  
PI\_448  
PI\_449  
PI\_449  
PI\_450  
PI\_451  
PI\_452  
PI\_453  
PI\_454  
PI\_455  
PI\_456  
PI\_457  
PI\_458  
PI\_459  
PI\_459  
PI\_460  
PI\_461  
PI\_462  
PI\_463  
PI\_464  
PI\_465  
PI\_466  
PI\_467  
PI\_468  
PI\_469  
PI\_469  
PI\_470  
PI\_471  
PI\_472  
PI\_473  
PI\_474  
PI\_475  
PI\_476  
PI\_477  
PI\_478  
PI\_478  
PI\_479  
PI\_479  
PI\_480  
PI\_481  
PI\_482  
PI\_483  
PI\_484  
PI\_485  
PI\_486  
PI\_487  
PI\_488  
PI\_488  
PI\_489  
PI\_489  
PI\_490  
PI\_491  
PI\_492  
PI\_493  
PI\_494  
PI\_495  
PI\_496  
PI\_497  
PI\_498  
PI\_498  
PI\_499  
PI\_499  
PI\_500  
PI\_501  
PI\_502  
PI\_503  
PI\_504  
PI\_505  
PI\_506  
PI\_507  
PI\_508  
PI\_509  
PI\_509  
PI\_510  
PI\_511  
PI\_512  
PI\_513  
PI\_514  
PI\_515  
PI\_516  
PI\_517  
PI\_518  
PI\_518  
PI\_519  
PI\_519  
PI\_520  
PI\_521  
PI\_522  
PI\_523  
PI\_524  
PI\_525  
PI\_526  
PI\_527  
PI\_528  
PI\_528  
PI\_529  
PI\_529  
PI\_530  
PI\_531  
PI\_532  
PI\_533  
PI\_534  
PI\_535  
PI\_536  
PI\_537  
PI\_538  
PI\_538  
PI\_539  
PI\_539  
PI\_540  
PI\_541  
PI\_542  
PI\_543  
PI\_544  
PI\_545  
PI\_546  
PI\_547  
PI\_548  
PI\_548  
PI\_549  
PI\_549  
PI\_550  
PI\_551  
PI\_552  
PI\_553  
PI\_554  
PI\_555  
PI\_556  
PI\_557  
PI\_558  
PI\_558  
PI\_559  
PI\_559  
PI\_560  
PI\_561  
PI\_562  
PI\_563  
PI\_564  
PI\_565  
PI\_566  
PI\_567  
PI\_568  
PI\_568  
PI\_569  
PI\_569  
PI\_570  
PI\_571  
PI\_572  
PI\_573  
PI\_574  
PI\_575  
PI\_576  
PI\_577  
PI\_577  
PI\_578  
PI\_578  
PI\_579  
PI\_579  
PI\_580  
PI\_581  
PI\_582  
PI\_583  
PI\_584  
PI\_585  
PI\_586  
PI\_587  
PI\_587  
PI\_588  
PI\_588  
PI\_589  
PI\_589  
PI\_590  
PI\_591  
PI\_592  
PI\_593  
PI\_594  
PI\_595  
PI\_596  
PI\_597  
PI\_597  
PI\_598  
PI\_598  
PI\_599  
PI\_599  
PI\_600  
PI\_601  
PI\_602  
PI\_603  
PI\_604  
PI\_605  
PI\_606  
PI\_607  
PI\_608  
PI\_608  
PI\_609  
PI\_609  
PI\_610  
PI\_611  
PI\_612  
PI\_613  
PI\_614  
PI\_615  
PI\_616  
PI\_617  
PI\_617  
PI\_618  
PI\_618  
PI\_619  
PI\_619  
PI\_620  
PI\_621  
PI\_622  
PI\_623  
PI\_624  
PI\_625  
PI\_626  
PI\_627  
PI\_627  
PI\_628  
PI\_628  
PI\_629  
PI\_629  
PI\_630  
PI\_631  
PI\_632  
PI\_633  
PI\_634  
PI\_635  
PI\_636  
PI\_637  
PI\_637  
PI\_638  
PI\_638  
PI\_639  
PI\_639  
PI\_640  
PI\_641  
PI\_642  
PI\_643  
PI\_644  
PI\_645  
PI\_646  
PI\_647  
PI\_647  
PI\_648  
PI\_648  
PI\_649  
PI\_649  
PI\_650  
PI\_651  
PI\_652  
PI\_653  
PI\_654  
PI\_655  
PI\_656  
PI\_657  
PI\_657  
PI\_658  
PI\_658  
PI\_659  
PI\_659  
PI\_660  
PI\_661  
PI\_662  
PI\_663  
PI\_664  
PI\_665  
PI\_666  
PI\_667  
PI\_667  
PI\_668  
PI\_668  
PI\_669  
PI\_669  
PI\_670  
PI\_671  
PI\_672  
PI\_673  
PI\_674  
PI\_675  
PI\_676  
PI\_677  
PI\_677  
PI\_678  
PI\_678  
PI\_679  
PI\_679  
PI\_680  
PI\_681  
PI\_682  
PI\_683  
PI\_684  
PI\_685  
PI\_686  
PI\_687  
PI\_687  
PI\_688  
PI\_688  
PI\_689  
PI\_689  
PI\_690  
PI\_691  
PI\_692  
PI\_693  
PI\_694  
PI\_695  
PI\_696  
PI\_697  
PI\_697  
PI\_698  
PI\_698  
PI\_699  
PI\_699  
PI\_700  
PI\_701  
PI\_702  
PI\_703  
PI\_704  
PI\_705  
PI\_706  
PI\_707  
PI\_708  
PI\_708  
PI\_709  
PI\_709  
PI\_710  
PI\_711  
PI\_712  
PI\_713  
PI\_714  
PI\_715  
PI\_716  
PI\_716  
PI\_717  
PI\_717  
PI\_718  
PI\_718  
PI\_719  
PI\_719  
PI\_720  
PI\_721  
PI\_722  
PI\_723  
PI\_724  
PI\_725  
PI\_726  
PI\_727  
PI\_727  
PI\_728  
PI\_728  
PI\_729  
PI\_729  
PI\_730  
PI\_731  
PI\_732  
PI\_733  
PI\_734  
PI\_735  
PI\_736  
PI\_737  
PI\_737  
PI\_738  
PI\_738  
PI\_739  
PI\_739  
PI\_740  
PI\_741  
PI\_742  
PI\_743  
PI\_744  
PI\_745  
PI\_746  
PI\_747  
PI\_747  
PI\_748  
PI\_748  
PI\_749  
PI\_749  
PI\_750  
PI\_751  
PI\_752  
PI\_753  
PI\_754  
PI\_755  
PI\_756  
PI\_757  
PI\_757  
PI\_758  
PI\_758  
PI\_759  
PI\_759  
PI\_760  
PI\_761  
PI\_762  
PI\_763  
PI\_764  
PI\_765  
PI\_766  
PI\_767  
PI\_767  
PI\_768  
PI\_768  
PI\_769  
PI\_769  
PI\_770  
PI\_771  
PI\_772  
PI\_773  
PI\_774  
PI\_775  
PI\_776  
PI\_777  
PI\_777  
PI\_778  
PI\_778  
PI\_779  
PI\_779  
PI\_780  
PI\_781  
PI\_782  
PI\_783  
PI\_784  
PI\_785  
PI\_786  
PI\_787  
PI\_787  
PI\_788  
PI\_788  
PI\_789  
PI\_789  
PI\_790  
PI\_791  
PI\_792  
PI\_793  
PI\_794  
PI\_795  
PI\_796  
PI\_797  
PI\_797  
PI\_798  
PI\_798  
PI\_799  
PI\_799  
PI\_800  
PI\_801  
PI\_802  
PI\_803  
PI\_804  
PI\_805  
PI\_806  
PI\_807  
PI\_808  
PI\_808  
PI\_809  
PI\_809  
PI\_810  
PI\_811  
PI\_812  
PI\_813  
PI\_814  
PI\_815  
PI\_816  
PI\_817  
PI\_817  
PI\_818  
PI\_818  
PI\_819  
PI\_819  
PI\_820  
PI\_821  
PI\_822  
PI\_823  
PI\_824  
PI\_825  
PI\_826  
PI\_827  
PI\_827  
PI\_828  
PI\_828  
PI\_829  
PI\_829  
PI\_830  
PI\_831  
PI\_832  
PI\_833  
PI\_834  
PI\_835  
PI\_836  
PI\_837  
PI\_837  
PI\_838  
PI\_838  
PI\_839  
PI\_839  
PI\_840  
PI\_841  
PI\_842  
PI\_843  
PI\_844  
PI\_845  
PI\_846  
PI\_847  
PI\_847  
PI\_848  
PI\_848  
PI\_849  
PI\_849  
PI\_850  
PI\_851  
PI\_852  
PI\_853  
PI\_854  
PI\_855  
PI\_856  
PI\_857  
PI\_857  
PI\_858  
PI\_858  
PI\_859  
PI\_859  
PI\_860  
PI\_861  
PI\_862  
PI\_863  
PI\_864  
PI\_865  
PI\_866  
PI\_867  
PI\_867  
PI\_868  
PI\_868  
PI\_869  
PI\_869  
PI\_870  
PI\_871  
PI\_872  
PI\_873  
PI\_874  
PI\_875  
PI\_876  
PI\_877  
PI\_877  
PI\_878  
PI\_878  
PI\_879  
PI\_879  
PI\_880  
PI\_881  
PI\_882  
PI\_883  
PI\_884  
PI\_885  
PI\_886  
PI\_887  
PI\_887  
PI\_888  
PI\_888  
PI\_889  
PI\_889  
PI\_890  
PI\_891  
PI\_892  
PI\_893  
PI\_894  
PI\_895  
PI\_896  
PI\_897  
PI\_897  
PI\_898  
PI\_898  
PI\_899  
PI\_899  
PI\_900  
PI\_901  
PI\_902  
PI\_903  
PI\_904  
PI\_905  
PI\_906  
PI\_907  
PI\_908  
PI\_908  
PI\_909  
PI\_909  
PI\_910

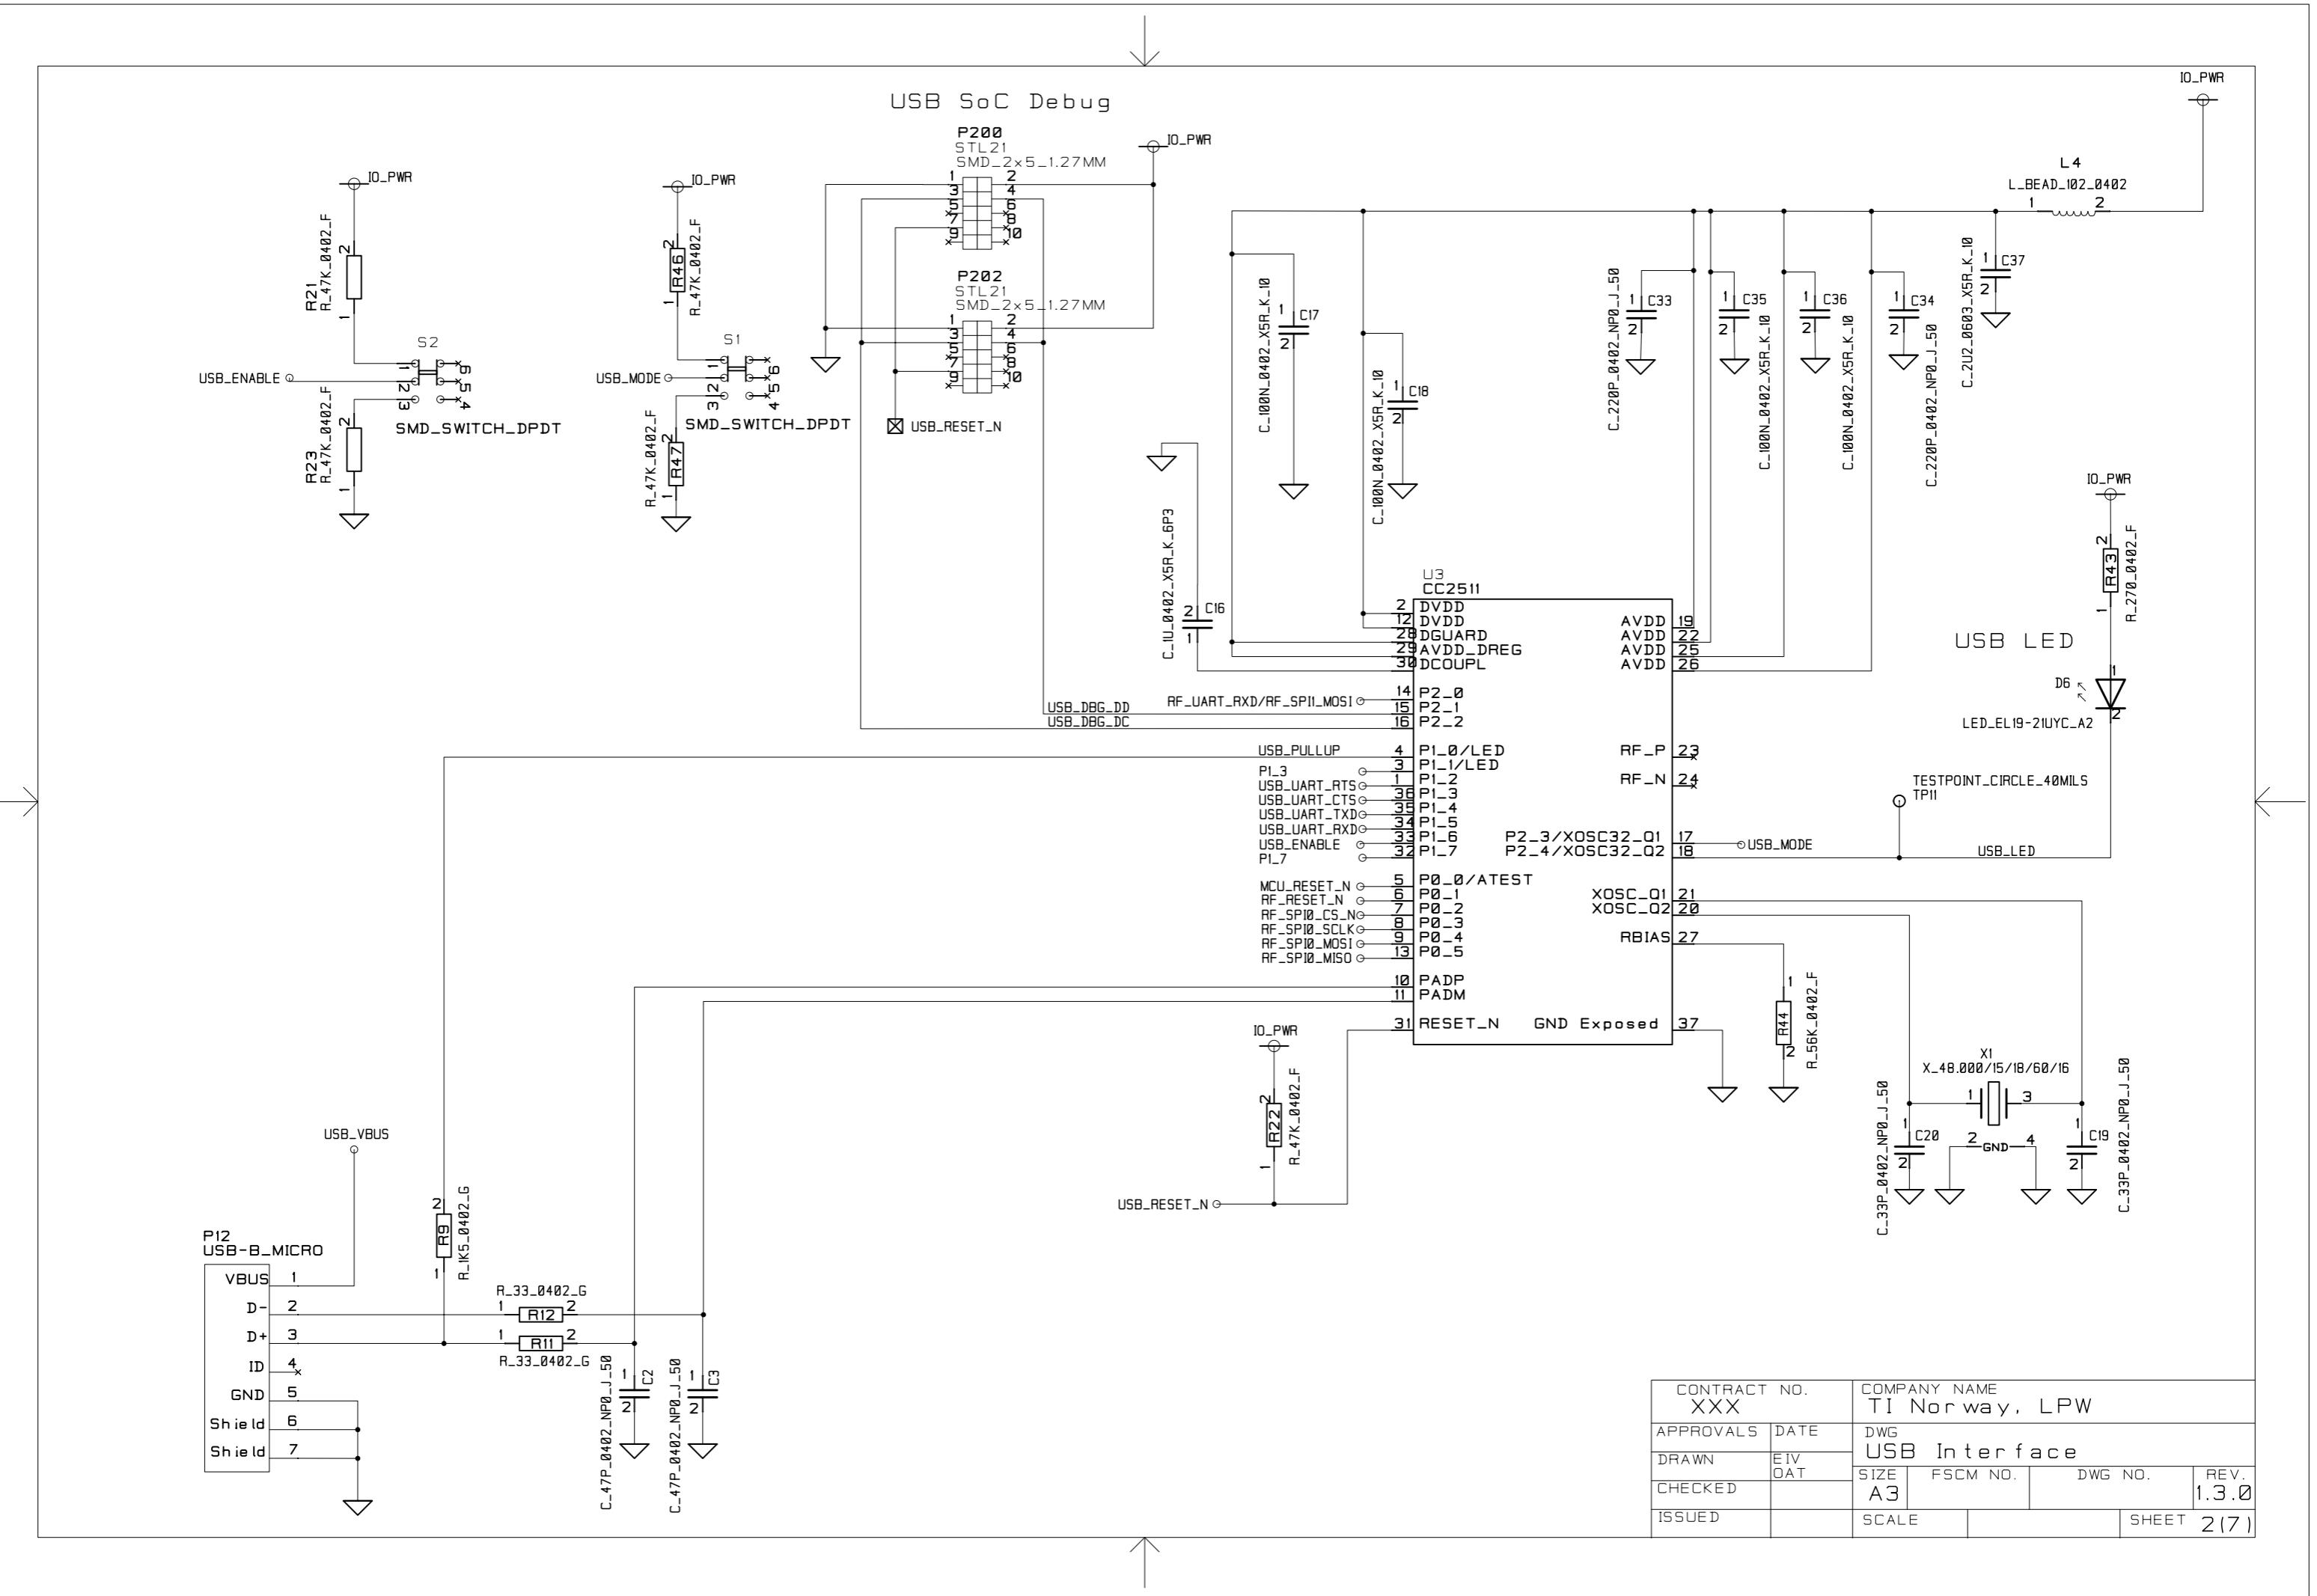

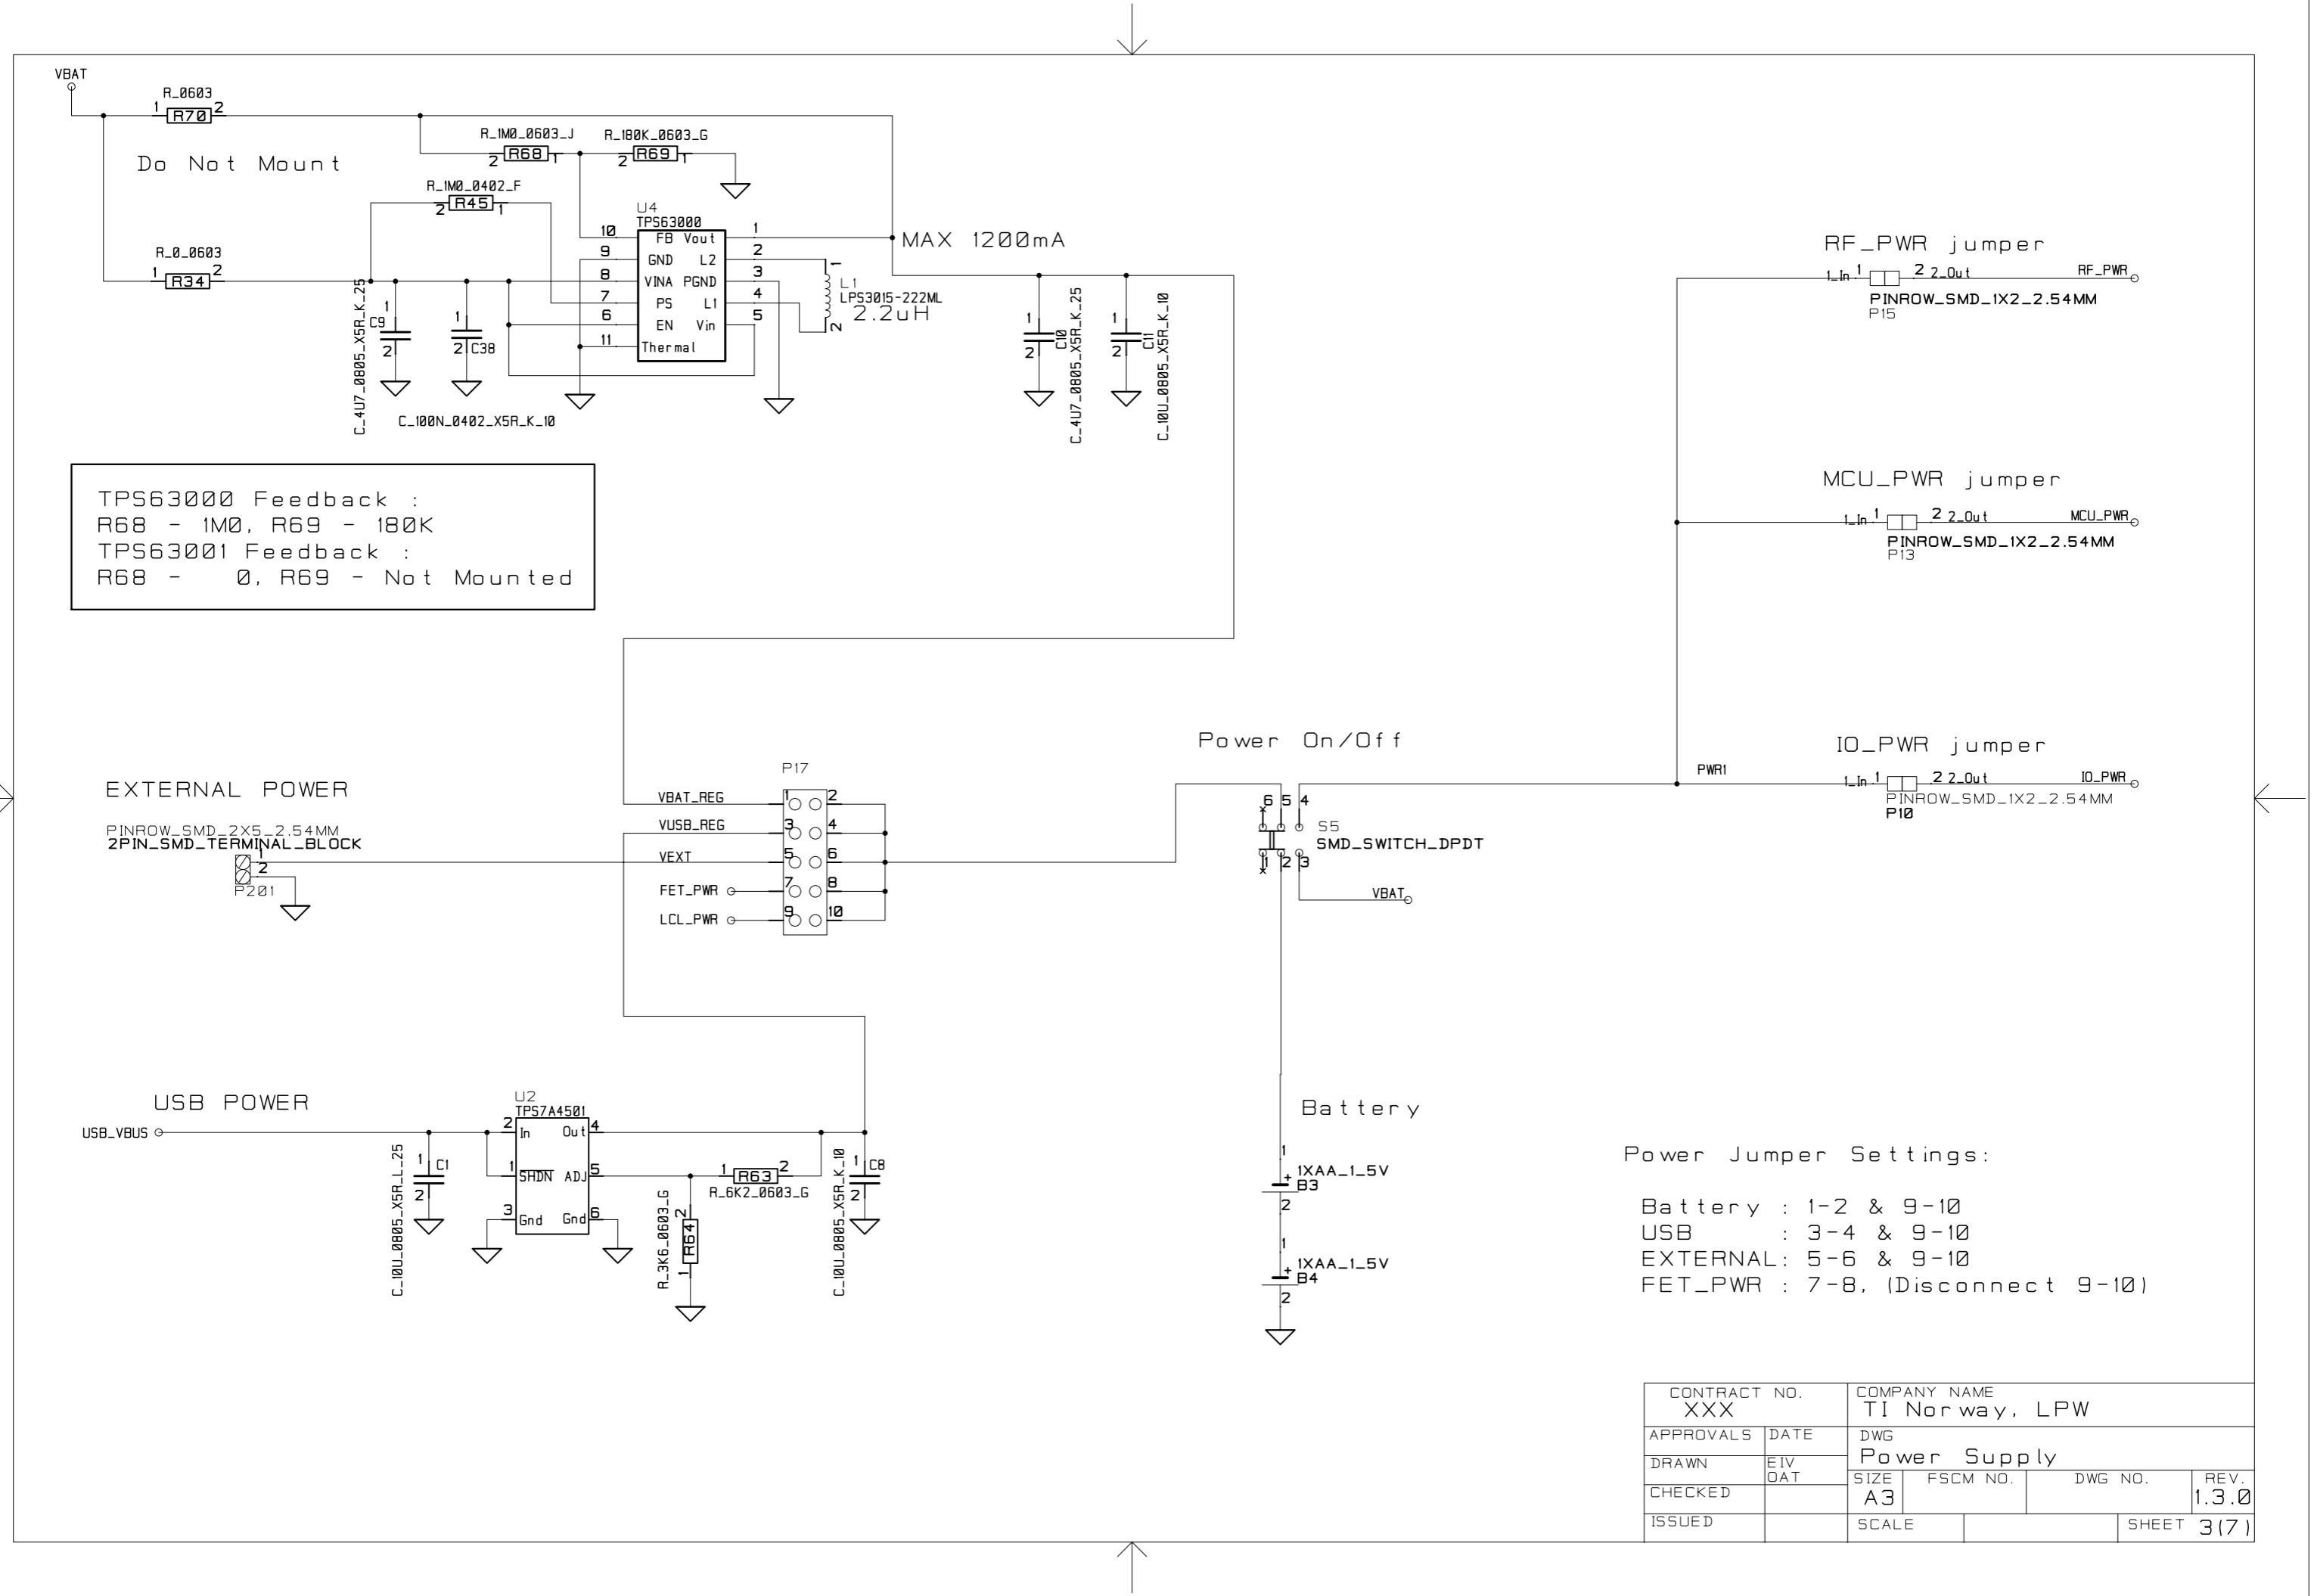

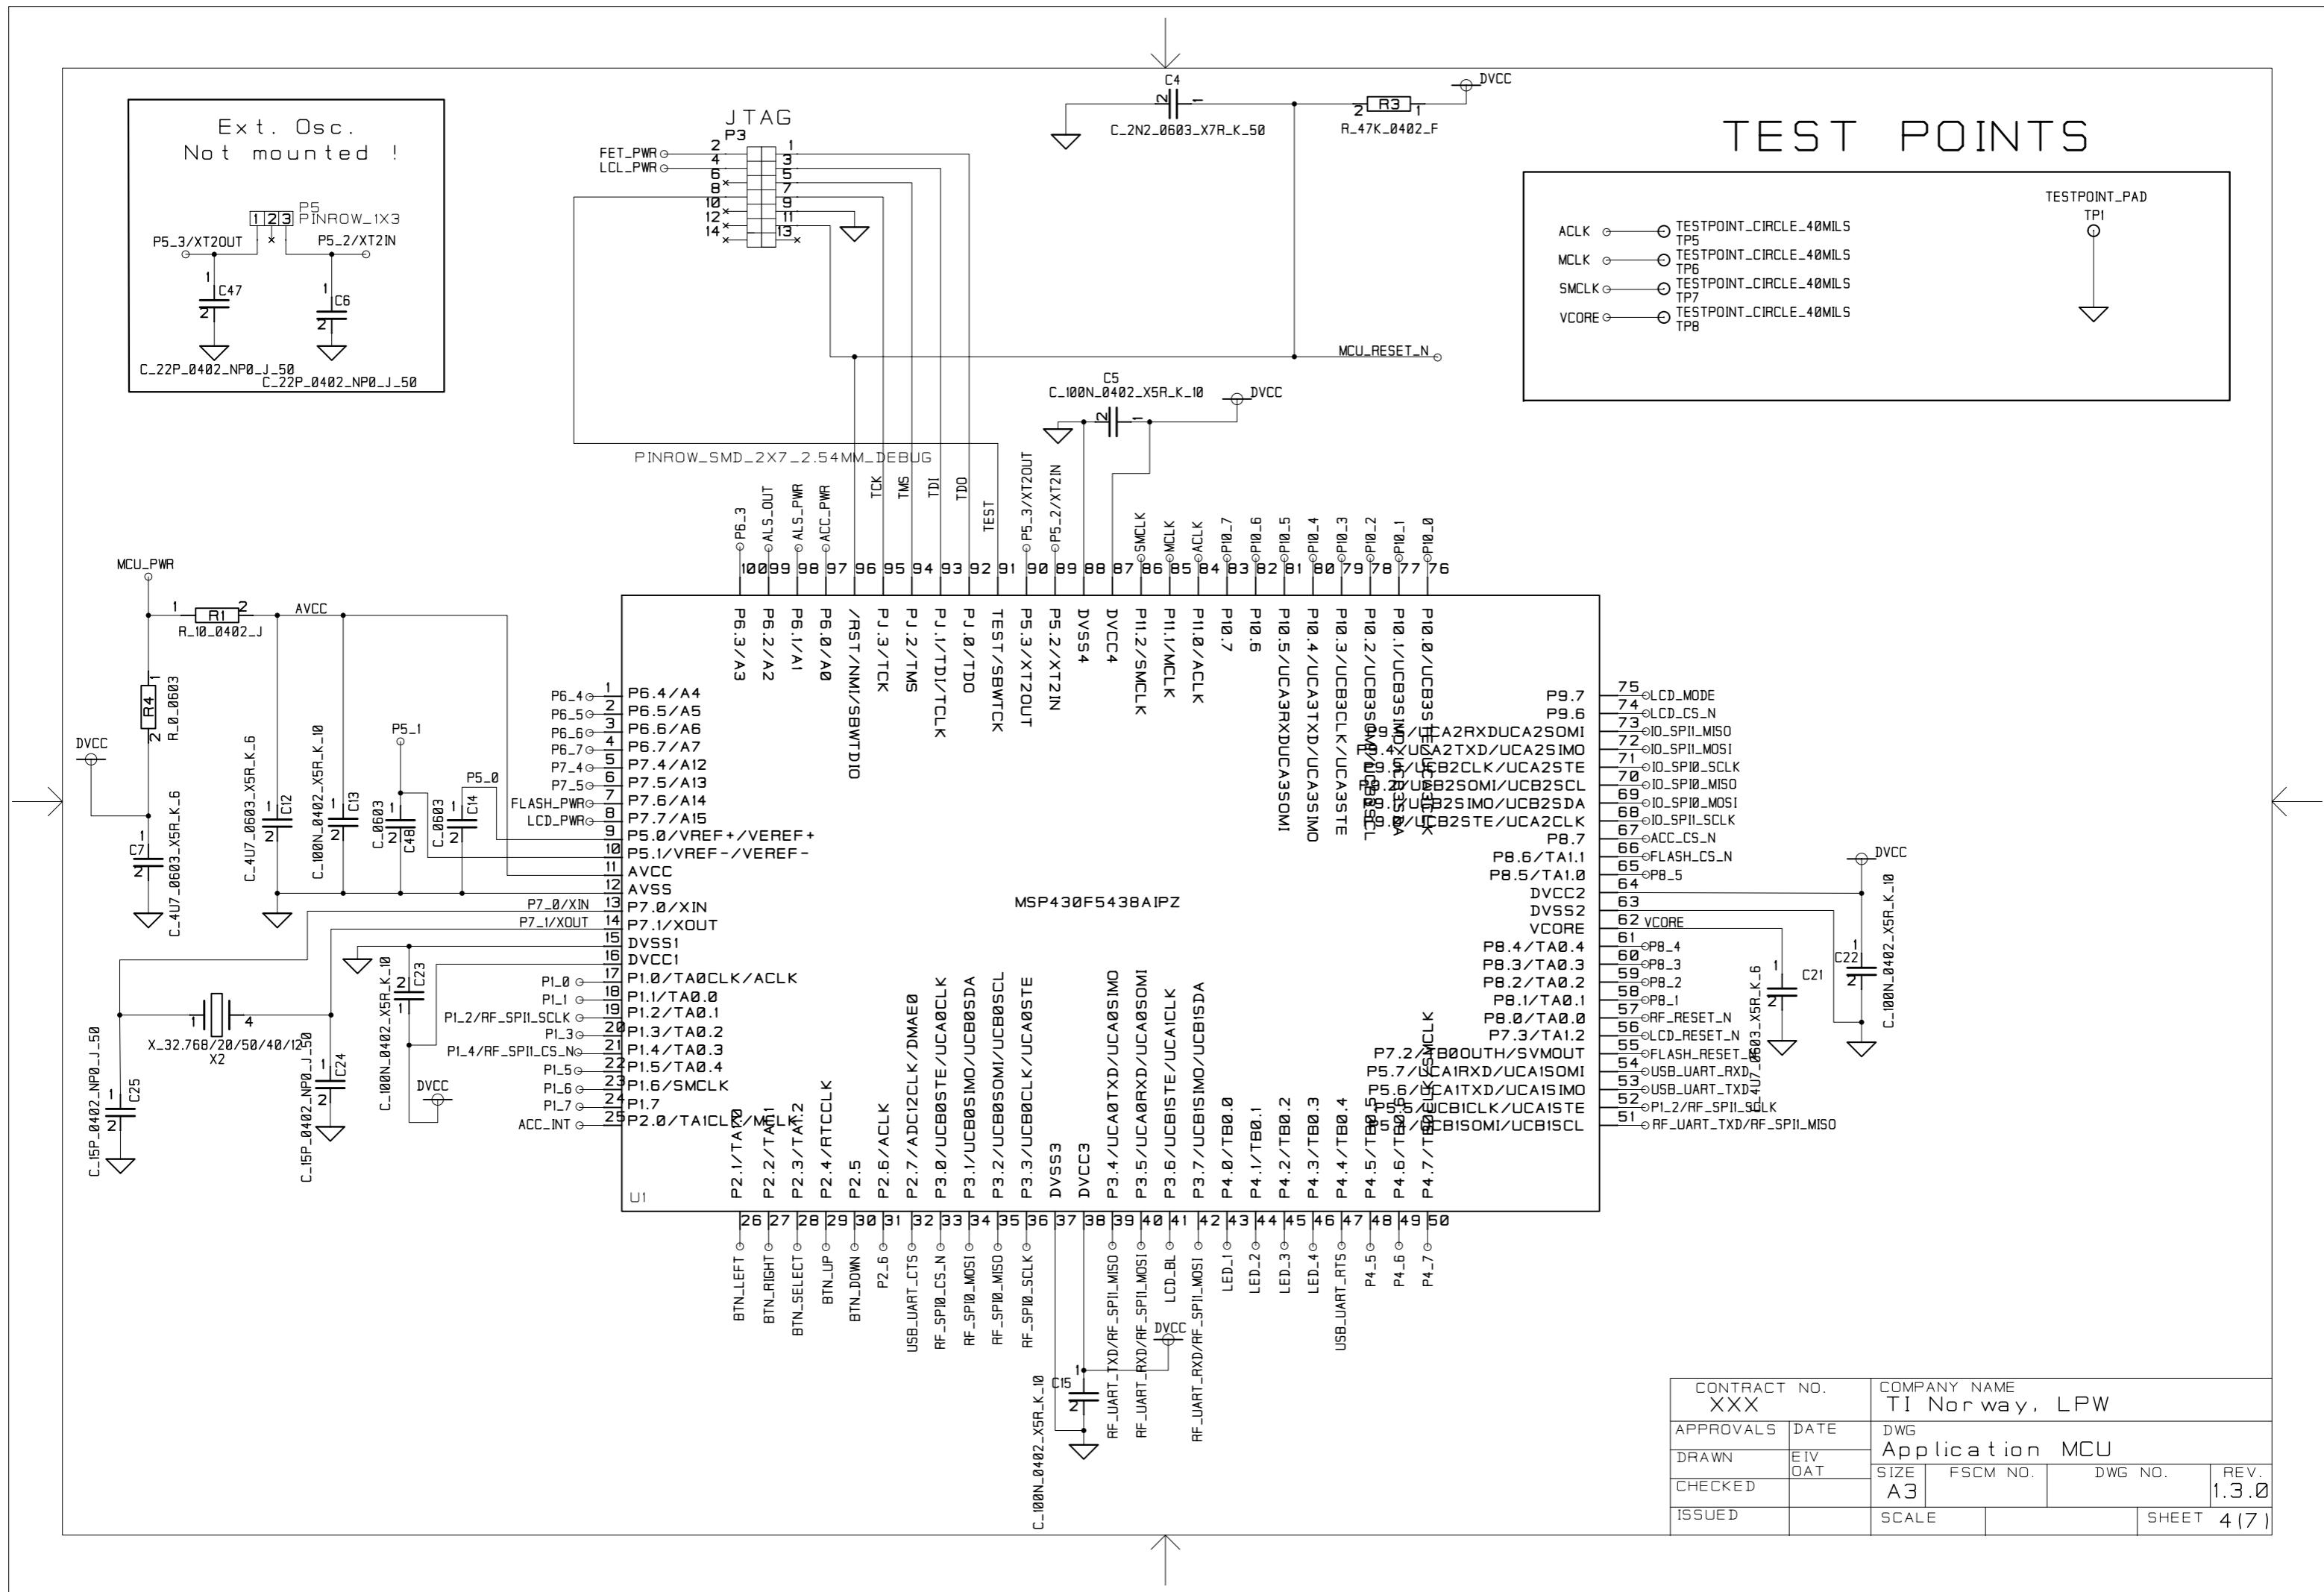

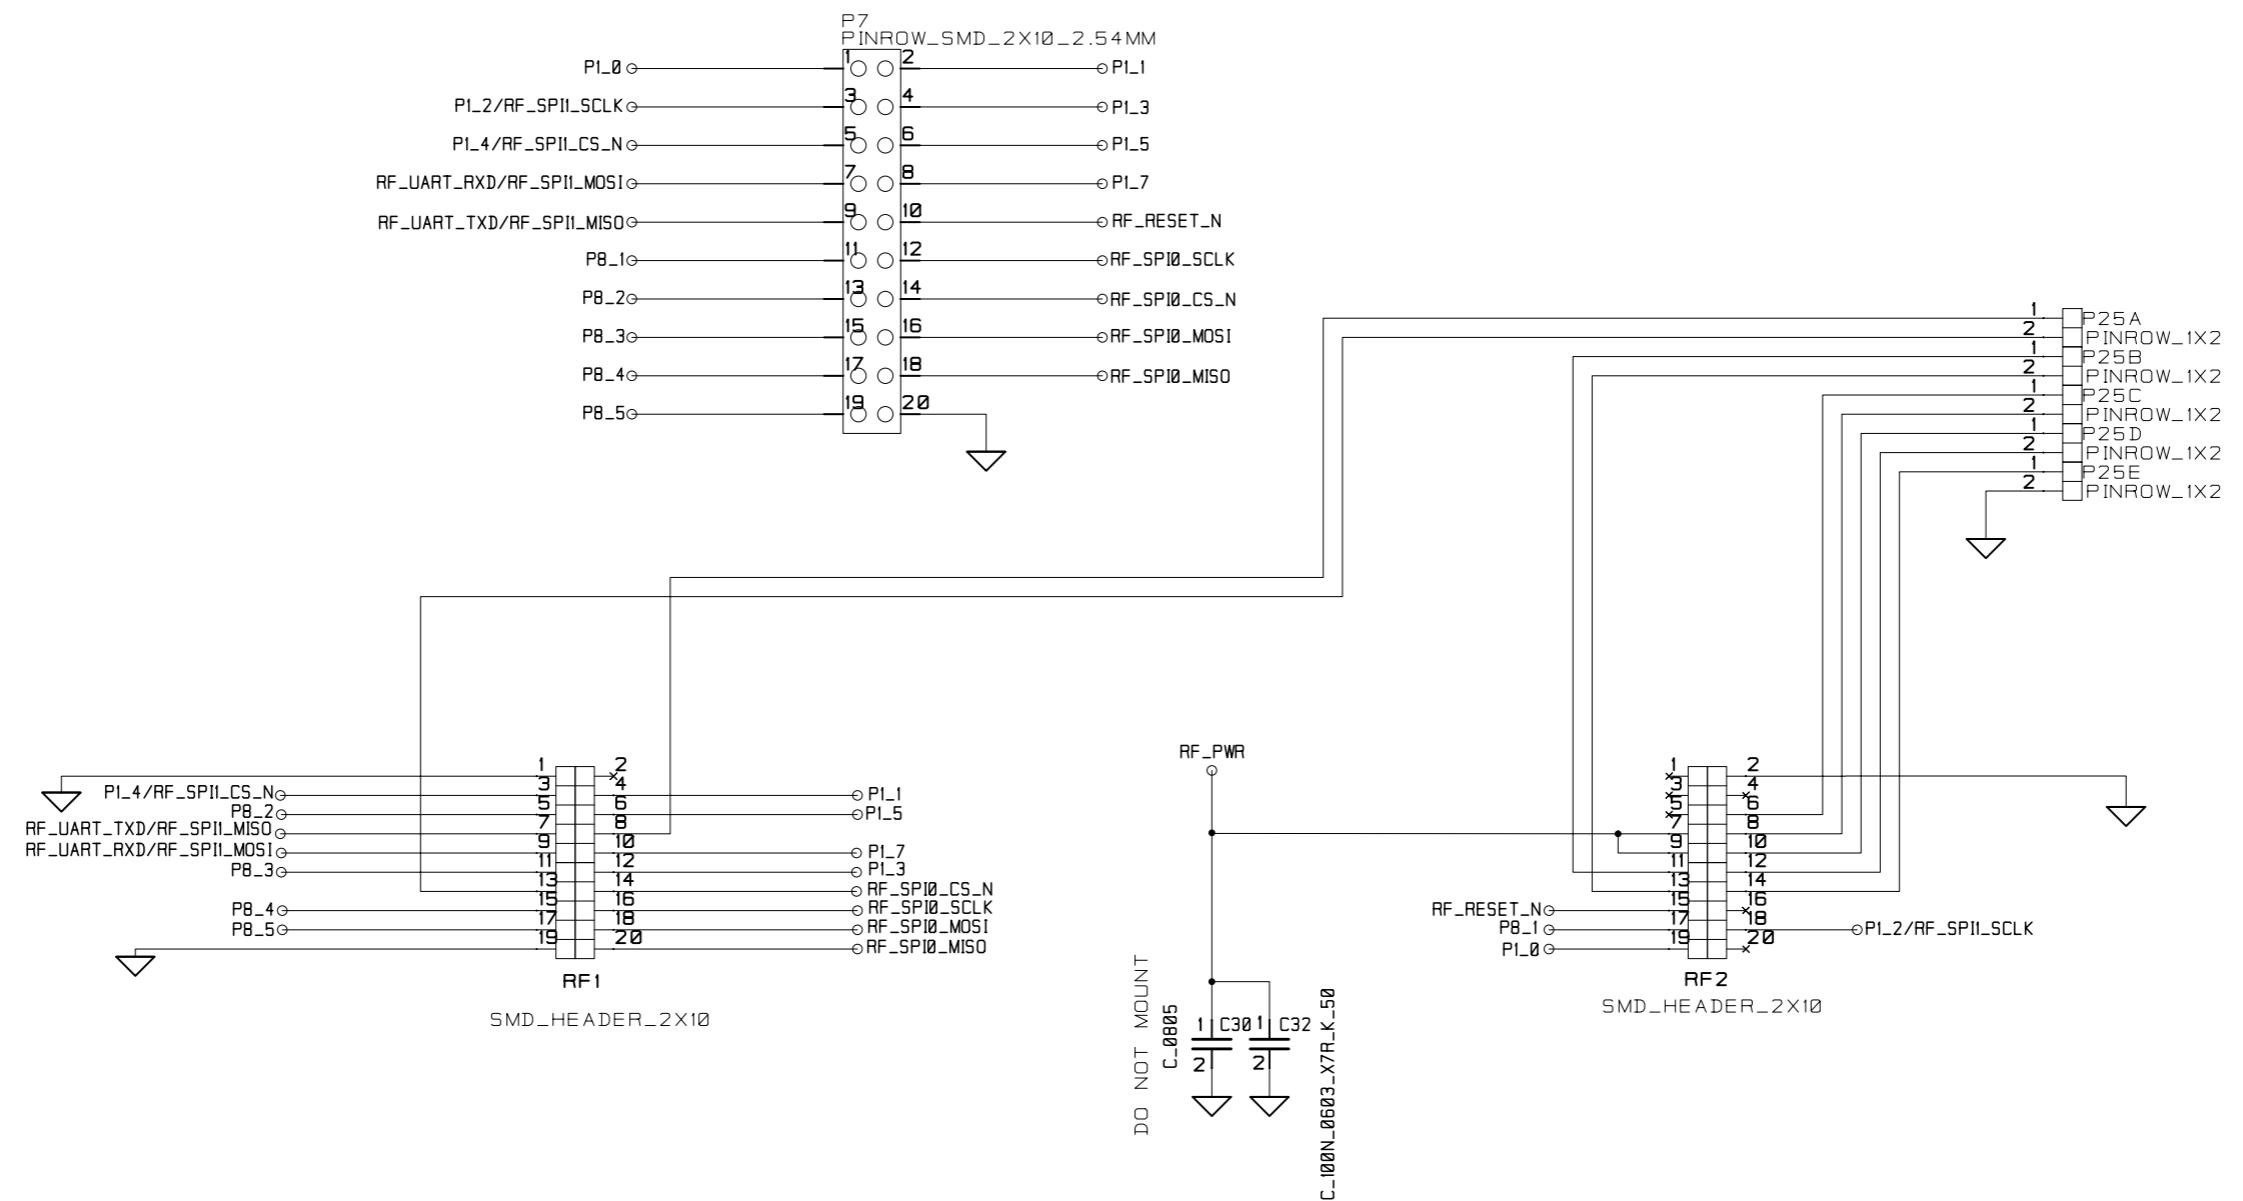


Connectors RF1 and RF2 are SMD,  
2x10 pin row headers with 0.05 spacing.  
P/N TFM-110-02-SM-D-A-K, produced by Samtec.

The matching connector used on RF evaluation modules are SFM-110-02-SM-D-A-K.


The distance between RF1 and RF2 is 1200 mils (center to center).

CONTRACT NO. XXX		COMPANY NAME TI Norway, LPW			
APPROVALS	DATE	DWG EM Interface			
DRAWN	EIV OAT	SIZE A3	FSCM NO.	DWG NO.	REV. 1.3.0
CHECKED		SCALE		SHEET 5(7)	
ISSUED					


## EXTERNAL FLASH

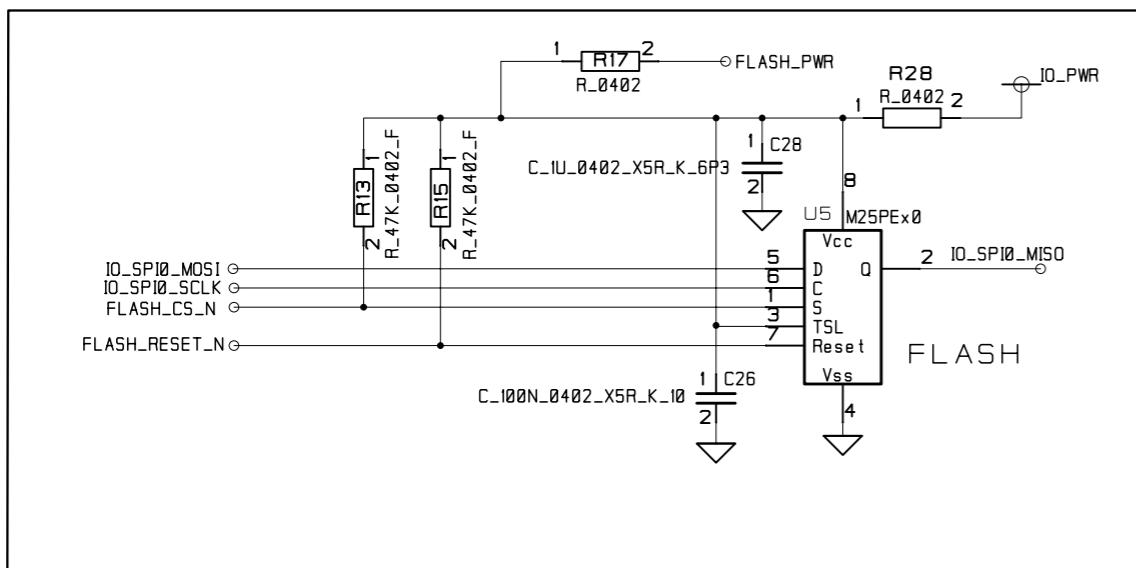


## LCD

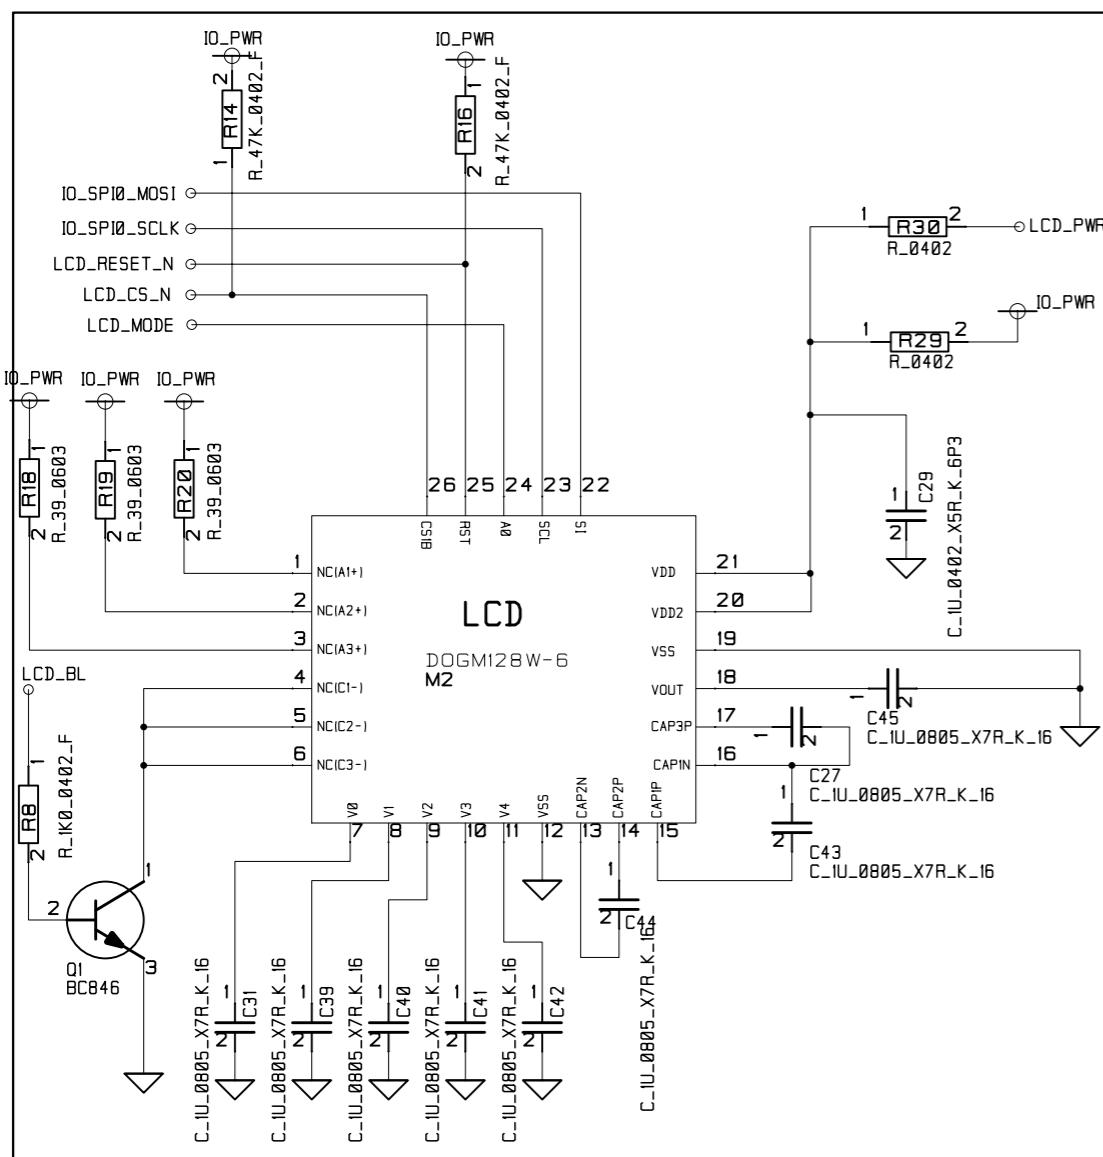


## ACCELEROMETER

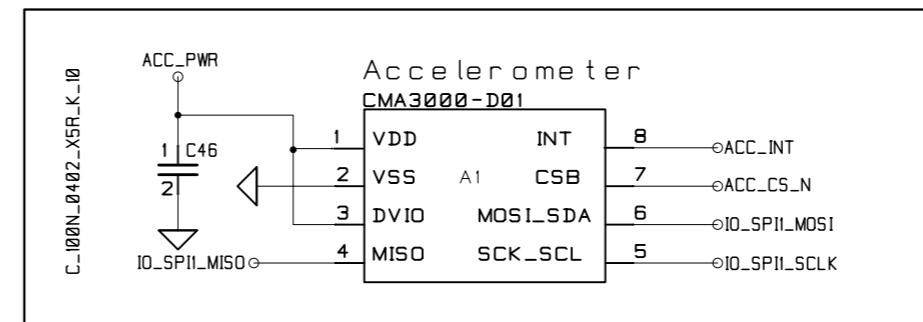

## AMBIENT LIGHT SENSOR

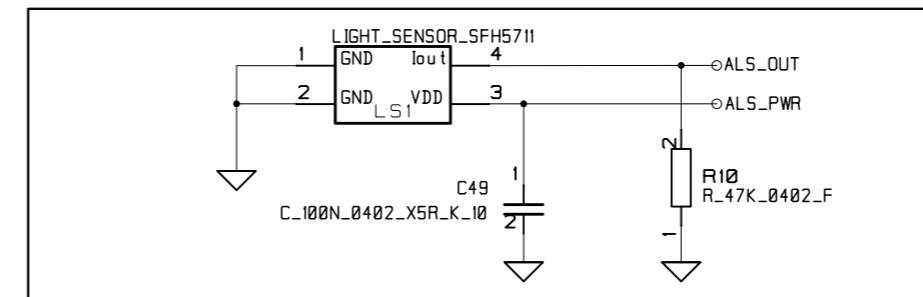


## RESET BUTTONS

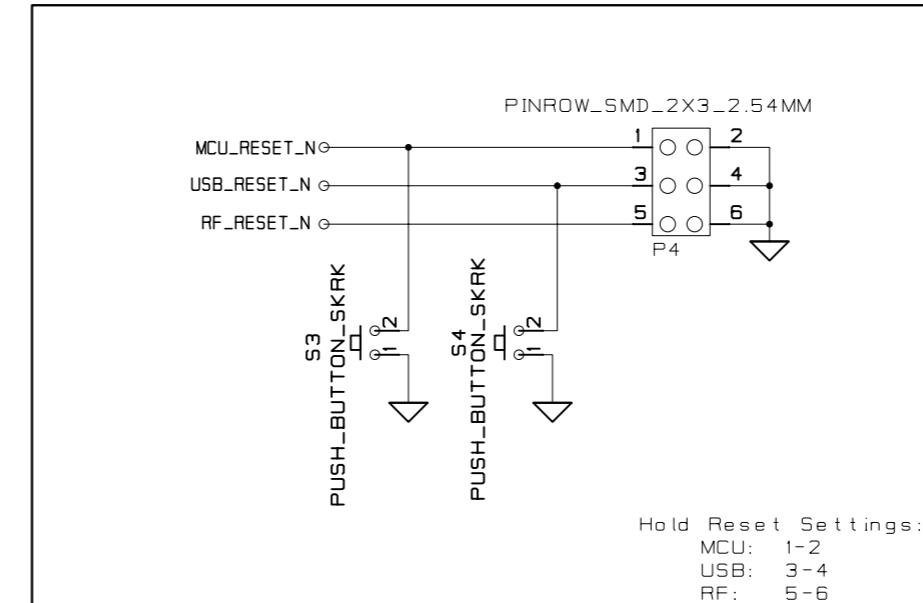


Q1,R8,R18,R19 and R20 Not Mounted when Back light module (EA LED55x46) is not used, by default there will be no back light module.

## LEDS

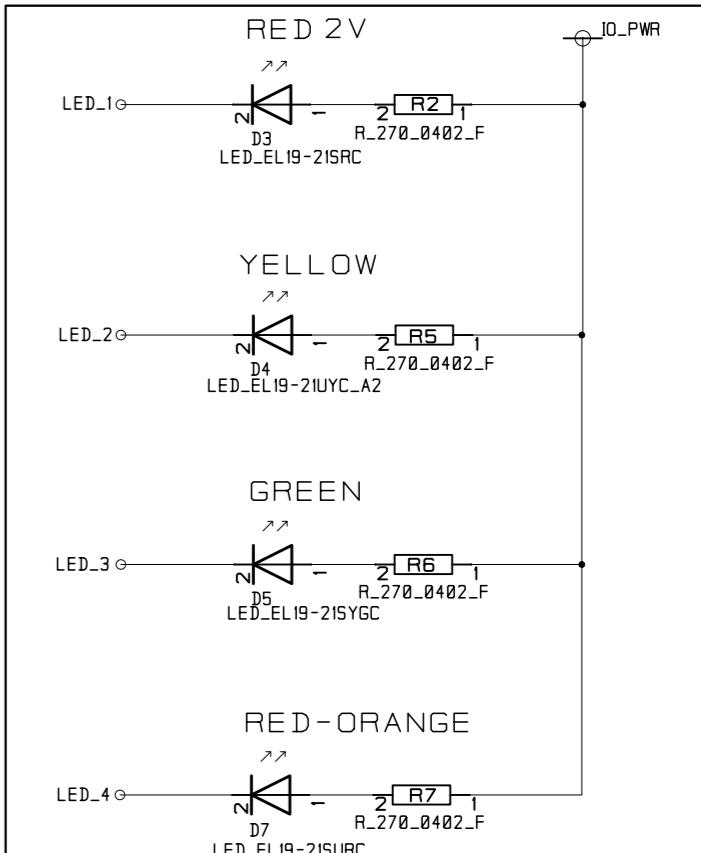


## BUTTONS

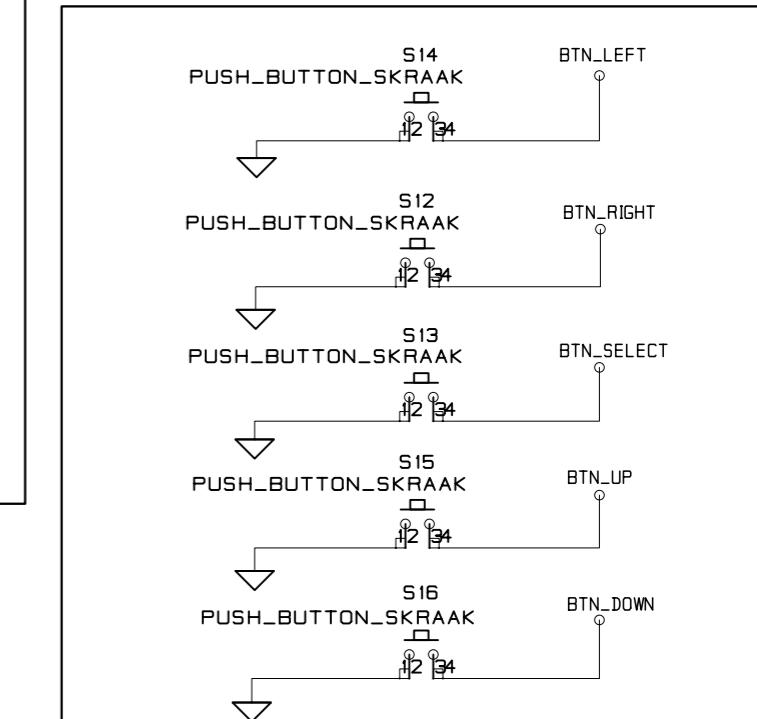


CONTRACT NO.		COMPANY NAME		
	XXX	TI Norway, LPW		
APPROVALS	DATE	DWG		
DRAWN	EIV	User Interface		
CHECKED	OAT	SIZE	FSCM NO.	DWG NO.
		A3		1.3.0
ISSUED		SCALE		SHEET 6(7)


## EXTERNAL I/O

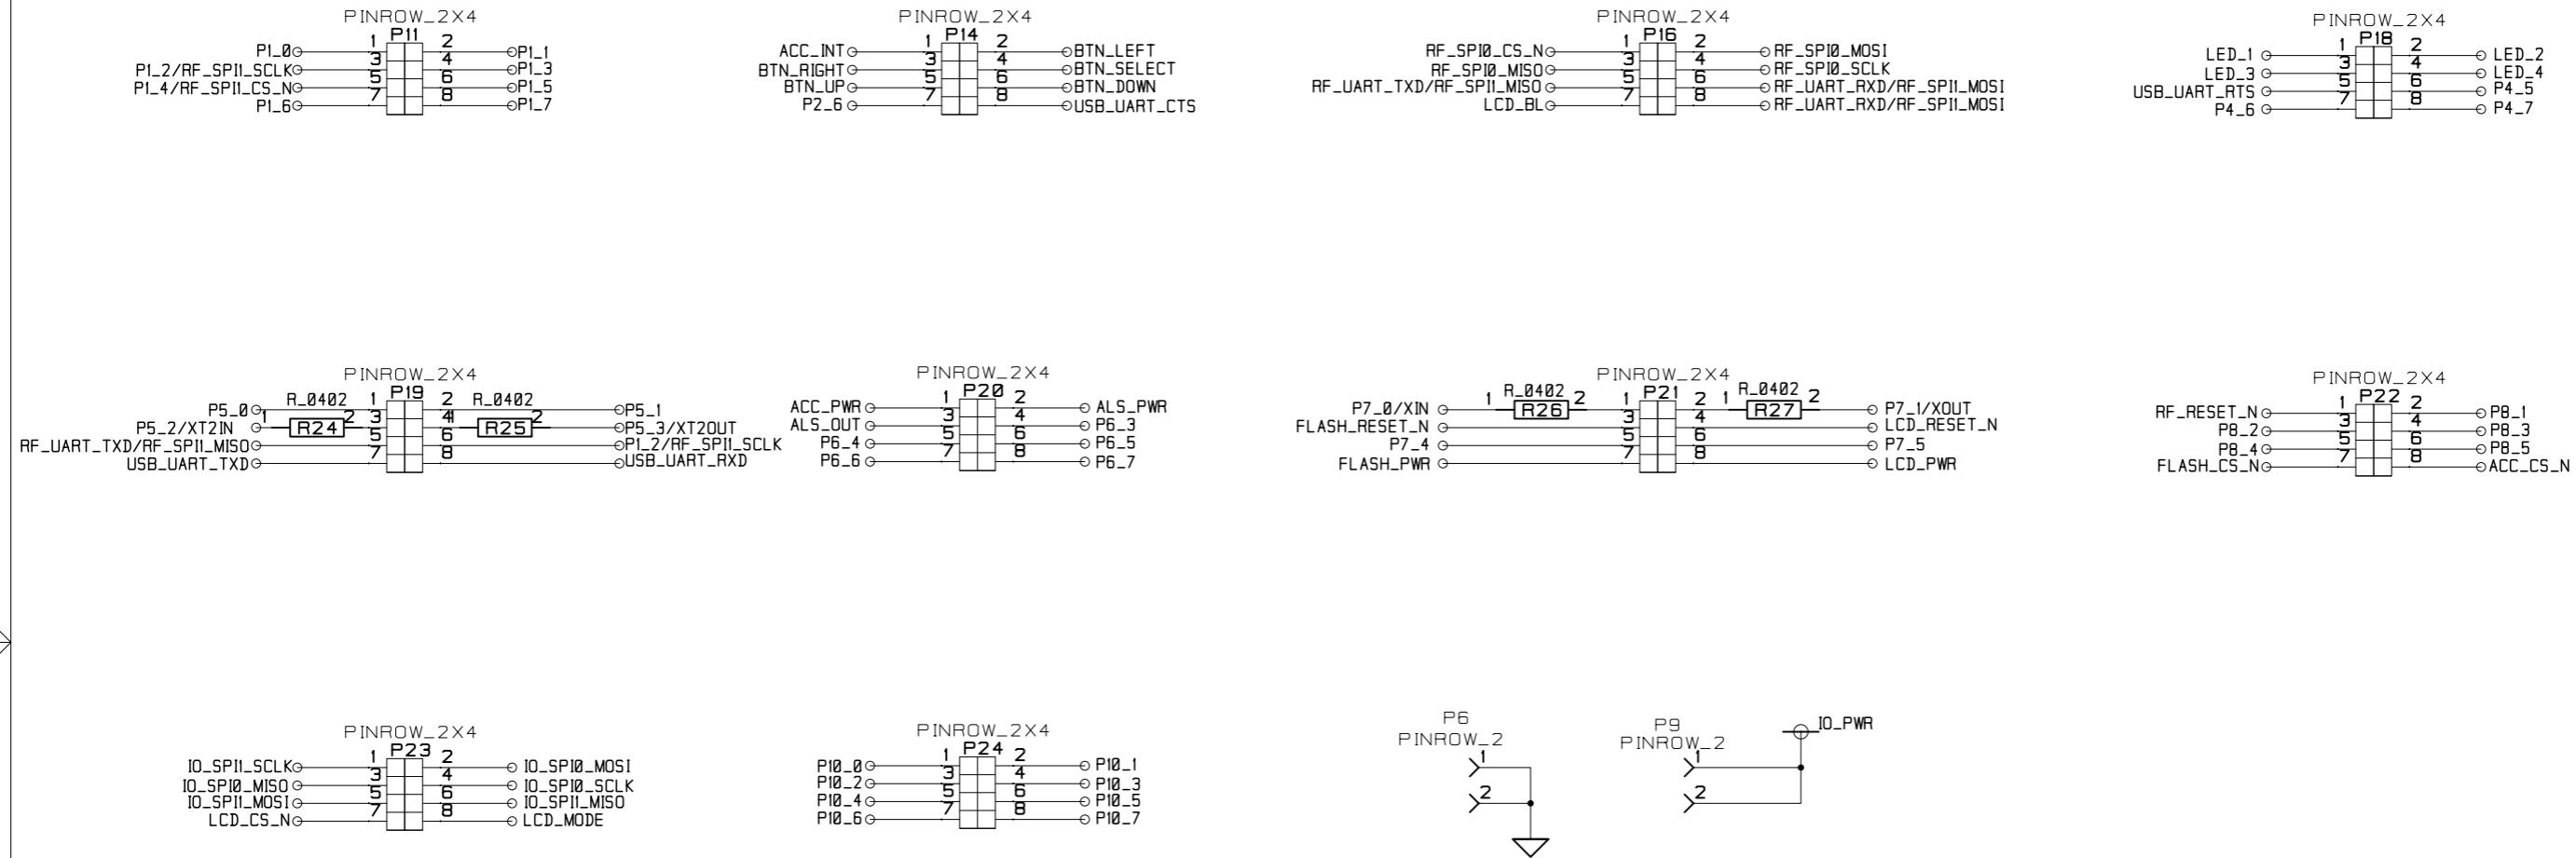



CONTRACT NO. XXX		COMPANY NAME TI Norway, LPW		
APPROVALS	DATE	DWG		
DRAWN	EIV DAT			
CHECKED		SIZE	FSCM NO.	DWG NO.
ISSUED		A3		REV. 1.3.0
		SCALE		SHEET 7 (7)


**Appendix B**  
**Schematics**  
**SmartRF TrxEB 1.5.0**

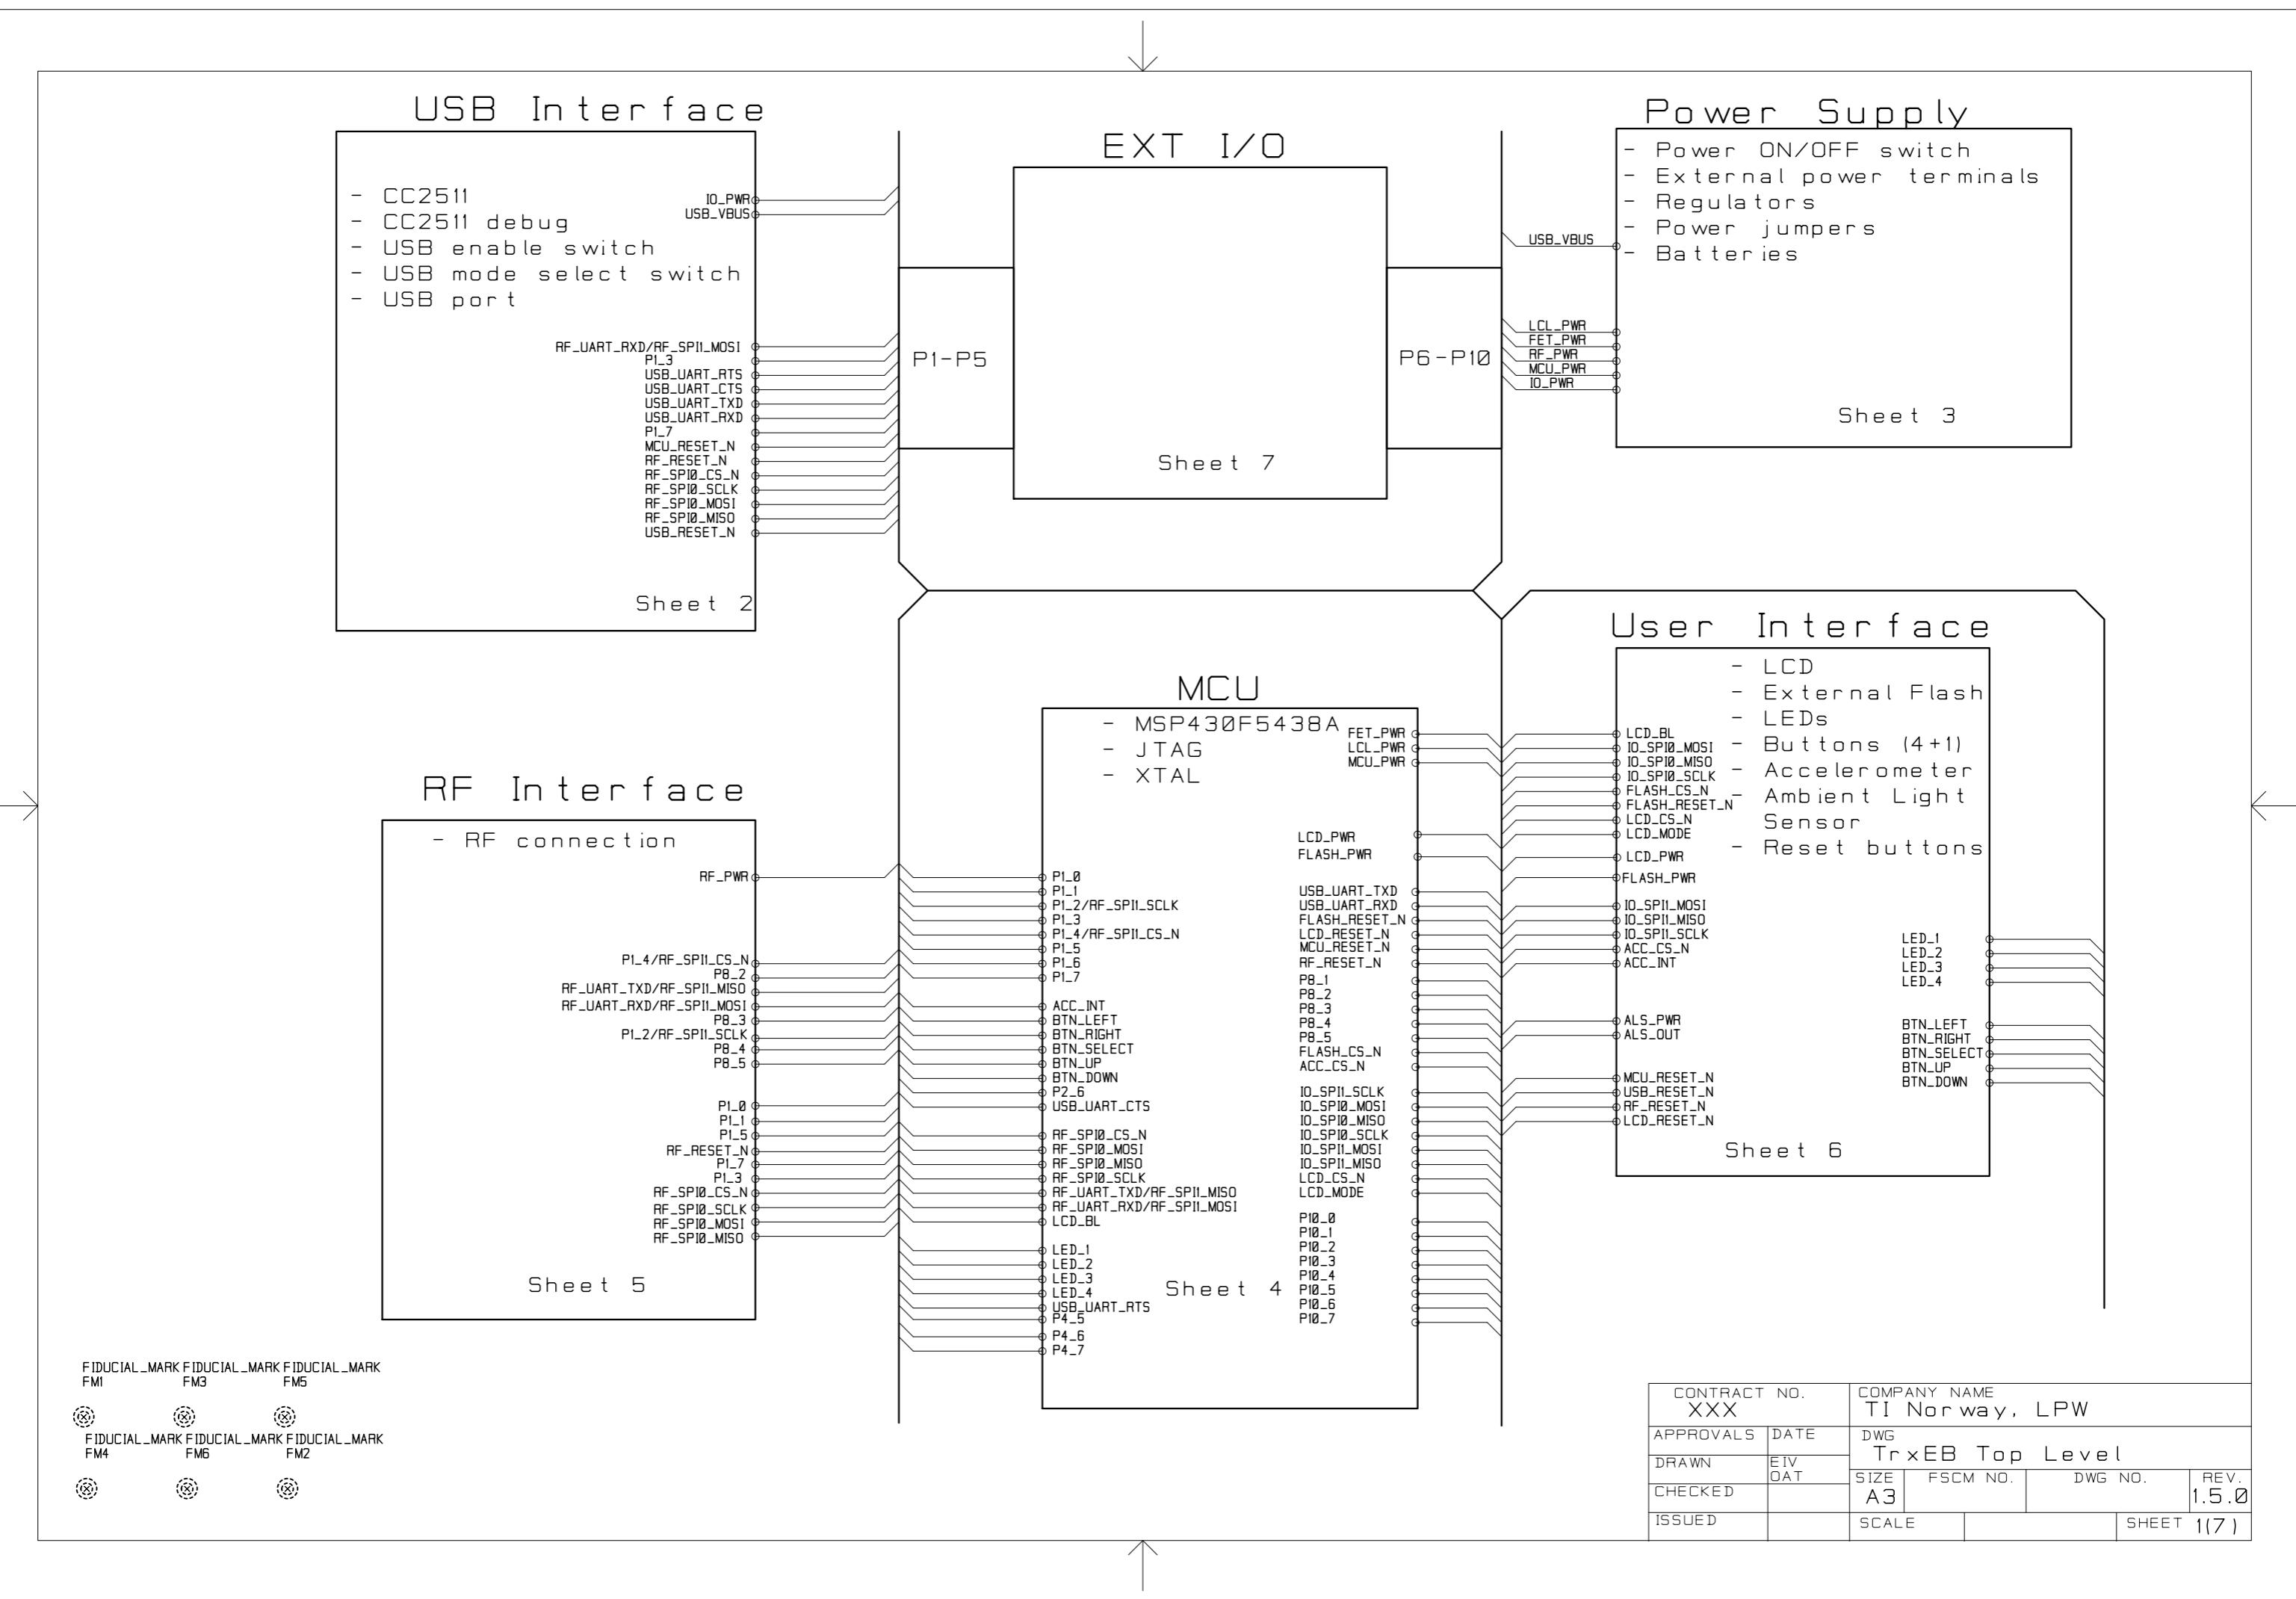

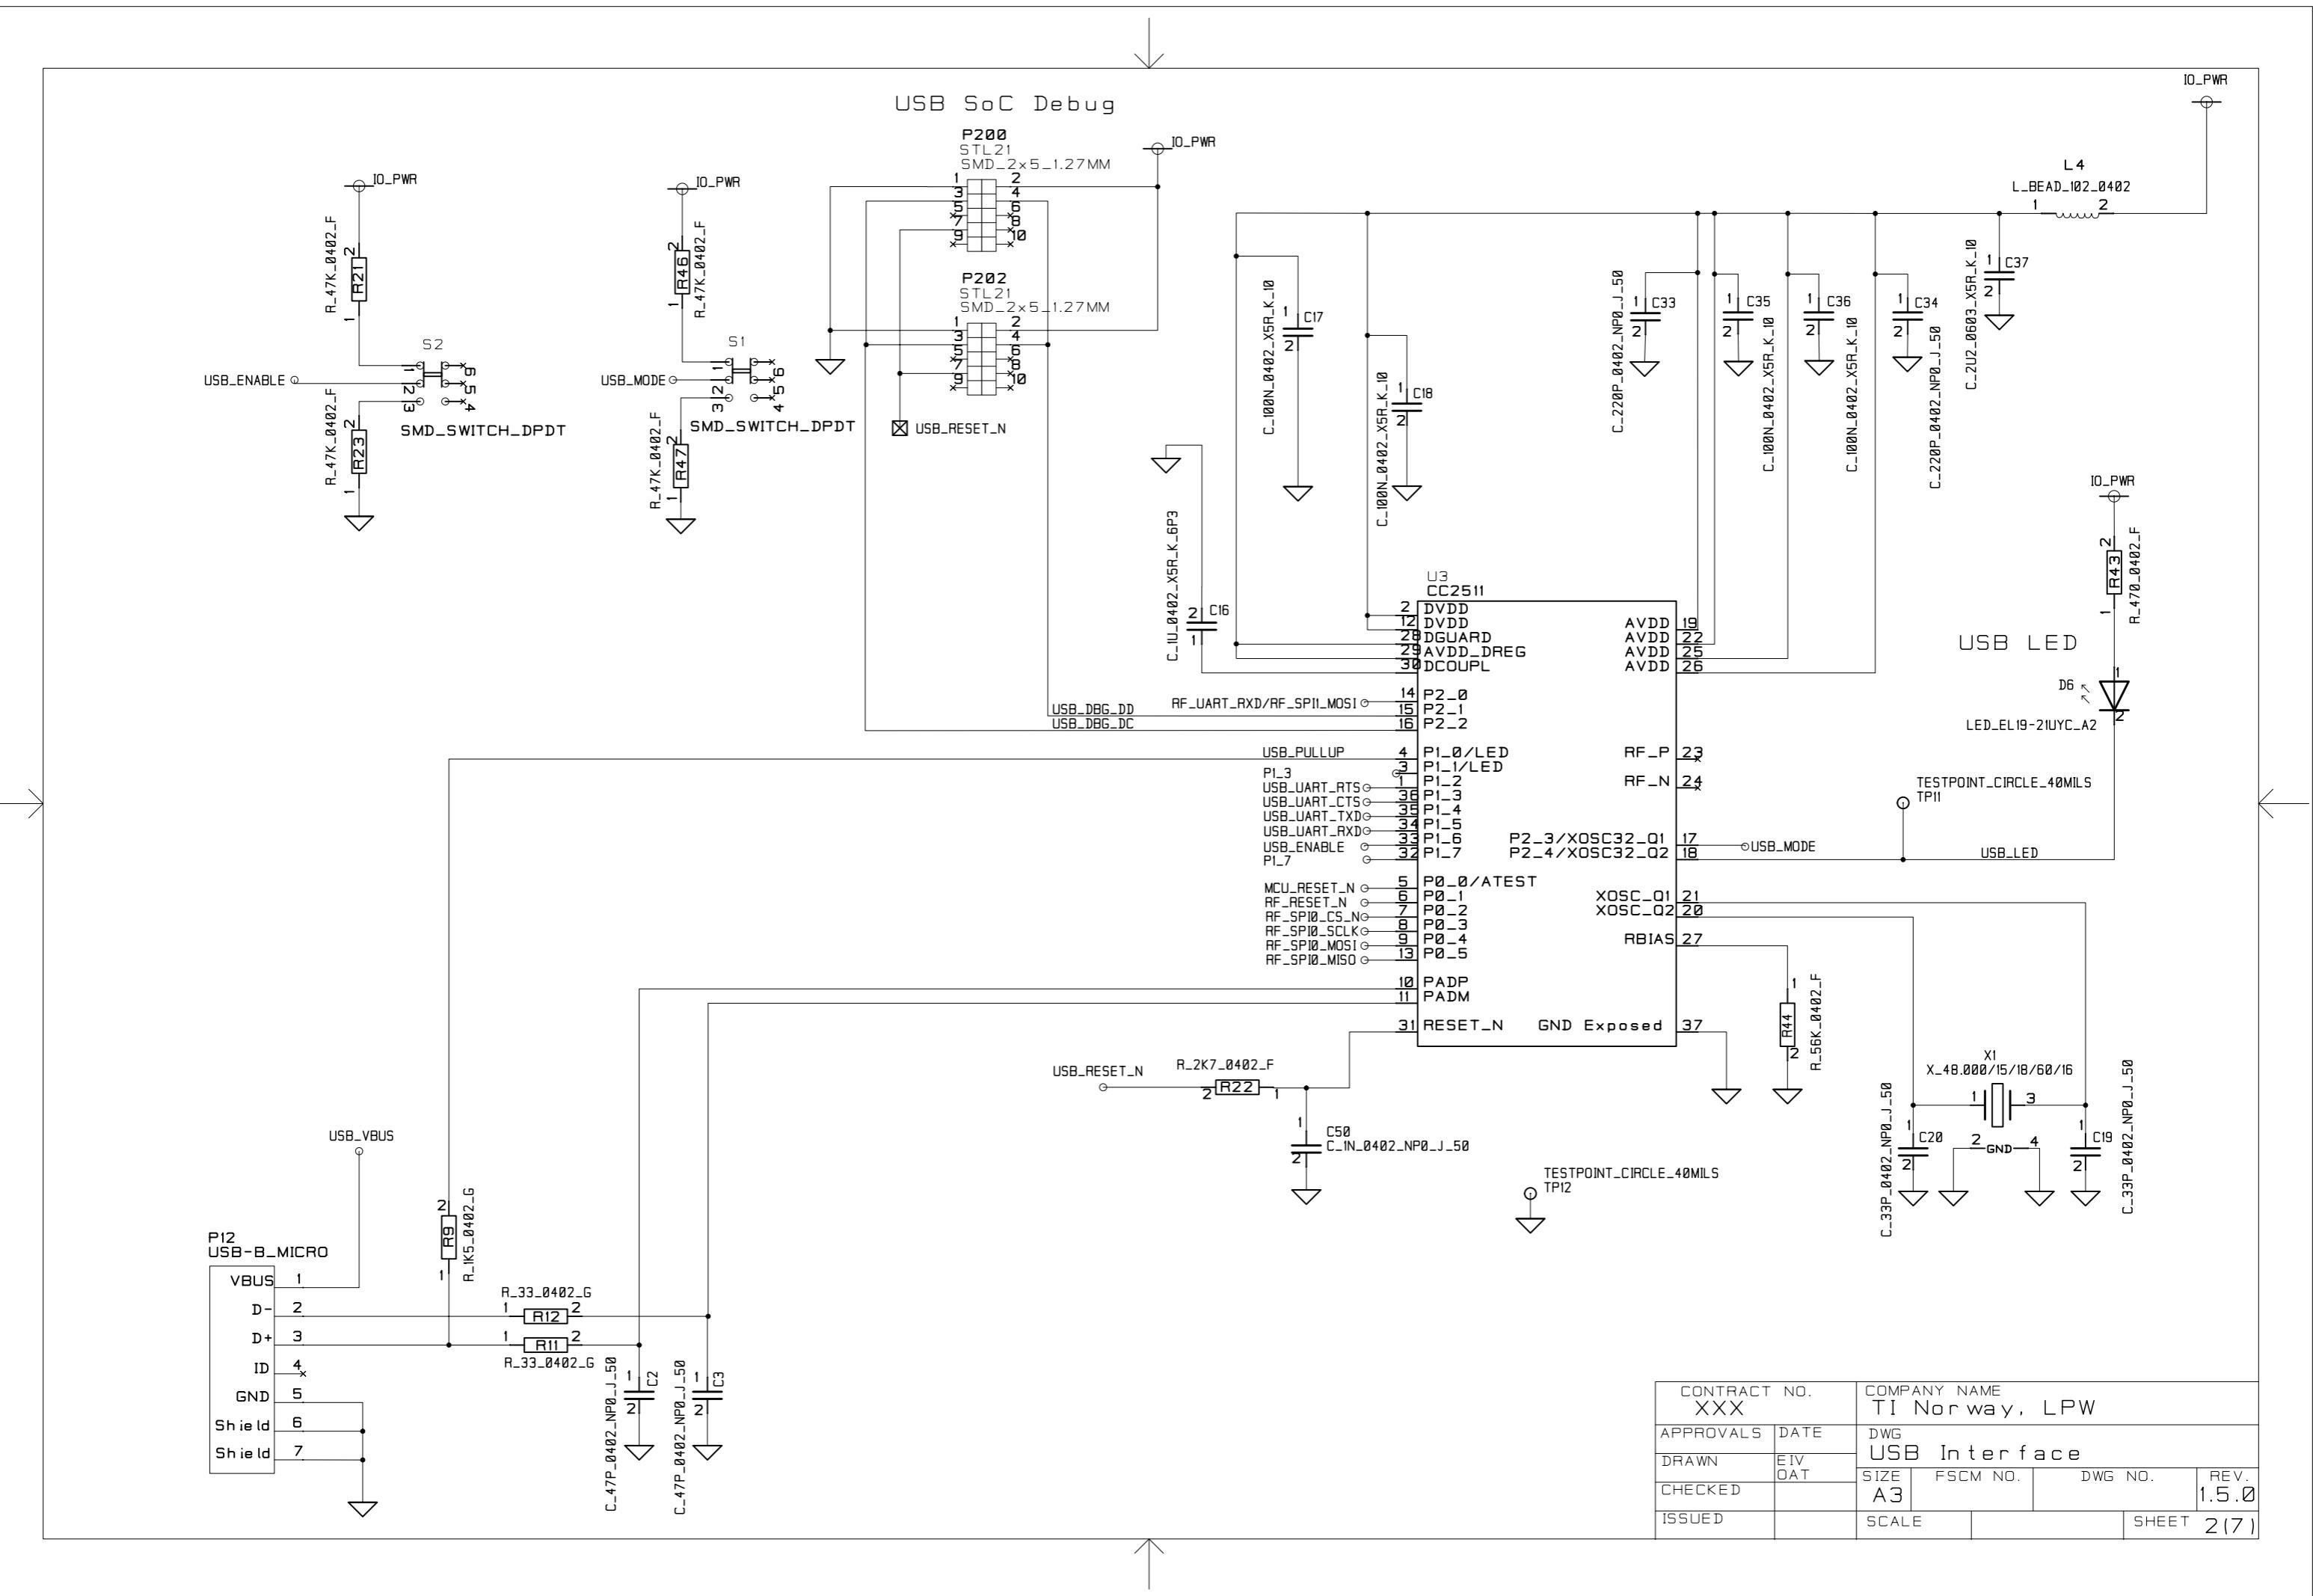

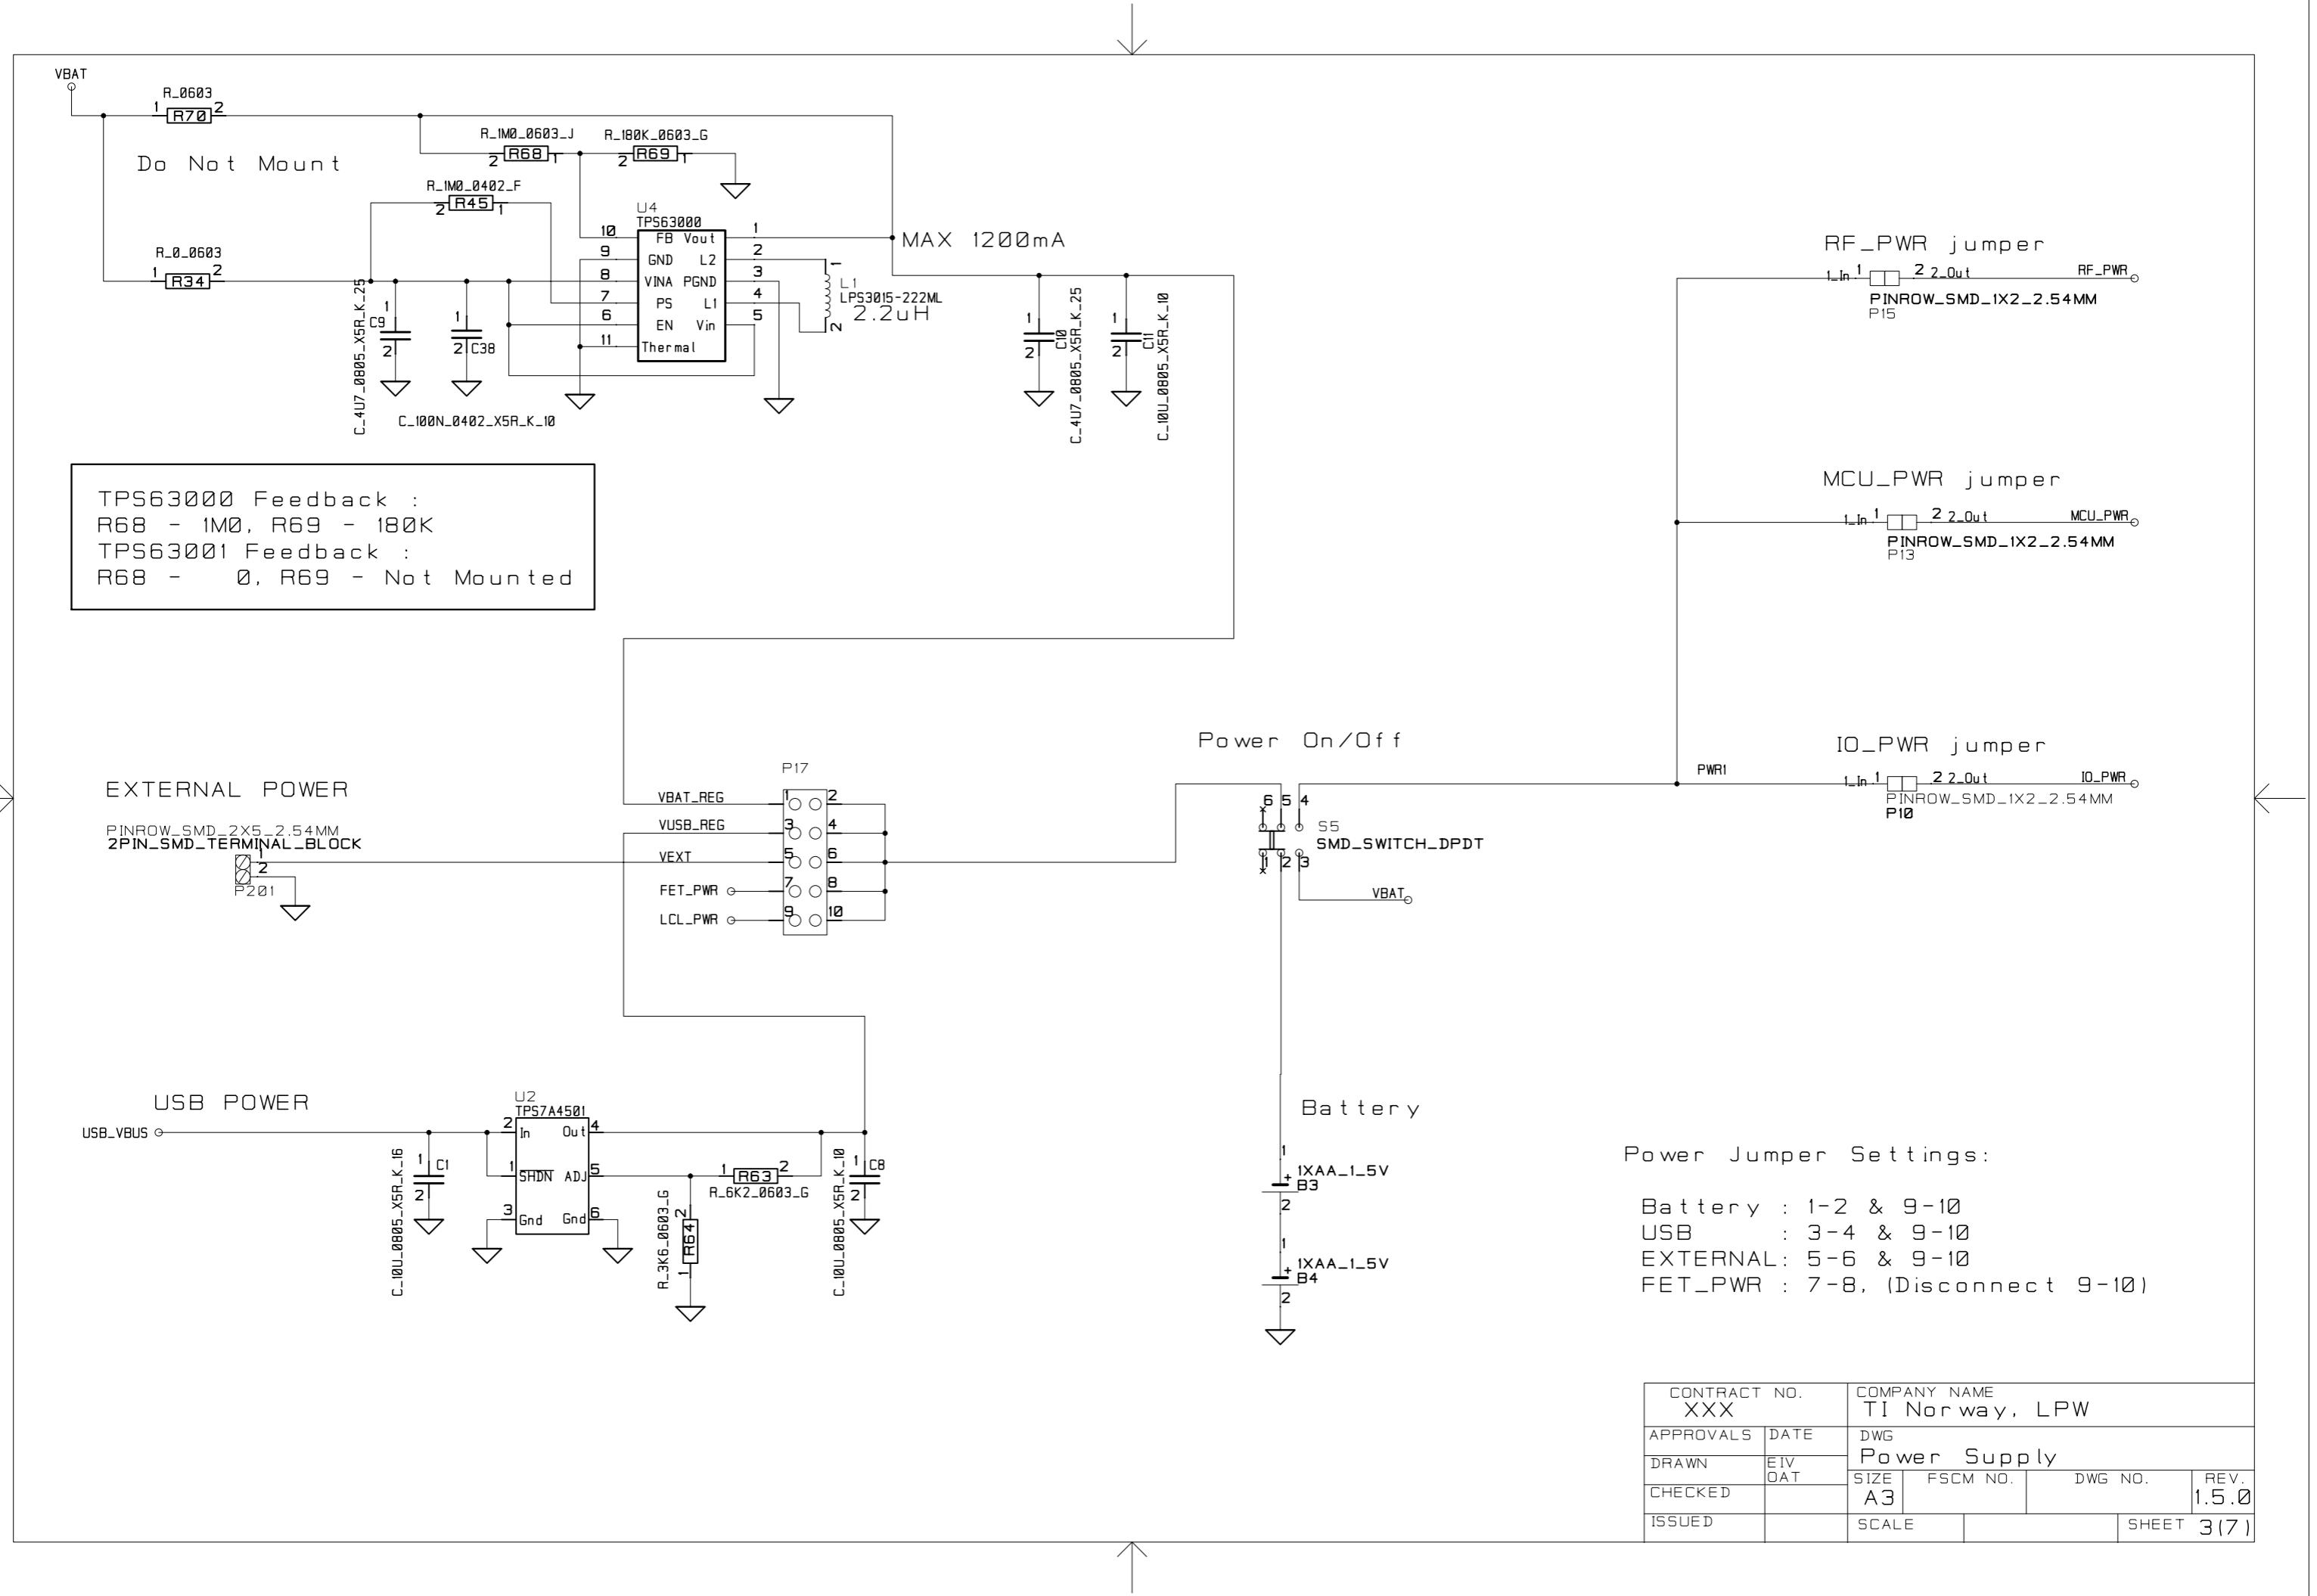

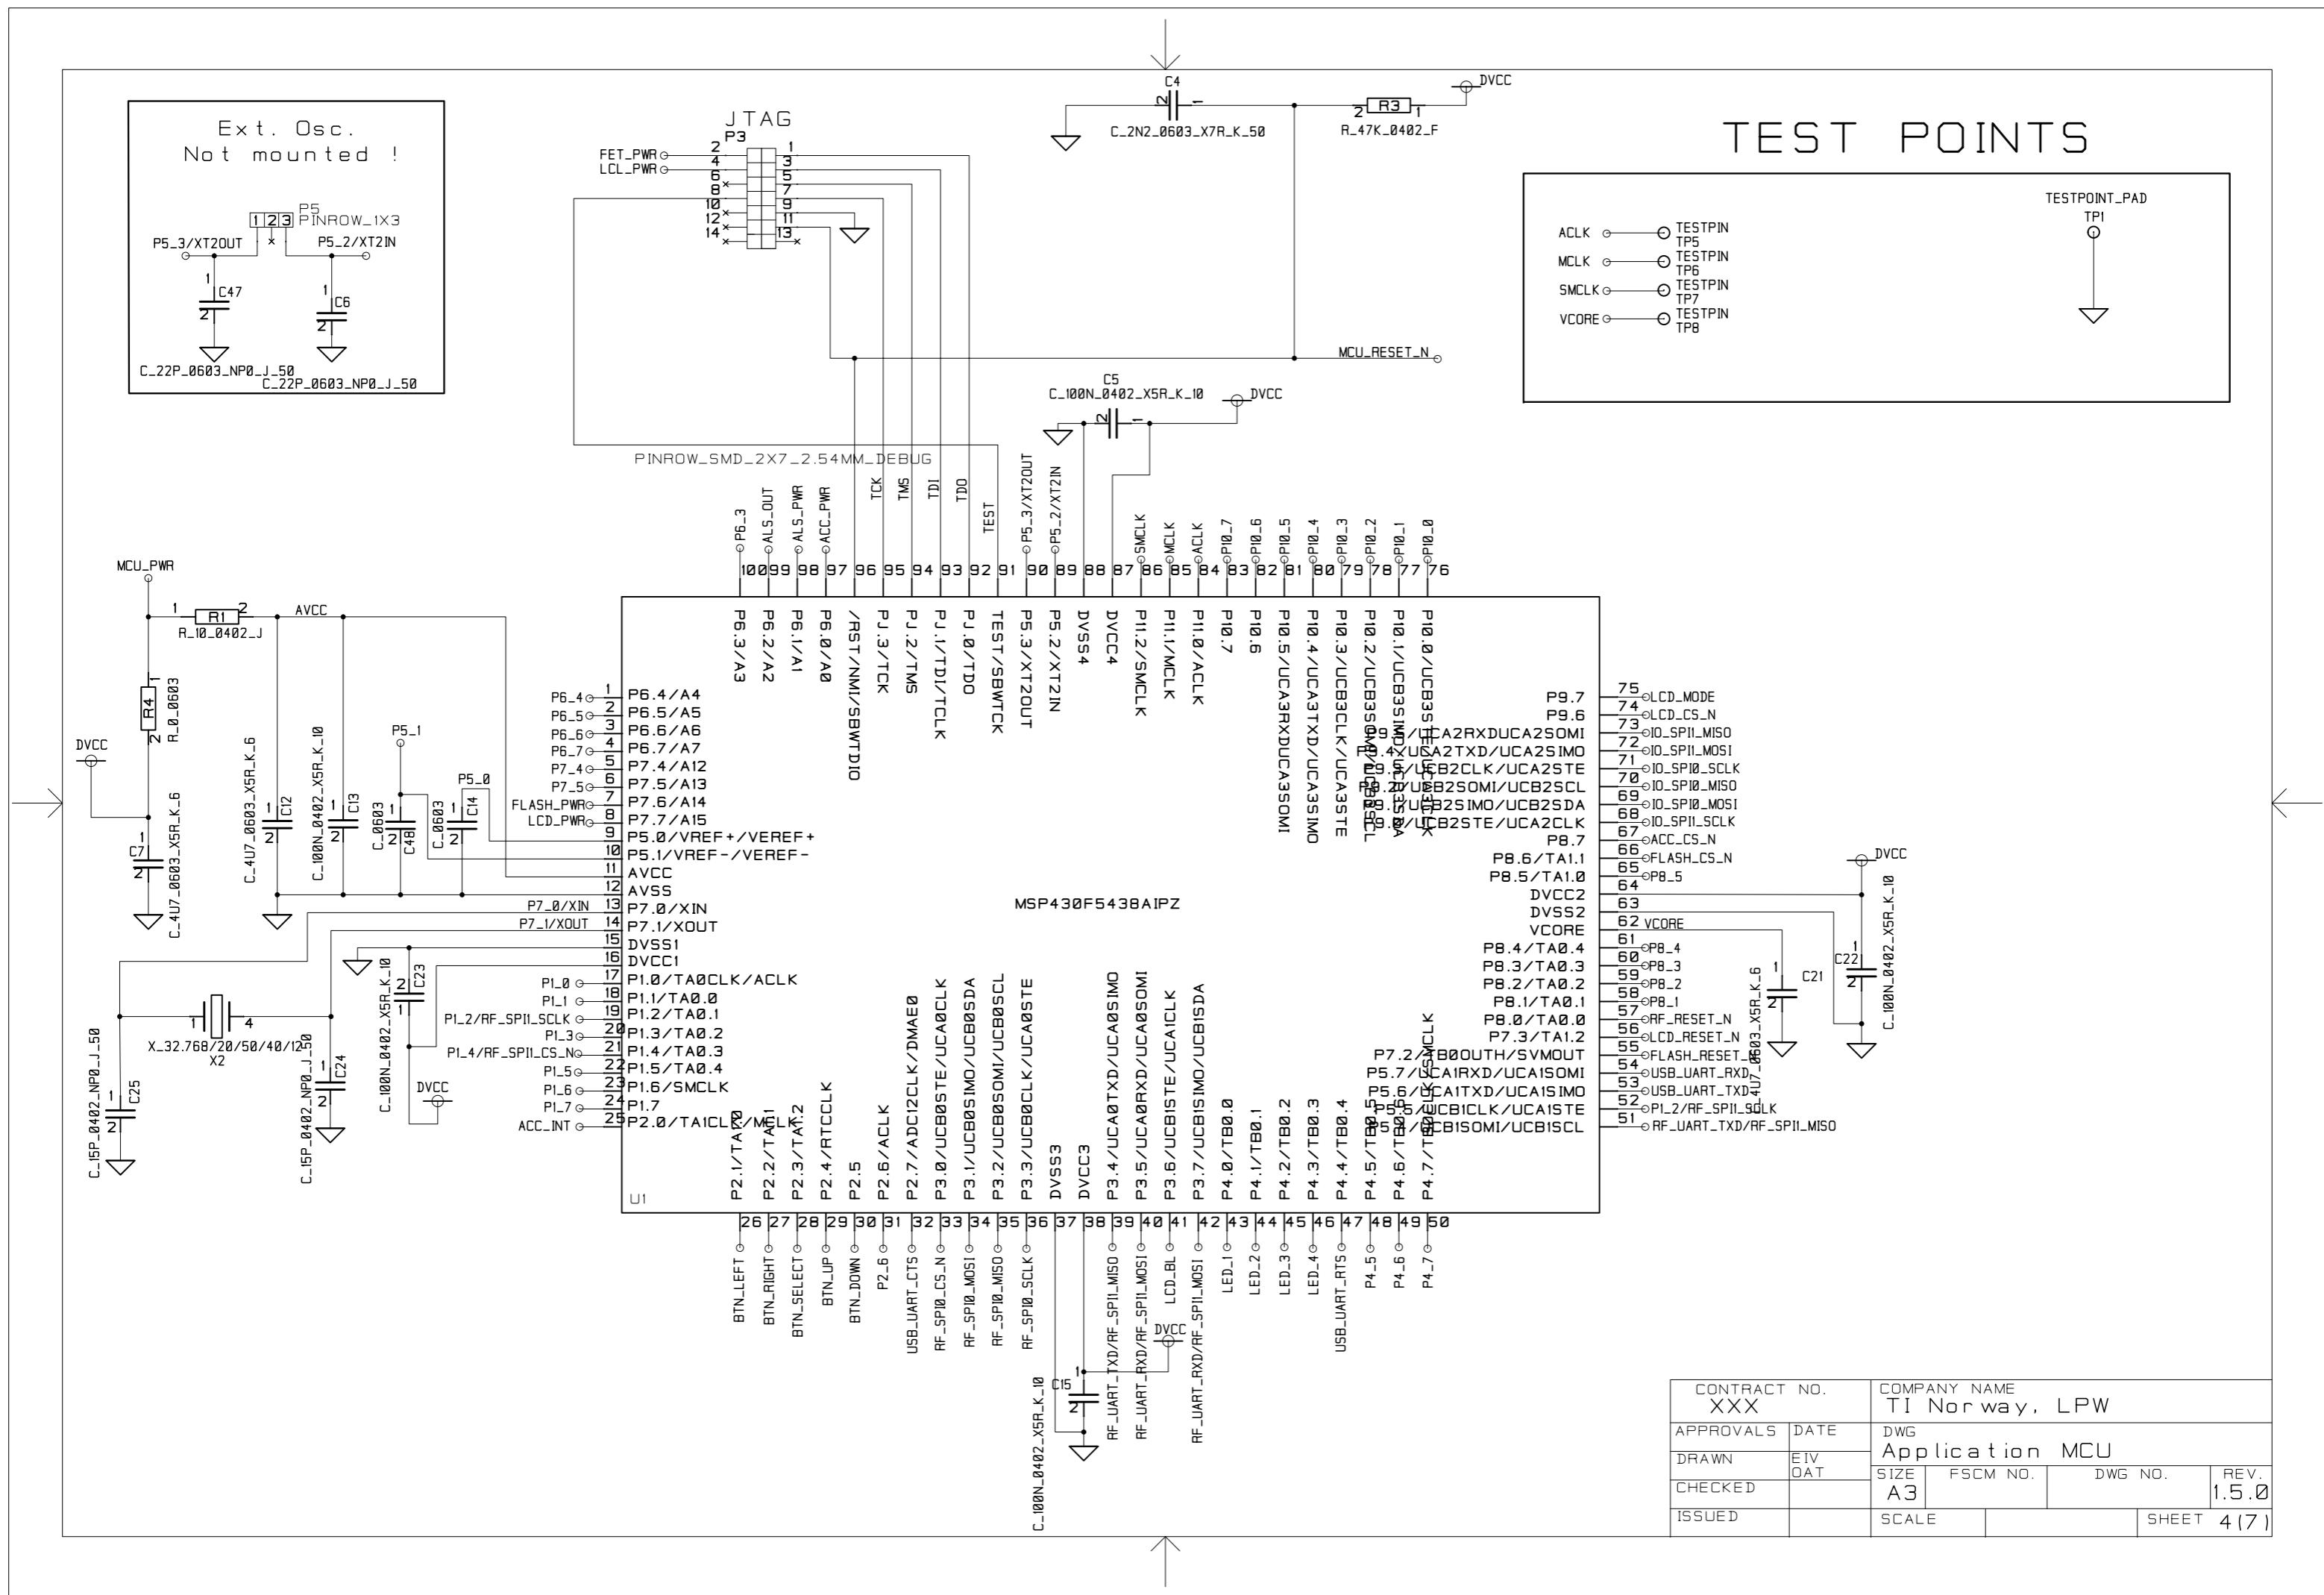

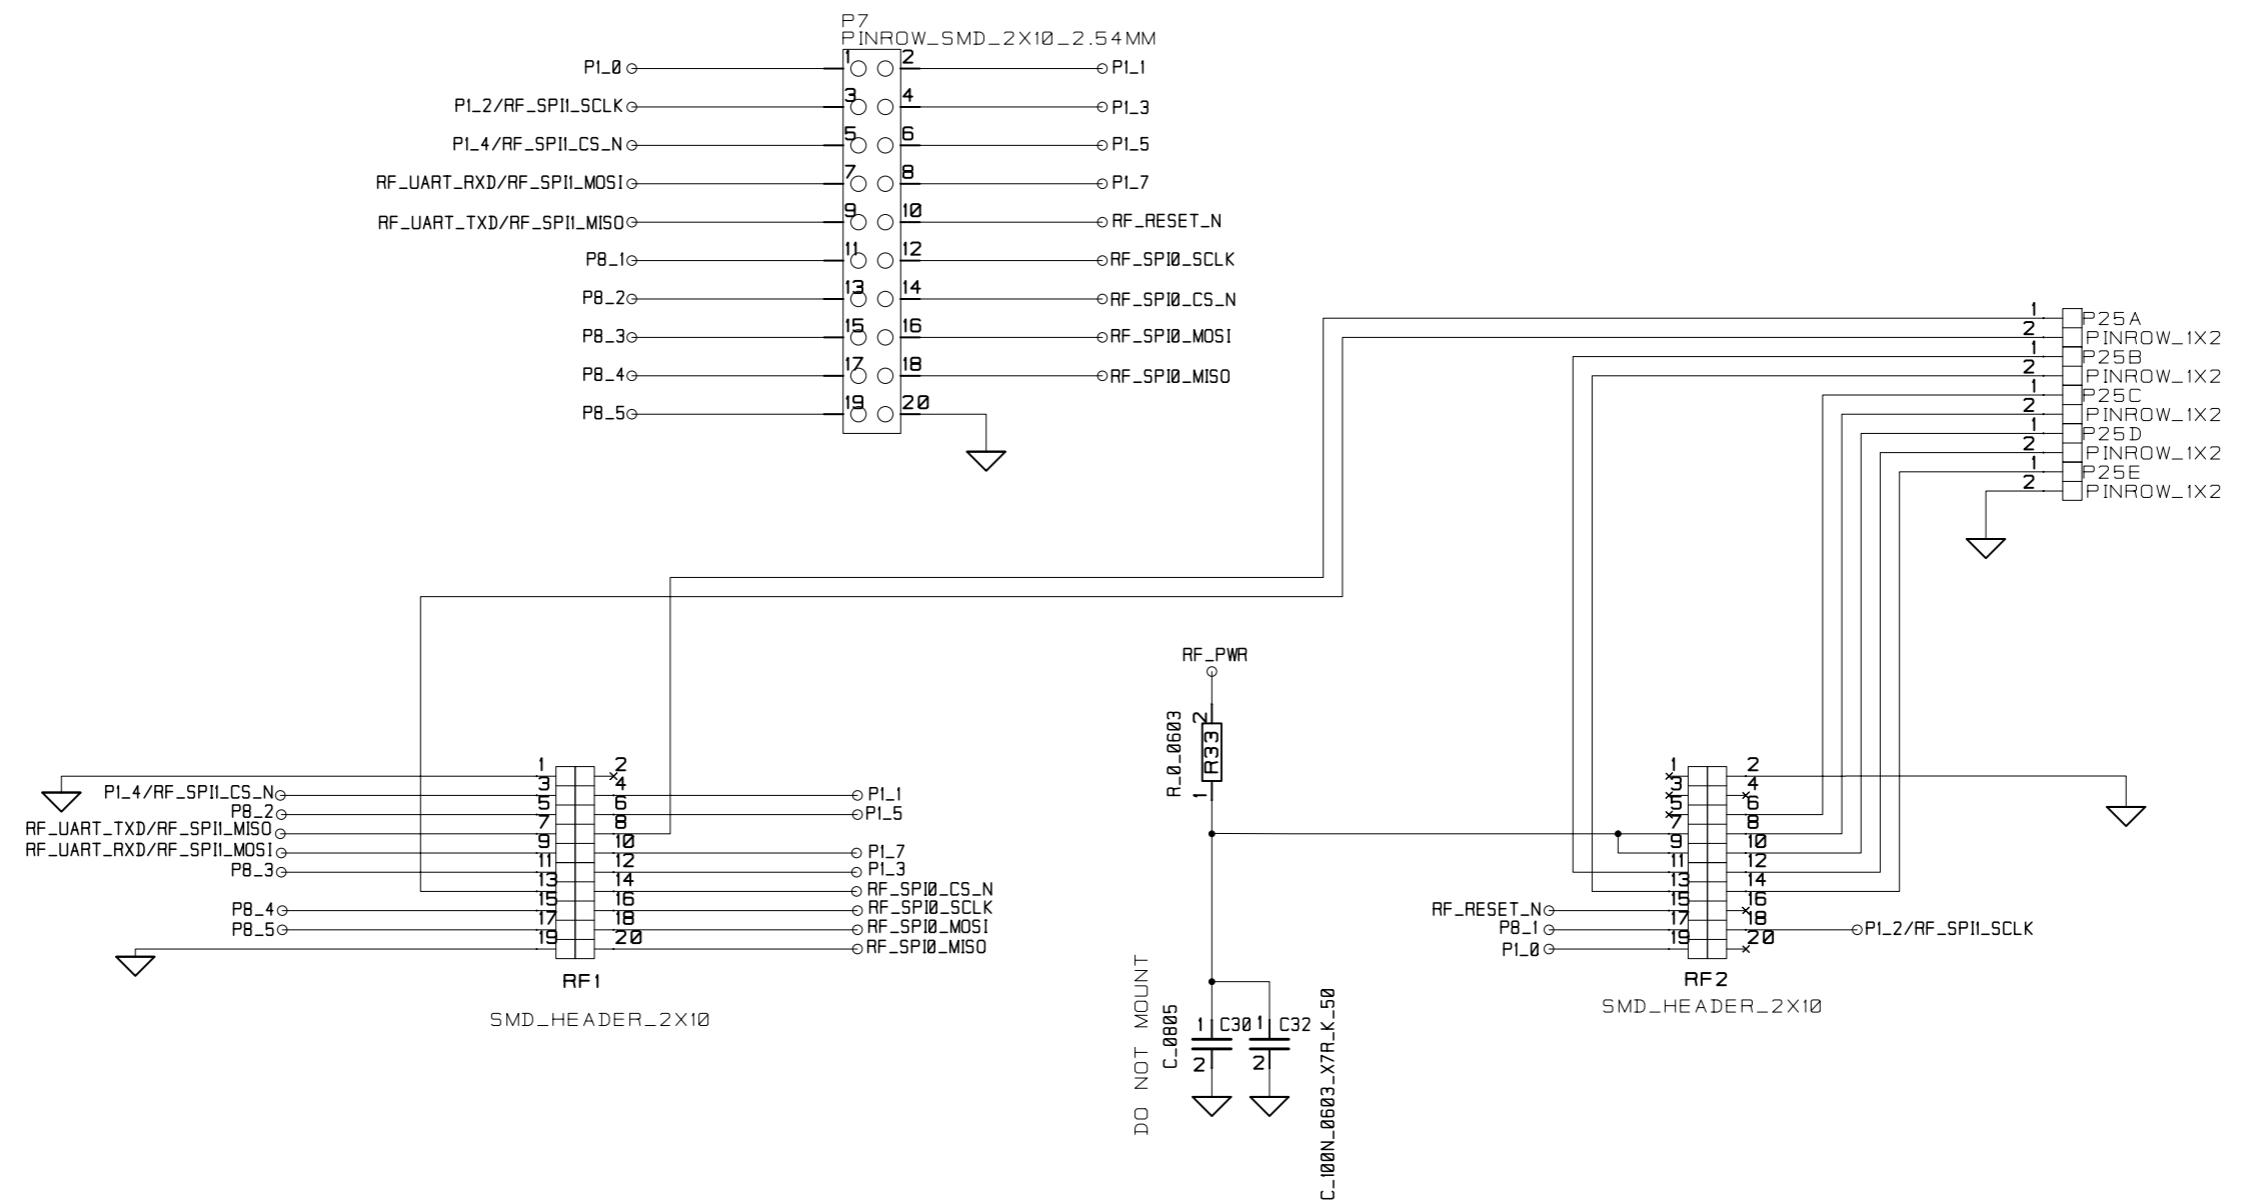


Connectors RF1 and RF2 are SMD,  
2x10 pin row headers with 0.05 spacing.  
P/N TFM-110-02-SM-D-A-K, produced by Samtec.

The matching connector used on RF evaluation modules are SFM-110-02-SM-D-A-K.


The distance between RF1 and RF2 is 1200 mils (center to center).

CONTRACT NO. XXX		COMPANY NAME TI Norway, LPW			
APPROVALS	DATE	DWG EM Interface			
DRAWN	EIV OAT	SIZE A3	FSCM NO.	DWG NO.	REV. 1.5.0
CHECKED		SCALE		SHEET 5(7)	
ISSUED					


## EXTERNAL FLASH

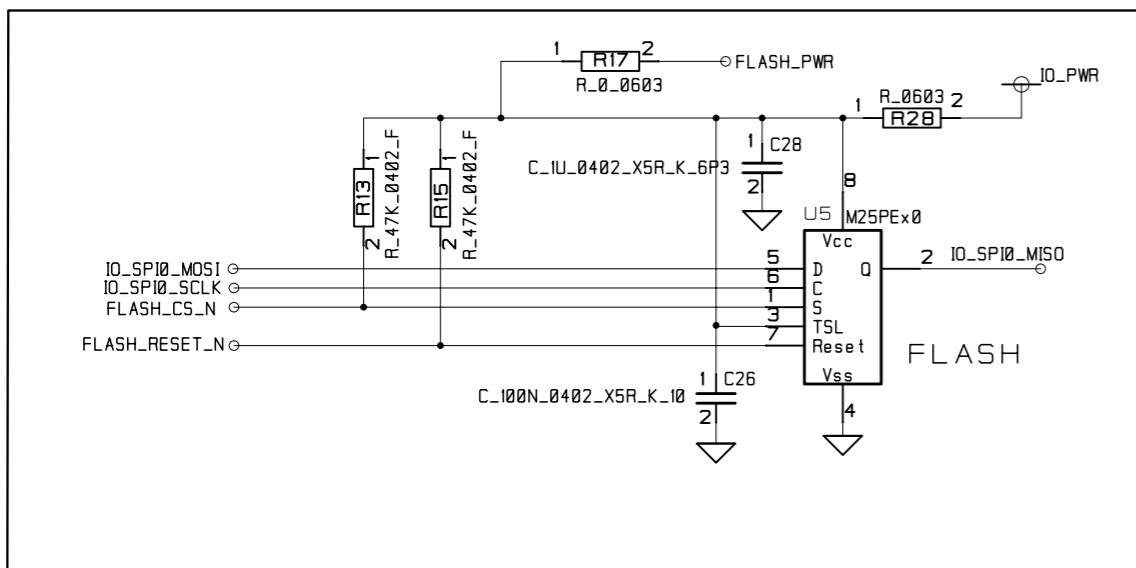


## LCD

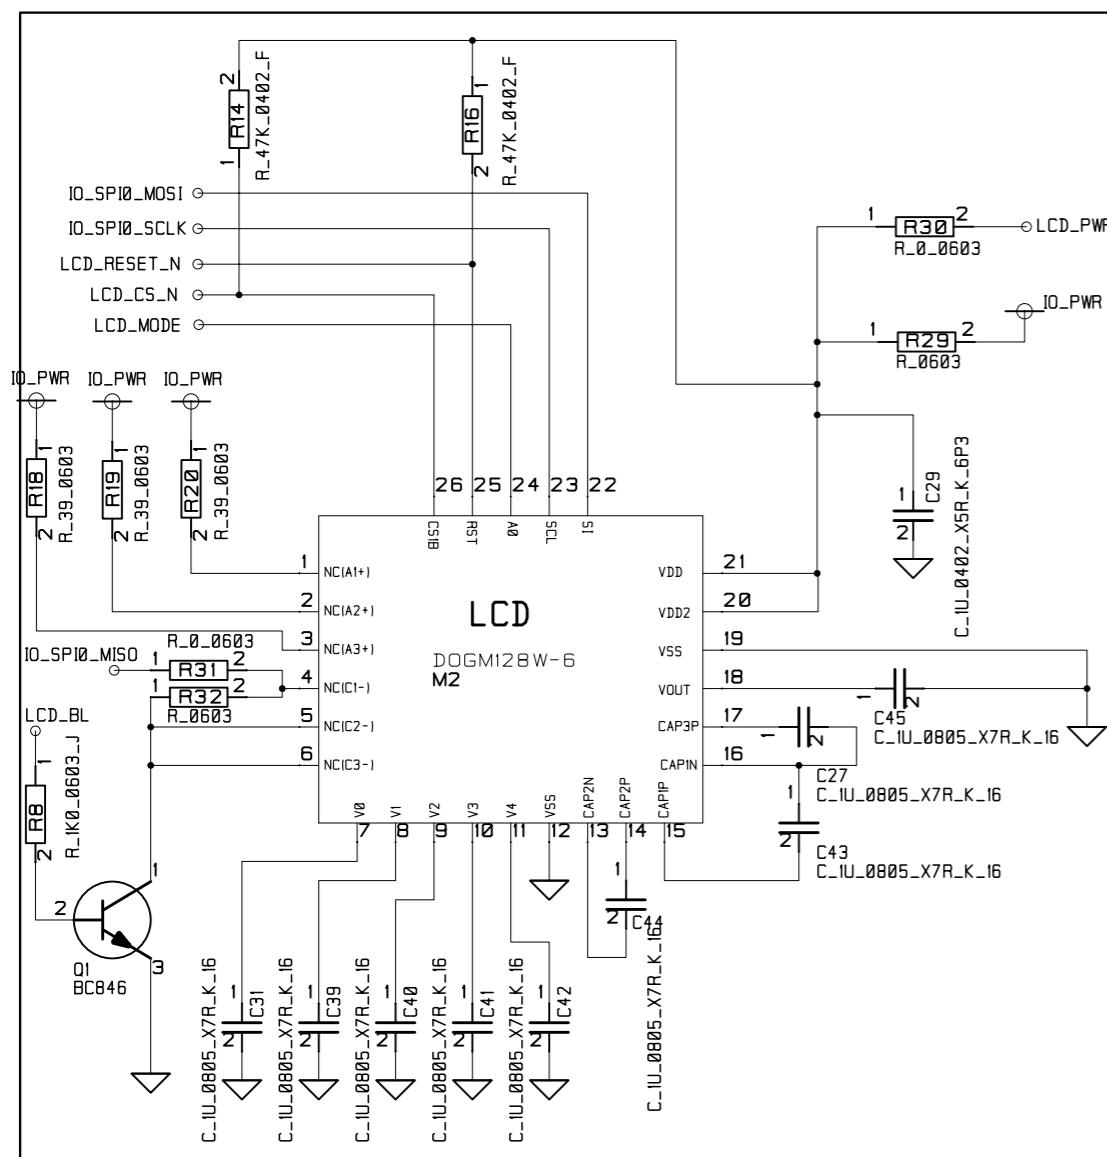


## ACCELEROMETER

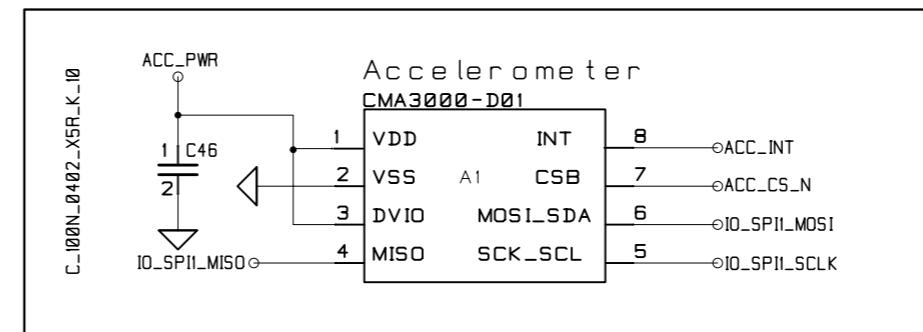

## AMBIENT LIGHT SENSOR

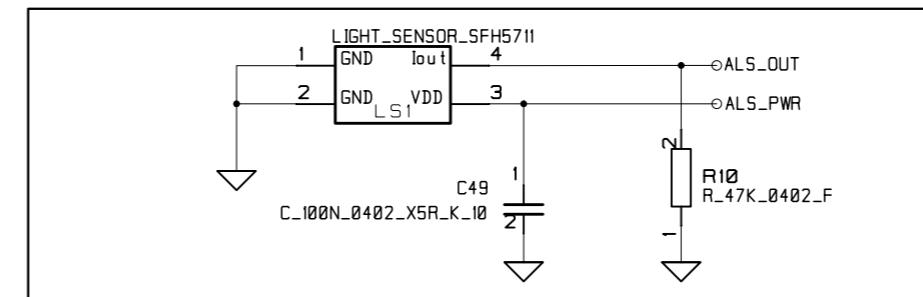


## RESET BUTTONS

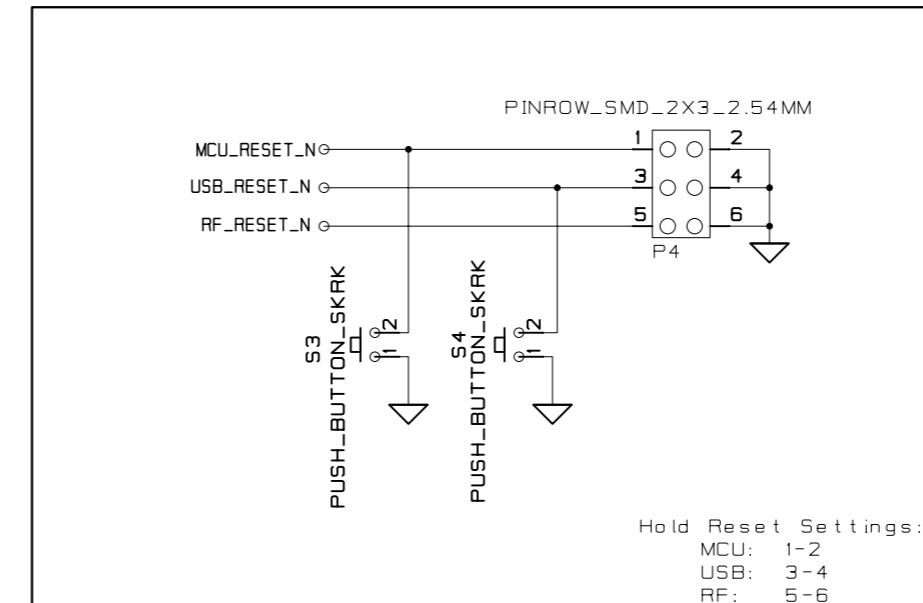


Q1, R8, R18, R19 and R20 Not Mounted when Backlight module (EA LED55x46) is not used, by default there will be no backlight module.

## LEDS

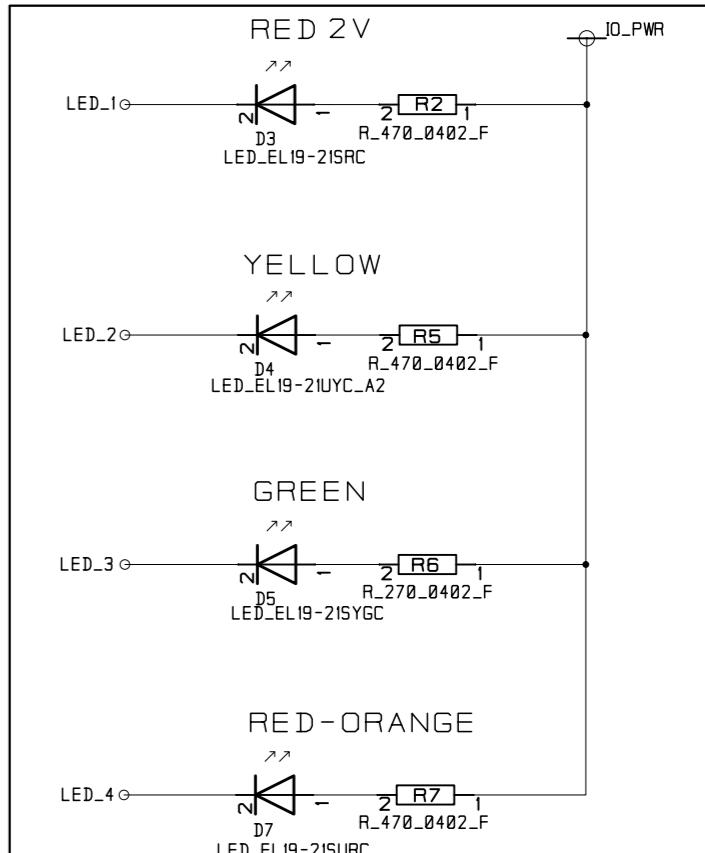


## BUTTONS

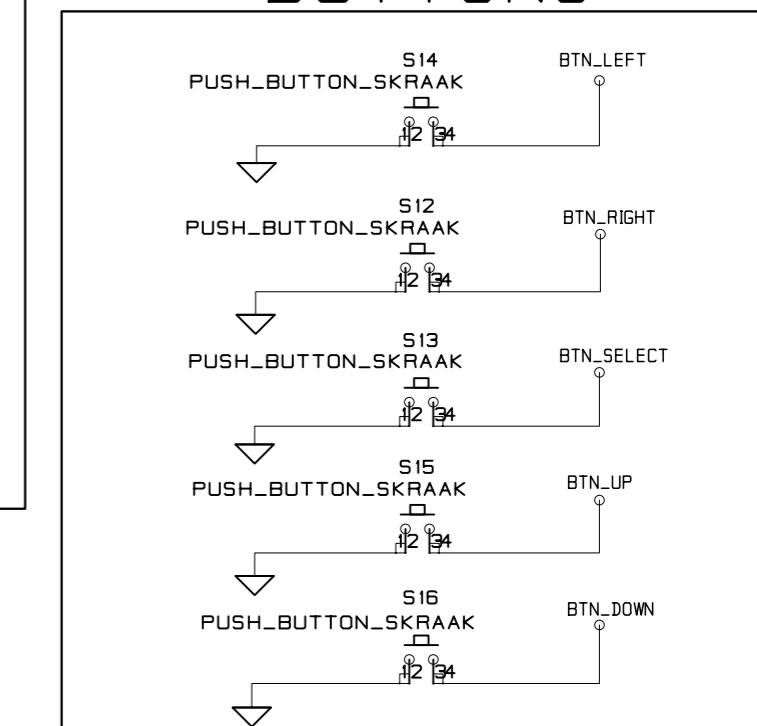

CONTRACT NO.		COMPANY NAME		
	XXX	TI Norway, LPW		
APPROVALS	DATE	DWG		
DRAWN	EIV	User Interface		
CHECKED	OAT	SIZE	FSCM NO.	DWG NO.
		A3		REV. 1.5.0
ISSUED		SCALE		SHEET 6(7)


## EXTERNAL I/O

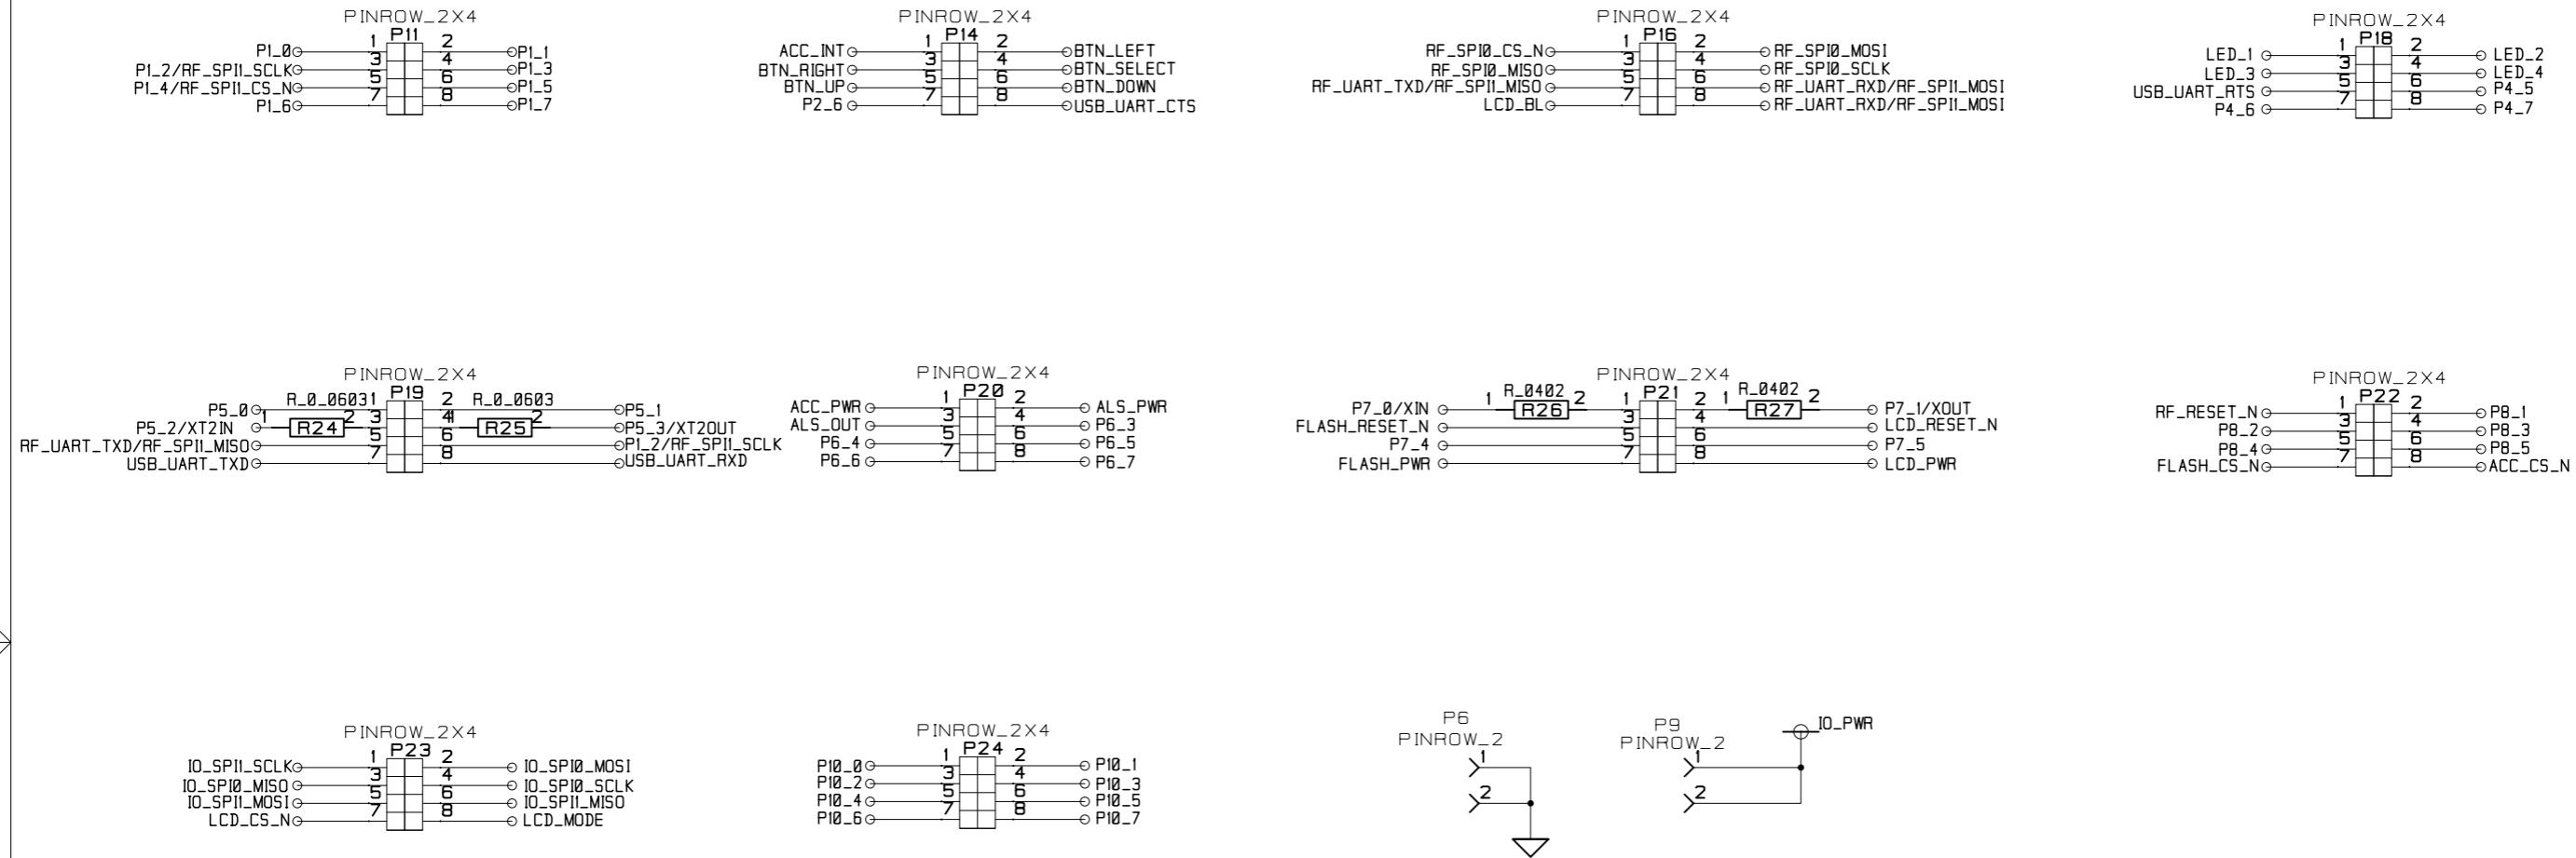



CONTRACT NO. XXX		COMPANY NAME TI Norway, LPW		
APPROVALS	DATE	DWG		
DRAWN	EIV DAT			
CHECKED		SIZE	FSCM NO.	DWG NO.
ISSUED		A3		REV. 1.5.0
		SCALE		SHEET 7 (7)


**Appendix C**  
**Schematics**


**SmartRF TrxEB 1.7.0**

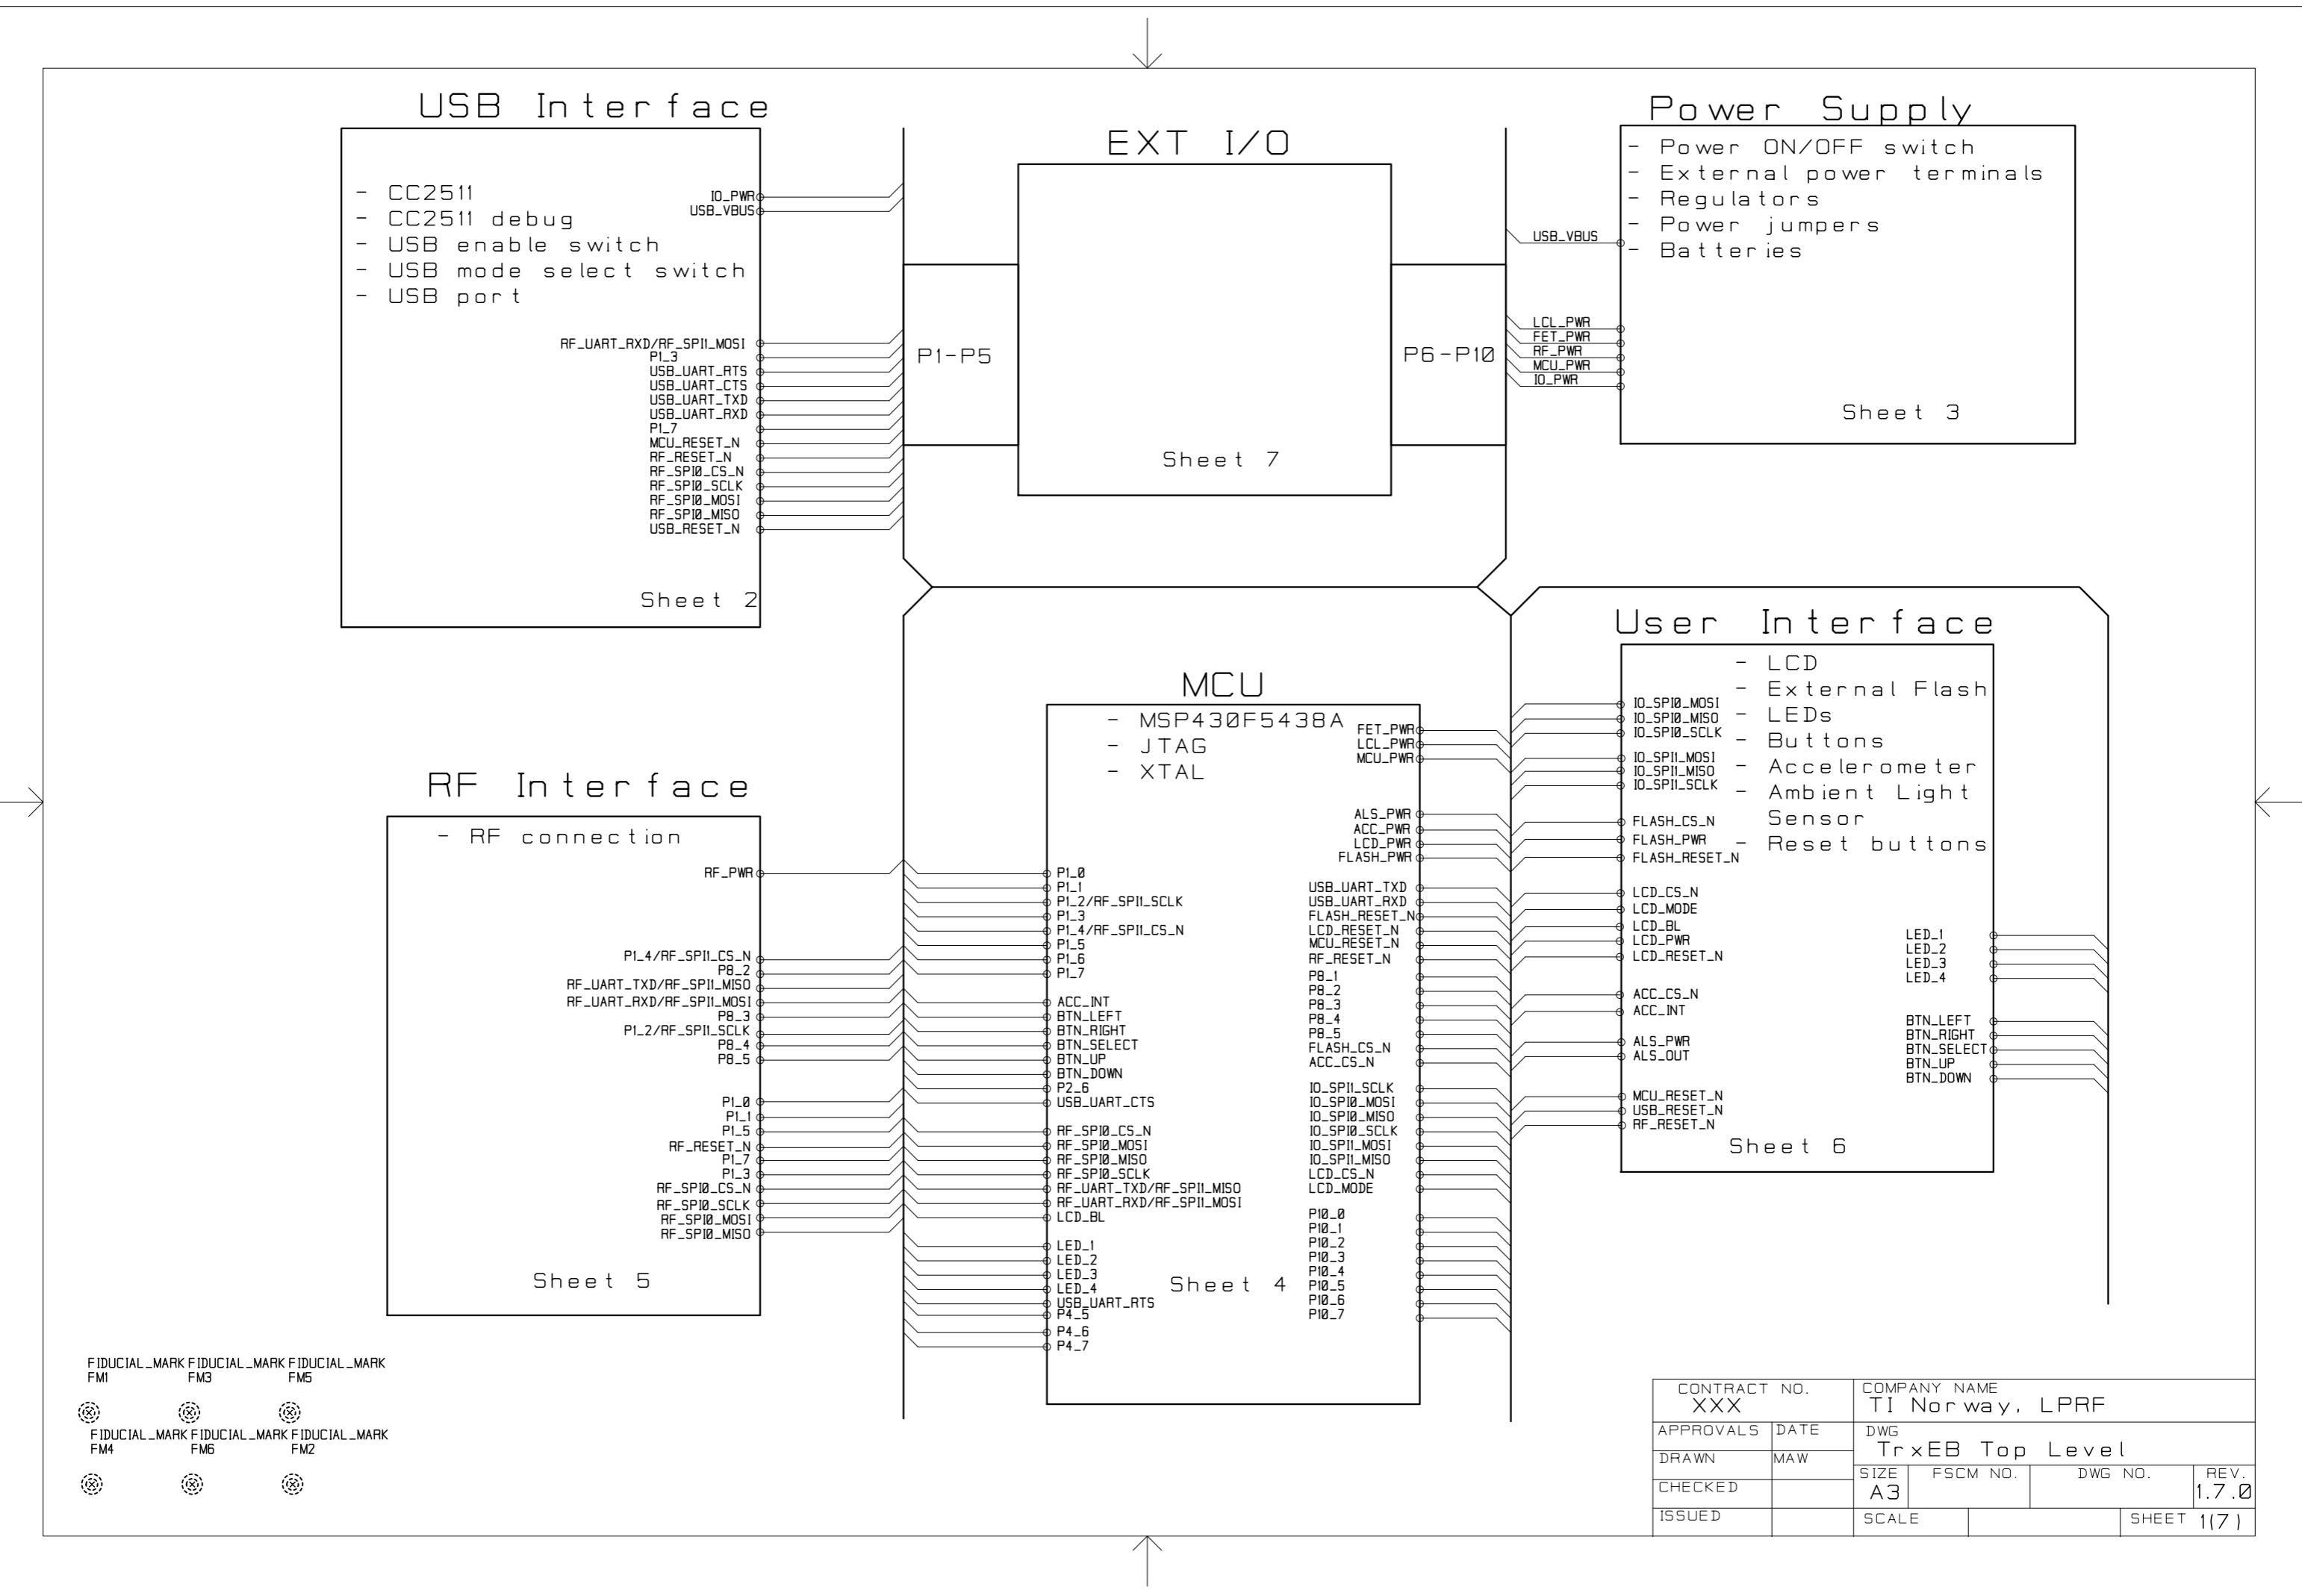

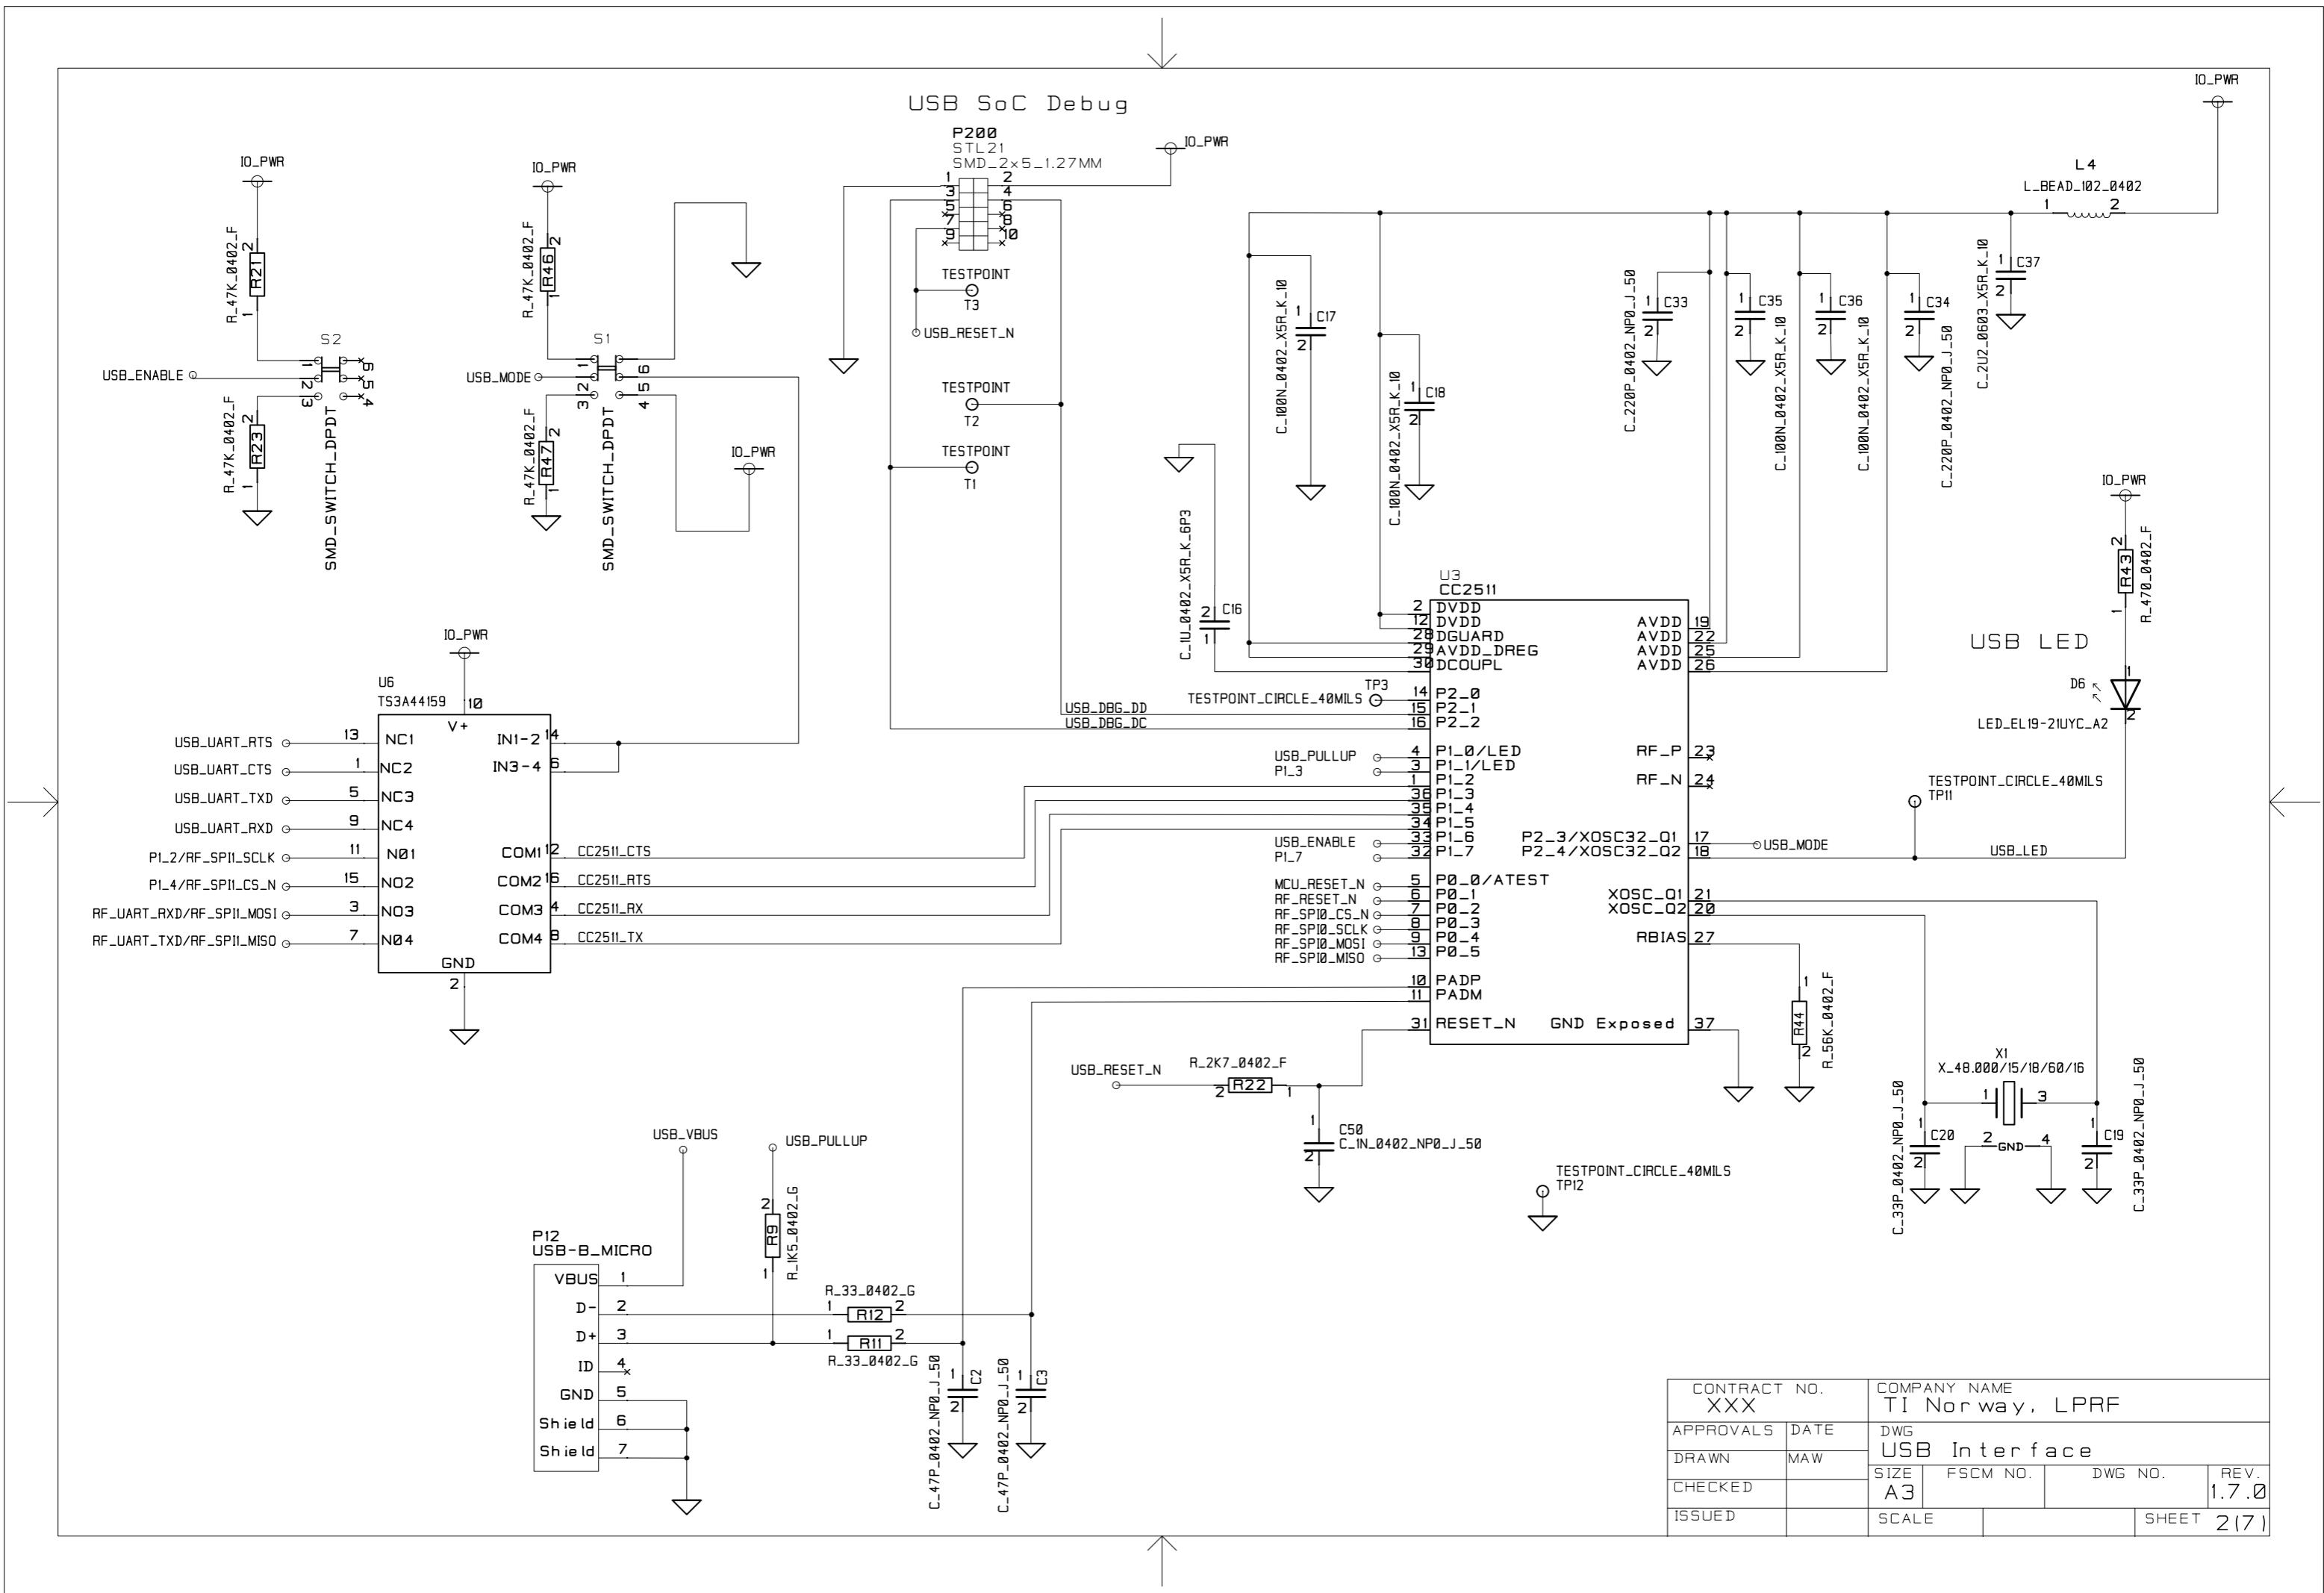

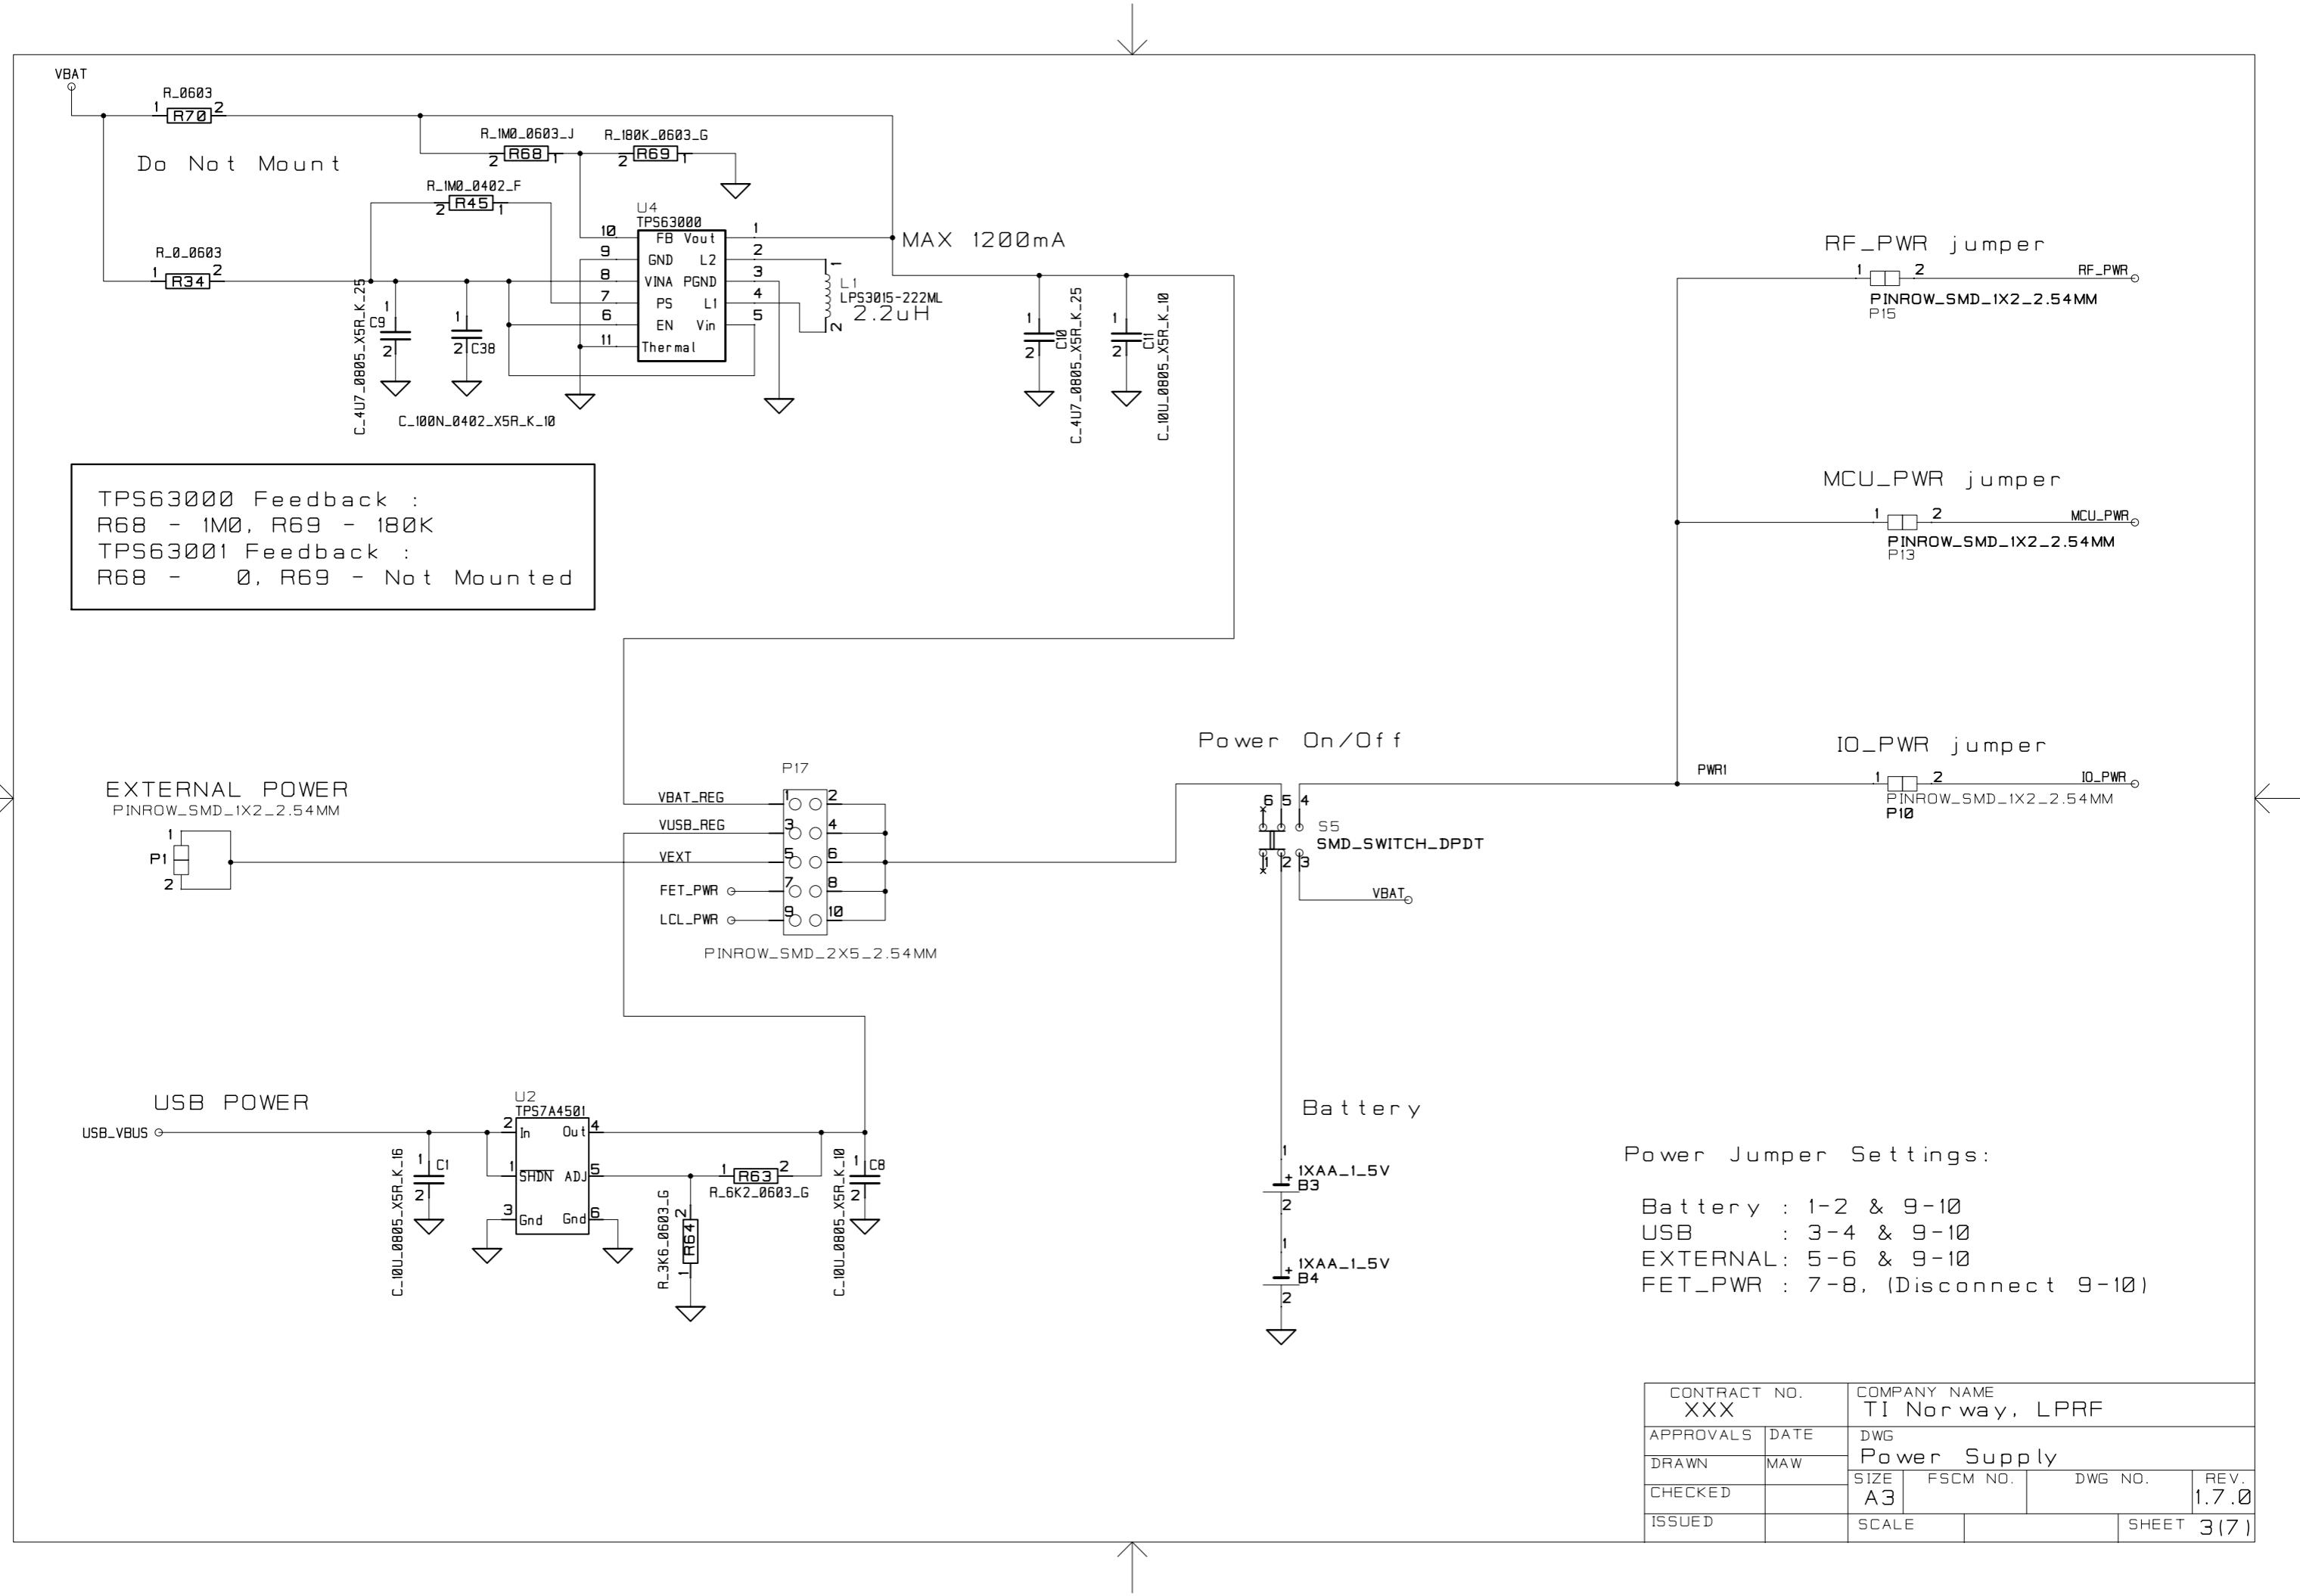

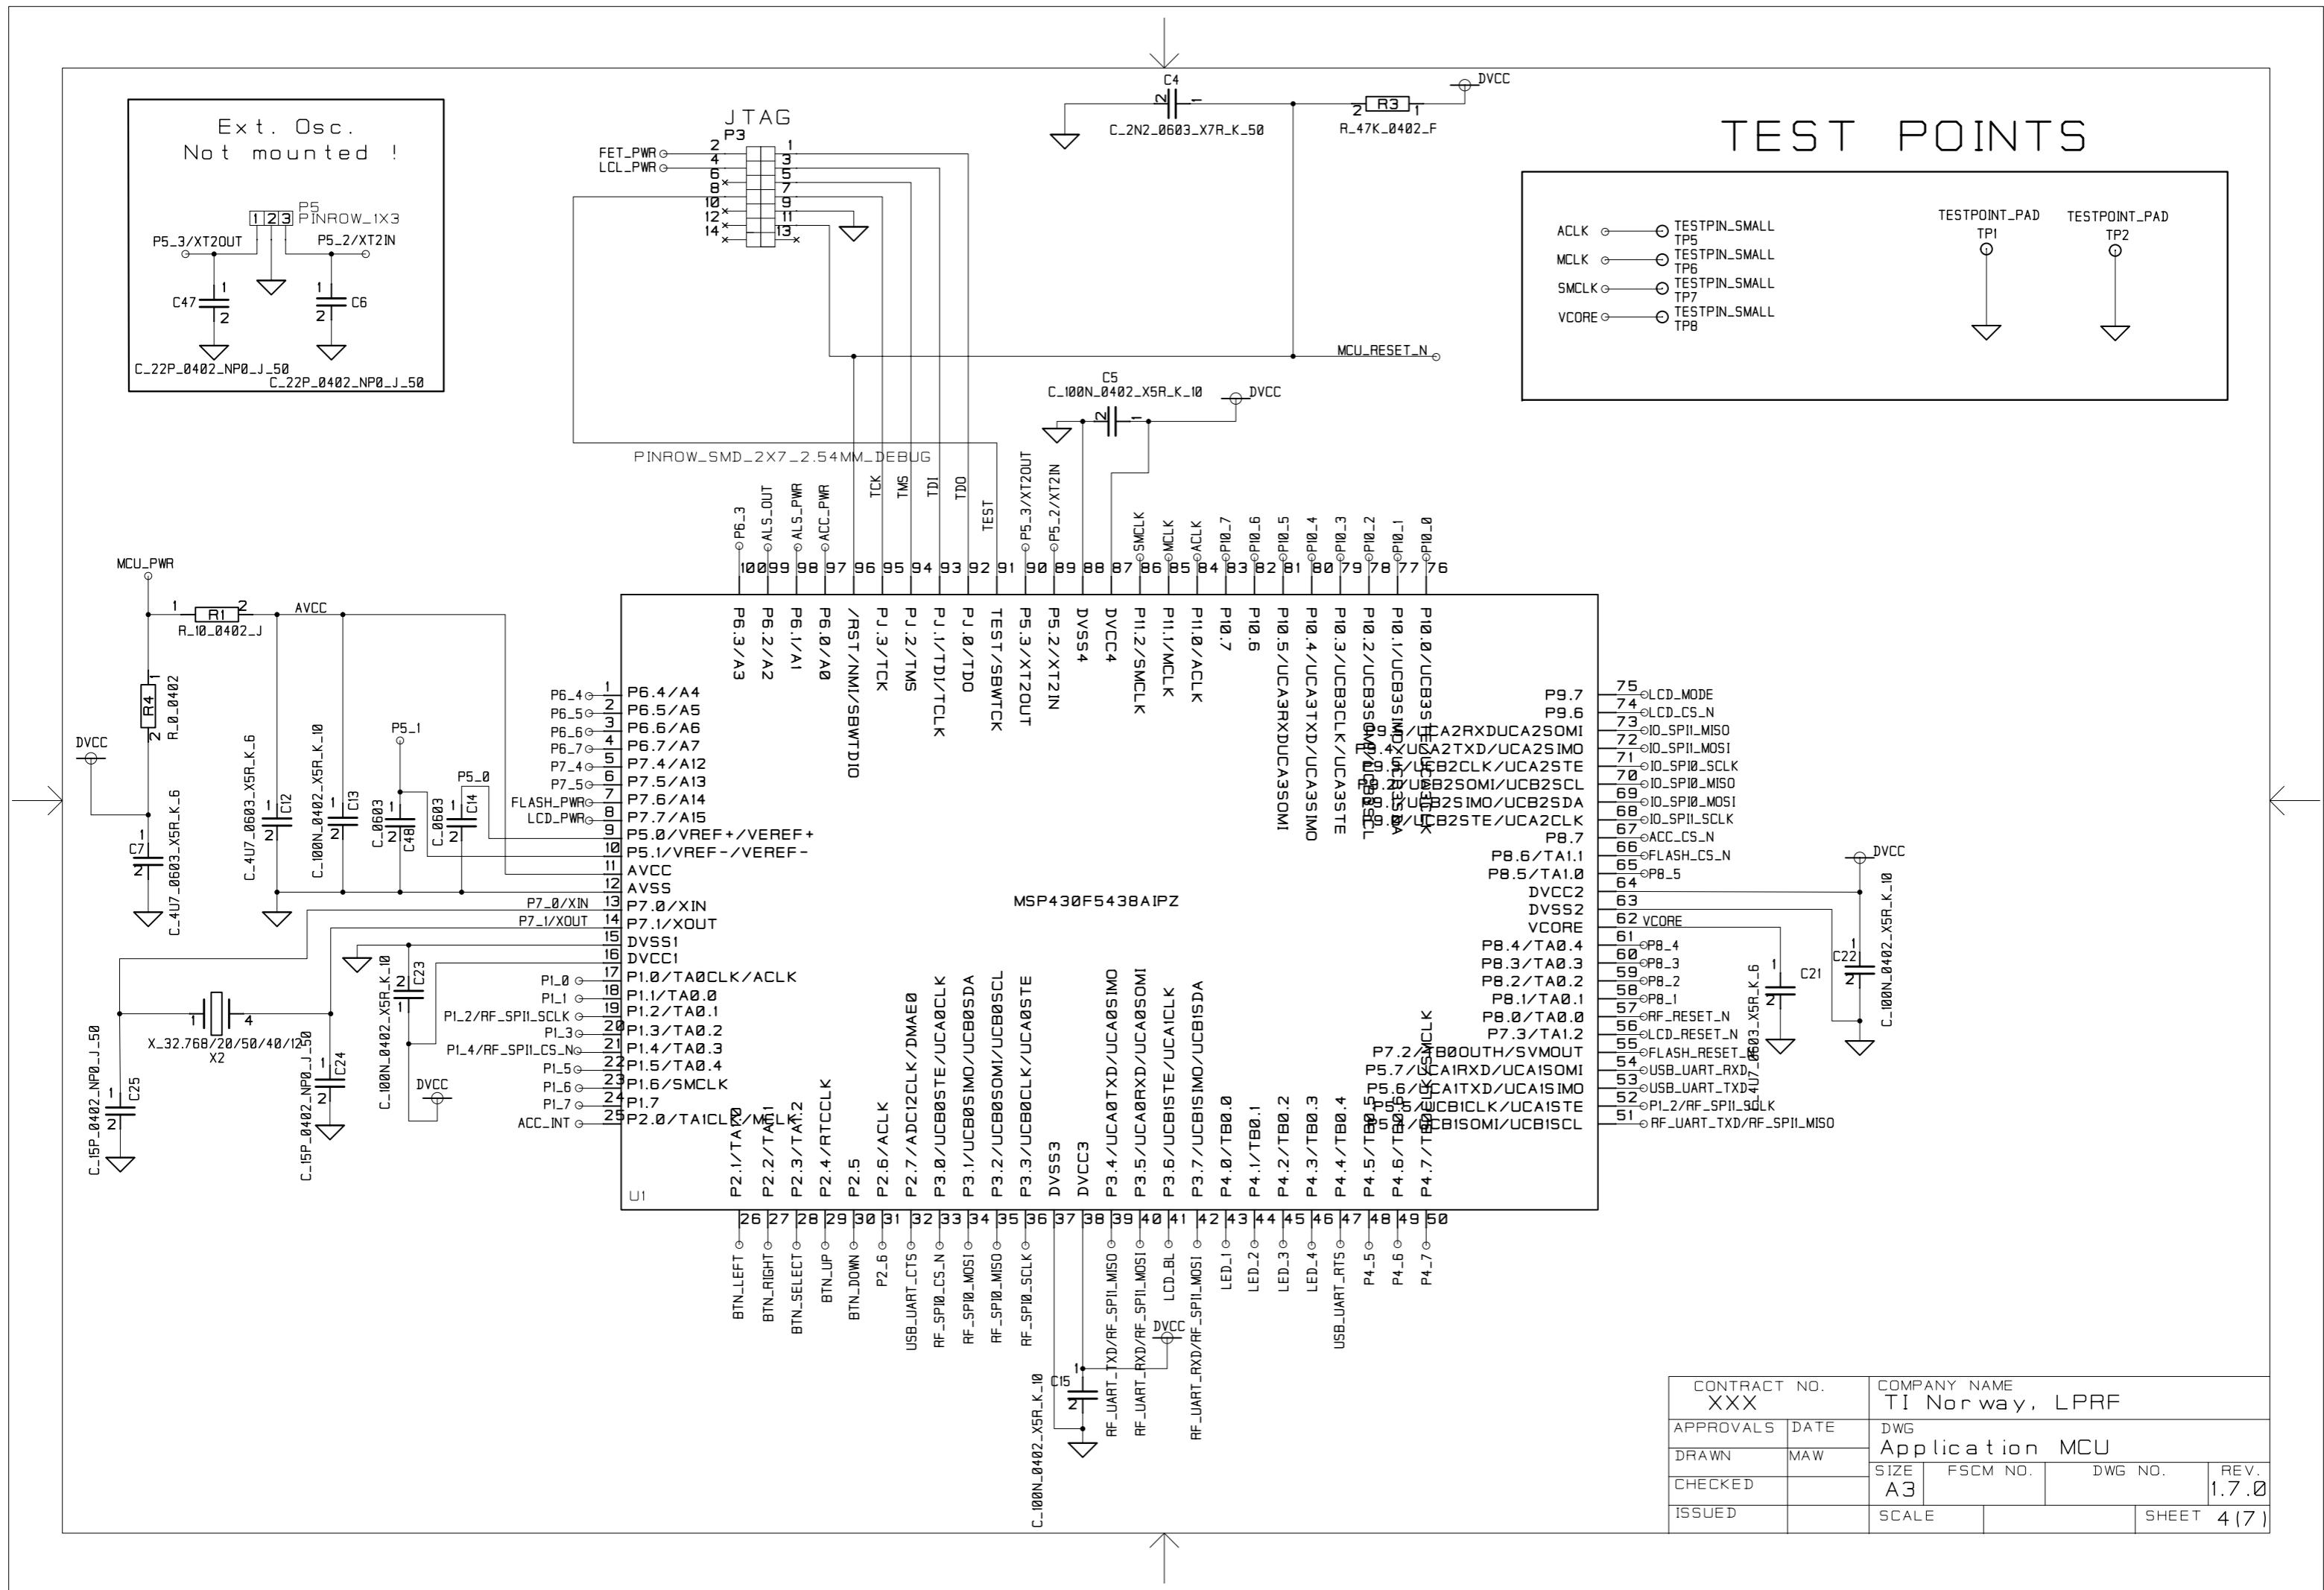

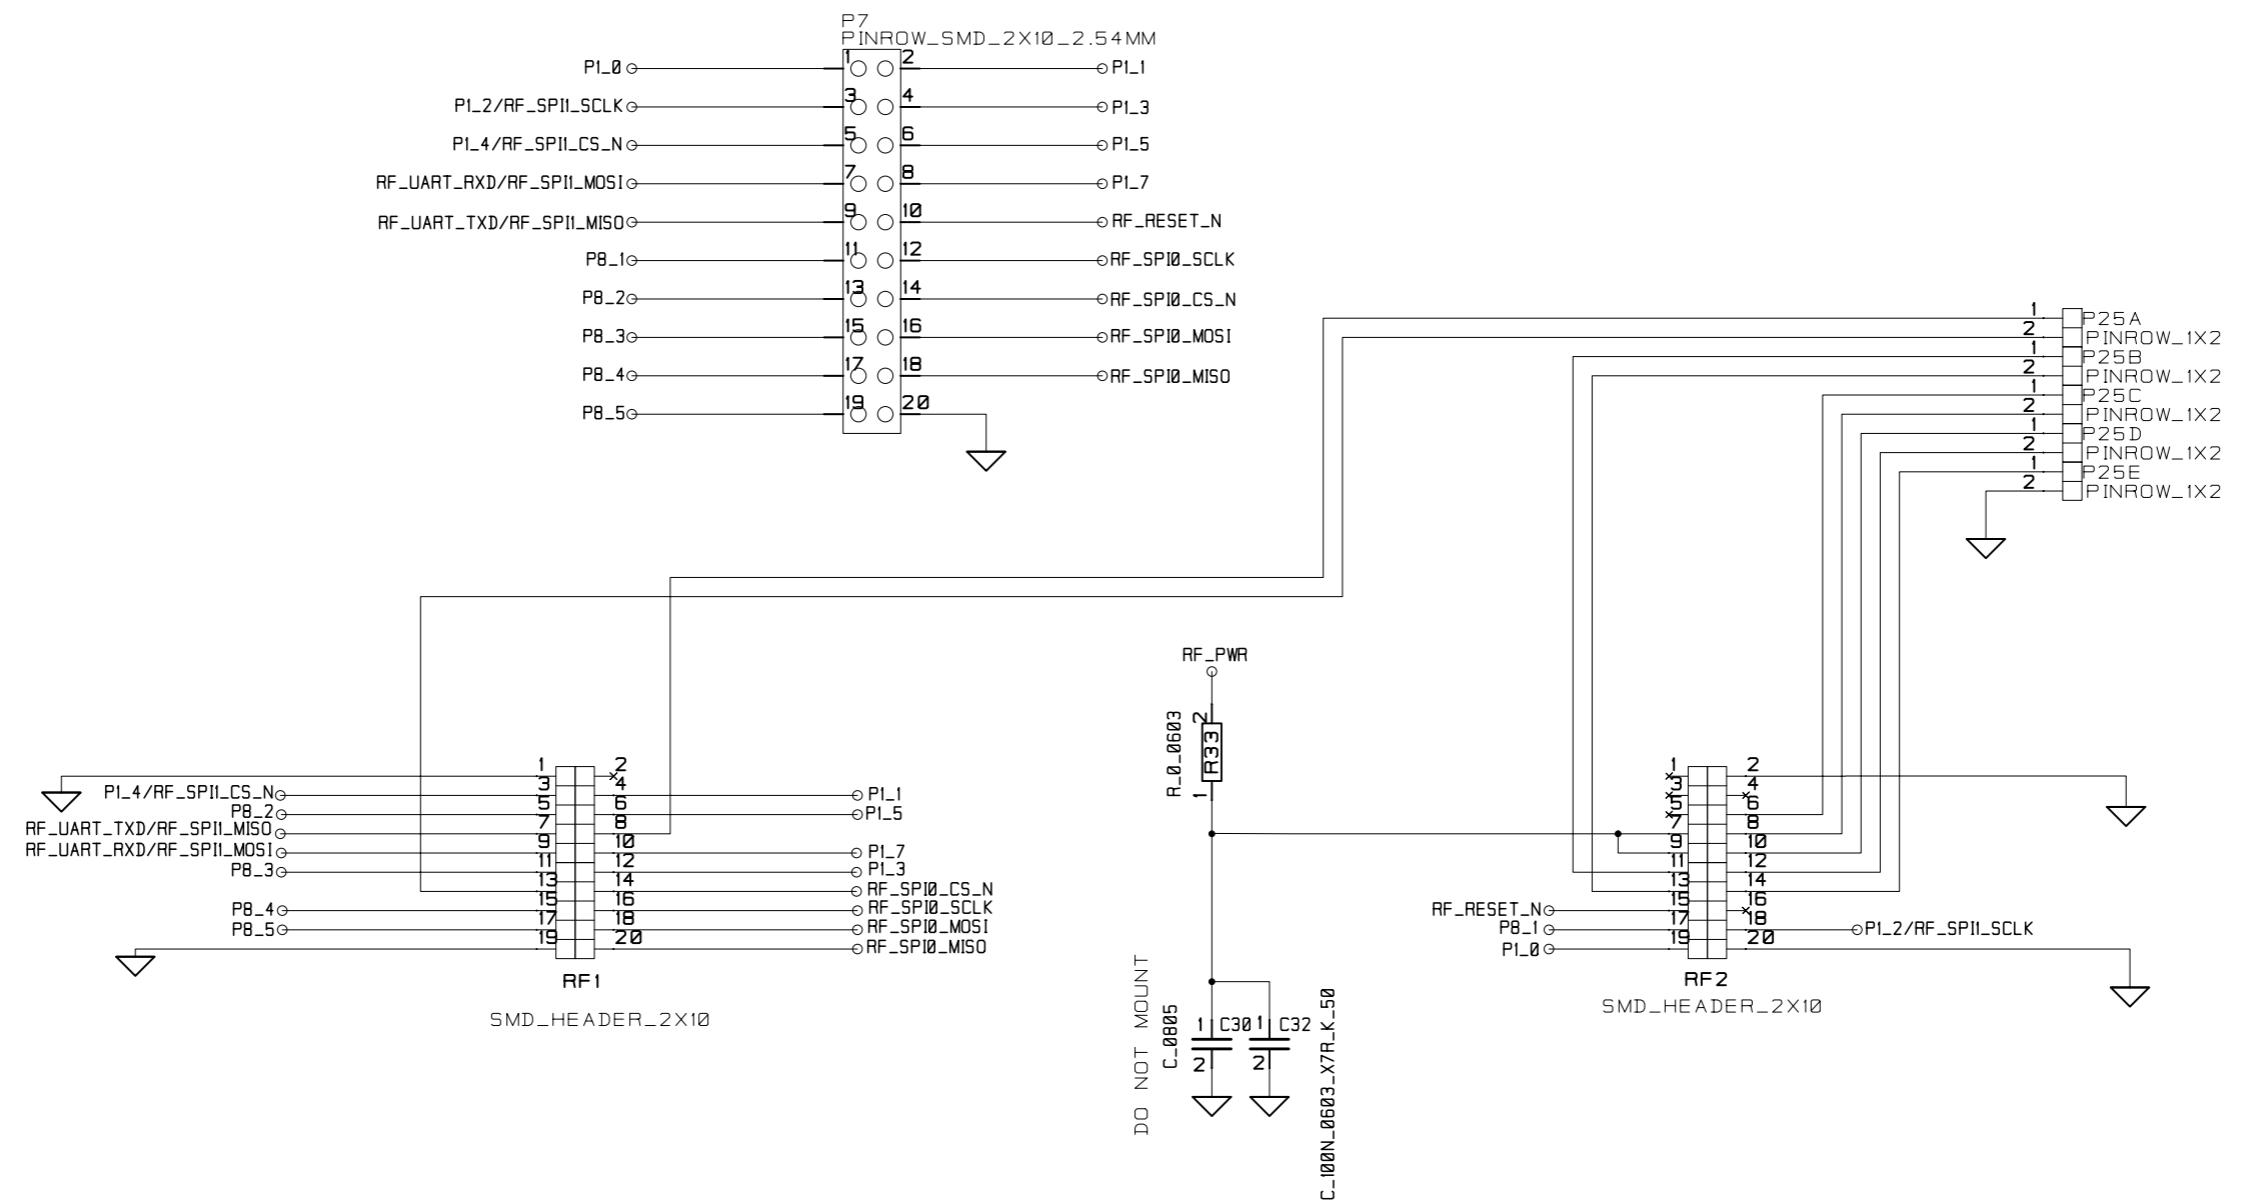


Connectors RF1 and RF2 are SMD, 2x10 pin row headers with 0.05 spacing. P/N TFM-110-02-SM-D-A-K, produced by Samtec.

The matching connector used on RF evaluation modules are SFM-110-02-SM-D-A-K.


The distance between RF1 and RF2 is 1200 mils (center to center).

CONTRACT NO.	COMPANY NAME		
XXX	TI Norway, LPRF		
APPROVALS	DATE	DWG	
DRAWN	MAW	EM Interface	
CHECKED		SIZE	FSCM NO.
		A3	DWG NO.
ISSUED		REV.	1.7.0
		SCALE	
			SHEET 5(7)


## EXTERNAL FLASH

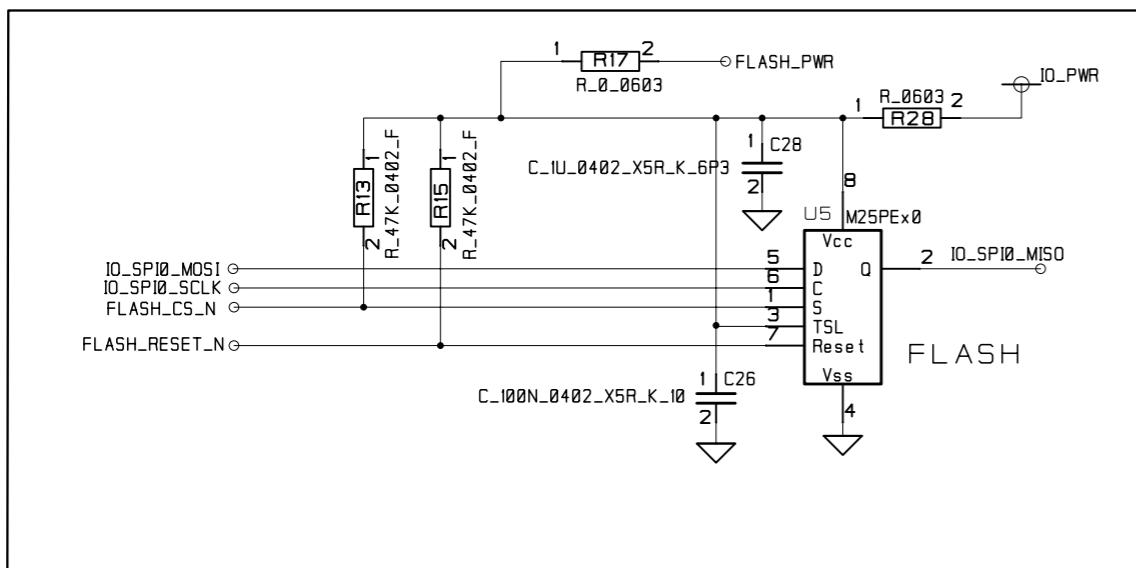


## LCD

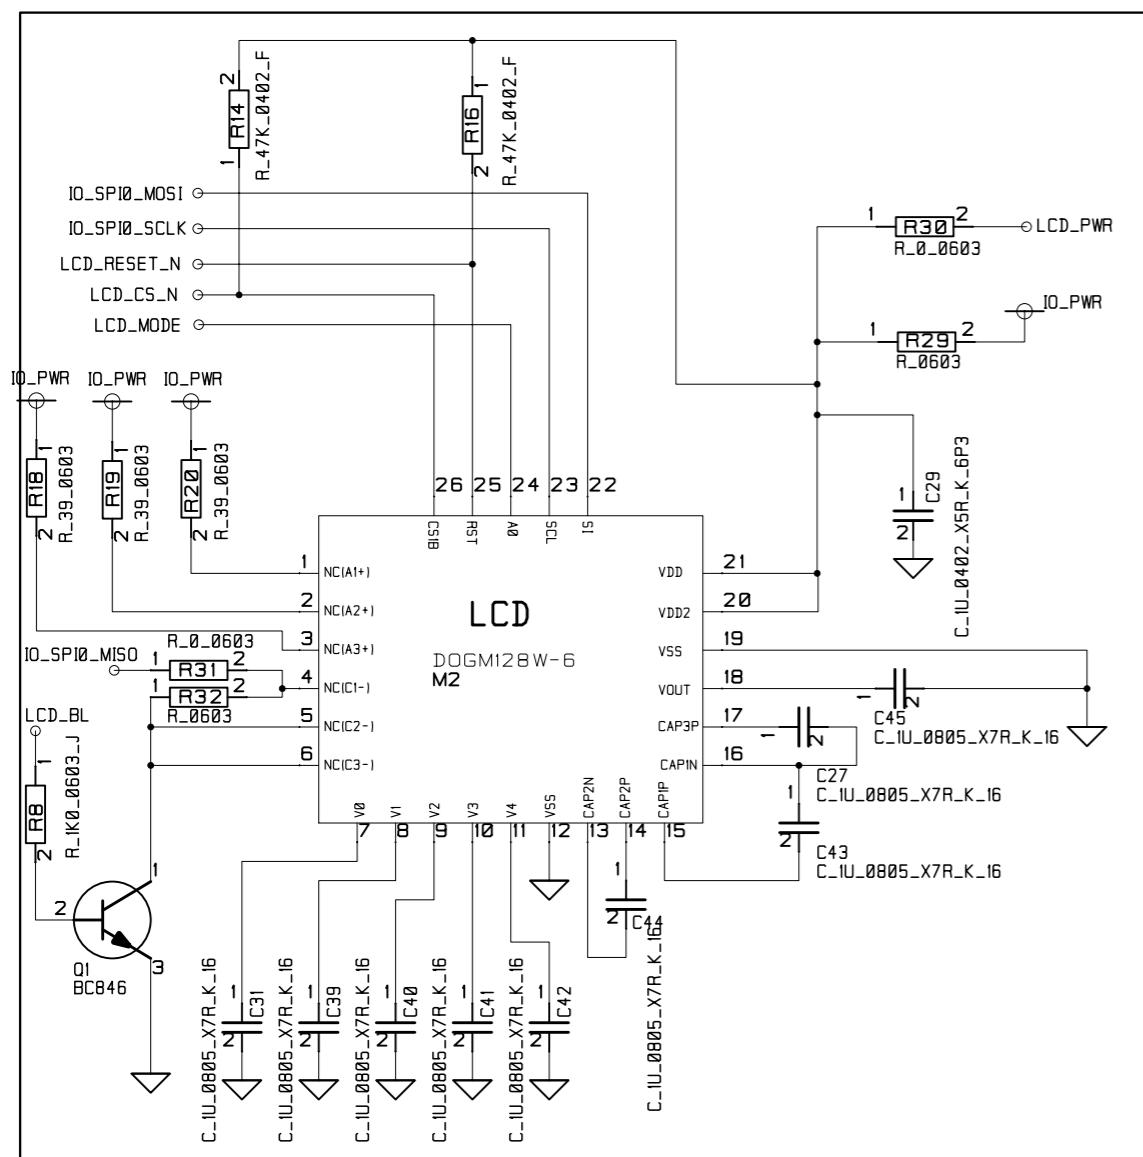


## ACCELEROMETER

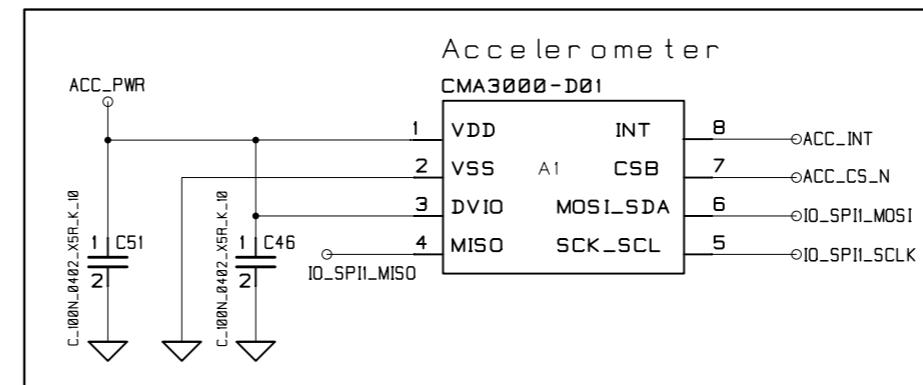

## AMBIENT LIGHT SENSOR

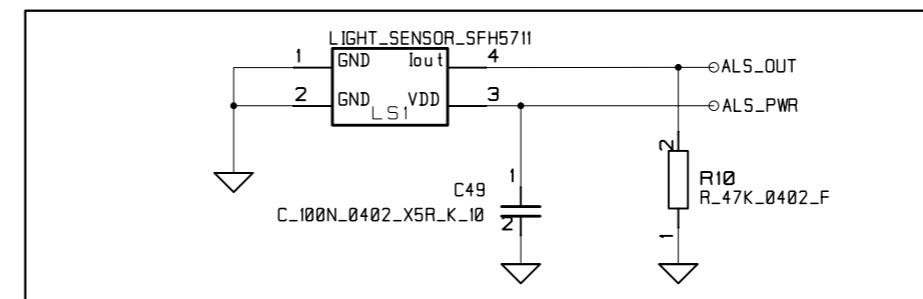


## RESET BUTTONS

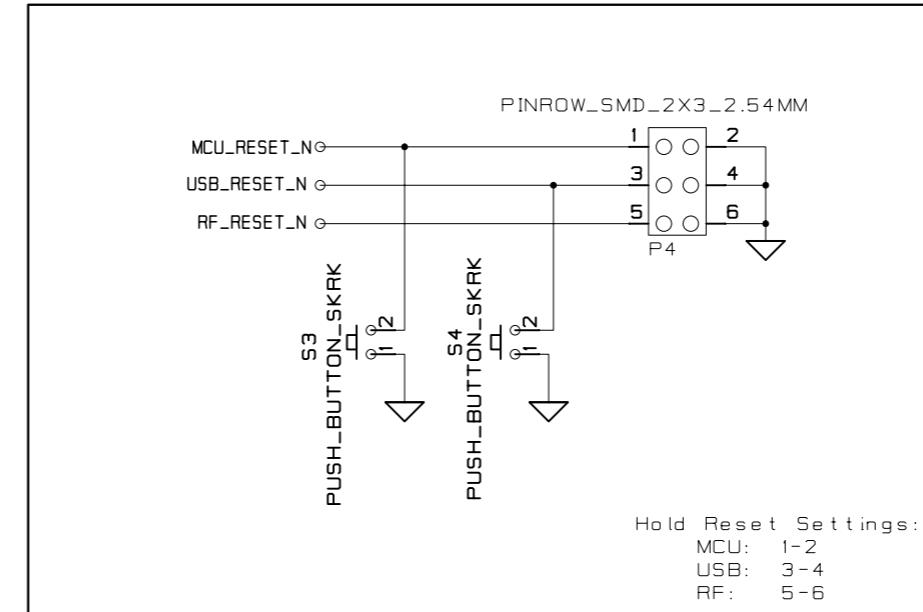


Q1,R8,R18,R19 and R20 Not Mounted when Back light module (EA LED55x46) is not used, by default there will be no back light module.

## LEDS

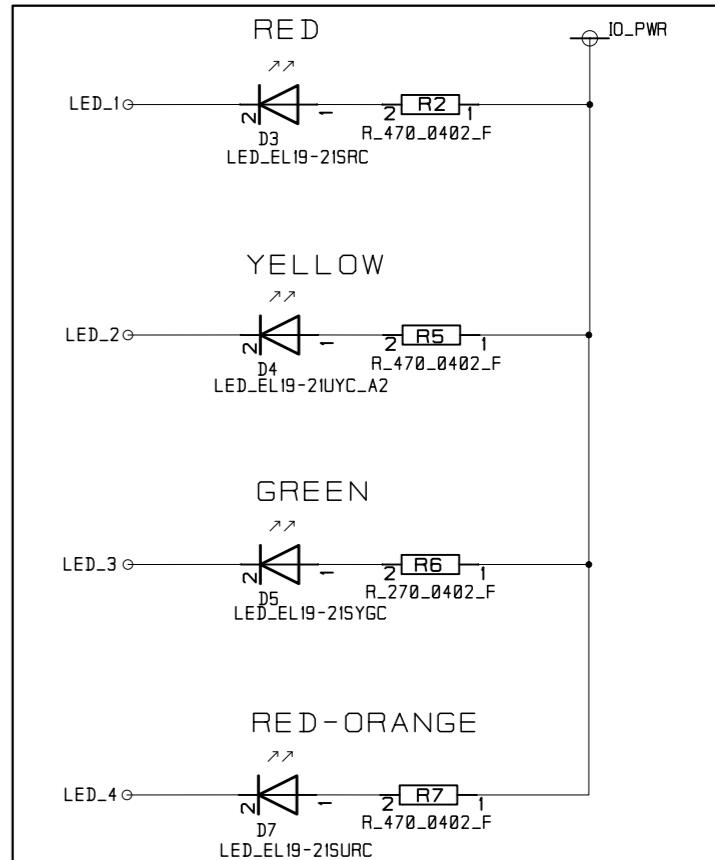


## BUTTONS

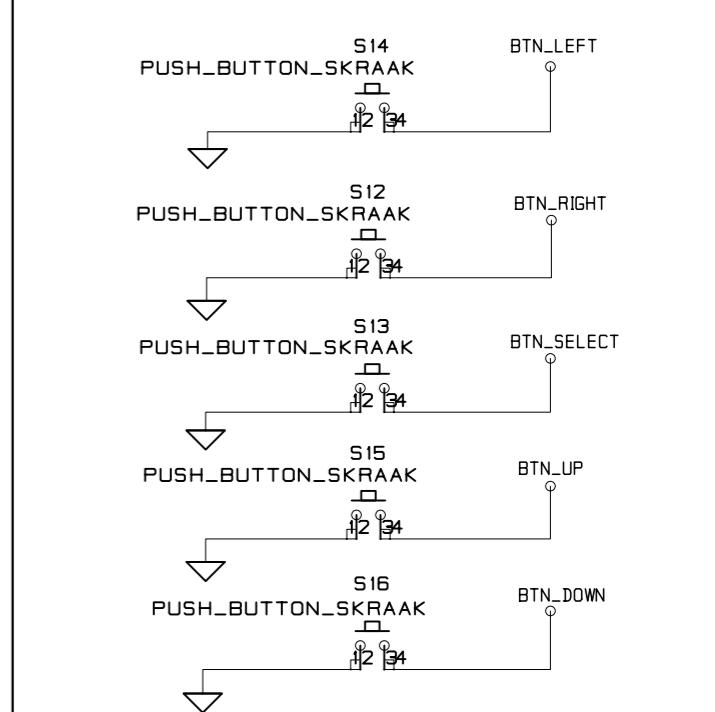

CONTRACT NO.		COMPANY NAME		
APPROVALS	DATE	TI Norway, LPRF		
DRAWN	MAW	DWG		
CHECKED		User Interface		
ISSUED		SIZE	FSCM NO.	DWG NO.
		A3		1.7.0
SCALE				
SHEET				6 (7)

## EXTERNAL I/O

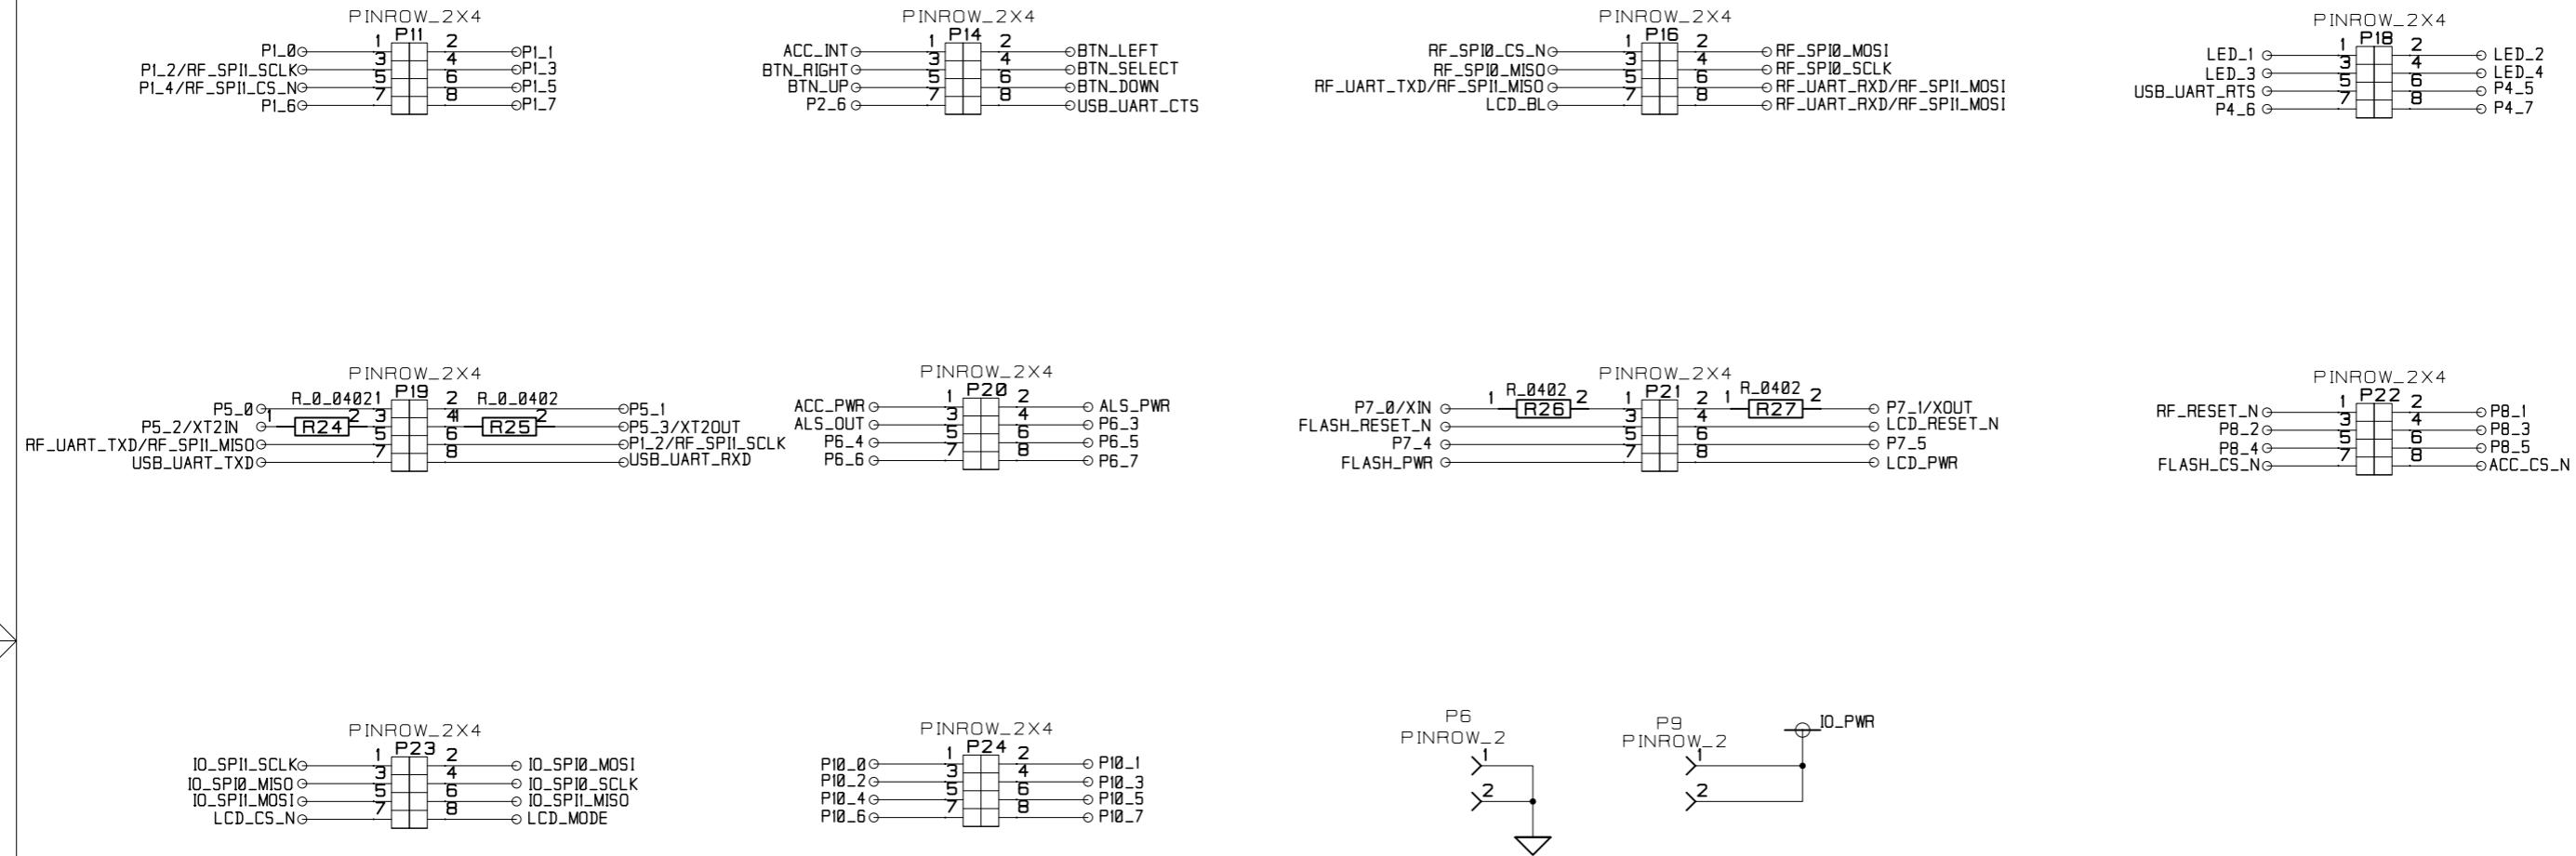

CONTRACT NO. XXX		COMPANY NAME TI Norway, LPRF		
APPROVALS	DATE	DWG		
DRAWN	MAW			
CHECKED		SIZE	FSCM NO.	DWG NO.
ISSUED		A3		REV. 1.7.0
		SCALE		SHEET 7 (7)

## STANDARD TERMS FOR EVALUATION MODULES

1. *Delivery:* TI delivers TI evaluation boards, kits, or modules, including any accompanying demonstration software, components, and/or documentation which may be provided together or separately (collectively, an "EVM" or "EVMs") to the User ("User") in accordance with the terms set forth herein. User's acceptance of the EVM is expressly subject to the following terms.
  - 1.1 EVMs are intended solely for product or software developers for use in a research and development setting to facilitate feasibility evaluation, experimentation, or scientific analysis of TI semiconductors products. EVMs have no direct function and are not finished products. EVMs shall not be directly or indirectly assembled as a part or subassembly in any finished product. For clarification, any software or software tools provided with the EVM ("Software") shall not be subject to the terms and conditions set forth herein but rather shall be subject to the applicable terms that accompany such Software
  - 1.2 EVMs are not intended for consumer or household use. EVMs may not be sold, sublicensed, leased, rented, loaned, assigned, or otherwise distributed for commercial purposes by Users, in whole or in part, or used in any finished product or production system.
- 2 *Limited Warranty and Related Remedies/Disclaimers:*
  - 2.1 These terms do not apply to Software. The warranty, if any, for Software is covered in the applicable Software License Agreement.
  - 2.2 TI warrants that the TI EVM will conform to TI's published specifications for ninety (90) days after the date TI delivers such EVM to User. Notwithstanding the foregoing, TI shall not be liable for a nonconforming EVM if (a) the nonconformity was caused by neglect, misuse or mistreatment by an entity other than TI, including improper installation or testing, or for any EVMs that have been altered or modified in any way by an entity other than TI, (b) the nonconformity resulted from User's design, specifications or instructions for such EVMs or improper system design, or (c) User has not paid on time. Testing and other quality control techniques are used to the extent TI deems necessary. TI does not test all parameters of each EVM. User's claims against TI under this Section 2 are void if User fails to notify TI of any apparent defects in the EVMs within ten (10) business days after delivery, or of any hidden defects with ten (10) business days after the defect has been detected.
  - 2.3 TI's sole liability shall be at its option to repair or replace EVMs that fail to conform to the warranty set forth above, or credit User's account for such EVM. TI's liability under this warranty shall be limited to EVMs that are returned during the warranty period to the address designated by TI and that are determined by TI not to conform to such warranty. If TI elects to repair or replace such EVM, TI shall have a reasonable time to repair such EVM or provide replacements. Repaired EVMs shall be warranted for the remainder of the original warranty period. Replaced EVMs shall be warranted for a new full ninety (90) day warranty period.

### **WARNING**

**Evaluation Kits are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems.**

**User shall operate the Evaluation Kit within TI's recommended guidelines and any applicable legal or environmental requirements as well as reasonable and customary safeguards. Failure to set up and/or operate the Evaluation Kit within TI's recommended guidelines may result in personal injury or death or property damage. Proper set up entails following TI's instructions for electrical ratings of interface circuits such as input, output and electrical loads.**

**NOTE:**

EXPOSURE TO ELECTROSTATIC DISCHARGE (ESD) MAY CAUSE DEGRADATION OR FAILURE OF THE EVALUATION KIT; TI RECOMMENDS STORAGE OF THE EVALUATION KIT IN A PROTECTIVE ESD BAG.

---

### 3 Regulatory Notices:

#### 3.1 United States

##### 3.1.1 Notice applicable to EVMs not FCC-Approved:

**FCC NOTICE:** This kit is designed to allow product developers to evaluate electronic components, circuitry, or software associated with the kit to determine whether to incorporate such items in a finished product and software developers to write software applications for use with the end product. This kit is not a finished product and when assembled may not be resold or otherwise marketed unless all required FCC equipment authorizations are first obtained. Operation is subject to the condition that this product not cause harmful interference to licensed radio stations and that this product accept harmful interference. Unless the assembled kit is designed to operate under part 15, part 18 or part 95 of this chapter, the operator of the kit must operate under the authority of an FCC license holder or must secure an experimental authorization under part 5 of this chapter.

##### 3.1.2 For EVMs annotated as FCC – FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant:

#### CAUTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### FCC Interference Statement for Class A EVM devices

*NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.*

#### FCC Interference Statement for Class B EVM devices

*NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:*

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### 3.2 Canada

##### 3.2.1 For EVMs issued with an Industry Canada Certificate of Conformance to RSS-210 or RSS-247

#### Concerning EVMs Including Radio Transmitters:

This device complies with Industry Canada license-exempt RSSs. Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

#### Concernant les EVMs avec appareils radio:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

#### Concerning EVMs Including Detachable Antennas:

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. This radio transmitter has been approved by Industry Canada to operate with the antenna types listed in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

#### Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante. Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur

#### 3.3 Japan

3.3.1 *Notice for EVMs delivered in Japan:* Please see [http://www.tij.co.jp/lsts/ti\\_ja/general/eStore/notice\\_01.page](http://www.tij.co.jp/lsts/ti_ja/general/eStore/notice_01.page) 日本国内に輸入される評価用キット、ボードについては、次のところをご覧ください。

<https://www.ti.com/ja-jp/legal/notice-for-evaluation-kits-delivered-in-japan.html>

3.3.2 *Notice for Users of EVMs Considered "Radio Frequency Products" in Japan:* EVMs entering Japan may not be certified by TI as conforming to Technical Regulations of Radio Law of Japan.

If User uses EVMs in Japan, not certified to Technical Regulations of Radio Law of Japan, User is required to follow the instructions set forth by Radio Law of Japan, which includes, but is not limited to, the instructions below with respect to EVMs (which for the avoidance of doubt are stated strictly for convenience and should be verified by User):

1. Use EVMs in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
2. Use EVMs only after User obtains the license of Test Radio Station as provided in Radio Law of Japan with respect to EVMs, or
3. Use of EVMs only after User obtains the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to EVMs. Also, do not transfer EVMs, unless User gives the same notice above to the transferee. Please note that if User does not follow the instructions above, User will be subject to penalties of Radio Law of Japan.

【無線電波を送信する製品の開発キットをお使いになる際の注意事項】開発キットの中には技術基準適合証明を受けていないものがあります。技術適合証明を受けていないものご使用に際しては、電波法遵守のため、以下のいずれかの措置を取っていただく必要がありますのでご注意ください。

1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用いただく。
2. 実験局の免許を取得後ご使用いただく。
3. 技術基準適合証明を取得後ご使用いただく。

なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。

上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。日本テキサス・インスツルメンツ株式会社

東京都新宿区西新宿6丁目24番1号

西新宿三井ビル

3.3.3 *Notice for EVMs for Power Line Communication:* Please see [http://www.tij.co.jp/lsts/ti\\_ja/general/eStore/notice\\_02.page](http://www.tij.co.jp/lsts/ti_ja/general/eStore/notice_02.page)  
電力線搬送波通信についての開発キットをお使いになる際の注意事項については、次のところをご覧ください。<https://www.ti.com/ja-jp/legal/notice-for-evaluation-kits-for-power-line-communication.html>

#### 3.4 European Union

3.4.1 *For EVMs subject to EU Directive 2014/30/EU (Electromagnetic Compatibility Directive):*

This is a class A product intended for use in environments other than domestic environments that are connected to a low-voltage power-supply network that supplies buildings used for domestic purposes. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

4 *EVM Use Restrictions and Warnings:*

- 4.1 EVMS ARE NOT FOR USE IN FUNCTIONAL SAFETY AND/OR SAFETY CRITICAL EVALUATIONS, INCLUDING BUT NOT LIMITED TO EVALUATIONS OF LIFE SUPPORT APPLICATIONS.
- 4.2 User must read and apply the user guide and other available documentation provided by TI regarding the EVM prior to handling or using the EVM, including without limitation any warning or restriction notices. The notices contain important safety information related to, for example, temperatures and voltages.
- 4.3 *Safety-Related Warnings and Restrictions:*
  - 4.3.1 User shall operate the EVM within TI's recommended specifications and environmental considerations stated in the user guide, other available documentation provided by TI, and any other applicable requirements and employ reasonable and customary safeguards. Exceeding the specified performance ratings and specifications (including but not limited to input and output voltage, current, power, and environmental ranges) for the EVM may cause personal injury or death, or property damage. If there are questions concerning performance ratings and specifications, User should contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may also result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM user guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, even with the inputs and outputs kept within the specified allowable ranges, some circuit components may have elevated case temperatures. These components include but are not limited to linear regulators, switching transistors, pass transistors, current sense resistors, and heat sinks, which can be identified using the information in the associated documentation. When working with the EVM, please be aware that the EVM may become very warm.
  - 4.3.2 EVMs are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems. User assumes all responsibility and liability for proper and safe handling and use of the EVM by User or its employees, affiliates, contractors or designees. User assumes all responsibility and liability to ensure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard. User assumes all responsibility and liability for any improper or unsafe handling or use of the EVM by User or its employees, affiliates, contractors or designees.
- 4.4 User assumes all responsibility and liability to determine whether the EVM is subject to any applicable international, federal, state, or local laws and regulations related to User's handling and use of the EVM and, if applicable, User assumes all responsibility and liability for compliance in all respects with such laws and regulations. User assumes all responsibility and liability for proper disposal and recycling of the EVM consistent with all applicable international, federal, state, and local requirements.

5. *Accuracy of Information:* To the extent TI provides information on the availability and function of EVMs, TI attempts to be as accurate as possible. However, TI does not warrant the accuracy of EVM descriptions, EVM availability or other information on its websites as accurate, complete, reliable, current, or error-free.

6. *Disclaimers:*

- 6.1 EXCEPT AS SET FORTH ABOVE, EVMS AND ANY MATERIALS PROVIDED WITH THE EVM (INCLUDING, BUT NOT LIMITED TO, REFERENCE DESIGNS AND THE DESIGN OF THE EVM ITSELF) ARE PROVIDED "AS IS" AND "WITH ALL FAULTS." TI DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, REGARDING SUCH ITEMS, INCLUDING BUT NOT LIMITED TO ANY EPIDEMIC FAILURE WARRANTY OR IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADE SECRETS OR OTHER INTELLECTUAL PROPERTY RIGHTS.
- 6.2 EXCEPT FOR THE LIMITED RIGHT TO USE THE EVM SET FORTH HEREIN, NOTHING IN THESE TERMS SHALL BE CONSTRUED AS GRANTING OR CONFERRING ANY RIGHTS BY LICENSE, PATENT, OR ANY OTHER INDUSTRIAL OR INTELLECTUAL PROPERTY RIGHT OF TI, ITS SUPPLIERS/LICENSORS OR ANY OTHER THIRD PARTY, TO USE THE EVM IN ANY FINISHED END-USER OR READY-TO-USE FINAL PRODUCT, OR FOR ANY INVENTION, DISCOVERY OR IMPROVEMENT, REGARDLESS OF WHEN MADE, CONCEIVED OR ACQUIRED.

7. *USER'S INDEMNITY OBLIGATIONS AND REPRESENTATIONS.* USER WILL DEFEND, INDEMNIFY AND HOLD TI, ITS LICENSORS AND THEIR REPRESENTATIVES HARMLESS FROM AND AGAINST ANY AND ALL CLAIMS, DAMAGES, LOSSES, EXPENSES, COSTS AND LIABILITIES (COLLECTIVELY, "CLAIMS") ARISING OUT OF OR IN CONNECTION WITH ANY HANDLING OR USE OF THE EVM THAT IS NOT IN ACCORDANCE WITH THESE TERMS. THIS OBLIGATION SHALL APPLY WHETHER CLAIMS ARISE UNDER STATUTE, REGULATION, OR THE LAW OF TORT, CONTRACT OR ANY OTHER LEGAL THEORY, AND EVEN IF THE EVM FAILS TO PERFORM AS DESCRIBED OR EXPECTED.

8. *Limitations on Damages and Liability:*

8.1 *General Limitations.* IN NO EVENT SHALL TI BE LIABLE FOR ANY SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL, OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF THESE TERMS OR THE USE OF THE EVMS, REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCLUDED DAMAGES INCLUDE, BUT ARE NOT LIMITED TO, COST OF REMOVAL OR REINSTALLATION, ANCILLARY COSTS TO THE PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, RETESTING, OUTSIDE COMPUTER TIME, LABOR COSTS, LOSS OF GOODWILL, LOSS OF PROFITS, LOSS OF SAVINGS, LOSS OF USE, LOSS OF DATA, OR BUSINESS INTERRUPTION. NO CLAIM, SUIT OR ACTION SHALL BE BROUGHT AGAINST TI MORE THAN TWELVE (12) MONTHS AFTER THE EVENT THAT GAVE RISE TO THE CAUSE OF ACTION HAS OCCURRED.

8.2 *Specific Limitations.* IN NO EVENT SHALL TI'S AGGREGATE LIABILITY FROM ANY USE OF AN EVM PROVIDED HEREUNDER, INCLUDING FROM ANY WARRANTY, INDEMNITY OR OTHER OBLIGATION ARISING OUT OF OR IN CONNECTION WITH THESE TERMS, EXCEED THE TOTAL AMOUNT PAID TO TI BY USER FOR THE PARTICULAR EVM(S) AT ISSUE DURING THE PRIOR TWELVE (12) MONTHS WITH RESPECT TO WHICH LOSSES OR DAMAGES ARE CLAIMED. THE EXISTENCE OF MORE THAN ONE CLAIM SHALL NOT ENLARGE OR EXTEND THIS LIMIT.

9. *Return Policy.* Except as otherwise provided, TI does not offer any refunds, returns, or exchanges. Furthermore, no return of EVM(s) will be accepted if the package has been opened and no return of the EVM(s) will be accepted if they are damaged or otherwise not in a resalable condition. If User feels it has been incorrectly charged for the EVM(s) it ordered or that delivery violates the applicable order, User should contact TI. All refunds will be made in full within thirty (30) working days from the return of the components(s), excluding any postage or packaging costs.

10. *Governing Law:* These terms and conditions shall be governed by and interpreted in accordance with the laws of the State of Texas, without reference to conflict-of-laws principles. User agrees that non-exclusive jurisdiction for any dispute arising out of or relating to these terms and conditions lies within courts located in the State of Texas and consents to venue in Dallas County, Texas. Notwithstanding the foregoing, any judgment may be enforced in any United States or foreign court, and TI may seek injunctive relief in any United States or foreign court.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265  
Copyright © 2023, Texas Instruments Incorporated

## IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you fully indemnify TI and its representatives against any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to [TI's Terms of Sale](#), [TI's General Quality Guidelines](#), or other applicable terms available either on [ti.com](#) or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products. Unless TI explicitly designates a product as custom or customer-specified, TI products are standard, catalog, general purpose devices.

TI objects to and rejects any additional or different terms you may propose.

Copyright © 2026, Texas Instruments Incorporated

Last updated 10/2025