

## Table of Contents

|                                                            |           |
|------------------------------------------------------------|-----------|
| <b>Read This First</b>                                     | <b>3</b>  |
| About This Manual                                          | 3         |
| Notational Conventions                                     | 3         |
| Battery Notational Conventions                             | 4         |
| Trademarks                                                 | 4         |
| Glossary                                                   | 4         |
| <b>1 IO Options</b>                                        | <b>4</b>  |
| 1.1 Configuration of the INT Pin                           | 4         |
| <b>2 Basic Measurement System</b>                          | <b>5</b>  |
| 2.1 Introduction                                           | 5         |
| 2.2 Current and Coulomb Counting                           | 5         |
| 2.3 Voltage                                                | 5         |
| 2.4 Temperature                                            | 5         |
| <b>3 Protections</b>                                       | <b>6</b>  |
| 3.1 Introduction                                           | 6         |
| 3.2 Cell Undervoltage Protection                           | 6         |
| 3.3 Cell Undervoltage Compensated Protection               | 7         |
| 3.4 Cell Overvoltage Protection                            | 7         |
| 3.5 Overcurrent in Charge Protection                       | 8         |
| 3.6 Overcurrent in Discharge Protection                    | 8         |
| 3.7 Hardware-Based Protection                              | 9         |
| 3.8 Temperature Protections                                | 12        |
| 3.9 Host Watchdog Protection                               | 14        |
| 3.10 Precharge Timeout Protection                          | 14        |
| 3.11 Fast Charge Timeout Protection                        | 14        |
| 3.12 Overcharge Protection                                 | 15        |
| 3.13 OverCharging Voltage Protection                       | 15        |
| 3.14 OverCharging Current Protection                       | 16        |
| 3.15 OverPrecharging Current Protection                    | 16        |
| <b>4 Integrated Short-Circuit Indication (ISI)</b>         | <b>16</b> |
| 4.1 Introduction                                           | 16        |
| 4.2 Configuration                                          | 16        |
| 4.3 ISI Configuration Parameters                           | 17        |
| <b>5 Permanent Fail</b>                                    | <b>18</b> |
| 5.1 Introduction                                           | 18        |
| 5.2 Safety Cell Undervoltage Permanent Fail                | 19        |
| 5.3 Safety Cell Overvoltage Permanent Fail                 | 19        |
| 5.4 Safety Overcurrent in Charge Permanent Fail            | 19        |
| 5.5 Safety Overcurrent in Discharge Permanent Fail         | 20        |
| 5.6 Safety Overtemperature Cell Permanent Fail             | 20        |
| 5.7 Safety Overtemperature FET Permanent Fail              | 20        |
| 5.8 Capacity Degradation Permanent Fail                    | 21        |
| 5.9 Charge FET Permanent Fail                              | 21        |
| 5.10 Discharge FET Permanent Fail                          | 21        |
| 5.11 Battery Swelling Detection Permanent Fail             | 21        |
| 5.12 Data Flash (DF) Permanent Fail                        | 23        |
| 5.13 Cell Overvoltage Latch Permanent Failure              | 23        |
| 5.14 Manual Permanent Failure                              | 23        |
| 5.15 Permanent Fail ISI                                    | 23        |
| 5.16 Internal Short-Circuit Indication Low Permanent Fail  | 23        |
| 5.17 Internal Short-Circuit Indication High Permanent Fail | 24        |

|                                                                                         |    |
|-----------------------------------------------------------------------------------------|----|
| <b>6 Power Modes</b>                                                                    | 24 |
| 6.1 NORMAL Mode                                                                         | 24 |
| 6.2 SLEEP Mode                                                                          | 24 |
| 6.3 SHIP Mode                                                                           | 26 |
| 6.4 SHELF Mode                                                                          | 27 |
| 6.5 SHUTDOWN Mode                                                                       | 28 |
| 6.6 Startup ENAB Hold Time                                                              | 30 |
| 6.7 Option to Manage Unintended Wakeup from Shutdown                                    | 31 |
| 6.8 Emergency FET Shutdown (EMSHUT)                                                     | 31 |
| 6.9 STORAGE Mode                                                                        | 33 |
| 6.10 System Disconnect                                                                  | 33 |
| <b>7 Gauging</b>                                                                        | 34 |
| 7.1 Introduction                                                                        | 34 |
| 7.2 Dynamic Z-Track Configuration                                                       | 34 |
| 7.3 Gas Gauge Modes                                                                     | 36 |
| 7.4 QMax and Ra                                                                         | 38 |
| 7.5 FullChargeCapacity(FCC), RemainingCapacity(RemCap), and RelativeStateOfCharge(RSOC) | 41 |
| 7.6 Dynamic Z-Track Configuration Options                                               | 41 |
| 7.7 State of Health (SOH)                                                               | 44 |
| 7.8 RSOC Rounding Option                                                                | 45 |
| 7.9 RSOC 1% Hold                                                                        | 45 |
| 7.10 Accumulated Charge Measurement                                                     | 45 |
| <b>8 Gauging for Silicon Anode Battery</b>                                              | 46 |
| 8.1 Introduction                                                                        | 46 |
| 8.2 Capacity Loss And OCV Drift                                                         | 46 |
| 8.3 Silicon Anode Battery Gauging                                                       | 46 |
| 8.4 Silicon Anode Gauging Parameters                                                    | 48 |
| 8.5 Design Qmax                                                                         | 48 |
| 8.6 ManufacturerAccess() 0x0040 SiAnode Status                                          | 48 |
| 8.7 ZT SiAnode Gauging Configuration                                                    | 49 |
| <b>9 Lifetime Data Collection</b>                                                       | 49 |
| 9.1 Description                                                                         | 49 |
| 9.2 Reset                                                                               | 50 |
| <b>10 Linear Charging Functions</b>                                                     | 50 |
| 10.1 Introduction                                                                       | 50 |
| 10.2 Charger Detect (CHGR_DET) Functionality                                            | 51 |
| 10.3 <b>CHG FET FSM and Mode-to-mode Switching (Linear Charger Modes)</b>               | 54 |
| 10.4 Linear Charge Profile                                                              | 57 |
| <b>11 Charge Current Derating</b>                                                       | 59 |
| <b>12 Charge Current Derating Data Flash Parameters</b>                                 | 60 |
| <b>13 Host Interrupts</b>                                                               | 61 |
| 13.1 Description                                                                        | 61 |
| 13.2 Host Interrupts Configuration                                                      | 62 |
| <b>14 Device Security</b>                                                               | 62 |
| 14.1 Description                                                                        | 62 |
| 14.2 SHA-256 Authentication                                                             | 62 |
| 14.3 Security Modes                                                                     | 64 |
| <b>15 ECC</b>                                                                           | 65 |
| 15.1 Introduction                                                                       | 65 |
| 15.2 Gauge Authentication                                                               | 65 |
| 15.3 <i>ECC MAC Commands Description</i>                                                | 66 |
| <b>16 Advanced Charge Algorithm</b>                                                     | 67 |
| 16.1 Introduction                                                                       | 67 |
| 16.2 Charge Temperature Ranges                                                          | 70 |
| 16.3 Voltage Range                                                                      | 70 |
| 16.4 Charging Current                                                                   | 72 |
| 16.5 Charging Voltage                                                                   | 73 |
| 16.6 Valid Charge Termination                                                           | 74 |
| 16.7 Charge and Discharge Termination Flags                                             | 74 |
| 16.8 Terminate Charge and Discharge Alarms                                              | 75 |
| 16.9 Zero Volt Charging (ZVCHG)                                                         | 76 |
| 16.10 Precharge                                                                         | 77 |
| 16.11 Maintenance Charge                                                                | 77 |

|                                                                                  |            |
|----------------------------------------------------------------------------------|------------|
| 16.12 Charge Disabled.....                                                       | 77         |
| 16.13 Charge Inhibit.....                                                        | 78         |
| 16.14 Charge Suspend.....                                                        | 79         |
| 16.15 ChargingVoltage() Rate of Change.....                                      | 79         |
| 16.16 ChargingCurrent() Rate of Change.....                                      | 79         |
| 16.17 Charging Loss Compensation.....                                            | 80         |
| 16.18 Cycle Count/SOH Based Degradation of Charging Voltage and Current.....     | 80         |
| 16.19 Elevated Charge Degradation.....                                           | 82         |
| 16.20 Elevated Voltage Extended Charge Degradation.....                          | 83         |
| 16.21 Charge Voltage Compensation for System Impedance.....                      | 84         |
| 16.22 Cell Swelling Control (via Charging Voltage Degradation).....              | 84         |
| <b>17 Communications.....</b>                                                    | <b>85</b>  |
| 17.1 I <sup>2</sup> C Interface.....                                             | 85         |
| <b>18 Calibration.....</b>                                                       | <b>87</b>  |
| 18.1 Voltage Calibration.....                                                    | 87         |
| 18.2 Current Calibration.....                                                    | 89         |
| 18.3 Temperature Calibration.....                                                | 90         |
| <b>19 Data Commands.....</b>                                                     | <b>92</b>  |
| 19.1 Standard Data Commands.....                                                 | 92         |
| 19.2 0x00, 0x01 ManufacturerAccess() and 0x3E, 0x3F AltManufacturerAccess()..... | 99         |
| <b>20 Data Flash Values.....</b>                                                 | <b>141</b> |
| 20.1 Settings.....                                                               | 141        |
| 20.2 Advanced Charging Algorithm.....                                            | 176        |
| 20.3 Power.....                                                                  | 195        |
| 20.4 System Data.....                                                            | 201        |
| 20.5 SBS Configuration.....                                                      | 203        |
| 20.6 Lifetimes.....                                                              | 206        |
| 20.7 Protections.....                                                            | 219        |
| 20.8 Permanent Fail.....                                                         | 230        |
| 20.9 PF Status.....                                                              | 233        |
| 20.10 Black Box.....                                                             | 239        |
| 20.11 Gas Gauging.....                                                           | 241        |
| 20.12 RA Table.....                                                              | 252        |
| <b>21 Data Flash Access and Format.....</b>                                      | <b>254</b> |
| 21.1 Data Flash Access.....                                                      | 254        |
| 21.2 Data Formats.....                                                           | 254        |
| <b>22 Data Flash Summary.....</b>                                                | <b>255</b> |
| 22.1 Data Flash Summary - Subject to Change upon FW build details.....           | 255        |
| <b>23 Revision History.....</b>                                                  | <b>278</b> |

## Read This First

### About This Manual

This manual discusses the modules and peripherals of the BQ27Z855 device, and how each is used to build a complete battery pack gas gauge and protection solution. For electrical specifications, refer to the **BQ27Z855 Dynamic Z-Track™ Gauge with Integrated Protection and Authentication for 1 Cell Battery Packs**

### Notational Conventions

The following notation is used if SBS commands and data flash values are mentioned within a text block:

- SBS commands: *italics* with parentheses and no breaking spaces; for example, *RemainingCapacity()*
- Data flash: *italics*, **bold**, and breaking spaces; for example, **Design Capacity**
- Register bits and flags: *italics* and brackets; for example, *[TDA]*
- Data flash bits: *italics* and **bold**; for example, **[LED1]**
- Modes and states: ALL CAPITALS; for example, UNSEALED

The reference format for SBS commands is: SBS:Command Name(Command No.): Manufacturer Access(MA No.)[Flag]; for example:

SBS:Voltage(0x09), or SBS:ManufacturerAccess(0x00): Seal Device(0x0020)

## Battery Notational Conventions

The following notation is used if SBS commands and data flash values are mentioned within a text block:

- SBS commands: *italics* with parentheses and no breaking spaces; for example, *RemainingCapacity()*
- Data flash: *italics*, **bold**, and breaking spaces; for example, ***Design Capacity***
- Register bits and flags: *italics* and brackets; for example, *[TDA]*
- Data flash bits: *italics* and **bold**; for example, ***[LED1]***
- Modes and states: ALL CAPITALS; for example, UNSEALED

The reference format for SBS commands is: SBS:Command Name(Command No.): Manufacturer Access(MA No.)(Flag); for example:

SBS:Voltage(0x09), or SBS:ManufacturerAccess(0x00): Seal Device(0x0020)

## Trademarks

Dynamic Z Track™, Impedance Track™ are trademarks of Ti.

All trademarks are the property of their respective owners.

## Glossary

[TI Glossary](#) This glossary lists and explains terms, acronyms, and definitions.

## 1 IO Options

### 1.1 Configuration of the INT Pin

The INT pin can be optionally configured as a digital output for a host interrupt signal using **HOSTINT\_EN**. When enabled, the INT pin operates as an open-drain output that is asserted by firmware when an interrupt condition is detected. When not configured for host interrupt, two independent GPIO output features are available through **IO Config**: Permanent Failure (PF) indication (**IO Config [GPIO\_PF]**) and general-purpose Flag Map Setup outputs (**IO Config [GPIO\_EN]**). See **IO Config** for details.

| Class    | Subclass      | Name           | Type | Min  | Max  | Default | Unit       |
|----------|---------------|----------------|------|------|------|---------|------------|
| Settings | Configuration | Int Pin Config | H1   | 0x00 | 0x01 | 0x00    | Hex        |
| 7        | 6             | 5              | 4    | 3    | 2    | 1       | 0          |
| RSVD     | RSVD          | RSVD           | RSVD | RSVD | RSVD | RSVD    | HOSTINT_EN |

**RSVD (Bits 7–1):** Reserved. Do not use.

**HOSTINT\_EN (Bit 0):** Enables the INT pin as an open-drain host interrupt output. When set, the firmware asserts the INT pin when an interrupt condition is detected. For details on interrupt sources, polarity, and output driver configuration, see [Section 13](#).

1 = Enabled

0 = Disabled (default)

### Note

By default, the host interrupt option is not selected. If the host interrupt option is selected, see [Section 13](#) for host interrupt configuration details.

### Note

When **HOSTINT\_EN** = 0, two independent GPIO output features are configurable through **IO Config** :

- Set **IO Config** [ **GPIO\_PF** ] = 1 to enable Permanent Failure (PF) indication. A designated package pin is asserted when any PF condition is detected. This feature is independent of **GPIO\_EN** .
- Set **IO Config** [ **GPIO\_EN** ] = 1 to enable Flag Map Setup outputs. Up to four firmware status flags — from registers such as *BatteryStatus()*, charging temperature range, charging voltage range, gauging status, or safety status — can each be routed to a designated GPIO output pin. See IO Config for *Flag Map Setup* configuration details.

### Note

The ENAB pin is a separate, dedicated active-low digital input with a weak internal pull-up to BAT, used exclusively for device wake-up/enable functions while in Shutdown mode (see the chapter on power modes and device enable for details). It has no configurable options.

## 2 Basic Measurement System

### 2.1 Introduction

The gauge contains an integrated Coulomb counter (CCADC) for current measurement and a second order delta-sigma ADC for cell voltage and temperature measurements.

### 2.2 Current and Coulomb Counting

The integrating delta-sigma ADC in the gauge measures the charge/discharge flow of the battery by measuring the voltage drop across a small-value sense resistor between the SRP and SRN pins. The 18-bit integrating ADC measures bipolar signals from -0.10 V to 0.10 V with 923nV resolution. The gauge reports charge activity when  $V_{SR} = V_{(SRP)} - V_{(SRN)}$  is positive, and discharge activity when  $V_{SR} = V_{(SRP)} - V_{(SRN)}$  is negative. This data is scaled and translated into mA using **CC Gain** and reported through *Current()*. The gauge uses this information for gauging and lifetime data logging functions. In NORMAL and SLEEP modes, the gauge continuously monitors the measured current and integrates the digital signal over time using an internal coulomb counter (also known as the integrated ADC), which handles the gauging.

In addition, the integrating ADC (CC2 filter of CCADC) is sampled during voltage measurements and converted to mA in the same manner. This data is used for gauging (but not coulomb counting) and reported through Cell 1 Current in *DASStatus1()*.

### 2.3 Voltage

#### 2.3.1 Cell Voltage

The second order delta-sigma ADC in the gauge measures the cell voltage at 250-ms intervals in NORMAL mode, and **Voltage Time** -second intervals in SLEEP mode. This data is scaled and translated into mV using **Cell Gain** and reported through *Voltage()*. The gauge uses this information for gauging and lifetime data logging functions.

#### 2.3.2 Pack Voltage

The second order delta-sigma ADC in the gauge measures the pack voltage (at the PACK pin) at 250-ms intervals in NORMAL mode, and **Voltage Time** -second intervals in SLEEP mode. This data is scaled and translated into mV using **Pack Gain** and reported through PACK pin voltage in *DASStatus1()*. The gauge uses this information for entry to SHUTDOWN mode, and zero-volt charging.

### 2.4 Temperature

#### 2.4.1 Internal Temperature

The second order delta-sigma ADC in the gauge measures internal temperature at 250-ms intervals in NORMAL mode and **Voltage Time** -second intervals in SLEEP mode. This data is translated into 0.1 K using the parameters in **Internal Temp Model** and reported through *InternalTemperature()*. The internal temperature can be used for gauging and lifetime data logging functions, and reported through *Temperature()* if **Temperature Enable[TSint]** = 1.

## 2.4.2 Cell Temperature

The second order delta-sigma ADC in the gauge measures cell temperature via an external thermistor at 250-ms intervals in NORMAL mode and **Voltage Time** -second intervals in SLEEP mode. This data is translated into 0.1 K using the parameters in **Cell Temp Model** and reported through *Temperature()* if **Temperature Enable[TS]** = 1. The cell temperature can be used for gauging and lifetime data logging functions if **Temperature Enable[TS]** = 1.

The cell temperature measurement requires an external 10-kΩ negative temperature coefficient (NTC) thermistor, such as the Semitec 103AT–2, connected between VSS and the TS pin.

## 2.4.3 Temperature Configuration

The following data flash parameter enables/disables the available temperature sensor options.

| Class    | Subclass      | Name               | Type | Min  | Max  | Default | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|----------|---------------|--------------------|------|------|------|---------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Settings | Configuration | Temperature Enable | H1   | 0x00 | 0x0F | 0x03    | Determines whether the internal temperature (TSInt) or the external temperature (TS1 on TS pin) is reported with <i>Temperature()</i> .<br>Bit 0: TSInt–Enables internal TS<br>Bit 1: TS1–Enables external TS pin<br>0, 0: Neither enabled, <i>Temperature()</i> reports –273.2K.<br>0, 1: Enables internal TS, <i>Temperature()</i> reports the internal temperature.<br>1, 0: Enables TS1, <i>Temperature()</i> reports the value determined by the thermistor on the TS pin.<br>1, 1: TSInt and TS1 are enabled, <i>Temperature()</i> reports the higher of the two values. |

# 3 Protections

## 3.1 Introduction

The device provides recoverable protection, which includes firmware-based protection and hardware-based protection. Firmware-based protections requires one additional second to react when the trigger condition is detected. When the protection is triggered, charging and/or discharging is disabled. This is indicated by the *OperationStatus()*[XCHG] = 1 when charging is disabled, and/or the *OperationStatus()*[XD SG] = 1 when discharging is disabled. Once the protection is recovered, charging and discharging resume. All protection items can be enabled or disabled under **Settings:Enabled Protections A** , **Settings:Enabled Protections B** , **Settings:Enabled Protections C** , and **Settings:Enabled Protections D** .

When the protections and permanent fails are triggered, the *BatteryStatus()*[TCA][TDA][FD][OCA][OTA] is set according to the type of safety protections. [Section 16.8](#) provides a summary of the various alarms flags' set conditions.

## 3.2 Cell Undervoltage Protection

The device can detect cell undervoltage in batteries and protect cells from damage by preventing further discharge.

| Status   | Condition                                                                                                                                                                                                                                                                                                                                                                                                                                          | Action                                                                                                                                                  |
|----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| Normal   | cell voltage > <b>CUV:Threshold</b>                                                                                                                                                                                                                                                                                                                                                                                                                | <i>SafetyAlert()</i> [CUV] = 0<br><i>BatteryStatus()</i> [TDA] = 0                                                                                      |
| Alert    | cell voltage ≤ <b>CUV:Threshold</b>                                                                                                                                                                                                                                                                                                                                                                                                                | <i>SafetyAlert()</i> [CUV] = 1<br><i>BatteryStatus()</i> [TDA] = 1                                                                                      |
| Trip     | cell voltage ≤ <b>CUV:Threshold</b> for <b>CUV:Delay</b> duration                                                                                                                                                                                                                                                                                                                                                                                  | <i>SafetyAlert()</i> [CUV] = 0<br><i>SafetyStatus()</i> [CUV] = 1<br><i>BatteryStatus()</i> [FD] = 1, [TDA] = 0<br><i>OperationStatus()</i> [XD SG] = 1 |
| Recovery | Condition 1:<br><i>SafetyStatus()</i> [CUV] = 1 AND<br>cell voltage ≥ <b>CUV:Recovery</b> AND<br><b>Protection Configuration</b> [CUV_RECOV_CHG] = 0<br><br>OR Condition 2:<br><i>SafetyStatus()</i> [CUV] = 1 AND<br>cell voltage ≥ <b>CUV:Recovery</b> AND<br><b>Protection Configuration</b> [CUV_RECOV_CHG] = 1 AND<br>PACK voltage > <b>Charger Present Threshold</b> for <b>[Protections]</b><br><b>[CUV][Recovery Charger Present Time]</b> | <i>SafetyStatus()</i> [CUV] = 0<br><i>BatteryStatus()</i> [FD] = 0, [TDA] = 0<br><i>OperationStatus()</i> [XD SG] = 0                                   |

### 3.3 Cell Undervoltage Compensated Protection

The device can detect cell undervoltage in batteries and protect cells from damage by preventing further discharge. The protection is compensated by the  $Current() \times \text{cell resistance}$ .

| Status   | Condition                                                                                                                                                                                                                                                                                                                         | Action                                                                                                                           |
|----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| Normal   | cell voltage – $Current() \times \text{cell resistance} > \text{CUVC: Threshold}$                                                                                                                                                                                                                                                 | $SafetyAlert()[CUVC] = 0$<br>$BatteryStatus()[TDA] = 0$                                                                          |
| Alert    | cell voltage – $Current() \times \text{cell resistance} \leq \text{CUVC: Threshold}$                                                                                                                                                                                                                                              | $SafetyAlert()[CUVC] = 1$<br>$BatteryStatus()[TDA] = 1$                                                                          |
| Trip     | cell voltage – $Current() \times \text{cell resistance} \leq \text{CUVC: Threshold}$ for <b>CUVC:Delay</b> duration                                                                                                                                                                                                               | $SafetyAlert()[CUVC] = 0$<br>$SafetyStatus()[CUVC] = 1$<br>$BatteryStatus()[FD] = 1, [TDA] = 0$<br>$OperationStatus()[XDSG] = 1$ |
| Recovery | Condition 1:<br>$SafetyStatus()[CUVC] = 1$ AND<br>cell voltage – $Current() \times \text{cell resistance} > \text{CUVC: Recovery}$ AND<br><b>Protection Configuration[CUV_RECOV_CHG] = 0</b>                                                                                                                                      | $SafetyStatus()[CUVC] = 0$<br>$BatteryStatus()[FD] = 0, [TDA] = 0$<br>$OperationStatus()[XDSG] = 0$                              |
|          | OR Condition 2:<br>$SafetyStatus()[CUVC] = 1$ AND<br>cell voltage – $Current() \times \text{cell resistance} \geq \text{CUVC: Recovery}$ AND<br><b>Protection Configuration[CUV_RECOV_CHG] = 1</b> AND<br>PACK voltage > <b>Charger Present Threshold</b> for <b>[Protections]</b><br><b>[CUV][Recovery Charger Present Time]</b> |                                                                                                                                  |

### 3.4 Cell Overvoltage Protection

The device can detect cell overvoltage in batteries and protect cells from damage by preventing further charging.

#### Note

The protection detection threshold may be influenced by the temperature settings of the advanced charging algorithm and the measured temperature. Additionally, this protection feature can be enabled to create a PF by setting the **[COVL]** bit in the **Enabled PF A** register.

| Status                                                   | Condition                                                        | Action                                                                                                                                                |
|----------------------------------------------------------|------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| Normal,<br>$ChargingStatus()[UT] \text{ or } [LT] = 1$   | cell voltage < <b>COV:Threshold Low Temp</b>                     | $SafetyAlert()[COV] = 0$<br>$PfAlert()[COVL] = 0$<br>Decrement COVL counter by one after each <b>COV:Counter Dec Delay</b> period if COVL counter > 0 |
| Normal,<br>$ChargingStatus()[STL] \text{ or } [STH] = 1$ | cell voltage < <b>COV:Threshold</b>                              |                                                                                                                                                       |
| Normal,<br>$ChargingStatus()[HT] = 1$                    | cell voltage < <b>COV:Threshold High Temp</b>                    |                                                                                                                                                       |
| Normal,<br>$ChargingStatus()[RT] = 1$                    | cell voltage < <b>COV:Threshold Rec Temp</b>                     |                                                                                                                                                       |
| Normal,<br>Degrade condition = 1                         | cell voltage < <b>COV:Threshold - Degrade</b>                    |                                                                                                                                                       |
| Alert,<br>$ChargingStatus()[UT] \text{ or } [LT] = 1$    | cell voltage $\geq \text{COV:Threshold Low Temp}$                | $SafetyAlert()[COV] = 1$<br>Increment COVL counter by one each 1s during cell overvoltage detection.                                                  |
| Alert,<br>$ChargingStatus()[STL] \text{ or } [STH] = 1$  | cell voltage $\geq \text{COV:Threshold}$                         |                                                                                                                                                       |
| Alert,<br>$ChargingStatus()[HT] = 1$                     | cell voltage $\geq \text{COV:Threshold High Temp}$               |                                                                                                                                                       |
| Alert,<br>$ChargingStatus()[RT] = 1$                     | cell voltage $\geq \text{COV:Threshold Rec Temp}$                |                                                                                                                                                       |
| Alert,<br>Degrade condition = 1                          | cell voltage $\geq \text{COV:Threshold - Degrade}$               |                                                                                                                                                       |
| Trip                                                     | $SafetyAlert()[COV] = 1$ for <b>COV:Delay</b>                    | $SafetyStatus()[COV] = 1$<br>$OperationStatus()[XCHG] = 1$                                                                                            |
| Latch Trip                                               | COVL counter $\geq \text{Protections:COVL Counter}$              | $SafetyStatus()[COVL] = 1$                                                                                                                            |
| Recovery                                                 | $SafetyStatus()[COV] = 1$ AND cell voltage < <b>COV:Recovery</b> | $SafetyStatus()[COV] = 0$<br>$OperationStatus()[XCHG] = 0$ if<br>$SafetyStatus()[COVL] = 0$                                                           |

| Status      | Condition                                            | Action                                                                                                              |
|-------------|------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|
| Latch Reset | $SafetyStatus()[COVL] = 1$ for <b>COV:Reset</b> time | $SafetyStatus()[COVL] = 0$<br>Reset COVL counter.<br>$OperationStatus()[XCHG] = 0$ if<br>$SafetyStatus()[COVL] = 0$ |

### 3.5 Overcurrent in Charge Protection

The device has two independent overcurrent in charge protections that can be set to different current and delay thresholds to accommodate different charging behaviors.

| Status   | Condition                                                                                                    | Action                                                                                                               |
|----------|--------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|
| Normal   | $Current() < OCC1:Threshold$                                                                                 | $SafetyAlert()[OCC1] = 0$                                                                                            |
| Normal   | $Current() < OCC2:Threshold$                                                                                 | $SafetyAlert()[OCC2] = 0$                                                                                            |
| Alert    | $Current() \geq OCC1:Threshold$                                                                              | $SafetyAlert()[OCC1] = 1$                                                                                            |
| Alert    | $Current() \geq OCC2:Threshold$                                                                              | $SafetyAlert()[OCC2] = 1$                                                                                            |
| Trip     | $Current() \geq OCC1:Threshold$ for <b>OCC1:Delay</b> duration                                               | $SafetyAlert()[OCC1] = 0$<br>$SafetyStatus()[OCC1] = 1$<br>Charging is not allowed.<br>$OperationStatus()[XCHG] = 1$ |
| Trip     | $Current() \geq OCC2:Threshold$ for <b>OCC2:Delay</b> duration                                               | $SafetyAlert()[OCC2] = 0$<br>$SafetyStatus()[OCC2] = 1$<br>$OperationStatus()[XCHG] = 1$                             |
| Recovery | $SafetyStatus()[OCC1] = 1$ AND<br>$Current() \leq OCC:Recovery Threshold$ for <b>OCC:Recovery Delay</b> time | $SafetyStatus()[OCC1] = 0$<br>$BatteryStatus()[TCA] = 0$<br>$OperationStatus()[XCHG] = 0$                            |
| Recovery | $SafetyStatus()[OCC2] = 1$ AND<br>$Current() \leq OCC:Recovery Threshold$ for <b>OCC:Recovery Delay</b> time | $SafetyStatus()[OCC2] = 0$<br>$BatteryStatus()[TCA] = 0$<br>$OperationStatus()[XCHG] = 0$                            |

### 3.6 Overcurrent in Discharge Protection

The device has two independent overcurrent in discharge protections that can be set to current and delay thresholds to accommodate different load behaviors. Additionally, this protection feature can be enabled to create a PF by setting the **[OCDL]** bit in **Enabled PF C** register.

| Status   | Condition                                                                                                    | Action                                                                                                                                                                                   |
|----------|--------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Normal   | $Current() > OCD1:Threshold$                                                                                 | $SafetyAlert()[OCD1] = 0$<br>$SafetyAlert()[OCDL] = 0$<br>$PFAAlert()[SOCDL] = 0$<br>Decrement OCDL1 counter by one after each <b>OCD:Counter Dec Delay</b> period, if OCDL1 counter > 0 |
| Normal   | $Current() > OCD2:Threshold$                                                                                 | $SafetyAlert()[OCD2] = 0$<br>$SafetyAlert()[OCDL] = 0$<br>$PFAAlert()[SOCDL] = 0$<br>Decrement OCDL2 counter by one after each <b>OCD:Counter Dec Delay</b> period if OCDL2 counter > 0  |
| Alert    | $Current() \leq OCD1:Threshold$                                                                              | $SafetyAlert()[OCD1] = 1$<br>$BatteryStatus()[TDA] = 1$                                                                                                                                  |
| Alert    | $Current() \leq OCD2:Threshold$                                                                              | $SafetyAlert()[OCD2] = 1$<br>$BatteryStatus()[TDA] = 1$                                                                                                                                  |
| Trip     | $Current() \leq OCD1:Threshold$ for <b>OCD1:Delay</b> duration                                               | $SafetyAlert()[OCD1] = 0$<br>$SafetyStatus()[OCD1] = 1$<br>$BatteryStatus()[TDA] = 0$<br>$OperationStatus()[XDSG] = 1$<br>Increment OCDL1 counter                                        |
| Trip     | $Current() \leq OCD2:Threshold$ for <b>OCD2:Delay</b> duration                                               | $SafetyAlert()[OCD2] = 0$<br>$SafetyStatus()[OCD2] = 1$<br>$BatteryStatus()[TDA] = 0$<br>$OperationStatus()[XDSG] = 1$<br>Increment OCDL2 counter                                        |
| Recovery | $SafetyStatus()[OCD1] = 1$ AND<br>$Current() \geq OCD:Recovery Threshold$ for <b>OCD:Recovery Delay</b> time | $SafetyStatus()[OCD1] = 0$<br>$BatteryStatus()[TDA] = 0$<br>$OperationStatus()[XDSG] = 0$                                                                                                |
| Recovery | $SafetyStatus()[OCD2] = 1$ AND<br>$Current() \geq OCD:Recovery Threshold$ for <b>OCD:Recovery Delay</b> time | $SafetyStatus()[OCD2] = 0$<br>$BatteryStatus()[TDA] = 0$<br>$OperationStatus()[XDSG] = 0$                                                                                                |

| Status      | Condition                                                  | Action                                                                                                                                                                                                      |
|-------------|------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Latch Alert | OCDL counter > 0                                           | <i>SafetyAlert()</i> [OCDL] = 1 if <i>SafetyEnable</i> [OCDL] is set.<br><i>PFAAlert()</i> [SOCDL] = 1 if <i>PFEEnable()</i> [AOCDL] is set.                                                                |
| Latch Trip  | OCDL counter ≥ <b>OCD:Latch limit</b>                      | <i>SafetyStatus()</i> [OCDL] = 1 if <i>SafetyEnable</i> [OCDL] is set.<br><i>PFStatus()</i> [SOCDL] = 1 if <i>PFEEnable()</i> [SCOV] is set.<br><i>SafetyAlert()</i> [OCDL] = <i>PFAAlert()</i> [SOCDL] = 0 |
| Latch Reset | <i>SafetyStatus()</i> [OCDL] = 1 for <b>OCD:Reset</b> time | <i>SafetyStatus()</i> [OCDL] = 0<br>Reset OCDL counter.<br><i>OperationStatus</i> [XDSG] = 0 if <i>SafetyStatus()</i> [OCD1] = 0 and<br><i>SafetyStatus()</i> [OCD2] = 0                                    |

### 3.7 Hardware-Based Protection

The device has five main hardware-based protections—AOCD, AOCC, ASCD, ACUV, and ACOV—with adjustable thresholds and delay times. For current-based protections (AOCD, AOCC, ASCD), the **Threshold** settings are in mV; therefore, the actual current that triggers the protection is based on the  $R_{SENSE}$  used in the schematic design. For voltage-based protections (ACUV, ACOV), the thresholds are configured in mV.

For details on how to configure the AFE hardware protection, refer to the registers in the AFE section.

All of the hardware-based protections provide a Trip/Latch Alert/Recovery protection. The latch feature stops the FETs from toggling on and off continuously on a persistent faulty condition.

In general, when a fault is detected after the **Delay** time, the CHG and DSG FETs will be disabled (Trip stage), and an internal fault counter will be incremented (Alert stage). Since both FETs are off, the current will drop to 0 mA. After **Recovery** time, the CHG and DSG FETs will be turned on again (Recovery stage).

If the alert is caused by a current spike, the fault count will be decremented after **Counter Dec Delay** time. If this is a persistent faulty condition, the device will enter the Trip stage after **Delay** time, and repeat the Trip/Latch Alert/Recovery cycle. The internal fault counter is incremented every time the device goes through the Trip/Latch Alert/Recovery cycle. Once the internal fault counter hits the **Latch Limit**, the protection enters a Latch stage and the fault will only be cleared through the Latch Reset condition.

The Trip/Latch Alert/Recovery/Latch stages are documented in each of the following hardware-based protection sections.

The device uses embedded pack configuration ( **[NR]** = 1). The latch reset condition is based on the **Reset** time parameter.

#### 3.7.1 Analog Over Current Charge Protection (AOCC)

The device has a hardware-based Analog Over Current Charge protection (AOCC) with adjustable current and delay time. Additionally, this protection feature can be enabled to create a PF by setting the **[AOCC]** bit in the **Enabled PF B** register.

| Status      | Condition                                                                                    | Action                                                                                                                                                                                                           |
|-------------|----------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Normal      | $Current() < (AOCC \text{ Voltage Threshold} / R_{SENSE})$                                   | <i>SafetyAlert()</i> [AOCC] = 0, if AOCC counter = 0<br><i>PFAAlert()</i> [AOCC] = 0<br>Decrement AOCC counter by one after each <b>AOCC:Counter Dec Delay</b> period, if AOCC counter > 0                       |
| Trip        | $Current() \geq (AOCC \text{ Voltage Threshold} / R_{SENSE})$ for <b>AOCC Delay</b> duration | <i>SafetyStatus()</i> [AOCC] = 1<br><i>OperationStatus()</i> [XCHG] = 1<br>Increment AOCC counter                                                                                                                |
| Recovery    | <i>SafetyStatus()</i> [AOCC] = 1 for <b>AOCC:Recovery</b> time                               | <i>SafetyStatus()</i> [AOCC] = 0<br><i>OperationStatus()</i> [XCHG] = 0 if <i>SafetyStatus()</i> [AOCC] = 0.                                                                                                     |
| Latch Alert | AOCC counter > 0                                                                             | <i>SafetyAlert()</i> [AOCC] = 1<br><i>PFAAlert()</i> [AOCC] = 1, if <i>PFEEnable()</i> [AOCC] is set.                                                                                                            |
| Latch Trip  | AOCC counter ≥ <b>AOCC:Latch Limit</b>                                                       | <i>SafetyAlert()</i> [AOCC] = 0<br><i>SafetyStatus()</i> [AOCC] = 1<br><i>OperationStatus()</i> [XCHG] = 1<br><i>PFAAlert()</i> [AOCC] = 0<br><i>PFStatus()</i> [AOCC] = 1, if <i>PFEEnable()</i> [AOCC] is set. |
| Latch Reset | <i>SafetyStatus()</i> [AOCC] = 1 for <b>AOCC:Reset</b> time                                  | <i>SafetyStatus()</i> [AOCC] = 0<br><i>OperationStatus()</i> [XCHG] = 0 if <i>SafetyStatus()</i> [AOCC] = 0.                                                                                                     |

### 3.7.2 Analog Over Current Discharge Protection (AOCD)

The device has a hardware-based over current in discharge protection with adjustable current and delay time. Additionally, this protection feature can be enabled to create a PF by setting the **[AOCDL]** bit in the **Enabled PF B** register.

| Status      | Condition                                                                             | Action                                                                                                                                                                               |
|-------------|---------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Normal      | $Current() < (AOCD \text{ Voltage Threshold} / R_{SENSE})$                            | $SafetyAlert()[AOCDL] = 0$ , if AOCDL counter = 0<br>$PFAAlert()[AOCDL] = 0$<br>Decrement AOCDL counter by one after each <b>AOCD:Counter Dec Delay</b> period, if AOCDL counter > 0 |
| Trip        | $Current() \geq (AOCD \text{ Voltage Threshold} / R_{SENSE})$ for AOCD Delay duration | $SafetyStatus()[AOCD] = 1$<br>$OperationStatus()[XDSG] = 1$<br>increment AOCDL counter                                                                                               |
| Recovery    | $SafetyStatus()[AOCD] = 1$ for <b>AOCD:Recovery</b> time                              | $SafetyStatus()[AOCD] = 0$<br>$OperationStatus()[XDSG] = 0$ if $SafetyStatus()[AOCDL] = 0$ .                                                                                         |
| Latch Alert | AOCDL counter > 0                                                                     | $SafetyAlert()[AOCDL] = 1$<br>$PFAAlert()[AOCDL] = 1$ , if $PFEEnable()[AOCDL]$ is set.                                                                                              |
| Latch Trip  | AOCDL counter $\geq$ <b>AOCD:Latch Limit</b>                                          | $SafetyAlert()[AOCDL] = 0$<br>$SafetyStatus()[AOCDL] = 1$<br>$OperationStatus()[XDSG] = 1$<br>$PFAAlert()[AOCDL] = 0$<br>$PFAStatus()[AOCDL] = 1$ , if $PFEEnable()[AOCDL]$ is set.  |
| Latch Reset | $SafetyStatus()[AOCDL] = 1$ for <b>AOCD:Reset</b> time                                | $SafetyStatus()[AOCDL] = 0$<br>$OperationStatus()[XDSG] = 0$ if $SafetyStatus()[AOCD] = 0$                                                                                           |

### 3.7.3 Short Circuit in Discharge Protection

The device has a hardware-based short circuit in discharge protection with adjustable current and delay time. Additionally, this protection feature can be enabled to create a PF by setting the **[ASCDL]** bit in the **Enabled PF B** register.

| Status      | Condition                                                                             | Action                                                                                                                                                                              |
|-------------|---------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Normal      | $Current() < (ASCD \text{ Voltage Threshold} / R_{SENSE})$                            | $SafetyAlert()[ASCDL] = 0$ if ASCDL counter = 0<br>$PFAAlert()[ASCDL] = 0$<br>Decrement ASCDL counter by one after each <b>ASCD:Counter Dec Delay</b> period, if ASCDL counter > 0  |
| Trip        | $Current() \geq (ASCD \text{ Voltage Threshold} / R_{SENSE})$ for ASCD Delay duration | $SafetyStatus()[ASCD] = 1$<br>$OperationStatus()[XDSG] = 1$<br>Increment ASCDL counter                                                                                              |
| Recovery    | $SafetyStatus()[ASCD] = 1$ for <b>ASCD:Recovery</b> time                              | $SafetyStatus()[ASCD] = 0$<br>$OperationStatus()[XDSG] = 0$ if $SafetyStatus()[ASCDL] = 0$ .                                                                                        |
| Latch Alert | ASCDL counter > 0                                                                     | $SafetyAlert()[ASCDL] = 1$<br>$PFAAlert()[ASCDL] = 1$ , if $PFEEnable()[ASCDL]$ is set.                                                                                             |
| Latch Trip  | ASCDL counter $\geq$ <b>ASCD:Latch Limit</b>                                          | $SafetyAlert()[ASCDL] = 0$<br>$SafetyStatus()[ASCDL] = 1$<br>$OperationStatus()[XDSG] = 1$<br>$PFAAlert()[ASCDL] = 0$<br>$PFAStatus()[ASCDL] = 1$ , if $PFEEnable()[ASCDL]$ is set. |
| Latch Reset | $SafetyStatus()[ASCDL] = 1$ for <b>ASCD:Reset</b> time                                | $SafetyStatus()[ASCDL] = 0$<br>$OperationStatus()[XDSG] = 0$ if $SafetyStatus()[ASCD] = 0$                                                                                          |

### 3.7.4 ACUV (Cell Under Voltage)

#### Overview

The ACUV (Analog Cell Under Voltage) protection is a hardware-based protection that monitors individual cell voltages using the AFE (Analog Front End) hardware comparator. This protection provides faster response than firmware-based CUV protection because it operates directly in hardware without firmware intervention.

Unlike the current-based hardware protections (AOCD, AOCC, ASCD), ACUV is a voltage-based protection that monitors cell voltages against a configurable threshold.

## Protection Trigger

ACUV protection triggers when any cell voltage falls below the **Settings AFE Under Voltage** threshold configured in the AFE hardware registers.

When triggered:

- **SafetyStatus()[ACUV]** bit (bit 6 of SafetyStatus byte 3) is set
- The DSG (Discharge) FET is disabled to prevent further cell damage

### Note

ACUV does NOT have an alert stage - it triggers directly to protection status. This differs from current-based hardware protections which use Trip/Latch Alert/Recovery cycles.

## Recovery Behavior

As of firmware v0.03 (BMSFW-11409), ACUV uses **threshold-based recovery** instead of time-based recovery:

- The ACUV SafetyStatus flag clears **immediately** (no time delay) when the minimum cell voltage rises to or above the **Protections ACUV Recovery** threshold
- Upon recovery, the AFE hardware BATUV latch is also cleared
- The DSG FET is re-enabled (if no other protections are active)

**Configuration Note:** Configure the Recovery threshold higher than the associated **Settings AFE Under Voltage** threshold to provide hysteresis and prevent oscillation near the threshold.

## SafetyStatus Bit

| Flag | Description                               |
|------|-------------------------------------------|
| ACUV | AFE cell under voltage condition detected |

## 3.7.5 ACOV (Cell Over Voltage)

### Overview

The ACOV (Analog Cell Over Voltage) protection is a hardware-based protection that monitors individual cell voltages using the AFE (Analog Front End) hardware comparator. This protection provides faster response than firmware-based COV protection because it operates directly in hardware without firmware intervention.

Unlike the current-based hardware protections (AOCD, AOCC, ASCD), ACOV is a voltage-based protection that monitors cell voltages against a configurable threshold.

## Protection Trigger

ACOV protection triggers when any cell voltage rises above the **Settings AFE Over Voltage** threshold configured in the AFE hardware registers.

When triggered:

- **SafetyStatus()[ACOV]** bit (bit 7 of SafetyStatus byte 3) is set
- The CHG (Charge) FET is disabled to prevent further cell damage

### Note

ACOV does NOT have an alert stage - it triggers directly to protection status. This differs from current-based hardware protections which use Trip/Latch Alert/Recovery cycles.

## Recovery Behavior

As of firmware v0.03 (BMSFW-11409), ACOV uses **threshold-based recovery** instead of time-based recovery:

- The ACOV SafetyStatus flag clears **immediately** (no time delay) when the maximum cell voltage falls to or below the **Protections ACOV Recovery** threshold
- Upon recovery, the AFE hardware BATOV latch is also cleared
- The CHG FET is re-enabled (if no other protections are active)

**Configuration Note:** Configure the Recovery threshold lower than the associated **Settings AFE Over Voltage** threshold to provide hysteresis and prevent oscillation near the threshold.

### SafetyStatus Bit

| Flag | Description                              |
|------|------------------------------------------|
| ACOV | AFE cell over voltage condition detected |

## 3.8 Temperature Protections

The device provides overtemperature and undertemperature protections, based on cell and FET temperature measurements. The cell temperature-based protections are further divided into CHARGE and DISCHARGE conditions. This section describes in detail each of the protection functions.

The device supports a external thermistor and one internal temperature sensor for measuring temperature. Unused temperature sensors must be disabled by clearing the corresponding flag in **Settings:Temperature Enable[USER\_TS][TS1][TSInt]**.

Each of the temperature sensors can be used as a source for cell or FET temperature measurement. Setting the corresponding flag in **Settings:Temperature Mode[USER\_TS Mode][TS1 Mode][TSInt Mode]** configures the sensor to measure FET temperature. Clearing the corresponding flag configures the sensor to measure cell temperature.

The average temperature among the sensors set for FET measurement is used when **Settings:DA Configuration[FTEMP]** is set. The maximum temperature is used when **[FTEMP]** is cleared.

Under cell temperature protections use the minimum cell temperature sensor. Over cell temperature protections use the maximum cell temperature sensor.

The **Temperature()** command returns the cell temperature measurement. Setting **Settings:DA Configuration[CTEMP1][CTEMP0]** to 1, 1 uses the smart temperature sensor. Setting **Settings:DA Configuration[CTEMP1][CTEMP0]** to 1, 0 uses the lowest cell temperature sensor. Setting **[CTEMP1][CTEMP0]** to 0, 1 uses the average of the sensors. A setting of 0, 0 uses the maximum cell temperature sensor.

Smart temperature sensor scheme **[CTEMP1][CTEMP0] = 1, 1** determine the cell temperature as:

- Cell temperature = minimum cell temp, if  $[\text{minimum cell temp}] - [\text{Mid Point Temp}] \leq [\text{maximum cell temp}] - [\text{Mid Point Temp}]$
- Cell temperature = maximum cell temp, if  $[\text{minimum cell temp}] - [\text{Mid Point Temp}] > [\text{maximum cell temp}] - [\text{Mid Point Temp}]$

**ManufacturerBlockAccess()** command **DAStatus2()** returns all the temperature measurements.

The **Settings:Temperature Mode[USER\_TS]** bit enables the host to write the user temperature with the MAC command **WriteTemp()**. When this feature is used, the temperature must be written in 0.1°K. This feature is helpful on PCBs that do not have the area or height to include thermistors, but do have a host that is capable of using its own onboard measurement of cell temperature. If **[USER\_TS] = 1**, like other **[TS1 Mode]** options cell or FET temperature is selected as per **Settings:DA Configuration[CTEMP1][CTEMP0]** settings. To enable writing the temperature with MAC command **WriteTemp()**, first a two-word override MAC sequence is required. The two-word key is programmable using **ManufacturerAccess()** 0x0035 Security Keys. Both keys must be sent within 4 seconds of each other. Once the correct two-word MAC sequence is received, **ManufacturerAccess()** 0x3008 **WriteTemp()** can be used.

The cell-based overtemperature and undertemperature safety provides protections in CHARGE and DISCHARGE conditions. The battery pack is in CHARGE mode when **Current() > Chg Current Threshold** and **BatteryStatus()[DSG] = 0**. The overtemperature and undertemperature in CHARGE protections are active in this mode. **BatteryStatus()[DSG]** is set to 1 in a non-CHARGE mode condition, which includes RELAX and

DISCHARGE modes. The overtemperature and undertemperature in discharge protections are active in these two modes. See [Section 7.3](#) for detailed descriptions of the gas gauge modes.

### 3.8.1 Overtemperature in Charge Protection

The device has an overtemperature protection for cells under charge.

| Status   | Condition                                                                      | Action                                                                                                                                                                                                             |
|----------|--------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Normal   | Cell Temp < <b>OTC:Threshold</b> OR not charging                               | <i>SafetyAlert()</i> [OTC] = 0                                                                                                                                                                                     |
| Alert    | Cell Temp ≥ <b>OTC:Threshold</b> AND charging                                  | <i>SafetyAlert()</i> [OTC] = 1<br><i>BatteryStatus()</i> [TCA] = 1                                                                                                                                                 |
| Trip     | Cell Temp ≥ <b>OTC:Threshold</b> AND<br>Charging for <b>OTC:Delay</b> duration | <i>SafetyAlert()</i> [OTC] = 0<br><i>SafetyStatus()</i> [OTC] = 1<br><i>BatteryStatus()</i> [OTA] = 1<br><i>BatteryStatus()</i> [TCA] = 0<br><i>OperationStatus()</i> [XCHG] = 1 if <b>FET Options</b> [OTFET] = 1 |
| Recovery | <i>SafetyStatus()</i> [OTC] AND<br>Cell Temp ≤ <b>OTC:Recovery</b>             | <i>SafetyStatus()</i> [OTC] = 0<br><i>BatteryStatus()</i> [OTA] = 0<br><i>BatteryStatus()</i> [TCA] = 0<br><i>OperationStatus()</i> [XCHG] = 0                                                                     |

### 3.8.2 Overtemperature in Discharge Protection

The device has an overtemperature protection for cells in the DISCHARGE or RELAX state (that is, non-charging state with *BatteryStatus*[DSG] = 1).

| Status   | Condition                                                                                                                    | Action                                                                                                                                                                                                             |
|----------|------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Normal   | Cell Temp < <b>OTD:Threshold</b> OR charging                                                                                 | <i>SafetyAlert()</i> [OTD] = 0                                                                                                                                                                                     |
| Alert    | Cell Temp ≥ <b>OTD:Threshold</b> AND<br>Not charging (that is, <i>BatteryStatus</i> [DSG] = 1)                               | <i>SafetyAlert()</i> [OTD] = 1<br><i>BatteryStatus()</i> [TDA] = 1                                                                                                                                                 |
| Trip     | Cell Temp ≥ <b>OTD:Threshold</b> AND<br>Not charging (that is, <i>BatteryStatus</i> [DSG] = 1) for <b>OTD:Delay</b> duration | <i>SafetyAlert()</i> [OTD] = 0<br><i>SafetyStatus()</i> [OTD] = 1<br><i>BatteryStatus()</i> [OTA] = 1<br><i>OperationStatus()</i> [XDSG] = 1 if <b>FET Options</b> [OTFET] = 1<br><i>BatteryStatus()</i> [TDA] = 0 |
| Recovery | <i>SafetyStatus()</i> [OTD] AND<br>Cell Temp ≤ <b>OTD:Recovery</b>                                                           | <i>SafetyStatus()</i> [OTD] = 0<br><i>BatteryStatus()</i> [OTA] = 0<br><i>OperationStatus()</i> [XDSG] = 0<br><i>BatteryStatus()</i> [TDA] = 0                                                                     |

### 3.8.3 Overtemperature FET Protection

The device has an overtemperature protection to limit the FET temperature.

| Status   | Condition                                                                                      | Action                                                                                                                                                                                                                                |
|----------|------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Normal   | FET Temperature in <i>DAStatus2()</i> < <b>OTF:Threshold</b>                                   | <i>SafetyAlert()</i> [OTF] = 0                                                                                                                                                                                                        |
| Alert    | FET Temperature in <i>DAStatus2()</i> ≥ <b>OTF:Threshold</b>                                   | <i>SafetyAlert()</i> [OTF] = 1<br><i>BatteryStatus()</i> [TDA] = 1, [TCA] = 1                                                                                                                                                         |
| Trip     | FET Temperature in <i>DAStatus2()</i> ≥ <b>OTF:Threshold</b> for<br><b>OTF:Delay</b> duration  | <i>SafetyAlert()</i> [OTF] = 0<br><i>SafetyStatus()</i> [OTF] = 1<br><i>BatteryStatus()</i> [OTA] = 1<br><i>BatteryStatus()</i> [TDA] = 0, [TCA] = 0<br><i>OperationStatus()</i> [XCHG][XDSG] = 1,1 if <b>FET Options</b> [OTFET] = 1 |
| Recovery | <i>SafetyStatus()</i> [OTF] AND<br>FET Temperature in <i>DAStatus2()</i> ≤ <b>OTF:Recovery</b> | <i>SafetyStatus()</i> [OTF] = 0<br><i>BatteryStatus()</i> [OTA] = 0<br><i>BatteryStatus()</i> [TDA] = 0, [TCA] = 0<br><i>OperationStatus()</i> [XCHG][XDSG] = 0,0                                                                     |

### 3.8.4 Undertemperature in Charge Protection

The device has an undertemperature protection for cells in charge direction.

| Status | Condition                                        | Action                                                             |
|--------|--------------------------------------------------|--------------------------------------------------------------------|
| Normal | Cell Temp > <b>UTC:Threshold</b> OR not charging | <i>SafetyAlert()</i> [UTC] = 0                                     |
| Alert  | Cell Temp ≤ <b>UTC:Threshold</b> AND charging    | <i>SafetyAlert()</i> [UTC] = 1<br><i>BatteryStatus()</i> [TCA] = 1 |

| Status   | Condition                                                                           | Action                                                                                                                                       |
|----------|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| Trip     | Cell Temp $\leq$ <b>UTC:Threshold</b> AND<br>Charging for <b>UTC:Delay</b> duration | <i>SafetyAlert()</i> [UTC] = 0<br><i>SafetyStatus()</i> [UTC] = 1<br><i>OperationStatus()</i> [XCHG] = 1<br><i>BatteryStatus()</i> [TCA] = 0 |
| Recovery | <i>SafetyStatus()</i> [UTC] AND<br>Cell Temp $\geq$ <b>UTC:Recovery</b>             | <i>SafetyStatus()</i> [UTC] = 0<br><i>OperationStatus()</i> [XCHG] = 0<br><i>BatteryStatus()</i> [TCA] = 0                                   |

### 3.8.5 Undertemperature in Discharge Protection

The device has an undertemperature protection for cells in the DISCHARGE or RELAX state (that is, non-charging state with *BatteryStatus*[DSG] = 1).

| Status   | Condition                                                                                                                         | Action                                                                                                                                        |
|----------|-----------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| Normal   | Cell Temp $>$ <b>UTD:Threshold</b> OR charging                                                                                    | <i>SafetyAlert()</i> [UTD] = 0                                                                                                                |
| Alert    | Cell Temp $\leq$ <b>UTD:Threshold</b> AND<br>Not charging (that is, <i>BatteryStatus</i> [DSG] = 1)                               | <i>SafetyAlert()</i> [UTD] = 1<br><i>BatteryStatus()</i> [TDA] = 1                                                                            |
| Trip     | Cell Temp $\leq$ <b>UTD:Threshold</b> AND<br>Not charging (that is, <i>BatteryStatus</i> [DSG] = 1) for <b>UTD:Delay</b> duration | <i>SafetyAlert()</i> [UTD] = 0<br><i>SafetyStatus()</i> [UTD] = 1<br><i>OperationStatus()</i> [XDSDG] = 1<br><i>BatteryStatus()</i> [TDA] = 0 |
| Recovery | <i>SafetyStatus()</i> [UTD] AND<br>Cell Temp $\geq$ <b>UTD:Recovery</b>                                                           | <i>SafetyStatus()</i> [UTD] = 0<br><i>OperationStatus()</i> [XDSDG] = 0<br><i>BatteryStatus()</i> [TDA] = 0                                   |

### 3.9 Host Watchdog Protection

The device can check periodic communication over I2C and prevent usage of the battery pack if no valid communication is detected.

| Status   | Condition                                              | Action                                                                  |
|----------|--------------------------------------------------------|-------------------------------------------------------------------------|
| Trip     | No valid I2C transaction for <b>HWD:Delay</b> duration | <i>SafetyStatus()</i> [HWDF] = 1<br><i>OperationStatus()</i> [XCHG] = 1 |
| Recovery | Valid I2C transaction detected                         | <i>SafetyStatus()</i> [HWD] = 0<br><i>OperationStatus()</i> [XCHG] = 0  |

### 3.10 Precharge Timeout Protection

The device can measure the precharge time and stop charging if it exceeds the adjustable period.

| Status              | Condition                                                                                | Action                                                                                                                                |
|---------------------|------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| Enable              | <i>Current()</i> $>$ <b>PTO:Charge Threshold</b> AND<br><i>ChargingStatus()</i> [PV] = 1 | Start PTO timer<br><i>SafetyAlert()</i> [PTOS] = 0                                                                                    |
| Suspend or Recovery | <i>Current()</i> $<$ <b>PTO:Suspend Threshold</b>                                        | Stop PTO timer<br><i>SafetyAlert()</i> [PTOS] = 1                                                                                     |
| Trip                | PTO timer $>$ <b>PTO:Delay</b>                                                           | Stop PTO timer<br><i>SafetyStatus()</i> [PTO] = 1<br><i>OperationStatus()</i> [XCHG] = 1                                              |
| Reset               | <i>SafetyStatus()</i> [PTO] = 1 AND<br>Discharge by an amount of <b>PTO:Reset</b>        | Stop and reset PTO timer<br><i>SafetyAlert()</i> [PTOS] = 0<br><i>SafetyStatus()</i> [PTO] = 0<br><i>OperationStatus()</i> [XCHG] = 0 |

#### Note

The PTO timer resets when battery is detected fully charged ( *BatteryStatus()*[FC] = 1).

### 3.11 Fast Charge Timeout Protection

The device can measure the charge time and stop charging if it exceeds the adjustable period.

| Status              | Condition                                                                                                                                         | Action                                                                                                              |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|
| Enable              | $Current() > \text{CTO:Charge Threshold}$ AND<br>( $ChargingStatus()[LV] = 1$ OR<br>$ChargingStatus()[MV] = 1$ OR<br>$ChargingStatus()[HV] = 1$ ) | Start CTO timer<br>$SafetyAlert()[CTOS] = 0$                                                                        |
| Suspend or Recovery | $Current() < \text{CTO:Suspend Threshold}$                                                                                                        | Stop CTO timer<br>$SafetyAlert()[CTOS] = 1$                                                                         |
| Trip                | $CTO \text{ time} > \text{CTO:Delay}$                                                                                                             | Stop CTO timer<br>$SafetyStatus()[CTO] = 1$<br>$OperationStatus()[XCHG] = 1$                                        |
| Reset               | $SafetyStatus()[CTO] = 1$ AND<br>Discharge by an amount of <b>CTO:Reset</b>                                                                       | Stop and reset CTO timer<br>$SafetyAlert()[CTOS] = 0$<br>$SafetyStatus()[CTO] = 0$<br>$OperationStatus()[XCHG] = 0$ |

### Note

The CTO timer resets when the battery is detected as fully charged ( **BatteryStatus()[FC] = 1** ).

## 3.12 Overcharge Protection

The device can prevent continued charging if the pack is charged in excess over *FullChargeCapacity()*.

| Status   | Condition                                                                                                                                                                              | Action                                                                                                                                                                              |
|----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Normal   | $RelativeStateOfCharge() < 100\%$                                                                                                                                                      | $SafetyAlert()[OC] = 0$                                                                                                                                                             |
| Alert    | $RelativeStateOfCharge() \geq 100\%$ AND<br>Internal charge counter $> 0$                                                                                                              | $SafetyAlert()[OC] = 1$                                                                                                                                                             |
| Trip     | $RelativeStateOfCharge() \geq 100\%$ AND<br>Internal charge counter $\geq \text{OC:Threshold}$                                                                                         | $SafetyAlert()[OC] = 0$<br>$SafetyStatus()[OC] = 1$<br>, $[OCA] = 1$ if the device is in the CHARGE state (that is,<br>$BatteryStatus[DSG] = 0$ ).<br>$OperationStatus()[XCHG] = 1$ |
| Recovery | Condition 1:<br>$SafetyStatus()[OC] = 1$ AND<br>discharge of <b>Recovery</b><br>OR Condition 2:<br>$SafetyStatus()[OC] = 1$ AND<br>$RelativeStateOfCharge() < \text{OC:RSOC Recovery}$ | $SafetyStatus()[OC] = 0$<br>, $[OCA] = 0$<br>$OperationStatus()[XCHG] = 0$                                                                                                          |

## 3.13 OverCharging Voltage Protection

The device can stop charging if it measures a difference between the requested *ChargingVoltage()* and the delivered voltage from the charger.

### Note

*ChargingVoltage()* will be set to 0 mV when the protection is tripped. The *ChargingVoltage()* for the recovery is the intended or targeted charging voltage, not the 0 mV that was set due to the trip of protection.

| Status   | Condition                                                                                                                        | Action                                                                                                                 |
|----------|----------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|
| Normal   | PACK voltage in $DAStatus1() < ChargingVoltage() + \text{CHGV:Threshold}$                                                        | $SafetyAlert()[CHGV] = 0$                                                                                              |
| Alert    | PACK voltage in $DAStatus1() \geq ChargingVoltage() + \text{CHGV:Threshold}$                                                     | $SafetyAlert()[CHGV] = 1$<br>$BatteryStatus()[TCA] = 1$                                                                |
| Trip     | PACK voltage in $DAStatus1() \geq ChargingVoltage() + \text{CHGV:Threshold}$ for <b>CHGV:Delay</b> period                        | $SafetyAlert()[CHGV] = 0$<br>$SafetyStatus()[CHGV] = 1$<br>$BatteryStatus()[TCA] = 0$<br>$OperationStatus()[XCHG] = 1$ |
| Recovery | $SafetyStatus()[CHGV] = 1$ AND<br>PACK voltage in $DAStatus1() \leq$<br>intended <i>ChargingVoltage()</i> + <b>CHGV Recovery</b> | $SafetyStatus()[CHGV] = 0$<br>$BatteryStatus()[TCA] = 0$<br>$OperationStatus()[XCHG] = 0$                              |

### 3.14 OverCharging Current Protection

The device can stop charging if it measures a difference between the requested *ChargingCurrent()* and the delivered current from the charger. This protection is designed to recover by a discharge event; therefore, **CHGC:Recovery** should be set to a negative value in data flash.

| Status   | Condition                                                                                                       | Action                                                                                                                 |
|----------|-----------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|
| Normal   | $Current() < ChargingCurrent() + CHGC:Threshold$                                                                | $SafetyAlert()[CHGC] = 0$                                                                                              |
| Alert    | $Current() \geq ChargingCurrent() + CHGC:Threshold$                                                             | $SafetyAlert()[CHGC] = 1$<br>$BatteryStatus()[TCA] = 1$                                                                |
| Trip     | $Current() \geq ChargingCurrent() + CHGC:Threshold$ for <b>CHGC:Delay</b> period                                | $SafetyAlert()[CHGC] = 0$<br>$SafetyStatus()[CHGC] = 1$<br>$BatteryStatus()[TCA] = 0$<br>$OperationStatus()[XCHG] = 1$ |
| Recovery | $SafetyStatus()[CHGC] = 1$ AND<br>$Current() \leq CHGC:Recovery\ Threshold$ for <b>CHGC:Recovery Delay</b> time | $SafetyStatus()[CHGC] = 0$<br>$BatteryStatus()[TCA] = 0$<br>$OperationStatus()[XCHG] = 0$                              |

### 3.15 OverPrecharging Current Protection

The device can stop charging if it measures a difference between the requested *ChargingCurrent()* and the delivered current from the charger during precharge. This protection is designed to recover by a discharge event; therefore, **PCHGC:Recovery** should be set to a negative value in data flash.

| Status   | Condition                                                                                                            | Action                                                                                                                                |
|----------|----------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| Normal   | $Current() < ChargingCurrent() + PCHGC:Threshold$ AND<br>$ChargingStatus()[PV] = 1$                                  | $SafetyAlert()[PCHGC] = 0$                                                                                                            |
| Alert    | $Current() \geq ChargingCurrent() + PCHGC:Threshold$ AND<br>$ChargingStatus()[PV] = 1$                               | $SafetyAlert()[PCHGC] = 1$<br>$BatteryStatus()[TCA] = 1$                                                                              |
| Trip     | $Current() \geq ChargingCurrent() + PCHGC:Threshold$ for <b>PCHGC:Delay</b> period AND<br>$ChargingStatus()[PV] = 1$ | $SafetyAlert()[PCHGC] = 0$<br>$SafetyStatus()[PCHGC] = 1$<br>If charging, $BatteryStatus()[TCA] = 0$<br>$OperationStatus()[XCHG] = 1$ |
| Recovery | $SafetyStatus()[PCHGC] = 1$ AND<br>$Current() \leq PCHGC:Recovery\ Threshold$ for <b>PCHGC:Recovery Delay</b> time   | $SafetyStatus()[PCHGC] = 0$<br>$BatteryStatus()[TCA] = 0$<br>$OperationStatus()[XCHG] = 0$                                            |

## 4 Integrated Short-Circuit Indication (ISI)

### 4.1 Introduction

The device integrates an algorithm to aid in detection of a battery internal short. Internal shorts in Lithium-ion batteries are caused in many ways, including, but not limited to, formation of lithium dendrites, manufacturing defects inside battery cells, and compressive shock. Once formed, the internal short may become stronger over time. Internal shorts can be estimated through an observed elevated rate of self-discharge.

Since shorts can occur in each phase of the battery life (manufacturing, shipping, end application use), monitoring of the battery should be done throughout its lifetime.

### 4.2 Configuration

The following parameters configure the performance of the ISI algorithm.

#### 4.2.1 Self-Discharge Current

Self-discharge current includes not only the battery self-discharge and gauge operating current, but any other currents that do not flow through the sense resistor. Each design needs to be evaluated to account for any of these sources that could leech current from the battery. The current aggregate of all these sources are not included in the estimate of the internal short. This parameter should contain the sum of the currents. Otherwise, it should not be changed from the default value.

#### 4.2.2 Low Internal Short Threshold

Current threshold used for detecting a small internal short in the battery, specified as a negative value. The threshold is negative since internal shorts discharge the battery. This threshold should be set to 50% of the desired small internal short current to be detected.

#### 4.2.3 High Internal Short Threshold

Current threshold used for detecting a large internal short in the battery, specified as a negative value. The threshold is negative since internal shorts discharge the battery. This threshold should be set to 50% of the desired large internal short current to be detected.

#### 4.2.4 Threshold Passes to Completion

Minimum number of passes on **Low Internal Short Threshold** and **High Internal Short Threshold** to allow the algorithm to complete and temporarily timeout for the present relaxation.

#### 4.2.5 Manufacturing Completion Timeout

Duration that the algorithm goes into timeout for the Manufacturing/Storage mode. This timeout starts when the ISI algorithm completes, but will end if RELAX mode is reentered. The gauge is allowed to enter SLEEP mode(s) and reduce its power consumption while the ISI algorithm is timed out. A smaller value allows for more frequent monitoring of the battery during this stage but at the cost of power consumption.

### 4.3 ISI Configuration Parameters

The following parameters configure the interaction of the ISI algorithm with the Permanent Failure engine.

#### 4.3.1 ISI Configuration

| Class | Subclass | Name              | Type | Min    | Max          | Default  | Unit   |
|-------|----------|-------------------|------|--------|--------------|----------|--------|
| ISI   | Register | ISI Configuration | H2   | 0x0000 | 0x0007       | 0x0000   | Hex    |
| 15    | 14       | 13                | 12   | 11     | 10           | 9        | 8      |
| RSVD  | RSVD     | RSVD              | RSVD | RSVD   | RSVD         | RSVD     | RSVD   |
| 7     | 6        | 5                 | 4    | 3      | 2            | 1        | 0      |
| RSVD  | RSVD     | RSVD              | RSVD | RSVD   | LO_COARSE_EN | ISI_DOD0 | ISI_EN |

**LO\_COARSE\_EN (Bit 2):** Enables the coarse detection interval for low internal short threshold detection. When enabled, the ISI algorithm applies the coarse interval timing when the detected self-discharge current is in the low internal short threshold region.

- 1 = Low threshold coarse detection interval enabled
- 0 = Low threshold coarse detection interval disabled (default)

**ISI\_DOD0 (Bit 1):** Enables ISI detection beginning from depth of discharge (DOD) = 0. When disabled, ISI detection uses the standard DOD window.

- 1 = ISI detection active starting at DOD = 0
- 0 = ISI detection uses standard DOD window (default)

**ISI\_EN (Bit 0):** Enables ISI (Internal Short Indication) detection. Must be set to 1 to activate ISI monitoring. All three enable conditions must be satisfied before ISI becomes active: this bit must be set, gauging must be enabled, and the ISI chemistry ID must match the main chemistry ID.

- 1 = ISI detection enabled
- 0 = ISI detection disabled (default)

### 4.3.2 ISI Configuration

| Class | Subclass      | Name                             | Type | Min    | Max   | Default | Unit   | Description                                |
|-------|---------------|----------------------------------|------|--------|-------|---------|--------|--------------------------------------------|
| ISI   | Configuration | Self-Discharge Current           | I2   | –32768 | 0     | –6      | 0.1 mA | Calculated system self-discharge           |
| ISI   | Configuration | Low Internal Short Threshold     | I2   | –32768 | –40   | –40     | 0.1 mA | Threshold setting for lower Internal Short |
| ISI   | Configuration | High Internal Short Threshold    | I2   | –32768 | –300  | –300    | 0.1 mA |                                            |
| ISI   | Configuration | Threshold Passes to Completion   | U2   | 3      | 65535 | 3       | –      |                                            |
| ISI   | Configuration | Manufacturing Completion Timeout | U1   | 0      | 255   | 1       | hours  |                                            |

## 5 Permanent Fail

### 5.1 Introduction

The device can permanently disable the use of the battery pack in case of a significant failure. The permanent failure checks, except for IFC and DFW, can be enabled or disabled individually by setting the appropriate bit in **Settings:Enabled PF A**, **Settings:Enabled PF B**, **Settings:Enabled PF C**, and **Settings:Enabled PF D**. All permanent failure checks, except for IFC and DFW, are disabled until *ManufacturingStatus()[PF]* is set. When any *PFStatus()* bit is set, the device enters PERMANENT FAIL mode and the following actions are taken in sequence:


1. Precharge, charge, and discharge FETs are turned off.
2. *OperationStatus()[PF]* = 1, *[XCHG]* = 1, *[XDSG]* = 1
3. The following SBS data is changed: *BatteryStatus()[TCA]* = 1, *BatteryStatus()[TDA]* = 1, *ChargingCurrent()* = 0, and *ChargingVoltage()* = 0.
4. A backup of the internal AFE hardware registers are written to data flash under **PF Status: AFE Regs**: **OCC**, **OCD**, **Short Circuit Discharge**, **Current Discharge Wake**, **Current Charge Wake**, **OCC 1 Delay 2**, **OCC 1 Delay 1**, **OCD 1 Delay 2**, **OCD 1 Delay 1**, **Short Circuit Discharge Delay**, **Over Temperature Delay**, **OCD Wake Delay 2**, **OCD Wake Delay 1**, **OCC Wake Delay 2**, **OCC Wake Delay 1**.
5. The black box data of the last three *SafetyStatus()* changes leading up to PF with the time difference is written into the black box data flash along with the 1<sup>st</sup> *PFStatus()* value.
6. The following SBS values are preserved in data flash for failure analysis:
  - *SafetyAlert()*
  - *SafetyStatus()*
  - *PFAAlert()*
  - *PFStatus()*
  - *OperationStatus()*
  - *ChargingStatus()*
  - *GaugingStatus()*
  - Voltages in *DAStatus1()*
  - *Current()*
  - TSINT, and TS1from *DAStatus2()*
  - Cell DOD0 and passed charge
7. Data flash writing is disabled (except to store subsequent *PFStatus()* flags).

#### Note

While the device is in PERMANENT FAIL mode, any new *SafetyAlert()*, *SafetyStatus()*, *PFAAlert()*, and *PFStatus()* flags that are set are added to the permanent fail log. In addition, new *PFStatus()* flags are recorded in the Black Box Recorder 2<sup>nd</sup> and 3<sup>rd</sup> PF Status entries.

### 5.1.1 Black Box Recorder

The Black Box Recorder maintains the last three updates of *SafetyStatus()* in memory. When entering PERMANENT FAIL mode, this information is written to data flash together with the first three updates of *PFStatus()* after the PF event.

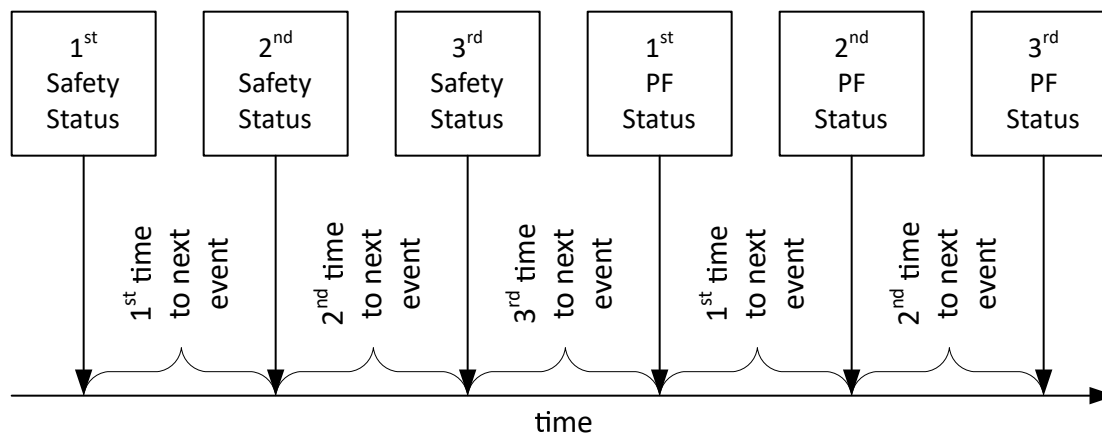

#### Note

This information is useful in failure analysis, and can provide a full recording of the events and conditions leading up to the permanent failure.

If there were less than three safety events before PF, then some information will be left blank.

## 5.2 Safety Cell Undervoltage Permanent Fail

The device can permanently disable the battery in the case of significant undervoltage in any of the cells.

| Status | Condition                                                         | Action                                                                                        |
|--------|-------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|
| Normal | cell voltage > <b>SUV:Threshold</b>                               | <i>PFA</i> Alert()[SUV] = 0<br><i>BatteryStatus</i> ()[TDA] = 0                               |
| Alert  | cell voltage ≤ <b>SUV:Threshold</b>                               | <i>PFA</i> Alert()[SUV] = 1<br><i>BatteryStatus</i> ()[TDA] = 1                               |
| Trip   | cell voltage ≤ <b>SUV:Threshold</b> for <b>SUV:Delay</b> duration | <i>PFA</i> Alert()[SUV] = 0<br><i>PF</i> Status()[SUV] = 1<br><i>BatteryStatus</i> ()[FD] = 1 |

### 5.2.1 SUV Check Option

When **Protection Configuration[SUV\_MODE]** is set, the SUV PF check only applies when the gauge wakes up from shutdown. The CHG and DSG FETs are disabled for the duration of the test ( **SUV:Delay** ) to prevent an applied charge voltage from masking a copper deposition condition.

## 5.3 Safety Cell Overvoltage Permanent Fail

The device can permanently disable the battery in the case of significant overvoltage in any of the cells.

| Status | Condition                                                         | Action                                                          |
|--------|-------------------------------------------------------------------|-----------------------------------------------------------------|
| Normal | cell voltage < <b>SOV:Threshold</b>                               | <i>PFA</i> Alert()[SOV] = 0                                     |
| Alert  | cell voltage ≥ <b>SOV:Threshold</b>                               | <i>PFA</i> Alert()[SOV] = 1<br><i>BatteryStatus</i> ()[TCA] = 1 |
| Trip   | cell voltage ≥ <b>SOV:Threshold</b> for <b>SOV:Delay</b> duration | <i>PFA</i> Alert()[SOV] = 0<br><i>PF</i> Status()[SOV] = 1      |

## 5.4 Safety Overcurrent in Charge Permanent Fail

The device can permanently disable the battery in the case of significant overcurrent in the CHARGE state.

| Status | Condition                                                 | Action                                               |
|--------|-----------------------------------------------------------|------------------------------------------------------|
| Normal | $Current() < SOCC:Threshold$                              | $PFAAlert()[SOCC] = 0$                               |
| Alert  | $Current() \geq SOCC:Threshold$                           | $PFAAlert()[SOCC] = 1$<br>$BatteryStatus()[TCA] = 1$ |
| Trip   | $Current() \geq SOCC:Threshold$ for $SOCC:Delay$ duration | $PFAAlert()[SOCC] = 0$<br>$PFStatus()[SOCC] = 1$     |

## 5.5 Safety Overcurrent in Discharge Permanent Fail

The device can permanently disable the battery in the case of significant overcurrent in the DISCHARGE or RELAX state.

| Status | Condition                                                 | Action                                               |
|--------|-----------------------------------------------------------|------------------------------------------------------|
| Normal | $Current() > SOCD:Threshold$                              | $PFAAlert()[SOCD] = 0$                               |
| Alert  | $Current() \leq SOCD:Threshold$                           | $PFAAlert()[SOCD] = 1$<br>$BatteryStatus()[TDA] = 1$ |
| Trip   | $Current() \leq SOCD:Threshold$ for $SOCD:Delay$ duration | $PFAAlert()[SOCD] = 0$<br>$PFStatus()[SOCD] = 1$     |

## 5.6 Safety Overtemperature Cell Permanent Fail

The device can permanently disable the battery pack in case of significant overtemperature of the cells detected using the external TS1 temperature sensor, which are configured to report as cell temperature,  $Temperature()$ . For **Safety Overtemperature Cell Permanent Fail**, the temperature sensor with the highest temperature is used.

| Status | Condition                                                                                                                                                  | Action                                                                       |
|--------|------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------|
| Normal | CHARGE mode: All $Temp() < SOTC:Threshold$<br>DISCHARGE or RELAX mode: All $Temp() < SOTD:Threshold$                                                       | $PFAAlert()[SOT] = 0$                                                        |
| Alert  | CHARGE mode: A $Temp() \geq SOTC:Threshold$<br>DISCHARGE or RELAX mode: A $Temp() \geq SOTD:Threshold$                                                     | $PFAAlert()[SOT] = 1$<br>$BatteryStatus()[OTA] = 0$                          |
| Trip   | CHARGE mode: A $Temp() \geq SOTC:Threshold$ for $SOTC:Delay$ duration<br>DISCHARGE or RELAX mode: A $Temp() \geq SOTD:Threshold$ for $SOTD:Delay$ duration | $PFAAlert()[SOT] = 0$<br>$PFStatus()[SOT] = 1$<br>$BatteryStatus()[OTA] = 1$ |

## 5.7 Safety Overtemperature FET Permanent Fail

The device can permanently disable the battery pack in case of significant overtemperature on the power FET. The temperature sensor(s) can be configured to report as FET temperature in  $DAStatus2()$  by setting the corresponding flag in **Temperature Mode** and **DA Configuration[FTEMP]**.

| Status | Condition                                                                      | Action                                                                         |
|--------|--------------------------------------------------------------------------------|--------------------------------------------------------------------------------|
| Normal | FET Temperature in $DAStatus2() < SOTF:Threshold$                              | $PFAAlert()[SOTF] = 0$                                                         |
| Alert  | FET Temperature in $DAStatus2() \geq SOTF:Threshold$                           | $PFAAlert()[SOTF] = 1$<br>$BatteryStatus()[OTA] = 0$                           |
| Trip   | FET Temperature in $DAStatus2() \geq SOTF:Threshold$ for $SOTF:Delay$ duration | $PFAAlert()[SOTF] = 0$<br>$PFStatus()[SOTF] = 1$<br>$BatteryStatus()[OTA] = 1$ |

## 5.8 Capacity Degradation Permanent Fail

The device can permanently disable the battery pack in case the capacity of the battery is degraded below a threshold.

| Status | Condition                                                                 | Action                                   |
|--------|---------------------------------------------------------------------------|------------------------------------------|
| Normal | QMax pack > <b>CD:Threshold</b>                                           | PFAAlert()[CD] = 0                       |
| Alert  | QMax pack ≤ <b>CD:Threshold</b>                                           | PFAAlert()[CD] = 1                       |
| Trip   | QMax pack ≤ <b>CD:Threshold</b> for <b>CD:Delay</b> <sup>(1)</sup> cycles | PFAAlert()[CD] = 0<br>PFStatus()[CD] = 1 |

(1) The delay for this check is counted each time **QMax Cycle Count** is updated.

## 5.9 Charge FET Permanent Fail

The device can permanently disable the battery pack in case the charge FET is not working properly.

| Status | Condition                                                                                       | Action                                         |
|--------|-------------------------------------------------------------------------------------------------|------------------------------------------------|
| Normal | CHG FET off AND <i>Current()</i> < <b>CFET:OFF Threshold</b>                                    | PFAAlert()[CFETF] = 0                          |
| Alert  | CHG FET off AND <i>Current()</i> ≥ <b>CFET:OFF Threshold</b>                                    | PFAAlert()[CFETF] = 1                          |
| Trip   | CHG FET off AND <i>Current()</i> ≥ <b>CFET:OFF Threshold</b> for <b>CFET:OFF Delay</b> duration | PFAAlert()[CFETF] = 0<br>PFStatus()[CFETF] = 1 |

## 5.10 Discharge FET Permanent Fail


The device can permanently disable the battery pack in case the discharge FET is not working properly.

| Status | Condition                                                                                       | Action                                         |
|--------|-------------------------------------------------------------------------------------------------|------------------------------------------------|
| Normal | DSG FET off AND <i>Current()</i> > <b>DFET:OFF Threshold</b>                                    | PFAAlert()[DFETF] = 0                          |
| Alert  | DSG FET off AND <i>Current()</i> ≤ <b>DFET:OFF Threshold</b>                                    | PFAAlert()[DFETF] = 1                          |
| Trip   | DSG FET off AND <i>Current()</i> ≤ <b>DFET:OFF Threshold</b> for <b>DFET:OFF Delay</b> duration | PFAAlert()[DFETF] = 0<br>PFStatus()[DFETF] = 1 |

## 5.11 Battery Swelling Detection Permanent Fail

This device can permanently disable the battery pack in case battery swelling has been detected. In the event of a large change in cell impedance, the device will generate an Alert signal and subsequently trigger the Protection Fault (PF) status, resulting in permanent disablement of the battery pack.

Following flowchart provides the logic flow for the battery swelling detection (BSD) algorithm:

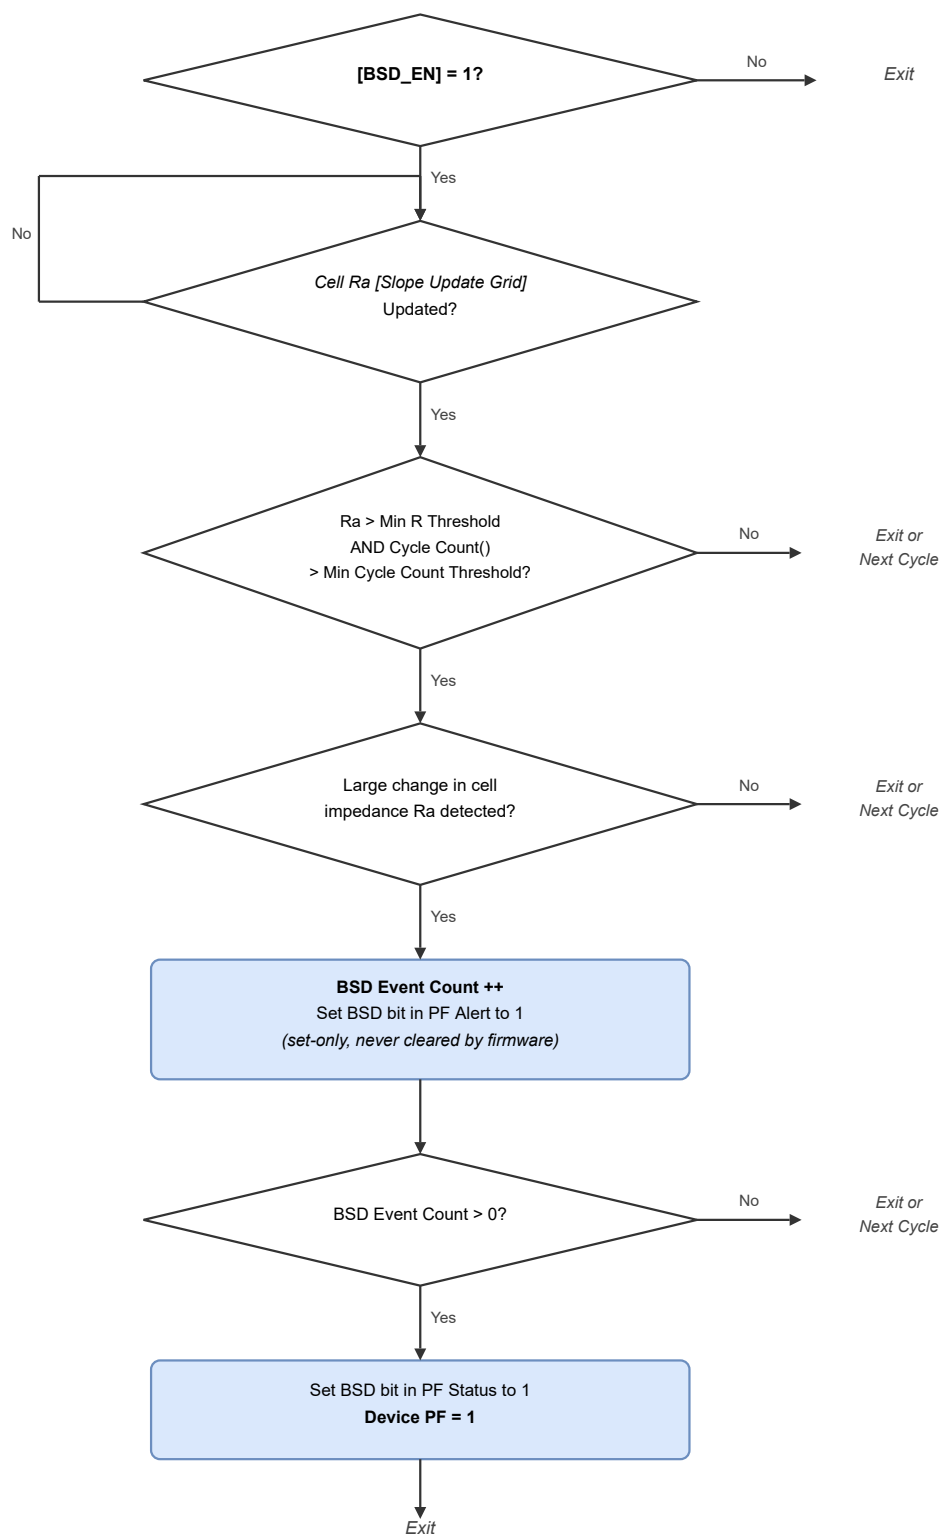

**Figure 5-1. BSD Algorithm**

### Note

The **BSD Event Count** parameter is tracked per cell and persists across power cycles.

| Status | Condition                                                                                                                                                                                         | Action                                                   |
|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------|
| Normal | <b>Cellx Ra[Slope Update Grid] ≤ Min R Threshold</b> OR<br><b>Cycle Count() ≤ Min Cycle Count Threshold</b> OR<br>No large change in cell impedance Ra detected                                   | <i>PFAAlert()[BSD]</i> = 0                               |
| Alert  | <b>BSD Enable = 1</b> AND<br><b>Cellx Ra[Slope Update Grid] &gt; Min R Threshold</b> AND<br><b>Cycle Count() &gt; Min Cycle Count Threshold</b> AND<br>Large change in cell impedance Ra detected | <i>PFAAlert()[BSD]</i> = 1<br><b>BSD Event Count ++</b>  |
| Trip   | <i>PFAAlert()[BSD]</i> = 1 AND<br><b>BSD Event Count &gt; 0</b>                                                                                                                                   | <i>PFAAlert()[BSD]</i> = 0<br><i>PFStatus()[BSD]</i> = 1 |

## 5.12 Data Flash (DF) Permanent Fail

The device can permanently disable the battery in case a data flash write fails.

### Note

A DF write failure causes the gauge to disable further DF writes.

| Status | Condition                               | Action                     |
|--------|-----------------------------------------|----------------------------|
| Normal | The data flash write is successful.     | —                          |
| Trip   | The data flash write is not successful. | <i>PFStatus()[DFW]</i> = 1 |

## 5.13 Cell Overvoltage Latch Permanent Failure

The device can permanently disable the battery in the case of repeated cell overvoltage events. *PFAAlert()[COVL]* and *PFStatus()[COVL]* use the same logic and data flash settings as *SafetyAlert()[COVL]* and *SafetyStatus()[COVL]* with the exception of there being no recovery mechanism. It is recommended to not have both *PFStatus()[COVL]* and *SafetyStatus()[COVL]* enabled at the same time.

## 5.14 Manual Permanent Failure

The device can permanently disable the battery upon receipt of a two-word MAC sequence. The two-word key is programmable via *ManufacturerAccess()* 0x0035 security keys. Both keys must be sent within 4 s of each other for **[FORCE]** to activate.

## 5.15 Permanent Fail ISI

| Class          | Subclass | Name                       | Type | Min | Max | Default | Unit | Description                                                                                                                     |
|----------------|----------|----------------------------|------|-----|-----|---------|------|---------------------------------------------------------------------------------------------------------------------------------|
| Permanent Fail | ISI      | Low Fault Count Threshold  | U1   | 3   | 255 | 5       | —    | Number of fails against <b>Low Internal Short Threshold</b> to trigger a permanent failure when <b>Enabled PF D[ISI_LO]</b> = 1 |
| Permanent Fail | ISI      | High Fault Count Threshold | U1   | 3   | 255 | 5       | —    |                                                                                                                                 |

## 5.16 Internal Short-Circuit Indication Low Permanent Fail

The device provides a flag which gives the host the ability to permanently disabling the battery pack if the ISI algorithm produces enough fails on its small internal short threshold.

**Table 5-1. ISI Low PF**

| Status | Condition                                                                 | Action                                                         |
|--------|---------------------------------------------------------------------------|----------------------------------------------------------------|
| Normal | ISI Low Fail Count in <i>ISIData()</i> = 0                                | <i>PFAAlert()[ISI_LO]</i> = 0                                  |
| Alert  | ISI Low Fail Count in <i>ISIData()</i> > 0                                | <i>PFAAlert()[ISI_LO]</i> = 1                                  |
| Trip   | ISI Low Fail Count in <i>ISIData()</i> ≥ <b>Low Fault Count Threshold</b> | <i>PFAAlert()[ISI_LO]</i> = 0<br><i>PFStatus()[ISI_LO]</i> = 1 |

## 5.17 Internal Short-Circuit Indication High Permanent Fail

The device provides a flag which gives the host the ability to permanently disabling the battery pack if the ISI algorithm produces enough fails on its large internal short threshold.

**Table 5-2. ISD High PF**

| Status | Condition                                                                   | Action                                                                              |
|--------|-----------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Normal | ISI High Fail Count in <i>ISIData()</i> = 0                                 | <i>PFAAlert()</i> [ <i>ISI_HI</i> ] = 0                                             |
| Alert  | ISI High Fail Count in <i>ISIData()</i> > 0                                 | <i>PFAAlert()</i> [ <i>ISI_HI</i> ] = 1                                             |
| Trip   | ISI High Fail Count in <i>ISIData()</i> ≥ <b>High Fault Count Threshold</b> | <i>PFAAlert()</i> [ <i>ISI_HI</i> ] = 0<br><i>PFAStatus()</i> [ <i>ISI_HI</i> ] = 1 |

## 6 Power Modes

### 6.1 NORMAL Mode

In Normal mode, the device samples voltage and temperature readings at 250-ms intervals, current measurements at 1-s intervals, and performs protection/gauging calculations, SBS data updates, and status decisions every 1 s. The device enters a low-power state during the intervening periods of inactivity.

#### 6.1.1 System Present Detection Configuration

The operates in embedded pack configuration with **DA Configuration**[*NR*] = 1. In this configuration, pack removal detection is disabled.

The configurable GPIO pins (C1, C2, C3) can be assigned to other functions such as  $\overline{\text{SHUTDN}}$  for emergency shutdown or  $\overline{\text{PRES}}$  for system disconnect detection via the **IO Config** data flash settings.

##### 6.1.1.1 System Present

The  $\overline{\text{PRES}}$  pin is sampled every 250 ms, and if the  $\overline{\text{PRES}}$  pin is high for **SYS\_PRES Delay** samples, the *OperationStatus*[*PRES*] flag is cleared. If the  $\overline{\text{PRES}}$  pin is low for **SYS\_PRES Delay** samples, the *OperationStatus* [*PRES*] flag is set, indicating the system is present (the battery is inserted).

##### 6.1.1.2 Battery Pack Removed

The default configuration is an embedded (non-removable) pack ( [*NR*] = 1). The Battery Pack Removed mode applies when [*NR*] is set to 0 (removable pack configuration).

When [*NR*] = 0, the firmware actively monitors the  $\overline{\text{PRES}}$  pin for system presence. The following behavior applies:

- **Pack removed** ( $\overline{\text{PRES}}$  deasserts): All CHG and DSG FETs are immediately forced off. Removable-reset safety fault counters are cleared to allow clean FET recovery on reinsertion.
- **Pack inserted** ( $\overline{\text{PRES}}$  asserts): The  $\overline{\text{PRES}}$  pin state is debounced for approximately 1 second. After debounce, FETs are re-enabled based on the normal safety state.
- **Sleep mode**: The gauge does not enter sleep while the system is connected ( $\overline{\text{PRES}}$  asserted) unless **IN\_SYSTEM\_SLEEP** is also set.
- **EMSHUT\_EN** and **DISCONN\_EN**: These features are not functional when [*NR*] = 0. They require non-removable mode ( [*NR*] = 1) to operate.

For DA Configuration bit definitions, see **DA Configuration** register.

### 6.2 SLEEP Mode

#### 6.2.1 Device Sleep

When the sleep conditions are met, the device enters SLEEP mode with periodic wakeups for voltage, temperature, and current measurements to reduce power consumption.

The device returns to NORMAL mode if any exit sleep condition is met.

In SLEEP mode, the device wakes up every **Sleep Measure Time** (8s) to measure voltage, and temperature, and every **Current Measure Time** (16s) to read current.

| Status   | Condition                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | Action                                                                                                                                                                                            |
|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Activate | SMBus low for <b>Bus Timeout</b> if <b>[IN_SYSTEM_SLEEP]</b> = 0, or no communication for <b>Bus Timeout</b> if <b>[IN_SYSTEM_SLEEP]</b> = 1 AND <b>DA Config[SLEEP]</b> = 1 AND <b> Current()  ≤ Sleep Current</b> AND <b>OperationStatus()[SDM]</b> = 0 AND No <b>PFAAlert()</b> bits set AND No <b>PFStatus()</b> bits set AND No <b>SafetyAlert()</b> bits set AND No <b>[AOCD]</b> , <b>[AOCDL]</b> , <b>[AOCC]</b> , <b>[AOCCL]</b> , <b>[ASCD]</b> , <b>[ASCDL]</b> set in <b>SafetyStatus()</b> | Turn off CHG FET and PCHG FET if <b>FET Options[SLEEPCHG]</b> = 0.<br>The device goes to sleep.<br>The device wakes up every <b>Sleep:Measure Time</b> period to measure voltage and temperature. |
| Exit     | SMBus connected OR SMBus command received OR <b> Current()  &gt; Sleep Current</b> OR Wake comparator activates OR <b>OperationStatus()[SDM]</b> = 1 OR <b>PFAAlert()</b> bits set OR <b>PFStatus()</b> bits set OR <b>SafetyAlert()</b> bits set OR <b>[AOCD]</b> , <b>[AOCDL]</b> , <b>[AOCC]</b> , <b>[AOCCL]</b> , <b>[ASCD]</b> , <b>[ASCDL]</b> set in <b>SafetyStatus()</b>                                                                                                                      | Return to NORMAL mode                                                                                                                                                                             |

1. **DA Config[SLEEP]** and SMBus low are not checked if the **ManufacturerAccess()** SLEEP mode command is used to enter SLEEP mode.
2. Wake on SMBus command is only possible when the gas gauge is put to sleep using the **ManufacturerAccess()** SLEEP mode command or **[IN\_SYSTEM\_SLEEP]** is enabled with **Bus Timeout** = 0. Otherwise, the gas gauge wakes on an SMBus connection (clock or data high).
3. The CHG FET and PCHG FET remains on in SLEEP mode if **[SLEEPCHG]** = 1.
4. The wake comparator threshold is set through **AFE:Current Charge Wake[3:0]** and **AFE:Current Discharge Wake[3:0]**.
5. **SafetyAlert()[PTO]**, **[PTOS]**, **[CTO]**, **[CTOS]** or **PFAAlert()[QIM]**, **[OC]**, **[IMP]**, **[CB]** will not prevent the gauge to enter SLEEP mode.
6. It is required that CHG FET and DSG FET should be turned on within 250ms when gauge exits from SLEEP mode to NORMAL mode.

#### Note

The status of CHG FET and DSG FET in SLEEP mode is shown below based on the DFs setting.

**Table 6-1. CHG/DSG FETs in SLEEP mode**

| <b>[SLEEPCHG]</b> | <b>[IN_SYSTEM_SLEEP]</b> | CHG FET | DSG FET |
|-------------------|--------------------------|---------|---------|
| 0                 | X                        | OFF     | ON      |
| 1                 | X                        | ON      | ON      |

#### Note

The status here may not be the actual status since there are many others functions can interfere the control of FETs like protection and pre-charge.

### 6.2.2 IN SYSTEM SLEEP Mode

The device provides an option to enter SLEEP mode in-system. When the **DA Config[IN\_SYSTEM\_SLEEP]** = 1, the device will turn off CHG FET and PCHG FET if **FET Options[SLEEPCHG]** = 0 and enter SLEEP mode. In this option, the SMBus low state is not a condition to enter SLEEP mode (instead, communication must not occur for **Bus Timeout** to enter SLEEP). All the other sleep conditions must be met for the device to enter SLEEP mode.

### Note

Setting the **Bus Timeout** = 0 with **[IN\_SYSTEM\_SLEEP]** can be used for testing purposes, but it is not recommended to set the **Bus Timeout** = 0 in the field. If **Bus Timeout** = 0, the device's sleep and wake conditions are strictly controlled by current detection. If the host system performs a low load operation periodically (for example, wireless detection in a tablet application), this small load current may be missed, introducing an error into remaining capacity tracking. Having a non-zero **Bus Timeout** setting enables the gauge to wake up by a communication and capture the current measurement.

### 6.2.3 ManufacturerAccess() MAC Sleep

The SLEEP MAC command can override the requirement for bus low to enter sleep. In this case, the clock and data high condition is ignored for sleep to exit, though sleep will also exit if there is any further SMBus communication. The device can be sent to sleep with *ManufacturerAccess()* if specific sleep entry conditions are met.

### 6.2.4 Current Wake Function

The device can exit SLEEP mode if enabled by the presence of a voltage across SRP and SRN. The voltage threshold needed for the device to wake from SLEEP mode is programmed in **Current Charge Wake** and **Current Discharge Wake**. This allows the gauge to wake up quickly in response to a higher current detection. Otherwise, the gauge only wakes up every **Sleep:Current Time** to detect if current is > **Sleep Current**. Refers to *Current Wake Detector* for details.

## 6.3 SHIP Mode

In SHIP mode, the device measures voltage and temperature at periodic intervals and current is not measured or coulomb counted. Current is assumed to be and reported as 0 mA. The device enters RELAX mode for gauging calculations using the standard configured SOC algorithm. All measurements are performed simultaneously at each interval (no rotation or selective skipping). The measurements performed at each interval are:

1. Cell voltage
2. Temperature (TSInt and TS1 if enabled)
3. PACK voltage

### Note

SHIP mode is designed for ultra-low power shelf storage. The periodic measurement interval is fixed at 60 seconds on this hardware to minimize current draw and extend battery shelf life during extended storage periods.

Firmware processing is minimized in SHIP mode by disabling coulomb counting and current measurement. Some calculations are performed less frequently than in normal operation. These less frequent calculations include updating firmware-based protections, lifetime data, and the voltage and temperature range of the advanced charge algorithm. Other calculations, such as updating *RemainingCapacity()* and *FullChargeCapacity*, are not performed at all with the assumption the system is off and will not communicate with the gauge.

SHIP mode is entered based on voltage through SLEEP or by command through NORMAL or SLEEP. Exit from this mode is through a current level (I-WAKE threshold), GPIO pin, or command.

| Status   | Condition                                                                                                                                                                                                                                                                                          | Action                                                                                                                                                                                                                                                         |
|----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Activate | ( <i>OperationStatusA()</i> [SLEEP] = 1 AND <i>Voltage()</i> < <b>Power Ship Mode Voltage Threshold</b> for <b>Power Ship Mode Voltage Delay</b> ) OR (MAC <i>SHIP_ENABLE</i> (0x0015) received AND <b>Power Ship Mode Command Delay</b> elapsed AND   <i>Current()</i>   ≤ <b>Sleep Current</b> ) | <i>OperationStatus()</i> [SHIP] = 1<br>The device enters RELAX mode.<br><i>Current()</i> = 0 mA, <i>AverageCurrent()</i> = 0 mA<br>The device wakes up every 60 s to measure voltage and temperature.<br>The device does NOT coulomb count or measure current. |

| Status | Condition                                                                                                                                                                                                     | Action                                                       |
|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------|
| Exit   | MAC <i>SHIP_DISABLE</i> (0x0016) received OR<br>Hardware IWAKE wake comparator threshold surpassed OR<br>GPIO <b>Settings</b> <i>GPIO Ship Exit pin</i> grounded (when <i>Ship Mode Config</i> [IO_EXIT] = 1) | <i>OperationStatus()</i> [SHIP] = 0<br>Return to NORMAL mode |

### Note

If the gauge is UNSEALED and the MAC *SHIP\_ENABLE* (0x0015) command is sent twice in a row, the gauge enters SHIP mode immediately and skips the normal delay sequence.

The configuration options for SHIP are in the following data flash.

| Class    | Subclass      | Name                 | Type | Min    | Max    | Default | Unit | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|----------|---------------|----------------------|------|--------|--------|---------|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Settings | Configuration | Ship Mode Config     | B    | 0x0000 | 0xFFFF | 0x0001  | hex  | <p>Bit field register enabling SHIP and SHELF modes and retention options. Default 0x0001 = SHIPMODE enabled.</p> <ul style="list-style-type: none"> <li><b>[SHIPMODE] (bit 0, default 1):</b> Master enable for SHIP and SHELF modes. Must be 1 for MAC commands 0x0015 and 0x000b to take effect.</li> <li><b>[SHIPM_ON_RST] (bit 1, default 0):</b> Retain SHIP mode MAC status across power-on reset. Allow 250 ms after MAC command for this to take effect.</li> <li><b>[SHELFM_ON_RST] (bit 2, default 0):</b> Retain SHELF mode MAC status across power-on reset.</li> <li><b>[IO_EXIT] (bit 3, default 0):</b> Enable GPIO-based exit from SHIP and SHELF modes. Grounding the pin defined by <i>Settings GPIO Ship Exit pin number</i> triggers an immediate exit.</li> </ul> |
| Power    | Ship Mode     | Voltage Threshold    | I2   | 0      | 32767  | 2300    | mV   | Cell based SHIP voltage trip threshold                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Power    | Ship Mode     | Voltage Delay        | U2   | 0      | 255    | 10      | s    | Cell based SHIP voltage trip delay                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Power    | Ship Mode     | Measure Time         | U1   | 60     | 60     | 60      | s    | Fixed wake interval for voltage and temperature measurements in SHIP mode. Hardware limited to 60 seconds; not user configurable on this device.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Power    | Ship Mode     | Command Delay        | U1   | 0      | 255    | 0       | s    | Delay time to enter SHIP mode after MAC <i>SHIP_ENABLE</i> (0x0015) is received. Default of 0 = immediate entry. Send MAC 0x0015 twice in UNSEALED mode to bypass delay and enter immediately. This delay also applies when MAC <i>SHELF_ENABLE</i> (0x000b) is received.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Settings | GPIO          | Ship Exit pin number | U1   | 0      | 255    | 7       | —    | GPIO pin number used to exit SHIP or SHELF mode when <i>Ship Mode Config</i> [IO_EXIT] = 1. Grounding this pin triggers an immediate exit from the active low-power mode.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

## 6.4 SHELF Mode

SHELF mode operates the same as SHIP mode with a minimized amount of measurements and firmware processing. However, device power consumption in SHELF mode is reduced from SHIP mode by turning off the CHG and DSG FETs and hardware protector (all hardware-based protections and IWAKE). Due to the FETs being off in SHELF mode, the system is not powered without a charger attached, so the exit conditions are different from SHIP mode and the FET control logic is not performed.

In SHELF mode, the device measures voltage and temperature at periodic intervals and current is not measured or coulomb counted. Current is assumed to be and reported as 0 mA. The measurements performed each interval are:

1. Cell voltage
2. Temperature (TSInt and TS1 if enabled)
3. PACK voltage

Firmware processing is minimized by reducing the number of calculations. Some calculations are performed less frequently: only after voltage and temperature are measured. These less frequent calculations include updating firmware-based protections, lifetime data, and the voltage and temperature range of the advanced charge algorithm. Other calculations, such as updating *RemainingCapacity()* and *FullChargeCapacity*, are not performed at all with the assumption the system is off and will not communicate with the gauge.

SHELF mode is entered based on voltage through SLEEP or by command through NORMAL or SLEEP. Exit from this mode is through MAC *SHELF\_DISABLE* (0x000c) or GPIO exit (when **Ship Mode Config[IO\_EXIT]** = 1).

| Status   | Condition                                                                                                                                                                                                                                                                                        | Action                                                                                                                                                                                                                                                                                                                                                                |
|----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Activate | ( <i>OperationStatusA()[SLEEP]</i> = 1 AND <i>Voltage()</i> < <b>Power Shelf Mode Voltage Threshold</b> for <b>Power Shelf Mode Voltage Delay</b> ) OR (MAC <i>SHELF_ENABLE</i> (0x000b) received AND <b>Power Ship Mode Command Delay</b> elapsed AND <i>Current()</i> ≤ <b>Sleep Current</b> ) | <i>OperationStatus()[SHIP]</i> = 1<br>The device enters RELAX mode.<br><i>Current()</i> = 0 mA, <i>AverageCurrent()</i> = 0 mA<br>The device wakes up every 60 s to measure voltage and temperature.<br>The device does NOT coulomb count or measure current.<br>Turn off the CHG and DSG FETs.<br>Turn off the protector (all hardware-based protections and IWAKE). |
| Exit     | MAC <i>SHELF_DISABLE</i> (0x000c) received OR GPIO <b>Settings GPIO Ship Exit pin</b> grounded (when <b>Ship Mode Config[IO_EXIT]</b> = 1)                                                                                                                                                       | <i>OperationStatus()[SHIP]</i> = 0<br>Return to NORMAL mode                                                                                                                                                                                                                                                                                                           |

### Note

If the gauge is UNSEALED and the MAC *SHELF\_ENABLE* (0x000b) command is sent twice in a row, the gauge enters SHELF mode immediately and skips the normal delay sequence.

The configuration options for SHELF are in the following data flash.

| Class | Subclass   | Name              | Type | Min | Max   | Default | Unit | Description                                                                                                                                                                                                                                                       |
|-------|------------|-------------------|------|-----|-------|---------|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Power | Shelf Mode | Voltage Threshold | I2   | 0   | 32767 | 2200    | mV   | Cell based SHELF voltage trip threshold                                                                                                                                                                                                                           |
| Power | Shelf Mode | Voltage Delay     | U2   | 0   | 255   | 10      | s    | Cell based SHELF voltage trip delay                                                                                                                                                                                                                               |
| Power | Ship Mode  | Command Delay     | U1   | 0   | 255   | 0       | s    | Delay to enter SHELF mode after MAC <i>SHELF_ENABLE</i> (0x000b) is received. This DF is shared with SHIP mode; see <i>Power Ship Mode Command Delay</i> in the SHIP Mode DF table. Send MAC 0x000b twice in UNSEALED mode to bypass delay and enter immediately. |

## 6.5 SHUTDOWN Mode

### 6.5.1 VOLTAGE BASED SHUTDOWN

To minimize power consumption and to avoid draining the battery, the device can be configured to shut down at a programmable stack voltage threshold.

| Status | Condition                                                       | Action                            |
|--------|-----------------------------------------------------------------|-----------------------------------|
| Enable | cell voltage < <b>Shutdown Voltage</b>                          | <i>OperationStatus()[SDV]</i> = 1 |
| Trip   | cell voltage < <b>Shutdown Voltage</b> for <b>Shutdown Time</b> | Turn DSG FET off                  |

| Status   | Condition                                                                                           | Action                                                           |
|----------|-----------------------------------------------------------------------------------------------------|------------------------------------------------------------------|
| Shutdown | Voltage at PACK pin < <b>Charger Present Threshold</b> AND ENAB is high                             | Send device into SHUTDOWN mode                                   |
| Exit     | Voltage at PACK pin > $V_{STARTUP}$<br>OR<br>/ENAB pin pulled LOW for <b>Startup ENAB Hold Time</b> | <code>OperationStatus()[SDV] = 0</code><br>Return to NORMAL mode |

#### Note

The /ENAB pin is an active-low hardware GPIO input (pin D2). When pulled LOW (to GND or PACK-), the device exits SHUTDOWN mode.

During ENAB software debounce, FETs are off until **Startup ENAB Hold Time** expires. ENAB hold feature is ignored if charger is connected.

#### Note

The device goes through a full reset when exiting from SHUTDOWN mode, which means the device will reinitialize. On power up, the gauge will check some special memory locations. If the memory checksum is incorrect, or if the gauge or the AFE watchdog has been triggered, the gauge will do a full reset.

If the memory checksum is good, for example, in a case of a short power glitch, the gauge will do a partial reset. The initialization is faster in a partial reset, and certain memory data will not be reinitialized (for example, all SBS registers, last known FET state, last ADC and CC readings, and so on), and so a partial reset is usually transparent to the host.

### 6.5.2 ManufacturerAccess() MAC Shutdown

In SHUTDOWN mode, the device turns off the FETs after **FET Off Time**, and then shuts down to minimize power consumption after **Delay** time. **FET Off Time** and **Delay** time are referenced to the time the gauge receives the command. Thus, the **Delay** time must be set longer than **FET Off Time**. The device returns to NORMAL mode when the voltage at the PACK pin >  $V_{STARTUP}$  or the ENAB pin is pulled low. The device can be sent to this mode with the *ManufacturerAccess() Shutdown* command. Charger voltage must not be present and the ENAB pin must be high for the device to enter SHUTDOWN mode.

#### Note

If the gauge is sealed and the *MAC Shutdown()* command is sent twice in a row, the gauge will execute the shutdown sequence with a delay determined by **Power: Ship: Delay** dataflash value.

### 6.5.3 Time-Based Shutdown

The device can be configured to shut down after staying in SLEEP mode without communication for a preset time interval specified in **Auto Ship Time**. Setting **PowerConfig[AUTO\_SHIP\_EN]** enables this feature. Any communication to the device restarts the timer. When the timer reaches **Auto Ship Time**, the time-based shutdown effectively triggers the MAC shutdown command to start the shutdown sequence. The device returns to NORMAL mode when voltage at PACK pin >  $V_{STARTUP}$  or the ENAB pin is pulled low.

### 6.5.4 Low RSOC Time-Based Shutdown

The device can be configured to shut down when the RSOC is less than the RSOC threshold specified in **Low RSOC SD Threshold** for more than the time interval specified in **Low RSOC SD Time**. Setting **PowerConfig[RSOC\_SD] = 1** enables this feature. Once the timer start, only a charge current detection event will restart the timer. When the timer reaches **Low RSOC SD Time**, the time-based shutdown effectively triggers the MAC shutdown command to start the shutdown sequence. The device returns to NORMAL mode when voltage at PACK pin >  $V_{STARTUP}$ .

**Note**

When *[LT\_TEST]* is enabled, 1 minute in real time counts as 1 hour in firmware time.

**6.5.5 Power Save Shutdown**

**Power Save Shutdown** is enabled when *[PWR\_SAVE\_VSHUT]* is set. The enters **Power Save Shutdown** when the lowest cell voltage is below **PS Shutdown Voltage** and:  
*NoLoadRemCap()* < **PS NoLoadResCapThreshold**.

| Status   | Condition                                                                                                                                               | Action                                                         |
|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|
| Enable   | cell voltage < <b>PS Shutdown Voltage</b>                                                                                                               | <i>OperationStatus()</i> [PSSHUT] = 1                          |
| Trip     | cell voltage < <b>PS Shutdown Voltage</b> AND<br><i>NoLoadRemCap()</i> < <b>PS No Load Res Cap</b> AND RSOC = 0% AND the <i>[REST]</i> bit must be set. | Turn DSG FET off                                               |
| Shutdown | Voltage at PACK pin < <b>Charger Present Threshold</b>                                                                                                  | Send device into SHUTDOWN mode.                                |
| Exit     | Voltage at PACK pin > V <sub>STARTUP</sub>                                                                                                              | <i>OperationStatus()</i> [PSSHUT] = 0<br>Return to NORMAL mode |

**6.5.6 IO Based Shutdown**

The device can shut down upon the assertion of the INT pin (pad C2) when configured via **Settings GPIO IO Shutdown** and the configuration bit *[IO\_SHUT]* = 1. When the pin is asserted for **IO Shutdown Delay**, the gas gauge opens its DSG FET, then shuts down once PACK voltage < **Charger Present Threshold**. If the pin is deasserted or *[IO\_TIMEOUT]* is set and **IO Shutdown Timeout** expires following activation before PACK voltage < **Charger Present Threshold**, then the shutdown is stopped and the DSG FET turns back on and returns to the state it was in before the pin was asserted. An active low signal is detected when *[IO\_POL]* = 0. An active high signal is detected when *[IO\_POL]* = 1. An internal pullup is enabled when *[IO\_PUL\_DIS]* = 0. The pullup is disabled when *[IO\_PUL\_DIS]* = 1. The pin is sampled every 250 ms.

| Status   | Condition                                                      | Action                                                          |
|----------|----------------------------------------------------------------|-----------------------------------------------------------------|
| Trip     | INT pin (pad C2) asserted AND the <i>[IO_SHUT]</i> bit is set. | Turn DSG FET off                                                |
| Shutdown | Voltage at PACK pin < <b>Charger Present Threshold</b>         | Send device into SHUTDOWN mode.                                 |
| Exit     | Voltage at PACK pin > V <sub>STARTUP</sub>                     | <i>OperationStatus()</i> [IOSHUT] = 0<br>Return to NORMAL mode. |

**6.6 Startup ENAB Hold Time****Overview**

The Startup ENAB Hold Time parameter configures a debounce/hold delay for the ENAB pin condition during wakeup from Shutdown Mode. This feature helps prevent false wakeups due to noise or transient signals on the ENAB pin.

**Parameter Definition**

| Class    | Subclass | Name                   | Type | Min | Max | Default | Unit |
|----------|----------|------------------------|------|-----|-----|---------|------|
| Settings | Power    | Startup ENAB Hold Time | U1   | 0   | 255 | 0       | s    |

**Description:** This parameter configures a hold delay for the ENAB pin condition during wakeup from Shutdown Mode. When set to a non-zero value, the device will wait the specified number of seconds after detecting the ENAB pin condition before fully waking up.

**Behavior**

- The hold delay is **ignored** if a charger is connected - the device wakes immediately when charger is present
- FETs remain **disabled** during the hold delay period for safety
- Set to **0** to disable the debounce/hold feature (default behavior)
- Set to any non-zero value (**1-255 seconds**) to enable the feature

### Note

This parameter was added in firmware version v0.03 (BMSFW-11223). It is not available in earlier firmware versions.

## 6.7 Option to Manage Unintended Wakeup from Shutdown

In some user systems, there can be glitches on the supply line during mass production. This can result in a glitch getting to the PACK pin ( $V_{PACK}$ ), which can then unintentionally wake up a device that was in shutdown.

The feature to manage an unintended wakeup from shutdown, if enabled (with the **[CHECK\_WAKE]** bit), manages a shutdown of the gauge by any allowed shutdown process (except for VOLTAGE BASED SHUTDOWN and POWER SAVE SHUTDOWN, both of which are excluded from this feature). This feature does not function on a wake/start up from a reset.

When this feature is active on wake up from shutdown, the gauge starts a **Delay** timer (with the default of 2 s) and looks for communication to the gauge during this time—with CHG and DSG FETs remaining off. If during the **Delay** timer period there is no valid communication with the device, then the device goes back into shutdown (with FETs turned off). If there is valid communication within the **Delay** timer period, then the device stays in wake and continues like a normal wakeup. Valid communication means the gauge receives a valid address and a command. (It does not matter if the command is invalid. Invalid commands are OK with a valid address.)

One variant to this is the wake up from an IATA shutdown. In this case, each time the gauge wakes up, the IATA function will be called as usual. However, if the gauge then goes back into shutdown (because it was an unintended wakeup from shutdown), then the **[IATA\_SHUT]** bit will be set before going into shutdown again and the FCC and RemCap stored during the original IATA shutdown will still be kept for the next wakeup.

Additionally, the number of times the gauge wakes up from shutdown unintentionally is recorded. This "unintentional wakeup" counter is reset when the gauge wakes up and sees valid communication. If this count exceeds a threshold ( **Count** , with the default of 3), then the next time the gauge wakes up from shutdown, it will execute a normal wakeup without looking for valid communication (and the counter recording wakeup will be reset). If the **Count** is set to 0, then no threshold exists and the gauge will only wake up with valid communications.

### Note

If this feature is enabled ( **[CHECK\_WAKE]** set high), then by default the CHG and DSG FETs are off on wake up from SHUTDOWN (during the **Delay** timer period); thus, the FETs will turn on only if the gauge enters a normal wakeup. However, if the **[CHECK\_WAKE\_FET]** bit is set (default is cleared), then the FETs will not be forced off during the **Delay** timer period.

## 6.8 Emergency FET Shutdown (EMSHUT)

The Emergency FET Shutdown function provides an option to disable the battery power to the system by opening up the CHG and DSG FETs before removing an embedded battery pack. There are two ways to enter the EMERGENCY FET SHUTDOWN state:

1. Use an external signal (for example, a push-button switch) to detect a low-level threshold signal on the **SHUTDN** pin.
2. Send a Manual FET Control (MFC) sequence to *ManufacturerAccess()*. The FETs open after a configurable **MFC Delay** (default 15 seconds) following receipt of the MFC command.

When the gauge is in the EMERGENCY FET SHUTDOWN state, the *OperationStatus()*[**EMSHUT**] = 1.

### Note

Emergency FET Shutdown turns off the FETs but does not power off the device.

---

**Note**

**Feature prerequisites:** The Emergency FET Shutdown feature is active only when all of the following conditions are met:

- **[NR]** = 1 (non-removable/embedded pack mode, DA Configuration bit 2). This feature is not available in removable pack configuration (**[NR]** = 0).
- **EMShutEn** = 1 (DA Configuration bit 5).
- A GPIO pin must be assigned to the **SHUTDN** function via **IO Config** data flash settings.

**Mutual exclusivity:** Setting **EMShutEn** = 1 disables the System Disconnect feature. The two features cannot be active at the same time.

---

The gauge exits the EMERGENCY FET SHUTDOWN state when any of the following conditions occur:

1. **Timeout:** After **EmShut Timeout** minutes (default 30 minutes) the state is cleared automatically. Setting **EmShut Timeout** to 0 disables the timeout exit.
  2. **Pin released:** When the **SHUTDN** pin returns HIGH, the state is cleared. This exit path can be disabled by setting the **[EMSHUT\_PEXIT\_DIS]** configuration bit.
  3. **Charger detected** (optional, **[EMSHUT\_EXIT\_VPACK]**): When **PackVoltage()**  $\geq$  **Charger Present** threshold for two consecutive samples while the DSG FET is open.
  4. **Communication activity** (optional, **[EMSHUT\_EXIT\_COMM]**): When communication is detected on the bus.
- 

**Note**

**SHUTDN** pin is a configurable option that is disabled by default. The user can assign the **SHUTDN** function to either the C1 (if it is not configured as a TS pin), C2, or C3 pin. Configure via the **IO Config** data flash settings.

---

### 6.8.1 Enter Emergency FET Shutdown Through **SHUTDN**

When a high-to-low transition on the **SHUTDN** pin is detected with a debounce delay of **SYS\_PRES Delay** samples (each sample is taken at 250-ms interval) for the low-level threshold, the gauge turns off the CHG and DSG FETs immediately. This entry method applies when **DA Configuration[EMSHUT]** = 1.

---

**Note**

The **SHUTDN** function is a configurable option that is disabled by default. The user can assign the **SHUTDN** function to either the C1 (if it is not configured as a TS pin), C2, or C3 pin via IO Config settings.

---

### 6.8.2 Enter Emergency FET Shutdown Through MFC

Alternatively, sending a manual FET control (MFC) sequence using the steps below also puts the gauge to the EMERGENCY FET SHUTDOWN state.

1. Send word 0x270C to **ManufacturerAccess()** (0x00) to enable the MFC.
2. Within 4 s, send word 0x043D to **ManufacturerAccess()** (0x00) to turn off CHG and DSG FETs.
3. The CHG and DSG FETs will be off after **Manual FET Control Delay**.

### 6.8.3 Exit Emergency FET Shutdown

Regardless of which EMSHUT entry method is used, the gauge can exit the EMSHUT mode by turning on the CHG and DSG FETs with any one of the following conditions:

- A high-to-low transition on the **SHUTDN** pin is detected with a debounce delay of 1 s for the low level threshold. For example, a push button is pressed again. This exit condition can be disabled by setting the **[EMSHUT\_PEXIT\_DIS]** bit in the **DA Configuration** register.
- Send word 0x23A7 to **ManufacturerAccess()** (0x00).

- PACK voltage > **Charger Present Threshold** for two sample periods (that is, ~500 ms). This exit condition requires the **[EMSHUT\_EXIT\_VPACK]** bit to be set.
- Valid SMBus communication is received. Valid SMBus communication means a valid gauge address and any command is received (that is, an invalid command with a valid address is OK). This exit condition requires the **[EMSHUT\_EXIT\_COMM]** bit to be set. When using this exit option, the **Manual FET Control (MFC) Delay** should be set to a minimum of 4 seconds.

In EMESHUT mode, to detect the voltage level at the PACK pin quickly (even while in SLEEP), the AD conversion will occur every second.

## 6.9 STORAGE Mode

STORAGE mode is activated with command 0x000A. When the STORAGE mode command is received, bit 10 (the **[STORAGEM]** bit) in *Operation Status B* is set.

1. After **Storage Delay** time since **[STORAGEM]** bit set, the CHG and DSG FETs are turned off.
2. After **Storage Ignore SMB Delay** time since **[STORAGEM]** bit set, gauge will exit STORAGE mode if one of the following conditions is met:
  - a. if gauge is not in SLEEP mode (either not entered or exited) OR
  - b. if SMBus high is detected
3. After STORAGE mode is exited, **[STORAGEM]** bit will be reset, then CHG and DSG FETs disable (turned off) will be lifted. (The FETs can still be turned off by other features)

### Note

The gauge needs to be in SLEEP to stay in STORAGE mode, so the **Storage Delay** time and **Storage Ignore SMB Delay** time, though not limited, should practically be set higher than the **Chg Relax Time** and **Dsg Relax Time** thresholds.

**Storage Ignore SMB Delay** time can be set smaller than **Storage Delay** time in test setup with communication disconnected after sending the command, but in practical setup, **Storage Ignore SMB Delay** time might need to be larger to let the disabled FETs turn off communication, so that there would not be any SMBus high to cause the exit from STORAGE mode.

## 6.10 System Disconnect

The system can signal the gas gauge via the  $\overline{\text{PRES}}$  function to open the CFET and DFET, disconnecting the battery power to the host. The device operates in embedded pack configuration ( **[NR]** = 1).

### Note

**Feature prerequisites:** The System Disconnect feature is active only when all of the following conditions are met:

- **[NR]** = 1 (non-removable/embedded pack mode,) — the feature is completely disabled when **[NR]** = 0.
- **DISCONN\_EN** = 1 .
- **EMShutEn** = 0 . System Disconnect and Emergency FET Shutdown are mutually exclusive; the feature is suppressed when **EMShutEn** is set.
- A GPIO pin must be assigned to the disconnect function via **IO Config** data flash settings.

The internal pullup of the  $\overline{\text{PRES}}$  function is enabled for this feature when assigned to a GPIO pin. Entry to the SYSTEM DISCONNECT mode occurs when the gas gauge detects a high-to-low transition of the configured  $\overline{\text{PRES}}$  pin ( $\overline{\text{PRES}}$  pin debounce is used). The gauge opens the CFET and DFET in SYSTEM DISCONNECT mode. The *OperationStatus()*[**DISCONN**] = 1.

---

**Note**

Because the system is shutdown in this mode, the gas gauge enters SLEEP mode after a bus timeout. Regardless if the **[SLEEPCHG]** flag sets, the CFET and DFET will remain off in the SYSTEM DISCONNECT mode.

---

The  $\overline{\text{PRES}}$  pin state is sampled in 250-ms intervals. A "low" is detected by receiving **SYS\_PRES Delay** consecutive low samples. The debounce time ranges from **SYS\_PRES Delay** – 1 samples (if the pin state is changed just before a sample is taken) to **SYS\_PRES Delay** samples (if the pin state is changed just after a sample is taken).

It exits from the SYSTEM DISCONNECT mode when:

- It detects a charger is present AND
- The configured  $\overline{\text{PRES}}$  pin returns to high (indicating system reconnection).

The gauge then returns to NORMAL mode and closes the CFET and DFET.

---

**Note**

**Pin Configuration:** The  $\overline{\text{PRES}}$  function can be assigned to pin C1 (if it is not configured as a TS pin), C2, or C3. Configure via the **IO Config** data flash settings.

---

## 7 Gauging

### 7.1 Introduction

The device measures individual cell voltages, pack voltage, temperature, and current. It determines battery state-of-charge by analyzing individual cell voltages when a certain relax time has passed since the last charge or discharge activity of the battery.

The device measures charge and discharge activity by monitoring the voltage across a small-value series sense resistor (0.5mΩ minimum) between the negative terminal of the cell stack and the negative terminal of the battery pack. The battery state-of-charge is subsequently adjusted during a load or charger application using the integrated charge passed through the battery. The device is capable of supporting a maximum battery pack capacity of 32 Ah.

The default for gauging is *off*. To enable the gauging function, set **Manufacturing Status[GAUGE\_EN]** = 1. The gauging function will be enabled after a reset or a seal command is set. Alternatively, the *Gauging()* MAC command can be used to turn on and off the gauging function. The *Gauging()* command will take effect immediately and the **[GAUGE\_EN]** will be updated accordingly.

The *GaugeStatus1()*, *GaugeStatus2()*, and *GaugeStatus3()* commands return various gauging related information that is useful for problem analysis.

### 7.2 Dynamic Z-Track Configuration

#### Load Mode

During normal operation, the battery-impedance profile compensation of the Dynamic Z-Track algorithm can provide more accurate full-charge and remaining state-of-charge information if the typical load type is known. The two selectable options are constant current ( **Load Mode** = 0) and constant power ( **Load Mode** = 1).

#### Load Select

To compensate for the  $I \times R$  drop near the end of discharge, the device must be configured for the current (or power) that will flow in the future. While it cannot be exactly known, the device can use load history, such as the average current of the present discharge, to make a sufficiently accurate prediction.

The device can be configured to use several methods of this prediction by setting the **Load Select** value. Because this estimate has only a second-order effect on remaining capacity accuracy, different measurement-based methods (methods 0–3 and method 7) result in only minor differences in accuracy. However, methods 4–6, where an estimate is arbitrarily user-

assigned, can result in a significant error if a fixed estimate is far from the actual load. For highly variable loads, selection 7 provides the most conservative estimate and is preferable.

| Constant Current ( <i>Load Mode</i> = 0) | Constant Power ( <i>Load Mode</i> = 1)             |
|------------------------------------------|----------------------------------------------------|
| 0 = <b>Avg I Last Run</b>                | <b>Avg P Last Run</b>                              |
| 1 = Present average discharge current    | Present average discharge power                    |
| 2 = <i>Current()</i>                     | <i>Current()</i> × <i>Voltage()</i>                |
| 3 = <i>AverageCurrent()</i>              | <i>AverageCurrent()</i> × average <i>Voltage()</i> |
| 4 = <b>Design Capacity</b> /5            | <b>Design Capacity cWh</b> /5                      |
| 5 = <i>AtRate()</i> (mA)                 | <i>AtRate()</i> (cW)                               |
| 6 = <b>User Rate-mA</b>                  | <b>User Rate-mW</b>                                |
| 7 = <b>Max Avg I Last Run</b> (default)  | <b>Max Avg P Last Run</b>                          |

### Pulsed Load Compensation and Termination Voltage

To take into account pulsed loads while calculating remaining capacity until **Term Voltage** threshold is reached, the device monitors not only the average load but also the short load spikes. The maximum voltage deviation during a load spike is continuously updated during discharge and stored in **Delta Voltage**. **Delta Voltage** is then added to **Termination Voltage** artificially raising it as part of the capacity simulation to account for the sudden voltage drop that potentially could be seen. With **Delta Voltage** being a learned parameter, to protect the gauge from over or under compensating, limits are put on **Delta Voltage** to cap the compensation. This range is defined by **Min Delta Voltage** and **Max Delta Voltage**. In addition, to avoid a rapid change in **Delta Voltage** the max it can change in any single step is limited to **DeltaV Max Voltage Delta**.

Table 7-1. Min DeltaV

| Class       | Subclass   | Name              | Format | Size in Bytes | Min Value | Max Value | Default Value | Unit |
|-------------|------------|-------------------|--------|---------------|-----------|-----------|---------------|------|
| Gas Gauging | IT-DZT Cfg | Min Delta Voltage | Int    | 2             | −32768    | 32767     | 0             | mV   |

Table 7-2. Max DeltaV

| Class       | Subclass   | Name              | Format | Min Value | Max Value | Default Value | Unit |
|-------------|------------|-------------------|--------|-----------|-----------|---------------|------|
| Gas Gauging | IT-DZT Cfg | Max Delta Voltage | I2     | −32768    | 32767     | 200           | mV   |

### Reserve Battery Capacity

The device allows an amount of capacity to be reserved in either mAh ( **Reserve Cap-mAh** , **Load Mode** = 0) or cWh ( **Reserve Cap-cWh** , **Load Mode** = 1) units between the point where the *RemainingCapacity()* function reports zero capacity and the absolute minimum battery stack voltage, **Term Voltage**. This enables a system to report zero energy, but still have enough reserve energy to perform a controlled shutdown or provide an extended sleep period for the host system.


The reserve capacity is compensated at the present discharge rate as selected by **Load Select**.

### Termination Voltage

The device forces *RemainingCapacity()* to 0 mAh when the battery stack voltage reaches the **Term Voltage** for a period of **Term V Hold Time**.

### 7.3 Gas Gauge Modes


Resistance updates take place only in DISCHARGE mode, while open circuit voltage (OCV) and QMax updates only take place in RELAX mode. If **Fast Qmax** is enabled, the Qmax also updates at the end of discharge given a minimum of 37% delta change of charge. Entry and exit of each mode is controlled by data flash parameters in the subclass **Gas Gauging: Current Thresholds** section. When the device is determined to be in RELAX mode and OCV is taken, the *GaugingStatus()*[*REST*] flag is set. In RELAX or DISCHARGE mode, the DSG flag in *BatteryStatus()* is set.

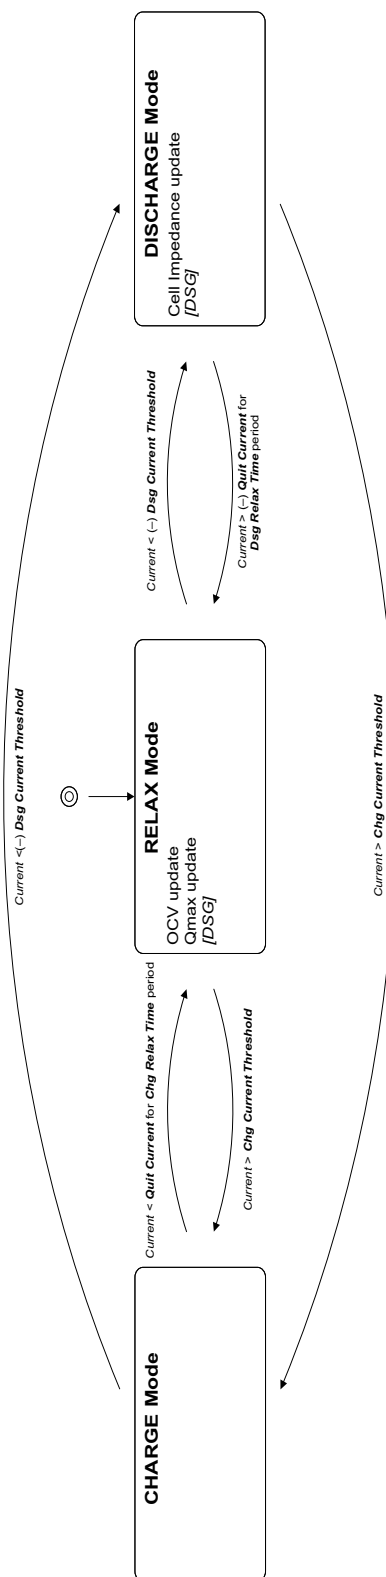

**Figure 7-1. Gas Gauge Operating Modes**

- CHARGE mode is exited and RELAX mode is entered when current goes below **Quit Current** for a period of **Chg Relax Time**.
- DISCHARGE mode is entered when current goes below **(-)Dsg Current Threshold**.
- DISCHARGE mode is exited and RELAX mode is entered when current goes above **(-)Quit Current** threshold for a period of **Dsg Relax Time**.

- CHARGE mode is entered when current goes above **Chg Current Threshold**.

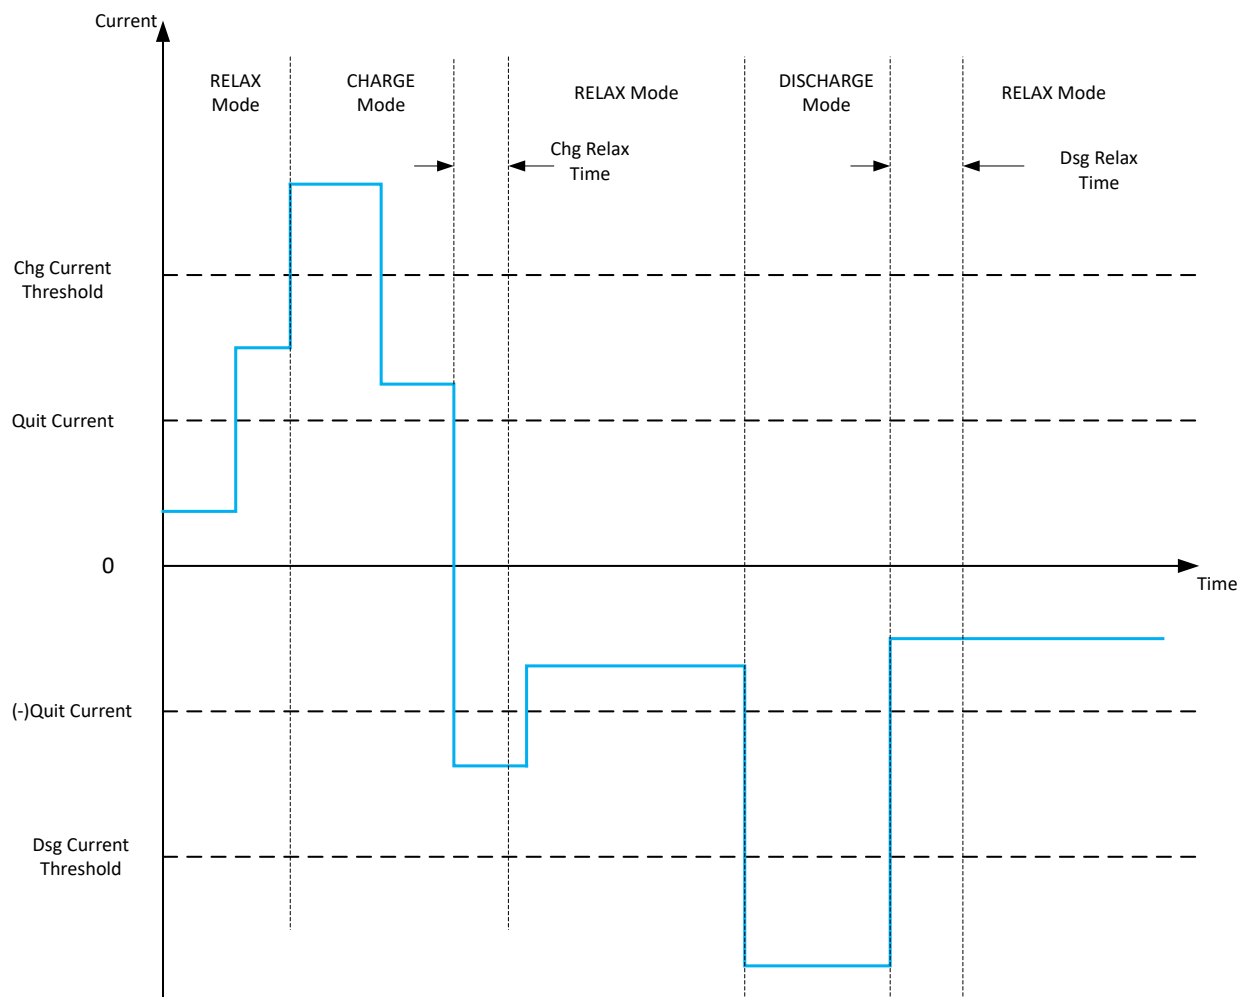

**Figure 7-2. Gas Gauge Operating Mode Example**

## 7.4 QMax and Ra

The total battery capacity is found by comparing states of charge before and after charge and discharge with the amount of charge passed. When an applications load is applied, the impedance of each cell is measured by comparing the open circuit voltage (OCV) obtained from a predefined function for present state-of-charge with the measured voltage under load.

Measurements of OCV and charge integration determine chemical state-of-charge and chemical capacity (*QMax*).

The device acquires and updates the battery-impedance profile during normal battery usage. It uses this profile, along with state-of-charge and the *QMax* values, to determine *FullChargeCapacity* and *RelativeStateOfCharge* specifically for the present load and temperature. *FullChargeCapacity* reports a capacity or energy available from a fully charged battery reduced by **Reserve Cap-mAh** or **Reserve Cap-cWh** under the present load and present temperature until voltage reaches the **Term Voltage**.

### 7.4.1 QMax Initial Values

The initial **QMax Pack**, **QMax Cell 0** values should be taken from the cell manufacturers' data sheet multiplied by the number of parallel cells, and are used for the *DesignCapacity* function value in the **Design Capacity** data flash value.

## 7.4.2 QMax Update Conditions

A QMax update is enabled when gauging is enabled. This is indicated by the *GaugingStatus()*[QEN] flag. The device updates the no-load full capacity (QMax) when two open circuit voltage (OCV) readings are taken. These OCV readings are taken when the battery is in a relaxed state before and after charge or discharge activity. A relaxed state is achieved if the battery voltage has a  $dV/dt$  of  $< 4 \mu V/s$ . Typically, it takes two hours in a charged state and five hours in a discharged state to ensure that the  $dV/dt$  condition is satisfied. If five hours is exceeded, a reading is taken even if the  $dV/dt$  condition was not satisfied. The *GaugingStatus()*[REST] flag is set when a valid OCV reading occurs. If a valid DOD0 (taken at the previous QMax update) is available, then QMax will also be updated when a valid charge termination is detected.

The flag is cleared at the exit of a relaxed state. A QMax update is disqualified under the following conditions:

**Temperature** If *Temperature()* is outside of the range 10°C to 40°C.

**Delta Capacity** If the capacity change between suitable battery rest periods is less than 37%.

**Voltage** If *CellVoltage()* is inside a flat voltage region. (See the *Support of Multiple Li-Ion Chemistries with Dynamic Z-Track Gas Gauges Application Report* (SLUA372) for the voltage ranges of other chemistries.) This flat region is different with different chemistry. The *GaugingStatus()*[OCVFR] flag indicates if the cell voltage is inside this flat region.

**Offset Error** If offset error accumulated during time passed from previous OCV reading exceeds 1% of *Design Capacity*, update is disqualified. Offset error current is calculated as **CC Deadband** / sense resistor value.

Several flags in *GaugingStatus()* are helpful to track for QMax update conditions. The [REST] flag indicates an OCV is taken in RELAX mode. The [VOK] flag indicates the last OCV reading is qualified for the QMax update. The [VOK] is set when charge or discharge starts. It clears when the QMax update occurs, when the offset error for a QMax disqualification is met, or when there is a full reset. The [QMax] flag will be toggled when the QMax update occurs. *GaugeStatus3()* returns the QMax and DOD (depth of discharge, corresponding to the OCV reading) data.

## 7.4.3 OCV Prediction

Another method available in the gauge is to estimate an accurate OCV reading. After a set wait time ( **OCV Pred Transient T** ) in RELAX mode, the gauge begins to accumulate voltage readings. Once **OCV Pred Measure Time** has passed, the gauge uses a fast OCV algorithm to predict the final OCV value. This fast OCV method is enabled by setting **IT Gauging Ext[FOCV\_EN]** = 1. This method provides the benefit of reduced relaxation requirements for QMax updates. If at any time the requirements for the conventional OCV method are achieved ( $dV/dt$  of  $< 1 \mu V/s$  requirement) after a fast OCV estimation, the device updates the OCV measurement accordingly. For a fast OCV estimate, entry into RELAX mode must be preceded by at least **OCV Pred Active T Limit** of a charge or discharge current large enough for the device to exit RELAX mode.

| Class       | Subclass   | Name                    | Type | Min | Max   | Default | Unit | Description                                                                                                                     |
|-------------|------------|-------------------------|------|-----|-------|---------|------|---------------------------------------------------------------------------------------------------------------------------------|
| Gas Gauging | IT-DZT Cfg | OCV Pred Active T Limit | U2   | 100 | 65535 | 200     | s    | This is the minimum time the gauge must be in CHARGE or DISCHARGE mode before entering into RELAX mode for a fast OCV estimate. |
| Gas Gauging | IT-DZT Cfg | OCV Pred Transient T    | U2   | 100 | 65535 | 300     | s    | This is the minimum time the gauge must be in RELAX mode before fast OCV voltage readings start to accumulate.                  |
| Gas Gauging | IT-DZT Cfg | OCV Pred Measure Time   | U2   | 0   | 65535 | 200     | s    | This is the time in RELAX mode when fast OCV voltage readings are accumulated and fast OCV is predicted.                        |

## 7.4.4 Fast Qmax Update Conditions

The Fast Qmax update conditions are very similar to the QMax update conditions with the following differences:

- Instead of taking two OCV readings for QMax update, a Fast Qmax update requires only one OCV reading AND
- The battery pack should discharge below 10% RSOC.

The differences in requirements allow the Fast Qmax feature to have a QMax update at the end of discharge (given one OCV reading is already available and discharge below 10% RSOC) without a longer relax time after a discharge event. Typically, it can take up to 5 hours in a DISCHARGE state to ensure the  $dV/dt < 4 \mu V/s$  condition is satisfied. The temperature, delta capacity, voltage, and offset error requirements for QMax update are still required for the Fast Qmax update.

This feature is particularly useful for reducing production QMax learning cycle time or for an application that is mostly in charge or discharge stage with infrequent relaxation. Setting **IT Gauging Configuration[FAST\_QMAX\_LRN] = 1** enables Fast Qmax during production learning only (that is, **Update Status = 6**). When setting **IT Gauging Configuration[FAST\_QMAX\_FLD] = 1**, Fast Qmax is enabled when gauging is enabled and **Update Status  $\geq 6$** .

#### 7.4.5 QMax and Fast Qmax Update Boundary Check

The device implements a QMax and Fast Qmax check prior to saving the value to data flash. This improves the robustness of the QMax update in case of potential QMax corruption during the update process.

The verifications are as follows:

1. Verify that the updating QMax or Fast Qmax value is within **Qmax Delta Percent**, which is the maximum allowed QMax change for each update. If the updating value is outside of this data flash parameter, the device caps the change to **Qmax Delta Percent** of the **Design Capacity**.
2. Bound the absolute QMax value, **Qmax Upper Bound**. This is the maximum allowed QMax value over the lifetime of the pack.
3. Ensure that QMax is greater than 0 before saving to data flash.

#### 7.4.6 Ra Table Initial Values

The Ra table is part of the impedance profile that updates during discharge when gauging is enabled. The initial **Cell 0 R\_a0...14**, values should be programmed by selecting the correct chemistry data during data flash configuration. A chemistry database is constantly updating, and can be downloaded from the Gas Gauge Chemistry Updater product web page (<http://www.ti.com/tool/gasgaugechem-sw>).

The **Cell 0 R\_a Flag**, indicates the validity of the cell impedance table for each cell.

#### Note

FW updates these values: It is not recommended to change them manually.

| High Byte |                                           | Low Byte |                                                                                                                                |
|-----------|-------------------------------------------|----------|--------------------------------------------------------------------------------------------------------------------------------|
| 0x00      | Cell impedance and QMax updated           | 0x00     | The table is not used and QMax updated.                                                                                        |
| 0x05      | RELAX mode and QMax update in progress    | 0x05     | RSVD                                                                                                                           |
| 0x55      | DISCHARGE mode and cell impedance updated | 0x55     | The table is used.                                                                                                             |
| 0xFF      | Cell impedance never updated              | 0xFF     | A Fast Qmax update without OCV read will also clear the R_DIS flag. The table is never used, no QMax or cell impedance update. |

#### 7.4.7 Ra Table Update Conditions

The impedance is different across different DOD states. Each cell has 15 Ra grid points presenting the impedance from 0%–100% DOD. In general, the Ra table is updated during discharge. The **GaugingStatus()[RX]** flag will toggle when the Ra grid point is updated. The Ra update is disabled if any of the following conditions are met. The **GaugingStatus()[R\_DIS]** is set to indicate the Ra update is disabled.

- During the optimization cycle, the Ra update is disabled until QMax is updated (that is, Ra will not be updated if **Update Status = 4**) OR

- Ra update is disabled if the charge accumulation error > 2% of **Design Capacity** OR
- During a discharge, a bad Ra value is calculated:
  - A negative Ra is calculated or
  - A bad RaScale value is calculated.

A valid OCV reading during RELAX mode or a Fast Qmax update without an OCV read will clear the *[R\_DIS]* flag.

#### 7.4.8 Application of Resistance Scaling

As a part of the Dynamic Z-Track algorithm, the device calculates an RScale value. The RScale value can be applied in two ways:

- When DOD\_RSCALE\_EN = 0 in **IT Gauging Configuration** and when the new RScale is calculated, it is applied across all DODs.
- When DOD\_RSCALE\_EN = 1 in **IT Gauging Configuration**, the new RScale is only applied to DODs higher than the DOD where the new RScale was calculated.

This can prevent early termination of certain simulations, as the RScale will not be applied in computing voltages at DODs below RScale DOD. As a result, sensitivity to passed charge error is drastically decreased for low resistance and high resistance cells.

### 7.5 FullChargeCapacity(FCC), RemainingCapacity(RemCap), and RelativeStateOfCharge(RSOC)

The Dynamic Z-Track algorithm applies QMax, impedance, temperature, voltage, and current data to predict the runtime *FullChargeCapacity()*, *RemainingCapacity()*, and *RelativeStateOfCharge()*. These values are updated if any of the following conditions are met, reflecting the battery capacity at real time.

- Power on reset
- QMax update occurs
- Ra update occurs
- At onset of charge and discharge
- At exit of discharge
- Every five hours in RELAX mode
- If temperature changes more than 5°C
- Valid charge termination

*FullChargeCapacity()* and *Remaining Capacity()* are also updated at the end of discharge termination. Under this condition, *FullChargeCapacity()* is recalculated as the sum of the initial charge and DOD passes charge, and *Remaining Capacity()* is cleared to 0.

### 7.6 Dynamic Z-Track Configuration Options

The device provides several Dynamic Z-Track (DZT) configuration options to fine-tune the gauging performance. These configurations can be turned on or off through the corresponding flags in **SBS Gauging Configuration** or **IT Gauging Configuration**.

**[LOCK0]**: After a discharge event, cell voltage will usually recover to a slightly higher voltage during RELAX state. A new OCV reading during this time can result in a slightly higher state-of-charge. This flag provides an option to keep *RemainingCapacity()* and *RelativeStateOfCharge()* from jumping back during relaxation after 0% and FD are reached during discharge.

**[RSOC\_HOLD]**: An IT simulation will run at the onset of discharge. If charge terminates at a low temperature and a discharge occurs at a higher temperature, the difference in temperature could cause a small rise of RSOC for a short period of time at the beginning of discharge. This flag option prevents RSOC rises during discharge. RSOC will be held until the calculated value falls below the actual state.

**[RSOC\_HOLD]** should not be used when **[SMOOTH]** is set.

**[RSOCL]**: When set, RSOC will be held at 99% until charge termination is detected. See [Section 16.6](#) for more details.

**[RFACTSTEP]** : The gauge keeps track of an Ra factor of the (old Ra)/(new Ra) during the Ra update. This factor is used for Ra scaling. It is limited to three max. During an Ra update, if (old Ra)/(new Ra) is > 3, the gauge can take on two different actions based on the setting of this flag.

If this flag is set (default), the gauge allows Ra to update once using the max factor of 3, then disables the Ra update. If this flag is set to 0, the gauge will not update Ra and also disables the Ra update. It is recommended to keep the default setting.

**[OCVFR]** : An OCV reading is taken when a dV/dt condition is met. This is not the case if charging stops within the flat voltage region.

By default, this flag is set. The device will take a 48-hour wait before taking an OCV reading if charge stops below the FlatVoltMax. A discharge will not cancel this 48-hour wait. The 48-hour wait will only be cleared if charging stops above the FlatVoltMax level. Setting this flag to 0 removes the 48-hour wait requirement, and OCV is taken when the dV/dt condition is met. Removing the 48-hour requirement can be useful sometimes to reduce test time during evaluation.

**[DOD0EW]** : DOD0 readings have an associated error based on the elapsed time since the reading, the conditions at the time of the reading (reset, charge termination, and so on), the temperature, and the amount of relax time at the time of the reading, among others. This flag provides an option to take into account both the previous and new calculated DOD0, which are weighted according to their respective accuracies. This can result in improved accuracy and in a reduction of RSOC jumps after relaxation.

**[LFP\_RELAX]** : This is an option for LiFePO4 chemistry. This flag can be enabled even if non-LiFePO4 chemistry is programmed. The device will check for the chemistry ID (that is, ChemID = 4xx series) before activating this function.

LiFePO4 chemistry has a unique slow relaxation time near full charge. Detailed, in-house test data suggests that the relaxation after a full charge takes a few days to settle. The slow decaying voltage causes RSOC to continue to drop every 5 hours. Depending on the full charge taper current, the fully relaxed voltage could be close to or even below FlatVoltMax. For the chemID 4xx (LiFePO4) series, the condition to exit the long RELAX mode is if the pack had previously charged to full or near full state, and then either a significant long relaxation or a non-trivial discharge has happened, such that when in relaxation, the OCV < **FlatVoltMax** .

The QMax update is disabled because DOD will not be taken as long as it is in LFP\_relax mode. By the time the gas gauge exits the LFP\_relax mode, the OCV is already in the flat zone. Therefore, the QMax update takes an alternative approach: Once full charge occurs ( **[FC]** bit set), DOD0=Dod\_at\_EOC is automatically assigned and valid for a QMax update. **[VOK]** is set if there is no QMax update. If QMax is updated, **[VOK]** is cleared. The DOD error as a result of this action is zero or negligible because in the LiFePO4 table, OCV voltage corresponding to DOD= 0 is much lower.

**[Fast\_QMAX\_LRN]** and **[Fast\_QMAX\_FLD]** : The first flag enables Fast Qmax during the learning cycle when **Update Status** = 06. The second flag enables Fast Qmax in the field when **Update Status** ≥ 06. See [Section 7.4.4](#) for more details.

**[RSOC\_CONV]** : This function is also called fast scaling. It is an option to address the convergence of RSOC to 0% at a low temperature and a very high rate of discharge. Under such conditions, it is possible to have a drop of RSOC to 0%, especially if the termination voltage is reached at the DOD region with a higher Ra grid interval. To account for the error caused by the high granularity of the impedance grid interval, the **[RSOC\_CONV]** , when enabled, applies a scale factor to impedance, allowing more frequent impedance data updates used for RemCap simulation leading up to 0% RSOC.

If **[RSOC\_CONV]** is enabled, it is recommended to start this function around the knee region of the discharge curve. This is usually around 10% of RSOC or around 3.3 V–3.5 V. This function will check for the cell voltage and RSOC status and start the function when either condition is met. The RSOC and cell voltage setting can be configured through **Fast Scale Start SOC** or **Term Voltage Delta** .

**[FF\_NEAR\_EDV]** : Fast Filter Near EDV. If this flag is set, the gauge applies an alternative filter, **Near EDV Ra Param Filter** , for an Ra update in the fast scaling region (starting around 10% RSOC). This flag should be kept to 1 as default. When this flag is 0, the gauge uses the regular Ra filter, **Resistance Parameter Filter** . Both of the DF filters should not be changed from the default.

**[SMOOTH]** : A change in temperature or current rate can cause a significant change in remaining capacity (RemCap) and full charge capacity (FCC), resulting in a jump or drop in the Relative State-of-Charge (RSOC). This function provides an option to prevent an RSOC jump or drop during charge and discharge.

If a jump or drop of RSOC occurs, the device examines the amount of RSOC jump or drop versus the expected end point (that is, the charge termination for the charging condition or the EDV for the discharge condition) and automatically smooths the change of RSOC, and always converges with the filtered (or smoothed) value to the actual charge termination or EDV point. The actual and filtered values are always available. The **[SMOOTH]** flag selects whether actual or filtered values are returned by the SBS commands.

**[RELAX\_JUMP\_OK]** and **[RELAX\_SMOOTH\_OK]** : When the battery enters RELAX mode from CHARGE or DISCHARGE mode, the transient voltage may change RSOC as the battery goes into its RELAX state. Once the battery is in RELAX mode, a change in temperature or self-discharge may also cause a change in RSOC.

If **[RELAX\_JUMP\_OK]** = 1, this allows the RSOC jump to occur during RELAX mode. Otherwise, RSOC holds constant during RELAX mode and any RSOC jump will be passed into the onset of the charge or discharge phase.

If **[RELAX\_SMOOTH\_OK]** = 1, this allows the amount of the RSOC jump to be smoothed out over a period of **Smooth Relax Time** . Otherwise, the additional RSOC jump amount will be passed into the onset of charge or discharge phase.

If both flags are set, the **[RELAX\_JUMP\_OK]** = 1 takes higher priority and the RSOC jump is allowed during RELAX mode.

**[TDELAV]** : This flag determines how the **Delta Voltage** is calculated. By setting this flag, the gauge will calculate **Delta Voltage** that corresponds to the power spike defined in **Min Turbo Power** . This flag must be set to 1 if TURBO BOOST mode is used. Otherwise, leaving this flag cleared as default enables the gauge to calculate **Delta Voltage** by using the maximal difference between instantaneous and average voltage.

**[CELL\_TERM]** : This flag provides an option to have a cell voltage based discharge termination. If the minimum cell voltage reaches **Term Min Cell V** , **RemainingCapacity()** will be forced to 0 mAh. For more details, see the *Pack Based and Cell Based Termination* section in [Section 7.2](#).

**[CSYNC]** : This flag, if set, will synchronize **RemainingCapacity()** to **FullChargeCapacity()** at valid charge termination.

**[CCT]** : This flag provides an option to use **FullChargeCapacity()** ( **[CCT]** = 1) or **DesignCapacity()** ( **[CCT]** = 0) for cycle count threshold calculation. If **FullChargeCapacity()** is selected for cycle count threshold calculation, the minimum cycle count threshold is always 10% of **Design Capacity** . This is to avoid any erroneous cycle count increment caused by extremely low **FullChargeCapacity()**.

**[CHG\_100\_SMOOTH\_OK]** : This handles smoothing in the charge direction to 100%. For jumps to 100% during charge, this feature uses the taper termination detection logic to predict when charge termination will occur. The taper termination logic requires two consecutive 40-s windows that meet all taper conditions. After the first 40-s window is satisfied, time-based smoothing will be initiated, smoothing RemCap to smoothed FCC over the next 40-s window. It is important to note that smoothed RemCap will converge to smoothed FCC and not True RemCap.

**[DSG\_0\_SMOOTH\_OK]** : Allows smoothing in the discharge direction when there is a jump to 0%. Set this flag to prevent jumps to 0% during discharge, two DF parameters are used: **Term Smooth Start Cell V Delta** and **Term Smooth Time** . Once battery stack voltage is below **Term Smooth Start Cell V Delta** and discharging, time-based smoothing is initiated. This smooths RemCap to 0 mAh over the next **Term Smooth Time** seconds. **Term Smooth Start Cell V Delta** is a per cell voltage delta. This value is multiplied by the number of cells, added to **Terminate Voltage** , and checked against **Voltage()**. Smoothing will continue to 0% unless charging starts (even in RELAX mode).

To assure that the gauge reports 0% in low voltage situations, the DF **Term Smooth Final Cell V Delta** is used. This value is multiplied by the number of cells, subtracted from **Terminate Voltage** , and checked against **Voltage()**. Once voltage passes this threshold, 0% will be forced even if smoothing was not completed.

**[VeryLowBattery]** : When enabled, this feature holds *RemainingCapacity()* at a configured target near the end of discharge. Once the minimum cell voltage falls below **VLB Voltage** while *RemainingCapacity()* still exceeds **VLB Remaining Cap. mAH** (or **VLB Remaining Cap. cWH** in energy mode) during discharge, and this condition persists for **VLB Hold Time** seconds, *GaugingStatus()*[VLB] is set and *RemainingCapacity()* is held at the VLB target. The hold is released when current becomes non-negative, a CUV or CUVc safety alert is detected, or **VLB Timeout** seconds elapse, after which *RemainingCapacity()* smoothly transitions toward the actual value.

**[FOCV\_EN]** : If this bit is set to 1, the gauge enables a fast OCV algorithm to predict the final OCV value, which reduces relaxation requirements for QMax updates.

**[EDV\_CONV]** : To prevent the jump in the reported SOC towards the end of discharge before the cell voltage reaches terminate voltage due to any inaccuracies in the battery model parameters, the EVCS algorithm guarantees that zero SOC is reported only when the measured voltage reaches terminate voltage. This algorithm can be activated by setting **[EDV\_CONV]** bit to 1.

**[SOH\_LEARN\_EN]** : *StateOfHealth()* is a function of **Design Capacity** and if **Design Capacity** is set low, *StateOfHealth()* starts at greater than 100% and does not reflect degradation from the true starting point. This bit provides an option to learn maximum SOH FCC( **SOH FCC Max** ), and if learned SOH FCC is larger than **Design Capacity** , uses learned SOH FCC for the *StateOfHealth()* calculation instead of **Design Capacity** . Any time SOH FCC calculates a larger value, learned SOH FCC is updated with a larger value. The initial values of learned SOH FCC **SOH FCC Max** should be set to **Design Capacity** .

**[DELAY\_DROP\_TO\_0]** : If a IT simulation produces zero remaining capacity during DISCHARGE mode, fast scaling is activated before reporting 0% on *RelativeStateofCharge()* using **[DELAY\_DROP\_TO\_0]** = 1. If the drop in capacity is caused by an error in the Ra table, it is corrected by the scale and IT simulation from fast scaling. If **[SMOOTH]** = 0, this would prevent reporting 0% on *RelativeStateofCharge()* briefly. If **[SMOOTH]** = 1, this would prevent *RelativeStateofCharge()* from being held at or smoothed to 0% (depending on the setting of **[DSG\_0\_SMOOTH\_OK]**). This feature only works if **[RSOC\_CONV]** = 1.

#### Note

**Term Smooth Final Cell V Delta** can be disabled by setting to 0 and is typically expected to be set low enough to enable the system to shut down properly (without brownout).

## 7.7 State of Health (SOH)

The device implements a new state-of-health (SOH) function. Previously, the SOH of a battery was typically represented by the actual runtime **FullChargeCapacity / Design Capacity** (or FCC/DC). Using the runtime FCC, however, is not an adequate representation for the state-of-health, because the runtime FCC reflects the usable capacity under load. A high current load reduces the runtime FCC. If using just the FCC/DC calculation for SOH, the SOH under high load will be worse than the SOH under typical load. However, a smaller usable capacity at high load does not mean the SOH of a battery is degraded. This is the same when FCC is reduced at a lower temperature.

The device implementation of state-of-health addresses these issues. It provides the SOH of the battery through an SBS command, *StateOfHealth()*. The *StateOfHealth()* is calculated using the FCC simulated at 25°C at **Rec Temp Charging:Voltage** with current specified by **SOH Load Rate** . The **SOH Load Rate** can be set to the typical current of the application, and it is specified in hour-rate (that is, **Design Capacity / SOH Load Rate** will be the current used for the SOH simulation). Separate thermal model temperature factor **SOH Temp k** and thermal model temperature **SOH Temp a** are used for SOH simulation. **SOH Load Rate** , **SOH Temp k** and **SOH Temp a** data flash settings are used for *StateOfHealth()* calculation only. This SOH FCC is updated at the same time ASOC and RSOC are updated. Since this implementation removes the variation of current, temperature or voltage, it is a better representation of a battery's state-of-health. The SOH FCC is available on MAC *StateOfHealth()*. SOH FCC is initialized with lifetime **Min FCC-SOH** until SOH simulation is completed on POR. Lifetime data **Min FCC-SOH mAh/cWh** is the minimum SOH FCC calculated from IT algorithm by now.

## 7.8 RSOC Rounding Option

By default, if there is an RSOC of 20.1 through 20.9, then the RSOC becomes 21 (ceiling function). However, the following shows how the RSOC rounding feature works when enabled by setting **[RSOC\_RND\_OFF] = 1** (default is 0) in the **SBS Gauging Configuration** register:

Round-off applies to charging and discharging between an RSOC 0% to 99% if, for example:

There is an RSOC of 20.1 through 20.4, then the RSOC becomes 20 (round off).

There is an RSOC of 20.5 through 20.9, then the RSOC becomes 21 (round off).

Round-down applies for charging and discharging between an RSOC of 99% to 99.9% if:

There is an RSOC of 99.1 or 99.9, then the RSOC becomes 99 (round down).

In charge, RSOC is set to 100% only when FC is set.

## 7.9 RSOC 1% Hold

When **[1PERCENT\_HOLD]** is set, RSOC is prevented from going below 1% until **Terminate Voltage** is detected.

## 7.10 Accumulated Charge Measurement

The device includes an accumulated charge function that measures the integrated current passed in or out of the battery. This function can be used to generate an alert to the host when a programmable threshold of accumulated charge is achieved.

The device also integrates the elapsed time since the current integration began, assuming the timer has not been interrupted by a power cycle or put into SHUTDOWN mode. This time is read using the command *AccumulatedTimeCharge()*. If an event has occurred that interrupted the timer, the value of *AccumulatedTimeCharge()* will be fixed unchanging at 0 until the integration is reset.

The current and time integration is started at initial power up or upon issue of the *AccumulationStart()* command. The current and time integration is stopped upon issue of the *AccumulationStop()* command. The current and time integration is reset at initial power up or upon issue of the *AccumulationReset()* command.

While the battery is DISCHARGING, then the current integration counter decreases. If the battery starts CHARGING then the current integration counter increases. The integrated charge value in mAh (or cWh if *BatteryMode()[CAPM] = 1*) and the elapsed time (which does not decrease in value) can be read by the host using the command *AccumulatedTimeCharge()*.

The Accumulated Charge calculation uses the current measured across the sense resistor and, similar to the coulomb counter integration, ignores currents below a programmed level controlled by **CC Deadband**. In periods when the device is in SLEEP mode, the Accumulated Charge integration includes an estimate of the charge integrated based on analysis of the periodic measured current if **[SLP\_ACCUM]** is enabled.

The current integration can also be limited to only include positive (charging) currents, only negative (discharging) currents, or both, through setting the **[ACCHG\_EN]** and **[ACDSG\_EN]** configuration bits. If both **[ACCHG\_EN]** and **[ACDSG\_EN]** are cleared, then the timer is halted. These bits can be set using the *AccumulationChargeEnable()* and *AccumulationDischargeEnable()* commands.

The user can set thresholds to alert the host when accumulated charge reaches a particular level in both the charge (positive) and discharge (negative) directions. These thresholds are set by **AccumulationChargeThreshold** and **AccumulationDischargeThreshold**, which can be changed in SEALED mode with *AccumulationChargeThreshold()* and *AccumulationDischargeThreshold()*. Setting one or both of these to zero will disable the associated threshold.

*AccumulatedTimeCharge()* does not reset when a threshold is reached, the data is only reset by the host using the *AccumulationReset()* command. When a threshold is passed, a flag is set in *OperationStatus()[ACTHR]*.

Due to the current integration and timer information being stored in RAM, any power cycle of the device or putting the device into SHUTDOWN will result in the loss of *AccumulatedTimeCharge()* data.

## 8 Gauging for Silicon Anode Battery

### 8.1 Introduction

Due to the high energy density, silicon anode battery is being gradually used in more and more battery systems. However, since silicon degrades faster than graphite, silicon anode battery's OCV (open circuit voltage) curve drifts with the aging, especially for the batteries containing small amount of silicon (up to 20%). Thanks to the advanced battery modeling and prediction technology, DZT(Dynamic Z-Track) algorithm is able to track the OCV curve drift and has the capability to gauge silicon anode batteries (including both small and dominant silicon type batteries) accurately.

### 8.2 Capacity Loss And OCV Drift

Capacity loss is an important indicator of battery degradation and defined as the ratio between Qmax reduction and the Design (original) Qmax. There are three main factors impacting on capacity loss: Temperature, Cycle Count, and Running Time.

OCV curve drift can be seen as an external manifestation of the capacity loss. To continuously track and compensate the OCV curve drift caused by capacity loss, a real-time model is corrected from the results of an off-line computation combined with physical modeling of the voltage change at different temperatures performed over the life of the battery.

### 8.3 Silicon Anode Battery Gauging

Si-anode gauging algorithm is enabled when **Settings: Configuration: ZT SiAnode Gauging Configuration** **[SI\_ENABLE] = 1**

The silicon anode battery gauging can be separated into two parts:

- Initial Design Qmax Calculation
- Capacity Loss Update and OCV drift correction

#### Design Qmax Learning Process

During a normal learning cycle, the **Design Qmax Cell x** parameter (accessible via **Gas Gauging: IT Cfg: Design Qmax Cell x**) is automatically updated when the standard Impedance Track learning cycle completes successfully and the update status transitions to 0x06 (or higher).

Upon succesful learning, the flag **Gas Gauging: IT Cfg: Design Qmax Status[DesignQmaxLearned]** is set to 1.

---

#### Note

- **Design Qmax Cell x** is updated only if **DesignQmaxLearned** = 0 prior to the learning cycle. This ensures that **Design Qmax Cell x** is normally updated only once in the device lifetime.
  - To force a re-learning of **Design Qmax Cell x** (e.g. after cell replacement or for test purposes), the user must manually clear the **DesignQmaxLearned** bit by writing 0 to it. After this operation, the next valid learning cycle will update **Design Qmax Cell x** again and re-set the **DesignQmaxLearned flag** to 1.
- 

#### Initial Capacity Loss Calculation

The Initial Capacity Loss value is calculated automatically after a RESET under the following conditions:

- Both **Design Qmax Cell x** and cell **Qmax Cell x** have been successfully learned.
- Update status is  $\geq 0x06$

If these conditions are not met at the time of reset, Initial Capacity Loss calculation is postponed until the required parameters become available.

---

#### Note

Each cell has its unique **Design Qmax Cell x** value

---

## Silicon Anode Chemistry Requirement


For optimal performance and highest accuracy when using silicon anode batteries, a specific chemistry profile (ChemID) characterized by Texas Instruments must be programmed into the device. This is mandatory for proper SiAnode operation. The characterized chemistry enables offline modeling, which in turn provides the necessary OCV (Open Circuit Voltage) tables, Qmax parameters, and accurate Initial Capacity Loss calculation.

## Capacity Loss Update and OCV Drift Correction

During system operation, the algorithm predicts the capacity loss through the model in real time. When the Qmax is updated, the capacity loss is calculated based on the latest Qmax and Design Qmax. Meanwhile, since the capacity loss is impacted by running time, temperature, and cycle count, the modeling also performs statistics on these factors and includes their influence into capacity loss calculation. When an OCV reading is requested, the algorithm will use the latest capacity loss to correct OCV drift and provide an accurate OCV reading.

### Note

The gauge will compute the Capacity loss for each unique cell. See **Caploss Cell x** parameter description for more details.

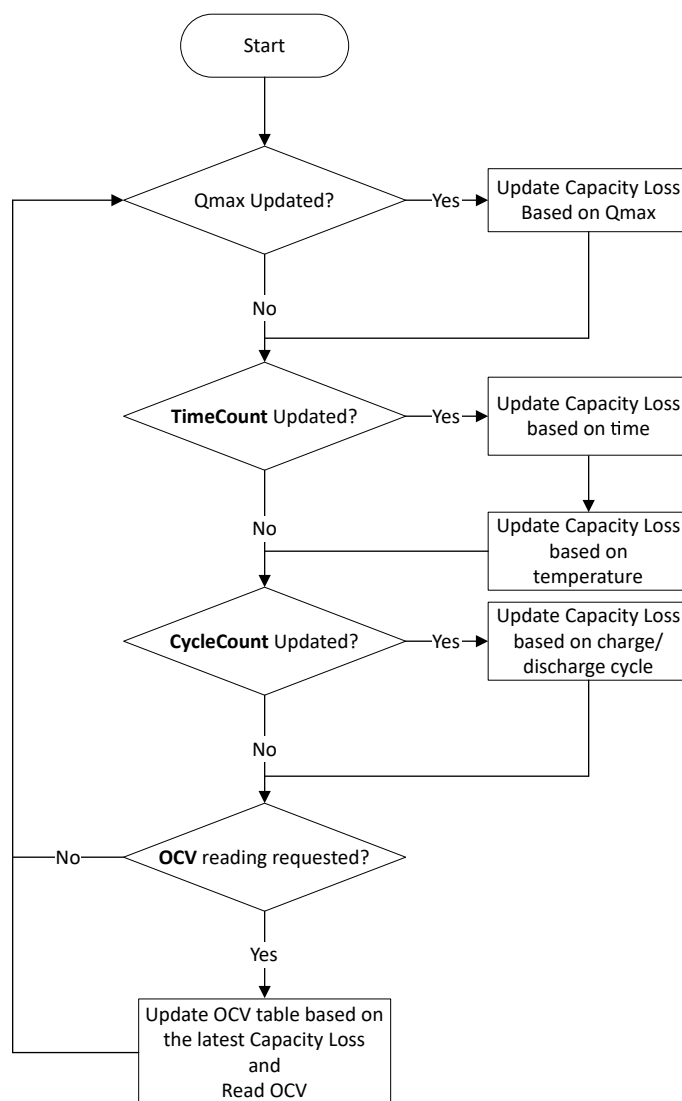

**Figure 8-1. Capacity Loss Update and OCV Drift Correction**

## 8.4 Silicon Anode Gauging Parameters

To have an accurate gauging for silicon anode batteries, the following parameters should be configured based on the real condition of battery system, which defines the operation range of the silicon anode gauging algorithm.

| Class       | Subclass | Name                 | Type | Min | Max   | Default | Unit  | Description                                                                                                                                 |
|-------------|----------|----------------------|------|-----|-------|---------|-------|---------------------------------------------------------------------------------------------------------------------------------------------|
| Gas Gauging | IT Cfg   | End of Life Capacity | U2   | 0   | 100   | 20      | %     | The capacity loss at the end of battery lifetime.                                                                                           |
| Gas Gauging | IT Cfg   | Cycle Count Max      | U2   | 0   | 65535 | 1000    | count | Charge/Discharge Cycle count to reach end of battery lifetime at room temperature specified by T_room.                                      |
| Gas Gauging | IT Cfg   | Cycle Count Max High | U2   | 0   | 65535 | 500     | count | Charge/Discharge Cycle count to reach end of battery lifetime at high temperature specified by T_high.                                      |
| Gas Gauging | IT Cfg   | Time Count           | U2   | 0   | 65535 | 0       | days  | The number of days since the last Si Anode activation. It is used to calculate the effective temperature based on the time-counted caploss. |
| Gas Gauging | IT Cfg   | Time Count Max       | U2   | 0   | 65535 | 1800    | days  | Time to reach end of battery lifetime at room temperature specified by T_room.                                                              |
| Gas Gauging | IT Cfg   | Time Count Max High  | U2   | 0   | 65535 | 720     | days  | Time to reach end of battery lifetime at high temperature specified by T_high.                                                              |
| Gas Gauging | IT Cfg   | Room Temp            | U2   | 0   | 65535 | 25      | °C    | Room temperature.                                                                                                                           |
| Gas Gauging | IT Cfg   | High Temp            | U2   | 0   | 65535 | 45      | °C    | High temperature.                                                                                                                           |
| Gas Gauging | IT Cfg   | Design Qmax Cell     | U2   | 0   | 65535 | 4400    | mAh   | Original Qmax for cell 1. It should be updated at completion of learning cycle.                                                             |
| Gas Gauging | IT Cfg   | Caploss Cell         | I2   | 0   | 16383 | 0       | -     | Indicates the capacity loss for cell 1. Capacity loss is the difference between the Design Capacity and the current actual capacity.        |

## 8.5 Design Qmax

| Class       | Subclass | Name               | Type | Min | Max   | Default | Unit |
|-------------|----------|--------------------|------|-----|-------|---------|------|
| Gas Gauging | IT Cfg   | Design Qmax Cell 0 | I2   | 0   | 32767 | 4400    | mAh  |

**Description:** Initial value updated after learning cycle is successfully completed (Update Status >= 0x06).

**Design Qmax Cell x** is used to calculate capacitor loss. Reference to [SiAnode](#) section for more details.

## 8.6 ManufacturerAccess() 0x0040 SiAnode Status

This command returns the *SiAnode Status()*

The **ACTIVE** bit indicates that the Silicon-Anode specific gauging algorithm is fully enabled and operational for the current battery pack.

The **ACTIVE** bit is set to 1 when all of the following conditions are simultaneously true:

- **Settings: Configuration: ZT SiAnode Gauging Configuration [SI\_ENABLE] = 1**
- Settings: Configuration: Mfg Status init: [GAUGE\_EN] = 1
- **Gas Gauging: IT Cfg: Design Qmax Status[DesignQmaxLearned] = 1**
- SiAnode ChemID has successfully been programmed to the device.

15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

|      |      |      |      |      |      |      |      |      |      |      |      |      |      |      |        |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|--------|
| RSVD | RSVD | RSVD | RSVD | RSVD | RSVD | RSVD | RSVD | RSVD | RSVD | RSVD | RSVD | RSVD | RSVD | RSVD | ACTIVE |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|--------|

**RSVD (Bit 15-1):** Reserved. Do not use.

**ACTIVE (Bit 0):** Status of SiAnode Algorithm

- 1 = The gauge operates in Silicon-Anode mode and uses the dedicated Si-Anode OCV, impedance, and gauging models
- 0 = The gauge falls back to standard (non-Si-Anode) gauging behavior, even if Silicon-Anode features are partially configured.

## 8.7 ZT SiAnode Gauging Configuration

| Class    | Subclass      | Name             | Type | Min  | Max    | Default | Unit      |
|----------|---------------|------------------|------|------|--------|---------|-----------|
| Settings | Configuration | DA Configuration | H2   | 0x0  | 0xFFFF | 0x0000  | Hex       |
| 15       | 14            | 13               | 12   | 11   | 10     | 9       | 8         |
| RSVD     | RSVD          | RSVD             | RSVD | RSVD | RSVD   | RSVD    | RSVD      |
| 7        | 6             | 5                | 4    | 3    | 2      | 1       | 0         |
| RSVD     | RSVD          | RSVD             | RSVD | RSVD | RSVD   | RSVD    | SI_ENABLE |

**RSVD (Bits 15–1):** Reserved. Do not use.

**SI\_ENABLE (Bit 0):** Enables SiAnode Algorithm

1 = SiAnode algorithm enabled

0 = SiAnode algorithm disabled

## 9 Lifetime Data Collection

### 9.1 Description

The device has the capability to log events over the life of the battery, which is useful for analysis. Lifetime data collection is enabled by setting **ManufacturingStatus[LF\_EN]** = 1. The data is collected in RAM and only written to data flash under the following conditions to avoid wear out of the data flash:

- Every 10 hours if RAM content is different from data flash.
- A reset counter increments. The lifetime RAM data is reset; therefore, only the reset counters are updated to data flash.
- Before scheduled shutdown.
- Before low voltage shutdown and the voltage is above **Valid Update Voltage**.

The lifetime data stops collecting under the following conditions:

- Lifetime data collection is disabled by setting **ManufacturingStatus[LF\_EN]** = 0.

When the gauge is unsealed, the following **ManufacturingStatus()** can be used for testing lifetime data.

- **LifetimeDataReset()** can reset the lifetime data (RAM and data flash) to the default values.
- **LifetimeDataFlush()** can force an update of the RAM lifetime data to data flash.
- **LifetimeDataSpeedupMode()** can increase the rate the lifetime data is incremented.

The following lifetime data is collected when **ManufacturingStatus[LF\_EN]** = 1.

- Voltage
  - Maximum or minimum cell voltage
- Current
  - Maximum charge/discharge current
  - Maximum average discharge current
  - Maximum average discharge power
- Safety events that trigger **SafetyStatus()**
  - Number of safety events
  - **Cycle Count** at last safety event(s)
- Charging events
  - Number of valid charge terminations (That is, the number of times [VCT] is set.)
  - **Cycle Count** at Last Valid Charge Termination
- Discharging events
  - Number of full discharges (That is, the number of times [FD] is set.)
  - **Cycle Count** at last Full Discharge
- Gauging events

- Number of QMax updates
- **Cycle Count** at Last QMax update
- Number of RA updates and disable
- **Cycle Count** at Last RA update and disable
- Power events
  - Number of full resets, partial resets, and watchdog resets
  - Number of shutdowns
- Temperature
  - Max/Min Cell Temperature
  - Max/Min Int Temperature Sensor
- Time (This data is stored with a resolution of 1 second up to over 100 years.)
  - Total runtime
  - Total time spent charging
  - Total time spent discharging
  - Time spent in different *RelativeStateOfCharge()* – *Temperature()* ranges
    - Eight *RelativeStateOfCharge()* ranges for each of the seven charge temperature ranges
    - 56 *RelativeStateOfCharge()* – *Temperature()* runtime values

**Table 9-1. Time Spent in *RelativeStateOfCharge()* – *Temperature()* Ranges**

|                              | RSOC ≥ 95%<br>[default] | RSOC ≥<br>90% | RSOC ≥<br>80% | RSOC ≥<br>60% | RSOC ≥<br>40% | RSOC ≥<br>20% | RSOC ≥<br>10% | RSOC ≥<br>0% |
|------------------------------|-------------------------|---------------|---------------|---------------|---------------|---------------|---------------|--------------|
| Under Temperature            |                         |               |               |               |               |               |               |              |
| Low Temperature              |                         |               |               |               |               |               |               |              |
| Standard Temperature<br>Low  |                         |               |               |               |               |               |               |              |
| Recommended<br>Temperature   |                         |               |               |               |               |               |               |              |
| Standard Temperature<br>High |                         |               |               |               |               |               |               |              |
| High Temperature             |                         |               |               |               |               |               |               |              |
| Over Temperature             |                         |               |               |               |               |               |               |              |

## 9.2 Reset

In addition to the *ManufacturerAccess()* 0x0028 *Lifetime Data Reset*, **Lifetime Data Collection** can also be reset when **[SEALED\_RESET]** is set using a two-word MAC sequence available in SEALED and UNSEALED modes. The two-word key is programmable using *ManufacturerAccess()* 0x0035 *Security Keys*. Both keys must be sent within 4 seconds of each other for **Lifetimes** data to reset.

## 10 Linear Charging Functions

### 10.1 Introduction

The BQ27Z855 supports the Linear Charging function. The firmware provides programmable current set point for constant current (CC) mode, voltage set point for constant voltage (CV) charging mode, as well as programmable voltage thresholds for zero volt charging (ZVCHG), precharging, and advance charging. In addition, the firmware enables the device to control the mode switching of the charging function between normal charging, linear charging with MinSys mode, linear charging with supplement mode, and ideal diode modes. Reference to BQ27Z855 Datasheet for more description on MinSys, Supplement Mode, and Ideal Diode mode.

When **[LINCHGR]** is set to 0, the device assumes normal charging function and broadcast charging voltage and current values through I2C communication. When **[LINCHGR]** is set to 1, linear charging function will be enabled for BQ27Z855, and the advance charging algorithm will control the charging current and voltage of the integrated linear charger.

### Linear Charger Design Considerations:

When designing with the BQ27Z855 linear charger, the following parameters must be configured based on the application hardware:

- **Current Gain:** The **Current Gain** parameter in data flash must be configured based on the external sense resistor value ( $R_{SENSE}$ ) connected between SRP and SRN pins. The formula is:

$$\text{Current Gain} = 5294 \times (R_{SENSE} / 20 \text{ m}\Omega)$$

The default value of 2646 is configured for a 10 m $\Omega$  sense resistor. Incorrect configuration will result in charging current errors.

- **Precharge Current:** Set in **Advanced Charging Algorithm PCHG Current**. Actual current depends on correct Current Gain configuration.
- **Fast Charge Current:** Set in **Advanced Charging Algorithm CHGC Current**. Actual current depends on correct Current Gain configuration.

## 10.2 Charger Detect (CHGR\_DET) Functionality

### Overview

The **CHGR\_DET** bit is a status indicator reflecting whether a valid upstream charger is attached. The device firmware monitors the voltage difference between PACK+ (VPACK) and the battery (VBAT) using configurable thresholds with hysteresis to prevent noise-induced toggling.

**Entry Condition (CHGR\_DET = 1):** When  $(VPACK - VBAT) \geq \text{CHGR\_DET On Voltage}$  (default 0 mV), the CHGR\_DET bit sets, indicating a valid charger is attached.


**Exit Condition (CHGR\_DET = 0):** When  $(VBAT - VPACK) \geq \text{CHGR\_DET Off Voltage}$  (default 10 mV), the CHGR\_DET bit clears, indicating the charger is removed or invalid.

The separate On and Off voltage thresholds create a hysteresis window that prevents rapid toggling of the CHGR\_DET, LIN, and ID status bits due to measurement noise. This is particularly important during Ideal Diode mode with no charger attached or during supplement mode transitions where PACK voltage may briefly drop below BAT voltage.

### CHGR\_DET State Machine

The CHGR\_DET status serves as a primary input to the CHG FET finite state machine and the linear charge profile state machine, enabling immediate transition into Linear mode to initiate battery charging upon detection (provided the linear charger is enabled and no protections are active), while forcing exit to Ideal Diode or OFF states when the charger is removed.

## CHGR\_DET State Machine

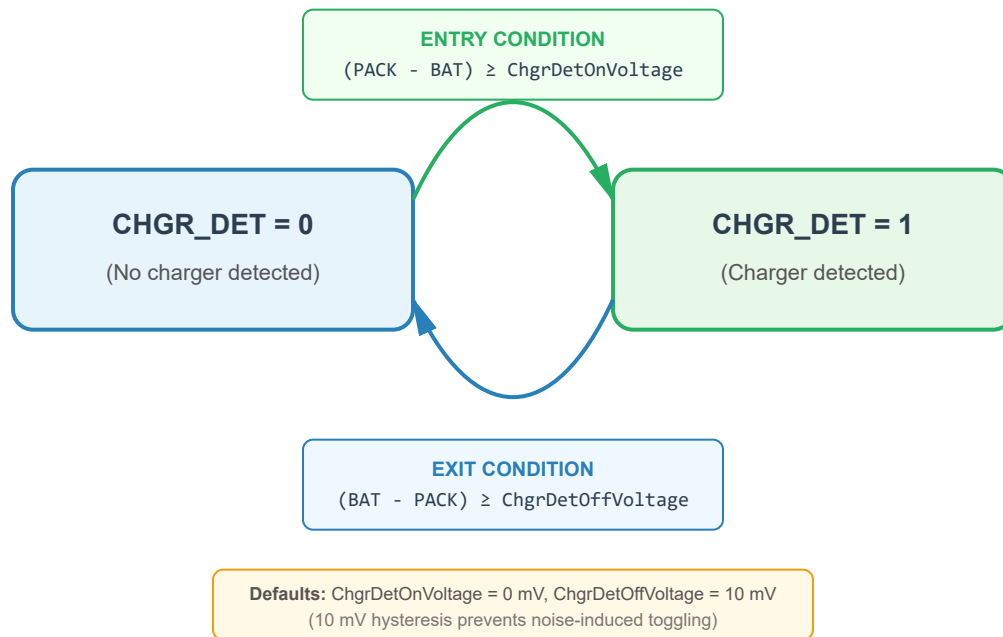

**Figure 10-1. CHGR\_DET State Machine**

**Example with default settings (On = 0 mV, Off = 10 mV):**

- CHGR\_DET enters (sets to 1) when:  $V_{PACK} \geq V_{BAT}$
- CHGR\_DET exits (clears to 0) when:  $V_{PACK} \leq V_{BAT} - 10 \text{ mV}$
- Between these thresholds, CHGR\_DET maintains its previous state

### Data Flash Parameters

The charger detection thresholds are configured via the following Data Flash parameters in **Advanced Charge Algorithm > Charger**:

| Parameter            | Default | Unit | Description                                                     |
|----------------------|---------|------|-----------------------------------------------------------------|
| CHGR_DET On Voltage  | 150     | mV   | Threshold to enter CHGR_DET state (NEW)                         |
| CHGR_DET Off Voltage | 10      | mV   | Threshold to exit CHGR_DET state (renamed from Vacp Hysteresis) |

### CHGR\_DET On Voltage

| Class                     | Subclass | Name                | Type | Min    | Max   | Default | Unit |
|---------------------------|----------|---------------------|------|--------|-------|---------|------|
| Advanced Charge Algorithm | Charger  | CHGR_DET On Voltage | I2   | -32768 | 32767 | 0       | mV   |

**Description:** This parameter sets the voltage threshold for entering the CHGR\_DET state. When the voltage difference ( $V_{PACK} - V_{BAT}$ ) is greater than or equal to this threshold, the CHGR\_DET bit in *ChargerStatus()* will be set to 1, indicating that an upstream charger is detected.

**Entry Condition:** CHGR\_DET = 1 when  $(V_{PACK} - V_{BAT}) \geq \text{CHGR\_DET On Voltage}$

**Default Value:** 0 mV. With the default setting, CHGR\_DET will set as soon as  $V_{PACK} \geq V_{BAT}$ .

**Configuration Notes:** Increasing this value requires a larger voltage difference before charger detection occurs. This can be useful in applications where a voltage margin is needed before activating the linear charger.

### CHGR\_DET Off Voltage

| Class                     | Subclass | Name                 | Type | Min    | Max   | Default | Unit |
|---------------------------|----------|----------------------|------|--------|-------|---------|------|
| Advanced Charge Algorithm | Charger  | CHGR_DET Off Voltage | I2   | -32768 | 32767 | 10      | mV   |

**Description:** This parameter sets the voltage threshold for exiting the CHGR\_DET state. When the voltage difference (VBAT - VPACK) is greater than or equal to this threshold, the CHGR\_DET bit in *ChargerStatus()* will be cleared to 0, indicating that the upstream charger is no longer detected.

**Exit Condition:** CHGR\_DET = 0 when (VBAT - VPACK) >= CHGR\_DET Off Voltage

**Equivalent:** CHGR\_DET = 0 when VPACK <= VBAT - CHGR\_DET Off Voltage

**Default Value:** 10 mV. This provides a 10 mV hysteresis band to prevent noise-induced toggling.

**Configuration Notes:** This parameter was previously named *Vacp Hysteresis* with a default of 0 mV. The renamed parameter with 10 mV default provides improved noise immunity.

---

**Parameter Renamed:** In firmware version v0.03 (BMSFW-11389), the parameter *Charger Vacp Hysteresis* was renamed to *Charger CHGR\_DET Off Voltage* and the default value was changed from 0 mV to 10 mV.

---

### Hysteresis Behavior

The combination of *CHGR\_DET On Voltage* and *CHGR\_DET Off Voltage* creates a hysteresis window that provides stable charger detection even in the presence of voltage measurement noise.

**Benefit:** This hysteresis prevents rapid toggling of the CHGR\_DET, LIN, and ID status bits when VPACK is approximately equal to VBAT, which commonly occurs during:

- Ideal Diode mode operation with no upstream charger attached
- Supplement mode transitions where PACK voltage drops below BAT voltage
- Charger connect/disconnect events with voltage transients

### Related Parameters and Status

The CHGR\_DET detection interacts with the following status bits and configuration parameters:

| Parameter/Status                                                   | Location                | Description                                                                                                                                                                                                                                                                                 |
|--------------------------------------------------------------------|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SBS:ManufacturerAccess(0x00B5) [CHGR_DET]                          | Bit 1                   | Reflects the current charger detection state. Automatically controlled by firmware in automatic mode ( <b>Advanced Charge Algorithm: Charger: Configuration[PAR_PACK]</b> =0). Host-writable in parallel pack mode ( <b>Advanced Charge Algorithm: Charger: Configuration[PAR_PACK]</b> =1) |
| SBS:ManufacturerAccess(0x00B5) [LIN]                               | Bit 2                   | Linear mode active. Requires [CHGR_DET] = 1 and [LINCHGR] = 1                                                                                                                                                                                                                               |
| SBS:ManufacturerAccess(0x00B5) [ID]                                | Bit 3                   | Ideal Diode mode active. Typically active when [CHGR_DET] = 0                                                                                                                                                                                                                               |
| SBS:ManufacturerAccess(0x00B5) [LINCHGR]                           | Bit 0                   | Reflects if linear charger is enabled in configuration                                                                                                                                                                                                                                      |
| <b>Advanced Charge Algorithm: Charger: Configuration[LINCHGR]</b>  | Settings: Configuration | Must be enabled (=1) for linear charger functionality                                                                                                                                                                                                                                       |
| <b>Advanced Charge Algorithm: Charger: Configuration[PAR_PACK]</b> | Settings: Configuration | When enabled (=1), disables automatic [CHGR_DET] detection and enables host control via SBS:ManufacturerAccess(0x00B5) writes. See Parallel Pack (PAR_PACK) Mode section                                                                                                                    |

## Parallel Pack (PAR\_PACK) Mode

When the **Advanced Charge Algorithm: Charger: Configuration[PAR\_PACK]** configuration bit is enabled (set to 1), the CHGR\_DET functionality transitions from automatic voltage-based detection to host-controlled mode. This mode is designed for applications using parallel pack configurations where hardware-based charger detection may not be reliable or where the host system requires direct control over charger detection state.

### Behavior Change:

- When **[PAR\_PACK]** = 0 (default): Firmware automatically controls the **[CHGR\_DET]** bit based on voltage hysteresis (VPACK - VBAT comparison). SBS:ChargerStatus(0x00B5)[CHGR\_DET] is read-only.
- When **[PAR\_PACK]** = 1: Firmware disables automatic voltage-based detection. The host system controls **[CHGR\_DET]** state directly by writing to SBS:ManufacturerAccess(0x00B5).

**Host Control via SBS:ManufacturerAccess(0x00B5):** In parallel pack mode, the host writes the desired **[CHGR\_DET]** state by sending a command. The command includes the data byte, checksum, and length fields.

```
// MAC 0x00B5 Commands for CHGR_DET control in parallel pack mode

// Enable CHGR_DET (set bit 1):
B5 00 02 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 48 06
// Byte 0-1: B5 00 (MAC address)
// Byte 2: 02 (data byte with CHGR_DET bit 1 set)
// Bytes 3-33: 00 (padding)
// Byte 34: 48 (I2C checksum)
// Byte 35: 06 (command length)

// Disable CHGR_DET (clear bit 1):
B5 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
00 4a 06
// Byte 0-1: B5 00 (MAC address)
// Byte 2: 00 (data byte with CHGR_DET bit 1 clear)
// Bytes 3-33: 00 (padding)
// Byte 34: 4a (I2C checksum)
// Byte 35: 06 (command length)
```

Only the **[CHGR\_DET]** bit (Bit 1) is writable in parallel pack mode via SBS:ManufacturerAccess(0x00B5) command. All other bits in SBS:ChargerStatus(0x00B5) remain read-only and reflect firmware-determined states (**[LIN]**, **[ID]**, **[LINCHGR]**). The I2C checksum and length fields must be included in the command for proper delivery.

**Use Cases:** Parallel pack mode is essential for applications with multiple battery packs in parallel, such as:

- **Parallel Battery Packs:** When two or more battery packs are connected in parallel, each gauge cannot reliably distinguish between a charger adapter connected to PACK+ and another battery pack at a higher voltage. Without **[PAR\_PACK]** enabled, the gauge might incorrectly detect **[CHGR\_DET]** based on voltage from the parallel pack instead of an actual charger, leading to cross-charging and potential safety violations.

**Interaction with Other Features:** Even in parallel pack mode, the automatic charging state machine (LIN/ID transition logic) operates normally based on the host-written **[CHGR\_DET]** state:

- When host sets **[CHGR\_DET]**=1 and **[LINCHGR]**=1, the device may enter LINEAR mode (if no protections are active)
- When host clears **[CHGR\_DET]**=0, the device exits LINEAR mode and returns to IDEAL DIODE or OFF modes as appropriate
- The voltage thresholds ( **CHGR\_DET On Voltage** and **CHGR\_DET Off Voltage** ) are not used in parallel pack mode; the host directly controls the bit state

## 10.3 CHG FET FSM and Mode-to-mode Switching (Linear Charger Modes)

When the integrated linear charger in BQ27Z855 is not enabled ( **[LINCHGR]** = 0), and both charging and discharging are not disabled due to triggering of safety protection or fault conditions, the firmware will assume

interaction with a smart charger and report the values of *ChargingVoltage()* and *ChargingCurrent()* according to the charging algorithm described under the [#unique\\_142](#) chapters.

When the integrated linear charger in BQ27Z855 is enabled ( **[LINCHGR] = 1** ), the firmware will control the state of the linear charger between the charging modes described below:

- **Linear Charging mode** - When *ChargerStatus()[CHGR\_DET]* = 1 (valid charger detected based on PACK vs BAT voltage comparison using configurable **CHGR\_DET On Voltage** and **CHGR\_DET Off Voltage** thresholds), the linear charger activates to perform linear regulation of *ChargingVoltage()* or *ChargingCurrent()* depending on the current state of the Charge Profile FSM
  - with MINSYS Regulation: When the input current through the PACK pin is shared between charging the battery and powering the system load. The dynamic power path management will control the CHG FET to adjust the charging current in order to regulate the PACK voltage to the programmed MINSYS Voltage Threshold.
  - with Supplement: When the sum of the charging and load currents is > the input current limit of the upstream charger and causes the voltage at the PACK pin to fall below the VTH\_ON threshold, the linear charger will switch into supplement mode and disable charge termination.
- **Ideal Diode Mode** - When *ChargerStatus()[CHGR\_DET]* = 0 (charger not detected, i.e., PACK voltage has dropped below BAT voltage by at least **CHGR\_DET Off Voltage** ), the linear charger will switch to ideal diode mode to allow the battery to supply the system load.

#### Note

When operating in Ideal Diode mode, the CHG FET pin may be HIGH (ID\_ON state) regardless of the device operating mode. This includes when the device is in SLEEP mode with **[SLEEPCHG] = 0**, or when *OperationStatus()[CHG]* is clear and *OperationStatus()[XCHG]* is set. In Ideal Diode mode, the CHG FET is controlled by the hardware DCOMP comparator ( $V_{PACK} - V_{BAT}$  vs  $V_{TH\_ON}/V_{TH\_OFF}$ ) rather than by firmware charging enable flags.

**CHGR\_DET and Mode Selection:** The *ChargerStatus()[CHGR\_DET]* bit is the primary input that determines whether the device operates in Linear mode or Ideal Diode mode. The CHGR\_DET bit is set or cleared based on the voltage difference between PACK and BAT:

- **CHGR\_DET = 1** (Entry): When  $(V_{PACK} - V_{BAT}) \geq \text{CHGR\_DET On Voltage}$  (default 0 mV)
- **CHGR\_DET = 0** (Exit): When  $(V_{BAT} - V_{PACK}) \geq \text{CHGR\_DET Off Voltage}$  (default 10 mV)

The separate On and Off voltage thresholds provide hysteresis to prevent rapid toggling between Linear and Ideal Diode modes due to measurement noise, particularly during supplement mode transitions or when no charger is attached.

The BQ27Z855 CHG FET output is controlled by CHG FET FSM logic when **LINCHGR = 1**.

There are 4 distinct modes device firmware transitions between depending on programmable settings in device data flash and system parameters: OFF, ON, Linear, and Ideal Diode. Depending on the current mode the device is operating in, the device can operate in a particular state and make hardware-based transitions between states within modes.


The BQ27Z855 determines the mode the device operates in while device digital hardware determines the state within a mode the device operates in.

**Firmware Mode Transition Logic:** The firmware evaluates the following conditions to determine the operating mode:

1. If **LINCHGR = 0** (linear charger disabled) → **OFF mode**, use standard FET control
2. If **CHGR\_DET = 1** AND CHG FET enabled AND no CFETF permanent failure → **Linear mode**
3. If DSG FET disabled OR device is in Zero Volt Charging (ZVCHG) mode → **OFF mode**

*Note: During Zero Volt Charging of a deeply discharged battery, the linear charger is disabled and the AFE hardware controls charging directly.*

4. Otherwise → **Ideal Diode mode**

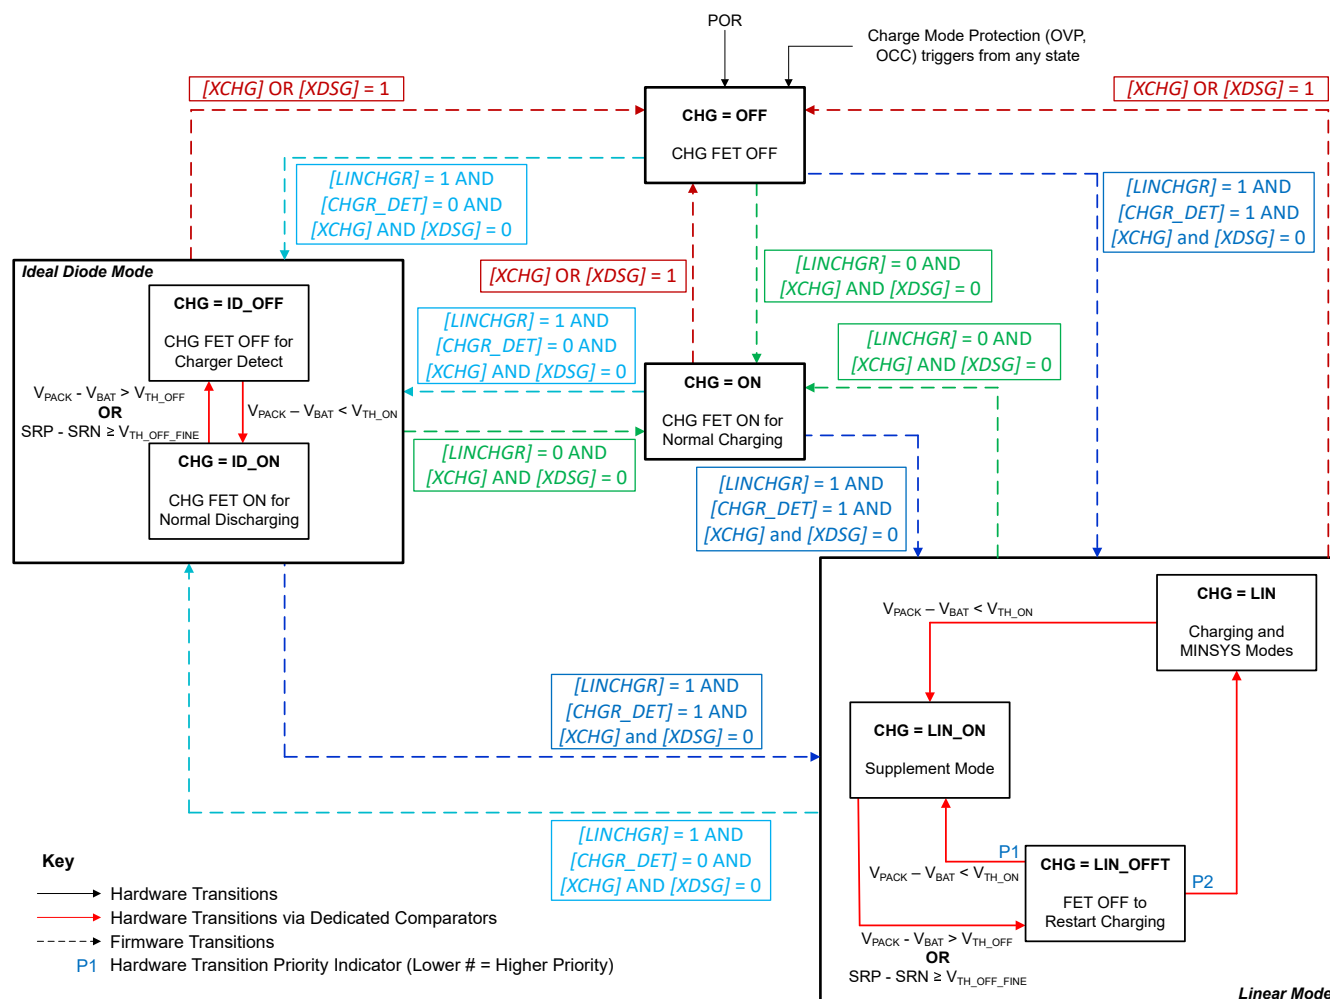

**Figure 10-2. CHG FET FSM**

The CHG FET FSM logic controls the state of the CHG FET with the following key considerations:

1. Firmware transitions override hardware transitions and takes highest priority after hardware-based protection circuits
2. Available hardware transitions in Linear and Ideal Diode modes check several system parameters to ensure proper device and system operation:
  - a. A dedicated voltage comparator (DCOMP) between the PACK and BAT pin voltages detects when  $V_{PACK} - V_{BAT} < V_{TH\_ON}$  to turn the CHG FET ON and  $V_{PACK} - V_{BAT} > V_{TH\_OFF}$  to turn the CHG FET OFF
  - b. A Coulomb counter-based charger current measurement digital filter (CC3) detects when  $V_{SRP} - V_{SRN} \geq V_{TH\_OFF\_FINE}$  to turn the CHG FET OFF
3. State exit transition priorities are indicated as P1, P2, and so on where P1 is the highest priority transition
4. The HFO is automatically enabled when the device is in all states except OFF, ON, and ID\_ON to reduce device power consumption.

**Table 10-1. CHG FET FSM Modes and States**

| Modes | States | Charger Function                                                  | CHGR_DET Condition                                 |
|-------|--------|-------------------------------------------------------------------|----------------------------------------------------|
| OFF   | OFF    | Zero Volt Charging (deeply discharged battery), Charging Disabled | N/A (linear charger disabled or protection active) |
| ON    | ON     | Normal Charging or Discharging (external charger control)         | N/A (linear charger disabled)                      |

**Table 10-1. CHG FET FSM Modes and States (continued)**


| Modes       | States   | Charger Function                                                                                                                                    | CHGR_DET Condition                 |
|-------------|----------|-----------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------|
| Linear      | LIN      | Precharge, Constant Current, Constant Voltage, MINSYS regulation                                                                                    | CHGR_DET = 1 (charger detected)    |
|             | LIN_ON   | Supplement Mode (battery assists system load)                                                                                                       |                                    |
|             | LIN_OFFT |                                                                                                                                                     |                                    |
| Ideal Diode | ID_OFF   | Waiting for charger detection, Valid Charge Termination                                                                                             | CHGR_DET = 0 (no charger detected) |
|             | ID_ON    | Normal Discharging (battery powering system, charger removed). CHG FET pin is HIGH; persists in SLEEP mode regardless of <i>[SLEEPCHG]</i> setting. |                                    |

## 10.4 Linear Charge Profile

When integrated linear charger is enabled, the firmware in BQ27Z855 will enable the integrated linear charger to charge the battery under the following phases or mode:


- Disabled - The device can inhibit the start of charging at high and low temperatures to prevent damage of the cells, or disable charging when certain safety conditions are detected. More details can be found under the [Section 16.13](#) and the [Section 16.14](#) sections.
- Zero-Volt Charging (ZVCHG) - When the linear charger is active, but the battery voltage is < **ZVCHG Exit Threshold** and the PACK voltage is ≥ **ZVCHG PACK Threshold**, the device will enter the zero-volt charging phase. Details are under the [Linear Charge Profile State Machine](#) section and [Section 16.9](#).
- Precharging (PCHG) - When the linear charger exits the zero-voltage charging phase, or if battery voltage falls < **Precharge Start Voltage** during charging, the device will enter the precharging phase. Details are under the [Section 16.10](#) and the [Linear Charge Profile State Machine](#) sections.
- Constant Current (CC) Charging - The linear charger enters the constant current charging phase after precharging when the battery voltage is ≥ **Charging Voltage Low** and Precharge Timeout Protection did not trip. After a charge termination event, if the battery voltage falls below **Recharge Voltage** or the **RSOC()** falls below **Recharge RSOC**, the linear charger will resume charging by entering the constant current charging phase to recharge the battery.
- Constant Voltage (CV) Charging - The linear charger exits the constant current charging phase and enters the constant voltage charging phase after the battery voltage is ≥ the **charging voltage** () value that is determined by the temperature range, and the the Fast Charge Timeout Protection did not trip. Details regarding the Fast Charge Timeout Protection is under the [Section 3.11](#) section.
- Charge Termination - Charging can be terminated based on several criterias. Details can be found under the [Valid Charge Termination](#) section.

[Typical CC-CV Battery Charge Profile](#) and [Linear Charge Profile State Machine](#) illustrates the charging profile and firmware flow chart moving between the different charging phases.

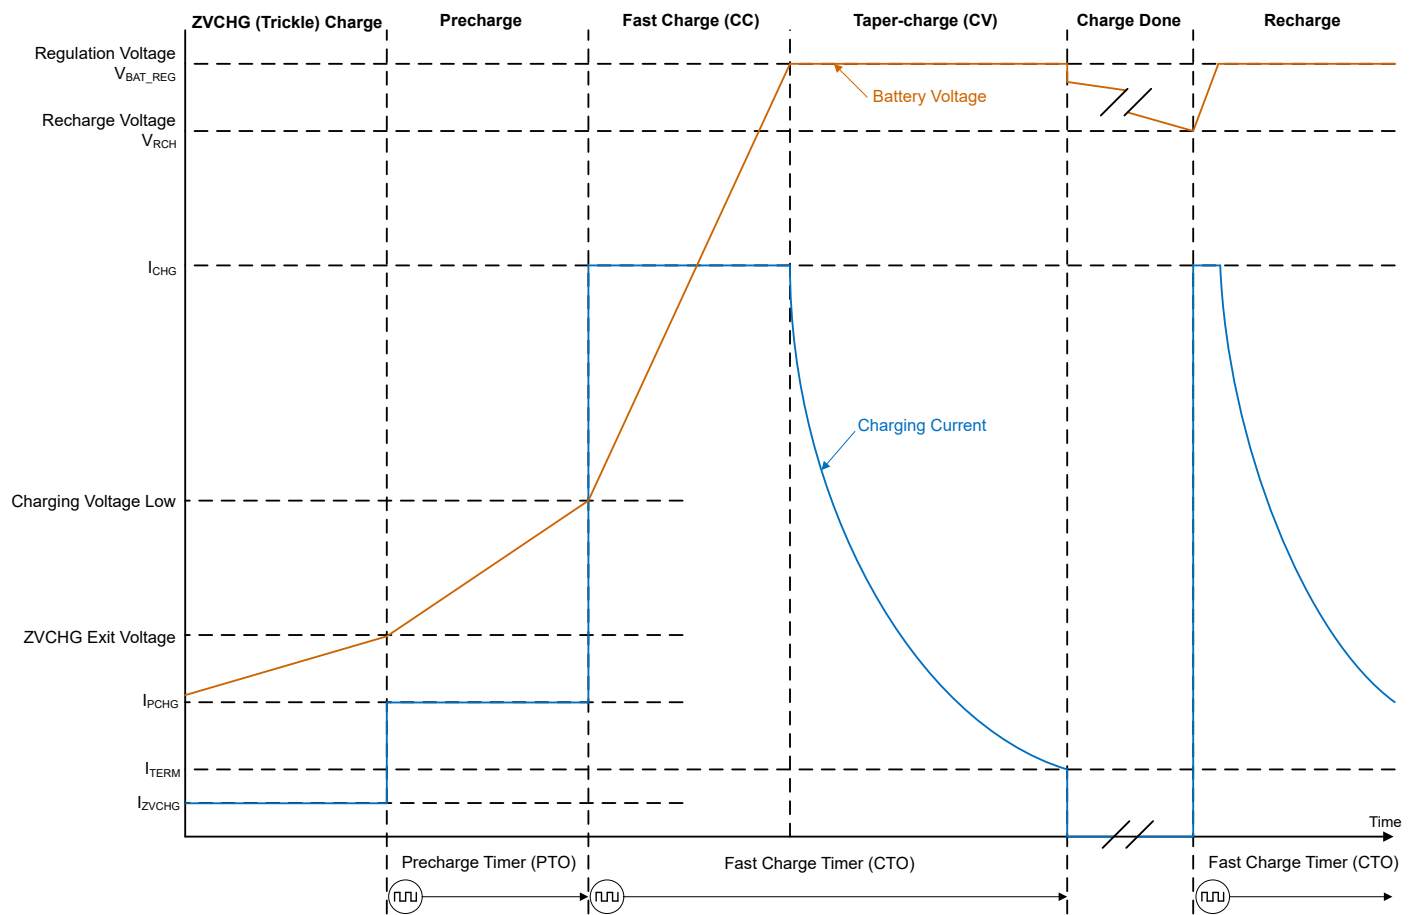

**Figure 10-3. Typical CC-CV Battery Charge Profile**

**Linear Charge Profile State Machine** illustrates a CC-CV battery charge cycle the BQ27Z855 device steps through and tracks via a state machine regardless of the state of the `[CHGR_DET]` bit. The device controls what charge profile state the battery is currently operating at in parallel to controlling what state the CHG FET is in via the CHG FET FSM.

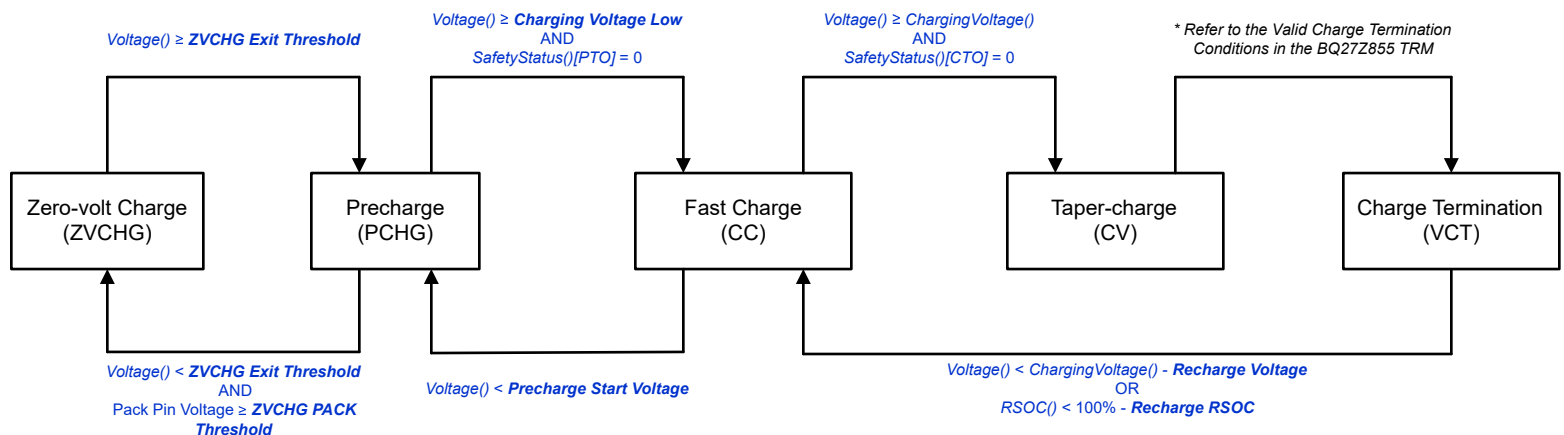

**Figure 10-4. Linear Charge Profile State Machine**

## 11 Charge Current Derating

### Overview

The BQ27Z855 linear charger supports charge current derating to protect the device from excessive internal die temperature and to reduce cable or connector losses caused by a large voltage drop between the PACK output and the battery terminals. Two independent derate axes are evaluated each firmware cycle:

- **Temperature Derate** — based on the internal die temperature (INT\_TEMP). When the die temperature rises above a configured threshold, the charging current requested from the charger is reduced by the corresponding derate percentage.
- **Pack-Bat Derate** — based on the voltage difference between the PACK output voltage and the battery voltage (VPACK-VBAT). A large differential indicates significant resistive drop in the charge path. When this differential exceeds a configured threshold, the charging current is derated to reduce power dissipation.

The **active derate percentage** applied to the charging current is the **maximum** of the temperature derate and the pack-bat derate at any given moment. The resulting effective charging current is:

$$\text{Effective ChargingCurrent} = \text{ChargingCurrent} \times (100 - \text{ActiveDerate}) / 100$$

The active derate percentage (0–99%) can be read from *ManufacturerAccess()* **0x00B5 ChargerStatus()** bytes 2–3 (bits 31–16). A value of 0 indicates no derating is active.

### 6-Entry Stepped Lookup Table

Each derate axis uses a 6-entry stepped lookup table (indices 0–5). Each entry pairs a **threshold** with a **derate percentage**. Thresholds must be configured in ascending order (index 0 is the lowest threshold).

**Ordinal advancement:** The active derate level (ordinal) advances to the next index when the measured value meets or exceeds the threshold at the next level. The ordinal retreats only when the measured value drops below the current threshold minus the configured hysteresis value. This prevents rapid toggling of the derate level near a threshold boundary.

When the measured value falls below threshold index 0, the active derate for that axis is 0% (no derating).

### Enable Configuration

Each derate axis is independently enabled by a bit in the **Advanced Charge Algorithm > Charger > Configuration** register (default 0x0D):

| Bit Name                     | Default     | Description                                                                                                                              |
|------------------------------|-------------|------------------------------------------------------------------------------------------------------------------------------------------|
| <b>TEMPDERATE</b> (bit 2)    | 1 (enabled) | Enables temperature-based charge current derating. When set, the Temperature Threshold 0–5 and Temperature Derate 0–5 tables are active. |
| <b>PACKBATDERATE</b> (bit 3) | 1 (enabled) | Enables PACK-BAT differential-based charge current derating. When set, the Pack Bat Diff 0–5 and Pack Bat Derate 0–5 tables are active.  |

### Note

Both derating axes are **enabled by default**. Set the corresponding bit to 0 to disable a derate axis. Disabling both axes prevents any derating from being applied regardless of temperature or PACK-BAT differential.

### Reading the Active Derate Percentage

The currently active derate percentage is readable via *ManufacturerAccess()* **0x00B5 ChargerStatus()**. Starting from firmware version v0.07 (build 8, BMSFW-11843), this command returns **4 bytes** instead of 2 bytes:

| Bytes (I2C order) | Bits  | Content                                                                                                                                   |
|-------------------|-------|-------------------------------------------------------------------------------------------------------------------------------------------|
| Bytes 0–1 (aaAA)  | 31–16 | ChargerStatus bits (LINCHGR, CHGR_DET, LIN, IDON, IDOFF, LINSUPP, LINOFFT). See <i>ManufacturerAccess()</i> <b>0x00B5 ChargerStatus</b> . |

| Bytes (I2C order)         | Bits | Content                                                                                                                                                                           |
|---------------------------|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Bytes 2–3 ( <i>bbBB</i> ) | 15–0 | Active derate percentage (0–99%). Maximum of temperature derate and pack-bat derate currently applied to <i>ChargingCurrent()</i> . A value of 0 indicates no derating is active. |

### Note

Host software reading exactly 2 bytes from MAC 0x00B5 will receive only the ChargerStatus bits and will not receive the derate percentage. Update host software to read 4 bytes from this command.

## 12 Charge Current Derating Data Flash Parameters

| Class                     | Subclass | Name                    | Type | Min  | Max   | Default | Unit |
|---------------------------|----------|-------------------------|------|------|-------|---------|------|
| Advanced Charge Algorithm | Charger  | Temperature Threshold 0 | I2   | 25.0 | 115.0 | 50.0    | °C   |
| Advanced Charge Algorithm | Charger  | Temperature Threshold 1 | I2   | 25.0 | 115.0 | 60.0    | °C   |
| Advanced Charge Algorithm | Charger  | Temperature Threshold 2 | I2   | 25.0 | 115.0 | 70.0    | °C   |
| Advanced Charge Algorithm | Charger  | Temperature Threshold 3 | I2   | 25.0 | 115.0 | 80.0    | °C   |
| Advanced Charge Algorithm | Charger  | Temperature Threshold 4 | I2   | 25.0 | 115.0 | 90.0    | °C   |
| Advanced Charge Algorithm | Charger  | Temperature Threshold 5 | I2   | 25.0 | 115.0 | 100.0   | °C   |

**Description:** Internal die temperature (°C) at which derate level *N* activates. When *INT\_TEMP* meets or exceeds *Temperature Threshold N*, the charging current is reduced by the corresponding *Temperature Derate N* percentage. Thresholds must be configured in ascending order (Threshold 0 < Threshold 1 < ... < Threshold 5). Active when **Charger Configuration[TEMPDERATE]** = 1 (default enabled). Stored internally in units of 0.1 K; displayed in °C.

| Class                     | Subclass | Name                 | Type | Min | Max | Default | Unit |
|---------------------------|----------|----------------------|------|-----|-----|---------|------|
| Advanced Charge Algorithm | Charger  | Temperature Derate 0 | U2   | 1   | 99  | 10      | %    |
| Advanced Charge Algorithm | Charger  | Temperature Derate 1 | U2   | 1   | 99  | 20      | %    |
| Advanced Charge Algorithm | Charger  | Temperature Derate 2 | U2   | 1   | 99  | 50      | %    |
| Advanced Charge Algorithm | Charger  | Temperature Derate 3 | U2   | 1   | 99  | 70      | %    |
| Advanced Charge Algorithm | Charger  | Temperature Derate 4 | U2   | 1   | 99  | 80      | %    |
| Advanced Charge Algorithm | Charger  | Temperature Derate 5 | U2   | 1   | 99  | 95      | %    |

**Description:** Charging current reduction (%) applied when the internal die temperature meets or exceeds the corresponding *Temperature Threshold N*. Higher index levels apply progressively larger reductions. The active temperature derate is the derate value at the current ordinal level. Hysteresis is applied when stepping down the ordinal; see *Temp Derate Hysteresis*.

| Class                     | Subclass | Name                   | Type | Min | Max  | Default | Unit |
|---------------------------|----------|------------------------|------|-----|------|---------|------|
| Advanced Charge Algorithm | Charger  | Temp Derate Hysteresis | I2   | 0.0 | 15.0 | 1.0     | °C   |

**Description:** Internal die temperature drop (°C) below a *Temperature Threshold N* required before the temperature derate ordinal steps down to the previous level. Prevents rapid oscillation of the derate state when the die temperature is near a threshold boundary. Hysteresis is applied only to the reduction of the ordinal, not to its advancement. Stored internally in units of 0.1 °C; displayed in °C.

| Class                     | Subclass | Name            | Type | Min | Max  | Default | Unit |
|---------------------------|----------|-----------------|------|-----|------|---------|------|
| Advanced Charge Algorithm | Charger  | Pack Bat Diff 0 | I2   | 10  | 2500 | 100     | mV   |
| Advanced Charge Algorithm | Charger  | Pack Bat Diff 1 | I2   | 10  | 2500 | 200     | mV   |
| Advanced Charge Algorithm | Charger  | Pack Bat Diff 2 | I2   | 10  | 2500 | 500     | mV   |
| Advanced Charge Algorithm | Charger  | Pack Bat Diff 3 | I2   | 10  | 2500 | 800     | mV   |
| Advanced Charge Algorithm | Charger  | Pack Bat Diff 4 | I2   | 10  | 2500 | 1000    | mV   |
| Advanced Charge Algorithm | Charger  | Pack Bat Diff 5 | I2   | 10  | 2500 | 1500    | mV   |

**Description:** Voltage difference threshold (mV) between the PACK output voltage and the battery voltage (VPACK–VBAT) at which pack-bat derate level N activates. When the measured differential meets or exceeds *Pack Bat Diff N*, the charging current is reduced by the corresponding *Pack Bat Derate N* percentage. Thresholds must be configured in ascending order (Diff 0 < Diff 1 < ... < Diff 5). Active when **Charger Configuration[PACKBATDERATE] = 1** (default enabled).

| Class                     | Subclass | Name              | Type | Min | Max | Default | Unit |
|---------------------------|----------|-------------------|------|-----|-----|---------|------|
| Advanced Charge Algorithm | Charger  | Pack Bat Derate 0 | U2   | 1   | 99  | 10      | %    |
| Advanced Charge Algorithm | Charger  | Pack Bat Derate 1 | U2   | 1   | 99  | 20      | %    |
| Advanced Charge Algorithm | Charger  | Pack Bat Derate 2 | U2   | 1   | 99  | 35      | %    |
| Advanced Charge Algorithm | Charger  | Pack Bat Derate 3 | U2   | 1   | 99  | 50      | %    |
| Advanced Charge Algorithm | Charger  | Pack Bat Derate 4 | U2   | 1   | 99  | 70      | %    |
| Advanced Charge Algorithm | Charger  | Pack Bat Derate 5 | U2   | 1   | 99  | 90      | %    |

**Description:** Charging current reduction (%) applied when the PACK-BAT voltage differential meets or exceeds the corresponding *Pack Bat Diff N*. The higher of the temperature derate and the pack-bat derate at any given moment is the active derate applied to *ChargingCurrent()*. Hysteresis is applied when stepping down the ordinal; see *Pack Bat Derate Hysteresis*.

| Class                     | Subclass | Name                       | Type | Min | Max | Default | Unit |
|---------------------------|----------|----------------------------|------|-----|-----|---------|------|
| Advanced Charge Algorithm | Charger  | Pack Bat Derate Hysteresis | I2   | 0   | 150 | 10      | mV   |

**Description:** Voltage (mV) below a *Pack Bat Diff N* threshold required before the pack-bat derate ordinal steps down to the previous level. Prevents rapid oscillation of the pack-bat derate state when the VPACK–VBAT differential is near a threshold boundary. Hysteresis is applied only to the reduction of the ordinal, not to its advancement.

## 13 Host Interrupts

### 13.1 Description

The device can generate an interrupt to the host processor on the BTP pin when a Battery Trip Point (BTP) threshold crossing is detected. The **IO Config[BTP\_EN]** bit enables assertion of the BTP pin when a BTP threshold is crossed. The **IO Config[BTP\_MODE]** bit selects whether the threshold is compared against remaining capacity in mAh ( **IO Config[BTP\_MODE] = 0**) or relative state of charge in % ( **IO Config[BTP\_MODE] = 1**). The active-high or active-low polarity of the BTP pin is configured separately in the BTP GPIO data flash parameters.

The BTP discharge and charge thresholds ( **BTPDsgSet** and **BTPChgSet** ) are RAM-only registers. They are initialized at power-up from the data flash parameters **Init Discharge Set** and **Init Charge Set** (or their

RSOC-based equivalents when **IO Config[BTP\_MODE]** = 1). The interrupt is cleared when the host re-writes **BTPDsgSet** or **BTPChgSet**. For full BTP interrupt behavior, see the BTP chapter.

## 13.2 Host Interrupts Configuration

BTP interrupt behavior is configured through the **IO Config** data flash parameter. The two BTP-relevant bits are **BTP\_EN** (bit 0), which enables assertion of the BTP pin on a threshold crossing, and **BTP\_MODE** (bit 2), which selects the threshold comparison source.

| Class    | Subclass      | Name      | Type | Min  | Max  | Default | Unit | Description                                                                                                                                                                                                                                                                                                                                                             |
|----------|---------------|-----------|------|------|------|---------|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Settings | Configuration | IO Config | H1   | 0x00 | 0x1D | 0x00    | —    | Bit 0: BTP_EN<br>0 = BTP pin not asserted on threshold crossing<br>1 = BTP pin asserted when BTP threshold is crossed<br>Bit 1: RSVD<br>Bit 2: BTP_MODE<br>0 = BTP threshold compared against <i>RemainingCapacity()</i> in mAh<br>1 = BTP threshold compared against <i>RelativeSoC()</i> in %<br>Bits 4–3: GPIO_EN, GPIO_PF (see IO Config chapter)<br>Bits 7–5: RSVD |

### Note

**BTPDsgSet** and **BTPChgSet** are RAM-only registers. They are loaded at power-up from the data flash parameters **Init Discharge Set / Init Discharge Set RSOC** and **Init Charge Set / Init Charge Set RSOC** depending on **BTP\_MODE**. Writing a new value to **BTPDsgSet** or **BTPChgSet** via the SBS interface updates the RAM threshold only and clears the active interrupt; it does not modify the data flash init values.

## 14 Device Security

### 14.1 Description

There are three levels of secured operation within the device: SEALED, UNSEALED, and FULL ACCESS. To switch between the levels, different operations are needed with different access keys. The device also supports SHA-256 HMAC authentication with the host system. Additionally, lifetime data is protected by an access key.

### 14.2 SHA-256 Authentication

#### Overview

The device uses SHA-256 for authentication, implementing HMAC-SHA256 (Hash-based Message Authentication Code with SHA-256) to verify the authenticity of the battery pack. This cryptographic method ensures that only genuine battery packs with the correct secret key can be authenticated by the host system.

#### HMAC-SHA256 Authentication

HMAC (Hash-based Message Authentication Code) is a mechanism for calculating a message authentication code using a cryptographic hash function (SHA-256) in combination with a secret key. The authentication process uses:

- **Secret Key:** A 256-bit (32-byte) authentication key stored in the device. This key is shared between the gauge and the host system.
- **Message (Challenge):** A 256-bit (32-byte) random number generated by the host processor and sent to the gauge.
- **Output (Response):** A 256-bit (32-byte) HMAC digest computed by the gauge using the secret key and challenge.

The host computes the same HMAC using the shared secret key and compares it with the response from the gauge. A match confirms the battery pack is authentic.

## Challenge Size

The HMAC-SHA256 challenge size is configurable via the **HMAC-SHA2 Challenge Size** parameter in data flash. By default (value = 1), the device accepts any challenge size from 8 to 32 bytes. The random number should be generated from the host processor system using a cryptographically secure random number generator.

The challenge is written to the gauge as a block (up to 32 bytes) to addresses 0x40–0x5F via *AltManufacturerAccess()*.

### Configuration Options:

- **0:** Disable HMAC-SHA256 authentication
- **1:** Auto-select mode - accept any challenge size from 8 to 32 bytes (Default)
- **8-32:** Fixed challenge size - only accept challenges of exactly this size

See **HMAC-SHA2 Challenge Size** parameter documentation for detailed configuration information.

### Reference Standards

- SHA-256 preprocessing is described in the *SHA-1 Preprocessing* section in [FIPS 180-4](#).
- The hash computation is described in the *SHA-1 Hash Computation* section in [FIPS 180-4](#).
- The HMAC implementation is described in [FIPS 198-1](#).

Detailed information about the SHA-256 algorithm can be found here:

- <http://www.nist.gov/itl/>
- <http://csrc.nist.gov/publications/fips>
- [www.faqs.org/rfcs/rfc3174.html](http://www.faqs.org/rfcs/rfc3174.html)

### Authentication Status

The authentication status can be monitored using the **[AUTH]** bit (Bit 18) in *OperationStatus()*:

- **[AUTH] = 1:** Authentication is in progress. This bit is set when the gauge receives a valid authentication challenge and begins computing the HMAC-SHA256 response.
- **[AUTH] = 0:** Authentication is inactive. This bit clears when the HMAC computation completes and the response is ready to be read from *MACData()*.

The host should wait for **[AUTH]** to clear (or wait approximately 200 ms) after sending the challenge before reading the response.

#### 14.2.1 Authentication Flow

The authentication procedure is described in the following steps:

1. The host writes 0x00 to 0x3E.
2. The host writes 0x00 to 0x3F.
3. Write the random challenge as a 32-byte block to address 0x40–0x5F. The challenge should be a 256-bit (32-byte) random number generated from a cryptographically secure source on the host processor.
4. Write the checksum (1's complement sum of (1), (2), and (3)) to address 0x60.
5. Write the length 0x24 to address 0x61.
6. The gauge will compute the HMAC using SHA-256 after step (5). The **[AUTH]** bit in *OperationStatusB()* is set to 1 during computation. Wait 200 ms. (60 ms is how long authentication takes, but extra margin is added).
7. The *MACData()* command will contain the computed HMAC result using SHA-256. The response format depends on *Settings:Configuration:Auth Config[SPLIT\_RESPONSE]*:
  - **[SPLIT\_RESPONSE] = 0:** Single 60-byte response containing command echo (2 bytes) + HMAC (32 bytes) + challenge echo (26 bytes).
  - **[SPLIT\_RESPONSE] = 1:** Response split into two 30-byte fields. Host must read twice to get complete response.
8. **[AUTH] = 0** in *OperationStatusB()* when computation completes and response is ready.

## Authentication Timing

The following timing details apply to the authentication process:

- **Recommended Wait Time:** 200 ms to ensure reliable operation across all conditions.
- **Polling Method:** Alternatively, poll *OperationStatusB()[AUTH]* until it clears (0) to detect completion.

## Host Verification

To verify authentication:

1. The host computes HMAC-SHA256 using the same 32-byte challenge and the shared 256-bit secret key.
2. The host reads the HMAC response from *MACData()*.
3. The host compares its computed HMAC with the gauge's response.
4. If the HMACs match, the battery pack is authenticated as genuine.

## 14.3 Security Modes

As shipped, the device is in FULL ACCESS mode. For device security after manufacture, the device should be set to the SEALED access operational mode. To do this, send the MAC seal 0x0030 to the gauge. After the device is set to the SEALED mode, any device resets will cause the device to enter the SEALED mode. See the following sections for instructions on how to return to the other access modes.

For security mode access keys, the device ships with factory defaults. The manufacturer should change the keys to their proprietary keys using the MAC 0x0035. See *AltManufacturerAccess() 0x0035 Security Keys*.

### 14.3.1 SEALING and UNSEALING Data Flash

The gas gauge has a key access scheme to transition between SEALED, UNSEALED, and FULL ACCESS modes. Each transition requires that a unique set of two keys be sent to the gas gauge via the *AltManufacturerAccess()* command. The keys must be sent consecutively, with no other data being written to the *AltManufacturerAccess()* register. The *Seal Device* command instructs the device to limit access to the registers, functions, and data flash space, and sets the *[SEC1][SEC0]* flags. In SEALED mode, standard register information is accessible. Extended MAC Command functions and data flash are not accessible. Once in SEALED mode, the device can never permanently return to UNSEALED or FULL ACCESS modes. *AltManufacturerAccess() 0x0054 OperationStatus*, the *OperationStatusB()* register, shows the status of the device using the *[SEC1][SEC0]* bits.

### 14.3.2 SEALED to UNSEALED

SEALED to UNSEALED instructs the device to extend access to the standard and extended registers and data flash space and clears the *[SEC1][SEC0]* flags. In UNSEALED mode, all data, standard and extended registers and DF have read/write access. Unsealing is a two-step command performed by writing the first word of the unseal key to *AltManufacturerAccess()* (MAC), followed by the second word of the unseal key to *AltManufacturerAccess()*. The unseal key can be read and changed via the *MAC SecurityKey()* command when in FULL ACCESS mode. To return to the SEALED mode, either a hardware reset is needed, or the *MAC Seal Device()* command is needed to transit from FULL ACCESS or UNSEALED to SEALED.

### 14.3.3 UNSEALED to FULL ACCESS

UNSEALED to FULL ACCESS instructs the device to allow full access to all standard and extended registers and data flash. The device is shipped from TI in this mode. The keys for UNSEALED to FULL ACCESS can be read and changed via the MAC command *SecurityKey()* when in FULL ACCESS mode. Changing from UNSEALED to FULL ACCESS is performed by using the *AltManufacturerAccess()* command, by writing the first word of the Full Access Key to *AltManufacturerAccess()*, followed by the second word of the Full Access Key to *AltManufacturerAccess()*. In FULL ACCESS mode, the command to go to boot ROM can be sent.

## 15 ECC

### 15.1 Introduction

#### Elliptic Curve Cryptography (ECC) Authentication

Elliptic Curve Cryptography (ECC) is an authentication scheme that leverages the mathematical properties of elliptic curves to generate an asymmetrical private and public key pair. Texas Instruments' BQ27Z855 battery fuel gauge supports ECDSA P-256 gauge authentication for anti-counterfeit protection of battery packs.

#### Gauge Authentication (ECDSA P-256)

The authentication method implements **ECDSA (Elliptic Curve Digital Signature Algorithm) with the P-256 curve** (also known as secp256r1 or prime256v1), utilizing SHA-256 hashing. This authentication scheme provides robust anti-counterfeit protection for battery packs.

#### Key Specifications:

- **Algorithm:** ECDSA with P-256 curve
- **Private Key Size:** 32 bytes
- **Public Key Size:** 33 bytes compressed (first byte is standard point compression prefix 02 or 03, followed by 32-byte X coordinate, MSB-first)
- **Signature Size:** 64 bytes (R 32 bytes || S 32 bytes), MSB-first
- **Hash:** SHA-256 of the challenge input
- **Interface:** I2C BlockData protocol via MAC commands (BlockDataCmd 0x3E, BlockData 0x40, checksum 0x60, length 0x61)

---

#### Note

TI's gauge authentication utilizes a third-party software component, specifically micro-ecc (<https://github.com/kmackay/micro-ecc>, License: BSD 2-Clause), which has been suitably modified for this application.

---

### 15.2 Gauge Authentication

The host can authenticate the gauge using the following steps:

1. Host reads MAC subcommand 0x0036 (GaugeAuthPublicKey) to receive the public key, and verifies it matches the expected public key.

---

#### Note

**Note on public key readback:** The I2C MAC read interface supports a maximum of 32 bytes per transaction. The P-256 public key is 33 bytes and cannot be read back in full over I2C using standard MAC read commands. Contact TI for the default production public key.

---

2. Host generates a random challenge of at least 8 bytes (device supports 8–32 bytes), and sends the challenge to the gauge using the I2C BlockData write sequence:

1. Write MAC cmd 0x0000 to BlockDataCmd register 0x3E.
2. Write challenge bytes (8–32 bytes) to BlockData register 0x40.
3. Write the checksum byte to register 0x60, and the length byte to register 0x61 in a single I2C write transaction.
  - Length formula:  $\text{cmd}(2) + \text{data}(N) + \text{checksum}(1) + \text{length}(1)$
  - Example for a 16-byte challenge:  $2 + 16 + 1 + 1 = 20$  (0x14)
  - Checksum = bitwise NOT of the sum of all challenge bytes plus both command bytes (cmd LSB + cmd MSB)

**Note**

**Important:** The firmware silently discards the write if the checksum or length byte is incorrect — no error is returned and the ECC engine does not fire. Verify the length byte accounts for all four components.

3. Host waits a recommended 100 ms delay, while the gauge signs the challenge and prepares the R and S signature values.
4. Host reads the authentication response from the gauge using one of the following I2C methods:
  - **Combined 64-byte read:** Write cmd 0x0000 to BlockDataCmd (0x3E), wait  $\geq 10$  ms, read 64 bytes from BlockData (0x40). Bytes 0–31 = R, bytes 32–63 = S.
  - **Separate R and S reads (recommended):** Write cmd 0x003C to BlockDataCmd (0x3E), read 32 bytes from 0x40 for R. Then write cmd 0x003D to 0x3E, read 32 bytes from 0x40 for S. This method works regardless of the Split Response configuration bit.
5. Host verifies the R and S values form a valid ECDSA P-256 signature for the challenge using the gauge's public key. The gauge signs the **SHA-256 hash** of the challenge bytes (not the raw challenge). R and S are each 32 bytes, MSB-first.

**Authentication Response Format**

The gauge returns a 64-byte authentication response (32 bytes R + 32 bytes S), MSB-first. The response format depends on the **Split Response** configuration bit in the Authentication Configuration register:

- **Split Response Disabled (default):** Write cmd 0x0000 to BlockDataCmd (0x3E). Read 64 bytes from BlockData (0x40), returning all 64 bytes (32 bytes R followed by 32 bytes S) in one transaction.
- **Split Response Enabled:** Two separate reads are required:
  - First read: write 0x0000 to BlockDataCmd (0x3E), read 32 bytes from BlockData (0x40) — (R value)
  - Second read: write 0x0000 to BlockDataCmd (0x3E) again, read 32 bytes from BlockData (0x40) — (S value)

**Note**

If the combined 64-byte read returns incomplete data, verify that the Split Response bit is disabled. When Split Response is enabled, the device returns data in two sequential 32-byte reads from BlockData (0x40). Alternatively, use MAC 0x003C (ECC\_R) and MAC 0x003D (ECC\_S) which each return exactly 32 bytes and are unaffected by the Split Response setting.

**15.3 ECC MAC Commands Description****Table 15-1. Summary of I2C MAC Commands Used**

| Type | ID     | Function                                                                                                                                                                                                                                                                                                                                                                                                                                              | Mode | Access |
|------|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|--------|
| MAC  | 0x0036 | GaugeAuthPublicKey()<br>Read returns the gauge authentication public key. 33 bytes with the first byte containing the standard point compression prefix (02 or 03). All bytes are MSB-first.<br><b>Note:</b> The I2C MAC read interface supports a maximum of 32 bytes per transaction. The P-256 public key is 33 bytes and cannot be read back in full over I2C using standard MAC read commands. Contact TI for the default production public key. | Read | S/U/FA |
| MAC  | 0x003c | ECC_R<br>Read returns the most recent gauge authentication result <i>r</i> value (32 bytes, MSB-first). Write cmd 0x003C to BlockDataCmd (0x3E), read 32 bytes from BlockData (0x40).                                                                                                                                                                                                                                                                 | Read | S/U/FA |


**Table 15-1. Summary of I2C MAC Commands Used (continued)**

| Type | ID     | Function                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | Mode       | Access |
|------|--------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|--------|
| MAC  | 0x003d | ECC_S<br>Read returns the most recent gauge authentication result s value (32 bytes, MSB-first). Write cmd 0x003D to BlockDataCmd (0x3E), read 32 bytes from BlockData (0x40).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | Read       | S/U/FA |
| MAC  | 0x0000 | <p>Authenticate (Challenge / Response)<br/>I2C sequence to send a challenge to the gauge and trigger ECDSA P-256 signing:</p> <ol style="list-style-type: none"> <li>1. Write 0x0000 to BlockDataCmd (0x3E) — selects MAC AUTHENTICATE.</li> <li>2. Write challenge bytes (8–32 bytes) to BlockData (0x40).</li> <li>3. Write checksum byte to 0x60 and length byte to 0x61 in one I2C transaction. Length formula: <math>\text{cmd}(2) + \text{data}(N) + \text{checksum}(1) + \text{length}(1)</math>.<br/>Example for 16-byte challenge:<br/><math>2 + 16 + 1 + 1 = 20</math> (0x14).</li> <li>4. Wait <math>\geq 100</math> ms for gauge to sign the challenge.</li> <li>5. Read combined 64-byte R+S: write 0x0000 to BlockDataCmd (0x3E), read 64 bytes from BlockData (0x40). Alternatively, read R and S separately using MAC 0x003C (ECC_R) and MAC 0x003D (ECC_S), 32 bytes each.</li> </ol> <hr/> <p style="text-align: center;"><b>Note</b></p> <p><b>Important:</b> If the checksum or length byte is incorrect, firmware silently discards the write and the ECC engine does not fire. No error is returned. Verify length byte includes all four components (cmd + data + checksum + length).</p> | Read/Write | S/U/FA |

## 16 Advanced Charge Algorithm

### 16.1 Introduction

The device can change the values of *ChargingVoltage()* and *ChargingCurrent()* based on *Temperature()* and cell voltage1..4 . Its flexible charging algorithm is JEITA compatible and can also meet other specific cell manufacturer charge requirements. The *ChargingStatus()* register shows the state of the charging algorithm.

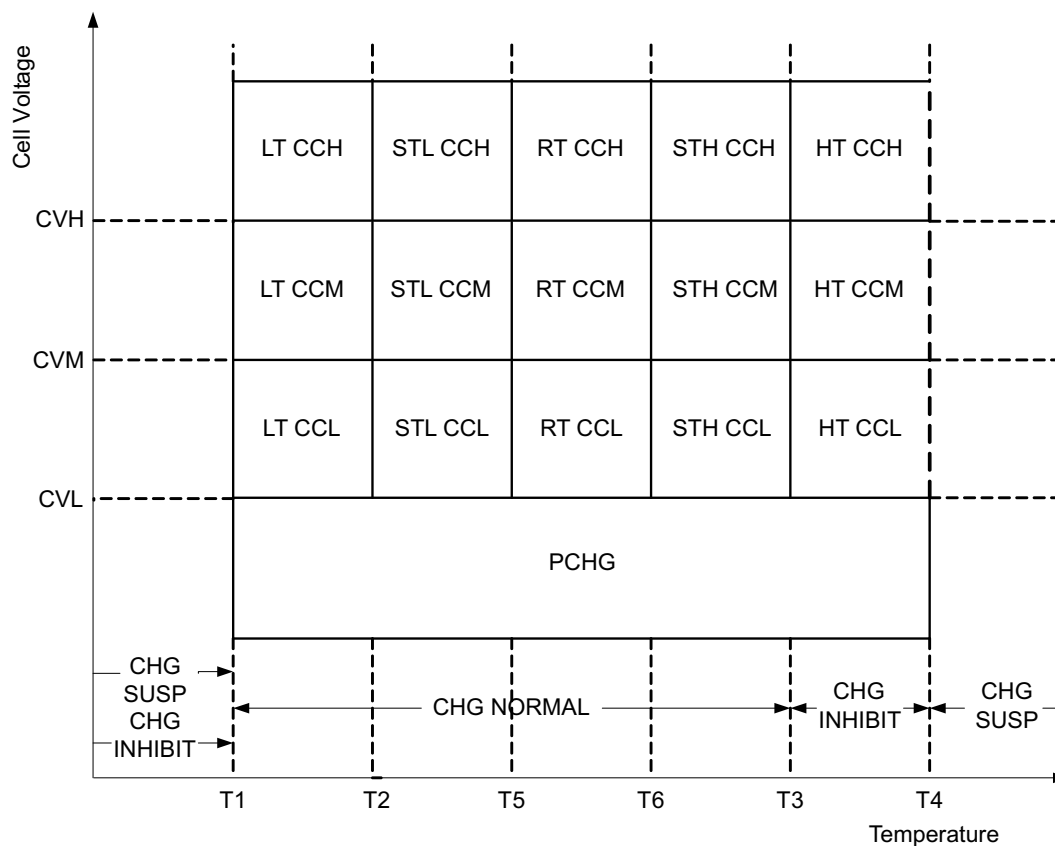

The Charging Current and Charging Voltage used for different purposes flow the priority sequence in [Charging Current and Charging Voltage Priority Sequence](#).


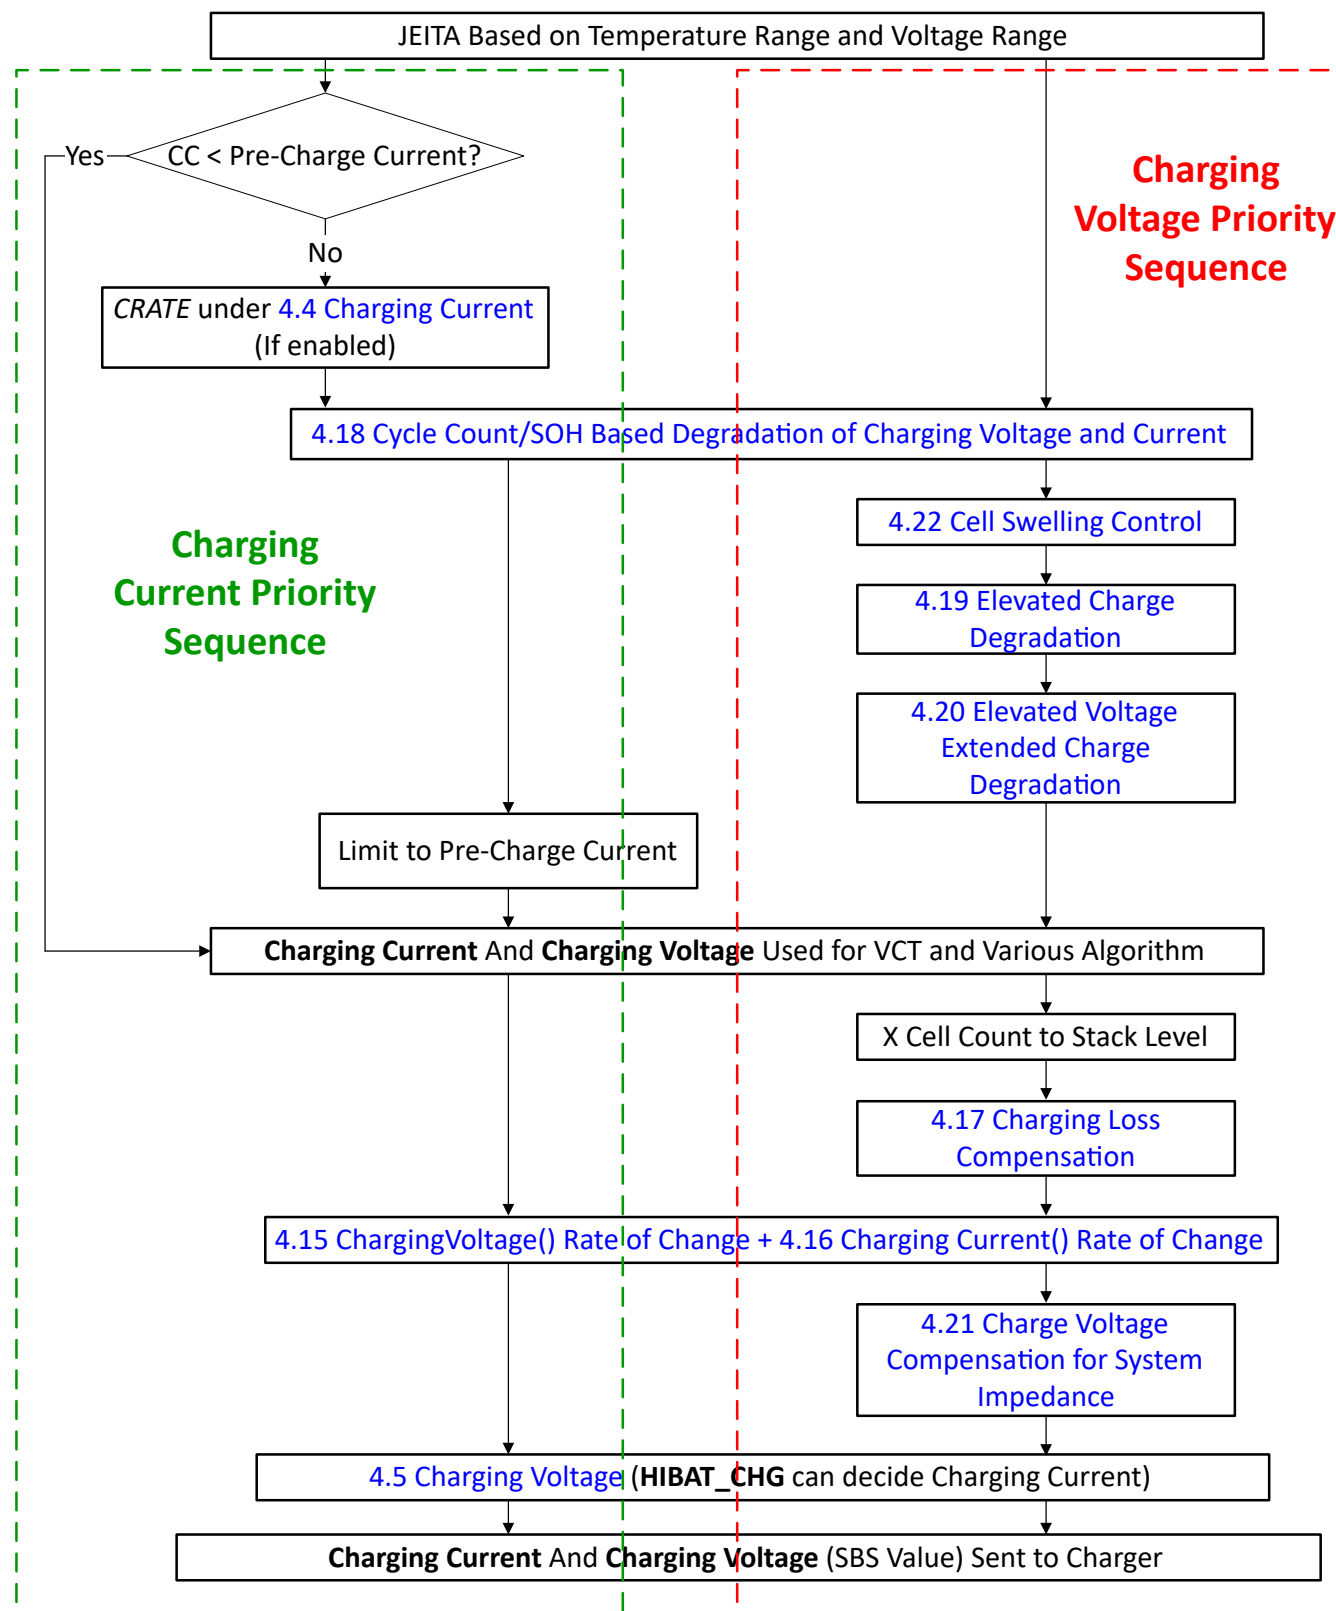


Figure 16-1. Charging Current and Charging Voltage Priority Sequence

## 16.2 Charge Temperature Ranges

The measured temperature is segmented into several temperature ranges. The charging algorithm adjusts *ChargingCurrent()* and *ChargingVoltage()* according to the temperature range. The temperature ranges set in data flash should adhere to the following format:

$$T1 \leq T2 \leq T5 \leq T6 \leq T3 \leq T4$$

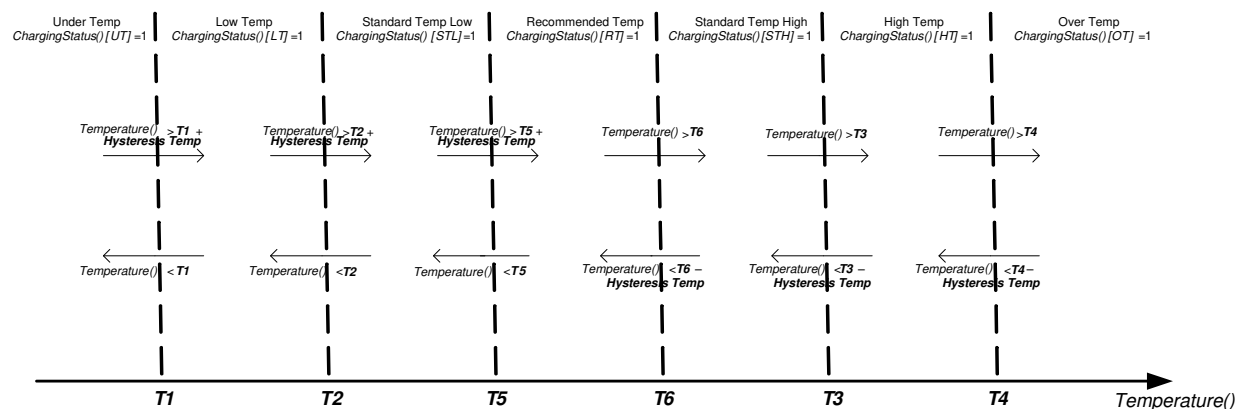


## 16.3 Voltage Range

The measured cell voltage is segmented into several voltage ranges. The charging algorithm adjusts *ChargingCurrent()* according to the temperature and voltage range. The voltage ranges set in data flash need to adhere to the following format:

$$\text{Charging Voltage Low} \leq \text{Charging Voltage Med} \leq \text{Charging Voltage High} \leq \times \text{Temp Charging:Voltage}$$

where  $\times$  is standard or recommended. Depending on the specific charging profile, the **Low Temp Charging:Voltage** and **High Temp Charging:Voltage** settings do not necessarily have the highest setting values. . Cell Voltage below is used when **Settings:Charging Configuration Ext[CELL\_VAL1][CELL\_VAL0]** is set to 0, 0.

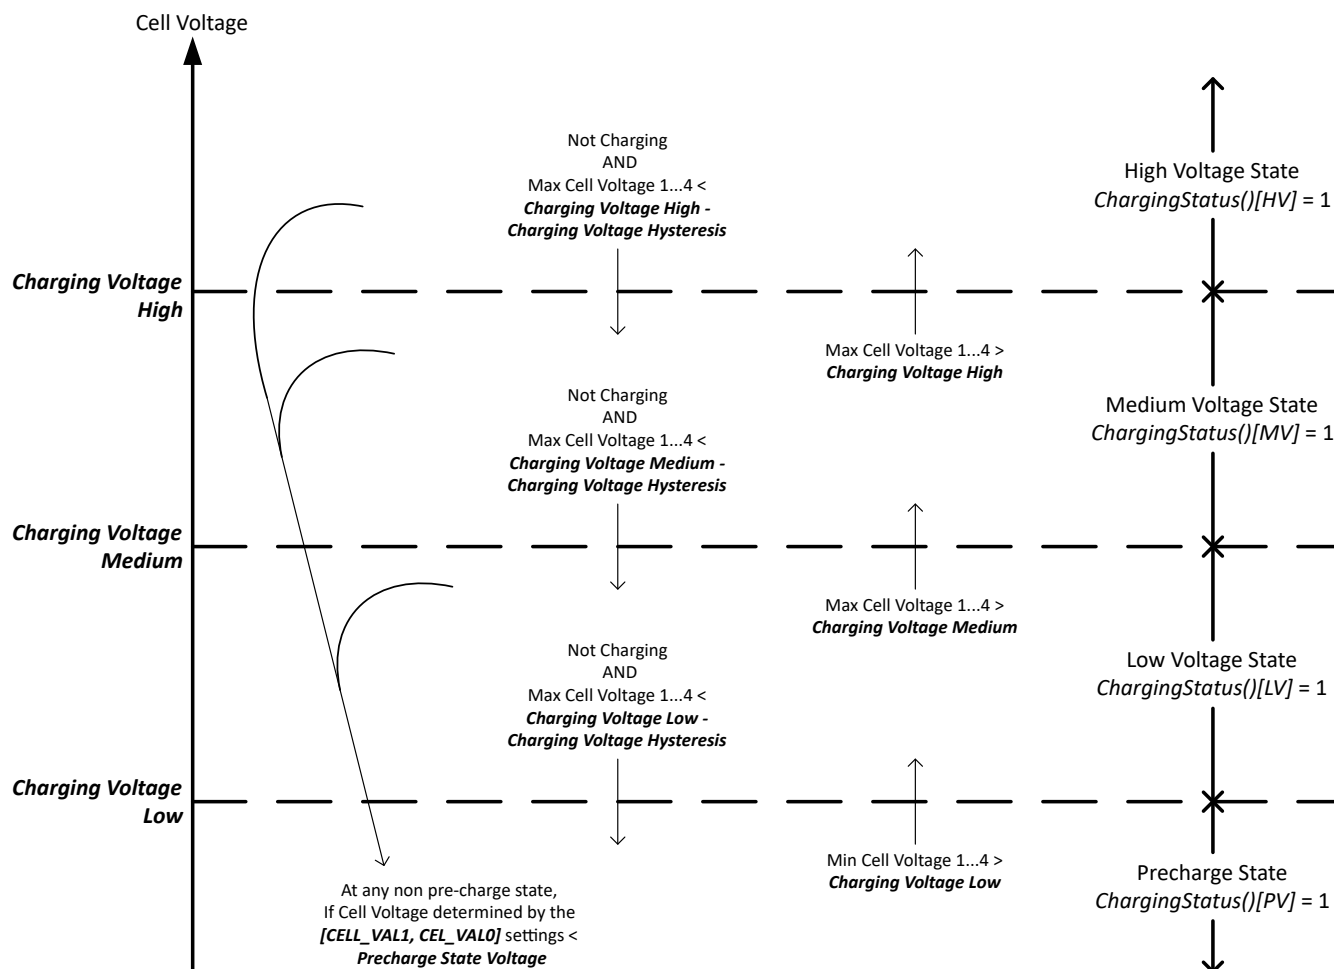

**Figure 16-2. Cell Voltage Based Charging State Profile**

### 16.3.1 Voltage or RelativeStateofCharge() Range

If **[V\_SOC\_CHARGE]** in **Charging Configuration** is set to '1', then a combination of the cell voltage level range and the device RSOC percentage range are considered to determine the state of charging.

The cell voltage range is categorized the same way as defined in Voltage Range:

- CHV: Cell voltage in High Voltage State
- CMV: Cell voltage in Medium Voltage State
- CLV: Cell voltage in Low Voltage State

The V-RSOC range and the state of the charge is determined by the formulas shown in the table below.

**Table 16-1. Voltage level and RSOC range based Charging State Transition**

| Current Cell Voltage Range | RSOC Range                                                      | [DSG] | Charging State                                          |
|----------------------------|-----------------------------------------------------------------|-------|---------------------------------------------------------|
| CHV                        | Any RSOC range                                                  | 0     | High Voltage State<br><i>ChargingStatus()[HV] = 1</i>   |
| CHV                        | $\geq \text{Charging SOC Mid} - \text{Charging SOC Hysteresis}$ | 1     | High Voltage State<br><i>ChargingStatus()[HV] = 1</i>   |
| CHV                        | $< \text{Charging SOC Mid} - \text{Charging SOC Hysteresis}$    | 1     | Medium Voltage State<br><i>ChargingStatus()[MV] = 1</i> |
| CMV                        | $\geq \text{Charging SOC High}$                                 | 0     | High Voltage State<br><i>ChargingStatus()[HV] = 1</i>   |
| CMV                        | $< \text{Charging SOC High}$                                    | 0     | Medium Voltage State<br><i>ChargingStatus()[MV] = 1</i> |

**Table 16-1. Voltage level and RSOC range based Charging State Transition (continued)**

| Current Cell Voltage Range | RSOC Range                                                      | [DSG] | Charging State                                          |
|----------------------------|-----------------------------------------------------------------|-------|---------------------------------------------------------|
| CMV                        | any RSOC range                                                  | 1     | Medium Voltage State<br><i>ChargingStatus()[MV] = 1</i> |
| CLV                        | $\geq$ <b>Charging SOC High</b>                                 | 0     | High Voltage State<br><i>ChargingStatus()[HV] = 1</i>   |
| CLV                        | $<$ <b>Charging SOC High</b> and $\geq$ <b>Charging SOC Mid</b> | 0     | Medium Voltage State<br><i>ChargingStatus()[MV] = 1</i> |
| CLV                        | $<$ <b>Charging SOC Mid</b>                                     | 0     | Low Voltage State<br><i>ChargingStatus()[LV] = 1</i>    |
| CLV                        | $\geq$ <b>Charging SOC High – Charging SOC Hysteresis</b>       | 1     | Medium Voltage State<br><i>ChargingStatus()[MV] = 1</i> |
| CLV                        | $<$ <b>Charging SOC High – Charging SOC Hysteresis</b>          | 1     | Low Voltage State<br><i>ChargingStatus()[LV] = 1</i>    |

The charging state matrix broken down by cell voltages and the RSOC ranges defined below:

#### Note

**[DSG]** refers to the DSG bit in *BatteryStatus()*. This bit indicates the discharge direction: [DSG] = 1 when the battery is discharging (negative current), [DSG] = 0 when charging or at rest with positive current direction.

When [DSG] = 0 (Charging/Rest):

- RSOC\_High: *RelativeStateOfCharge()*  $\geq$  **Charging SOC High**
- RSOC\_Mid: **Charging SOC High**  $>$  *RelativeStateOfCharge()*  $\geq$  **Charging SOC Mid**
- RSOC\_Low: **Charging SOC Mid**  $>$  *RelativeStateOfCharge()*

When [DSG] = 1 (Discharging):

- RSOC\_High: *RelativeStateOfCharge()*  $\geq$  **Charging SOC High – Charging SOC Hysteresis**
- RSOC\_Mid: **Charging SOC High – Charging SOC Hysteresis**  $>$  *RelativeStateOfCharge()*  $\geq$  **Charging SOC Mid – Charging SOC Hysteresis**
- RSOC\_Low: **Charging SOC Mid – Charging SOC Hysteresis**  $>$  *RelativeStateOfCharge()*

**Table 16-2. Voltage Level and RSOC Range Based Charging State Matrix**

|     | [DSG] = 0 |          |          | [DSG] = 1 |          |          |
|-----|-----------|----------|----------|-----------|----------|----------|
|     | RSOC_High | RSOC_Mid | RSOC_Low | RSOC_High | RSOC_Mid | RSOC_Low |
| CHV | [HV]      | [HV]     | [HV]     | [HV]      | [HV]     | [MV]     |
| CMV | [HV]      | [MV]     | [MV]     | [MV]      | [MV]     | [MV]     |
| CLV | [HV]      | [MV]     | [LV]     | [MV]      | [LV]     | [LV]     |

## 16.4 Charging Current

The *ChargingCurrent()* value changes depending on the detected temperature and voltage per the charging algorithm.

In order to prevent the charging degradation algorithms from reducing and causing the *ChargingCurrent()* to fall below **Pre-Charging:Current**, following conditions are applied to determine the *ChargingCurrent()*:

- If the JEITA current for the present operating conditions is  $\geq$  **Pre-Charging:Current**, then *ChargingCurrent()* will be limited by **Pre-Charging:Current** in the event *ChargingCurrent()* degradation would cause it to fall below **Pre-Charging:Current**.
- If the JEITA current for the present operating conditions is  $<$  **Pre-Charging:Current**, then *ChargingCurrent()* will be set to the exact JEITA value, regardless of degradation.

The **Charging Configuration[CRATE]** flag provides an option to adjust the *ChargingCurrent()* based on **StateofHealth()**.

For example, with **[CRATE]** = 1, if **StateofHealth()** = 90% and **Rec Temp Charging: Current Med** is active per the charging algorithm, then **ChargingCurrent()** = **Rec Temp Charging: Current Med** × 90%.

### Note

Table priority is top to bottom.

| Temp Range | Voltage Range | Condition                           | Action                                                                     |
|------------|---------------|-------------------------------------|----------------------------------------------------------------------------|
| Any        | Any           | <i>OperationStatus()</i> [XCHG] = 1 | <i>ChargingCurrent()</i> = 0                                               |
| UT or OT   | Any           | —                                   | <i>ChargingCurrent()</i> = 0                                               |
| Any        | PV            | —                                   | <i>ChargingCurrent()</i> = <b>Pre-Charging:Current</b>                     |
| Any        | LV, MV, or HV | <i>ChargingStatus()</i> [MCHG] = 1  | <i>ChargingCurrent()</i> = <b>Maintenance Charging:Current</b>             |
| LT         | LV            | —                                   | <i>ChargingCurrent()</i> = <b>Low Temp Charging:Current Low</b>            |
|            | MV            | —                                   | <i>ChargingCurrent()</i> = <b>Low Temp Charging:Current Med</b>            |
|            | HV            | —                                   | <i>ChargingCurrent()</i> = <b>Low Temp Charging:Current High</b>           |
| STL        | LV            | —                                   | <i>ChargingCurrent()</i> = <b>Standard Temp Low Charging:Current Low</b>   |
|            | MV            | —                                   | <i>ChargingCurrent()</i> = <b>Standard Temp Low Charging:Current Med</b>   |
|            | HV            | —                                   | <i>ChargingCurrent()</i> = <b>Standard Temp Low Charging:Current High</b>  |
| STH        | LV            | —                                   | <i>ChargingCurrent()</i> = <b>Standard Temp High Charging:Current Low</b>  |
|            | MV            | —                                   | <i>ChargingCurrent()</i> = <b>Standard Temp High Charging:Current Med</b>  |
|            | HV            | —                                   | <i>ChargingCurrent()</i> = <b>Standard Temp High Charging:Current High</b> |
| RT         | LV            | —                                   | <i>ChargingCurrent()</i> = <b>Rec Temp Charging:Current Low</b>            |
|            | MV            | —                                   | <i>ChargingCurrent()</i> = <b>Rec Temp Charging:Current Med</b>            |
|            | HV            | —                                   | <i>ChargingCurrent()</i> = <b>Rec Temp Charging:Current High</b>           |
| HT         | LV            | —                                   | <i>ChargingCurrent()</i> = <b>High Temp Charging:Current Low</b>           |
|            | MV            | —                                   | <i>ChargingCurrent()</i> = <b>High Temp Charging:Current Med</b>           |
|            | HV            | —                                   | <i>ChargingCurrent()</i> = <b>High Temp Charging:Current High</b>          |

## 16.5 Charging Voltage

**ChargingVoltage()** is dependent on cell temperature per the charge algorithm. If cell temperature reduces **ChargingVoltage()** below the stack voltage, it can be held unchanged while **ChargingCurrent()** is held at 0 by setting **[HIBAT\_CHG]**. This action continues until the desired **ChargingVoltage()** is above the stack voltage.

### Note

Table priority is top to bottom.

| Temp Range | Condition                           | Action                       |
|------------|-------------------------------------|------------------------------|
| Any        | <i>OperationStatus()</i> [XCHG] = 1 | <i>ChargingVoltage()</i> = 0 |
| UT or OT   | —                                   | <i>ChargingVoltage()</i> = 0 |

| Temp Range | Condition | Action                                                                                  |
|------------|-----------|-----------------------------------------------------------------------------------------|
| LT         | —         | $\text{ChargingVoltage}() = \text{Low Temp Charging:Voltage} \times \text{Cell Count}$  |
| STL        | —         | $\text{ChargingVoltage}() = \text{STL:Voltage} \times \text{Cell Count}$                |
| STH        | —         | $\text{ChargingVoltage}() = \text{STH:Voltage} \times \text{Cell Count}$                |
| RT         | —         | $\text{ChargingVoltage}() = \text{Rec Temp Charging:Voltage} \times \text{Cell Count}$  |
| HT         | —         | $\text{ChargingVoltage}() = \text{High Temp Charging:Voltage} \times \text{Cell Count}$ |

## 16.6 Valid Charge Termination

The charge termination condition must be met to enable valid charge termination. The device has the following actions at charge termination, based on the flags settings:

- If **IT Gauging Configuration[CSYNC]** = 1,  $\text{RemainingCapacity}() = \text{FullChargeCapacity}()$ .
- If **SBS Gauging Configuration[RSOCL]** = 1,  $\text{RelativeStateOfCharge}()$  and  $\text{RemainingCapacity}()$  are held at 99% until charge termination occurs. Only on entering charge termination is 100% displayed.
- If **SBS Gauging Configuration[RSOCL]** = 0,  $\text{RelativeStateOfCharge}()$  and  $\text{RemainingCapacity}()$  are not held at 99% until charge termination occurs. Fractions of % greater than 99% are rounded up to display 100%.

| Status                   | Condition                                                                                                                                                                                                                                                                                                                                                                                          | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Charging                 | $\text{GaugingStatus}()[\text{DSG}] = 0$                                                                                                                                                                                                                                                                                                                                                           | Charge Algorithm active                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Valid Charge Termination | All of the following conditions must occur for two consecutive 40-s periods:<br>Charging (that is, $\text{BatteryStatus}[\text{DSG}] = 0$ )<br>AND<br>$\text{AverageCurrent}() < \text{Charge Term Taper Current}$ AND<br>cell voltage + <b>Charge Term Voltage Offset</b> $\geq \text{ChargingVoltage}()$ AND $[\text{TAPER\_VOLT}] = 0$<br>AND<br>The accumulated change in capacity > 0.25 mAh. | $\text{ChargingStatus}()[\text{VCT}] = 1$<br>$\text{ChargingStatus}()[\text{MCHG}] = 1$<br>$\text{ChargingVoltage}() = \text{Charging Algorithm}$<br>$\text{ChargingCurrent}() = \text{Charging Algorithm}$<br>$\text{BatteryStatus}()[\text{FC}] = 1$ and $\text{GaugingStatus}()[\text{FC}] = 1$ if <b>SOCFlagConfig A[FCSETVCT]</b> = 1<br>$\text{BatteryStatus}()[\text{TCA}] = 1$ and $\text{GaugingStatus}()[\text{TC}] = 1$ if <b>SOCFlagConfig A[TCSETVCT]</b> = 1 |

### Note

Setting  $[\text{TAPER\_VOLT}] = 1$  causes **Charge Term Charging Voltage** to be used in place of  $\text{ChargingVoltage}()$  for a valid charge termination condition.

## 16.7 Charge and Discharge Termination Flags

The  $[\text{TC}]$  and  $[\text{FC}]$  bits in  $\text{GaugingStatus}()$  can be set at charge termination, as well as based on RSOC or cell voltages. If multiple set and clear conditions are selected, then the corresponding flag will be set whenever a valid set or clear condition is met. If both set and clear conditions are true at the same time, the flag will clear. The same functionality is applied to the  $[\text{TD}]$  and  $[\text{FD}]$  bits in  $\text{GaugingStatus}()$ .

### Note

$\text{GaugingStatus}()[\text{TC}][\text{TD}][\text{FC}][\text{FD}]$  are the status flags based on the gauging conditions only. These flags are set and cleared based on **SOC Flag Config A** and **SOC Flag Config B**. If both RSOC-based and cell voltage-based conditions are enabled, RSOC-based condition takes priority.

The  $\text{BatteryStatus}()[\text{TCA}][\text{FC}][\text{TDA}][\text{FD}]$  flags will be set and cleared according to the  $\text{GaugingStatus}()[\text{TC}][\text{FC}][\text{TD}][\text{FD}]$  flags, as well as the safety and permanent failure protections status. For more information, see [Section 16.8](#).

When  $\text{GaugingStatus}()[\text{TC}]$  is set AND **FET Options[CHGFET]** = 1, the CHG FET turns off.

The  $[\text{FC}]$  flag is identical between gauging status and battery status, but not  $[\text{TD}]$ . The tables below summarize the options to set and clear the  $[\text{TC}]$  and  $[\text{FC}]$  flags in  $\text{GaugingStatus}()$ .

| Flag | Set Criteria                                  | Set Condition                                                         | Enable                                  |
|------|-----------------------------------------------|-----------------------------------------------------------------------|-----------------------------------------|
| [TC] | cell voltage                                  | cell voltage $\geq$ <b>TC: Set Voltage Threshold</b>                  | <b>SOC Flag Config A[TCSetV] = 1</b>    |
|      | RSOC                                          | <i>RelativeStateOfCharge()</i> $\geq$ <b>TC: Set % RSOC Threshold</b> | <b>SOC Flag Config A[TCSetRSOC] = 1</b> |
|      | Valid Charge Termination (enabled by default) | When <i>ChargingStatus</i> [VCT] = 1                                  | <b>SOC Flag Config A[TCSetVCT] = 1</b>  |
| [FC] | cell voltage                                  | cell voltage $\geq$ <b>FC: Set Voltage Threshold</b>                  | <b>SOC Flag Config B[FCSetV] = 1</b>    |
|      | RSOC                                          | <i>RelativeStateOfCharge()</i> $\geq$ <b>FC: Set % RSOC Threshold</b> | <b>SOC Flag Config B[FCSetRSOC] = 1</b> |
|      | Valid Charge Termination (enabled by default) | When <i>ChargingStatus</i> [VCT] = 1                                  | <b>SOC Flag Config A[FCSetVCT] = 1</b>  |

| Flag | Clear Criteria            | Clear Condition                                                         | Enable                                    |
|------|---------------------------|-------------------------------------------------------------------------|-------------------------------------------|
| [TC] | cell voltage              | cell voltage $\leq$ <b>TC: Clear Voltage Threshold</b>                  | <b>SOC Flag Config A[TCClearV] = 1</b>    |
|      | RSOC (enabled by default) | <i>RelativeStateOfCharge()</i> $\leq$ <b>TC: Clear % RSOC Threshold</b> | <b>SOC Flag Config A[TCClearRSOC] = 1</b> |
| [FC] | cell voltage              | cell voltage $\leq$ <b>FC: Clear Voltage Threshold</b>                  | <b>SOC Flag Config B[FCClearV] = 1</b>    |
|      | RSOC (enabled by default) | <i>RelativeStateOfCharge()</i> $\leq$ <b>FC: Clear % RSOC Threshold</b> | <b>SOC Flag Config B[FCClearRSOC] = 1</b> |

[TD] and [FD] both have extra conditions. If gauging status [FD] is set, then battery status is always set, but clearing also depends on some safety conditions (CUV, SUV, and so on).

The tables below summarize the various options to set and clear the [TD] and [FD] flags in *GaugingStatus()*.

| Flag | Set Criteria              | Set Condition                                                         | Enable                                  |
|------|---------------------------|-----------------------------------------------------------------------|-----------------------------------------|
| [TD] | cell voltage              | cell voltage $\leq$ <b>TD: Set Voltage Threshold</b>                  | <b>SOC Flag Config A[TDSetV] = 1</b>    |
|      | RSOC (enabled by default) | <i>RelativeStateOfCharge()</i> $\leq$ <b>TD: Set % RSOC Threshold</b> | <b>SOC Flag Config A[TDSetRSOC] = 1</b> |
| [FD] | cell voltage              | cell voltage $\leq$ <b>FD: Set Voltage Threshold</b>                  | <b>SOC Flag Config B[FDSetV] = 1</b>    |
|      | RSOC (enabled by default) | <i>RelativeStateOfCharge()</i> $\leq$ <b>FD: Set % RSOC Threshold</b> | <b>SOC Flag Config B[FDSetRSOC] = 1</b> |

| Flag | Clear Criteria            | Clear Condition                                                         | Enable                                    |
|------|---------------------------|-------------------------------------------------------------------------|-------------------------------------------|
| [TD] | cell voltage              | cell voltage $\geq$ <b>TD: Clear Voltage Threshold</b>                  | <b>SOC Flag Config A[TDClearV] = 1</b>    |
|      | RSOC (enabled by default) | <i>RelativeStateOfCharge()</i> $\geq$ <b>TD: Clear % RSOC Threshold</b> | <b>SOC Flag Config A[TDClearRSOC] = 1</b> |
| [FD] | cell voltage              | cell voltage $\geq$ <b>FD: Clear Voltage Threshold</b>                  | <b>SOC Flag Config B[FDClearV] = 1</b>    |
|      | RSOC (enabled by default) | <i>RelativeStateOfCharge()</i> $\geq$ <b>FD: Clear % RSOC Threshold</b> | <b>SOC Flag Config B[FDClearRSOC] = 1</b> |

## 16.8 Terminate Charge and Discharge Alarms

When the protections and permanent fails are triggered, *BatteryStatus()*[TCA][TDA][FD][OCA][OTA][FC] will be set according to the type of safety protections. Here is a summary of the set conditions of the various alarms flags.

[TCA] = 1 if

- *SafetyAlert()*[OCC1], [OCC2], [COV], [OTC], [], [OTF], [CHGC], [CHGV], or [PCHGC] = 1 OR
- *PFAAlert()*[SOV] or [SOCC] = 1 OR
- Any *PFStatus()* = 1 OR
- *OperationStatus()*[PRES] = 0 OR
- *GaugingStatus()*[TC] = 1 AND in CHARGE mode

[FC] = 1

- if *GaugingStatus()*[FC] = 1

[OCA] = 1 if

- *SafetyStatus()*[OC] = 1 AND in CHARGE mode

[TDA] = 1 if

- *SafetyAlert()*[OCD1], [OCD2], [CUV], [CUVC], [OTD], [], or [OTF] = 1 OR
- *PFAAlert()*[SUV] or [SOCD] = 1 OR
- Any *PFStatus()* = 1 OR
- *OperationStatus()*[PRES] = 0
- *GaugingStatus()*[TD] = 1 AND in DISCHARGE mode

[FD] = 1 if

- *SafetyStatus()*[CUV] = 1 OR
- *PFStatus()*[SUV] = 1 OR
- *GaugingStatus()*[FD]

[OTA] = 1 if

- *SafetyStatus()*[OTC], [], [OTD], or [OTF] = 1 OR
- *PFStatus()*[SOT] or [SOTF] = 1

## 16.9 Zero Volt Charging (ZVCHG)

The device supports charging of a severely depleted battery, including batteries at or near 0 V. This feature is called Zero-Volt Charging (ZVCHG) or 0-V charging.

When the battery voltage (*Voltage()*) is below the internal **ZVCHG Exit Threshold**, and a valid charger is detected at the PACK+ terminal (**ZVCHG PACK Threshold**), the device provides an internal low-current charging path from the PACK pin to the BAT pin. This allows a controlled trickle current (IZVCHG) to flow into the battery even when the voltage is too low for normal FET operation. The maximum ZVCHG current and related electrical specifications are provided in the Zero-Volt Charging Specifications table in the device Datasheet (SLUSG59).

During ZVCHG operation:

- Both CHG and DSG FETs are disabled. *OperationStatus()*[XCHG] = 1 AND *OperationStatus()*[XD SG] = 1.
- The normal FET drivers are disabled.
- Charging current is limited by the external resistor between PACK+ and the PACK pin (if present) and by the device's internal IZVCHG(MAX) limit.

ZVCHG remains active until *Voltage()* rises above the programmed exit threshold ( **ZVCHG Exit Threshold** ). Once exited, the device performs normal protection and FET control evaluation before enabling the CHG and/or DSG FETs as appropriate.

The ZVCHG path is also active when the device is below its power-on reset (POR) threshold or in SHUTDOWN mode, provided a charger voltage is present at PACK+.

### Note

Some battery manufacturers do not recommend charging severely depleted cells. The device is intended to be used with at least one additional secondary protector that includes a ZVCHG inhibit function for safety. Refer to the battery manufacturer's recommendations and to the device Datasheet for detailed electrical characteristics, recommended external component values, and safety considerations related to zero-volt charging.

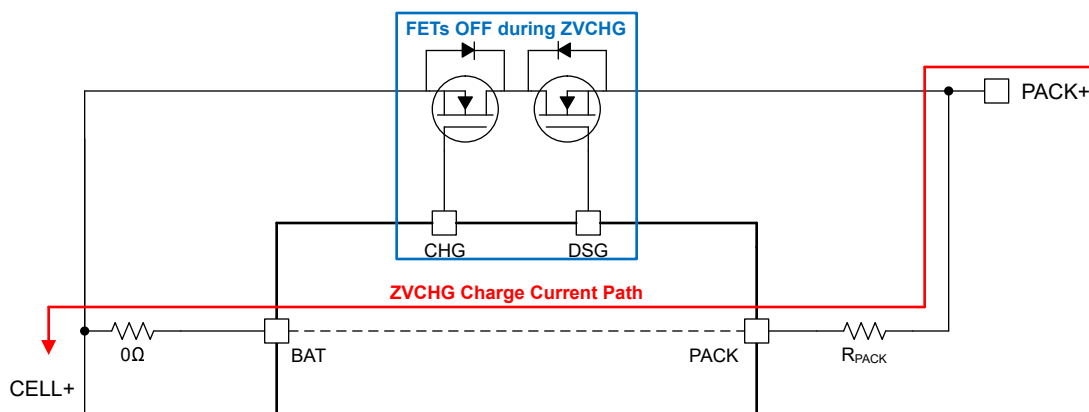


Figure 16-3. Zero-volt Charging Path

| Status   | Condition                                                                                           | Action                                                                                          |
|----------|-----------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
| Activate | $Voltage() < ZVCHG \text{ Exit Threshold}$ AND Pack Pin Voltage $\geq ZVCHG \text{ PACK Threshold}$ | $OperationStatus()[ZVCHG] = 1$<br>$OperationStatus()[CHG] = 0$<br>$OperationStatus()[XCHG] = 1$ |
| Exit     | $Voltage() \geq ZVCHG \text{ Exit Threshold}$ OR Pack Pin Voltage $< ZVCHG \text{ PACK Threshold}$  | $OperationStatus()[ZVCHG] = 0$<br>$OperationStatus()[CHG] = 1$<br>$OperationStatus()[XCHG] = 0$ |

| Class    | Subclass | Name                 | Type | Min | Max    | Default | Unit |
|----------|----------|----------------------|------|-----|--------|---------|------|
| Settings | AFE      | ZVCHG Exit Threshold | I2   | 0   | 32,767 | 3500    | mV   |
| Settings | AFE      | ZVCHG PACK Threshold | I2   | 0   | 32,767 | 1500    | mV   |

## 16.10 Precharge

The gauge enters PRECHARGE mode if,

1. Cell voltage  $< \text{Precharge Start Voltage}$  OR
2. Cell voltage  $< \text{Charging Voltage Low} - \text{Charging Voltage Hysteresis}$  and not in CHARGE mode

## 16.11 Maintenance Charge

Maintenance charge can be configured to provide charge current after charge termination is reached.

If overcharge protection is enabled, **Enabled Protections C[OC] = 1**, an extra margin may be needed for **OC:Threshold** to prevent triggering the OC protection by the maintenance charging.

| Status | Condition                                                                                                              | Action                                                                                                                             |
|--------|------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| Set    | $ChargingStatus()[IN] = 0$ AND $ChargingStatus()[SU] = 0$ AND $ChargingStatus()[PV] = 0$ AND $GaugingStatus()[TC] = 1$ | $ChargingStatus()[MCHG] = 1$<br>$ChargingVoltage() = \text{Charging Algorithm}$<br>$ChargingCurrent() = \text{Charging Algorithm}$ |
| Clear  | $ChargingStatus()[IN] = 1$ OR $ChargingStatus()[SU] = 1$ OR $ChargingStatus()[PV] = 1$ OR $GaugingStatus()[TC] = 0$    | $ChargingStatus()[MCHG] = 0$<br>$ChargingVoltage() = \text{Charging Algorithm}$<br>$ChargingCurrent() = \text{Charging Algorithm}$ |

## 16.12 Charge Disabled

The device disables charging by opening the charge FET when certain safety conditions are detected. In this case the FW will set  $OperationStatus()[XCHG] = 1$ .

| Status | Condition                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | Action                                                                                                                                |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| Normal | ALL <i>PFStatus()</i> = 0 AND <i>SafetyStatus()</i> [COV] = 0 AND<br><i>SafetyStatus()</i> [OCC1][OCC2] = 0,0 AND<br><i>SafetyStatus()</i> [AOCC] = 0 AND<br><i>SafetyStatus()</i> [AOCCCL] = 0 AND <i>SafetyStatus()</i> [CTO] = 0 AND<br><i>SafetyStatus()</i> [PTO] = 0 AND<br><i>OperationStatus()</i> [PRES] = 1 AND<br><i>GaugingStatus()</i> [TCA] = 0 if <b>FET Options</b> [CHGFET] = 1                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | <i>ChargingVoltage()</i> = Charging Algorithm<br><i>ChargingCurrent()</i> = Charging Algorithm<br><i>OperationStatus()</i> [XCHG] = 0 |
| Trip   | <i>ManufacturingStatus()</i> [FET_EN] = 0 OR<br>ANY <i>PFStatus()</i> = 1 OR<br><i>SafetyStatus()</i> [COV] = 1 OR<br><i>SafetyStatus()</i> [OCC1] = 1 OR<br><i>SafetyStatus()</i> [OCC2] = 1 OR<br><i>SafetyStatus()</i> [AOCC] = 1 OR<br><i>SafetyStatus()</i> [AOCCCL] = 1 OR<br><i>SafetyStatus()</i> [CTO] = 1 OR<br><i>SafetyStatus()</i> [PTO] = 1 OR<br><i>SafetyStatus()</i> [HWDF] = 1 OR<br><i>SafetyStatus()</i> [OC] = 1 OR<br><i>SafetyStatus()</i> [CHGC] = 1 OR<br><i>SafetyStatus()</i> [CHGV] = 1 OR<br><i>SafetyStatus()</i> [PCHGC] = 1 OR<br><i>SafetyStatus()</i> [UTC] = 1 OR<br>OR<br><i>SafetyStatus()</i> [OTC] = 1 if <b>[OTFET]</b> = 1 OR<br><i>ChargingStatus()</i> [IN] = 1 if <b>[CHGIN]</b> = 1 OR<br><i>ChargingStatus()</i> [SU] = 1 if <b>[CHGSU]</b> = 1 OR<br><i>OperationStatus()</i> [SLEEP] = 1 if <b>[SLEEPCHG]</b> = 0 OR<br><i>OperationStatus()</i> [EMSHUT] = 1 OR<br><i>OperationStatus()</i> [PRES] = 0 OR<br><i>GaugingStatus()</i> [TCA] = 1 if <b>FET Options</b> [CHGFET] = 1 | <i>ChargingVoltage()</i> = 0<br><i>ChargingCurrent()</i> = 0<br><i>OperationStatus()</i> [XCHG] = 1                                   |

Similarly, the device can disable discharge if any of the following conditions are detected, setting the *OperationStatus()*[XD SG] = 1.

- *ManufacturingStatus()*[FET\_EN] = 0 OR
- Any *PFStatus()* set OR
- *SafetyStatus()*[OCD1] or [OCD2] or [CUV] or [CUVC] or [AOCD] or [AOCDL] or [ASCD] or [ASCDL] or [UTD] = 1 OR
- *SafetyStatus()*[OTD] or [OTF] = 1 if **[OTFET]** = 1 OR
- *OperationStatus()*[PRES] = 0 OR
- *OperationStatus()*[EMSHUT] = 1 OR
- *OperationStatus()*[SDM] = 1 AND delay time > **FET Off Time** OR
- *OperationStatus()*[SDV] = 1 AND low voltage time ≥ **Shutdown Time**

## 16.13 Charge Inhibit

The device can inhibit the start of charging at high and low temperatures to prevent damage of the cells. This feature prevents the start of charging when the temperature is at the inhibit range; therefore, if the device is already in the charging state when the temperature reaches the inhibit range, a FET action will not take place even if **FET Options**[CHGIN] = 1. High Temperature charge inhibit can be disabled by setting **[HT\_INHIB\_DIS]**.

| Status | Condition                                                                                                                                               | Action                                                                                                                             |
|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| Normal | <i>ChargingStatus()</i> [LT] = 1 OR<br><i>ChargingStatus()</i> [STL] = 1 OR<br><i>ChargingStatus()</i> [RT] = 1 OR<br><i>ChargingStatus()</i> [STH] = 1 | <i>ChargingStatus()</i> [IN] = 0<br><i>ChargingVoltage()</i> = charging algorithm<br><i>ChargingCurrent()</i> = charging algorithm |

| Status | Condition                                                                                                                                                             | Action                                                                                                                                                                                                       |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Trip   | Not charging AND ( <i>ChargingStatus()</i> [HT] = 1 OR<br>( <i>ChargingStatus()</i> [OT] = 1 AND<br><b>[HT_INHIB_DIS]</b> = 0) OR<br><i>ChargingStatus()</i> [UT] = 1 | <i>ChargingStatus()</i> [IN] = 1<br><i>ChargingStatus()</i> [SU] = 0<br><i>ChargingVoltage()</i> = 0<br><i>ChargingCurrent()</i> = 0<br><i>OperationStatus()</i> [XCHG] = 1 if <b>FET Options[CHGIN]</b> = 1 |

## 16.14 Charge Suspend

The device can stop charging at high and low temperatures to prevent damage of the cells. The *ChargingStatus()*[SU] condition is only active in the CHARGING mode. Once CHARGE SUSPEND is triggered, the gauge will exit CHARGING mode after **Chg Relax Time** and the CHARGE SUSPEND will change to CHARGE INHIBIT.

| Status | Condition                                                                                                                                                                                    | Action                                                                                                                                                                   |
|--------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Normal | <i>ChargingStatus()</i> [LT] = 1 OR<br><i>ChargingStatus()</i> [STL] = 1 OR<br><i>ChargingStatus()</i> [RT] = 1 OR<br><i>ChargingStatus</i> [STH] = 1 OR<br><i>ChargingStatus()</i> [HT] = 1 | <i>ChargingStatus()</i> [SU] = 0<br><i>ChargingVoltage()</i> = charging algorithm<br><i>ChargingCurrent()</i> = charging algorithm                                       |
| Trip   | <i>ChargingStatus()</i> [UT] = 1 OR<br><i>ChargingStatus()</i> [OT] = 1                                                                                                                      | <i>ChargingStatus()</i> [SU] = 1<br><i>ChargingVoltage()</i> = 0<br><i>ChargingCurrent()</i> = 0<br><i>OperationStatus()</i> [XCHG] = 1 if <b>FET Options[CHGSU]</b> = 1 |

## 16.15 ChargingVoltage() Rate of Change

The device can slope the value changes from one range to another to avoid jumping between different voltage ranges. Setting the **Voltage Rate** to 1 disables this feature, because the *ChargingVoltage()* changes in one step. The gauge will not apply any voltage stepping if **Voltage Rate** is set to 1.

### Note

The host needs to read *ChargingVoltage()* at least once a second during charging to adjust the charger accordingly.

| Status | Condition                       | Action                                                                                                                                                                                                                                                                                                            |
|--------|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Trip   | <i>ChargingVoltage()</i> Change | <i>ChargingStatus()</i> [CVR] = 1<br><i>ChargingVoltage()</i> = Old + n × (New – Old) / <b>Voltage Rate</b> , where<br>Old = present <i>ChargingVoltage()</i><br>New = the target <i>ChargingVoltage()</i> that the device will change to<br>n = 1.. <b>Voltage Rate</b> , increments in steps of one per second. |

## 16.16 ChargingCurrent() Rate of Change

The device can slope the value changes from one range to another to avoid jumping between different current ranges. Setting the **Current Rate** to 1 disables this feature because the *ChargingCurrent()* changes in one step. The gauge will not do any current stepping if **Current Rate** is set to 1.

### Note

The host needs to read *ChargingCurrent()* at least once a second during charging to adjust the charger accordingly.

| Status | Condition                       | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|--------|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Trip   | <i>ChargingCurrent()</i> Change | $ChargingStatus()[CCR] = 1$<br>$ChargingCurrent() = Old + n \times (New - Old) / \text{Current Rate}$ , where<br>Old = present <i>ChargingCurrent()</i><br>New = the target <i>ChargingCurrent()</i> that the device will change to<br>$n = 1.. \text{Current Rate}$ , increment in steps of 1 per second. When<br>$[SLOW\_CRATE] = 1$ , <b>Current Rate</b> will be multiplied by 5, effectively<br>making the current step size smaller, and taking 5 times more 1-<br>second steps to transition to the target <i>Charging Current()</i> . |

## 16.17 Charging Loss Compensation

The device can modify *ChargingVoltage()* and *ChargingCurrent()* to compensate losses caused by the FETs, and the sense resistor by measuring the cell voltages directly and adjusting *ChargingCurrent()* and *ChargingVoltage()* accordingly.

In CONSTANT CURRENT mode, the device can increase the *ChargingVoltage()* value to compensate the drop losses. This feature can be enabled by setting **Configuration[CCC] = 1** and configuring the **CCC Current Threshold**.

### Note

The host must read *ChargingVoltage()* and/or *ChargingCurrent()* at least once a second during charging to adjust the charger accordingly.

| Status | Condition                                                                                         | Action                                                                                                             |
|--------|---------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
| Normal | $Current() > \text{CCC Current Threshold}$ AND<br>$Voltage() = \text{Charging algorithm voltage}$ | $ChargingStatus()[CCC] = 0$<br>$ChargingVoltage() = \text{Charging Algorithm}$                                     |
| Active | $Current() > \text{CCC Current Threshold}$ AND<br>$Voltage() < \text{Charging algorithm voltage}$ | $ChargingStatus()[CCC] = 1$<br>$ChargingVoltage() = \text{Charging Algorithm} + (\text{PACK voltage} - Voltage())$ |
| Limit  | $(\text{PACK voltage in } DAStatus1() - Voltage()) > \text{CCC Voltage Threshold}$                | $ChargingVoltage() = \text{Charging Algorithm} + \text{CCC Voltage Threshold}$                                     |

## 16.18 Cycle Count/SOH Based Degradation of Charging Voltage and Current

This feature, if enabled by setting either **[Cycle\_Degrade]**, **[SOH\_Degrade]** or **[RUNTIME\_DEGRADE]** in the charging configuration register, reduces the *ChargingVoltage()* and/or *ChargingCurrent()* levels based on cycle count or SOH. This helps to reduce the *ChargingVoltage()* and/or *ChargingCurrent()* as the battery pack ages in order to increase the longevity of the battery pack. These degradations are at the cell level.

### Note

These degradations work in conjunction with other degradation features; therefore, use with care.

### 16.18.1 Degradation Modes

#### 16.18.1.1 Cycle Count Based Degradation

When **[CYCLE\_DEGRADE] = 1**, **Cycle Count** can be used as a selector for voltage degradation. There are four programmable stages/levels of cycle count based degradation modes:

NORMAL mode ( **Cycle Count** < **Cycle Threshold** for Mode 1)

Degradation Mode 1 ( **Cycle Count** ≥ **Cycle Threshold** for Mode 1 and < Mode 2)

Degradation Mode 2 ( **Cycle Count** ≥ **Cycle Threshold** for Mode 2 and < Mode 3)

Degradation Mode 3 ( **Cycle Count** ≥ **Cycle Threshold** for Mode 3)

#### Note

- Cycle Count based degradation cannot be enabled together with SOH based degradation.
- Cycle Count based degradation can be enabled with Runtime based degradation together only when **[RTORCC]** is set.
- If **[Degrade\_CC]** sets, charging current can also be degraded.

#### 16.18.1.2 SOH Based Degradation

In addition, when **[SOH\_DEGRADE] = 1**, SOH can be used as a selector for voltage degradation. There are four programmable stages/levels of SOH based degradation modes:

NORMAL mode (SOH > **SOH Threshold** for Mode 1)

Degradation Mode 1 (SOH ≤ **SOH Threshold** for Mode 1 and > Mode 2)

Degradation Mode 2 (SOH ≤ **SOH Threshold** for Mode 2 and > Mode 3)

Degradation Mode 3 (SOH ≤ **SOH Threshold** for Mode 3)

#### Note

- SOH based degradation cannot be enabled together with either Runtime based degradation or Cycle Count based degradation.
- If **[Degrade\_CC]** sets, charging current can also be degraded.

#### 16.18.1.3 Runtime Based Degradation

In addition, when **[RUNTIME\_DEGRADE] = 1**, runtime counted when **Cycle Count** is above **Cycle Count Start Runtime** can be used as a selector for voltage degradation. There are four programmable stages/levels of runtime based degradation modes:

NORMAL mode ( **Accumulated Runtime** < **Runtime Threshold** for Mode 1)

Degradation Mode 1 ( **Accumulated Runtime** ≥ **Runtime Threshold** for Mode 1 and < Mode 2)

Degradation Mode 2 ( **Accumulated Runtime** ≥ **Runtime Threshold** for Mode 2 and < Mode 3)

Degradation Mode 3 ( **Accumulated Runtime** ≥ than **Runtime Threshold** for Mode 3)

When the configuration bits **[RUNTIME\_DEGRADE]** , **[CYCLE\_DEGRADE]** , and **[RTORCC]** are all set, then degradation occurs according to the runtime or cycle count criteria first met.

#### Note

- Runtime based degradation can be enabled with Cycle Count based degradation together only when **[RTORCC]** is set.
- Runtime based degradation cannot be enabled together with SOH based degradation.
- If **[Degrade\_CC]** sets, charging current can also be degraded.

### 16.18.2 Degradation Process

#### 16.18.2.1 Charging Voltage Degradation Process

The following is the charging voltage degradation process:

When a Degradation Mode is entered, whether though cycle count based, SOH based, or runtime based degradation, the highest degradation mode determines the level of **ChargingVoltage()** adjustment.

In NORMAL mode, no **ChargingVoltage()** adjustment is applied.

Entering Degradation Mode 1, **ChargingVoltage()** is reduced by **Voltage Degradation** for Mode 1. Entering Degradation Mode 2, **ChargingVoltage()** is reduced by **Voltage Degradation** for Mode 2. Similarly for entering Degradation Mode 3, as the **ChargingVoltage()** is reduced by **Voltage Degradation** for Mode 3. The charging voltage mode reduction is a one-way transition. The gauge only goes from Normal → Lvl1 → Lvl2 → Lvl3. The

three degradation points each occur one time when the Degradation Mode is reached due to any of the cycle count, SOH, or runtime based degradation criterias.

This charging voltage degradation scheme (if enabled) works in conjunction with any other existing degradation/increments (such as charging loss compensation).

### 16.18.2.2 Charging Current Degradation Process

When **[DEGRADE\_CC]** = 1, charging current can also be degraded in addition to charging voltage degradation. The following is the charging current degradation process:

When a Degradation Mode is entered, whether though cycle count based, SOH based, or runtime based degradation, the highest degradation mode determines the level of *ChargingCurrent()* adjustment.

In NORMAL mode, no *ChargingCurrent()* adjustment is applied.

Entering Degradation Mode 1, *ChargingCurrent()* is reduced by **Current Degradation** for Mode 1. Entering Degradation Mode 2, *ChargingCurrent()* is reduced by **Current Degradation** for Mode 2. Similarly for entering Degradation Mode 3, as the *ChargingCurrent()* is reduced by **Current Degradation** for Mode 3. The charging current mode reduction is a one-way transition. The gauge only goes from Normal → Lvl1 → Lvl2 → Lvl3. The three degradation points each occur one time when the Degradation Mode is reached due to any of the cycle count, SOH, or runtime based degradation criterias.

This charging current degradation scheme (if enabled) works in conjunction with any other existing degradation/increments (such as charge loss compensation).

The following table shows how charging voltage and charging current are degraded at different points:

| Cycle Count (in counts)/SOH (in %)/<br>Runtime (in hrs)<br>(One or the other must be enabled. <sup>(1)</sup> ) | Charging Voltage (CV)<br>(CV degradation is available by default.) | Charging Current (CC)<br>(CC degradation is available if enabled<br><b>[Degrade_CC]</b> . <sup>(2)</sup> ) |
|----------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
| Degradation Normal                                                                                             | No <b>Voltage Degradation</b>                                      | No <b>Current Degradation</b>                                                                              |
| Degradation Mode 1                                                                                             | <b>Voltage Degradation</b> (default 10 mV / cell)                  | <b>Current Degradation</b> (default 10%)                                                                   |
| Degradation Mode 2                                                                                             | <b>Voltage Degradation</b> (default 40 mV / cell)                  | <b>Current Degradation</b> (default 20%)                                                                   |
| Degradation Mode 3                                                                                             | <b>Voltage Degradation</b> (default 70 mV / cell)                  | <b>Current Degradation</b> (default 40%)                                                                   |

(1) Only SOH or **Cycle Count** can be used at a time. Both must not be enabled together.

(2) Only **[Degrade CC]** or **[CRATE]** can be used at a time. Both must not be enabled together.

## 16.19 Elevated Charge Degradation

The device includes a monitoring scheme that notifies the host when the battery spends a prolonged period of time at an elevated RSOC level with or without respect to temperature, depending on the configuration. The temperature used for this feature is the maximum temperature source configured for cell temperature. This feature uses the counter **Accumulated ERM Time** that is incremented once for every hour that *RelativeStateOfCharge()* ≥ **ERM RSoC Threshold** . For periods where **ERM Reset RSoC Threshold** < *RelativeStateOfCharge()* < **ERM RSoC Threshold** , the **Accumulated ERM Time** is held unchanged at its present value.

When the **Accumulated ERM Time** ≥ **ERM Time Threshold** , an **[ERM]** flag is set, signaling to the host that ELEVATED RSOC mode has been entered.

Recovery occurs if *RelativeStateOfCharge()* < **ERM Reset RSoC Threshold** , at which point **Accumulated ERM Time** and **[ERM]** are cleared to their default state of 0.

To use voltage-based thresholds ( **ERM Voltage Threshold** and **ERM Reset Voltage Threshold** ) in place of RSOC-based ones for this mode, the configuration bit **[ERM\_MODE]** must be set (the default value is 0).

The separate counter **Accumulated ERETm Time** is used to track time at the elevated temperature, as well as *RelativeStateOfCharge()*, and can be used to reduce *ChargingVoltage()*. This counter is incremented once for every hour that *RelativeStateOfCharge()* ≥ **ERETm RSoC Threshold** and temperature ≥ **ERETm Temperature Threshold** . For periods where *RelativeStateOfCharge()* < **ERETm RSoC Threshold** or temperature < **ERETm Temperature Threshold** , the **Accumulated ERETm Time** is held unchanged at its present value.

When the **Accumulated ERET<sub>M</sub> Time**  $\geq$  **ERET<sub>M</sub> Time Threshold**, an **[ERET<sub>M</sub>\_ACTIVE]** flag is set, signaling to the host that **Elevated RSOC and Temperature Mode** has been entered, and **ChargingVoltage()** for all temperature ranges is permanently set to **ERET<sub>M</sub> Charging Voltage** without further degradation, starting from the next charge cycle along with the flag **[ERET<sub>M</sub>\_DEGRADE]** setting.

If at any point **RelativeStateOfCharge()** > **ERET<sub>M</sub> RSoC Threshold** and temperature > **ERET<sub>M</sub> Temperature Max Threshold**, the **[ERET<sub>M</sub>\_ACTIVE]** flag is immediately set, bypassing the counter threshold. Once active, exit from this mode is prohibited and the gauge stays in this mode for the remaining life of the pack. This **ERET<sub>M</sub> Temperature Max Threshold** related trigger can be disabled by clearing the **[ERET<sub>M</sub>\_MAX\_T]** configuration bit.

Since **Elevated RSOC and Temperature Mode** supersedes **ELEVATED RSOC** mode, the latter and its associated **[ERM]** flag are deactivated once the former is triggered.

To use voltage-based thresholds (**ERET<sub>M</sub> Voltage Threshold**) in place of **RelativeStateOfCharge()**-based ones for this mode, the configuration bit **[ERET<sub>M</sub>\_MODE]** must be set (default is cleared).

To disable each mode, clear its respective enable bit (**[ERM\_TIME]** and/or **[ERET<sub>M</sub>\_TIME]**).

## 16.20 Elevated Voltage Extended Charge Degradation

The device includes an extension of the elevated charge degradation function described in [Section 16.19](#), which notifies the host when any cell voltage is  $\geq$  the specified **EVT<sub>M</sub>** voltage threshold and the battery spends a prolonged period of time under the specified **EVT<sub>M</sub>** temperature range. This feature provide a method to reduce battery aging by providing multiple degradation steps to reduce **ChargingVoltage()** before the **[ERET<sub>M</sub>\_ACTIVE]** flag is set and the device enters **Elevated RSOC and Temperature Mode**. When **[ERET<sub>M</sub>\_MODE]** = 1, this feature can be enabled by setting **[EVT<sub>M</sub>\_EXT\_MODE]** = 1.

As shown in [Table 16-3](#), lifetimes counters are incremented once every hour to track the time under each of the 3 temperature and 3 voltage ranges. The lifetimes counters are held unchanged at its present value for periods when the cell voltage or temperature is outside of the specified ranges for the corresponding lifetimes counter.

**Table 16-3. Accumulated Time Spent in Elevated Voltage and Temperature Ranges**

| Lifetimes Counter             | Temperature Range | Temperature Condition                                                                                                                                                                        |
|-------------------------------|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Accumulated EVLTM Time</b> | EVLTM             | <b>EVT<sub>M</sub> Temperature Low Threshold</b> $\leq$ temperature < <b>EVT<sub>M</sub> Temperature Mid Threshold</b> and cell voltage $\geq$ <b>EVT<sub>M</sub> Voltage Low Threshold</b>  |
| <b>Accumulated EVMTM Time</b> | EVMTM             | <b>EVT<sub>M</sub> Temperature Mid Threshold</b> $\leq$ temperature < <b>EVT<sub>M</sub> Temperature High Threshold</b> and cell voltage $\geq$ <b>EVT<sub>M</sub> Voltage Mid Threshold</b> |
| <b>Accumulated EVHTM Time</b> | EVHTM             | <b>EVT<sub>M</sub> Temperature High Threshold</b> $\leq$ temperature and cell voltage $\geq$ <b>EVT<sub>M</sub> Voltage High Threshold</b>                                                   |

Under each temperature range, **ChargingVoltage()** can be reduced down by a programmable delta voltage if the value of the accumulated time counter falls between the corresponding time ranges as shown in [Table 16-4](#). The bits in the **EVT<sub>M</sub> ACTIVE** register are asserted to indicate which degradation conditions which are met. Once the device enters **CHARGE** mode, the corresponding delta degradation will be applied to the **ChargingVoltage()**, and the corresponding bit in the **EVT<sub>M</sub> Degrade** register will be asserted.

**Table 16-4. Charge Voltage Degradation due to Time Spent under Elevated Voltage and Temperature**

| Degradation Steps | Temperature Range = EVLTM                                                  |                                                   | Temperature Range = EVMTM                                                  |                                                   | Temperature Range = EVHTM                                                  |                                                   |
|-------------------|----------------------------------------------------------------------------|---------------------------------------------------|----------------------------------------------------------------------------|---------------------------------------------------|----------------------------------------------------------------------------|---------------------------------------------------|
|                   | Time Range                                                                 | ChargingVoltage() Degradation                     | Time Range                                                                 | ChargingVoltage() Degradation                     | Time Range                                                                 | ChargingVoltage() Degradation                     |
| 1                 | <b>EVLTM TTH1</b> $\leq$ <b>Accumulated EVLTM Time</b> < <b>EVLTM TTH2</b> | <b>ChargingVoltage()</b> - <b>EVLTM CV Delta1</b> | <b>EVMTM TTH1</b> $\leq$ <b>Accumulated EVMTM Time</b> < <b>EVMTM TTH2</b> | <b>ChargingVoltage()</b> - <b>EVMTM CV Delta1</b> | <b>EVHTM TTH1</b> $\leq$ <b>Accumulated EVHTM Time</b> < <b>EVHTM TTH2</b> | <b>ChargingVoltage()</b> - <b>EVHTM CV Delta1</b> |
| 2                 | <b>EVLTM TTH2</b> $\leq$ <b>Accumulated EVLTM Time</b> < <b>EVLTM TTH3</b> | <b>ChargingVoltage()</b> - <b>EVLTM CV Delta2</b> | <b>EVMTM TTH2</b> $\leq$ <b>Accumulated EVMTM Time</b> < <b>EVMTM TTH3</b> | <b>ChargingVoltage()</b> - <b>EVMTM CV Delta2</b> | <b>EVHTM TTH2</b> $\leq$ <b>Accumulated EVHTM Time</b> < <b>EVHTM TTH3</b> | <b>ChargingVoltage()</b> - <b>EVHTM CV Delta2</b> |

**Table 16-4. Charge Voltage Degradation due to Time Spent under Elevated Voltage and Temperature (continued)**

| Degradation Steps | Temperature Range = EVLTM                                      |                                     | Temperature Range = EVMTM                                      |                                     | Temperature Range = EVHTM                                      |                                     |
|-------------------|----------------------------------------------------------------|-------------------------------------|----------------------------------------------------------------|-------------------------------------|----------------------------------------------------------------|-------------------------------------|
|                   | Time Range                                                     | ChargingVoltage() - Degradation     | Time Range                                                     | ChargingVoltage() - Degradation     | Time Range                                                     | ChargingVoltage() - Degradation     |
| 3                 | $EVLTM\ TTH3 \leq \text{Accumulated EVLTM Time} < EVLTM\ TTH4$ | ChargingVoltage() - EVLTM CV Delta3 | $EVMTM\ TTH3 \leq \text{Accumulated EVMTM Time} < EVMTM\ TTH4$ | ChargingVoltage() - EVMTM CV Delta3 | $EVHTM\ TTH3 \leq \text{Accumulated EVHTM Time} < EVHTM\ TTH4$ | ChargingVoltage() - EVHTM CV Delta3 |
| 4                 | $EVLTM\ TTH4 \leq \text{Accumulated EVLTM Time} < EVLTM\ TTH5$ | ChargingVoltage() - EVLTM CV Delta4 | $EVMTM\ TTH4 \leq \text{Accumulated EVMTM Time} < EVMTM\ TTH5$ | ChargingVoltage() - EVMTM CV Delta4 | $EVHTM\ TTH4 \leq \text{Accumulated EVHTM Time} < EVHTM\ TTH5$ | ChargingVoltage() - EVHTM CV Delta4 |
| 5                 | $EVLTM\ TTH5 \leq \text{Accumulated EVLTM Time}$               | ChargingVoltage() - EVLTM CV Delta5 | $EVMTM\ TTH5 \leq \text{Accumulated EVMTM Time}$               | ChargingVoltage() - EVMTM CV Delta5 | $EVHTM\ TTH5 \leq \text{Accumulated EVHTM Time}$               | ChargingVoltage() - EVHTM CV Delta5 |

#### Note

This degradation works in conjunction with other degradation features; therefore, use with care.

### 16.21 Charge Voltage Compensation for System Impedance

The design of some battery charging systems may have a not insignificant impedance between the charger and battery terminals. In this case a voltage compensation feature handles system level IR drops to ensure the correct charging voltage is supplied at the battery terminals. Program the **System Resistance** register with the measured resistance in milliohms (mΩ) between the battery terminals and charger terminals. This feature is enabled by setting the configuration bit **[COMP\_IR]** in (default 0) the **Charging Configuration** register.

This feature works as follows:

$$SBS.ChargingVoltage = Charging\_Voltage + AverageCurrent() \times \text{System Resistance}$$

where Charging\_Voltage has been computed as a result of a selected configuration.

### 16.22 Cell Swelling Control (via Charging Voltage Degradation)


Cell swelling can occur when the cell temperature and cell voltage are above certain thresholds. In these situations, the charging voltage can be stepped down gradually until the cell temperature moves back down.

This scheme works (as shown in [Figure 16-4](#)) when enabled by setting **[CS\_CV]** (default is cleared) in the **Charging Configuration** register. When the cell voltage and cell temperature are above the **Voltage Threshold** and **Temperature Threshold**, respectively, for the period defined by **Time Interval**, then the charging voltage is stepped down by **Delta Voltage**. This step down continues until either the cell voltage and cell temperature conditions go away (that is, cell swelling reduces) or the step down reaches **Min CV**.

The charging voltage reduction/degradation resulting from this feature is reset when exiting CHARGE mode.

#### Note

This degradation works in conjunction with other degradation features; therefore, use with care.

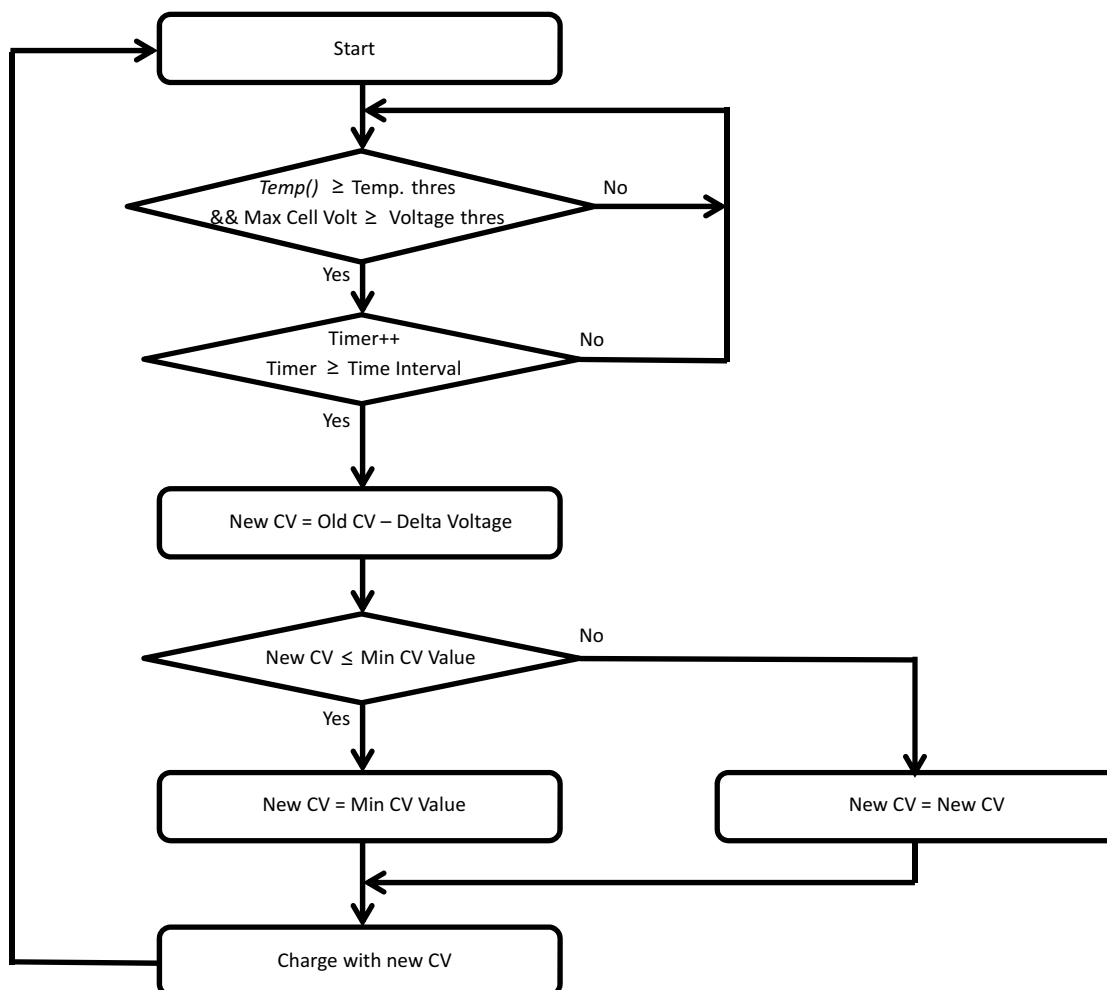


**Figure 16-4. Cell Swelling Control**

## 17 Communications

### 17.1 I<sup>2</sup>C Interface

The gauge supports the standard I<sup>2</sup>C read, incremental read, one-byte write, quick read, and functions. The 7-bit device address (ADDR) is the most significant 7 bits of the hex address and defaults to 1010101, or 0x55. The 8-bit device address therefore defaults to 0xAA or 0xAB for write or read, respectively.

The 7-bit device address can be configured by setting **Alt I2C Address** to the desired address and **Alt I2C Addr Chk** to the 2's complement of **Alt I2C Address**. If **Alt I2C Address** and **Alt I2C Addr Chk** are updated, a reset is required for the gauge to use the new device address. However, the gauge defaults to 0x55 if **Alt I2C Address** is 0x00 or 0xFF or **Alt I2C Addr Chk** is not set correctly.

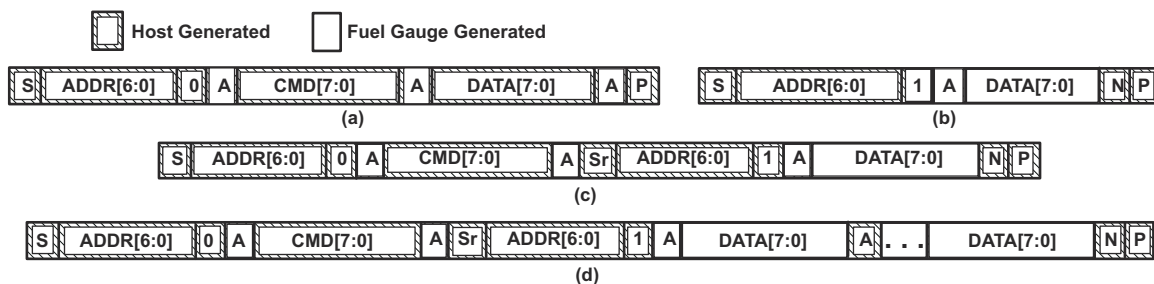


- a. 1-byte write
- b. Quick read
- c. 1-byte read
- d. Incremental read

**Figure 17-1. Supported I<sup>2</sup>C Formats**

(S = Start, Sr = Repeated Start, A = Acknowledge, N = No Acknowledge, and P = Stop)

The quick read returns data at the address indicated by the address pointer. The address pointer, a register internal to the I<sup>2</sup>C communication engine, increments when data is acknowledged by the fuel gauge or the I<sup>2</sup>C master. Quick writes function in the same way and are a convenient means of sending multiple bytes to consecutive command locations (such as two-byte commands that require two bytes of data).

Attempt to write a read-only address (NACK after data sent by master):




Attempt to read an address above 0x7F (NACK command):



Attempt at incremental writes (NACK all extra data bytes sent):



Incremental read at the maximum allowed read address:



### 17.1.1 I<sup>2</sup>C Clock Frequency

The gauge supports different maximum clock frequencies for the I<sup>2</sup>C engine. The desired maximum clock frequency can be configured via **Settings.Configuration.I2C Configuration**.

### 17.1.2 I<sup>2</sup>C Time Out

The I<sup>2</sup>C engine releases SDA and SCL if the I<sup>2</sup>C bus is held low for about two seconds. If the fuel gauge were holding the lines, releasing them frees the master to drive the lines.

### 17.1.3 I<sup>2</sup>C Command Waiting Time

To ensure the correct results of a command with the 400-kHz / 1-MHz I<sup>2</sup>C operation, there must be a proper waiting time between issuing the command and reading the results. For *AltManufacturerAccess()* commands, the following diagram shows the waiting time required between issuing the *AltManufacturerAccess()* command and reading the status. For read-only standard commands, there is no waiting time required, but the host must not issue all standard commands more than two times per second. If thousands of I<sup>2</sup>C transactions are sent to the gauge in one second, then it could adversely impact the CPU and cause a watchdog reset.

### Note

Reference to Datasheet for I2C communication timing details.

**Table 17-1. Command Waiting Times**

|  |  |
|--|--|
|  |  |
|  |  |

#### 17.1.4 I<sup>2</sup>C Clock Stretching

I<sup>2</sup>C clock stretches can occur during all modes of fuel gauge operation. In SLEEP mode, a short clock stretch occurs on all I<sup>2</sup>C traffic, as the device must wake up to process the packet. In NORMAL and SLEEP modes, clock stretching only occurs for packets addressed for the fuel gauge. The timing of stretches varies as interactions between the communicating host and the gauge are asynchronous. The I<sup>2</sup>C clock stretches may occur after start bits, the ACK/NACK bit, and first data bit transmit on a host read cycle. The majority of clock stretch periods are small ( $\leq 4$  ms), as the I<sup>2</sup>C interface peripheral and CPU firmware perform normal data flow control. However, less frequent but more significant clock stretch periods may occur when data flash is written by the CPU to update the Ra tables and other data flash parameters, such as QMax. Due to the organization of data flash, updates need to be written in data blocks consisting of multiple data bytes.

For example, an Ra table update requires erasing a single page of data flash and programming the updated Ra table. The potential I<sup>2</sup>C clock stretching time is 40.08 ms maximum. This includes a 40-ms page erase and 40- $\mu$ s row programming time ( $\times 2$  rows). The Ra table updates occur during the discharge cycle and at up to 15 resistance grid points that occur during the discharge cycle.

## 18 Calibration

### Note


All calibration steps that require accessing data on *MACData()* must begin read operations starting at *AltManufacturerAccess()* to ensure the data portion of the block is properly refreshed per the intended *AltManufacturerAccess()* subcommand (in this case 0xF081). The first two bytes returned are the *AltManufacturerAccess()* subcommand followed by the counter, status, and raw ADC values, as shown in *AltManufacturerAccess() Descriptions*.

### Note

The new calibration process is outlined in the release notes. This method does not require the host to calculate the calibration constants and send them to the device, the constants are automatically calculated and stored by the device upon command.

### 18.1 Voltage Calibration


#### 18.1.1 Cell (BAT) Voltage Calibration

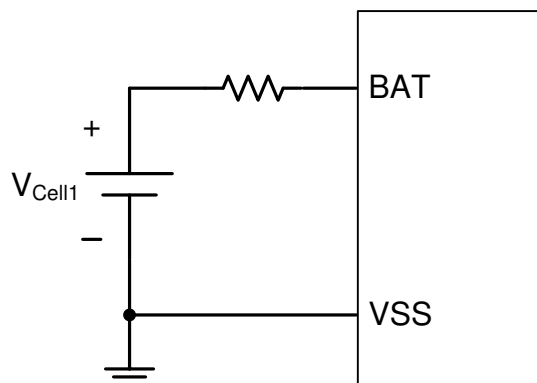

**Figure 18-1. Cell Voltage Calibration**

1. Apply known voltage in mV to the cell voltage inputs:
  - $V_{CELL1}$  between BAT terminal and VSS terminal
2. If *ManufacturerStatus()*[CAL\_EN] = 0, send 0x002D to *AltManufacturerAccess()* to enable the [CAL\_EN] flag.
3. Send 0xF081 to enable OpStat[CALACT]. OpStat[CALACT] ensures the device does not go to SLEEP during calibration.
4. Write applied cell voltage in step-1 to **ManufacturerAccess() 0x0341 Cell Voltage**
  - a. Send the command in this format: [ Device\_Address + Start Address + Length + CAL\_COMMAND + applied cell voltage]
5. Recheck the cell voltage reading and if it is not accurate, repeat Step4.
6. Send 0x002D to *AltManufacturerAccess()* to clear the [CAL\_EN] flag if all calibration is complete.

### 18.1.2 Pack (PACK) Voltage Calibration

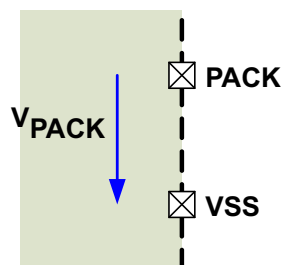


1. Apply known voltages in mV to the voltage input:
  - $V_{PACK}$  between PACK terminal and VSS terminal
2. If *ManufacturerStatus()*[CAL\_EN] = 0, send 0x002D to *AltManufacturerAccess()* to enable the [CAL\_EN] flag.
3. Send 0xF081 to enable OpStat[CALACT]. OpStat[CALACT] ensures the device does not go to SLEEP during calibration.
4. Write applied pack voltage in step-1 to **ManufacturerAccess() 0x0342 Pack Voltage**
  - a. Send the command in this format: [ Device\_Address + Start Address + Length + CAL\_COMMAND + applied pack voltage]
5. Recheck pack voltage reading and if they are not accurate, repeat Step 4.
6. Send 0x002D to *AltManufacturerAccess()* to clear the [CAL\_EN] flag if all calibration is complete.

### 18.1.3 Voltage Calibration Data Flash

| Class       | Subclass | Name      | Type | Min    | Max   | Default              | Unit | Description     |
|-------------|----------|-----------|------|--------|-------|----------------------|------|-----------------|
| Calibration | Voltage  | Cell Gain | I2   | -32768 | 32767 | 12101 <sup>(1)</sup> | —    | BAT – VSS gain  |
| Calibration | Voltage  | Pack Gain | U2   | 0      | 65536 | 24835 <sup>(1)</sup> | —    | Pack – VSS gain |

- (1) Clearing this value causes the gauge to use the internal factory calibration default.

## 18.2 Current Calibration

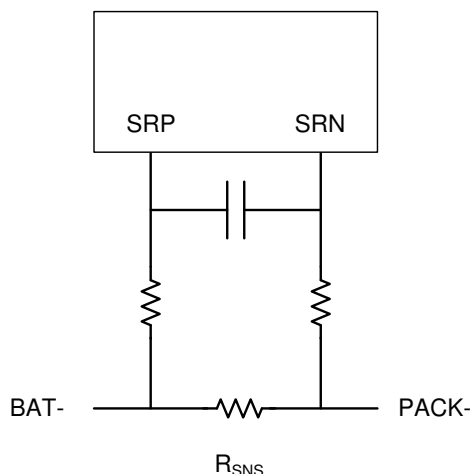

**Figure 18-2. Current Calibration (Charge Current Flow Is BAT– to PACK–)**

### Note

CC offset and board offset are no longer calibrations required by the device due to hardware improvements.

### 18.2.1 CC Gain/Capacity Gain Calibration

1. Apply a known current (typically 1 A to 2 A), and ensure  $I_{CC}$  is flowing through the sense resistor connected between the SRP and SRN pins.
2. If *ManufacturingStatus()*[CAL\_EN] = 0, send 0x002D to *AltManufacturerAccess()* to enable the [CAL\_EN] flag.
3. Send 0xF081 to *AltManufacturerAccess()* to enable raw CC output on *MACData()*.
4. Write applied known current in step-1 to ***ManufacturerAccess()* 0x0343 Pack Current**
  - a. Send the command in this format: [ **Device\_Address + Start Address + Length + CAL\_COMMAND + applied current** ]
5. Recheck the current reading. If the reading is not accurate, repeat the step 4.
6. Send 0x002D to *AltManufacturerAccess()* to clear the [CAL\_EN] flag if all calibration is complete.

### 18.2.2 Deadbands

The gauge can be configured to ignore current and coulomb measurements below individually programmable levels.

#### 18.2.2.1 Current Deadband

When current measures to a value less than the value programmed in ***Deadband***, *Current()* will report 0. This has no effect on the coulomb counting for the gas gauging functionality. The value of ***Deadband*** should be selected based on the characterization of the battery electronics design combined with the environment in which the battery will be used. If the PCB senses noise causing a real no-current condition to report a non-zero value, then ***Deadband*** could be adjusted accordingly.

#### 18.2.2.2 Coulomb Counter Deadband

During normal operation, there could be noise generated in the battery electronics environment that could cause the gauge to accumulate incorrectly (positively or negatively). To filter out this noise, the ***Coulomb Counter Deadband*** setting is used. Any input below this threshold is not accumulated.


### 18.2.3 Current Calibration Data Flash

| Class       | Subclass         | Name                           | Type | Min       | Max       | Default | Unit   | Description                                                                                                                                                                                                                                                                                                |
|-------------|------------------|--------------------------------|------|-----------|-----------|---------|--------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Calibration | Current          | CC Gain                        | I    | 1.00E-001 | 4.00E+000 | 3.68    | —      | Coulomb Counter Gain                                                                                                                                                                                                                                                                                       |
| Calibration | Current          | Calibration Current Period     | I    | 0x08      | 0x40      | 08      | hex    | This is the period of time (in seconds) that the battery current is sampled to calculate the battery's capacity. The period is determined by the hex value of this field. For example, if the value is set to 0x08, the battery current is sampled every 8 seconds.                                        |
| Calibration | Current Offset   | CC Offset                      | I    | -32767    | 32767     | 0       | —      | CC offset is the offset to be added to the calculated coulomb counter value to get the accurate value. It is typically used to account for the internal battery voltage differences.                                                                                                                       |
| Calibration | Current Offset   | Coulomb Counter Offset Samples | U    | 0         | 65535     | 64      | —      | CC_OffsetSamples is a number of samples that are used to calculate the average Coulomb Counter offset. The offset is used to correct the Coulomb Counter measurement. The offset is calculated as the average of a number of samples. The number of samples is specified by the CC_OffsetSamples variable. |
| Calibration | Current Offset   | Board Offset                   | I    | -32768    | 32767     | 0       | —      | The Board Offset is used to compensate for the voltage measured by the board. It is typically used to account for the voltage drop across the board's components.                                                                                                                                          |
| Calibration | Current Offset   | VG CC Offset                   | I    | -32768    | 32767     | 0       | —      | The device will compute this value automatically upon first device POR. Leave as 0 in your golden image.                                                                                                                                                                                                   |
| Calibration | Current Offset   | VG CC Offset                   | I    | -32768    | 32767     | 0       | —      | The device will compute this value automatically upon first device POR. Leave as 0 in your golden image.                                                                                                                                                                                                   |
| Calibration | Current Deadband | Deadband                       | U1   | 0         | 255       | 3       | mA     | Cell-based deadband to report 0 mA                                                                                                                                                                                                                                                                         |
| Calibration | Current Deadband | Coulomb Counter Deadband       | U1   | 0         | 255       | 9       | 116 nV | Coulomb counter deadband to report 0 charge (This setting should not be modified.)                                                                                                                                                                                                                         |

## 18.3 Temperature Calibration

### Note

For temperature calibration, only an offset is determined and then applied to the gauge's measured temperatures.

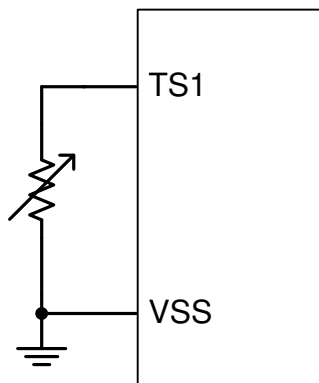

**Figure 18-3. Temperature Calibration**

### 18.3.1 TS Calibration

1. Apply a known temperature in 0.1°C, and ensure the temperature  $TEMP_{TS}$  is applied to the thermistor connected to the TS terminal.
2. If *ManufacturingStatus()[CAL\_EN]* = 0, send 0x002D to *AltManufacturerAccess()* to enable the [CAL\_EN] flag.
3. Send 0xF081 to *AltManufacturerAccess()* to enable raw CC output on *MACData()*.
4. Write applied known temperature in step-1 to ***ManufacturerAccess() 0x0344 Temperature***
  - a. Send the command in this format: [ **Device\_Address + Start Address + Length + CAL\_COMMAND + applied temperature** ]
5. Recheck the *DASatus2()* reading. If the reading is not accurate, repeat the step 4.

### 18.3.2 Temperature Calibration Data Flash

It is not necessary to adjust these offsets. These offsets can be used to improve temperature accuracy at temperatures away from the calibration temperature of the models below; however, they can reduce accuracy across the range of temperatures.

| Class       | Subclass            | Name                  | Type | Min    | Max   | Default | Unit   | Description                                                                                                                                                                                                   |
|-------------|---------------------|-----------------------|------|--------|-------|---------|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Calibration | Temperature         | Internal Temp Offset  | I    | -32768 | 32767 | 0       | 0.1 °C | Internal temperature sensor reading offset                                                                                                                                                                    |
| Calibration | Temperature         | External1 Temp Offset | I    | -32768 | 32767 | 0       | 0.1 °C | TS pin temperature sensor reading offset                                                                                                                                                                      |
| Calibration | Internal Temp Model | Int Gain              | I    | -32768 | 32767 | -20189  | -      | Int Gain is a scaling factor used to convert the raw count value from the internal temperature sensor to a voltage. It is typically a fixed value provided by the sensor manufacturer.                        |
| Calibration | Internal Temp Model | Int base offset       | I    | -32768 | 32767 | 6142    | -      | This is the DC offset of the voltage measured across the internal temperature sensor.                                                                                                                         |
| Calibration | Internal Temp Model | Int Minimum AD        | I    | -32768 | 32767 | 0       | -      | The minimum voltage the internal temperature sensor can measure. This is used to prevent the internal temperature calculation from going below zero.                                                          |
| Calibration | Internal Temp Model | Int Maximum Temp      | I    | -32768 | 32767 | 5754    | 0.1 K  | Int MaxTemp is the maximum temperature (in Kelvin) at which the internal temperature sensor is guaranteed to be accurate. It is used to calculate the temperature offset for the internal temperature sensor. |

### 18.3.3 Cell Temp Model

The parameters in the following table are used for the Semitec 103AT-2 thermistor; default for the TS pin. These parameters will only need to be updated if a different thermistor is used. See the application report to calculate coefficients for other thermistors.

| Class       | Subclass        | Name           | Type | Min    | Max   | Default | Unit | Description                                |
|-------------|-----------------|----------------|------|--------|-------|---------|------|--------------------------------------------|
| Calibration | Cell Temp Model | Coefficient a1 | I2   | -32768 | 32767 | -17447  | —    | Cell Temperature calculation polynomial a1 |
| Calibration | Cell Temp Model | Coefficient a2 | I2   | -32768 | 32767 | 29332   | —    | Cell Temperature calculation polynomial a2 |
| Calibration | Cell Temp Model | Coefficient a3 | I2   | -32768 | 32767 | -25430  | —    | Cell Temperature calculation polynomial a3 |

| Class       | Subclass        | Name           | Type | Min    | Max   | Default              | Unit | Description                                               |
|-------------|-----------------|----------------|------|--------|-------|----------------------|------|-----------------------------------------------------------|
| Calibration | Cell Temp Model | Coefficient a4 | I2   | –32768 | 32767 | 29836                | —    | Cell Temperature calculation polynomial a4                |
| Calibration | Cell Temp Model | Coefficient a5 | I2   | –32768 | 32767 | 1200                 | —    | Cell Temperature calculation polynomial a5                |
| Calibration | Cell Temp Model | Coefficient b1 | I2   | –32768 | 32767 | –293                 | —    | Cell Temperature calculation polynomial b1                |
| Calibration | Cell Temp Model | Coefficient b2 | I2   | –32768 | 32767 | 552                  | —    | Cell Temperature calculation polynomial b2                |
| Calibration | Cell Temp Model | Coefficient b3 | I2   | –32768 | 32767 | –2887                | —    | Cell Temperature calculation polynomial b3                |
| Calibration | Cell Temp Model | Coefficient b4 | I2   | –32768 | 32767 | 4591                 | —    | Cell Temperature calculation polynomial b4                |
| Calibration | Cell Temp Model | Rc0            | I2   | –32768 | 32767 | 11703                | —    | Resistance at 25°C                                        |
| Calibration | Cell Temp Model | Adc0           | I2   | –32768 | 32767 | 11703                | —    | ADC reading at 25°C                                       |
| Calibration | Cell Temp Model | Rpad           | I2   | –32768 | 32767 | 1 <sup>(1)</sup>     | Ω    | Pad Resistance (0 to use factory calibration)             |
| Calibration | Cell Temp Model | Rint           | I2   | –32768 | 32767 | 18000 <sup>(1)</sup> | Ω    | Pullup resistor resistance (0 to use factory calibration) |

(1) Setting this value to 0 causes the gauge to use the internal factory calibration default.

### 18.3.4 Internal Temp Model

Values in this table should not be modified, as the voltage-based sensor in the device was factory trimmed for these model parameters.

| Class       | Subclass            | Name             | Type | Min    | Max   | Default | Unit  | Description                           |
|-------------|---------------------|------------------|------|--------|-------|---------|-------|---------------------------------------|
| Calibration | Internal Temp Model | Int Gain         | I2   | –32768 | 32767 | –13908  | —     | Internal temperature gain             |
| Calibration | Internal Temp Model | Int Base Offset  | I2   | –32768 | 32767 | 6959    | —     | Internal temperature base offset      |
| Calibration | Internal Temp Model | Int Minimum AD   | I2   | –32768 | 32767 | 0       | —     | Minimum AD count used for calculation |
| Calibration | Internal Temp Model | Int Maximum Temp | I2   | –32768 | 32767 | 6959    | 0.1 K | Maximum Temperature boundary          |

## 19 Data Commands

### 19.1 Standard Data Commands

The device uses a series of 2-byte standard commands to enable system reading and writing of battery information. Each standard command has an associated command code pair, as indicated in [Table 19-1](#), *Standard Commands*. The LSB of the command code corresponds to the LSB register data. The LSB should be read first to keep the register data synchronized. For some host systems, the host should change the byte order so that the order corresponds to the host's native endianness. The I<sup>2</sup>C protocol has methods to access the data for each command code. The gauge updates and/or reads the standard command registers once per second.

**Table 19-1. Standard Commands**

| Name                                      |          | Register Code (LSB/MSB) | Description                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-------------------------------------------|----------|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>ManufacturerAccess/ControlStatus()</i> | CNTL     | 0x00/0x01               | Control Register (See <a href="#">Section 19.1.1</a> .)                                                                                                                                                                                                                                                                                                                                                                                                 |
| <i>AtRate()</i>                           | AR       | 0x02/0x03               | Read/write. The value is a signed integer with the negative value indicating a discharge current value. The default value is 0 and forces <i>AtRateTimeToEmpty()</i> to return 65,535.                                                                                                                                                                                                                                                                  |
| <i>AtRateTimeToEmpty()</i>                | ARTTE    | 0x04/0x05               | This read-only function returns an unsigned integer value to predict remaining operating time based on battery discharge at the <i>AtRate()</i> value in minutes with a range of 0 to 65,534. A value of 65,535 indicates <i>AtRate()</i> = 0. The gas gauge updates the <i>AtRateTimeToEmpty()</i> within 1 s after the system sets the <i>AtRate()</i> value. The gas gauge updates these parameters every 1 s. The commands are used in NORMAL mode. |
| <i>Temperature()</i>                      | TEMP     | 0x06/0x07               | This read-only function returns an unsigned integer value of temperature measured by the gas gauge and is used for the gauging algorithm. Values are reported in units 0.1 K. It reports either internal temperature or external thermistor temperature, depending on the setting of the <i>[TS]</i> and <i>[TSInt]</i> bits in <i>Temperature Enable</i> .                                                                                             |
| <i>Voltage()</i>                          | VOLT     | 0x08/0x09               | This read-only function returns an unsigned integer value of the measured cell pack in mV with a range of 0 to 6000 mV.                                                                                                                                                                                                                                                                                                                                 |
| <i>BatteryStatus()</i>                    | FLAGS    | 0x0A/0x0B               | This read-only function returns various battery status information.                                                                                                                                                                                                                                                                                                                                                                                     |
| <i>Current()</i>                          | INSTCURR | 0x0C/0x0D               | This read-only function returns a signed integer value that is the instantaneous current flow through the sense resistor. The value is updated every 1 s. Units are mA.                                                                                                                                                                                                                                                                                 |
| <i>RemainingCapacity()</i>                | RM       | 0x10/0x11               | This read-only command returns the predicted remaining capacity, based on rate (per configured <i>Load Select</i> ), temperature, present depth-of-discharge, and stored impedance. Values are reported in mAh.                                                                                                                                                                                                                                         |
| <i>FullChargeCapacity()</i>               | FCC      | 0x12/0x13               | This read-only command returns the predicted capacity of the battery at full charge, based on rate (per configured <i>Load Select</i> ), temperature, present depth-of-discharge, and stored impedance. Values are reported in mAh.                                                                                                                                                                                                                     |
| <i>AverageCurrent()</i>                   | AI       | 0x14/0x15               | This read-only function returns a signed integer value that is the average current flow through the sense resistor. The value is updated every 1 s. Units are mA.                                                                                                                                                                                                                                                                                       |
| <i>AverageTimeToEmpty()</i>               | TTE      | 0x16/0x17               | Uses average current value with a time constant of 15 s for this method. A value of 65,535 means the battery is not being discharged.                                                                                                                                                                                                                                                                                                                   |

**Table 19-1. Standard Commands (continued)**

| Name                           |          | Register Code (LSB/MSB) | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|--------------------------------|----------|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>AverageTimeToFull()</i>     | TTF      | 0x18/0x19               | This read-only function returns a unsigned integer value, predicting time to reach full charge for the battery in units of minutes based on <i>AverageCurrent()</i> . The computation accounts for the taper current time extension from a linear TTF computation based on a fixed <i>AverageCurrent()</i> rate of charge accumulation. A value of 65,535 indicates the battery is not being charged.                                                                                                                                                                                                                                                                                              |
| <i>MaxLoadCurrent()</i>        | MLI      | 0x1E/0x1F               | This read-only function returns a signed integer value in units of mA of the maximum load current. The <i>MaxLoadCurrent()</i> is an adaptive measurement which is initially reported as the maximum load current programmed in <b>Max Load Current</b> . If the measured current is ever greater than <b>Max Load Current</b> , then the <i>MaxLoadCurrent()</i> updates to the new current. <i>MaxLoadCurrent()</i> is reduced to the average of the previous value and <b>Max Load Current</b> whenever the battery is charged to full after a previous discharge to an RSOC of less than <b>Max Load Rsoc</b> . This will prevent the reported value from maintaining an unusually high value. |
| <i>MaxLoadTimeToEmpty()</i>    | MLTTE    | 0x20/0x21               | This read-only function returns a unsigned integer value, predicting remaining battery life at the maximum discharge load current rate in units of minutes. A value of 65,535 indicates that the battery is not being discharged.                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <i>AveragePower()</i>          | AP       | 0x22/0x23               | This read-only function returns a signed integer value of average power during battery charging and discharging. It is negative during discharge and positive during charge. A value of 0 indicates that the battery is not being discharged. The value is reported in units of mW.                                                                                                                                                                                                                                                                                                                                                                                                                |
| <i>BTPDischargeSet()</i>       | BTP      | 0x24/0x25               | This read/write-word command updates the BTP set threshold for DISCHARGE mode for the next BTP interrupt, deasserts the present BTP interrupt, and clears the <i>OperationStatus()</i> [BTP_INT] bit.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <i>BTPChargeSet()</i>          | BTP      | 0x26/0x27               | The read/write-word command updates the BTP set threshold for CHARGE mode for the next BTP interrupt, deasserts the present BTP interrupt, and clears the <i>OperationStatus()</i> [BTP_INT] bit.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <i>InternalTemperature()</i>   | INT_TEMP | 0x28/0x29               | This read-only function returns an unsigned integer value of the measured internal temperature of the device in 0.1 K units measured by the gas gauge.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <i>CycleCount()</i>            | CC       | 0x2A/0x2B               | This read-only function returns an unsigned integer value of the number of cycles the battery has experienced a discharge (range 0 to 65,535). One cycle occurs when accumulated discharge greater than or equal to the cycle count threshold.                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <i>RelativeStateOfCharge()</i> | RSOC     | 0x2C/0x2D               | This read-only function returns an unsigned integer value of the predicted remaining battery capacity expressed as percentage of <i>FullChargeCapacity()</i> with a range of 0% to 100%.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <i>StateOfHealth()</i>         | SOH      | 0x2E/0x2F               | This read-only function returns an unsigned integer value of the battery state-of-health expressed as a percentage of the ratio of predicted FCC (simulated with <b>SOH Load Rate</b> at 25°C) over the <i>DesignCapacity()</i> . The range is 0% to 100%.                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <i>ChargingVoltage()</i>       | CV       | 0x30/0x31               | Returns the desired charging voltage in mV to the charger                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <i>ChargingCurrent()</i>       | CC       | 0x32/0x33               | Returns the desired charging current in mA to the charger                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <i>TerminateVoltage()</i>      |          | 0x34/0x35               | Returns or updates the value of <b>Terminate Voltage</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <i>TimeStampUpper()</i>        |          | 0x36/0x37               | Returns or updates the upper 16 bits of the time stamp in seconds                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <i>TimeStampLower()</i>        |          | 0x38/0x39               | Returns or updates the lower 16 bits of the time stamp in seconds                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <i>QmaxCycles()</i>            |          | 0x3A/0x3B               | Returns cycle count at the last QMax update                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <i>DesignCapacity()</i>        |          | 0x3C/0x3D               | In SEALED and UNSEALED access: This command returns the value stored in <b>Design Capacity mAh</b> . This is intended to be a theoretical or nominal capacity of a new pack, but should have no bearing on the operation of the gas gauge functionality.                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <i>AltManufacturerAccess()</i> |          | 0x3E/0x3F               | MAC data block command                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <i>MACData()</i>               |          | 0x40/0x5F               | MAC data block                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <i>MACDataSum()</i>            |          | 0x60                    | MAC data block checksum                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <i>MACDataLen()</i>            |          | 0x61                    | MAC data block length                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <i>VoltHiSetThreshold()</i>    |          | 0x62/0x63               | This read/write function is a signed integer in units of mV for the high voltage level threshold, which sets <i>InterruptStatus()</i> [VOLT_HI].                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <i>VoltHiClearThreshold()</i>  |          | 0x64/0x65               | This read/write function is a signed integer in units of mV for the high voltage level threshold, which clears <i>InterruptStatus()</i> [VOLT_HI].                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <i>VoltLoSetThreshold()</i>    |          | 0x66/0x67               | This read/write function is a signed integer in units of mV for the low voltage level threshold, which sets <i>InterruptStatus()</i> [VOLT_LO].                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <i>VoltLoClearThreshold()</i>  |          | 0x68/0x69               | This read/write function is a signed integer in units of mV for the low voltage level threshold, which clears <i>InterruptStatus()</i> [VOLT_LO].                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <i>TempHiSetThreshold()</i>    |          | 0x6A                    | This read/write function is a signed integer in units of °C for the high temperature level threshold, which sets <i>InterruptStatus()</i> [TEMP_HI].                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <i>TempHiClearThreshold()</i>  |          | 0x6B                    | This read/write function is a signed integer in units of °C for the high temperature level threshold, which clears <i>InterruptStatus()</i> [TEMP_HI].                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <i>TempLoSetThreshold()</i>    |          | 0x6C                    | This read/write function is a signed integer in units of °C for the low temperature level threshold, which sets <i>InterruptStatus()</i> [TEMP_LO].                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <i>TempLoClearThreshold()</i>  |          | 0x6D                    | This read/write function is a signed integer in units of °C for the low temperature level threshold, which clears <i>InterruptStatus()</i> [TEMP_LO].                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <i>InterruptStatus()</i>       |          | 0x6E                    | This read-only function returns the status of the interrupt including cause of interrupt.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <i>SOCDeltaSetThreshold()</i>  |          | 0x6F                    | This read/write function is an unsigned char in units of % for the SOC delta level threshold, which clears <i>InterruptStatus()</i> [SOC_DELTA].                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

### 19.1.1 0x00/01 ManufacturerAccess()/ControlStatus()

This read/write word function returns the control bits when read and is an interface to the manufacturer access system (MAC) when written. This command is provided for backward compatibility/ease of use, as all of the

control bits except *ControlStatus()*[*ChecksumValid*] are available in *OperationStatusA()* and *OperationStatusB()* in addition to *AltManufacturerAccess()* being the recommended interface for MAC (as discussed in *0x00*, *0x01 ManufacturerAccess()* and *0x3E*, *0x3F AltManufacturerAccess()*).

|      |     |    |      |      |      |                 |      |      |      |      |      |      |      |     |     |
|------|-----|----|------|------|------|-----------------|------|------|------|------|------|------|------|-----|-----|
| 15   | 14  | 13 | 12   | 11   | 10   | 9               | 8    | 7    | 6    | 5    | 4    | 3    | 2    | 1   | 0   |
| RSVD | FAS | SS | RSVD | RSVD | RSVD | Check Sum Valid | RSVD | RSVD | RSVD | RSVD | RSVD | LDMD | RDIS | VOK | QEN |

**RSVD (Bit 15):** Reserved

**FAS, SS (Bits 14–13):** Legacy SECURITY mode

0, 0 = Full Access

0, 1 = Reserved

1, 0 = Unsealed

1, 1 = Sealed

**RSVD (Bit 12):** Reserved

**RSVD (Bits 11–10):** Reserved

**ChecksumValid (Bit 9):** Checksum valid

1 = Flash Writes are enabled.

0 = Flash Writes are disabled due to low voltage or PF condition.

**RSVD (Bits 8–4):** Reserved

**LDMD (Bit 3):** LOAD mode

1 = Constant power

0 = Constant current

**RDIS (Bit 2):** Resistance updates

1 = Disabled

0 = Enabled

**VOK (Bit 1):** Voltage OK for QMax update

1 = Detected

0 = Not detected

**QEN (Bit 0):** Dynamic Z-Track Gauging (Ra and QMax updates are enabled.)

### 19.1.2 0x02/03 *AtRate()*

This read/write word function sets the value used in calculating *AtRateTimeToEmpty()*.

| I <sup>2</sup> C Cmd | Name            | Access |    |    | Proto-col | Type | Min    | Max   | Default | Unit |
|----------------------|-----------------|--------|----|----|-----------|------|--------|-------|---------|------|
|                      |                 | SE     | US | FA |           |      |        |       |         |      |
| 0x02/03              | <i>AtRate()</i> |        |    |    | Word      | I2   | –32768 | 32767 | 0       | mA   |

### 19.1.3 0x04/05 *AtRateTimeToEmpty()*

This read-word function returns the remaining time to fully discharge the battery based on *AtRate()*.

| I <sup>2</sup> C Cmd | Name                       | Access |    |    | Proto-col | Type | Min | Max   | Unit | Note                              |
|----------------------|----------------------------|--------|----|----|-----------|------|-----|-------|------|-----------------------------------|
|                      |                            | SE     | US | FA |           |      |     |       |      |                                   |
| 0x04/05              | <i>AtRateTimeToEmpty()</i> |        |    |    | Word      | U2   | 0   | 65535 | min  | 65535 indicates not being charged |

### 19.1.4 0x06/07 *Temperature()*

This read-word function returns the temperature in units 0.1 K.

| I <sup>2</sup> C Cmd | Name          | Access |    |    | Proto-<br>col | Type | Min | Max   | Unit  |
|----------------------|---------------|--------|----|----|---------------|------|-----|-------|-------|
|                      |               | SE     | US | FA |               |      |     |       |       |
| 0x06/07              | Temperature() |        | R  |    | Word          | I2   | 0   | 32767 | 0.1 K |

### 19.1.5 0x08/09 Voltage()

This read-word function returns the measured cell voltage.

| I <sup>2</sup> C Cmd | Name      | Access |    |    | Proto-<br>col | Type | Min | Max   | Unit |
|----------------------|-----------|--------|----|----|---------------|------|-----|-------|------|
|                      |           | SE     | US | FA |               |      |     |       |      |
| 0x08/09              | Voltage() |        | R  |    | Word          | I2   | 0   | 32767 | mV   |

### 19.1.6 0x0A/0B BatteryStatus()

This read-word function returns various battery status information.

15    14    13    12    11    10    9    8    7    6    5    4    3    2    1    0

|      |     |      |      |     |      |     |      |      |     |    |    |      |      |      |      |
|------|-----|------|------|-----|------|-----|------|------|-----|----|----|------|------|------|------|
| RSVD | TCA | RSVD | RSVD | TDA | RSVD | RCA | RSVD | INIT | DSG | FC | FD | RSVD | RSVD | RSVD | RSVD |
|------|-----|------|------|-----|------|-----|------|------|-----|----|----|------|------|------|------|

**RSVD (Bit 15):** Reserved

**TCA (Bit 14):** Terminate Charge Alarm

0 = Inactive

1 = Active

**RSVD (Bits 13–12):** Reserved

**TDA (Bit 11):** Terminate Discharge Alarm

0 = Inactive

1 = Active

**RSVD (Bit 10):** Reserved

**RCA (Bit 9):** Remaining Capacity Alarm

0 = Inactive

1 = Active

**RSVD (Bit 8):** Reserved

**INIT (Bit 7):** Initialization

0 = Complete

1 = Active

**DSG (Bit 6):** Discharging

0 = The battery is charging.

1 = The battery is discharging.

**FC (Bit 5):** Fully Charged

0 = The battery is not fully charged.

1 = The battery is fully charged.

**FD (Bit 4):** Fully Discharged

0 = The battery is okay.

1 = The battery is fully depleted.

**RSVD (Bits 3–0):** Reserved

### 19.1.7 0x0C/0D Current()

This read-word function returns the measured current from the coulomb counter.

| I <sup>2</sup> C Cmd | Name             | Access |    |    | Proto-<br>col | Type | Min    | Max   | Unit |
|----------------------|------------------|--------|----|----|---------------|------|--------|-------|------|
|                      |                  | SE     | US | FA |               |      |        |       |      |
| 0x0C/0D              | <i>Current()</i> |        | R  |    | Word          | I2   | –32768 | 32767 | mA   |

### 19.1.8 0x10/11 RemainingCapacity()

This read-word function returns the predicted remaining battery capacity.

| I <sup>2</sup> C Cmd | Name                       | Access |    |    | Proto-<br>col | Type | Min | Max   | Unit |
|----------------------|----------------------------|--------|----|----|---------------|------|-----|-------|------|
|                      |                            | SE     | US | FA |               |      |     |       |      |
| 0x10/11              | <i>RemainingCapacity()</i> |        | R  |    | Word          | U2   | 0   | 32767 | mAh  |

### 19.1.9 0x12/13 FullChargeCapacity()

This read-word function returns the predicted battery capacity when fully charged.

| I <sup>2</sup> C Cmd | Name                        | Access |    |    | Proto-<br>col | Type | Min | Max   | Unit |
|----------------------|-----------------------------|--------|----|----|---------------|------|-----|-------|------|
|                      |                             | SE     | US | FA |               |      |     |       |      |
| 0x12/13              | <i>FullChargeCapacity()</i> |        | R  |    | Word          | I2   | 0   | 32767 | mAh  |

### 19.1.10 0x14/15 AverageCurrent()

This read-word function provides the filtered/average current.

| I <sup>2</sup> C Cmd | Name                    | Access |    |    | Proto-<br>col | Type | Min    | Max   | Unit |
|----------------------|-------------------------|--------|----|----|---------------|------|--------|-------|------|
|                      |                         | SE     | US | FA |               |      |        |       |      |
| 0x14/15              | <i>AverageCurrent()</i> |        | R  |    | Word          | I2   | –32767 | 32768 | mA   |

### 19.1.11 0x16/17 AverageTimeToEmpty()

This read-word function returns the predicted remaining time to fully discharge the battery based on *AverageCurrent()*.

| I <sup>2</sup> C Cmd | Name                        | Access |    |    | Proto-<br>col | Type | Min | Max   | Unit | Note                                         |
|----------------------|-----------------------------|--------|----|----|---------------|------|-----|-------|------|----------------------------------------------|
|                      |                             | SE     | US | FA |               |      |     |       |      |                                              |
| 0x16/17              | <i>AverageTimeToEmpty()</i> |        | R  |    | Word          | U2   | 0   | 65535 | min  | 65535 = The battery is not being discharged. |

### 19.1.12 0x18/19 AverageTimeToFull()

This read-word function returns the predicted remaining time to achieve full charge based on *AverageCurrent()*.

| I <sup>2</sup> C Cmd | Name                       | Access |    |    | Proto-<br>col | Type | Min | Max   | Unit | Note |
|----------------------|----------------------------|--------|----|----|---------------|------|-----|-------|------|------|
|                      |                            | SE     | US | FA |               |      |     |       |      |      |
| 0x18/19              | <i>AverageTimeToFull()</i> |        | R  |    | Word          | U2   | 0   | 65535 | min  |      |

### 19.1.13 0x20/21 MaxLoadTimeToEmpty()

This read-word function returns the remaining time to fully discharge the battery based on *MaxLoadCurrent()*.

| I <sup>2</sup> C Cmd | Name                        | Access |    |    | Proto-<br>col | Type | Min | Max   | Unit |
|----------------------|-----------------------------|--------|----|----|---------------|------|-----|-------|------|
|                      |                             | SE     | US | FA |               |      |     |       |      |
| 0x20/21              | <i>MaxLoadTimeToEmpty()</i> |        | R  |    | Word          | I2   | 0   | 65535 | min  |

### 19.1.14 0x22/23 AveragePower()

This read-word function returns the average power [*Voltage()* × *AverageCurrent()*] during battery charging or discharging. It is negative due to discharge and positive due to charge. A 0 value indicates the battery is not being discharged.

| I <sup>2</sup> C Cmd | Name                  | Access |    |    | Proto-<br>col | Type | Min    | Max   | Unit |
|----------------------|-----------------------|--------|----|----|---------------|------|--------|-------|------|
|                      |                       | SE     | US | FA |               |      |        |       |      |
| 0x22/23              | <i>AveragePower()</i> |        | R  |    | Word          | I2   | –32768 | 32767 | mW   |

### 19.1.15 0x28/29 InternalTemperature()

This read-word function returns the internal die temperature in units 0.1 K.

| I <sup>2</sup> C Cmd | Name                  | Access |    |    | Proto-col | Type | Min | Max   | Unit  |
|----------------------|-----------------------|--------|----|----|-----------|------|-----|-------|-------|
|                      |                       | SE     | US | FA |           |      |     |       |       |
| 0x28/29              | InternalTemperature() | R      |    |    | Word      | I2   | 0   | 32767 | 0.1 K |

### 19.1.16 0x2A/2B CycleCount()

This read-word function returns the number of discharge cycles the battery has experienced.

| I <sup>2</sup> C Cmd | Name         | Access |    |    | Proto-col | Type | Min | Max   | Unit   |
|----------------------|--------------|--------|----|----|-----------|------|-----|-------|--------|
|                      |              | SE     | US | FA |           |      |     |       |        |
| 0x2A/2B              | CycleCount() | R      | R  |    | Word      | U2   | 0   | 65535 | cycles |

| Class       | Subclass | Name                   | Type | Min | Max   | Default | Unit | Description                                                                                                                                                         |
|-------------|----------|------------------------|------|-----|-------|---------|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Gas Gauging | Cycle    | Cycle Count Percentage | U1   | 0   | 100   | 90      | %    | Percentage of <i>DesignCapacity()</i> or <i>FullChargeCapacity()</i> (determined by <i>IT Gauging Configuration[CCT]</i> ) to be used for the cycle count threshold |
| Gas Gauging | State    | Cycle Count            | U2   | 0   | 65535 | 0       | —    | Value reported by <i>CycleCount()</i> . Updated by the gauge automatically based on <b>Cycle Count Percentage</b>                                                   |
| Gas Gauging | State    | QMax Cycle Count       | U2   | 0   | 65535 | 0       | —    | The <i>CycleCount()</i> when QMax last updated                                                                                                                      |

### 19.1.17 0x2C/2D RelativeStateOfCharge()—RSOC

This read-word function returns the predicted remaining battery capacity as a percentage of *FullChargeCapacity()*.

| I <sup>2</sup> C Cmd | Name                    | Access |    |    | Proto-col | Type | Min | Max | Unit |
|----------------------|-------------------------|--------|----|----|-----------|------|-----|-----|------|
|                      |                         | SE     | US | FA |           |      |     |     |      |
| 0x2C/2D              | RelativeStateOfCharge() | R      |    |    | Word      | U1   | 0   | 100 | %    |

### 19.1.18 0x2E/2F StateOfHealth()

This command returns the state-of-health (SOH) information of the battery in percentage of **Design Capacity mAh**. It is a read-only command.

| I <sup>2</sup> C Cmd | Name            | Access |    |    | Proto-col | Type | Min | Max | Unit |
|----------------------|-----------------|--------|----|----|-----------|------|-----|-----|------|
|                      |                 | SE     | US | FA |           |      |     |     |      |
| 0x2E/2F              | StateOfHealth() | R      |    |    | Word      | U1   | 0   | 100 | %    |

### 19.1.19 0x30/31 ChargingVoltage()

This read-word function returns the desired charging voltage.

| I <sup>2</sup> C Cmd | Name              | Access |    |    | Proto-col | Type | Min | Max   | Unit | Note                            |
|----------------------|-------------------|--------|----|----|-----------|------|-----|-------|------|---------------------------------|
|                      |                   | SE     | US | FA |           |      |     |       |      |                                 |
| 0x30/31              | ChargingVoltage() | R      | R  | R  | Word      | I2   | 0   | 32767 | mV   | 32767 = Request maximum voltage |

### 19.1.20 0x32/33 ChargingCurrent()

This read-word function returns the desired charging current.

| I <sup>2</sup> C Cmd | Name              | Access |    |    | Proto-col | Type | Min | Max   | Unit | Note                            |
|----------------------|-------------------|--------|----|----|-----------|------|-----|-------|------|---------------------------------|
|                      |                   | SE     | US | FA |           |      |     |       |      |                                 |
| 0x32/33              | ChargingCurrent() | R      | R  | R  | Word      | I2   | 0   | 32767 | mA   | 32767 = Request maximum current |

### 19.1.21 0x34/35 TerminateVoltage()

This reads or writes the voltage level at which the state-of-charge goes to 0. See **Term Voltage** in *Dynamic Z-Track Configuration*.

| I <sup>2</sup> C Cmd | Name                      | Access |    |    | Proto-<br>col | Type | Min | Max   | Unit | Note |
|----------------------|---------------------------|--------|----|----|---------------|------|-----|-------|------|------|
|                      |                           | SE     | US | FA |               |      |     |       |      |      |
| 0x34/35              | <i>TerminateVoltage()</i> | RW     | RW | RW | Word          | I2   | 0   | 32767 | mV   |      |

### 19.1.22 0x36/0x37/0x38/0x39 Timestamp()

This 4-byte value, which is the system runtime in seconds, can be read or written. Always begin the read operation at 0x36 (the LSB) to keep the bytes synchronized during the read by copying the gauge clock to the time stamp registers. The host should read bytes into its 32-byte unsigned integer format in the appropriate endianness. When written by the host, the gauge will update its internal clock on the write to register 0x39.

| I <sup>2</sup> C Cmd | Name                    | Access |    |    | Proto-<br>col | Type | Min | Max   | Unit | Note |
|----------------------|-------------------------|--------|----|----|---------------|------|-----|-------|------|------|
|                      |                         | SE     | US | FA |               |      |     |       |      |      |
| 0x36/37              | <i>TimeStampUpper()</i> | R      | RW | RW | Word          | U2   | 0   | 65535 | s    |      |

| I <sup>2</sup> C Cmd | Name                    | Access |    |    | Proto-<br>col | Type | Min | Max   | Unit | Note |
|----------------------|-------------------------|--------|----|----|---------------|------|-----|-------|------|------|
|                      |                         | SE     | US | FA |               |      |     |       |      |      |
| 0x38/39              | <i>TimeStampLower()</i> | R      | RW | RW | Word          | U2   | 0   | 65535 | s    |      |

### 19.1.23 QMax Cycles() 0x3A/3B

This returns the cycle count when QMax was last updated. It is helpful for a host system to compare this to the present *CycleCount()*.

| I <sup>2</sup> C Cmd | Name                | Access |    |    | Proto-<br>col | Type | Min | Max   | Unit | Note |
|----------------------|---------------------|--------|----|----|---------------|------|-----|-------|------|------|
|                      |                     | SE     | US | FA |               |      |     |       |      |      |
| 0x3A/3B              | <i>QmaxCycles()</i> | R      | R  | R  | Word          | U2   | 0   | 65535 | —    |      |

### 19.1.24 0x3C/3D DesignCapacity()

This read-word function returns the theoretical or nominal maximum pack capacity.

| I <sup>2</sup> C Cmd | Name                    | Access |     |     | Proto-<br>col | Type | Min | Max   | Default | Unit |
|----------------------|-------------------------|--------|-----|-----|---------------|------|-----|-------|---------|------|
|                      |                         | SE     | US  | FA  |               |      |     |       |         |      |
| 0x3C/3D              | <i>DesignCapacity()</i> | R      | R/W | R/W | Word          | I2   | 0   | 32767 | 5300    | mAh  |
|                      |                         |        |     |     |               |      |     |       | 2040    | cWh  |

### 19.1.25 0x3E/3F AltManufacturerAccess()

Writes to this command are interchangeable with *AltManufacturerAccess()*. This command is provided to enable an easy way to verify the active MAC command while reading the *MACData()* returned by the MAC. The host may simply read from *AltManufacturerAccess()* to *MACDataLength()* with one block read. For a description of returned data values, see the *AltManufacturerAccess()* version of same command in *0x00, 0x01 ManufacturerAccess()* and *0x3E, 0x3F AltManufacturerAccess()*.

| I <sup>2</sup> C Cmd | Name                           | Access |    |    | Proto-<br>col | Type | Min | Max | Default | Unit |
|----------------------|--------------------------------|--------|----|----|---------------|------|-----|-----|---------|------|
|                      |                                | SE     | US | FA |               |      |     |     |         |      |
| 0x3E/3F              | <i>AltManufacturerAccess()</i> | R      | R  | R  | Word          | —    | —   | —   | —       | —    |

### 19.1.26 0x40/5F MACData()

This is the data block for *AltManufacturerAccess()* or *AltManufacturerAccess()* commands.

| I <sup>2</sup> C Cmd | Name              | Access |    |    | Proto-<br>col | Type | Min | Max | Default | Unit |
|----------------------|-------------------|--------|----|----|---------------|------|-----|-----|---------|------|
|                      |                   | SE     | US | FA |               |      |     |     |         |      |
| 0x40/5F              | <i>MACData ()</i> | R      | R  | R  | Block         | —    | —   | —   | —       | —    |

### 19.1.27 0x60 MACDataChecksum()

This is the checksum of the *AltManufacturerAccess()* and *MACData()* bytes.

| I <sup>2</sup> C Cmd | Name                     | Access |    |    | Protocol | Type | Min | Max | Default | Unit |
|----------------------|--------------------------|--------|----|----|----------|------|-----|-----|---------|------|
|                      |                          | SE     | US | FA |          |      |     |     |         |      |
| 0x60                 | <i>MACDataChecksum()</i> | R      | R  | R  | Byte     | —    | —   | —   | —       | —    |

The checksum is the 8-bit sum of the MSB and LSB of the command + the (command length) bytes in the buffer. The final sum is the bitwise inversion of the result. Because the length is part of the checksum, the verification cannot take place until the length is written. The checksum and length must be written together as a word to be valid.

### 19.1.28 0x61 MACDataLength()

This is the length for *AltManufacturerAccess()* and *MACData()*.

| I <sup>2</sup> C Cmd | Name                   | Access |    |    | Protocol | Type | Min | Max | Default | Unit |
|----------------------|------------------------|--------|----|----|----------|------|-----|-----|---------|------|
|                      |                        | SE     | US | FA |          |      |     |     |         |      |
| 0x61                 | <i>MACDataLength()</i> | R      | R  | R  | Byte     | —    | —   | —   | —       | —    |

The length byte for all MAC commands includes the 2-byte command, the 1-byte checksum, the 1-byte length, and 1 to 32 bytes of data. This means the minimum length value is 5 for a valid block (no length or checksum is used for command only writes, so a block of 0 size is not necessary). For proper write command validation, the checksum and length must be written in order (word access triggered).

## 19.2 0x00, 0x01 ManufacturerAccess() and 0x3E, 0x3F AltManufacturerAccess()

*AltManufacturerAccess()* provides a method of reading and writing data in the Manufacturer Access System (MAC). The MAC command is sent via *AltManufacturerAccess()* by a block protocol. The result is returned on *AltManufacturerAccess()* via a block read.

Commands are sent by writing to registers 0x00/0x01 or 0x3E/0x3F. 0x3E and 0x3F work the same as 0x00 and 0x01, but are primarily intended for block writes and reads.

Example: Send a MAC *Gauging()* to enable IT via *AltManufacturerAccess()*.

- With Impedance Track disabled, send *Gauging()* (0x0021) to *AltManufacturerAccess()*
  - Command Write, start address = 0x3E (or 0x00). Data = 21 00 (data must be sent in little endian).
- IT is enabled, *ManufacturingStatus()*[GAUGE\_EN] = 1.

Example: Read *Chemical ID()* (0x0006) via *AltManufacturerAccess()*.

- Send *Chemical ID()* to *AltManufacturerAccess()*.
  - Command Write, start address = 0x3E (or 0x00). Data sent = 06 00 (data must be sent in little endian).
- Read the result from *AltManufacturerAccess()* and *MACData()*.
  - Command Read, start address = 0x3E length = 36 bytes. The first 4 bytes of the response will be 06 00 10 12.
  - The first two bytes "06 00" is the MAC command (for verification).
  - The second two bytes "10 12" are the Chem ID in little endian. That is, 0x1210 for ChemID 1210.
  - The last two bytes of the 36-byte block will be the checksum and length. The length in this case will be 6. The checksum is 0xFF – (sum of the first length – 2 bytes). The length and checksum are used to validate the block response.

It is recommended to send "command only" operations to 0x00 and 0x01, and to set the command for a read back in the same way. The reason for this is that it can always reset any legacy support options that may be in effect; whereas, some legacy support options use 0x3E and 0x3F for other purposes. However, 0x3E and 0x3F can always safely be used for block reads. For backward compatibility, a request of the device number or version reports a value for a read on 0x00/0x01. The response word for the MAC commands DEV and VERSION

(0x0001 and 0x0002) should report 0xFFA5 as the legacy response. This is meant as a token to indicate to the host that the real response is on the extended block. “Command only” operations take place immediately after the word write.

**Table 19-2. ManufacturerAccess() Command List**

| Command | Function                    | Access | Format | Data Read on 0x44 or 0x23 | Data Read on 0x2F | Available in SEALED Mode | Type  | Unit  |
|---------|-----------------------------|--------|--------|---------------------------|-------------------|--------------------------|-------|-------|
| 0x0001  | DeviceType                  | R      | Block  | Yes                       | —                 | Yes                      | Hex   | —     |
| 0x0002  | FirmwareVersion             | R      | Block  | Yes                       | —                 | Yes                      | Hex   | —     |
| 0x0003  | HardwareVersion             | R      | Block  | Yes                       | —                 | Yes                      | Hex   | —     |
| 0x0004  | Instruction Flash Signature | R      | Block  | Yes                       | —                 | Yes                      | Hex   | —     |
| 0x0005  | StaticDFSSignature          | R      | Block  | Yes                       | —                 | Yes                      | Hex   | —     |
| 0x0006  | Chemical ID                 | R      | Block  | Yes                       | —                 | Yes                      | Hex   | —     |
| 0x0008  | StaticChemDFSSignature      | R      | Block  | Yes                       | —                 | Yes                      | Hex   | —     |
| 0x0009  | AllDFSSignature             | R      | Block  | Yes                       | —                 | Yes                      | Hex   | —     |
| 0x000A  | StorageMode                 | W      | —      | —                         | —                 | Yes                      | Hex   | —     |
| 0x0010  | ShutdownMode                | W      | —      | —                         | —                 | Yes                      | Hex   | —     |
| 0x0011  | SleepMode                   | W      | —      | —                         | —                 | —                        | Hex   | —     |
| 0x001D  | FuseToggle                  | W      | —      | —                         | —                 | —                        | Hex   | —     |
| 0x001F  | CHGFETToggle                | W      | —      | —                         | —                 | —                        | Hex   | —     |
| 0x0020  | DSGFETToggle                | W      | —      | —                         | —                 | —                        | Hex   | —     |
| 0x0021  | Gauging                     | W      | —      | —                         | —                 | —                        | Hex   | —     |
| 0x0022  | FETControl                  | W      | —      | —                         | —                 | —                        | Hex   | —     |
| 0x0023  | LifetimeDataCollection      | W      | —      | —                         | —                 | —                        | Hex   | —     |
| 0x0024  | PermanentFailure            | W      | —      | —                         | —                 | —                        | Hex   | —     |
| 0x0025  | BlackBoxRecorder            | W      | —      | —                         | —                 | —                        | Hex   | —     |
| 0x0028  | LifetimeDataReset           | W      | —      | —                         | —                 | —                        | Hex   | —     |
| 0x0029  | PermanentFailData Reset     | W      | —      | —                         | —                 | —                        | Hex   | —     |
| 0x002A  | BlackBoxRecorderReset       | W      | —      | —                         | —                 | —                        | Hex   | —     |
| 0x002D  | CalibrationMode             | W      | —      | —                         | —                 | —                        | Hex   | —     |
| 0x002E  | LifetimeDataFlush           | W      | —      | —                         | —                 | —                        | Hex   | —     |
| 0x002F  | LifetimeDataSpeedUp Mode    | W      | —      | —                         | —                 | —                        | Hex   | —     |
| 0x0030  | SealDevice                  | W      | —      | —                         | —                 | —                        | Hex   | —     |
| 0x0035  | SecurityKeys                | R/W    | Block  | Yes                       | —                 | —                        | Hex   | —     |
| 0x0037  | AuthenticationKey           | R/W    | Block  | —                         | Yes               | —                        | Hex   | —     |
| 0x0041  | DeviceReset                 | W      | —      | —                         | —                 | —                        | Hex   | —     |
| 0x0050  | SafetyAlert                 | R      | Block  | Yes                       | —                 | Yes                      | Hex   | —     |
| 0x0051  | SafetyStatus                | R      | Block  | Yes                       | —                 | Yes                      | Hex   | —     |
| 0x0052  | PFAAlert                    | R      | Block  | Yes                       | —                 | Yes                      | Hex   | —     |
| 0x0053  | PFStatus                    | R      | Block  | Yes                       | —                 | Yes                      | Hex   | —     |
| 0x0054  | OperationStatus             | R      | Block  | Yes                       | —                 | Yes                      | Hex   | —     |
| 0x0055  | ChargingStatus              | R      | Block  | Yes                       | —                 | Yes                      | Hex   | —     |
| 0x0056  | GaugingStatus               | R      | Block  | Yes                       | —                 | Yes                      | Hex   | —     |
| 0x0057  | ManufacturingStatus         | R      | Block  | Yes                       | —                 | Yes                      | Hex   | —     |
| 0x0058  | AFERegister                 | R      | Block  | Yes                       | —                 | Yes                      | Hex   | —     |
| 0x005A  | NoLoadRemCap                | R      | Block  | Yes                       | —                 | Yes                      | Mixed | Mixed |
| 0x005E  | ChargingStatusEXT           | R      | Block  | Yes                       | —                 | Yes                      | Hex   | —     |
| 0x0060  | LifetimeDataBlock1          | R      | Block  | Yes                       | —                 | Yes                      | Mixed | Mixed |
| 0x0061  | LifetimeDataBlock2          | R      | Block  | Yes                       | —                 | Yes                      | Mixed | Mixed |
| 0x0062  | LifetimeDataBlock3          | R      | Block  | Yes                       | —                 | Yes                      | Mixed | Mixed |
| 0x0063  | LifetimeDataBlock4          | R      | Block  | Yes                       | —                 | Yes                      | Mixed | Mixed |
| 0x0064  | LifetimeDataBlock5          | R      | Block  | Yes                       | —                 | Yes                      | Mixed | Mixed |

**Table 19-2. ManufacturerAccess() Command List (continued)**

| Command | Function                        | Access | Format | Data Read on 0x44 or 0x23 | Data Read on 0x2F | Available in SEALED Mode | Type       | Unit  |
|---------|---------------------------------|--------|--------|---------------------------|-------------------|--------------------------|------------|-------|
| 0x0065  | LifetimeDataBlock6              | R      | Block  | Yes                       | —                 | Yes                      | Mixed      | Mixed |
| 0x0066  | LifetimeDataBlock7              | R      | Block  | Yes                       | —                 | Yes                      | Mixed      | Mixed |
| 0x0067  | LifetimeDataBlock8              | R      | Block  | Yes                       | —                 | Yes                      | Mixed      | Mixed |
| 0x0068  | LifetimeDataBlock9              | R      | Block  | Yes                       | —                 | Yes                      | Mixed      | Mixed |
| 0x0069  | LifetimeDataBlock10             | R      | Block  | Yes                       | —                 | Yes                      | Mixed      | Mixed |
| 0x006A  | LifetimeDataBlock11             | R      | Block  | Yes                       | —                 | Yes                      | Mixed      | Mixed |
| 0x006B  | LifetimeDataBlock12             | R      | Block  | Yes                       | —                 | Yes                      | Mixed      | Mixed |
| 0x006C  | LifetimeDataBlock13             | R      | Block  | Yes                       | —                 | Yes                      | Mixed      | Mixed |
| 0x006D  | LifetimeDataBlock14             | R      | Block  | Yes                       | —                 | Yes                      | Mixed      | Mixed |
| 0x006E  | LifetimeDataBlock15             | R      | Block  | Yes                       | —                 | Yes                      | Mixed      | Mixed |
| 0x006F  | PowerEvents                     | R      | Block  | Yes                       | —                 | Yes                      | Mixed      | Mixed |
| 0x0070  | ManufacturerInfo                | R      | Block  | Yes                       | —                 | Yes                      | Hex        | —     |
| 0x0071  | DASStatus1                      | R      | Block  | Yes                       | —                 | Yes                      | Mixed      | Mixed |
| 0x0072  | DASStatus2                      | R      | Block  | Yes                       | —                 | Yes                      | Mixed      | Mixed |
| 0x0073  | GaugeStatus1                    | R      | Block  | Yes                       | —                 | Yes                      | Mixed      | Mixed |
| 0x0074  | GaugeStatus2                    | R      | Block  | Yes                       | —                 | Yes                      | Mixed      | Mixed |
| 0x0075  | GaugeStatus3                    | R      | Block  | Yes                       | —                 | Yes                      | Mixed      | Mixed |
| 0x0076  | CBStatus                        | R      | Block  | Yes                       | —                 | Yes                      | Mixed      | Mixed |
| 0x0077  | StateofHealth                   | R      | Block  | Yes                       | —                 | Yes                      | Mixed      | Mixed |
| 0x0078  | FilterCapacity                  | R      | Block  | Yes                       | —                 | Yes                      | Mixed      | Mixed |
| 0x0079  | RSOCWrite                       | W      | —      | —                         | —                 | —                        | Hex        | —     |
| 0x007A  | ManufacturerInfoB               | R      | Block  | Yes                       | —                 | Yes                      | Hex        | Hex   |
| 0x007B  | ManufacturerInfoC               | R/W    | Block  | Yes                       | —                 | Yes                      | Hex        | Hex   |
| 0x007E  | LifetimeDataBlock16             | R      | Block  | Yes                       | —                 | Yes                      | Mixed      | Mixed |
| 0x0098  | AccumulationChargeEnable        | W      | —      | —                         | —                 | No                       | —          | —     |
| 0x0099  | AccumulationDischarge Enable    | W      | —      | —                         | —                 | No                       | —          | —     |
| 0x009A  | AccumulationReset               | W      | —      | —                         | —                 | Yes                      | —          | —     |
| 0x009B  | AccumulationStop                | W      | —      | —                         | —                 | Yes                      | —          | —     |
| 0x009C  | AccumulationStart               | W      | —      | —                         | —                 | Yes                      | Signed Int | mAh   |
| 0x009D  | AccumulationCharge Threshold    | RW     | Block  | Yes                       | —                 | Yes                      | Signed Int | mAh   |
| 0x009E  | AccumulationDischarge Threshold | RW     | Block  | Yes                       | —                 | Yes                      | Signed Int | mAh   |
| 0x009F  | AccumulatedTimeCharge           | R      | Block  | Yes                       | —                 | Yes                      | Mixed      | Mixed |
| 0x00B0  | ChargingVoltageOverride         | R/W    | Block  | Yes                       | —                 | Yes                      | Signed Int | mV    |
| 0x00B2  | ChargingCurrentOverride         | R/W    | Block  | Yes                       | —                 | Yes                      | Signed Int | mA    |
| 0x00F0  | IATAShutdown                    | W      | —      | —                         | —                 | —                        | Hex        | —     |
| 0x00F1  | IATARm                          | W      | —      | —                         | —                 | —                        | Hex        | —     |
| 0x00F2  | IATAFcc                         | W      | —      | —                         | —                 | —                        | Hex        | —     |
| 0x0F00  | ROMMode                         | W      | —      | —                         | —                 | —                        | Hex        | —     |
| 0x3008  | WriteTemp                       | W      | Block  | Yes                       | —                 | Yes                      | Signed Int | 0.1 K |
| 0xF080  | ExitCalibrationOutput           | R/W    | Block  | Yes                       | —                 | —                        | Hex        | —     |
| 0xF081  | OutputCCADCCal                  | R/W    | Block  | Yes                       | —                 | —                        | Hex        | —     |
| 0xF082  | OutputShortedCCADCCal           | R/W    | Block  | Yes                       | —                 | —                        | Hex        | —     |

**19.2.1 ManufacturerAccess() 0x0000**

A read word on this command returns the lowest 16 bits of the *OperationStatus()* data.

### 19.2.2 ManufacturerAccess() 0x0001 Device Type

The device can be checked for the IC part number. The IC part number returns on a subsequent read on *ManufacturerBlockAccess()* or *ManufacturerData()* in the following format: aaAA, where:

| Value | Description |
|-------|-------------|
| AAaa  | Device Type |

### 19.2.3 ManufacturerAccess() 0x0002 Firmware Version

The device can be checked for the firmware version of the IC. The firmware revision returns on *ManufacturerBlockAccess()* or *ManufacturerData()* in the following format: DDddVVvvBBbbTTZZzzRREE, where:

| Value | Description              |
|-------|--------------------------|
| DDdd  | Device Number            |
| VVvv  | Version                  |
| BBbb  | Build Number             |
| TT    | Firmware Type            |
| ZZzz  | Dynamic Z Track™ Version |
| RR    | Reserved                 |
| EE    | Reserved                 |

### 19.2.4 ManufacturerAccess() 0x0003 Hardware Version

The device can be checked for the hardware version of the IC. The hardware revision returns on a subsequent read on *ManufacturerBlockAccess()* or *ManufacturerData()*.

### 19.2.5 ManufacturerAccess() 0x0004 Instruction Flash Signature

The device can return the instruction flash signature. The IF signature returns on a subsequent read on *ManufacturerBlockAccess()* or *ManufacturerData()*.

### 19.2.6 ManufacturerAccess() 0x0005 Static DF Signature

The device can return the data flash checksum. The signature of all static DF returns on a subsequent read on *ManufacturerBlockAccess()* or *ManufacturerData()*. MSB is set to 1 if the calculated signature does not match the signature stored in DF.

### 19.2.7 ManufacturerAccess() 0x0006 Chemical ID

This command returns the chemical ID of the OCV tables used in the gauging algorithm. The chemical ID returns on a subsequent read on *ManufacturerBlockAccess()* or *ManufacturerData()*.

### 19.2.8 ManufacturerAccess() 0x0008 Static Chem DF Signature

The device can return the data flash checksum. The signature of all static chemistry DF returns on subsequent read on *ManufacturerBlockAccess()* or *ManufacturerData()*. MSB is set to 1 if the calculated signature does not match the signature stored in DF.

### 19.2.9 ManufacturerAccess() 0x0009 All DF Signature

The device can return the data flash checksum. The signature of all DF parameters returns on a subsequent read on *ManufacturerBlockAccess()* or *ManufacturerData()*. MSB is set to 1 if the calculated signature does not match the signature stored in DF. It is expected that this signature will change due to updates of lifetime, gauging, and other information.

### 19.2.10 ManufacturerAccess() 0x000A STORAGE Mode

This command activates STORAGE mode.

### 19.2.11 ManufacturerAccess() 0x0010 SHUTDOWN Mode

To reduce power consumption, the device can be sent to SHUTDOWN mode before shipping. After sending this command, the *OperationStatus() [SDM]* = 1, an internal counter will start, and the CHG and DSG FETs will

be turned off when the counter reaches **Ship FET Off Time**. The counter will continue to count up after the FETs are turned off. When the counter reaches **Ship Delay** time, the device will enter SHUTDOWN mode if the voltage at PACK pin is < **Shutdown Voltage** and no charger present is detected and the ENAB pin is high.

If the device is SEALED, this feature requires the command to be sent twice in a row within 4 seconds (for safety purposes). If the device is in UNSEALED or FULL ACCESS mode, sending the command the second time will cancel the delay and enter shutdown immediately.

To wake up the device, a voltage > **Charger Present Threshold** must apply to the PACK pin or the ENAB pin pulled low. The device will power up and a full reset is applied.

### 19.2.12 ManufacturerAccess() 0x0011 SLEEP Mode

If the sleep conditions are met, the device can be sent to sleep with *ManufacturerAccess()*.

| Status   | Condition                                               | Action                                                                                                                                                                                                                                                                                                   |
|----------|---------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Enable   | 0x0011 to <i>ManufacturerAccess()</i>                   | <i>OperationStatus()</i> [SLEEP] = 1                                                                                                                                                                                                                                                                     |
| Activate | <i>Current()</i>   < <b>Power:Sleep Current</b>         | Turn off PCHG FET<br>Turn off CHG FET if <b>FET Options[SLEEPCHG]</b> = 0<br>The device goes to sleep.<br>The device wakes up every <b>Power :Sleep:Measure Time</b> period to measure voltage and temperature.<br>The device wakes up every <b>Power :Sleep Current Time</b> period to measure current. |
| Exit     | <i>Current()</i>   > Configuration:Sleep Current        | <i>OperationStatus()</i> [SLEEP] = 0<br>Return to NORMAL mode                                                                                                                                                                                                                                            |
| Exit     | Wake Comparator trips                                   | <i>OperationStatus()</i> [SLEEP] = 0<br>Return to NORMAL mode                                                                                                                                                                                                                                            |
| Exit     | <i>SafetyAlert()</i> flag or <i>PFAAlert()</i> flag set | <i>OperationStatus()</i> [SLEEP] = 0<br>Return to NORMAL mode                                                                                                                                                                                                                                            |

### 19.2.13 ManufacturerAccess() 0x001F CHG FET Toggle

This command turns on/off the CHG FET drive function to ease testing during manufacturing. If the *ManufacturingStatus()*[CHG\_TEST] = 0, sending this command turns on the CHG FET and the *ManufacturingStatus()*[CHG\_TEST] = 1 and vice versa. This toggling command is only enabled if *ManufacturingStatus()*[FET\_EN] = 0, indicating an FW FET control is not active and manual control is allowed. A reset clears the [CHG\_TEST] flag and turns off the CHG FET.

### 19.2.14 ManufacturerAccess() 0x0020 DSG FET Toggle

This command turns on/off DSG FET drive function to ease testing during manufacturing. If the *ManufacturingStatus()*[DSG\_TEST] = 0, sending this command turns on the DSG FET and the *ManufacturingStatus()*[DSG\_TEST] = 1 and vice versa. This toggling command is only enabled if *ManufacturingStatus()*[FET\_EN] = 0, indicating an FW FET control is not active and manual control is allowed. A reset clears the [DSG\_TEST] flag and turns off the DSG FET.

### 19.2.15 ManufacturerAccess() 0x0021 Gauging

This command enables/disables the gauging function to ease testing during manufacturing. The initial setting is loaded from **Mfg Status Init[GAUGE\_EN]**. If the *ManufacturingStatus()*[GAUGE\_EN] = 0, sending this command enables gauging and the *ManufacturingStatus()*[GAUGE\_EN] = 1 and vice versa.

In UNSEALED mode, the *ManufacturingStatus()*[GAUGE\_EN] status is copied to **Mfg Status Init[GAUGE\_EN]** when the command is received by the gauge. The device remains on its latest gauging status prior to a reset.

### 19.2.16 ManufacturerAccess() 0x0022 FET Control

This command enables/disables control of the CHG, DSG, and PCHG FETs by the firmware. The initial setting is loaded from **Mfg Status Init[FET\_EN]**. If the *ManufacturingStatus()*[FET\_EN] = 0, sending this command allows the FW to control the PCHG, CHG, and DSG FETs and the *ManufacturingStatus()*[FET\_EN] = 1 and vice versa.

In UNSEALED mode, the *ManufacturingStatus()*[FET\_EN] status is copied to **Mfg Status Init[FET\_EN]** when the command is received by the gauge. The device remains on its latest FET control status prior to a reset.

### 19.2.17 ManufacturerAccess() 0x0023 Lifetime Data Collection

This command enables/disables **Lifetime Data Collection** to help streamline production testing. The initial setting is loaded from **Mfg Status Init[LF\_EN]**. If the **ManufacturingStatus()[LF\_EN]** = 0, sending this command starts the **Lifetime Data Collection** and the **ManufacturingStatus()[LF\_EN]** = 1 and vice versa.

In UNSEALED mode, the **ManufacturingStatus()[LF\_EN]** status is copied to **Mfg Status Init[LF\_EN]** when the command is received by the gauge. The device remains on its latest **Lifetime Data Collection** setting prior to a reset.

### 19.2.18 ManufacturerAccess() 0x0024 Permanent Failure

This command enables/disables **Permanent Failure** to help streamline production testing.

The initial setting is loaded from **Mfg Status Init[PF\_EN]**. If the **ManufacturingStatus()[PF\_EN]** = 0, sending this command enables Permanent Failure protections and the **ManufacturingStatus()[PF\_EN]** = 1 and vice versa.

In UNSEALED mode, **ManufacturingStatus()[PF\_EN]** status is copied to **Mfg Status Init[PF\_EN]** when the command is received by the gauge. The device remains on its PF enable/disable setting prior to a reset.

### 19.2.19 ManufacturerAccess() 0x0025 Black Box Recorder

This command enables/disables Black Box Recorder function to help streamline production testing. The initial setting is loaded from **Mfg Status Init[BBR\_EN]**. If the **ManufacturingStatus()[BBR\_EN]** = 0, sending this command enables the Black Box Recorder and the **ManufacturingStatus()[BBR\_EN]** = 1 and vice versa.

In UNSEALED mode, the **ManufacturingStatus()[BBR\_EN]** status is copied to **Mfg Status Init[BBR\_EN]** when the command is received by the gauge. The device remains on its latest Black Box Recorder enable/disable setting prior to a reset.

### 19.2.20 ManufacturerAccess() 0x0028 Lifetime Data Reset

Sending this command resets **Lifetime Data** in data flash to help streamline production testing.

### 19.2.21 ManufacturerAccess() 0x0029 Permanent Fail Data Reset

Sending this command resets PF data in data flash to help streamline production testing.

### 19.2.22 ManufacturerAccess() 0x002A Black Box Recorder Reset

Sending this command resets the Black Box Recorder data in data flash to help streamline production testing.

### 19.2.23 ManufacturerAccess() 0x002D CALIBRATION Mode

This command disables/enables entry into CALIBRATION mode. Status is indicated by the **ManufacturingStatus()[CAL\_EN]** flag. CALIBRATION mode is disabled upon a reset.

| Status  | Condition                                                                          | Action                                                                                                                                                                                                         |
|---------|------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Disable | <b>ManufacturingStatus()[CAL_EN]</b> = 1 AND 0x002D to <b>ManufacturerAccess()</b> | <b>ManufacturingStatus()[CAL_EN]</b> = 0<br>Calibration is not allowed to take place.                                                                                                                          |
| Enable  | <b>ManufacturingStatus()[CAL_EN]</b> = 0 AND 0x002D to <b>ManufacturerAccess()</b> | <b>ManufacturingStatus()[CAL_EN]</b> = 1<br>Calibration is allowed to take place, min voltage checks for saving data flash is bypassed, shutdown is prevented, <b>OperationStatus()[CAL]</b> entry is blocked. |

### 19.2.24 ManufacturerAccess() 0x002E Lifetime Data Flush

This command flushes the RAM **Lifetime Data** to data flash to help streamline evaluation testing.

### 19.2.25 ManufacturerAccess() 0x002F Lifetime Data SPEED UP Mode

For ease of evaluation testing, this command enables a lifetime SPEED UP mode where every 1 s in real time counts as 1 hour in firmware time. When the lifetime SPEED UP mode is enabled, the **ManufacturingStatus()[LT\_TEST]** = 1.

The SPEED UP mode will be disabled if this command is sent again when **[LT\_TEST]** = 1, the MAC **LifetimeDataReset()** command is sent, the MAC **SealDevice()** command is sent, or the device is reset.

### 19.2.26 ManufacturerAccess() 0x0030 Seal Device

This command seals the device for the field, disabling certain SBS commands and access to data flash. See *SBS Commands* for details.

When the device is sealed, the *OperationStatus() [SEC1, SEC0]* = 1,1. All the test features in *ManufacturingStatus()* will also be disabled.

### 19.2.27 ManufacturerAccess() 0x0035 Security Keys

This is a read/write command for two-word UNSEAL, FULL ACCESS, DF Read Only, Manual PF, Lifetimes Reset, Override, and MfgInfoC Write keys.

When reading the keys, data can be read from *ManufacturerData()* or *ManufacturerBlockAccess()*. The keys are returned in the following format: aaAAabbBBccCCddDDeeEEffFFggGGhhHHiilJjJJkkKKIILLmmMMnnNN, where:

| Value | Description                            |
|-------|----------------------------------------|
| AAaa  | First word of the UNSEAL key           |
| BBbb  | Second word of the UNSEAL key          |
| CCcc  | First word of the FULL ACCESS key      |
| DDdd  | Second word of the FULL ACCESS key     |
| EEee  | First word of the DF Read Only key     |
| FFff  | Second word of the DF Read Only key    |
| GGgg  | First word of the Manual PF key        |
| HHhh  | Second word of the Manual PF key       |
| IIii  | First word of the Lifetimes Reset key  |
| JJjj  | Second word of the Lifetimes Reset key |
| KKkk  | First word of the Override key         |
| LLll  | Second word of the Override key        |
| MMmm  | First word of the MfgInfoC Write key   |
| NNnn  | Second word of the MfgInfoC Write key  |

The default UNSEAL key is 0x0414 and 0x3672. The default FULL ACCESS key is 0xFFFF and 0xFFFF. The default DF Read Only key is 0x7632 and 0x1712. The default Manual PF key is 0x2857 and 0x2A98. The default Lifetimes Reset key is 0x2B14 and 0x2C8A. The default Override key is 0x2D18 and 0x2E9B. The default MfgInfoC Write key is 0x3C45 and 0x5D89.

It is highly recommended to change the UNSEAL, FULL ACCESS, DF Read Only, Manual PF, Lifetimes Reset and Override keys from default.

The keys can only be changed through the *ManufacturerBlockAccess()*.

Example: Change UNSEAL key to 0x1234, 0x5678, and leave the other security keys at their default values.

Send an SMBus block write with Command = 0x0035.

Data = MAC command + UNSEAL key + FULL ACCESS KEY + DF Read Only key + PF key + Lifetimes Reset key + Override key + MfgInfoC Write key

= 35 00 34 12 78 56 FF FF FF FF 32 76 12 17 57 28 98 2A 14 2B 8A 2C 18 2D 9B 2E 45 3C 89 5D

#### Note

The first word of the keys cannot be the same. That means an UNSEAL key with 0xABCD 0x1234 and FULL ACCESS key with 0xABCD 0x5678 are not valid because the first word is the same.

This is because the first word is used as a "detection" for the right command. This also means the first word cannot be the same as any existing MAC command.

### 19.2.28 ManufacturerAccess() 0x0037 Authentication Key

This command enables the update of the authentication key into the device. The device must be in FULL ACCESS mode for the authentication key to update.

To update a new authentication key:

- Send the *AuthenticationKey()* + the new 256-bit authentication key to *ManufacturerBlockAccess()* OR
- Send the *AuthenticationKey()* to *ManufacturerAccess()*, then send the 256-bit authentication key to *Authenticate()*.

There is no direct read access to the authentication key. After writing the new authentication to the gauge, the gauge will generate an all-zero challenge and provide the corresponding response for verification.

To verify the new authentication key:

- Read the response from *ManufacturerBlockAccess()* after updating the new authentication key OR
- Read the response from *Authenticate()* after updating the new authentication key.

The device also includes the capability to store the authentication key in secure memory. This is controlled using the **SHA1\_SECURE** data flash bit; however, the authentication key cannot be written into the device using *AuthenticationKey()* as described above. It must be programmed using a separate method. Also, when using secure memory, the authentication key can only be written once and cannot be changed after it is written.

**Note:** The device uses SHA-256 for authentication. The authentication key is 256 bits (32 bytes). When *Settings:Configuration:Auth Config[SPLIT\_RESPONSE]* is set, the 60-byte authentication response is split into two 30-byte fields.

### 19.2.29 ManufacturerAccess() 0x0041 Device Reset

This command resets the device.

#### Note

Command 0x0012 also resets the device (for backwards compatibility with the bq30zxy device).

### 19.2.30 ManufacturerAccess() 0x0050 SafetyAlert

This command returns the *SafetyAlert()* flags on *ManufacturerBlockAccess()* or *ManufacturerData()*.

|      |      |      |      |           |      |           |      |           |      |      |      |      |      |      |     |
|------|------|------|------|-----------|------|-----------|------|-----------|------|------|------|------|------|------|-----|
| 31   | 30   | 29   | 28   | 27        | 26   | 25        | 24   | 23        | 22   | 21   | 20   | 19   | 18   | 17   | 16  |
| RSVD | RSVD | OCDL | COVL | UTD       | UTC  | PCHG<br>C | CHGV | CHGC      | OC   | CTOS | CTO  | PTOS | PTO  | RSVD | OTF |
| 15   | 14   | 13   | 12   | 11        | 10   | 9         | 8    | 7         | 6    | 5    | 4    | 3    | 2    | 1    | 0   |
| RSVD | CUVC | OTD  | OTC  | ASD<br>DL | RSVD | AOC<br>CL | RSVD | AOCD<br>L | RSVD | OCD2 | OCD1 | OCC2 | OCC1 | COV  | CUV |

**RSVD (Bits 31-30):** Reserved. Do not use.

**OCDL (Bit 29):** Overcurrent in discharge

- 1 = Detected
- 0 = Not detected

**COVL (Bit 28):** Cell overvoltage latch

- 1 = Detected
- 0 = Not detected

**UTD (Bit 27):** Undertemperature during discharge

- 1 = Detected
- 0 = Not detected

**UTC (Bit 26):** Undertemperature during charge

1 = Detected

0 = Not detected

**PCHGC (Bit 25):** Over-precharge current

1 = Detected

0 = Not detected

**CHGV (Bit 24):** Overcharging voltage

1 = Detected

0 = Not detected

**CHGC (Bit 23):** Overcharging current

1 = Detected

0 = Not detected

**OC (Bit 22):** Overcharge

1 = Detected

0 = Not detected

**CTOS (Bit 21):** Charge timeout suspend

1 = Detected

0 = Not detected

**CTO (Bit 20):** Charge timeout

1 = Detected

0 = Not detected

**PTOS (Bit 19):** Precharge timeout suspend

1 = Detected

0 = Not detected

**PTO (Bit 18):** Precharge timeout

1 = Detected

0 = Not detected

**RSVD (Bit 17):** Reserved. Do not use.

**OTF (Bit 16):** Overtemperature FET

1 = Detected

0 = Not detected

**RSVD (Bit 15):** Reserved. Do not use.

1 = Detected

0 = Not detected

**CUVC (Bit 14):** Cell undervoltage compensated

1 = Detected

0 = Not detected

**OTD (Bit 13):** Overtemperature during discharge

1 = Detected

0 = Not detected

**OTC (Bit 12):** Overtemperature during charge

1 = Detected

0 = Not detected

**ASCDL (Bit 11):** Short-circuit during discharge latch

1 = Detected

0 = Not detected

**RSVD (Bit 10):** Reserved. Do not use.

**AOCCL (Bit 9):** Short-circuit during charge latch

1 = Detected

0 = Not detected

**RSVD (Bit 8):** Reserved. Do not use.

**AOCDL (Bit 7):** Overload during discharge latch

1 = Detected

0 = Not detected

**RSVD (Bit 6):** Reserved. Do not use.

**OCD2 (Bit 5):** Overcurrent during discharge 2

1 = Detected

0 = Not detected

**OCD1 (Bit 4):** Overcurrent during discharge 1

1 = Detected

0 = Not detected

**OCC2 (Bit 3):** Overcurrent during charge 2

1 = Detected

0 = Not detected

**OCC1 (Bit 2):** Overcurrent during charge 1

1 = Detected

0 = Not detected

**COV (Bit 1):** Cell overvoltage

1 = Detected

0 = Not detected

**CUV (Bit 0):** Cell undervoltage

1 = Detected

0 = Not detected

### 19.2.31 ManufacturerAccess() 0x0051 SafetyStatus

This command returns the *SafetyStatus()* flags on *ManufacturerBlockAccess()* or *ManufacturerData()*.

|      |      |      |      |           |      |           |      |           |      |      |      |      |      |      |     |
|------|------|------|------|-----------|------|-----------|------|-----------|------|------|------|------|------|------|-----|
| 31   | 30   | 29   | 28   | 27        | 26   | 25        | 24   | 23        | 22   | 21   | 20   | 19   | 18   | 17   | 16  |
| ACOV | ACUV | OCDL | COVL | UTD       | UTC  | PCHG<br>C | CHGV | CHGC      | OC   | RSVD | CTO  | RSVD | PTO  | RSVD | OTF |
| 15   | 14   | 13   | 12   | 11        | 10   | 9         | 8    | 7         | 6    | 5    | 4    | 3    | 2    | 1    | 0   |
| RSVD | CUVC | OTD  | OTC  | ASC<br>DL | ASCD | ASC<br>CL | AOCC | AOCD<br>L | AOCD | OCD2 | OCD1 | OCC2 | OCC1 | COV  | CUV |

**ACOV (Bit 31):** Cell Over Voltage

1 = Detected

0 = Not detected

**ACUV (Bit 31):** Cell Under Voltage

1 = Detected

0 = Not detected

**OCDL (Bit 29):** Overcurrent in discharge

1 = Detected

0 = Not detected

**COVL (Bit 28):** Cell overvoltage latch

1 = Detected

0 = Not detected

**UTD (Bit 27):** Undertemperature during discharge

1 = Detected

0 = Not detected

**UTC (Bit 26):** Undertemperature during charge

1 = Detected

0 = Not detected

**PCHGC (Bit 25):** Over-precharge current

1 = Detected

0 = Not detected

**CHGV (Bit 24):** Overcharging voltage

1 = Detected

0 = Not detected

**CHGC (Bit 23):** Overcharging current

1 = Detected

0 = Not detected

**OC (Bit 22):** Overcharge

1 = Detected

0 = Not detected

**RSVD (Bit 21):** Reserved. Do not use.

**CTO (Bit 20):** Charge timeout

1 = Detected

0 = Not detected

**RSVD (Bit 19):** Reserved. Do not use.

**PTO (Bit 18):** Precharge timeout

1 = Detected

0 = Not detected

**HWDF (Bit 17):** SBS Host watchdog timeout

1 = Detected

0 = Not detected

**OTF (Bit 16):** Overtemperature FET

1 = Detected

0 = Not detected

**RSVD (Bit 15):** RSVD. Do not use.

**CUVC (Bit 14):** Cell undervoltage compensated

1 = Detected

0 = Not detected

**OTD (Bit 13):** Overtemperature during discharge

1 = Detected

0 = Not detected

**OTC (Bit 12):** Overtemperature during charge

1 = Detected  
0 = Not detected

**ASCDL (Bit 11):** Short-circuit during discharge latch

1 = Detected  
0 = Not detected

**ASCD (Bit 10):** Short-circuit during discharge

1 = Detected  
0 = Not detected

**AOCCL (Bit 9):** Short-circuit during charge latch

1 = Detected  
0 = Not detected

**AOCC (Bit 8):** Short-circuit during charge

1 = Detected  
0 = Not detected

**AOCDL (Bit 7):** Overload during discharge latch

1 = Detected  
0 = Not detected

**AOCD (Bit 6):** Overload during discharge

1 = Detected  
0 = Not detected

**OCD2 (Bit 5):** Overcurrent during discharge 2

1 = Detected  
0 = Not detected

**OCD1 (Bit 4):** Overcurrent during discharge 1

1 = Detected  
0 = Not detected

**OCC2 (Bit 3):** Overcurrent during charge 2

1 = Detected  
0 = Not detected

**OCC1 (Bit 2):** Overcurrent during charge 1

1 = Detected  
0 = Not detected

**COV (Bit 1):** Cell overvoltage

1 = Detected  
0 = Not detected

**CUV (Bit 0):** Cell undervoltage

1 = Detected  
0 = Not detected

### 19.2.32 ManufacturerAccess() 0x0052 PFAIert

This command returns the *PFAIert()* flags on *ManufacturerBlockAccess()* or *ManufacturerData()*.

| 31        | 30        | 29   | 28 | 27   | 26  | 25              | 24  | 23  | 22   | 21   | 20   | 19   | 18   | 17        | 16        |
|-----------|-----------|------|----|------|-----|-----------------|-----|-----|------|------|------|------|------|-----------|-----------|
| ISD<br>HI | ISD<br>LO | RSVD | TS | RSVD | DFW | PF<br>FORC<br>E | BSD | NTC | 2LVL | AFEC | AFER | FUSE | OCDL | DFE<br>TF | CFE<br>TF |

| 15    | 14        | 13        | 12   | 11   | 10 | 9   | 8  | 7   | 6    | 5    | 4   | 3   | 2   | 1   | 0   |
|-------|-----------|-----------|------|------|----|-----|----|-----|------|------|-----|-----|-----|-----|-----|
| ASCDL | AOCC<br>L | AOCD<br>L | VIMA | VIMR | CD | IMP | CB | QIM | SOTF | COVL | SOT | SOC | SOC | SOV | SUV |

**ISD\_HI (Bit 31):** Internal short detection high failure

- 1 = Detected
- 0 = Not detected

**ISD\_LO (Bit 30):** Internal short detection low failure

- 1 = Detected
- 0 = Not detected

**RSVD (Bit 29):** Reserved. Do not use.

**TS (Bit 28):** Open thermistor – TS1 failure. Triggered when the TS1 temperature reading falls significantly below the internal thermistor temperature for the configured time, indicating a disconnected or open thermistor.

- 1 = Detected
- 0 = Not detected

**RSVD (Bit 27):** Reserved. Do not use.

**DFW (Bit 26):** Data flash write failure

- 1 = Detected
- 0 = Not detected

**PFFORCE (Bit 25):** Permanent failure forced by command

- 1 = Detected
- 0 = Not detected

**BSD (Bit 24):** Battery swelling detection failure

- 1 = Detected
- 0 = Not detected

**NTC (Bit 23):** AFE NTC error

- 1 = Detected
- 0 = Not detected

**2LVL (Bit 22):** Second level protector failure

- 1 = Detected
- 0 = Not detected

**AFEC (Bit 21):** AFE communication failure

- 1 = Detected
- 0 = Not detected

**AFER (Bit 20):** AFE register failure

- 1 = Detected
- 0 = Not detected

**FUSE (Bit 19):** Chemical fuse failure

- 1 = Detected
- 0 = Not detected

**OCDL (Bit 18):** Overcurrent in discharge latch

- 1 = Detected
- 0 = Not detected

**DFETF (Bit 17):** Discharge FET failure

- 1 = Detected
- 0 = Not detected

**CFETF (Bit 16):** Charge FET failure

- 1 = Detected
- 0 = Not detected

**ASCDL (Bit 15):** AFE short circuit in discharge latch

- 1 = Detected
- 0 = Not detected

**AOCCL (Bit 14):** AFE overcurrent in charge latch

- 1 = Detected
- 0 = Not detected

**AOCDL (Bit 13):** AFE overcurrent in discharge latch

- 1 = Detected
- 0 = Not detected

**VIMA (Bit 12):** Voltage imbalance while pack is active failure

- 1 = Detected
- 0 = Not detected

**VIMR (Bit 11):** Voltage imbalance while pack is at rest failure

- 1 = Detected
- 0 = Not detected

**CD (Bit 10):** Capacity degradation failure

- 1 = Detected
- 0 = Not detected

**IMP (Bit 9):** Impedance failure

- 1 = Detected
- 0 = Not detected

**CB (Bit 8):** Cell balancing failure

- 1 = Detected
- 0 = Not detected

**QIM (Bit 7):** QMax imbalance failure

- 1 = Detected
- 0 = Not detected

**SOTF (Bit 6):** Safety overtemperature FET failure

- 1 = Detected
- 0 = Not detected

**COVL (Bit 5):** Cell overvoltage latch

- 1 = Detected
- 0 = Not detected

**SOT (Bit 4):** Safety overtemperature cell failure

- 1 = Detected
- 0 = Not detected

**SOCD (Bit 3):** Safety overcurrent in discharge

- 1 = Detected
- 0 = Not detected

**SOCC (Bit 2):** Safety overcurrent in charge

- 1 = Detected
- 0 = Not detected

**SOV (Bit 1):** Safety cell overvoltage failure

- 1 = Detected
- 0 = Not detected

**SUV (Bit 0):** Safety cell undervoltage failure

- 1 = Detected
- 0 = Not detected

### 19.2.33 ManufacturerAccess() 0x0053 PFStatus

This command returns the *PFStatus()* flags on *ManufacturerBlockAccess()* or *ManufacturerData()*.

|           |           |           |      |      |     |                 |     |     |      |      |      |      |      |           |           |
|-----------|-----------|-----------|------|------|-----|-----------------|-----|-----|------|------|------|------|------|-----------|-----------|
| 31        | 30        | 29        | 28   | 27   | 26  | 25              | 24  | 23  | 22   | 21   | 20   | 19   | 18   | 17        | 16        |
| ISD<br>HI | ISD<br>LO | RSVD      | TS   | RSVD | DFW | PF<br>FORC<br>E | BSD | NTC | 2LVL | AFEC | AFER | FUSE | OCDL | DFE<br>TF | CFE<br>TF |
| 15        | 14        | 13        | 12   | 11   | 10  | 9               | 8   | 7   | 6    | 5    | 4    | 3    | 2    | 1         | 0         |
| ASCDL     | AOCC<br>L | AOCD<br>L | VIMA | VIMR | CD  | IMP             | CB  | QIM | SOTF | COVL | SOT  | SOCD | SOCC | SOV       | SUV       |

**ISD\_HI (Bit 31):** Internal short detection high failure

- 1 = Detected
- 0 = Not detected

**ISD\_LO (Bit 30):** Internal short detection low failure

- 1 = Detected
- 0 = Not detected

**RSVD (Bit 29):** Reserved. Do not use.

**TS (Bit 28):** Open thermistor – TS1 failure. Triggered when the TS1 temperature reading falls significantly below the internal thermistor temperature for the configured time, indicating a disconnected or open thermistor.

- 1 = Detected
- 0 = Not detected

**RSVD (Bit 27):** Reserved. Do not use.

**DFW (Bit 26):** Data flash wearout failure

- 1 = Detected
- 0 = Not detected

**PFFORCE (Bit 25):** Permanent failure forced by command

- 1 = Detected
- 0 = Not detected

**BSD (Bit 24):** Battery swelling detection failure

- 1 = Detected
- 0 = Not detected

**NTC (Bit 23):** AFE NTC error

- 1 = Detected
- 0 = Not detected

**2LVL (Bit 22):** Second level protector failure

- 1 = Detected
- 0 = Not detected

**AFEC (Bit 21):** AFE communication failure

1 = Detected

0 = Not detected

**AFER (Bit 20):** AFE register failure

1 = Detected

0 = Not detected

**FUSE (Bit 19):** Chemical fuse failure

1 = Detected

0 = Not detected

**OCDL (Bit 18):** Overcurrent in discharge latch

1 = Detected

0 = Not detected

**DFETF (Bit 17):** Discharge FET failure

1 = Detected

0 = Not detected

**CFETF (Bit 16):** Charge FET failure

1 = Detected

0 = Not detected

**ASCDL (Bit 15):** AFE short circuit in discharge latch

1 = Detected

0 = Not detected

**AOCCL (Bit 14):** AFE overcurrent in charge latch

1 = Detected

0 = Not detected

**AOCDL (Bit 13):** AFE overcurrent in discharge latch

1 = Detected

0 = Not detected

**VIMA (Bit 12):** Voltage imbalance while pack is active failure

1 = Detected

0 = Not detected

**VIMR (Bit 11):** Voltage imbalance while pack at rest failure

1 = Detected

0 = Not detected

**CD (Bit 10):** Capacity degradation failure

1 = Detected

0 = Not detected

**IMP (Bit 9):** Impedance failure

1 = Detected

0 = Not detected

**CB (Bit 8):** Cell balancing failure

1 = Detected

0 = Not detected

**QIM (Bit 7):** QMax imbalance failure

1 = Detected

0 = Not detected

**SOTF (Bit 6):** Safety overtemperature FET failure

1 = Detected  
0 = Not detected

**COVL (Bit 5):** Cell overvoltage latch

1 = Detected  
0 = Not detected

**SOT (Bit 4):** Safety overtemperature cell failure

1 = Detected  
0 = Not detected

**SOCD (Bit 3):** Safety overcurrent in discharge

1 = Detected  
0 = Not detected

**SOCC (Bit 2):** Safety overcurrent in charge

1 = Detected  
0 = Not detected

**SOV (Bit 1):** Safety cell overvoltage failure

1 = Detected  
0 = Not detected

**SUV (Bit 0):** Safety cell undervoltage failure

1 = Detected  
0 = Not detected

### 19.2.34 ManufacturerAccess() 0x0054 OperationStatus

This command returns the *OperationStatus()* flags on *ManufacturerBlockAccess()* or *ManufacturerData()*.

|        |        |         |      |      |          |          |      |         |         |             |       |           |      |      |      |
|--------|--------|---------|------|------|----------|----------|------|---------|---------|-------------|-------|-----------|------|------|------|
| 31     | 30     | 29      | 28   | 27   | 26       | 25       | 24   | 23      | 22      | 21          | 20    | 19        | 18   | 17   | 16   |
| IOSHUT | PSSHUT | DISCONN | RSVD | RSVD | -STORAGE | SMBL CAL | INIT | SLEEP M | XL      | CAL_OFF SET | CAL   | AUTO CALM | AUTH | RSVD | SDM  |
| 15     | 14     | 13      | 12   | 11   | 10       | 9        | 8    | 7       | 6       | 5           | 4     | 3         | 2    | 1    | 0    |
| SLEEP  | XCHG   | XDSG    | PF   | SS   | SDV      | SEC1     | SEC0 | BTP_INT | EM SHUT | MINSYS      | ACTHR | RSVD      | CHG  | DSG  | PRES |

**IOSHUT (Bit 31):** IO-based shutdown

1 = Active  
0 = Inactive

**PSSHUT (Bit 30):** Power saving shutdown

1 = Active  
0 = Inactive

**DISCONN (Bit 29):** System disconnect

1 = Active  
0 = Inactive

**RSVD (Bit 27-28):** Reserved. Not use.

**STORAGEEM (Bit 26):** Storage Mode is triggered via command

1 = Active  
0 = Inactive

**SMBLCAL (Bit 25):** Auto CC calibration when the bus is low. This bit may not be read by the host because the FW will clear it when a communication is detected.

- 1 = Auto CC calibration starts
- 0 = When the bus is high or communication is detected for the case of **[IN\_SYSTEM\_SLEEP] = 1**.

**INIT (Bit 24):** Initialization after full reset

- 1 = Active
- 0 = Inactive

**SLEEPM (Bit 23):** SLEEP mode triggered via command

- 1 = Active
- 0 = Inactive

**XL (Bit 22):** 400-kHz SMBus mode

- 1 = Active
- 0 = Inactive

**CAL\_OFFSET (Bit 21):** Calibration output (raw CC offset data)

- 1 = Active when MAC *OutputShortedCCADCCal()* is sent and the raw shorted CC data for calibration is available.
- 0 = When the raw shorted CC data for calibration is not available.

**CAL (Bit 20):** Calibration Output (raw ADC and CC data)

- 1 = Active when either the MAC *OutputCCADCCal()* or *OutputShortedCCADCCal()* is sent and the raw CC and ADC data for calibration is available.
- 0 = When the raw CC and ADC data for calibration is not available.

**AUTOCALM (Bit 19):** **CC Auto Offset** Calibration by MAC *AutoCCOffset()*

- 1 = The gauge receives the MAC *AutoCCOffset()* and starts the **CC Auto Offset** calibration.
- 0 = Clear when the calibration is completed.

**AUTH (Bit 18):** Authentication in progress

- 1 = Active
- 0 = Inactive

**RSVD (Bit 17):** Reserved. Do not use.

**SDM (Bit 16):** Shutdown triggered via command

- 1 = Active
- 0 = Inactive

**SLEEP (Bit 15):** SLEEP mode conditions met

- 1 = Active
- 0 = Inactive

**XCHG (Bit 14):** Charging disabled

- 1 = Active
- 0 = Inactive

**XDSG (Bit 13):** Discharging disabled

- 1 = Active
- 0 = Inactive

**PF (Bit 12):** PERMANENT FAILURE mode status

- 1 = Active
- 0 = Inactive

**SS (Bit 11):** SAFETY status. This is the ORd value of all the Safety Status bits.

- 1 = Active
- 0 = Inactive

**SDV (Bit 10):** Shutdown triggered via low battery stack voltage

- 1 = Active
- 0 = Inactive

**SEC1, SEC0 (Bits 9–8):** SECURITY mode

- 0, 0 = Reserved
- 0, 1 = Full Access
- 1, 0 = Unsealed
- 1, 1 = Sealed

**BTP\_INT (Bit 7):** Battery Trip Point Interrupt. Setting and clearing this bit depends on various conditions.

See *Battery Trip Point (BTP)* for details.

**EMSHUT (Bit 6):** Emergency FET Shutdown

- 1 = Active
- 0 = Inactive

**MINSYS (Bit 5):** MINSYS operation status

- 1 = Active
- 0 = Inactive

**ACTHR (Bit 4):** Accumulated charge threshold

- 1 = Active
- 0 = Inactive

**RSVD (Bit 3):** Reserved. Do not use.

**CHG (Bit 2):** CHG FET status

- 1 = Active
- 0 = Inactive

**DSG (Bit 1):** DSG FET status

- 1 = Active
- 0 = Inactive

**PRES (Bit 0):** System present low

- 1 = Active
- 0 = Inactive

### 19.2.35 ManufacturerAccess() 0x0055 ChargingStatus

This command returns the *ChargingStatus()* and Temperature Range flags on *ManufacturerBlockAccess()* or *ManufacturerData()*.

|         |            |        |        |        |        |        |        |      |      |           |     |     |     |     |     |
|---------|------------|--------|--------|--------|--------|--------|--------|------|------|-----------|-----|-----|-----|-----|-----|
| 39      | 38         | 37     | 36     | 35     | 34     | 33     | 32     |      |      |           |     |     |     |     |     |
| SOC_VCT | SOC_MCHG   | SOC_SU | SOC_IN | SOC_HV | SOC_MV | SOC_LV | SOC_PV |      |      |           |     |     |     |     |     |
| 31      | 30         | 29     | 28     | 27     | 26     | 25     | 24     | 23   | 22   | 21        | 20  | 19  | 18  | 17  | 16  |
| V_VCT   | V_MC<br>HG | V_SU   | V_IN   | V_HV   | V_MV   | V_LV   | V_PV   | DEG1 | DEG0 | ERET<br>M | ERM | NCT | CCC | CVR | CCR |
| 15      | 14         | 13     | 12     | 11     | 10     | 9      | 8      | 7    | 6    | 5         | 4   | 3   | 2   | 1   | 0   |
| VCT     | MCHG       | SU     | IN     | HV     | MV     | LV     | PV     | RSVD | OT   | HT        | STH | RT  | STL | LT  | UT  |

**SOC\_VCT (Bit 39):** Charge Termination Status based on SOC

- 1 = Active
- 0 = Inactive

**SOC\_MCHG (Bit 38):** Maintenance Charge Status based on SOC

- 1 = Active
- 0 = Inactive

**SOC\_SU (Bit 37):** Suspend Charge Status based on SOC

- 1 = Active
- 0 = Inactive

**SOC\_IN (Bit 36):** Charge Inhibit Status based on SOC

- 1 = Active
- 0 = Inactive

**SOC\_HV (Bit 35):** High Voltage Region Status based on SOC

- 1 = Active
- 0 = Inactive

**SOC\_MV (Bit 34):** Mid Voltage Region Status based on SOC

- 1 = Active
- 0 = Inactive

**SOC\_LV (Bit 33):** Low Voltage Region Status based on SOC

- 1 = Active
- 0 = Inactive

**SOC\_PV (Bit 32):** Precharge Voltage Region Status based on SOC

- 1 = Active
- 0 = Inactive

**V\_VCT (Bit 31):** Charge Termination Status based on voltage

- 1 = Active
- 0 = Inactive

**V\_MCHG (Bit 30):** Maintenance Charge Status based on voltage

- 1 = Active
- 0 = Inactive

**V\_SU (Bit 29):** Suspend Charge Status based on voltage

- 1 = Active
- 0 = Inactive

**V\_IN (Bit 28):** Charge Inhibit Status based on voltage

- 1 = Active
- 0 = Inactive

**V\_HV (Bit 27):** High Voltage Region Status based on voltage

- 1 = Active
- 0 = Inactive

**V\_MV (Bit 26):** Mid Voltage Region Status based on voltage

- 1 = Active
- 0 = Inactive

**V\_LV (Bit 25):** Low Voltage Region Status based on voltage

- 1 = Active
- 0 = Inactive

**V\_PV (Bit 24):** Precharge Voltage Region Status based on voltage

- 1 = Active
- 0 = Inactive

**DEG1, DEG0 (Bits 23–22):** Degradation mode

- 0, 0 = No degradation
- 0, 1 = Cycle Count based degradation of *ChargingCurrent()* and *ChargingVoltage()* active
- 1, 0 = SOH based degradation of *ChargingCurrent()* and *ChargingVoltage()* active
- 1, 1 = Runtime based degradation of *ChargingCurrent()* and *ChargingVoltage()* active

**ERETM (Bit 21):** ELEVATED RSOC and TEMPERATURE modes

- 1 = Active
- 0 = Inactive

**ERM (Bit 20):** ELEVATED RSOC mode

- 1 = Active
- 0 = Inactive

**NCT (Bit 19):** Near Charge Termination. This flag indicates the pack may be within 40 seconds of charge termination. When smoothing is enabled and while NCT is high, *RemainingCapacity()* will be smoothed to 100% over the next 40 seconds.

- 1 = Active
- 0 = Inactive

**CCC (Bit 18):** Charging Loss Compensation

- 1 = Active
- 0 = Inactive

**CVR (Bit 17):** Charging Voltage Rate of Change

- 1 = Active
- 0 = Inactive

**CCR (Bit 16):** Charging Current Rate of Change

- 1 = Active
- 0 = Inactive

**VCT (Bit 15):** Charge Termination.

- 1 = Active
- 0 = Inactive

**MCHG (Bit 14):** Maintenance Charge

- 1 = Active
- 0 = Inactive

**SU (Bit 13):** Suspend Charge

- 1 = Active
- 0 = Inactive

**IN (Bit 12):** Charge Inhibit

- 1 = Active
- 0 = Inactive

**HV (Bit 11):** High Voltage Region

- 1 = Active
- 0 = Inactive

**MV (Bit 10):** Mid Voltage Region

- 1 = Active
- 0 = Inactive

**LV (Bit 9):** Low Voltage Region

- 1 = Active
- 0 = Inactive

**PV (Bit 8):** Precharge Voltage Region

1 = Active

0 = Inactive

**Temperature Range Flags (Bits 7–0):**
**RSVD (Bit 7):** Reserved. Do not use.

**OT (Bit 6):** Overtemperature Region

1 = Active

0 = Inactive

**HT (Bit 5):** High Temperature Region

1 = Active

0 = Inactive

**STH (Bit 4):** Standard Temperature High Region

1 = Active

0 = Inactive

**RT (Bit 3):** Recommended Temperature Region

1 = Active

0 = Inactive

**STL (Bit 2):** Standard Temperature Low Region

1 = Active

0 = Inactive

**LT (Bit 1):** Low Temperature Region

1 = Active

0 = Inactive

**UT (Bit 0):** Undertemperature Region

1 = Active

0 = Inactive

**Note**

Bit 24-31 is the Charging Status based on voltage (**ChargingStatus\_V**), Bit 32-39 is the Charging Status based on SOC (**ChargingStatus\_SOC**), Bit 8-15 is the ChargingStatus based on both voltage and SOC (**ChargingStatus**), its status depends on the settings of **V\_SOC\_CHARGE** and **SOC\_CHARGE**.

- If **V\_SOC\_CHARGE** = 0 and **SOC\_CHARGE** = 0, **ChargingStatus** equals to **ChargingStatus\_V**;
- If **V\_SOC\_CHARGE** = 0 and **SOC\_CHARGE** = 1, **ChargingStatus** equals to **ChargingStatus\_SOC**;
- If **V\_SOC\_CHARGE** = 1 and no matter the status of **SOC\_CHARGE**, **ChargingStatus** equals to **MAX(ChargingStatus\_V, ChargingStatus\_SOC)**.

**19.2.36 ManufacturerAccess() 0x0056 GaugingStatus**

This command returns the *GaugingStatus()* flags on *ManufacturerBlockAccess()* or *ManufacturerData()*. The 6-byte response consists of three 16-bit sub-registers: Gauging Status (bytes 0–1, bits 15–0), IT Status (bytes 2–3, bits 31–16), and DZT Status (bytes 4–5, bits 47–32).

|      |      |      |      |      |      |      |      |
|------|------|------|------|------|------|------|------|
| 47   | 46   | 45   | 44   | 43   | 42   | 41   | 40   |
| RSVD | RSVD | RSVD | RSVD | RSVD | RSVD | RSVD | RSVD |
| 39   | 38   | 37   | 36   | 35   | 34   | 33   | 32   |
| RSVD | RSVD | RSVD | RSVD | RSVD | RSVD | RSVD | DZT  |

|      |             |      |           |      |      |      |     |      |             |             |      |     |       |      |      |
|------|-------------|------|-----------|------|------|------|-----|------|-------------|-------------|------|-----|-------|------|------|
| 31   | 30          | 29   | 28        | 27   | 26   | 25   | 24  | 23   | 22          | 21          | 20   | 19  | 18    | 17   | 16   |
| RSVD | EDVC<br>ONV | RSVD | OCV<br>FR | LDMD | RX   | QMax | VDQ | NSFM | OCV<br>PRED | SLP<br>QMax | QEN  | VOK | R_DIS | RSVD | REST |
| 15   | 14          | 13   | 12        | 11   | 10   | 9    | 8   | 7    | 6           | 5           | 4    | 3   | 2     | 1    | 0    |
| RSVD | RSVD        | RSVD | RSVD      | RSVD | RSVD | RSVD | VLB | CF   | DSG         | EDV         | RSVD | TC  | TD    | FC   | FD   |

**DZT Status (Bits 47–32)**

**RSVD (Bits 47–33):** Reserved. Do not use.

**DZT (Bit 32):** Dynamic Impedance Track active

- 1 = Active when **DZT Gauging Configuration[PERF\_MODE]** is set
- 0 = Not active

**IT Status (Bits 31–16)**

**RSVD (Bit 31):** Reserved. Do not use.

**EDVCONV (Bit 30):** EDV convergence

- 1 = Converged
- 0 = Not converged

**RSVD (Bit 29):** Reserved. Do not use.

**OCVFR (Bit 28):** Open circuit voltage in flat region (during RELAX)

- 1 = Detected
- 0 = Not detected

**LDMD (Bit 27):** LOAD mode

- 1 = Constant Power
- 0 = Constant Current

**RX (Bit 26):** Resistance Update (toggles after every resistance update)

**QMax (Bit 25):** QMax Update (toggles after every QMax update)

**VDQ (Bit 24):** Discharge Qualified for Learning (opposite of the R\_DIS flag)

- 1 = Detected
- 0 = Not detected

**NSFM (Bit 23):** Negative Scale Factor Mode

- 1 = Negative Ra Scaling Factor Detected
- 0 = Negative Ra Scaling Factor Not Detected

**OCVPRED (Bit 22):** Open-circuit-voltage predicted

- 1 = Fast OCV prediction is performed in RELAX mode.
- 0 = Fast OCV prediction is not performed or not in RELAX mode

**SLPQMax (Bit 21):** OCV update in SLEEP mode

- 1 = Active. OCV reading in process
- 0 = Inactive. Completed OCV reading

**QEN (Bit 20):** Impedance Track™ gauging (Ra and QMax updates are enabled.)

- 1 = Enabled
- 0 = Disabled

**VOK (Bit 19):** Voltages are OK for QMax update. This flag is updated at exit of the RELAX mode.

- 1 = A DOD is saved for next QMax update.
- 0 = No DOD saved and QMax update is not possible.

**R\_DIS (Bit 18):** Resistance updates

1 = Disabled

0 = Enabled

**RSVD (Bit 17):** Reserved. Do not use.

**REST (Bit 16):** Rest

1 = OCV reading taken

0 = OCV reading not taken or not in RELAX

**Gauging Status (Bits 15–0)**
**RSVD (Bits 15–9):** Reserved. Do not use.

**VLB (Bit 8):** Very low battery warning

1 = Detected

0 = Not detected

**CF (Bit 7):** Condition Flag

1 = *MaxError()* > Max Error Limit (condition cycle needed)

0 = *MaxError()* < Max Error Limit (condition cycle not needed)

**DSG (Bit 6):** Discharge/relax

1 = Charging not detected

0 = Charging detected

**EDV (Bit 5):** End-of-discharge termination voltage

1 = Termination voltage reached during discharge

0 = Termination voltage not reached, or not in DISCHARGE mode

**RSVD (Bit 4):** Reserved. Do not use.

**TC (Bit 3):** Terminate charge

1 = Detected

0 = Not detected

**TD (Bit 2):** Terminate discharge

1 = Detected

0 = Not detected

**FC (Bit 1):** Fully charged

1 = Detected

0 = Not detected

**FD (Bit 0):** Fully discharged

1 = Detected

0 = Not detected

### 19.2.37 *ManufacturerAccess()* 0x0057 *ManufacturingStatus*

This command returns the *ManufacturingStatus()* flags on *ManufacturerBlockAccess()* or *ManufacturerData()*.

|        |         |       |        |          |        |        |         |
|--------|---------|-------|--------|----------|--------|--------|---------|
| 15     | 14      | 13    | 12     | 11       | 10     | 9      | 8       |
| CAL_EN | LT_TEST | RSVD  | RSVD   | RSVD     | RSVD   |        | FUSE_EN |
| 7      | 6       | 5     | 4      | 3        | 2      | 1      | 0       |
| BBR_EN | PF_EN   | LF_EN | FET_EN | GAUGE_EN | DSG_EN | CHG_EN | PCHG_EN |

**CAL\_EN (Bit 15):** CALIBRATION mode

1 = Enabled

0 = Disabled

**LT\_TEST (Bit 14):** LIFETIME SPEED UP mode

1 = Enabled

0 = Disabled

**RSVD (Bits 13–10):** Reserved. Do not use.

**FUSE\_EN (Bit 8):** Fuse action

1 = Enabled

0 = Disabled

**BBR\_EN (Bit 7):** Black Box Recorder

1 = Enabled

0 = Disabled

**PF\_EN (Bit 6):** Permanent Failure

1 = Enabled

0 = Disabled

**LF\_EN (Bit 5):** *Lifetime Data Collection*

1 = Enabled

0 = Disabled

**FET\_EN (Bit 4):** All FET action

1 = Enabled

0 = Disabled

**GAUGE\_EN (Bit 3):** Gas gauging

1 = Enabled

0 = Disabled

**DSG\_EN (Bit 2):** Discharge FET test

1 = Discharge FET test activated

0 = Disabled

**CHG\_EN (Bit 1):** Charge FET test

1 = Charge FET test activated

0 = Disabled

**PCHG\_EN (Bit 0):** Precharge FET test

1 = Precharge FET test activated

0 = Disabled

### 19.2.38 ManufacturerAccess() 0x0058 AFE Register

This command returns the *AFEResult()* values on *ManufacturerBlockAccess()* or *ManufacturerData()*. These are the AFE hardware registers and are intended for internal debug use only.

| Status   | Condition                             |
|----------|---------------------------------------|
| Activate | 0x0058 to <i>ManufacturerAccess()</i> |

**Action:** Output AFE Register values on *ManufacturerBlockAccess()* or *ManufacturerData()* in the following format: AABBCDDDEEFFGGHHIIJJKKLLMMNNOOPPQQRRSSTTUU where:

| Value | Description                                                                                          |
|-------|------------------------------------------------------------------------------------------------------|
| AA    | AFE Interrupt Status. AFE Hardware interrupt status (for example, wake time, push-button, and so on) |
| BB    | AFE FET Status. AFE FET status (for example, CHG FET, DSG FET, PCHG FET, FUSE input, and so on)      |
| CC    | AFE RXIN. AFE I/O port input status                                                                  |
| DD    | AFE Latch Status. AFE protection latch status                                                        |
| EE    | AFE Interrupt Enable. AFE interrupt control settings                                                 |
| FF    | AFE Control. AFE FET control enable setting                                                          |

| Value | Description                                                     |
|-------|-----------------------------------------------------------------|
| GG    | AFE RXIEN. AFE I/O input enable settings                        |
| HH    | AFE RLOUT. AFE I/O pins output status                           |
| II    | AFE RHOUT. AFE I/O pins output status                           |
| JJ    | AFE RHINT. AFE I/O pins interrupt status                        |
| KK    | AFE Cell Balance. AFE cell balancing enable settings and status |
| LL    | AFE ADC/CC Control. AFE ADC/CC Control settings                 |
| MM    | AFE ADC Mux Control. AFE ADC channel selections                 |
| NN    | AFE LED Control                                                 |
| OO    | AFE Control. AFE control on various HW based features           |
| PP    | AFE Timer Control. AFE comparator and timer control             |
| QQ    | AFE Protection. AFE protection delay time control               |
| RR    | AFE OCD. AFE OCD settings                                       |
| SS    | AFE SCC. AFE SCC settings                                       |
| TT    | AFE SCD1. AFE SCD1 settings                                     |
| UU    | AFE SCD2. AFE SCD2 settings                                     |

### 19.2.39 ManufacturerAccess() 0x005C VCT Voltage

This read block returns cell-based charging voltage used for charge termination detection. The output format is: aaAA.

| Value | Description                                            | Unit |
|-------|--------------------------------------------------------|------|
| AAaa  | Charging voltage used for charge termination detection | mA   |

### 19.2.40 ManufacturerAccess() 0x005E ChargingStatusExt

This command returns the *ChargingStatusExt()* flags on *ManufacturerBlockAccess()* or *ManufacturerData()*.

|      |                   |                   |                   |                   |                   |                   |                   |                   |                   |                   |               |               |               |               |               |
|------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|-------------------|---------------|---------------|---------------|---------------|---------------|
| 31   | 30                | 29                | 28                | 27                | 26                | 25                | 24                | 23                | 22                | 21                | 20            | 19            | 18            | 17            | 16            |
| RSVD | RSVD              | RSVD              | RSVD              | RSVD              | RSVD              | RSVD              | RSVD              | RSVD              | RSVD              | RSVD              | RSVD          | RSVD          | RSVD          | RSVD          | RSVD          |
| 15   | 14                | 13                | 12                | 11                | 10                | 9                 | 8                 | 7                 | 6                 | 5                 | 4             | 3             | 2             | 1             | 0             |
| RSVD | EVHT<br>M<br>TTH5 | EVHT<br>M<br>TTH4 | EVHT<br>M<br>TTH3 | EVHT<br>M<br>TTH2 | EVHT<br>M<br>TTH1 | EVMT<br>M<br>TTH5 | EVMT<br>M<br>TTH4 | EVMT<br>M<br>TTH3 | EVMT<br>M<br>TTH2 | EVMT<br>M<br>TTH1 | EVLTM<br>TTH5 | EVLTM<br>TTH4 | EVLTM<br>TTH3 | EVLTM<br>TTH2 | EVLTM<br>TTH1 |

**RSVD (Bits 31–15):** Reserved. Do not use.

**EVHTM\_TTH5 (Bit 14):** Elevated voltage extended charge degradation activation in EVHTM temperature range for time duration  $\geq$  EVHTM TTH5

- 1 = Active
- 0 = Inactive

**EVHTM\_TTH4 (Bit 13):** Elevated voltage extended charge degradation activation in EVHTM temperature range for time duration  $\geq$  EVHTM TTH4

- 1 = Active
- 0 = Inactive

**EVHTM\_TTH3 (Bit 12):** Elevated voltage extended charge degradation activation in EVHTM temperature range for time duration  $\geq$  EVHTM TTH3

- 1 = Active
- 0 = Inactive

**EVHTM\_TTH2 (Bit 11):** Elevated voltage extended charge degradation activation in EVHTM temperature range for time duration  $\geq$  EVHTM TTH2

- 1 = Active

0 = Inactive

**EVHTM\_TTH1 (Bit 10):** Elevated voltage extended charge degradation activation in EVHTM temperature range for time duration  $\geq$  EVHTM TTH1

1 = Active

0 = Inactive

**EVMTM\_TTH5 (Bit 9):** Elevated voltage extended charge degradation activation in EVMTM temperature range for time duration  $\geq$  EVMTM TTH5

1 = Active

0 = Inactive

**EVMTM\_TTH4 (Bit 8):** Elevated voltage extended charge degradation activation in EVMTM temperature range for time duration  $\geq$  EVMTM TTH4

1 = Active

0 = Inactive

**EVMTM\_TTH3 (Bit 7):** Elevated voltage extended charge degradation activation in EVMTM temperature range for time duration  $\geq$  EVMTM TTH3

1 = Active

0 = Inactive

**EVMTM\_TTH2 (Bit 6):** Elevated voltage extended charge degradation activation in EVMTM temperature range for time duration  $\geq$  EVMTM TTH2

1 = Active

0 = Inactive

**EVMTM\_TTH1 (Bit 5):** Elevated voltage extended charge degradation activation in EVMTM temperature range for time duration  $\geq$  EVMTM TTH1

1 = Active

0 = Inactive

**EVLTM\_TTH5 (Bit 4):** Elevated voltage extended charge degradation activation in EVLTM temperature range for time duration  $\geq$  EVLTM TTH5

1 = Active

0 = Inactive

**EVLTM\_TTH4 (Bit 3):** Elevated voltage extended charge degradation activation in EVLTM temperature range for time duration  $\geq$  EVLTM TTH4

1 = Active

0 = Inactive

**EVLTM\_TTH3 (Bit 2):** Elevated voltage extended charge degradation activation in EVLTM temperature range for time duration  $\geq$  EVLTM TTH3

1 = Active

0 = Inactive

**EVLTM\_TTH2 (Bit 1):** Elevated voltage extended charge degradation activation in EVLTM temperature range for time duration  $\geq$  EVLTM TTH2

1 = Active

0 = Inactive

**EVLTM\_TTH1 (Bit 0):** Elevated voltage extended charge degradation activation in EVLTM temperature range for time duration  $\geq$  EVLTM TTH1

1 = Active

0 = Inactive

#### 19.2.41 ManufacturerAccess() 0x0060 Lifetime Data Block 1

This command returns the **Lifetime Data** with the following format:

aaAAbbBBccCCddDeeEEffFFggGGhhHHiiIjjJJkkKKIILLmmMM.

| Value | Description           |
|-------|-----------------------|
| AAaa  | Cell 1 Max Voltage    |
| BBbb  | RSVD - Do not use     |
| CCcc  | RSVD - Do not use     |
| DDdd  | RSVD - Do not use     |
| EEee  | Cell 1 Min Voltage    |
| FFff  | RSVD - Do not use     |
| GGgg  | RSVD - Do not use     |
| HHhh  | RSVD - Do not use     |
| IIii  | RSVD - Do not use     |
| JJjj  | Max Charge Current    |
| KKkk  | Max Discharge Current |
| LLll  | Max Avg Dsg Current   |
| MMmm  | Max Avg Dsg Power     |

#### 19.2.42 ManufacturerAccess() 0x0061 Lifetime Data Block 2

This command returns the **Lifetime Data** with the following format:

aaAAbbBBccCCddDDeeEEffFFggGGhhHHiilJjJJ.

| Value     | Description       |
|-----------|-------------------|
| AAaa      | Min FCC-SOH mAh   |
| BBbb      | Min FCC-SOH cWh   |
| DDddCCcc  | CB Time Cell 1    |
| FFffEEee  | RSVD - Do not use |
| iHHhhGGgg | RSVD - Do not use |
| JJjllii   | RSVD - Do not use |

#### 19.2.43 ManufacturerAccess() 0x0062 Lifetime Data Block 3

This command returns the **Lifetime Data** with the following format:

aaAAbbBB.

| Value    | Description      |
|----------|------------------|
| BBbbAAaa | Total FW Runtime |

#### 19.2.44 ManufacturerAccess() 0x0063 Lifetime Data Block 4

This command returns the **Lifetime Data** with the following format:

aaAAbbBBccCCddDDeeEEffFFggGGhhHHiilJjJkkKKIILLmmMMnnNNooOOppPP.

| Value | Description        |
|-------|--------------------|
| AAaa  | No. of COV Events  |
| BBbb  | Last COV Event     |
| CCcc  | No. of CUV Events  |
| DDdd  | Last CUV Event     |
| EEee  | No. of OCD1 Events |
| FFff  | Last OCD1 Event    |
| GGgg  | No. of OCD2 Events |
| HHhh  | Last OCD2 Event    |
| IIii  | No. of OCC1 Events |
| JJjj  | Last OCC1 Event    |
| KKkk  | No. of OCC2 Events |
| LLll  | Last OCC2 Event    |
| MMmm  | No. of AOCD Events |
| NNnn  | Last AOCD Event    |

| Value | Description        |
|-------|--------------------|
| OOoo  | No. of ASCD Events |
| PPpp  | Last ASCD Event    |

### 19.2.45 ManufacturerAccess() 0x0064 Lifetime Data Block 5

This command returns the **Lifetime Data** with the following format:

aaAAbbBBccCCddDDeeEEffFFggGGhhHHiilljjJJkkKKllLLmmMMnnNNooOOppPP.

| Value | Description            |
|-------|------------------------|
| AAaa  | No. of AOCC Events     |
| BBbb  | Last AOCC Event        |
| CCcc  | No. of OTC Events      |
| DDdd  | Last OTC Event         |
| EEee  | No. of OTD Events      |
| FFff  | Last OTD Event         |
| GGgg  | No. of OTF Events      |
| HHhh  | Last OTF Event         |
| IIii  | No. Valid Charge Term  |
| JJjj  | Last Valid Charge Term |
| KKkk  | No. of Qmax Updates    |
| LLll  | Last Qmax Update       |
| MMmm  | No. of Ra Updates      |
| NNnn  | Last Ra Update         |
| OOoo  | No. of Ra Disable      |
| PPpp  | Last Ra Disable        |

### 19.2.46 ManufacturerAccess() 0x0065 Lifetime Data Block 6

This command returns the **Lifetime Data** with the following format:

aaAAbbBBccCCddDDeeEEffFFggGGhhHHiilljjJJkkKKllLLmmMMnnNNooOOppPP.

| Value    | Description                 |
|----------|-----------------------------|
| BBbbAAaa | Time Spent In LFT_UT RSOC A |
| DDddCCcc | Time Spent In LFT_UT RSOC B |
| FFffEEee | Time Spent In LFT_UT RSOC C |
| HHhhGGgg | Time Spent In LFT_UT RSOC D |
| JJjjIIii | Time Spent In LFT_UT RSOC E |
| LLllKKkk | Time Spent In LFT_UT RSOC F |
| NNnnMMmm | Time Spent In LFT_UT RSOC G |
| PPppOOoo | Time Spent In LFT_UT RSOC H |

### 19.2.47 ManufacturerAccess() 0x0066 Lifetime Data Block 7

This command returns the **Lifetime Data** with the following format:

aaAAbbBBccCCddDDeeEEffFFggGGhhHHiilljjJJkkKKllLLmmMMnnNNooOOppPP.

| Value    | Description                 |
|----------|-----------------------------|
| BBbbAAaa | Time Spent In LFT_LT RSOC A |
| DDddCCcc | Time Spent In LFT_LT RSOC B |
| FFffEEee | Time Spent In LFT_LT RSOC C |
| HHhhGGgg | Time Spent In LFT_LT RSOC D |
| JJjjIIii | Time Spent In LFT_LT RSOC E |
| LLllKKkk | Time Spent In LFT_LT RSOC F |
| NNnnMMmm | Time Spent In LFT_LT RSOC G |

| Value    | Description                 |
|----------|-----------------------------|
| PPppOOoo | Time Spent In LFT_LT RSOC H |

### 19.2.48 ManufacturerAccess() 0x0067 Lifetime Data Block 8

This command returns the **Lifetime Data** with the following format:

aaAAbbBBccCCddDDeeEEffFFggGGhhHHiillJJkkKKllLLmmMMnnNNooOOppPP.

| Value    | Description                  |
|----------|------------------------------|
| BBbbAAaa | Time Spent In LFT_STL RSOC A |
| DDddCCcc | Time Spent In LFT_STL RSOC B |
| FFffEEee | Time Spent In LFT_STL RSOC C |
| HHhhGGgg | Time Spent In LFT_STL RSOC D |
| JJjjIIii | Time Spent In LFT_STL RSOC E |
| LLlIKKkk | Time Spent In LFT_STL RSOC F |
| NNnnMMmm | Time Spent In LFT_STL RSOC G |
| PPppOOoo | Time Spent In LFT_STL RSOC H |

### 19.2.49 ManufacturerAccess() 0x0068 Lifetime Data Block 9

This command returns the **Lifetime Data** with the following format:

aaAAbbBBccCCddDDeeEEffFFggGGhhHHiillJJkkKKllLLmmMMnnNNooOOppPP.

| Value    | Description                 |
|----------|-----------------------------|
| BBbbAAaa | Time Spent In LFT_RT RSOC A |
| DDddCCcc | Time Spent In LFT_RT RSOC B |
| FFffEEee | Time Spent In LFT_RT RSOC C |
| HHhhGGgg | Time Spent In LFT_RT RSOC D |
| JJjjIIii | Time Spent In LFT_RT RSOC E |
| LLlIKKkk | Time Spent In LFT_RT RSOC F |
| NNnnMMmm | Time Spent In LFT_RT RSOC G |
| PPppOOoo | Time Spent In LFT_RT RSOC H |

### 19.2.50 ManufacturerAccess() 0x0069 Lifetime Data Block 10

This command returns the **Lifetime Data** with the following format:

aaAAbbBBccCCddDDeeEEffFFggGGhhHHiillJJkkKKllLLmmMMnnNNooOOppPP.

| Value    | Description                  |
|----------|------------------------------|
| BBbbAAaa | Time Spent In LFT_STH RSOC A |
| DDddCCcc | Time Spent In LFT_STH RSOC B |
| FFffEEee | Time Spent In LFT_STH RSOC C |
| HHhhGGgg | Time Spent In LFT_STH RSOC D |
| JJjjIIii | Time Spent In LFT_STH RSOC E |
| LLlIKKkk | Time Spent In LFT_STH RSOC F |
| NNnnMMmm | Time Spent In LFT_STH RSOC G |
| PPppOOoo | Time Spent In LFT_STH RSOC H |

### 19.2.51 ManufacturerAccess() 0x006A Lifetime Data Block 11

This command returns the **Lifetime Data** with the following format:

aaAAbbBBccCCddDDeeEEffFFggGGhhHHiillJJkkKKllLLmmMMnnNNooOOppPP.

| Value    | Description                 |
|----------|-----------------------------|
| BBbbAAaa | Time Spent In LFT_HT RSOC A |
| DDddCCcc | Time Spent In LFT_HT RSOC B |

| Value    | Description                 |
|----------|-----------------------------|
| FFfEEee  | Time Spent In LFT_HT RSOC C |
| HHhhGGgg | Time Spent In LFT_HT RSOC D |
| JJjjllii | Time Spent In LFT_HT RSOC E |
| LLlIKKkk | Time Spent In LFT_HT RSOC F |
| NNnnMMmm | Time Spent In LFT_HT RSOC G |
| PPppOOoo | Time Spent In LFT_HT RSOC H |

### 19.2.52 ManufacturerAccess() 0x006B Lifetime Data Block 12

This command returns the **Lifetime Data** with the following format:

aaAAbbBBccCCddDDeeEEffFFggGGhhHHiillJJkkKKllLLmmMMnnNNooOOppPP.

| Value    | Description                 |
|----------|-----------------------------|
| BBbbAAaa | Time Spent In LFT_OT RSOC A |
| DDddCCcc | Time Spent In LFT_OT RSOC B |
| FFfEEee  | Time Spent In LFT_OT RSOC C |
| HHhhGGgg | Time Spent In LFT_OT RSOC D |
| JJjjllii | Time Spent In LFT_OT RSOC E |
| LLlIKKkk | Time Spent In LFT_OT RSOC F |
| NNnnMMmm | Time Spent In LFT_OT RSOC G |
| PPppOOoo | Time Spent In LFT_OT RSOC H |

### 19.2.53 ManufacturerAccess() 0x006C Lifetime Data Block 13

This command returns the **Lifetime Data** with the following format:

AABBCCDDEEFFGGHHIIJJKKLLMMNNNOOPPQQRRSSTTUUVVXXYYZZ1122334455.

| Value | Description                              |
|-------|------------------------------------------|
| AA    | Max Temp Cell in RELAX mode              |
| BB    | Min Temp Cell in RELAX mode              |
| CC    | Max Delta Cell Temperature in RELAX mode |
| DD    | Max Temp Int Sensor in RELAX mode        |
| EE    | Min Temp Int Sensor in RELAX mode        |
| FF    | Max Temp FET in RELAX mode               |
| GG    | Max Temp TS1 in RELAX mode               |
| HH    | RSVD - Dot not use                       |
| II    | RSVD - Dot not use                       |
| JJ    | RSVD - Dot not use                       |
| KK    | Min Temp TS1 in RELAX mode               |
| LL    | RSVD - Dot not use                       |
| MM    | RSVD - Dot not use                       |
| NN    | RSVD - Dot not use                       |

### 19.2.54 ManufacturerAccess() 0x006D Lifetime Data Block 14

This command returns the **Lifetime Data** with the following format:

AABBCCDDEEFFGGHHIIJJKKLLMMNNNOOPPQQRRSSTTUUVVXXYYZZ1122334455.

| Value | Description                               |
|-------|-------------------------------------------|
| AA    | Max Temp Cell in CHARGE mode              |
| BB    | Min Temp Cell in CHARGE mode              |
| CC    | Max Delta Cell Temperature in CHARGE mode |
| DD    | Max Temp Int Sensor in CHARGE mode        |
| EE    | Min Temp Int Sensor in CHARGE mode        |
| FF    | Max Temp FET in CHARGE mode               |

| Value | Description                 |
|-------|-----------------------------|
| GG    | Max Temp TS1 in CHARGE mode |
| HH    | RSVD - Dot not use          |
| II    | RSVD - Dot not use          |
| JJ    | RSVD - Dot not use          |
| KK    | Min Temp TS1 in CHARGE mode |
| LL    | RSVD - Dot not use          |
| MM    | RSVD - Dot not use          |
| NN    | RSVD - Dot not use          |

### 19.2.55 ManufacturerAccess() 0x006E Lifetime Data Block 15

This command returns the **Lifetime Data** with the following format:

AABBCCDDEEFFGGHHIIJJKKLLMMNNOOPPQQRRSSTTUUVVXXYYZZ1122334455.

| Value | Description                                  |
|-------|----------------------------------------------|
| AA    | Max Temp Cell in DISCHARGE mode              |
| BB    | Min Temp Cell in DISCHARGE mode              |
| CC    | Max Delta Cell Temperature in DISCHARGE mode |
| DD    | Max Temp Int Sensor in DISCHARGE mode        |
| EE    | Min Temp Int Sensor in DISCHARGE mode        |
| FF    | Max Temp FET in DISCHARGE mode               |
| GG    | Max Temp TS1 in DISCHARGE mode               |
| HH    | RSVD - Do not use                            |
| II    | RSVD - Do not use                            |
| JJ    | RSVD - Do not use                            |
| KK    | Min Temp TS1 in DISCHARGE mode               |
| LL    | RSVD - Do not use                            |
| MM    | RSVD - Do not use                            |
| NN    | RSVD - Do not use                            |

### 19.2.56 ManufacturerAccess() 0x006F Power Events

This command returns the **Power Events** with the following format:

AABBCCDD.

| Value | Description           |
|-------|-----------------------|
| AA    | No. of Shutdowns      |
| BB    | No. of Partial Resets |
| CC    | No. of Full Resets    |
| DD    | No. of WDT Resets     |

### 19.2.57 ManufacturerAccess() 0x0070 ManufacturerInfo

This command returns ManufacturerInfo on *ManufacturerBlockAccess()* or *ManufacturerData()*.

| Status   | Condition                             | Action                                                                                                                                                                                            |
|----------|---------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Activate | 0x0070 to <i>ManufacturerAccess()</i> | Output 32 bytes of ManufacturerInfo on <i>ManufacturerBlockAccess()</i> or <i>ManufacturerData()</i> in the following format:<br>AABBCCDDEEFFGGHHIIJJKKLLMMNNOOPPQQRRSSTTUUVVWWXXYYZZ112233445566 |

### 19.2.58 ManufacturerAccess() 0x0071 DStatus1

This command returns the cell voltages, PACK voltage, BAT voltage, cell currents, cell powers, power, and average power on *ManufacturerBlockAccess()* or *ManufacturerData()*.

| Status   | Condition                                                                 |
|----------|---------------------------------------------------------------------------|
| Activate | 0x0071 to <i>ManufacturerBlockAccess()</i> or <i>ManufacturerAccess()</i> |

**Action:** Output 32 bytes of data on *ManufacturerBlockAccess()* or *ManufacturerData()* in the following format: aaAAbbBBccCCddDDeeEEffFFggGGhhHHiiIjjJJkkKKllLLmmMMnnNNooOOppPP where:

| Value | Description                                                                     | Unit |
|-------|---------------------------------------------------------------------------------|------|
| AAaa  | Cell Voltage 1                                                                  | mV   |
| BBbb  | RSVD - Do not use                                                               | mV   |
| CCcc  | RSVD - Do not use                                                               | mV   |
| DDdd  | RSVD - Do not use                                                               | mV   |
| EEee  | RSVD - Do not use                                                               | mV   |
| FFff  | PACK voltage. Voltage at the PACK+ pin.                                         | mV   |
| GGgg  | Cell Current 1. Simultaneous current measured during Cell Voltage 1 measurement | mA   |
| HHhh  | RSVD - Do not use                                                               | mA   |
| IIii  | RSVD - Do not use                                                               | mA   |
| JJjj  | RSVD - Do not use                                                               | mA   |
| KKkk  | Cell Power 1. Calculated using Cell Voltage1 and Cell Current 1 data            | cW   |
| LLll  | RSVD - Do not use                                                               | cW   |
| MMmm  | RSVD - Do not use                                                               | cW   |
| NNnn  | RSVD - Do not use                                                               | cW   |
| OOoo  | Power calculated by <i>Voltage()</i> × <i>Current()</i>                         | cW   |
| PPpp  | Average Power                                                                   | cW   |

### 19.2.59 *ManufacturerAccess()* 0x0072 *DAStatus2*

This command returns the internal temperature sensor, TS1, cell temp, FET temp, gauging temperature, user temperature, and cell voltages without IR loss compensation on *ManufacturerBlockAccess()* or *ManufacturerData()*.

| Status   | Condition                                                                 |
|----------|---------------------------------------------------------------------------|
| Activate | 0x0072 to <i>ManufacturerBlockAccess()</i> or <i>ManufacturerAccess()</i> |

**Action:** Output 24 bytes of temperature data values on *ManufacturerBlockAccess()* or *ManufacturerData()* in the following format: aaAAbbBBccCCddDDeeEEffFFggGGhhHHiiIjjJJkkKKllLLmmMM where:

| Value | Description                                                                          | Unit  |
|-------|--------------------------------------------------------------------------------------|-------|
| AAaa  | Int Temperature                                                                      | 0.1 K |
| BBbb  | TS1 Temperature                                                                      | 0.1 K |
| CCcc  | RSVD - Do not use.                                                                   | 0.1 K |
| DDdd  | RSVD - Do not use.                                                                   | 0.1 K |
| EEee  | RSVD - Do not use.                                                                   | 0.1 K |
| FFff  | Cell Temperature                                                                     | 0.1 K |
| GGgg  | FET Temperature                                                                      | 0.1 K |
| HHhh  | Gauging Temperature                                                                  | 0.1 K |
| IIii  | User Temperature (written by <i>ManufacturerAccess()</i> 0x3008 <i>WriteTemp()</i> ) | 0.1 K |
| JJjj  | Uncompensated Cell Voltage 1                                                         | mV    |
| KKkk  | RSVD - Do not use.                                                                   | mV    |
| LLll  | RSVD - Do not use.                                                                   | mV    |
| MMmm  | RSVD - Do not use.                                                                   | mV    |

### 19.2.60 *ManufacturerAccess()* 0x0073 *GaugeStatus1*

This command instructs the device to return Impedance Track™ related gauging information on *ManufacturerBlockAccess()* or *ManufacturerData()*.

| Status   | Condition                                                                 |
|----------|---------------------------------------------------------------------------|
| Activate | 0x0073 to <i>ManufacturerBlockAccess()</i> or <i>ManufacturerAccess()</i> |

**Action:** Output 32 bytes of IT data values on *ManufacturerBlockAccess()* or *ManufacturerData()* in the following format: aaAAabbBBccCCddDDeeEEffFFggGGhhHHiilJjJJkkKKILLmmMMnnNNooOOppPP where:

| Value | Description                                                                                                                                              | Unit               |
|-------|----------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|
| AAaa  | True Rem Q. True remaining capacity in mAh from IT simulation before any filtering or smoothing function. This value can be negative or higher than FCC. | mAh                |
| BBbb  | True Rem E. True remaining energy in cWh from IT simulation before any filtering or smoothing function. This value can be negative or higher than FCC.   | cWh                |
| CCcc  | Initial Q. Initial capacity calculated from IT simulation                                                                                                | mAh                |
| DDdd  | Initial E. Initial energy calculated from IT simulation                                                                                                  | cWh                |
| EEee  | True FCC Q. True full charge capacity from IT simulation without the effects of any smoothing function                                                   | mAh                |
| FFff  | True FCC E. True full charge energy from IT simulation without the effects of any smoothing function                                                     | cWh                |
| GGgg  | T <sub>sim</sub> . Temperature during the last simulation run.                                                                                           | 0.1 K              |
| HHhh  | T <sub>ambient</sub> . Current assumed ambient temperature used by the IT algorithm for thermal modeling                                                 | 0.1 K              |
| IIii  | RaScale 0. Ra table scaling factor of Cell 1                                                                                                             | —                  |
| JJjj  | RSVD - Do not use                                                                                                                                        | —                  |
| KKkk  | RSVD - Do not use                                                                                                                                        | —                  |
| LLll  | RSVD - Do not use                                                                                                                                        | —                  |
| MMmm  | CompRes 0. Last temperature compensated Resistance of Cell 1                                                                                             | 2 <sup>-10</sup> Ω |
| NNnn  | RSVD - Do not use                                                                                                                                        | 2 <sup>-10</sup> Ω |
| OOoo  | RSVD - Do not use                                                                                                                                        | 2 <sup>-10</sup> Ω |
| PPpp  | RSVD - Do not use                                                                                                                                        | 2 <sup>-10</sup> Ω |

### 19.2.61 *ManufacturerAccess()* 0x0074 *GaugeStatus2*

This command instructs the device to return Impedance Track™ related gauging information on *ManufacturerBlockAccess()* or *ManufacturerData()*.

| Status   | Condition                                                                 |
|----------|---------------------------------------------------------------------------|
| Activate | 0x0074 to <i>ManufacturerBlockAccess()</i> or <i>ManufacturerAccess()</i> |

**Action:** Output 32 bytes of IT data values on *ManufacturerBlockAccess()* or *ManufacturerData()* in the following format: AABBCCDDEEFFggGGhhHHiilJjJJkkKKILLmmMMnnNNooOOppPPqqQQrrRRssSS where:

| Value | Description                                                                                                                                                                                                                                                                                                                                                                                                                                   | Unit |
|-------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|
| AA    | Pack Grid. Active pack impedance grid point (minimum of Cell Grid 0 to Cell Grid 3). This data is only valid during DISCHARGE mode when [R_DIS] = 0. If [R_DIS] = 1 or not discharging, this value is not updated.                                                                                                                                                                                                                            | —    |
| BB    | BB: LStatus—Learned status of resistance table<br>Bit 3   Bit 2   Bit 1   Bit 0<br>QMax   ITEN   CF1   CF0<br>CF1, CF0: QMax Status<br>0,0 = Battery OK<br>0,1 = QMax is first updated in learning cycle.<br>1,0 = QMax and resistance table updated in learning cycle<br>ITEN: IT enable<br>0 = IT disabled<br>1 = IT enabled<br>QMax: QMax update in field<br>0 = QMax has not been updated in the field.<br>1 = QMax updated in the field. | —    |
| CC    | Cell Grid 0. Active grid point of Cell 1. This data is only valid during DISCHARGE mode when [R_DIS] = 0. If [R_DIS] = 1 or not discharging, this value is not updated.                                                                                                                                                                                                                                                                       | —    |
| DD    | Cell Grid 1. Active grid point of Cell 2. This data is only valid during DISCHARGE mode when [R_DIS] = 0. If [R_DIS] = 1 or not discharging, this value is not updated.                                                                                                                                                                                                                                                                       | —    |
| EE    | Cell Grid 2. Active grid point of Cell 3. This data is only valid during DISCHARGE mode when [R_DIS] = 0. If [R_DIS] = 1 or not discharging, this value is not updated.                                                                                                                                                                                                                                                                       | —    |
| FF    | Cell Grid 3. Active grid point of Cell 4. This data is only valid during DISCHARGE mode when [R_DIS] = 0. If [R_DIS] = 1 or not discharging, this value is not updated.                                                                                                                                                                                                                                                                       | —    |

| Value    | Description                                                                   | Unit  |
|----------|-------------------------------------------------------------------------------|-------|
| HHhhGGgg | State Time. Time passed since the last state change (DISCHARGE, CHARGE, REST) | s     |
| IIii     | DOD0_0. Depth of discharge for Cell 1                                         | —     |
| JJjj     | RSVD - Do not use                                                             | —     |
| KKkk     | RSVD - Do not use                                                             | —     |
| LLll     | RSVD - Do not use                                                             | —     |
| MMmm     | DOD0 Passed Q. Passed capacity since the last DOD0 update                     | mAh   |
| NNnn     | DOD0 Passed E. Passed energy since last DOD0 update                           | cWh   |
| OOoo     | DOD0 Time. Time passed since the last DOD0 update                             | hr/16 |
| PPpp     | DODEOC 0. Depth of discharge at end of charge of Cell 1                       | —     |
| QQqq     | RSVD - Do not use                                                             | —     |
| RRrr     | RSVD - Do not use                                                             | —     |
| SSss     | RSVD - Do not use                                                             | —     |

### 19.2.62 ManufacturerAccess() 0x0075 GaugeStatus3

This command instructs the device to return Impedance Track™ related gauging information on *ManufacturerBlockAccess()* or *ManufacturerData()*.

| Status   | Condition                                                                 |
|----------|---------------------------------------------------------------------------|
| Activate | 0x0075 to <i>ManufacturerBlockAccess()</i> or <i>ManufacturerAccess()</i> |

**Action:** Output 24 bytes of IT data values on *ManufacturerBlockAccess()* or *ManufacturerData()* in the following format: aaAAbBBbCCcCddDDeeEEffFFggGGhhHHIilJjJkKkKILL where:

| Value | Description                                                                                                | Unit  |
|-------|------------------------------------------------------------------------------------------------------------|-------|
| AAaa  | QMax 0. QMax of Cell 1                                                                                     | mAh   |
| BBbb  | RSVD - Do not use                                                                                          | mAh   |
| CCcc  | RSVD - Do not use                                                                                          | mAh   |
| DDdd  | RSVD - Do not use                                                                                          | mAh   |
| EEee  | QMax DOD0_0. DOD0 saved to be used for next QMax update of Cell 1. The value is only valid when [VOK] = 1. | —     |
| FFff  | RSVD - Do not use                                                                                          | —     |
| GGgg  | RSVD - Do not use                                                                                          | —     |
| HHhh  | RSVD - Do not use                                                                                          | —     |
| IIii  | QMax Passed Q. Pass capacity since last QMax DOD value is saved.                                           | mAh   |
| JJjj  | QMax Time. Time passed since last QMax DOD value is saved.                                                 | hr/16 |
| KKkk  | Temp k. Thermal Model temperature factor                                                                   | —     |
| LLll  | Temp a. Thermal Model temperature                                                                          | —     |

### 19.2.63 ManufacturerAccess() 0x0076 CBStatus

This command instructs the device to return cell balance time information on *ManufacturerBlockAccess()* or *ManufacturerData()*.

| Status   | Condition                                                                 |
|----------|---------------------------------------------------------------------------|
| Activate | 0x0076 to <i>ManufacturerBlockAccess()</i> or <i>ManufacturerAccess()</i> |

**Action:** Output 19 bytes of IT data values on *ManufacturerBlockAccess()* or *ManufacturerData()* in the following format: aaAAbBBbCCcCddDDeeEEffFFggGGhhHHIilJj where:

| Value | Description                                                   | Unit |
|-------|---------------------------------------------------------------|------|
| AAaa  | Cell balance time 0. Calculated cell balancing time of Cell 1 | s    |
| BBbb  | RSVD - Do not use                                             | s    |
| CCcc  | RSVD - Do not use                                             | s    |
| DDdd  | RSVD - Do not use                                             | s    |
| EEee  | Cell 1 balance DOD                                            | —    |

| Value | Description                                                                                                                                                                                                                                                                                                                                       | Unit |
|-------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|
| FFff  | RSVD - Do not use                                                                                                                                                                                                                                                                                                                                 | —    |
| GGgg  | RSVD - Do not use                                                                                                                                                                                                                                                                                                                                 | —    |
| HHhh  | RSVD - Do not use                                                                                                                                                                                                                                                                                                                                 | —    |
| IIii  | Total DOD Charge                                                                                                                                                                                                                                                                                                                                  | —    |
| jj    | Cell Balance Status<br>Bit 3   Bit 2   Bit 1   Bit 0<br>CELL4   CELL3   CELL2   CELL1<br>CELL1: Cell 1 balance circuit<br>0 = Inactive<br>1 = Active<br>CELL2: Cell 2 balance circuit<br>0 = Inactive<br>1 = Active<br>CELL3: Cell 3 balance circuit<br>0 = Inactive<br>1 = Active<br>CELL4: Cell 4 balance circuit<br>0 = Inactive<br>1 = Active | —    |

#### 19.2.64 ManufacturerAccess() 0x0077 StateofHealth

This command returns the state-of-health FCC in mAh and energy in cWh with the following format:

aaAAbbBB.

| Value | Description            | Unit |
|-------|------------------------|------|
| AAaa  | State-of-Health FCC    | mAh  |
| BBbb  | State-of-Health energy | cWh  |

#### 19.2.65 ManufacturerAccess() 0x0078 FilterCapacity

This command instructs the device to return the filtered remaining capacity and full charge capacity even if **[SMOOTH] = 0** on *ManufacturerBlockAccess()* or *ManufacturerData()*.

| Status   | Condition                                                                 |
|----------|---------------------------------------------------------------------------|
| Activate | 0x0078 to <i>ManufacturerBlockAccess()</i> or <i>ManufacturerAccess()</i> |

**Action:** Output 8 bytes of IT data values on *ManufacturerBlockAccess()* or *ManufacturerData()* in the following format: aaAAbbBBccCCddDD where:

| Value | Description                   | Unit |
|-------|-------------------------------|------|
| AAaa  | Filtered remaining capacity   | mAh  |
| BBbb  | Filtered remaining energy     | cWh  |
| CCcc  | Filtered full charge capacity | mAh  |
| DDdd  | Filtered full charge energy   | cWh  |

#### 19.2.66 ManufacturerAccess() 0x0079 RSOCWrite

This command is typically used for testing purposes and will allow a specific value to be loaded into RSOC. However, subsequent IT simulation can overwrite this value. This command works only in UNSEALED mode. Additionally, this command will work with or without smoothing enabled.

#### 19.2.67 ManufacturerAccess() 0x007A ManufacturerInfoB

This command returns **ManufacturerInfoB** on *ManufacturerBlockAccess()* or *ManufacturerData()*.

| Status   | Condition                             | Action                                                                                                                                                                                                         |
|----------|---------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Activate | 0x007A to <i>ManufacturerAccess()</i> | Output 32 bytes of <i>ManufacturerInfoB</i> on <i>ManufacturerBlockAccess()</i> or <i>ManufacturerData()</i> in the following format:<br>AABBCCDDEEFFGGHHIIJJKKLLMMNNNOOPPQQRRSSTTUUVVW<br>WXXYYZZ112233445566 |

### 19.2.68 *ManufacturerAccess()* 0x007B *ManufacturerInfoC*

This command enables ***ManufacturerInfoC*** read/write on *ManufacturerBlockAccess()* and *ManufacturerData()* in SEALED, UNSEALED, and FULL ACCESS modes.

| Status   | Condition                             | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|----------|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Activate | 0x007B to <i>ManufacturerAccess()</i> | Output 32 bytes of <i>ManufacturerInfoC</i> on <i>ManufacturerBlockAccess()</i> or <i>ManufacturerData()</i> in the following format:<br>AABBCCDDEEFFGGHHIIJJKKLLMMNNNOOPPQQRRSSTTUUVVW<br>WXXYYZZ112233445566<br>A two-word MfgInfoC Write MAC sequence, which is programmable using <i>ManufacturerAccess()</i> 0x0035 Security Keys, is required to enable writing these registers during SEALED mode. Refer to the description in <a href="#">Manufacturer Info C</a> for further details. |

### 19.2.69 *ManufacturerAccess()* 0x007E *Lifetime Data Block 16*

This command returns the ***Lifetime Data*** with the following format:

aaAAbbBBccCCddDDeeEEffFFggGGhhHHiilljjJJkkKKllLLmmMMnnNNooOOppPP.

| Value    | Description                  |
|----------|------------------------------|
| BBbbAAaa | Time Spent In LFT_UUT RSOC A |
| DDddCCcc | Time Spent In LFT_UUT RSOC B |
| FFffEEee | Time Spent In LFT_UUT RSOC C |
| HHhhGGgg | Time Spent In LFT_UUT RSOC D |
| JJjjIi   | Time Spent In LFT_UUT RSOC E |
| LLlIKKkk | Time Spent In LFT_UUT RSOC F |
| NNnnMMmm | Time Spent In LFT_UUT RSOC G |
| PPppOOoo | Time Spent In LFT_UUT RSOC H |

### 19.2.70 *ManufacturerAccess()* 0x0098 *AccumulationChargeEnable*

This command enables accumulated charge measurement in the CHARGE direction by setting **[ACCHG\_EN]**.

### 19.2.71 *ManufacturerAccess()* 0x0099 *AccumulationDischargeEnable*

This command enables accumulated charge measurement in the DISCHARGE direction by setting **[ACDSG\_EN]**.

### 19.2.72 *ManufacturerAccess()* 0x009A *AccumulationReset*

This command resets the accumulated charge and time values, and clears **[ACTHR]** if previously triggered.

### 19.2.73 *ManufacturerAccess()* 0x009B *AccumulationStop*

This command stops the accumulated charge and time accumulation.

### 19.2.74 *ManufacturerAccess()* 0x009C *AccumulationStart*

This command starts the accumulated charge and time accumulation.

### 19.2.75 *ManufacturerAccess()* 0x009D *AccumulationChargeThreshold*

This command can be used to set **Accum Charge Threshold** with the following format: aaAA.

| Value | Description            | Unit |
|-------|------------------------|------|
| AAAaa | Accum Charge Threshold | mAh  |

### 19.2.76 ManufacturerAccess() 0x009E AccumulationDischargeThreshold

This command can be used to set **Accum Discharge Threshold** with the following format: aaAA.

| Value | Description               | Unit |
|-------|---------------------------|------|
| AAAaa | Accum Discharge Threshold | mAh  |

### 19.2.77 ManufacturerAccess() 0x009F AccumulatedChargeTime

This command returns the accumulated charge and time values in the following format: aaAAbbBBccCC.

| Value    | Description        | Unit |
|----------|--------------------|------|
| BBbbAAaa | Accumulated Time   | s    |
| CCcc     | Accumulated Charge | mAh  |

### 19.2.78 ManufacturerAccess() 0x00B0 ChargingVoltageOverride

#### Note

Before writing this command, the Override Key unlock sequence must be sent to register 0x00. The Override Key values can be read using [ManufacturerAccess\(\) 0x0035 Security Keys](#). The default Override Key is 0x2D18 (first word) and 0x2E9B (second word). Send the first word to register 0x00 (LSB first), then send the second word to register 0x01 to unlock. The unlock window is 4 seconds; the write must complete within this time.

#### Note

After completing a write to this command, allow at least 100 ms before initiating the next write sequence. This ensures the device has time to complete internal flash operations.

This command enables writing the five advanced charge algorithm charging voltage values in SEALED mode. The data written will take immediate effect. However, to prevent over-usage of this command from causing severe data flash wear, **Sealed Write.Hold Off** sets the delay time before the new charging voltage values are written to data flash. **Sealed Write.Lockout** sets the period of time after the value is written to data flash when 0x00B0 command is ignored. The maximum limit on values allowed to write is **CHGV Override Max**, and the minimum limit on values allowed to write is **CHGV Override Min**. The format is as follows: aaAAbbBBccCCddDDeeEE, where:

| Value | Description                                | Unit |
|-------|--------------------------------------------|------|
| AAaa  | Low Temperature Charging Voltage           | mV   |
| BBbb  | Standard Temperature Low Charging Voltage  | mV   |
| CCcc  | Standard Temperature High Charging Voltage | mV   |
| DDdd  | High Temperature Charging Voltage          | mV   |
| EEee  | Recommended Temperature Charging Voltage   | mV   |

### 19.2.79 ManufacturerAccess() 0x00B2 ChargingCurrentOverride

#### Note

Before writing this command, the Override Key unlock sequence must be sent to register 0x00. The Override Key values can be read using [ManufacturerAccess\(\) 0x0035 Security Keys](#). The default Override Key is 0x2D18 (first word) and 0x2E9B (second word). Send the first word to register 0x00 (LSB first), then send the second word to register 0x01 to unlock. The unlock window is 4 seconds; the write must complete within this time.

### Note

After completing a write to this command, allow at least 100 ms before initiating the next write sequence. This ensures the device has time to complete internal flash operations.

This command enables writing the thirty advanced charge algorithm charging current values in SEALED mode. The data written will take immediate effect. However, to prevent over-usage of this command from causing severe data flash wear, **Sealed Write.Hold Off** sets the delay time before the new charging current value is written to data flash. **Sealed Write.Lockout** sets the period of time after the value is written to data flash when 0x00B2 command is ignored. The maximum limit on values allowed to write is **CHGI Override Max** and minimum limit on values allowed to write is **CHGI Override Min**. The format is as following: aaAAbbBBccCCddDDeeEEffFFggGGhhHHiiIjjJJkkKKllLLmmMMnnNNooOO where:

| Value | Description                                            | Unit |
|-------|--------------------------------------------------------|------|
| AAaa  | Low Temperature Charging Current Low                   | mA   |
| BBbb  | Low Temperature Charging Current Med                   | mA   |
| CCcc  | Low Temperature Charging Current High                  | mA   |
| DDdd  | Standard Temperature Low Charging Current Low          | mA   |
| EEee  | Standard Temperature Low Charging Current Med          | mA   |
| FFff  | Standard Temperature Low Charging Current High         | mA   |
| GGgg  | Standard Temperature High Charging Current Low         | mA   |
| HHhh  | Standard Temperature High Charging Current Med         | mA   |
| IIii  | Standard Temperature High Charging Current High        | mA   |
| JJii  | High Temperature Charging Voltage Charging Current Low | mA   |
| KKkk  | High Temperature Charging Charging Current Med         | mA   |
| LLll  | High Temperature Charging Charging Current High        | mA   |
| MMmm  | Recommended Temperature Charging Current Low           | mA   |
| NNnn  | Recommended Temperature Charging Current Med           | mA   |
| OOoo  | Recommended Temperature Charging Current High          | mA   |

### 19.2.80 ManufacturerAccess() 0x00B4 RTC Access

The command is to read/write RTC data. It can work under SEALED, UNSEALED, and FULL ACCESS mode.

The RTC begins incrementing once the Timer/Date/Counter registers are programmed and will continue incrementing through all non-POR resets. If the Timer/Date/Counter registers are being written just as a non-POR reset occurs, the value being written will be corrupted and set to 0.

RTC information is read/written in the format of aaAABBbbCCccDDdd.

| Value | Description  |
|-------|--------------|
| AAaa  | Year         |
| BB    | Month        |
| bb    | Day of month |
| CC    | Day of week  |
| cc    | Hour         |
| DD    | Minute       |
| dd    | second       |

### Note

- The range of AAaa (Year) is from 0 to 4096
- The range of BB (Month) is from 1 to 12
- The range of bb (Day of month) is from 1 to 31
- The range of CC (Day of week) is from 0 to 6
- The range of cc (Hour) is from 0 to 23
- The range of DD (Minute) is from 0 to 59
- The range of dd (Second) is from 0 to 60

### 19.2.81 ManufacturerAccess() 0x00B5 ChargerStatus

This command returns the *ChargerStatus()* register indicating the current state of the linear charger, charger detection, and the active charge current derate percentage. This command returns **4 bytes**. Bytes 0–1 contain the ChargerStatus bits (bits 15–0). Bytes 2–3 contain the active derate percentage (bits 31–16).

|                   |      |      |      |      |      |      |      |      |             |             |       |      |     |              |             |
|-------------------|------|------|------|------|------|------|------|------|-------------|-------------|-------|------|-----|--------------|-------------|
| 31                | 30   | 29   | 28   | 27   | 26   | 25   | 24   | 23   | 22          | 21          | 20    | 19   | 18  | 17           | 16          |
| DERATE_PCT [15:0] |      |      |      |      |      |      |      |      |             |             |       |      |     |              |             |
| 15                | 14   | 13   | 12   | 11   | 10   | 9    | 8    | 7    | 6           | 5           | 4     | 3    | 2   | 1            | 0           |
| RSVD              | RSVD | RSVD | RSVD | RSVD | RSVD | RSVD | RSVD | RSVD | LIN<br>OFFT | LIN<br>SUPP | IDOFF | IDON | LIN | CHGR<br>_DET | LIN<br>CHGR |

**DERATE\_PCT (Bits 31–16):** Active charge current derate percentage. Returns the maximum of the temperature derate and the pack-bat derate currently being applied to *ChargingCurrent()*. A value of 0 indicates no derating is active. Both derate axes must be enabled via *Charger Configuration*[TEMPDERATE] and/or *Charger Configuration*[PACKBATDERATE] for a non-zero value to appear. Read-only.

0 = No charge current derating active

1–99 = Active derate percentage applied to *ChargingCurrent()*

**RSVD (Bits 15–7):** Reserved. Do not use.

**LINOFFT (Bit 6):** Device in Linear charger off-timer state.

1 = Device currently in Linear charger off-timer state

0 = Device currently not in Linear charger off-timer state

**LINSUPP (Bit 5):** Device in Linear charger Supplement state.

1 = Device currently in Linear charger Supplement state

0 = Device currently not in Linear charger Supplement state

**IDOFF (Bit 4):** Device in Ideal Diode OFF state.

1 = Device currently in Ideal Diode OFF state

0 = Device currently not in Ideal Diode OFF state

**IDON (Bit 3):** Device in Ideal Diode ON state.

1 = Device currently in Ideal Diode ON state

0 = Device currently not in Ideal Diode ON state

**LIN (Bit 2):** Device in Linear Mode status

1 = Device currently in Linear Mode

0 = Device currently not in Linear Mode

**CHGR\_DET (Bit 1):** Charger Detect status. This bit indicates whether an upstream charger is detected based on the voltage difference between PACK and BAT. The bit is set when (VPACK – VBAT) >= **CHGR\_DET On Voltage** (default 0 mV) and cleared when (VBAT – VPACK) >= **CHGR\_DET Off Voltage** (default 10 mV). The separate On and Off thresholds provide hysteresis to prevent noise-induced toggling.

1 = Upstream charger attached/present

0 = Upstream charger removed/not present

**LINCHGR (Bit 0):** Linear charger enabled status. Reflects the state of the *Charging Configuration Ext*[LINCHGR] setting.

- 1 = Linear charger hardware and firmware enabled
- 0 = Linear charger hardware and firmware disabled

### 19.2.82 *ManufacturerAccess()* 0x00D2 ISI Current State

The ISI\_CURR\_STATE command is used to retrieve the current state of the ISI algorithm. It indicates the current state of the ISI algorithm based on the internal short current.

The CurrStateFine field is a 2-bit field that indicates the current state of the ISI algorithm. The field is updated based on the value of the internal short current as follows:

CURR\_STATE\_HIGH (0x3): The internal short current is above 200mA.

CURR\_STATE\_MEDIUM (0x2): The internal short current is between 100mA and 200mA (inclusive).

CURR\_STATE\_LOW (0x1): The internal short current is between 10mA and 100mA (inclusive).

CURR\_STATE\_OFF (0x0): The internal short current is below 10mA.

The ISI\_CURR\_STATE command returns the current value of the CurrStateFine field, which can be used to determine the current state of the ISI algorithm.

### 19.2.83 *ManufacturerAccess()* 0x00F0 IATAShutdown

This command, when used in conjunction with the *[IATA\_SHUT]* bit in the *IATA Flag* register, enables the gauge to enter IATA shutdown (provided certain other requirements are met).

### 19.2.84 *ManufacturerAccess()* 0x00F1 IATARm

This command is used in relation to IATA to read out the stored *IATARm* value.

### 19.2.85 *ManufacturerAccess()* 0x00F2 IATAFcc

This command is used in relation to IATA to read out the stored *IATAFcc* value.

### 19.2.86 *ManufacturerAccess()* 0x0F00 ROM Mode

This command sends the device into ROM mode in preparation for firmware reprogramming. To enter ROM mode, the device must be in FULL ACCESS mode. To return from ROM mode to FW mode, issue the SMBus command 0x08.

---

#### Note

Command 0x0033 also puts the device in ROM mode (for backwards compatibility with the bq30zxy device).

---

### 19.2.87 *ManufacturerAccess()* 0x3008 WriteTemp

This command, available in SEALED and UNSEALED modes, is used to write the temperature register when enabled by setting **Settings:Temperature Enable[USER\_TS] = 1**. In this case, the gauge's cell temperature inputs (TS1 through TS3) are ignored.

---

#### Note

When this feature is used, the temperature must be written in 0.1 K.

---

### 19.2.88 *ManufacturerAccess()* 0x4000–0x5FFF DataFlashAccess

Accessing data flash (DF) is only supported by the *ManufacturerBlockAccess()* by addressing the physical address. Numeric data items in DF are in little endian byte order.

To write to the DF, send the starting address, followed by the DF data block. The DF data block is the intended revised DF data to be updated to DF. The size of the DF data block ranges from 1 byte to 32 bytes. All individual numeric data items must be sent in little endian byte order.

Write to DF example:

Assuming: data1 locates at address 0x4000 and data2 locates at address 0x4002.

Both data1 and data2 are U2 type.

To update data1 and data2, send an SMBus block write with command = 0x44

block = starting address + DF data block

= 0x00 + 0x40 + data1\_LowByte + data1\_HighByte + data2\_LowByte + data2\_HighByte

To read the DF, send an SMBus block write to the *ManufacturerBlockAccess()*, followed by the starting address, then send an SMBus block read to the *ManufacturerBlockAccess()*. The return data contains the starting address followed by 32 bytes of DF data; items are in little endian byte order.

Read from DF example:

Assuming: data1 locates at address 0x4000 and data2 locates at address 0x4002.

a. Send SMBus write block with command 0x44, block = 0x00 + 0x40

b. Send SMBus read block with command 0x44

The returned block = starting address + 32 bytes of DF data

= 0x00 + 0x40 + data1\_LowByte + data1\_HighByte + data2\_LowByte + data2\_HighByte.... data31\_Byte + data32\_Byte

The gauge supports an auto-increment on the address during a DF read. This greatly reduces the time required to read out the entire DF. Continue with the read from the DF example. If another SMBus read block is sent with command 0x44, the gauge returns another 32 bytes of DF data, starting with address 0x4020.

### 19.2.89 ManufacturerAccess() 0xF080 and 0xF081 Output CCADCCal Control

These commands control the device to output the raw values for calibration purposes on *ManufacturerBlockAccess()* or *ManufacturerData()*. All values are updated every 250 ms, and the format of each value is 2's complement, MSB first.

| Status  | Condition                                                                       |
|---------|---------------------------------------------------------------------------------|
| Disable | <i>ManufacturingStatus()[CAL]</i> = 1 AND 0xF080 to <i>ManufacturerAccess()</i> |

**Action:** *OperationStatus()[CAL]* = 0, *[CAL\_OFFSET]* = 0

Stop output of ADC and CC data on *ManufacturerBlockAccess()* or *ManufacturerData()*

| Status | Condition                             |
|--------|---------------------------------------|
| Enable | 0xF081 to <i>ManufacturerAccess()</i> |

**Action:** *OperationStatus()[CAL]* = 1, *[CAL\_OFFSET]* = 0

Outputs the raw CC and AD values on *ManufacturerBlockAccess()* or *ManufacturerData()* in the format of ZZYyAAAbbBBccCCddDDeeEEffFGgGGhhHHiilJJjJJkkKKK:

| Value | Description                                                                                      |
|-------|--------------------------------------------------------------------------------------------------|
| ZZ    | Rolling 8-bit counter, increments when values are refreshed.                                     |
| YY    | Status, 1 when <i>ManufacturerAccess()</i> = 0xF081, 2 when <i>ManufacturerAccess()</i> = 0xF082 |
| AAaa  | Current (coulomb counter)                                                                        |
| BBbb  | Cell Voltage 1                                                                                   |
| CCcc  | RSVD - Do not use                                                                                |
| DDdd  | RSVD - Do not use                                                                                |
| EEee  | RSVD - Do not use                                                                                |
| FFff  | PACK Voltage                                                                                     |
| GGgg  | RSVD - Do not use (use Cell Voltage 1 as BAT Voltage)                                            |
| HHhh  | Cell Current 1                                                                                   |
| IIii  | RSVD - Do not use                                                                                |
| JJjj  | RSVD - Do not use                                                                                |

| Value | Description       |
|-------|-------------------|
| KKkk  | RSVD - Do not use |

### 19.2.90 ManufacturerAccess() 0xF082 OutputShortedCCADCCal

This command instructs the device to output the raw values for calibration purposes on *ManufacturerBlockAccess()* or *ManufacturerData()*. All values are updated every 250 ms and the format of each value is 2's complement, MSB first. This mode includes an internal short on the coulomb counter inputs for measuring its offset.

| Status  | Condition                                                                          |
|---------|------------------------------------------------------------------------------------|
| Disable | <i>ManufacturingStatus()[CAL] = 1</i> AND<br>0xF080 to <i>ManufacturerAccess()</i> |

**Action:** *OperationStatus()[CAL] = 0*, *[CAL\_OFFSET] = 0*

Stop output of ADC and CC data on *ManufacturerBlockAccess()* or *ManufacturerData()*

| Status | Condition                             |
|--------|---------------------------------------|
| Enable | 0xF082 to <i>ManufacturerAccess()</i> |

**Action:** *OperationStatus()[CAL] = 1*, *[CAL\_OFFSET] = 1*

Outputs the raw CC and AD values on *ManufacturerBlockAccess()* or *ManufacturerData()* in the format of ZZYyaaAAabbBBccCCddDDeeEEffFGggGGhhHHiiJJkkKK:

| Value | Description                                                                                      |
|-------|--------------------------------------------------------------------------------------------------|
| ZZ    | Rolling 8-bit counter, increments when values are refreshed.                                     |
| YY    | Status, 1 when <i>ManufacturerAccess()</i> = 0xF081, 2 when <i>ManufacturerAccess()</i> = 0xF082 |
| AAaa  | Current (coulomb counter)                                                                        |
| BBbb  | Cell Voltage 1                                                                                   |
| CCcc  | RSVD - Do not use                                                                                |
| DDdd  | RSVD - Do not use                                                                                |
| EEee  | RSVD - Do not use                                                                                |
| FFff  | PACK Voltage                                                                                     |
| GGgg  | RSVD - Do not use                                                                                |
| HHhh  | Cell Current 1                                                                                   |
| IIii  | RSVD - Do not use                                                                                |
| JJjj  | RSVD - Do not use                                                                                |
| KKkk  | RSVD - Do not use                                                                                |

## 20 Data Flash Values

### 20.1 Settings

#### 20.1.1 Configuration

##### 20.1.1.1 Charging Configuration

| Class    | Subclass      | Name                   | Type | Min    | Max    | Default | Unit |
|----------|---------------|------------------------|------|--------|--------|---------|------|
| Settings | Configuration | Charging Configuration | H2   | 0x0000 | 0xFFFF | 0x0000  | Hex  |

15                      14                      13                      12                      11                      10                      9                      8

|                  |                  |                  |               |           |            |         |                     |
|------------------|------------------|------------------|---------------|-----------|------------|---------|---------------------|
| V_SOC_CHAR<br>GE | CC_SEALED_E<br>N | CV_SEALED_E<br>N | HT_INIHIB_DIS | HIBAT_CHG | TAPER_VOLT | RTORFCC | RUNTIME_DE<br>GRADE |
|------------------|------------------|------------------|---------------|-----------|------------|---------|---------------------|

7                      6                      5                      4                      3                      2                      1                      0

|               |             |            |         |       |            |     |       |
|---------------|-------------|------------|---------|-------|------------|-----|-------|
| CYCLE_DEGRADE | SOH_DEGRADE | DEGRADE_CC | COMP_IR | CS_CV | SOC_CHARGE | CCC | CRATE |
|---------------|-------------|------------|---------|-------|------------|-----|-------|

**V\_SOC\_CHARGE (Bit 15):** Enables both Voltage or SoC level to determine the thresholds in Advanced Charging Algorithm,

1 = Enables voltage or SOC levels to determine the charging state in Advanced Charging Algorithm

0 = **SOC\_CHARGE** (bit 2) determines the charging state in Advanced Charging Algorithm

**CC\_SEALED\_EN (Bit 14):** Enables writing the Advanced Charging Algorithm charging current values in SEALED mode to data flash by the *ManufacturerAccess()* 0x00B2 *ChargingCurrentOverride* command mode to data flash

1 = Enabled

0 = Disabled

**CV\_SEALED\_EN (Bit 13):** Enables writing the Advanced Charging Algorithm charging voltage values in SEALED mode to data flash by the *ManufacturerAccess()* 0x00B0 *ChargingVoltageOverride* command

1 = Enabled

0 = Disabled

**HT\_INHIB\_DIS (Bit 12):** High Temperature Disable

0 = HT inhibit enabled

**HIBAT\_CHG (Bit 11):** See the *Charging Voltage* sections below.

1 = Enabled

0 = Disabled

**TAPER\_VOLT (Bit 10):** Uses fixed **Charge Term Charging Voltage**

1 = Uses fixed **Charge Term Charging Voltage** for Charge Termination

0 = Uses *ChargingVoltage()* for Charge Termination

**RTORCC (Bit 9):** Uses the first of runtime or cycle count degrade when also enabled

1 = Enabled

0 = Disabled

**RUNTIME\_DEGRADE (Bit 8):** Runtime-based charging voltage or charging current degradation

1 = Degrade CC/CV based on runtime

0 = No degradation of CC/CV based on runtime

**CYCLE\_DEGRADE (Bit 7):** **Cycle Count** based charging voltage or charging current degradation

1 = Degrade CC/CV based on **Cycle Count**

0 = No degradation of CC/CV based on **Cycle Count**

**SOH\_DEGRADE (Bit 6):** SOH-based charging voltage or charging current degradation

1 = Degrade CC/CV based on SOH

0 = No degradation of CC/CV based on SOH

**DEGRADE\_CC (Bit 5):** Enables charging current degradation based on **Cycle Count** or SOH.

1 = Enables Charging Current degradation

0 = Disables Charging Current degradation

**COMP\_IR (Bit 4):** Enables IR compensation at the system level to ensure the correct voltage level required for a specific charging voltage at the battery terminals

1 = Enables system level IR compensation

0 = Disables system level IR compensation

**CS\_CV (Bit 3):** This enables the cell swelling control under specific cell voltage and cell temperature thresholds by reducing the charging voltage.

1 = Enables cell swelling control

0 = Disables cell swelling control

**SOC\_CHARGE (Bit 2)**

1 = Enables SOC threshold to replace voltage thresholds (CLV, CMV, and CHV) in **Advanced Charging Algorithm**

0 = Uses voltage thresholds (CLV, CMV, and CHV) in **Advanced Charging Algorithm**

**CCC (Bit 1)**

- 1 = Enables Charging Loss Compensation feature
- 0 = Disables Charging Loss Compensation (default)

**CRATE (Bit 0):** Charge Current rate

- 1 = *ChargingCurrent()* adjusted based on *FullChargeCapacity()* / *DesignCapacity()*
- 0 = No adjustment to *ChargingCurrent()* (default)

**20.1.1.2 Charging Configuration Ext**

| Class    | Subclass      | Name                       | Type | Min     | Max        | Default   | Unit      |
|----------|---------------|----------------------------|------|---------|------------|-----------|-----------|
| Settings | Configuration | Charging Configuration Ext | H1   | 0x00    | 0x07       | 0x00      | Hex       |
| 7        | 6             | 5                          | 4    | 3       | 2          | 1         | 0         |
| RSVD     | RSVD          | RSVD                       | RSVD | LINCHGR | SLOW_CRATE | CELL_VAL1 | CELL_VAL0 |

**RSVD (Bit 7–4):** Reserved. Do not use.

**LINCHGR (Bit 3):** Enable device linear charger HW and FW options

- 1 = Device linear charger HW and FW enabled (default)
- 0 = Device linear charger HW and FW disabled

**SLOW\_CRATE (Bit 2):** Enables the slows-down of the **Current Rate** current transition time

- 1 = The 1-second per step **Current Rate** is multiplied by 5 to arrive at the next *ChargingCurrent()* setting
- 0 = **Current Rate** remains unchanged

**CELL\_VAL1, CELL\_VAL0 (Bit 1–0):** JEITA charging voltage is determined based on either max cell, min cell, or average cell voltage. Leave as default for single cell devices.

- 1, 1 = Reserved
- 1, 0 = JEITA charging voltage determined based on average cell voltage
- 0, 1 = JEITA charging voltage determined based on min cell voltage
- 0, 0 = JEITA charging voltage determined based on max cell voltage (default)

**20.1.1.3 FET Options**

| Class     | Subclass      | Name        | Type  | Min   | Max    | Default | Unit |
|-----------|---------------|-------------|-------|-------|--------|---------|------|
| Settings  | Configuration | FET Options | H2    | 0x0   | 0x00FF | 0x0020  | Hex  |
| 7         | 6             | 5           | 4     | 3     | 2      | 1       | 0    |
| PACK_FUSE | SLEEPCHG      | CHGFET      | CHGIN | CHGSU | OTFET  | RSVD    | RSVD |

**PACK\_FUSE (Bit 7):** Source of voltage to check for **Min Blow Fuse Voltage**

- 1 = PACK voltage
- 0 = Battery stack voltage

**SLEEPCHG (Bit 6):** CHG FET enabled during sleep

- 1 = CHG FET remains on during sleep
- 0 = CHG FET off during sleep (default)

**CHGFET (Bit 5):** FET action on setting of

- 1 = Charging and Precharging disabled, FET off
- 0 = FET active (default)

**CHGIN (Bit 4):** FET action in CHARGE INHIBIT mode

1 = Charging and Precharging disabled, FETs off

0 = FET active (default)

**CHGSU (Bit 3):** FET action in CHARGE SUSPEND mode

1 = Charging and Precharging disabled, FETs off

0 = FET active (default)

**OTFET (Bit 2):** FET action in OVERTEMPERATURE mode

1 = CHG and DSG FETs will be turned off for overtemperature conditions

0 = No FET action for overtemperature condition (default)

**RSVD (Bit 1-0):** Reserved. Do not use.

#### 20.1.1.4 SBS Gauging Configuration

| Class    | Subclass      | Name                      | Type              | Min          | Max    | Default   | Unit  |
|----------|---------------|---------------------------|-------------------|--------------|--------|-----------|-------|
| Settings | Configuration | SBS Gauging Configuration | H2                | 0x0          | 0x003F | 0x0004    | Hex   |
| 7        | 6             | 5                         | 4                 | 3            | 2      | 1         | 0     |
| RSVD     | RSVD          | VLB                       | 1PERCENT_H<br>OLD | RSOC_RND_OFF | LOCK0  | RSOC_HOLD | RSOCL |

**RSVD (Bits 7–6):** Reserved. Do not use.

**VLB (Bit 5):** Enables very low battery warning option

1 = Enabled

0 = Disabled

**1PERCENT\_HOLD (Bit 4):** Setting this bit prevents RSOC from going below 1% until **Terminate Voltage** is detected.

1 = Enabled

0 = Disabled

**RSOC\_RND\_OFF (Bit 3):** Enables a round-off option of RSOC (instead of a ceiling function available by default)

1 = Enables RSOC round-off

0 = Disables RSOC round-off (A ceiling function is used instead.)

**LOCK0 (Bit 2):** Keep *RemainingCapacity()* and *RelativeStateOfCharge()* from jumping back during relaxation after 0 was reached during discharge.

1 = Enabled (default)

0 = Disabled

**RSOC\_HOLD (Bit 1):** Prevent RSOC from increasing during discharge

1 = RSOC not allowed to increase during discharge

0 = RSOC not limited (default)

**RSOCL (Bit 0):** *RelativeStateOfCharge()* and *RemainingCapacity()* behavior at end of charge

1 = Held at 99% until valid charge termination. On entering valid charge termination update to 100%

0 = Actual value shown (default)

#### 20.1.1.5 SBS Configuration

| Class           | Subclass      | Name              | Type | Min | Max    | Default | Unit  |
|-----------------|---------------|-------------------|------|-----|--------|---------|-------|
| Settings        | Configuration | SBS Configuration | H2   | 0x0 | 0x00FF | 0x0020  | Hex   |
| 7               | 6             | 5                 | 4    | 3   | 2      | 1       | 0     |
| FLASH_BUSY_WAIT | RSVD          | BLT1              | BLT0 | XL  | HPE    | CPE     | BCAST |

**FLASH\_BUSY\_WAIT (Bit 7):** This enables clock stretching during a flash program or erase operation.

- 1 = The device will clock stretch (up to the timeout for I2C devices) during flash operations.
- 0 = The device will NACK any I2C engine interrupt that occurs during a flash operation (program or erase).

**RSVD(Bit 6):** Reserved. Do no use.

**BLT1 (Bit 5):** Bus low timeout

- 1,1 = 3-s SBS bus low timeout
- 1,0 = 2-s SBS bus low timeout (default)
- 0,1 = 1-s SBS bus low timeout
- 0,0 = No SBS bus low timeout

**BLT0 (Bit 4):** Bus low timeout

- 1,1 = 3-s SBS bus low timeout
- 1,0 = 2-s SBS bus low timeout (default)
- 0,1 = 1-s SBS bus low timeout
- 0,0 = No SBS bus low timeout

**XL (Bit 3):** Enables 400-kHz COM mode

- 1 = 400-kHz bus speed
- 0 = Normal SBS bus speed (default)

**HPE (Bit 2):** PEC on host communication

- 1 = Enabled
- 0 = Disabled (default)

Note: When PEC = 1, it enables the PEC calculation when communicating with the host. PEC is a CRC calculation that is included in the I2C protocol. It is used to verify the integrity of the data being transmitted. When enabled, the gauge will calculate the PEC and transmit it along with the data. The host will then calculate the PEC and verify it against the one received \* from the gauge.

**CPE (Bit 1):** PEC on charger broadcast

- 1 = Enabled
- 0 = Disabled (default)

**BCAST (Bit 0):** Enables alert and charging broadcast from device to the host

- 1 = Enabled
- 0 = Disabled (default)

#### 20.1.1.6 Auth Config

| Class    | Subclass      | Name        | Type | Min        | Max         | Default        | Unit |
|----------|---------------|-------------|------|------------|-------------|----------------|------|
| Settings | Configuration | Auth Config | H1   | 0x0        | 0x0E        | 0x00           | Hex  |
| 7        | 6             | 5           | 4    | 3          | 2           | 1              | 0    |
| RSVD     | RSVD          | RSVD        | RSVD | DF_READ_EN | SHA1_SECURE | SPLIT_RESPONSE | RSVD |

**RSVD (Bits 7–4):** Reserved. Do not use.

**DF\_READ\_EN (Bit 3):** Enables data flash read in SEALED mode

- 1 = Enables data flash read in SEALED mode. The host can read data flash parameters without unsealing the device. This is useful for applications that need to verify configuration without compromising security.
- 0 = Data flash read in SEALED mode not allowed (default). The device must be unsealed to read data flash parameters.

**SHA1\_SECURE (Bit 2):** Enables secure memory usage for encryption key storage

- 1 = Enables secure memory usage. When enabled, the authentication key is stored in secure (OTP) memory. The key can only be written once and cannot be changed after programming. This provides maximum security for production devices.

0 = Disables secure memory usage (default). The authentication key is stored in standard data flash and can be updated using *AuthenticationKey()* command while in FULL ACCESS mode.

**SPLIT\_RESPONSE (Bit 1):** Enables splitting of the authentication response into two 30-byte fields

1 = Enables split response mode. The 60-byte authentication response (32-byte HMAC + 32-byte challenge echo, minus 4 bytes overhead) is divided into two 30-byte fields. The host must read twice to retrieve the complete response. This mode is useful for hosts with limited I2C buffer sizes.

0 = Disables split response mode (default). The authentication response is returned as a single 60-byte field in one read operation.

**RSVD (Bit 0):** Reserved. Do not use.

### 20.1.1.7 Power Config

| Class    | Subclass      | Name           | Type       | Min              | Max               | Default        | Unit         |
|----------|---------------|----------------|------------|------------------|-------------------|----------------|--------------|
| Settings | Configuration | Power Config   | H2         | 0x0              | 0x7FBF            | 0x0000         | Hex          |
| 15       | 14            | 13             | 12         | 11               | 10                | 9              | 8            |
| RSVD     | SHIPM_ON_RST  | IO_TIMEOUT     | IO_PUL_DIS | IO_POL           | IO_SHUT           | RSVD           | SLP_ACCUM    |
| 7        | 6             | 5              | 4          | 3                | 2                 | 1              | 0            |
| RSVD     | RSOC_SD       | CHECK_WAKE_FET | CHECK_WAKE | EMSHUT_EXIT_COMM | EMSHUT_EXIT_VPACK | PWR_SAVE_VSHUT | AUTO_SHIP_EN |

**RSVD (Bit 15):** Reserved. Do not use.

**SHIPM\_ON\_RST (Bit 14):** Save and restore SHIP mode MAC status on reset

1 = Enabled: Retains MAC status and SHIPM flag through power-on reset (POR) when gauge is in SHIP mode

0 = Disabled: SHIPM flag clears on reset

**IO\_TIMEOUT (Bit 13):** IO-Based Shutdown Timeout enable

1 = IO Shutdown timeout count-down is enabled

0 = IO Shutdown timeout count-down is disabled

**IO\_PUL\_DIS (Bit 12):** IO-Based Shutdown Pullup Disable

1 = Pullup disabled

0 = Pullup enabled (active only during read)

**IO\_POL (Bit 11):** IO Based Shutdown Polarity

1 = Active high

0 = Active low

**IO\_SHUT (Bit 10):** Enables the IO Based Shutdown feature

1 = Enabled

0 = Disabled

**RSVD (Bit 9):** Reserved. Do not use.

**SLP\_ACCUM (Bit 8):** Enables charge accumulation while in SLEEP mode

1 = Enables charge accumulation in SLEEP mode

0 = Disables charge accumulation in SLEEP mode

**RSVD (Bits 7):** Reserved. Do not use.

**RSOC\_SD (Bit 6):** Enables low RSOC time-based shutdown feature

1 = Enables auto shutdown after the  $RSOC \leq \text{Low RSOC SD Threshold}$  for more than the time interval specified in **Low RSOC SD Time** without charge current detection

0 = Disables the low RSOC time-based shutdown feature

**CHECK\_WAKE\_FET (Bit 5):** Enables the CHG and DSG FETs not to be forced off during the **Delay** timer period

- 1 = FETs are not to be forced off during the **Delay** timer period.
- 0 = FETs are forced off during the **Delay** timer period.

**CHECK\_WAKE (Bit 4):** Enables option to manage unintended wakeup from SHUTDOWN.

- 1 = Enables this option for unintended wakeup
- 0 = Disables this option for unintended wakeup

**EMSHUT\_EXIT\_COMM (Bit 3):** Enables exit from Emergency FET Shutdown if valid SMBus communication is received. Valid SMBus communication means a valid gauge address and any command is received (that is, an invalid command with a valid address is acceptable).

- 1 = Enables valid communication reception based exit from EMSHUT
- 0 = Disables valid communication reception based exit from EMSHUT

**EMSHUT\_EXIT\_VPACK (Bit 2):** This bit enables exit from an emergency FET shutdown if the voltage at the PACK pin > **Charger Present Threshold** for two samples (~2 s).

- 1 = Enables PACK voltage based exit from EMSHUT
- 0 = Disables PACK voltage based exit from EMSHUT

**PWR\_SAVE\_VSHUT (Bit 1):** Enables POWER SAVE SHUTDOWN when specific thresholds have been reached.

- 1 = Enables POWER SAVE SHUTDOWN
- 0 = Disables POWER SAVE SHUTDOWN

**AUTO\_SHIP\_EN (Bit 0):** *Automatically Shut Down for Shipment*

- 1 = Enables auto shutdown after the device is in SLEEP mode without communication for a set period of time.
- 0 = Disables the auto shutdown feature

#### 20.1.1.8 IO Config

The **IO Config** data flash parameter configures three independent GPIO-related features: Battery Trip Point (BTP) interrupt output ( **BTP\_EN** , bit 0), BTP threshold source selection ( **BTP\_MODE** , bit 2), general-purpose GPIO output mode for Flag Map Setup ( **GPIO\_EN** , bit 3), and Permanent Failure (PF) indication output ( **GPIO\_PF** , bit 4). Each feature uses a separately configured package pin.

| Class    | Subclass      | Name      | Type    | Min     | Max      | Default | Unit   |
|----------|---------------|-----------|---------|---------|----------|---------|--------|
| Settings | Configuration | IO Config | H2      | 0x0000  | 0x001D   | 0x0000  | Hex    |
| 7        | 6             | 5         | 4       | 3       | 2        | 1       | 0      |
| RSVD     | RSVD          | RSVD      | GPIO_PF | GPIO_EN | BTP_MODE | RSVD    | BTP_EN |

**RSVD (Bits 7–5):** Reserved. Do not use.

**GPIO\_PF (Bit 4):** Enables a GPIO output pin to indicate a Permanent Failure (PF) condition. When set, the pin assigned to the GPIO\_PF function in the GPIO configuration data flash is driven high after a PF event is detected. The pin remains asserted for the duration configured by **GPIO Timeout** ; if **GPIO Timeout** is 0, the pin is held asserted indefinitely. This bit is independent of **GPIO\_EN** .

- 1 = Enabled
- 0 = Disabled (default)

**GPIO\_EN (Bit 3):** Enables general-purpose GPIO output mode. When set, two functions become active:

- The *Flag Map Setup* entries are activated. This allows the device to assert a pin in response to conditions such as over-temperature, full charge, or a safety event. When **GPIO\_EN** = 0, all Flag Map outputs are inactive regardless of the Flag Map Setup configuration.
- The *GPIORead()* and *GPIOWrite()* SBS commands become accessible for the configured GPIO pins.

- 1 = Enabled
- 0 = Disabled (default)

**BTP\_MODE (Bit 2):** Selects the threshold source for the Battery Trip Point (BTP) comparison.

- 1 = BTP threshold compared against *RelativeSoC()* in %
- 0 = BTP threshold compared against *RemainingCapacity()* in mAh (default)

**RSVD (Bit 1):** Reserved. Do not use.

**BTP\_EN (Bit 0):** Enables assertion of the BTP pin

1 = Enables assertion of the BTP pin when BTP is triggered.

0 = Disables assertion of the BTP pin when BTP is triggered (default).

### 20.1.1.9 Temperature Enable

| Class    | Subclass      | Name               | Type | Min | Max  | Default | Unit |
|----------|---------------|--------------------|------|-----|------|---------|------|
| Settings | Configuration | Temperature Enable | H1   | 0   | 0xFF | 0x03    | hex  |

**Description:** Enables temperature sensor inputs. Bit 0: Internal temp, Bit 1: External temp 1. Default 0x03 enables internal and first external sensor.

Default value updated per FW v0.03 Build 4 (previous TRM value: 0xFF).

### 20.1.1.10 Temperature Mode

| Class    | Subclass      | Name             | Type | Min | Max  | Default | Unit |
|----------|---------------|------------------|------|-----|------|---------|------|
| Settings | Configuration | Temperature Mode | H1   | 0   | 0xFF | 0x01    | hex  |

**Description:** Temperature measurement mode configuration. Controls which temperature source is used for gauging calculations.

Default value updated per FW v0.03 Build 4 (previous TRM value: 0x04).

### 20.1.1.11 DA Configuration

| Class    | Subclass      | Name             | Type | Min | Max    | Default | Unit |
|----------|---------------|------------------|------|-----|--------|---------|------|
| Settings | Configuration | DA Configuration | H2   | 0x0 | 0xFFFF | 0x001c  | Hex  |

15 14 13 12 11 10 9 8

|        |        |      |      |      |              |      |                      |
|--------|--------|------|------|------|--------------|------|----------------------|
| CTEMP1 | CTEMP0 | RSVD | RSVD | RSVD | ISI<br>ACCUM | RSVD | EMSHUT_<br>PEXIT_DIS |
|--------|--------|------|------|------|--------------|------|----------------------|

7 6 5 4 3 2 1 0

|       |            |           |       |                     |    |      |      |
|-------|------------|-----------|-------|---------------------|----|------|------|
| FTEMP | DISCONN_EN | EMSHUT_EN | SLEEP | IN_SYSTEM_<br>SLEEP | NR | RSVD | RSVD |
|-------|------------|-----------|-------|---------------------|----|------|------|

**CTEMP (Bits 15–14):** Defines which temperature sensor's output is displayed by the SBS *Temperature()* command

1, 1 = Smart temperature

1, 0 = Minimum temperature

0, 1 = Average temperature

0, 0 = Maximum temperature (default)

**RSVD (Bits 13–11):** Reserved. Do not use.

**ISI\_ACCUM (Bit 10):** Internal short indication accumulation enable

1 = Enabled

0 = Disabled

**RSVD (Bit 9):** Reserved. Do not use.

**EMSHUT\_PEXIT\_DIS (Bit 8):** Disables the SHUTDOWN pin exit option of the Emergency FET Shutdown feature (when a high-to-low transition on the SHUTDOWN pin is detected).

1 = Prevents usage of SHUTDOWN pin as exit option

0 = Allows usage of SHUTDN pin as an exit option (default)

**FTEMP (Bit 7):** FET temperature protection source

1 = Average

0 = MAX (default)

**DISCONN\_EN (Bit 6):** System Disconnect

1 = Enabled

0 = Disabled

**EMSHUT\_EN (Bit 5):** Emergency FET Shutdown Enable

1 = Enabled

0 = Disabled

**SLEEP (Bit 4):** SLEEP mode

1 = Enables SLEEP mode (default)

0 = Disables SLEEP mode

**IN\_SYSTEM\_SLEEP (Bit 3):** In-system SLEEP mode

1 = Enables (default)

0 = Disables

**NR (Bit 2):** Use  $\overline{\text{PRES}}$  in system detection

1 = NON-REMOVABLE mode (default)

0 = Use  $\overline{\text{PRES}}$ , REMOVABLE mode

**RSVD (Bits 1–0):** Reserved. Do not use.

#### 20.1.1.12 SOC Flag Config A

| Class           | Subclass      | Name              | Type   | Min             | Max       | Default  | Unit   |
|-----------------|---------------|-------------------|--------|-----------------|-----------|----------|--------|
| Settings        | Configuration | SOC Flag Config A | H2     | 0x0             | 0x0FFF    | 0x0C8C   | Hex    |
| 15              | 14            | 13                | 12     | 11              | 10        | 9        | 8      |
| RSVD            | RSVD          | RSVD              | RSVD   | TCSETVCT        | FCSETVCT  | RSVD     | RSVD   |
| 7               | 6             | 5                 | 4      | 3               | 2         | 1        | 0      |
| TCCLEAR<br>RSOC | TCSETRSOC     | TCCLEARV          | TCSETV | TDCLEAR<br>RSOC | TDSETRSOC | TDCLEARV | TDSETV |

**RSVD (Bits 15–12):** Reserved. Do not use.

**TCSETVCT (Bit 11):** Enables the TC flag set by primary charge termination

1 = Enabled (default)

0 = Disabled

**FCSETVCT (Bit 10):** Enables the FC flag set by primary charge termination

1 = Enabled (default)

0 = Disabled

**RSVD (Bits 9–8):** Reserved. Do not use.

**TCCLEARRSOC (Bit 7):** Enables the TC flag clear by RSOC threshold

1 = Enabled (default)

0 = Disabled

**TCSETRSOC (Bit 6):** Enables the TC flag set by RSOC threshold

1 = Enabled

0 = Disabled (default)

**TCLEARV (Bit 5):** Enables the TC flag clear by cell voltage threshold

1 = Enabled

0 = Disabled (default)

**TCSETV (Bit 4):** Enables the TC flag set by cell voltage threshold

1 = Enabled

0 = Disabled (default)

**TDCLEARRSOC (Bit 3):** Enables the TD flag clear by RSOC threshold

1 = Enabled (default)

0 = Disabled

**TDSETRSOC (Bit 2):** Enables the TD flag set by RSOC threshold

1 = Enabled (default)

0 = Disabled

**TDCLEARV (Bit 1):** Enables the TD flag clear by cell voltage threshold

1 = Enabled

0 = Disabled (default)

**TDSETV (Bit 0):** Enables the TD flag set by cell voltage threshold

1 = Enabled

0 = Disabled (default)

#### 20.1.1.13 SOC Flag Config B

| Class          | Subclass      | Name              | Type   | Min             | Max       | Default  | Unit   |
|----------------|---------------|-------------------|--------|-----------------|-----------|----------|--------|
| Settings       | Configuration | SOC Flag Config B | H2     | 0x0             | 0x00FF    | 0x008C   | Hex    |
| 7              | 6             | 5                 | 4      | 3               | 2         | 1        | 0      |
| FCLEAR<br>RSOC | FCSETRSOC     | FCCLEARV          | FCSETV | FDCLEAR<br>RSOC | FDSETRSOC | FDCLEARV | FDSETV |

**FCCLEARRSOC (Bit 7):** Enables the FC flag clear by RSOC threshold

1 = Enabled (default)

0 = Disabled

**FCSETRSOC (Bit 6):** Enables the FC flag set by RSOC threshold

1 = Enabled

0 = Disabled (default)

**FCCLEARV (Bit 5):** Enables the FC flag clear by cell voltage threshold

1 = Enabled

0 = Disabled (default)

**FCSETV (Bit 4):** Enables the FC flag set by cell voltage threshold

1 = Enabled

0 = Disabled (default)

**FDCLEARRSOC (Bit 3):** Enables the FD flag clear by RSOC threshold

1 = Enabled (default)

0 = Disabled

**FDSETRSOC Bit 2:** Enables the FD flag set by RSOC threshold

- 1 = Enabled (default)
- 0 = Disabled

**FDCLEARV (Bit 1):** Enables the FD flag clear by cell voltage threshold

- 1 = Enabled
- 0 = Disabled (default)

**FDSETV (Bit 0):** Enables the FD flag set by cell voltage threshold

- 1 = Enabled
- 0 = Disabled (default)

#### 20.1.1.14 IT Gauging Configuration

| Class             | Subclass            | Name                     | Type   | Min               | Max                 | Default | Unit              |
|-------------------|---------------------|--------------------------|--------|-------------------|---------------------|---------|-------------------|
| Settings          | Configuration       | IT Gauging Configuration | H2     | 0x0000            | 0xFDFF              | 0xD0FE  | Hex               |
| 15                | 14                  | 13                       | 12     | 11                | 10                  | 9       | 8                 |
| DOD_R<br>SCALE_EN | RELAX_<br>SMOOTH_OK | TDELTA_V                 | SMOOTH | RELAX_<br>JUMP_OK | DELAY_<br>DROP_TO_0 | RSVD    | FAST_<br>QMAX_FLD |
| 7                 | 6                   | 5                        | 4      | 3                 | 2                   | 1       | 0                 |
| FAST_QMAX_<br>LRN | RSOC_CONV           | LFP_RELAX                | DOD0EW | OCVFR             | RFACTSTEP           | CSYNC   | CCT               |

**DOD\_RSCALE\_EN (Bit 15):** Configures which DOD the new RScale is to be applied.

- 1 = The RScale is only applied to DODs higher than the DOD where the RScale was calculated.
- 0 = The RScale is applied to all DODs during IT simulations.

**RELAX\_SMOOTH\_OK (Bit 14):** Smooth RSOC during RELAX mode

- 1 = Enabled (default)
- 0 = Disabled

**TDELTA\_V (Bit 13):** TURBO Mode Delta Voltage

- 1 = Must set this flag to 1 to support TURBO mode.
- 0 = Use of **DeltaVoltage** learned as the maximal difference between instantaneous and average voltage (default).

**SMOOTH (Bit 12):** Smooth RSOC

- 1 = Smoothed *FullChargeCapacity()* and *RemainingCapacity()* is used (default).
- 0 = True *FullChargeCapacity()* and *RemainingCapacity()* is used.

**RELAX\_JUMP\_OK (Bit 11):** Allows RSOC jump during RELAX mode

- 1 = Enabled
- 0 = Disabled (default)

**DELAY\_DROP\_TO\_0 (Bit 10):** Delay

- 1 = Enabled
- 0 = Disabled (default)

**RSVD (Bit 9):** Reserved. Do not use.

**FAST\_QMAX\_FLD (Bit 8):** Fast Qmax Update in Field

- 1 = Enabled
- 0 = Disabled (default)

**FAST\_QMAX\_LRN (Bit 7):** Fast Qmax Update in Learning

1 = Enabled (default)

0 = Disabled

**RSOC\_CONV (Bit 6):** RSOC Convergence (Fast Scaling)

1 = Enabled (default)

0 = Disabled

**LFP\_RELAX (Bit 5):** Lithium Iron Phosphate Relax

1 = Enabled (default)

0 = Disabled

**DOD0EW (Bit 4):** DOD0 Error Weighting

1 = Enabled (default)

0 = Disabled

**OCVFR (Bit 3):** Open Circuit Voltage Flat Region

1 = Enabled (default)

0 = Disabled

**RFACTSTEP (Bit 2):** Ra Factor Step

1 = Enabled (default).

0 = Disabled

**CSYNC (Bit 1):** Sync *RemainingCapacity()* with *FullChargeCapacity()* at valid charge termination

1 = Synchronized (default)

0 = Not synchronized

**CCT (Bit 0):** Cycle Count Threshold

1 = Use CC % of *FullChargeCapacity()*

0 = Use CC % of *DesignCapacity()* (default)

**20.1.1.15 IT Gauging Ext**

| Class        | Subclass      | Name           | Type      | Min      | Max      | Default           | Unit            |
|--------------|---------------|----------------|-----------|----------|----------|-------------------|-----------------|
| Settings     | Configuration | IT Gauging Ext | H2        | 0x0000   | 0x03FF   | 0x005A            | Hex             |
| 15           | 14            | 13             | 12        | 11       | 10       | 9                 | 8               |
| RSVD         | RSVD          | RSVD           | RSVD      | RSVD     | RSVD     | EDV_CONV          | FOCV_EN         |
| 7            | 6             | 5              | 4         | 3        | 2        | 1                 | 0               |
| SOH_LEARN_EN | TS1           | TS0            | THERM_SAT | THERM_IV | AMB_PRED | CHG_100_SMOOTH_OK | DSG_0_SMOOTH_OK |

**RSVD (Bits 15–10):** Reserved. Do not use.

**EDV\_CONV (Bit 9):** Enables the EVCS feature

1= Enabled

0 = Disabled (default)

**FOCV\_EN (Bit 8):** Enables fast OCV feature

1= Enabled

0 = Disabled (default)

**SOH\_LEARN\_EN (Bit 7):** Enables SOH FCC learning

1 = Enabled

0 = Disabled (default)

**TS1 (Bit 6), TS0 (Bit 5):** These two bits select how the IT algorithm aggregates the enabled cell temperature sources (internal thermistor and any thermistor pins configured via IO Config).

1,1 = Not used

1,0 = Min Temperature is used (IT uses the lowest temperature among all enabled cell temperature sources). (Default)

0,1 = Avg Temperature is used (IT uses the average of all enabled cell temperature sources)

0,0 = Max Temperature is used (IT uses the highest temperature among all enabled cell temperature sources)

**THERM\_SAT (Bit 4):** Thermal saturation enables adjustment of the IT thermal model

1 = Enables adjustment of the IT thermal model

0 = Disables adjustment of the IT thermal model

**THERM\_IV (Bit 3):** Enables freeze of the temperature model at certain points in IT to prevent overestimation by the thermal model

1 = Enables Freeze of the temperature model

0 = Disables Freeze of the temperature model

**AMB\_PRED (Bit 2):** Enables ambient temperature prediction in modes other than RELAX

1 = Enables ambient temperature prediction

0 = Disables ambient temperature prediction

**CHG\_100\_SMOOTH\_OK (Bit 1):** Enables smoothing in the charge direction when there is a jump to 100%

1 = Enables smoothing to 100%

0 = Disables smoothing to 100%

**DSG\_0\_SMOOTH\_OK (Bit 0):** Enables smoothing in the discharge direction when there is a jump to 0%. When enabled, this smoothing option must be used in conjunction with **Term Smooth Start Cell V Delta**, **Term Smooth Time**, and **Term Smooth Final Cell V Delta**. If not configured properly, this smoothing option can cause remaining capacity to report 0 too early.

1 = Enables smoothing to 0%

0 = Disables smoothing to 0%

#### 20.1.1.16 Elevated Degrade Configuration

| Class    | Subclass      | Name                           | Type            | Min        | Max        | Default  | Unit     |
|----------|---------------|--------------------------------|-----------------|------------|------------|----------|----------|
| Settings | Configuration | Elevated Degrade Configuration | H1              | 0x00       | 0xFF       | 0x15     | Hex      |
| 7        | 6             | 5                              | 4               | 3          | 2          | 1        | 0        |
| RSVD     | RSVD          | EVTM_EXT_M<br>ODE              | ERETM_MAX_<br>T | ERETM_MODE | ERETM_TIME | ERM_MODE | ERM_TIME |

**RSVD (Bits 7–6):** Reserved. Do not use.

**EVTM\_EXT\_MODE (Bit 5):**

1 = Enables **Elevated Voltage Extended Charge Degradation** when ERETM is activated

0 = Disables **Elevated Voltage Extended Charge Degradation**

**ERETM\_MAX\_T (Bit 4):**

1 = Enables **ERETM Temperature Max Threshold** for immediate [ERETM] mode

0 = Disables **ERETM Temperature Max Threshold** for immediate [ERETM] mode

**ERETM\_MODE (Bit 3):**

1 = Uses voltage thresholds for ERETM

0 = Uses RSOC thresholds for ERETM

**ERETM\_TIME (Bit 2):**

1 = Enables ERETM

0 = Disables ERETM

**ERM\_MODE (Bit 1):**

1 = Uses voltage thresholds for ERM

0 = Uses RSOC thresholds for ERM

**ERM\_TIME (Bit 0):**

1 = Enables ERM

0 = Disables ERM

**20.1.1.17 DZT Gauging Configuration**

| Class    | Subclass      | Name                      | Type | Min    | Max    | Default | Unit      |
|----------|---------------|---------------------------|------|--------|--------|---------|-----------|
| Settings | Configuration | DZT Gauging Configuration | H2   | 0x0000 | 0x0001 | 0x0001  | Hex       |
| 15       | 14            | 13                        | 12   | 11     | 10     | 9       | 8         |
| RSVD     | RSVD          | RSVD                      | RSVD | RSVD   | RSVD   | RSVD    | RSVD      |
| 7        | 6             | 5                         | 4    | 3      | 2      | 1       | 0         |
| RSVD     | RSVD          | RSVD                      | RSVD | RSVD   | RSVD   | RSVD    | PERF_MODE |

**RSVD (Bits 15–1):** Reserved. Do not use.

**PERF\_MODE (Bit 0):** Performance mode enable. The bit allows the gauge enters performance mode to fit the dynamic load profile.

1 = Enables performance mode

0 = Disables performance mode

**20.1.2 Flag Map**
**20.1.2.1 Set Up 1 Configuration**

| Class     | Subclass  | Name                   | Type      | Min       | Max       | Default   | Unit      |
|-----------|-----------|------------------------|-----------|-----------|-----------|-----------|-----------|
| Settings  | Flag Map  | Set Up 1 Configuration | H2        | 0x0000    | 0xFFFF    | 0x0000    | Hex       |
| 15        | 14        | 13                     | 12        | 11        | 10        | 9         | 8         |
| FLAG_EN   | RSVD      | FLAG_OD                | FLAG_OR   | RSVD      | RSVD      | RSVD      | FLAG_POL  |
| 7         | 6         | 5                      | 4         | 3         | 2         | 1         | 0         |
| FLAG_BIT3 | FLAG_BIT2 | FLAG_BIT1              | FLAG_BIT0 | FLAG_REG3 | FLAG_REG2 | FLAG_REG1 | FLAG_REG0 |

**FLAG\_EN (Bit 15):** Enable/disable the control

1 = Enable

0 = Disable

**RSVD (Bit 14):** Reserved. Do not use.

**FLAG\_OD (Bit 13):** Determines whether the GPIO pin is driven between two levels as hi-Z/driven-low (that is, open drain) or as driven-high/driven-low (that is, active high).

Note: The *[FLAG\_OD]* bit cannot be set differently by separate controls when mapped to the same GPIO pin.

1 = Hi-Z/driven-low

0 = Driven-high/driven-low

**FLAG\_OR (Bit 12):** The flag OR'ed vs AND'ed with other flags mapped to the same GPIO pin. This OR/AND operation takes place after the polarity from *FLAG\_POL* is evaluated.

- 1 = OR Operation
- 0 = AND Operation

**RSVD (Bit 11, 10, 9):** Reserved. Do not use.

**FLAG\_POL (Bit 8):** Polarity of the flag when mapped to a GPIO pin

- 1 = Invert flag polarity
- 0 = No change to flag polarity

**FLAG\_BIT3, FLAG\_BIT2, FLAG\_BIT1, FLAG\_BIT0 (Bit 7, Bit 6, Bit 5, Bit 4):** Bit position within the 16-bit register of the flag

- 0, 0, 0, 0 = Bit 0
- 0, 0, 0, 1 = Bit 1
- 0, 0, 1, 0 = Bit 2
- 0, 0, 1, 1 = Bit 3
- 0, 1, 0, 0 = Bit 4
- 0, 1, 0, 1 = Bit 5
- 0, 1, 1, 0 = Bit 6
- 0, 1, 1, 1 = Bit 7
- 1, 0, 0, 0 = Bit 8
- 1, 0, 0, 1 = Bit 9
- 1, 0, 1, 0 = Bit 10
- 1, 0, 1, 1 = Bit 11
- 1, 1, 0, 0 = Bit 12
- 1, 1, 0, 1 = Bit 13
- 1, 1, 1, 0 = Bit 14
- 1, 1, 1, 1 = Bit 15

**FLAG\_REG3, FLAG\_REG2, FLAG\_REG1, FLAG\_REG0 (Bit 3, Bit 2, Bit 1, Bit 0):** Address of the register that contains the flag

- 0, 0, 0, 0 = *BatteryMode()*
- 0, 0, 0, 1 = *BatteryStatus()*
- 0, 0, 1, 0 = *OperationStatusA()*, lower 16 bits of *OperationStatus()*
- 0, 0, 1, 1 = *OperationStatusB()*, higher 16 bits of *OperationStatus()*
- 0, 1, 0, 0 = *ChargingStatus()*
- 0, 1, 0, 1 = *TempStatus()*
- 0, 1, 1, 0 = *GaugingStatus()*
- 0, 1, 1, 1 = *ITStatus()*
- 1, 0, 0, 0 = *SafetyStatusAB()*, lower 16 bits of *SafetyStatus()*
- 1, 0, 0, 1 = *SafetyStatusCD()*, higher 16 bits of *SafetyStatus()*
- 1, 0, 1, 0 = Any Safety Status bit in *SafetyStatus()*
- 1, 0, 1, 1 = *PFStatusAB()*, lower 16 bits of *PFStatus()*
- 1, 1, 0, 0 = *PFStatusCD()*, higher 16 bits of *PFStatus()*
- 1, 1, 0, 1 = Any PF Status bit in *PFStatus()*
- 1, 1, 1, 0 = Unused
- 1, 1, 1, 1 = Unused

### 20.1.2.2 Set Up 1 Pin Number

| Class    | Subclass | Name                | Type | Min  | Max  | Default | Unit |
|----------|----------|---------------------|------|------|------|---------|------|
| Settings | Flag Map | Set Up 1 Pin Number | U1   | 0x00 | 0xFF | 0x00    | —    |

#### Value Pin Assignment

0x00 = Disabled (No pin assigned)

| Value Pin Assignment    |
|-------------------------|
| 0xC2 = Pad C2 (INT pin) |

**Description:** Package pin assigned as the GPIO output for this flag map entry. Pad C2 (INT pin) is the only pin available for flag map output assignment. The remaining GPIO-capable pads are reserved for dedicated battery and communication functions: pad C1 (TS/thermistor), pad C3 (CP\_BOOT), pad D3 (SDA), and pad E3 (SCL).

### 20.1.2.3 Set Up 2 Configuration

| Class    | Subclass | Name                   | Type | Min    | Max    | Default | Unit |
|----------|----------|------------------------|------|--------|--------|---------|------|
| Settings | Flag Map | Set Up 2 Configuration | H2   | 0x0000 | 0xFFFF | 0x0000  | Hex  |

|         |      |         |         |      |      |      |          |
|---------|------|---------|---------|------|------|------|----------|
| 15      | 14   | 13      | 12      | 11   | 10   | 9    | 8        |
| FLAG_EN | RSVD | FLAG_OD | FLAG_OR | RSVD | RSVD | RSVD | FLAG_POL |

|           |           |           |           |           |           |           |           |
|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
| 7         | 6         | 5         | 4         | 3         | 2         | 1         | 0         |
| FLAG_BIT3 | FLAG_BIT2 | FLAG_BIT1 | FLAG_BIT0 | FLAG_REG3 | FLAG_REG2 | FLAG_REG1 | FLAG_REG0 |

**FLAG\_EN (Bit 15):** Enable/disable the control

- 1 = Enable
- 0 = Disable

**RSVD (Bit 14):** Reserved. Do not use.

**FLAG\_OD (Bit 13):** This bit determines whether the GPIO pin is driven between two levels as hi-Z/driven-low (that is, open drain) or as driven-high/driven-low (that is, active high).

Note: The *[FLAG\_OD]* bit cannot be set differently by separate controls when mapped to the same GPIO pin.

- 1 = Hi-Z/driven-low
- 0 = Driven-high/driven-low

**FLAG\_OR (Bit 12):** The flag OR'ed vs AND'ed with other flags mapped to the same GPIO pin. This OR/AND operation takes place after the polarity from FLAG\_POL is evaluated.

- 1 = OR Operation
- 0 = AND Operation

**RSVD (Bit 11, 10, 9):** Reserved. Do not use.

**FLAG\_POL (Bit 8):** Polarity of the flag when mapped to a GPIO pin

- 1 = Invert flag polarity
- 0 = No change to flag polarity

**FLAG\_BIT3, FLAG\_BIT2, FLAG\_BIT1, FLAG\_BIT0 (Bit 7, Bit 6, Bit 5, Bit 4):** Bit position within the 16-bit register of the flag

- 0, 0, 0, 0 = Bit 0
- 0, 0, 0, 1 = Bit 1
- 0, 0, 1, 0 = Bit 2
- 0, 0, 1, 1 = Bit 3
- 0, 1, 0, 0 = Bit 4
- 0, 1, 0, 1 = Bit 5
- 0, 1, 1, 0 = Bit 6
- 0, 1, 1, 1 = Bit 7
- 1, 0, 0, 0 = Bit 8
- 1, 0, 0, 1 = Bit 9
- 1, 0, 1, 0 = Bit 10

1, 0, 1, 1 = Bit 11  
1, 1, 0, 0 = Bit 12  
1, 1, 0, 1 = Bit 13  
1, 1, 1, 0 = Bit 14  
1, 1, 1, 1 = Bit 15

**FLAG\_REG3, FLAG\_REG2, FLAG\_REG1, FLAG\_REG0 (Bit 3, Bit 2, Bit 1, Bit 0):** Address of the register that contains the flag

0, 0, 0, 0 = *BatteryMode()*  
0, 0, 0, 1 = *BatteryStatus()*  
0, 0, 1, 0 = *OperationStatusA()*, lower 16 bits of *OperationStatus()*  
0, 0, 1, 1 = *OperationStatusB()*, higher 16 bits of *OperationStatus()*  
0, 1, 0, 0 = *ChargingStatus()*  
0, 1, 0, 1 = *TempStatus()*  
0, 1, 1, 0 = *GaugingStatus()*  
0, 1, 1, 1 = *ITStatus()*  
1, 0, 0, 0 = *SafetyStatusAB()*, lower 16 bits of *SafetyStatus()*  
1, 0, 0, 1 = *SafetyStatusCD()*, higher 16 bits of *SafetyStatus()*  
1, 0, 1, 0 = Any Safety Status bit in *SafetyStatus()*  
1, 0, 1, 1 = *PFStatusAB()*, lower 16 bits of *PFStatus()*  
1, 1, 0, 0 = *PFStatusCD()*, higher 16 bits of *PFStatus()*  
1, 1, 0, 1 = Any PF Status bit in *PFStatus()*  
1, 1, 1, 0 = Unused  
1, 1, 1, 1 = Unused

#### 20.1.2.4 Set Up 2 Pin Number

| Class    | Subclass | Name                | Type | Min  | Max  | Default | Unit |
|----------|----------|---------------------|------|------|------|---------|------|
| Settings | Flag Map | Set Up 2 Pin Number | U1   | 0x00 | 0x0A | 0x00    | #    |

| Value Pin Assignment |                                                   |
|----------------------|---------------------------------------------------|
| 0                    | Disabled (No pin assigned)                        |
| 1                    | INT (Pad C2) - Programmable interrupt/GPIO output |

**Note:** The device is a 15-pad BGA package. The INT pin (pad C2) is the only GPIO-capable pin that can be used for flag mapping. The INT pin can be configured as a programmable output interrupt or GPIO via device firmware.

#### 20.1.2.5 Set Up 3 Configuration

| Class    | Subclass | Name                   | Type | Min    | Max    | Default | Unit |
|----------|----------|------------------------|------|--------|--------|---------|------|
| Settings | Flag Map | Set Up 3 Configuration | H2   | 0x0000 | 0xFFFF | 0x0000  | Hex  |

|           |           |           |           |           |           |           |           |
|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
| 15        | 14        | 13        | 12        | 11        | 10        | 9         | 8         |
| FLAG_EN   | RSVD      | FLAG_OD   | FLAG_OR   | RSVD      | RSVD      | RSVD      | FLAG_POL  |
| 7         | 6         | 5         | 4         | 3         | 2         | 1         | 0         |
| FLAG_BIT3 | FLAG_BIT2 | FLAG_BIT1 | FLAG_BIT0 | FLAG_REG3 | FLAG_REG2 | FLAG_REG1 | FLAG_REG0 |

**FLAG\_EN (Bit 15):** Enable/disable the control

1 = Enable

0 = Disable

**RSVD (Bit 14):** Reserved. Do not use.

**FLAG\_OD (Bit 13):** This bit determines whether the GPIO pin is driven between two levels as hi-Z/driven-low (that is, open drain) or as driven-high/driven-low (that is, active high).

Note: The *[FLAG\_OD]* bit cannot be set differently by separate controls when mapped to the same GPIO pin.

1 = Hi-Z/driven-low

0 = Driven-high/driven-low

**FLAG\_OR (Bit 12):** The flag OR'ed vs AND'ed with other flags mapped to the same GPIO pin. This OR/AND operation takes place after the polarity from *[FLAG\_POL]* is evaluated.

1 = OR Operation

0 = AND Operation

**RSVD (Bit 11, 10, 9):** Reserved. Do not use.

**FLAG\_POL (Bit 8):** Polarity of the flag when mapped to a GPIO pin

1 = Invert flag polarity

0 = No change to flag polarity

**FLAG\_BIT3, FLAG\_BIT2, FLAG\_BIT1, FLAG\_BIT0 (Bit 7, Bit 6, Bit 5, Bit 4):** Bit position within the 16-bit register of the flag

0, 0, 0, 0 = Bit 0

0, 0, 0, 1 = Bit 1

0, 0, 1, 0 = Bit 2

0, 0, 1, 1 = Bit 3

0, 1, 0, 0 = Bit 4

0, 1, 0, 1 = Bit 5

0, 1, 1, 0 = Bit 6

0, 1, 1, 1 = Bit 7

1, 0, 0, 0 = Bit 8

1, 0, 0, 1 = Bit 9

1, 0, 1, 0 = Bit 10

1, 0, 1, 1 = Bit 11

1, 1, 0, 0 = Bit 12

1, 1, 0, 1 = Bit 13

1, 1, 1, 0 = Bit 14

1, 1, 1, 1 = Bit 15

**FLAG\_REG3, FLAG\_REG2, FLAG\_REG1, FLAG\_REG0 (Bit 3, Bit 2, Bit 1, Bit 0):** Address of the register containing the flag

0, 0, 0, 0 = *BatteryMode()*

0, 0, 0, 1 = *BatteryStatus()*

0, 0, 1, 0 = *OperationStatusA()*, lower 16 bits of *OperationStatus()*

0, 0, 1, 1 = *OperationStatusB()*, higher 16 bits of *OperationStatus()*

0, 1, 0, 0 = *ChargingStatus()*

0, 1, 0, 1 = *TempStatus()*

0, 1, 1, 0 = *GaugingStatus()*

0, 1, 1, 1 = *ITStatus()*

1, 0, 0, 0 = *SafetyStatusAB()*, lower 16 bits of *SafetyStatus()*

1, 0, 0, 1 = *SafetyStatusCD()*, higher 16 bits of *SafetyStatus()*

1, 0, 1, 0 = Any Safety Status bit in *SafetyStatus()*

1, 0, 1, 1 = *PFStatusAB()*, lower 16 bits of *PFStatus()*

1, 1, 0, 0 = *PFStatusCD()*, higher 16 bits of *PFStatus()*

1, 1, 0, 1 = Any PF Status bit in *PFStatus()*

1, 1, 1, 0 = Unused

1, 1, 1, 1 = Unused

### 20.1.2.6 Set Up 3 Pin Number

| Class    | Subclass | Name                | Type | Min  | Max  | Default | Unit |
|----------|----------|---------------------|------|------|------|---------|------|
| Settings | Flag Map | Set Up 3 Pin Number | U1   | 0x00 | 0x0A | 0x00    | #    |

| Value | Pin Assignment                                    |
|-------|---------------------------------------------------|
| 0     | Disabled (No pin assigned)                        |
| 1     | INT (Pad C2) - Programmable interrupt/GPIO output |

**Note:** The device is a 15-pad BGA package. The INT pin (pad C2) is the only GPIO-capable pin that can be used for flag mapping. The INT pin can be configured as a programmable output interrupt or GPIO via device firmware.

### 20.1.2.7 Set Up 4 Configuration

| Class    | Subclass | Name                   | Type | Min    | Max    | Default | Unit |
|----------|----------|------------------------|------|--------|--------|---------|------|
| Settings | Flag Map | Set Up 4 Configuration | H2   | 0x0000 | 0xFFFF | 0x0000  | Hex  |

|           |           |           |           |           |           |           |           |
|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
| 15        | 14        | 13        | 12        | 11        | 10        | 9         | 8         |
| FLAG_EN   | RSVD      | FLAG_OD   | FLAG_OR   | RSVD      | RSVD      | RSVD      | FLAG_POL  |
| 7         | 6         | 5         | 4         | 3         | 2         | 1         | 0         |
| FLAG_BIT3 | FLAG_BIT2 | FLAG_BIT1 | FLAG_BIT0 | FLAG_REG3 | FLAG_REG2 | FLAG_REG1 | FLAG_REG0 |

**FLAG\_EN (Bit 15):** Enable/disable the control

- 1 = Enable
- 0 = Disable

**RSVD (Bit 14):** Reserved. Do not use.

**FLAG\_OD (Bit 13):** This bit determines whether the GPIO pin is driven between two levels as hi-Z/driven-low (that is, open drain) or as driven-high/driven-low (that is, active high).

Note: The *[FLAG\_OD]* bit cannot be set differently by separate controls when mapped to the same GPIO pin.

- 1 = Hi-Z/driven-low
- 0 = Driven-high/driven-low

**FLAG\_OR (Bit 12):** Flag OR'ed vs AND'ed with other flags mapped to the same GPIO pin. This OR/AND operation takes place after the polarity from *[FLAG\_POL]* is evaluated.

- 1 = OR Operation
- 0 = AND Operation

**RSVD (Bit 11, 10, 9):** Reserved. Do not use.

**FLAG\_POL (Bit 8):** Polarity of the flag when mapped to a GPIO pin

- 1 = Invert flag polarity
- 0 = No change to flag polarity

**FLAG\_BIT3, FLAG\_BIT2, FLAG\_BIT1, FLAG\_BIT0 (Bit 7, Bit 6, Bit 5, Bit 4):** Bit position within the 16-bit register of the flag

- 0, 0, 0, 0 = Bit 0
- 0, 0, 0, 1 = Bit 1
- 0, 0, 1, 0 = Bit 2
- 0, 0, 1, 1 = Bit 3
- 0, 1, 0, 0 = Bit 4

0, 1, 0, 1 = Bit 5  
 0, 1, 1, 0 = Bit 6  
 0, 1, 1, 1 = Bit 7  
 1, 0, 0, 0 = Bit 8  
 1, 0, 0, 1 = Bit 9  
 1, 0, 1, 0 = Bit 10  
 1, 0, 1, 1 = Bit 11  
 1, 1, 0, 0 = Bit 12  
 1, 1, 0, 1 = Bit 13  
 1, 1, 1, 0 = Bit 14  
 1, 1, 1, 1 = Bit 15

**FLAG\_REG3, FLAG\_REG2, FLAG\_REG1, FLAG\_REG0 (Bit 3, Bit 2, Bit 1, Bit 0):** Address of the register that contains the flag

0, 0, 0, 0 = *BatteryMode()*  
 0, 0, 0, 1 = *BatteryStatus()*  
 0, 0, 1, 0 = *OperationStatusA()*, lower 16 bits of *OperationStatus()*  
 0, 0, 1, 1 = *OperationStatusB()*, higher 16 bits of *OperationStatus()*  
 0, 1, 0, 0 = *ChargingStatus()*  
 0, 1, 0, 1 = *TempStatus()*  
 0, 1, 1, 0 = *GaugingStatus()*  
 0, 1, 1, 1 = *ITStatus()*  
 1, 0, 0, 0 = *SafetyStatusAB()*, lower 16 bits of *SafetyStatus()*  
 1, 0, 0, 1 = *SafetyStatusCD()*, higher 16 bits of *SafetyStatus()*  
 1, 0, 1, 0 = Any Safety Status bit in *SafetyStatus()*  
 1, 0, 1, 1 = *PFStatusAB()*, lower 16 bits of *PFStatus()*  
 1, 1, 0, 0 = *PFStatusCD()*, higher 16 bits of *PFStatus()*  
 1, 1, 0, 1 = Any PF Status bit in *PFStatus()*  
 1, 1, 1, 0 = Unused  
 1, 1, 1, 1 = Unused

#### 20.1.2.8 Set Up 4 Pin Number

| Class    | Subclass | Name                | Type | Min  | Max  | Default | Unit |
|----------|----------|---------------------|------|------|------|---------|------|
| Settings | Flag Map | Set Up 4 Pin Number | U1   | 0x00 | 0x0A | 0x00    | #    |

| Value |                                                   | Pin Assignment |
|-------|---------------------------------------------------|----------------|
| 0     | Disabled (No pin assigned)                        |                |
| 1     | INT (Pad C2) - Programmable interrupt/GPIO output |                |

**Note:** The device is a 15-pad BGA package. The INT pin (pad C2) is the only GPIO-capable pin that can be used for flag mapping. The INT pin can be configured as a programmable output interrupt or GPIO via device firmware.

### 20.1.3 GPIO

#### 20.1.3.1 Pres Pin Number

| Class    | Subclass | Name            | Type | Min  | Max  | Default | Unit |
|----------|----------|-----------------|------|------|------|---------|------|
| Settings | GPIO     | Pres Pin Number | U1   | 0x00 | 0xFF | 0xC3    | —    |

**Description:** Package pin number assigned to the system presence detection input. When the **NR** flag is cleared, the firmware samples this pin as an active-low input to detect whether the device is installed in a system. Setting this parameter to 0x00 disables the system presence function.

### 20.1.3.2 Disconnect Pin Number

| Class    | Subclass | Name                  | Type | Min | Max  | Default | Unit |
|----------|----------|-----------------------|------|-----|------|---------|------|
| Settings | GPIO     | Disconnect Pin Number | U1   | 0   | 0xFF | 0       | —    |

**Description:** Package pin number used for disconnect pin.

### 20.1.3.3 Emergency Shutdown Pin Number

| Class    | Subclass | Name                          | Type | Min | Max  | Default | Unit |
|----------|----------|-------------------------------|------|-----|------|---------|------|
| Settings | GPIO     | Emergency Shutdown Pin Number | U1   | 0   | 0xFF | 0       | —    |

**Description:** Package pin number used for ESHUT pin.

### 20.1.3.4 IO Shutdown Pin Number

| Class    | Subclass | Name                   | Type | Min | Max  | Default | Unit |
|----------|----------|------------------------|------|-----|------|---------|------|
| Settings | GPIO     | IO Shutdown Pin Number | U1   | 0   | 0xFF | 0       | —    |

**Description:** Package pin number used for IO Shutdown pin.

### 20.1.3.5 BTP Pin Number

| Class    | Subclass | Name           | Type | Min | Max  | Default | Unit |
|----------|----------|----------------|------|-----|------|---------|------|
| Settings | GPIO     | BTP Pin Number | U1   | 0   | 0xFF | 0       | —    |

**Description:** Package pin number used for BTP interrupts.

### 20.1.3.6 BTP Pin Configuration

| Class    | Subclass | Name           | Type | Min  | Max  | Default   | Unit |
|----------|----------|----------------|------|------|------|-----------|------|
| Settings | GPIO     | BTP Pin Config | H1   | 0x0  | 0x02 | 2         | Hex  |
| 7        | 6        | 5              | 4    | 3    | 2    | 1         | 0    |
| RSVD     | RSVD     | RSVD           | RSVD | RSVD | RSVD | ACTIVE_HI | RSVD |

**RSVD (Bits 7-2):** Reserved. Do not use.

**ACTIVE\_HI (Bit 1):** Assert Polarity

1 = Active high (default)

0 = Active low

**RSVD (Bit 0):** Reserved. Do not use.

### 20.1.3.7 GPIO\_PF Pin Number

| Class    | Subclass | Name               | Type | Min | Max  | Default | Unit |
|----------|----------|--------------------|------|-----|------|---------|------|
| Settings | GPIO     | GPIO_PF Pin Number | U1   | 0   | 0xFF | 0       | —    |

**Description:** Package pin number used for indicating PF on GPIO.

### 20.1.3.8 GPIO\_INT Enable

| Class    | Subclass   | Name            | Type       | Min  | Max  | Default    | Unit       |
|----------|------------|-----------------|------------|------|------|------------|------------|
| Settings | GPIO       | GPIO_INT Enable | H1         | 0x00 | 0x73 | 0x40       | Hex        |
| 7        | 6          | 5               | 4          | 3    | 2    | 1          | 0          |
| RSVD     | RC2_PIN_C3 | RC1_PIN_C1      | RC0_PIN_C2 | RSVD | RSVD | RA1_PIN_E3 | RA0_PIN_D3 |

**RSVD (Bit 7):** Reserved. Do not use.

**RC2\_PIN\_C3 (Bit 6):** Enable RC2 (package pin C3) for GPIO

1 = Enabled (default)

0 = Disabled

**RC1\_PIN\_C1 (Bit 5):** Enable RC1 (package pin C1) for GPIO

1 = Enabled

0 = Disabled (default)

**RC0\_PIN\_C2 (Bit 4):** Enable RC0 (package pin C2) for GPIO

1 = Enabled

0 = Disabled (default)

**RSVD (Bits 3–2):** Reserved. Do not use.

**RA1\_PIN\_E3 (Bit 1):** Enable RA1 (package pin E3) for GPIO

1 = Enabled

0 = Disabled (default)

**RA0\_PIN\_D3 (Bit 0):** Enable RA0 (package pin D3) for GPIO

1 = Enabled

0 = Disabled (default)

#### 20.1.3.9 GPIO\_INT Output Enable

| Class    | Subclass   | Name                   | Type       | Min  | Max  | Default    | Unit       |
|----------|------------|------------------------|------------|------|------|------------|------------|
| Settings | GPIO       | GPIO_INT Output Enable | H1         | 0x00 | 0x73 | 0x40       | Hex        |
| 7        | 6          | 5                      | 4          | 3    | 2    | 1          | 0          |
| RSVD     | RC2_PIN_C3 | RC1_PIN_C1             | RC0_PIN_C2 | RSVD | RSVD | RA1_PIN_E3 | RA0_PIN_D3 |

**RSVD (Bit 7):** Reserved. Do not use.

**RC2\_PIN\_C3 (Bit 6):** Initial direction of RC2 (package pin C3)

1 = Enabled for output (default)

0 = Disabled for output. The pin is read as input using pulsed pull-up.

**RC1\_PIN\_C1 (Bit 5):** Initial direction of RC1 (package pin C1)

1 = Enabled for output

0 = Disabled for output. The pin is read as input using pulsed pull-up. (default)

**RC0\_PIN\_C2 (Bit 4):** Initial direction of RC0 (package pin C2)

1 = Enabled for output

0 = Disabled for output. The pin is read as input using pulsed pull-up. (default)

**RSVD (Bits 3–2):** Reserved. Do not use.

**RA1\_PIN\_E3 (Bit 1):** Initial direction of RA1 (package pin E3)

1 = Enabled for output

0 = Disabled for output. The pin is read as input using pulsed pull-up. (default)

**RA0\_PIN\_D3 (Bit 0):** Initial direction of RA0 (package pin D3)

1 = Enabled for output

0 = Disabled for output. The pin is read as input using pulsed pull-up. (default)

### 20.1.3.10 GPIO\_INT Default Out

| Class    | Subclass   | Name                 | Type       | Min  | Max  | Default    | Unit       |
|----------|------------|----------------------|------------|------|------|------------|------------|
| Settings | GPIO       | GPIO_INT Default Out | H1         | 0x00 | 0x73 | 0x00       | Hex        |
| 7        | 6          | 5                    | 4          | 3    | 2    | 1          | 0          |
| RSVD     | RC2_PIN_C3 | RC1_PIN_C1           | RC0_PIN_C2 | RSVD | RSVD | RA1_PIN_E3 | RA0_PIN_D3 |

**RSVD (Bit 7):** Reserved. Do not use.

**RC2\_PIN\_C3 (Bit 6):** Initial output value of RC2 (package pin C3), if enabled as output by *GPIO\_INT Output Enable*

1 = Initial output is high

0 = Initial output is low (default)

**RC1\_PIN\_C1 (Bit 5):** Initial output value of RC1 (package pin C1), if enabled as output by *GPIO\_INT Output Enable*

1 = Initial output is high

0 = Initial output is low (default)

**RC0\_PIN\_C2 (Bit 4):** Initial output value of RC0 (package pin C2), if enabled as output by *GPIO\_INT Output Enable*

1 = Initial output is high

0 = Initial output is low (default)

**RSVD (Bits 3–2):** Reserved. Do not use.

**RA1\_PIN\_E3 (Bit 1):** Initial output value of RA1 (package pin E3), if enabled as output by *GPIO\_INT Output Enable*

1 = Initial output is high

0 = Initial output is low (default)

**RA0\_PIN\_D3 (Bit 0):** Initial output value of RA0 (package pin D3), if enabled as output by *GPIO\_INT Output Enable*

1 = Initial output is high

0 = Initial output is low (default)

### 20.1.3.11 Sealed Access Config

| Class    | Subclass   | Name                 | Type       | Min  | Max  | Default    | Unit       |
|----------|------------|----------------------|------------|------|------|------------|------------|
| Settings | GPIO       | Sealed Access Config | H1         | 0x00 | 0x73 | 0x40       | Hex        |
| 7        | 6          | 5                    | 4          | 3    | 2    | 1          | 0          |
| RSVD     | RC2_PIN_C3 | RC1_PIN_C1           | RC0_PIN_C2 | RSVD | RSVD | RA1_PIN_E3 | RA0_PIN_D3 |

**RSVD (Bit 7):** Reserved. Do not use.

**RC2\_PIN\_C3 (Bit 6):** RC2\_PIN\_C3 SEALED mode access

1 = Enabled (default)

0 = Disabled

**RC1\_PIN\_C1 (Bit 5):** RC1\_PIN\_C1 SEALED mode access

1 = Enabled

0 = Disabled (default)

**RC0\_PIN\_C2 (Bit 4):** RC0\_PIN\_C2 SEALED mode access

1 = Enabled

0 = Disabled (default)

**RSVD (Bits 3–2):** Reserved. Do not use.

**RA1\_PIN\_E3 (Bit 1):** RA1\_PIN\_E3 SEALED mode access

1 = Enabled

0 = Disabled (default)

**RA0\_PIN\_D3 (Bit 0):** RA0\_PIN\_D3 SEALED mode access

1 = Enabled

0 = Disabled (default)

## 20.1.4 BTP

### 20.1.4.1 Init Discharge Set

| Class    | Subclass | Name               | Type | Min | Max   | Default | Unit |
|----------|----------|--------------------|------|-----|-------|---------|------|
| Settings | BTP      | Init Discharge Set | U2   | 0   | 32767 | 150     | mAh  |

**Description:** Initial value for *BTPDischargeSet()* if *Settings.Configuration.IO Config[BTP\_MODE]* is set to 0.

### 20.1.4.2 Init Charge Set

| Class    | Subclass | Name            | Type | Min | Max   | Default | Unit |
|----------|----------|-----------------|------|-----|-------|---------|------|
| Settings | BTP      | Init Charge Set | U2   | 0   | 32767 | 175     | mAh  |

**Description:** Initial value for *BTPChargeSet()* if *Settings.Configuration.IO Config[BTP\_MODE]* is set to 0.

### 20.1.4.3 Init Charge SOC Set

| Class    | Subclass | Name                | Type | Min | Max | Default | Unit |
|----------|----------|---------------------|------|-----|-----|---------|------|
| Settings | BTP      | Init Charge SOC Set | U1   | 0   | 100 | 10      | 0%   |

**Description:** Initial value for *BTPChargeSet()* if *Settings.Configuration.IO Config[BTP\_MODE]* is set to 1.

### 20.1.4.4 Init Discharge SOC Set

| Class    | Subclass | Name                   | Type | Min | Max | Default | Unit |
|----------|----------|------------------------|------|-----|-----|---------|------|
| Settings | BTP      | Init Discharge SOC Set | U1   | 0   | 100 | 5       | %    |

**Description:** Initial value for *BTPDischargeSet()* if *Settings.Configuration.IO Config[BTP\_MODE]* is set to 1.

## 20.1.5 Sealed Access

### 20.1.5.1 DF Only Read Timeout

| Class    | Subclass      | Name                 | Type | Min | Max | Default | Unit |
|----------|---------------|----------------------|------|-----|-----|---------|------|
| Settings | Sealed Access | DF Read Only Timeout | U1   | 0   | 255 | 10      | s    |

**Description:** Time limit on data flash read in DF Read Only mode when gauge is SEALED

### 20.1.5.2 MfgInfoC Write Timeout

| Class    | Subclass      | Name                   | Type | Min | Max | Default | Unit |
|----------|---------------|------------------------|------|-----|-----|---------|------|
| Settings | Sealed Access | MfgInfoC Write Timeout | U1   | 0   | 255 | 10      | s    |

**Description:** Time limit for *ManufacturerInfoC()* data flash update after MfgInfoC Write MAC sequence is issued while the gauge is SEALED.

### Note

Please be aware that this timer will stop if the device enters SLEEP mode within the programmed time limit while **[AUTO\_CAL\_EN] = 1**, and will resume after the auto CC calibration completes.

## 20.1.6 Lifetimes

### 20.1.6.1 Lifetimes Configuration

| Class    | Subclass      | Name                    | Type | Min    | Max    | Default | Unit             |
|----------|---------------|-------------------------|------|--------|--------|---------|------------------|
| Settings | Configuration | Lifetimes Configuration | H2   | 0x0000 | 0xFFFF | 0x0000  | Hex              |
| 15       | 14            | 13                      | 12   | 11     | 10     | 9       | 8                |
| RSVD     | RSVD          | RSVD                    | RSVD | RSVD   | RSVD   | RSVD    | RSVD             |
| 7        | 6             | 5                       | 4    | 3      | 2      | 1       | 0                |
| RSVD     | RSVD          | RSVD                    | RSVD | RSVD   | RSVD   | RSVD    | SEALED_RESE<br>T |

**RSVD (Bits 15–1):** Reserved. Do not use.

**SEALED\_RESET (Bit 0):** Enables reset of *Lifetime Data*

1 = Enabled

0 = Disabled

### 20.1.6.2 Time RSOC Thresholds

| Class    | Subclass  | Name                  | Type | Min | Max | Default | Unit |
|----------|-----------|-----------------------|------|-----|-----|---------|------|
| Settings | Lifetimes | Time RSOC Threshold A | U1   | 0   | 100 | 95      | %    |
| Settings | Lifetimes | Time RSOC Threshold B | U1   | 0   | 100 | 90      | %    |
| Settings | Lifetimes | Time RSOC Threshold C | U1   | 0   | 100 | 80      | %    |
| Settings | Lifetimes | Time RSOC Threshold D | U1   | 0   | 100 | 50      | %    |
| Settings | Lifetimes | Time RSOC Threshold E | U1   | 0   | 100 | 20      | %    |
| Settings | Lifetimes | Time RSOC Threshold F | U1   | 0   | 100 | 10      | %    |
| Settings | Lifetimes | Time RSOC Threshold G | U1   | 0   | 100 | 5       | %    |

**Description:** Configure RSOC slots to record Total firmware runtime spent according to running RSOC for a temperature range

### 20.1.6.3 Temperature Hold-off Time

| Class    | Subclass  | Name                      | Type | Min | Max | Default | Unit |
|----------|-----------|---------------------------|------|-----|-----|---------|------|
| Settings | Lifetimes | Temperature Hold-off Time | U1   | 0   | 255 | 5       | s    |

**Description:** Minimum time required to be in CHARGE, DISCHARGE or RELAX mode to start collecting lifetime temperature data

### 20.1.6.4 Time Temperature Limits

| Class    | Subclass  | Name                   | Type | Min  | Max  | Default | Unit  |
|----------|-----------|------------------------|------|------|------|---------|-------|
| Settings | Lifetimes | LFT_T0 Temp            | I2   | 2332 | 3932 | 2632    | 0.1 K |
| Settings | Lifetimes | Hysteresis Temp LFT_T0 | I2   | 0    | 150  | 10      | 0.1 K |
| Settings | Lifetimes | LFT_T1 Temp            | I2   | 2332 | 3932 | 2732    | 0.1 K |
| Settings | Lifetimes | Hysteresis Temp LFT_T1 | I2   | 0    | 150  | 10      | 0.1 K |
| Settings | Lifetimes | LFT_T2 Temp            | I2   | 2332 | 3932 | 2852    | 0.1 K |
| Settings | Lifetimes | Hysteresis Temp LFT_T2 | I2   | 0    | 150  | 10      | 0.1 K |
| Settings | Lifetimes | LFT_T5 Temp            | I2   | 2332 | 3932 | 2932    | 0.1 K |
| Settings | Lifetimes | Hysteresis Temp LFT_T5 | I2   | 0    | 150  | 10      | 0.1 K |
| Settings | Lifetimes | LFT_T6 Temp            | I2   | 2332 | 3932 | 2982    | 0.1 K |
| Settings | Lifetimes | Hysteresis Temp LFT_T6 | I2   | 0    | 150  | 10      | 0.1 K |
| Settings | Lifetimes | LFT_T3 Temp            | I2   | 2332 | 3932 | 3032    | 0.1 K |
| Settings | Lifetimes | Hysteresis Temp LFT_T3 | I2   | 0    | 150  | 10      | 0.1 K |

| Class    | Subclass  | Name                   | Type | Min  | Max  | Default | Unit  |
|----------|-----------|------------------------|------|------|------|---------|-------|
| Settings | Lifetimes | LFT_T4 Temp            | I2   | 2332 | 3932 | 3282    | 0.1 K |
| Settings | Lifetimes | Hysteresis Temp LFT_T4 | I2   | 0    | 150  | 10      | 0.1 K |

**Description:** Temperature limits used for Lifetime Temperature-RSOC recording. Settings must follow the  $LFT\_T0 \leq LFT\_T1 \leq LFT\_T2 \leq LFT\_T5 \leq LFT\_T6 \leq LFT\_T3 \leq LFT\_T4$  order.

## 20.1.7 Protection

### 20.1.7.1 Protection Configuration

| Class    | Subclass   | Name                     | Type | Min              | Max           | Default       | Unit     |
|----------|------------|--------------------------|------|------------------|---------------|---------------|----------|
| Settings | Protection | Protection Configuration | H2   | 0x0000           | 0x000F        | 0x0000        | Hex      |
| 7        | 6          | 5                        | 4    | 3                | 2             | 1             | 0        |
| RSVD     | RSVD       | RSVD                     | RSVD | CHECK_FAULT_WAKE | CUDEP_REQ_CHG | CUV_RECOV_CHG | SUV_MODE |

**RSVD (Bits 7–4):** Reserved. Do not use.

**CHECK\_FAULT\_WAKE (Bit 3)** If any protection (ignoring the time delay) is active at POR, corresponding FETs are prevented from closing.

1 = Enabled

0 = Disabled (default)

**CUDEP\_REQ\_CHG (Bit 2):** Requests *ChargingVoltage()* and *ChargingCurrent()* during the copper deposition check while the FETs are off when **[SUV\_MODE]** is enabled to prevent the charger from turning off before the check is complete.

1 = Enabled

0 = Disabled (default)

**CUV\_RECOV\_CHG (Bit 1):** Requires PACK voltage > **Charger Present Threshold** to recover *SafetyStatus()[CUV]*

1 = Enabled

0 = Disabled (default)

**SUV\_MODE (Bit 0):** Copper deposition check for *PFStatus()[CUV]*

1 = Enabled

0 = Disabled (default)

### 20.1.7.2 Enabled Protections A

| Class    | Subclass   | Name                  | Type | Min  | Max  | Default | Unit |
|----------|------------|-----------------------|------|------|------|---------|------|
| Settings | Protection | Enabled Protections A | H1   | 0x00 | 0xFF | 0xFF    | Hex  |
| 7        | 6          | 5                     | 4    | 3    | 2    | 1       | 0    |
| AOCDL    | RSVD_ONE   | OCD2                  | OCD1 | OCC2 | OCC1 | COV     | CUV  |

**AOCDL (Bit 7):** Overload in Discharge latch

1 = Enabled (default)

0 = Disabled

**RSVD\_ONE (Bit 6):** Reserved and programmed to 1. Do not use.

**OCD2 (Bit 5):** Overcurrent in Discharge 2nd Tier

1 = Enabled (default)

0 = Disabled

**OCD1 (Bit 4):** Overcurrent in Discharge 1st Tier

1 = Enabled (default)

0 = Disabled

**OCC2 (Bit 3):** Overcurrent in Charge 2nd Tier

1 = Enabled (default)

0 = Disabled

**OCC1 (Bit 2):** Overcurrent in Charge 1st Tier

1 = Enabled (default)

0 = Disabled

**COV (Bit 1):** Cell Overvoltage

1 = Enabled (default)

0 = Disabled

**CUV (Bit 0):** Cell Undervoltage

1 = Enabled (default)

0 = Disabled

### 20.1.7.3 Enabled Protections B

| Class    | Subclass   | Name                  | Type | Min   | Max      | Default | Unit |
|----------|------------|-----------------------|------|-------|----------|---------|------|
| Settings | Protection | Enabled Protections B | H1   | 0x00  | 0xFF     | 0xFF    | Hex  |
| 7        | 6          | 5                     | 4    | 3     | 2        | 1       | 0    |
| RSVD     | CUVC       | OTD                   | OTC  | ASCDL | RSVD_ONE | AOCCL   | AOCC |

**RSVD (Bit 7):** RSVD. Do not use.

**CUVC (Bit 6):** I\*R compensated CUV

1 = Enabled (default)

0 = Disabled

**OTD (Bit 5):** Overtemperature in discharge

1 = Enabled (default)

0 = Disabled

**OTC (Bit 4):** Overtemperature in charge

1 = Enabled (default)

0 = Disabled

**ASCDL (Bit 3):** Short circuit in discharge latch

1 = Enabled (default)

0 = Disabled

**RSVD\_ONE (Bit 2):** Reserved and programmed to 1. Do not use.

**AOCCL (Bit 1):** Short circuit in charge latch

1 = Enabled (default)

0 = Disabled

**AOCC (Bit 0):** Short circuit in charge

1 = Enabled (default)

0 =

### 20.1.7.4 Enabled Protections C

| Class    | Subclass   | Name                  | Type | Min  | Max  | Default | Unit |
|----------|------------|-----------------------|------|------|------|---------|------|
| Settings | Protection | Enabled Protections C | H1   | 0x00 | 0xFF | 0xD5    | Hex  |
| 7        | 6          | 5                     | 4    | 3    | 2    | 1       | 0    |
| CHGC     | OC         | RSVD                  | CTO  | RSVD | PTO  | HWDF    | OTF  |

**CHGC (Bit 7):** *ChargingCurrent()* higher than requested

1 = Enabled (default)

0 = Disabled

**OC (Bit 6):** Overcharge

1 = Enabled (default)

0 = Disabled

**RSVD (Bit 5):** Reserved. Do not use.

**CTO (Bit 4):** Charging timeout

1 = Enabled (default)

0 = Disabled

**RSVD (Bit 3):** Reserved. Do not use.

**PTO (Bit 2):** Precharging timeout

1 = Enabled (default)

0 = Disabled

**HWDF (Bit 1):** SBS Host watchdog timeout

1 = Enabled

0 = Disabled (default)

**OTF (Bit 0):** FET overtemperature

1 = Enabled (default)

0 = Disabled

### 20.1.7.5 Enabled Protections D

| Class    | Subclass   | Name                  | Type | Min  | Max  | Default | Unit |
|----------|------------|-----------------------|------|------|------|---------|------|
| Settings | Protection | Enabled Protections D | H1   | 0x00 | 0xFF | 0x0F    | Hex  |
| 7        | 6          | 5                     | 4    | 3    | 2    | 1       | 0    |
| ACOV     | ACUV       | OCDL                  | COVL | UTD  | UTC  | PCHGC   | CHGV |

**(Bit 7):** Over Voltage Hardware based protection

1 = Enabled

0 = Disabled (Default)

**(Bit 6):** Under Voltage Hardware based protection

1 = Enabled

0 = Disabled (Default)

**OCDL (Bit 5):** Overcurrent in Discharge related PF

1 = Enabled

0 = Disabled (default)

**COVL (Bit 4):** Cell Overvoltage Latch related PF

- 1 = Enabled)
- 0 = Disabled (default)

**UTD (Bit 3):** Undertemperature While Not Charging

- 1 = Enabled (default)
- 0 = Disabled

**UTC (Bit 2):** Undertemperature While Charging

- 1 = Enabled (default)
- 0 = Disabled

**PCHGC (Bit 1):** *ChargingCurrent()* higher than requested in precharge

- 1 = Enabled (default)
- 0 = Disabled

**CHGV (Bit 0):** *ChargingVoltage()* higher than requested

- 1 = Enabled (default)
- 0 = Disabled

## 20.1.8 Permanent Failure

### 20.1.8.1 Enabled PF A

| Class    | Subclass          | Name         | Type | Min  | Max  | Default | Unit |
|----------|-------------------|--------------|------|------|------|---------|------|
| Settings | Permanent Failure | Enabled PF A | H1   | 0x00 | 0xFF | 0x00    | Hex  |
| 7        | 6                 | 5            | 4    | 3    | 2    | 1       | 0    |
| QIM      | SOTF              | COVL         | SOT  | SOCD | SOCC | SOV     | SUV  |

**QIM (Bit 7):** QMax Imbalance

- 1 = Enabled
- 0 = Disabled (default)

**OTF (Bit 6):** Overtemperature FET

- 1 = Enabled
- 0 = Disabled (default)

**COVL (Bit 5):** Cell Overvoltage Latch

- 1 = Enabled
- 0 = Disabled (default)

**SOT (Bit 4):** Safety Overtemperature

- 1 = Enabled
- 0 = Disabled (default)

**SOCD (Bit 3):** Safety Overcurrent in Discharge

- 1 = Enabled
- 0 = Disabled (default)

**SOCC (Bit 2):** Safety Overcurrent in Charge

- 1 = Enabled
- 0 = Disabled (default)

**SOV (Bit 1):** Safety Cell Overvoltage

- 1 = Enabled
- 0 = Disabled (default)

**SUV (Bit 0):** Safety Cell Undervoltage

1 = Enabled

0 = Disabled (default)

**20.1.8.2 Enabled PF B**

| Class    | Subclass          | Name         | Type | Min  | Max  | Default | Unit |
|----------|-------------------|--------------|------|------|------|---------|------|
| Settings | Permanent Failure | Enabled PF B | H1   | 0x00 | 0xFF | 0x00    | Hex  |

7                      6                      5                      4                      3                      2                      1                      0

|       |       |       |      |      |    |     |    |
|-------|-------|-------|------|------|----|-----|----|
| ASCDL | AOCCL | AOCDL | VIMA | VIMR | CD | IMP | CB |
|-------|-------|-------|------|------|----|-----|----|

**ASCDL (Bit 7):** Short Circuit in Discharge—PF Enable

1 = Enabled

0 = Disabled (default)

**AOCCL (Bit 6):** Short Circuit in Charge—PF Enable

1 = Enabled

0 = Disabled (default)

**AOCDL (Bit 5):** Overload in Discharge—PF Enable

1 = Enabled

0 = Disabled (default)

**VIMA (Bit 4):** Voltage Imbalance Active

1 = Enabled

0 = Disabled (default)

**VIMR (Bit 3):** Voltage Imbalance At Rest

1 = Enabled

0 = Disabled (default)

**CD (Bit 2):** Capacity Degradation

1 = Enabled

0 = Disabled (default)

**IMP (Bit 1):** Cell impedance

1 = Enabled

0 = Disabled (default)

**CB (Bit 0):** Cell balancing

1 = Enabled

0 = Disabled (default)

**20.1.8.3 Enabled PF C**

| Class    | Subclass          | Name         | Type | Min  | Max  | Default | Unit |
|----------|-------------------|--------------|------|------|------|---------|------|
| Settings | Permanent Failure | Enabled PF C | H1   | 0x00 | 0xFF | 0x00    | Hex  |

7                      6                      5                      4                      3                      2                      1                      0

|     |      |      |      |      |      |       |       |
|-----|------|------|------|------|------|-------|-------|
| NTC | 2LVL | AFEC | AFER | RSVD | OCDL | DFETF | CFETF |
|-----|------|------|------|------|------|-------|-------|

**NTC (Bit 7):** Permanent Fail Flag Display

1 = Enables **PFStatus[NTC]** = 1 when NTC fault is triggered.

0 = Disables the *PFStatus[NTC]* = 1 when NTC fault is triggered.

**2LVL (Bit 6):** FUSE input indicating a fuse trigger by an external 2nd-level protection

1 = Enabled

0 = Disabled (default)

**AFEC (Bit 5):** AFE Communication

1 = Enabled

0 = Disabled (default)

**AFER (Bit 4):** AFE Register

1 = Enabled

0 = n/a (default)

**RSVD (Bit 3):** Reserved. Do not use.

**OCDL (Bit 2):** Overcurrent in Discharge—PF Enable

1 = Enabled

0 = Disabled (default)

**DFETF (Bit 1):** Discharge FET

1 = Enabled

0 = Disabled (default)

**CFETF (Bit 0):** Charge FET

1 = Enabled

0 = Disabled (default)

#### 20.1.8.4 Enabled PF D

| Class     | Subclass          | Name         | Type | Min  | Max  | Default     | Unit |
|-----------|-------------------|--------------|------|------|------|-------------|------|
| Settings  | Permanent Failure | Enabled PF D | H1   | 0x00 | 0xFF | 0x00        | Hex  |
| 7         | 6                 | 5            | 4    | 3    | 2    | 1           | 0    |
| ISD<br>HI | ISD<br>LO         | RSVD         | TS   | RSVD | RSVD | PF<br>FORCE | BSD  |

**ISD\_HI (Bit 7):** Internal short detection high failure enable

1 = Enabled

0 = Disabled

**ISD\_LO (Bit 6):** Internal short detection low failure enable

1 = Enabled

0 = Disabled

**RSVD (Bit 5):** Reserved. Do not use.

**TS (Bit 4):** Open thermistor – TS1 failure enable

1 = Enabled

0 = Disabled

**RSVD (Bits 3–2):** Reserved. Do not use.

**PFFORCE (Bit 1):** Permanent failure forced by command enable. See [Manual Permanent Failure](#) for more information.

1 = Enabled

0 = Disabled

**BSD (Bit 0):** Battery swelling detection failure enable

1 = Enabled

0 = Disabled

## 20.1.9 AFE

### 20.1.9.1 OCC

| Class    | Subclass | Name | Type | Min | Max  | Default | Unit |
|----------|----------|------|------|-----|------|---------|------|
| Settings | AFE      | OCC  | U1   | 0x0 | 0x7F | 0x06    | Hex  |

7                      6                      5                      4                      3                      2                      1                      0

|      |            |
|------|------------|
| RSVD | SC_OCC_SEL |
|------|------------|

**RSVD (Bit 7):** Reserved. Do not use.

**SC\_OCC\_SEL (Bits 6-0):** Voltage threshold for overcurrent in charge. The threshold should be based on  $V_{SRP}-V_{SRN}$  and equal to  $1mV * SC\_OCC\_SEL$ .

### 20.1.9.2 OCD

| Class    | Subclass | Name | Type | Min | Max  | Default | Unit |
|----------|----------|------|------|-----|------|---------|------|
| Settings | AFE      | OCD1 | U1   | 0x0 | 0x7F | 0x06    | Hex  |

7                      6                      5                      4                      3                      2                      1                      0

|      |             |
|------|-------------|
| RSVD | SC_OCD1_SEL |
|------|-------------|

**RSVD (Bit 7):** Reserved. Do not use.

**SC\_OCD1\_SEL (Bits 6-0):** Voltage threshold for overcurrent in discharge. AOCD Voltage Threshold is  $-1mV * SC\_OCD1\_SEL$ .

### 20.1.9.3 Short Circuit Discharge

| Class    | Subclass | Name                    | Type | Min | Max  | Default | Unit |
|----------|----------|-------------------------|------|-----|------|---------|------|
| Settings | AFE      | Short Circuit Discharge | U1   | 0x0 | 0x7F | 0x7F    | Hex  |

7                      6                      5                      4                      3                      2                      1                      0

|      |            |
|------|------------|
| RSVD | SC_SCD_SEL |
|------|------------|

**RSVD (Bit 7):** Reserved. Do not use.

**SC\_SCD\_SEL (Bits 6-0):** Voltage threshold for short circuit in discharge. ASCD VoltageThreshold is  $-1mV * SC\_SCD\_SEL$ .

### 20.1.9.4 Under Voltage

| Class    | Subclass | Name          | Type | Min | Max  | Default | Unit |
|----------|----------|---------------|------|-----|------|---------|------|
| Settings | AFE      | Under Voltage | H1   | 0x0 | 0x7F | 0x28    | Hex  |

7                      6                      5                      4                      3                      2                      1                      0

|      |              |
|------|--------------|
| RSVD | SC_BATUV_SEL |
|------|--------------|

**RSVD (Bit 7):** Reserved. Do not use.

**SC\_BATUV\_SEL (Bits 6-0):** Voltage threshold for under voltage protection. The threshold should be based on  $V_{BAT}$  and equal to  $50mV * SC\_BATUV\_SEL$ .

### 20.1.9.5 Over Voltage

| Class    | Subclass | Name         | Type | Min | Max  | Default | Unit |
|----------|----------|--------------|------|-----|------|---------|------|
| Settings | AFE      | Over Voltage | U1   | 0x0 | 0x7F | 0x64    | Hex  |
| 7        | 6        | 5            | 4    | 3   | 2    | 1       | 0    |
| RSVD     |          | SC_BATOV_SEL |      |     |      |         |      |

**RSVD (Bit 7):** Reserved. Do not use.

**SC\_BATOV\_SEL (Bits 6-0):** Voltage threshold for hardware over voltage protection. The threshold should be based on  $V_{BAT}$  and equal to  $50mV * SC\_BATOV\_SEL$ .

### 20.1.9.6 Current Charge Wake

| Class    | Subclass | Name                 | Type | Min  | Max  | Default | Unit |
|----------|----------|----------------------|------|------|------|---------|------|
| Settings | AFE      | Current Charge Wake  | U1   | 0x70 | 0x7F | 0x74    | Hex  |
| 7        | 6        | 5                    | 4    | 3    | 2    | 1       | 0    |
| RSVD     |          | SC_CC_WAKE_SEL (3-0) |      |      |      |         |      |

**RSVD (Bits 7-4):** Reserved. Do not use.

**SC\_CC\_WAKE\_SEL\_LSB (Bits 3-0):** These bits are used to set voltage threshold of current charge wake. With  $0.5mV * SC\_CC\_WAKE\_SEL[3-0]$ .

### 20.1.9.7 Current Discharge Wake

| Class    | Subclass | Name                      | Type | Min  | Max  | Default | Unit |
|----------|----------|---------------------------|------|------|------|---------|------|
| Settings | AFE      | Current Discharge Wake    | U1   | 0x70 | 0x7F | 0x74    | Hex  |
| 7        | 6        | 5                         | 4    | 3    | 2    | 1       | 0    |
| RSVD     |          | SC_CD_WAKE_SEL (Bits 3-0) |      |      |      |         |      |

**RSVD (Bit 7):** Reserved. Do not use.

**SC\_CD\_WAKE\_SEL\_LSB (Bits 3-0):** These bits are used to set voltage threshold of current discharge wake. With  $-0.5mV * SC\_CD\_WAKE\_SEL[3-0]$ .

### 20.1.9.8 OCC Delay

| Class        | Subclass | Name                        | Type | Min  | Max  | Default | Unit |
|--------------|----------|-----------------------------|------|------|------|---------|------|
| Settings     | AFE      | OCC Delay                   | U1   | 0x00 | 0x7F | 0x07    | Hex  |
| 7            | 6        | 5                           | 4    | 3    | 2    | 1       | 0    |
| RSVD (Bit 7) |          | SC_OCC_FAULT_DLY (Bits 6-0) |      |      |      |         |      |

**RSVD:** Reserved. Do not use.

**SC\_OCC\_FAULT\_DLY (Bits 6-0):**  $SC\_OCC\_FAULT\_DLY * 0.854ms$ . Note a value of 0 disables the OCC hardware protection.

### 20.1.9.9 OCD Delay

| Class    | Subclass | Name      | Type | Min | Max  | Default | Unit |
|----------|----------|-----------|------|-----|------|---------|------|
| Settings | AFE      | OCD Delay | U1   | 0x0 | 0x7F | 0x07    | Hex  |

7                      6                      5                      4                      3                      2                      1                      0

|              |                             |
|--------------|-----------------------------|
| RSVD (Bit 7) | SC_OCD_FAULT_DLY (Bits 6-0) |
|--------------|-----------------------------|

**RSVD (Bit 7):** Reserved. Do Not Use.

**SC\_OCD\_FAULT\_DLY (Bits 6-0):** SC\_OCD\_FAULT\_DLY \* 0.854ms. Note a value of 0 disables the OCD hardware protection.

#### 20.1.9.10 Short Circuit Discharge Delay

| Class    | Subclass | Name                          | Type | Min | Max  | Default | Unit |
|----------|----------|-------------------------------|------|-----|------|---------|------|
| Settings | AFE      | Short Circuit Discharge Delay | H1   | 0x0 | 0x07 | 0x07    | Hex  |

7                      6                      5                      4                      3                      2                      1                      0

|                 |                             |
|-----------------|-----------------------------|
| RSVD (Bits 7-3) | SC_SCD_FAULT_DLY (Bits 2-0) |
|-----------------|-----------------------------|

**RSVD (Bits 7 - 3):** Reserved. Do not use.

**SC\_SCD\_FAULT\_DLY (Bits 2-0):** For (SC\_SCD\_FAULT\_DLY = 1): Minimum  $t_{SCD} = 91.5\mu s$  and Maximum  $t_{SCD} = 274.5\mu s$ . For (SC\_SCD\_FAULT\_DLY > 1):  $t_{SCD} = (SC\_SCD\_FAULT\_DLY = 1 \text{ Time}) + 8\mu s + ((SC\_SCD\_FAULT\_DLY - 2) \times 122\mu s)$ .

#### 20.1.9.11 Under Voltage Delay

| Class    | Subclass | Name                | Type | Min | Max  | Default | Unit |
|----------|----------|---------------------|------|-----|------|---------|------|
| Settings | AFE      | Under Voltage Delay | U1   | 0x0 | 0xFF | 0xFF    | Hex  |

7                      6                      5                      4                      3                      2                      1                      0

|                    |
|--------------------|
| SC_BATUV_FAULT_DLY |
|--------------------|

**SC\_BATUV\_FAULT\_DLY (Bits 7-0):** SC\_BATUV\_FAULT\_DLY \* 0.854ms. A value of 0 disables Under Voltage hardware protection.

#### 20.1.9.12 Over Voltage Delay

| Class    | Subclass | Name               | Type | Min | Max  | Default | Unit |
|----------|----------|--------------------|------|-----|------|---------|------|
| Settings | AFE      | Over Voltage Delay | U1   | 0x0 | 0xFF | 0xFF    | Hex  |

7                      6                      5                      4                      3                      2                      1                      0

|                    |
|--------------------|
| SC_BATOV_FAULT_DLY |
|--------------------|

**SC\_BATOV\_FAULT\_DLY (Bits 7-0):** SC\_BATOV\_FAULT\_DLY \* 0.854ms. A value of 0 disables Over Voltage hardware protection.

#### 20.1.9.13 Over Voltage Delay Hi

| Class    | Subclass | Name                  | Type | Min | Max  | Default | Unit |
|----------|----------|-----------------------|------|-----|------|---------|------|
| Settings | AFE      | Over Voltage Delay Hi | U1   | 0x0 | 0x1F | 0x1F    | Hex  |

15                      14                      13                      12                      11                      10                      9                      8

|                   |                                |
|-------------------|--------------------------------|
| RSVD (Bits 15-13) | SC_BATOV_FAULT_DLY (Bits 12-8) |
|-------------------|--------------------------------|

**RSVD (Bits 15-13):** Reserved. Do not use.

**SC\_BATOV\_FAULT\_DLY (Bits 12-8):** Upper bits for Over Voltage Delay hardware protection. SC\_BATOV\_FAULT\_DLY \* 0.854ms. A value of 0 disables Over Voltage hardware protection.

#### 20.1.9.14 CD Wake Delay

| Class           | Subclass | Name          | Type | Min                       | Max  | Default | Unit |
|-----------------|----------|---------------|------|---------------------------|------|---------|------|
| Settings        | AFE      | CD Wake Delay | U1   | 0x0                       | 0x1F | 0x1F    | Hex  |
| 7               | 6        | 5             | 4    | 3                         | 2    | 1       | 0    |
| RSVD (Bits 7-5) |          |               |      | SC_CD_WAKE_DLY (Bits 4-0) |      |         |      |

**RSVD:** Reserved. Do not use.

**SC\_CD\_WAKE\_DLY (Bits 4-0):** SC\_CD\_WAKE\_DLY \* 0.854ms. A value of 0 disables CD Wake detection.

#### 20.1.9.15 CC Wake Delay

| Class           | Subclass | Name          | Type | Min                       | Max  | Default | Unit |
|-----------------|----------|---------------|------|---------------------------|------|---------|------|
| Settings        | AFE      | CC Wake Delay | U1   | 0x0                       | 0x1F | 0x1F    | Hex  |
| 7               | 6        | 5             | 4    | 3                         | 2    | 1       | 0    |
| RSVD (Bits 7-5) |          |               |      | SC_CC_WAKE_DLY (Bits 4-0) |      |         |      |

**RSVD (Bits 7-5):** Reserved. Do not use.

**SC\_CC\_WAKE\_DLY (Bits 4-0):** SC\_CC\_WAKE\_DLY \* 0.854ms. A value of 0 disables CC Wake detection.

#### 20.1.9.16 ZVCHG Exit Threshold

| Class         | Subclass | Name                 | Type | Min | Max  | Default | Unit |
|---------------|----------|----------------------|------|-----|------|---------|------|
| Configuration | AFE      | ZVCHG Exit Threshold | I2   | 0   | 4000 | 2400    | mV   |

**Description:** *Voltage()* threshold where the gauge will exit ZVCHG mode when CFET is used for precharging.

### 20.1.10 Smart Temperature

#### 20.1.10.1 Mid Point Temp

| Class    | Subclass          | Name           | Type | Min  | Max  | Default | Unit  |
|----------|-------------------|----------------|------|------|------|---------|-------|
| Settings | Smart Temperature | Mid Point Temp | I2   | -400 | 1200 | 250     | 0.1°C |

**Description:** Mid point to calculate cell temperature for smart temperature sensor scheme.

### 20.1.11 Manufacturing

#### 20.1.11.1 Manufacturing Status Init

| Class    | Subclass      | Name                      | Type   | Min      | Max      | Default | Unit    |
|----------|---------------|---------------------------|--------|----------|----------|---------|---------|
| Settings | Manufacturing | Manufacturing Status Init | H2     | 0x0000   | 0xFFFF   | 0x0000  | Hex     |
| 15       | 14            | 13                        | 12     | 11       | 10       | 9       | 8       |
| RSVD     | RSVD          | RSVD                      | RSVD   | ACCHG_EN | ACDSG_EN | LED_EN  | FUSE_EN |
| 7        | 6             | 5                         | 4      | 3        | 2        | 1       | 0       |
| BBR_EN   | PF_EN         | LF_EN                     | FET_EN | GAUGE_EN | RSVD     | RSVD    | RSVD    |

**RSVD (Bits 15-12):** Reserved. Do not use.

**ACCCG\_EN (Bit 11):** Accumulated Charge Measurement in CHARGE direction

1 = Enabled

0 = Disabled

**ACDSG\_EN (Bit 10):** Accumulated Charge Measurement in DISCHARGE direction

1 = Enabled

0 = Disabled

**LED\_EN (Bit 9):** LED Display

1 = Enabled

0 = Disabled

**FUSE\_EN (Bit 8):** FUSE action

1 = Enabled

0 = Disabled (default)

**BBR\_EN (Bit 7):** Black Box Recorder

1 = Enabled

0 = Disabled (default)

**PF\_EN (Bit 6):** Permanent Fail

1 = Enabled

0 = Disabled (default)

**LF\_EN (Bit 5):** *Lifetime Data Collection*

1 = Enabled

0 = Disabled

**FET\_EN (Bit 4):** FET action

1 = Enabled

0 = Disabled (default)

**GAUGE\_EN (Bit 3):** Gauging

1 = Enabled

0 = Disabled (default)

**RSVD (Bits 2–0):** Reserved. Do not use.

## 20.1.12 Accumulated Charge Measurement

### 20.1.12.1 Accum Discharge Threshold

| Class    | Subclass           | Name                | Type | Min    | Max | Default | Unit |
|----------|--------------------|---------------------|------|--------|-----|---------|------|
| Settings | Accumulated Charge | Discharge Threshold | I2   | –32767 | 0   | –1000   | mAh  |

### 20.1.12.2 Accum Charge Threshold

| Class    | Subclass           | Name             | Type | Min | Max   | Default | Unit |
|----------|--------------------|------------------|------|-----|-------|---------|------|
| Settings | Accumulated Charge | Charge Threshold | I2   | 0   | 32767 | 1000    | mAh  |

## 20.2 Advanced Charging Algorithm

### 20.2.1 Minimum System Voltage

| Class                       | Subclass | Name                   | Type | Min | Max   | Default | Unit |
|-----------------------------|----------|------------------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Charger  | Minimum System Voltage | I    | 0   | 32767 | 3000    | mV   |

**Description:** Charger Minimum System Voltage (default 3000mV) to enter Minsys operation

## 20.2.2 CHGR\_DET Off Voltage

| Class                     | Subclass | Name                 | Type | Min    | Max   | Default | Unit |
|---------------------------|----------|----------------------|------|--------|-------|---------|------|
| Advanced Charge Algorithm | Charger  | CHGR_DET Off Voltage | I2   | -32768 | 32767 | 10      | mV   |

**Description:** This parameter sets the voltage threshold for charger detection exit (hysteresis). When the voltage on the charger detection pin falls below this threshold, the device recognizes the charger has been disconnected.

**Default Value:** 10mV provides a small hysteresis band below CHGR\_DET On Voltage.

**Related Parameter:** CHGR\_DET On Voltage (recommended 150mV) - sets the entry threshold for charger detection.

---

The difference between CHGR\_DET On Voltage and CHGR\_DET Off Voltage creates the hysteresis band that prevents chattering when the charger voltage is near the detection threshold.

---

## 20.2.3 CHGR\_DET On Voltage

| Class                     | Subclass | Name                | Type | Min    | Max   | Default | Unit |
|---------------------------|----------|---------------------|------|--------|-------|---------|------|
| Advanced Charge Algorithm | Charger  | CHGR_DET On Voltage | I2   | -32768 | 32767 | 0       | mV   |

**Description:** This parameter sets the voltage threshold for charger detection entry. When the voltage on the charger detection pin exceeds this threshold relative to the CHGR\_DET Off Voltage, the device recognizes a charger is connected.

**Recommended Value:** 150mV. The default value of 0mV may result in false charger detection in some applications.

**Related Parameter:** CHGR\_DET Off Voltage (default 10mV) - sets the hysteresis for charger detection exit.

---

For reliable charger detection, set CHGR\_DET On Voltage higher than CHGR\_DET Off Voltage to create proper hysteresis and avoid chattering.

---

## 20.2.4 Temperature Ranges

### 20.2.4.1 T1 Temp

| Class                       | Subclass           | Name    | Type | Min  | Max  | Default | Unit  |
|-----------------------------|--------------------|---------|------|------|------|---------|-------|
| Advanced Charging Algorithm | Temperature Ranges | T1 Temp | I2   | 2332 | 3932 | 2732    | 0.1°K |

**Description:** T1 low temperature range lower limit

### 20.2.4.2 Hysteresis Temp T1

| Class                       | Subclass           | Name               | Type | Min | Max | Default | Unit  |
|-----------------------------|--------------------|--------------------|------|-----|-----|---------|-------|
| Advanced Charging Algorithm | Temperature Ranges | Hysteresis Temp T1 | I2   | 0   | 150 | 10      | 0.1°K |

**Description:** This is the temperature hysteresis applied when temperature is increasing from under temperature to T1 low temperature range.

### 20.2.4.3 T2 Temp

| Class                       | Subclass           | Name    | Type | Min  | Max  | Default | Unit  |
|-----------------------------|--------------------|---------|------|------|------|---------|-------|
| Advanced Charging Algorithm | Temperature Ranges | T2 Temp | I2   | 2332 | 3932 | 2852    | 0.1 K |

**Description:** T2 low temperature range to standard temperature range

#### 20.2.4.4 Hysteresis Temp T2

| Class                       | Subclass           | Name               | Type | Min | Max | Default | Unit  |
|-----------------------------|--------------------|--------------------|------|-----|-----|---------|-------|
| Advanced Charging Algorithm | Temperature Ranges | Hysteresis Temp T2 | I2   | 0   | 150 | 10      | 0.1 K |

**Description:** This is the temperature hysteresis applied when temperature is increasing from low temperature to T2 standard low temperature range .

#### 20.2.4.5 T5 Temp

| Class                       | Subclass           | Name    | Type | Min  | Max  | Default | Unit  |
|-----------------------------|--------------------|---------|------|------|------|---------|-------|
| Advanced Charging Algorithm | Temperature Ranges | T5 Temp | I2   | 2332 | 3932 | 2932    | 0.1 K |

**Description:** T5 recommended temperature range lower limit

#### 20.2.4.6 Hysteresis Temp T5

| Class                       | Subclass           | Name               | Type | Min | Max | Default | Unit  |
|-----------------------------|--------------------|--------------------|------|-----|-----|---------|-------|
| Advanced Charging Algorithm | Temperature Ranges | Hysteresis Temp T5 | I2   | 0   | 150 | 10      | 0.1 K |

**Description:** This is the temperature hysteresis applied when temperature is increasing from standard low temperature to T5 recommended temperature range .

#### 20.2.4.7 T6 Temp

| Class                       | Subclass           | Name    | Type | Min  | Max  | Default | Unit  |
|-----------------------------|--------------------|---------|------|------|------|---------|-------|
| Advanced Charging Algorithm | Temperature Ranges | T6 Temp | I2   | 2332 | 3932 | 2982    | 0.1 K |

**Description:** T6 recommended temperature range upper limit

#### 20.2.4.8 Hysteresis Temp T6

| Class                       | Subclass           | Name               | Type | Min | Max | Default | Unit  |
|-----------------------------|--------------------|--------------------|------|-----|-----|---------|-------|
| Advanced Charging Algorithm | Temperature Ranges | Hysteresis Temp T6 | I2   | 0   | 150 | 10      | 0.1 K |

**Description:** This is the temperature hysteresis applied when temperature is decreasing from standard high temperature to T5 recommended temperature range .

#### 20.2.4.9 T3 Temp

| Class                       | Subclass           | Name    | Type | Min  | Max  | Default | Unit  |
|-----------------------------|--------------------|---------|------|------|------|---------|-------|
| Advanced Charging Algorithm | Temperature Ranges | T3 Temp | I2   | 2332 | 3932 | 3032    | 0.1 K |

**Description:** T3 standard temperature range to high temperature range

#### 20.2.4.10 Hysteresis Temp T3

| Class                       | Subclass           | Name               | Type | Min | Max | Default | Unit  |
|-----------------------------|--------------------|--------------------|------|-----|-----|---------|-------|
| Advanced Charging Algorithm | Temperature Ranges | Hysteresis Temp T3 | I2   | 0   | 150 | 10      | 0.1 K |

**Description:** This is the temperature hysteresis applied when temperature is decreasing from high temperature to T3 standard high temperature range .

### 20.2.4.11 T4 Temp

| Class                       | Subclass           | Name    | Type | Min  | Max  | Default | Unit  |
|-----------------------------|--------------------|---------|------|------|------|---------|-------|
| Advanced Charging Algorithm | Temperature Ranges | T4 Temp | I2   | 2332 | 3932 | 3282    | 0.1 K |

**Description:** T4 high temperature range upper limit

### 20.2.4.12 Hysteresis Temp T4

| Class                       | Subclass           | Name               | Type | Min | Max | Default | Unit  |
|-----------------------------|--------------------|--------------------|------|-----|-----|---------|-------|
| Advanced Charging Algorithm | Temperature Ranges | Hysteresis Temp T4 | I2   | 0   | 150 | 10      | 0.1 K |

**Description:** This is the temperature hysteresis applied when temperature is decreasing from over temperature to T4 high temperature range .

### 20.2.5 PreCharging

| Class                       | Subclass | Name    | Type | Min | Max   | Default | Unit |
|-----------------------------|----------|---------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | PCHG     | Current | I2   | 0   | 32767 | 88      | mA   |

**Description:** Precharge *ChargingCurrent()*

**Important:** The actual precharge current delivered depends on the **Current Gain** parameter in data flash, which must be configured based on the external sense resistor value. If the **Current Gain** is not properly configured for the application's sense resistor, the actual precharge current will differ from the configured value. See the *Linear Charger Current Gain* section for configuration details.

### 20.2.6 Maintenance Charging

| Class                       | Subclass | Name    | Type | Min | Max   | Default | Unit |
|-----------------------------|----------|---------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | MCHG     | Current | I2   | 0   | 32767 | 44      | mA   |

**Description:** Maintenance *ChargingCurrent()*

### 20.2.7 Voltage Range

#### 20.2.7.1 Precharge Start Voltage

| Class                       | Subclass      | Name                    | Type | Min | Max   | Default | Unit |
|-----------------------------|---------------|-------------------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Voltage Range | Precharge Start Voltage | I2   | 0   | 32767 | 2500    | mV   |

**Description:** Min cell voltage to enter PRECHARGE mode

#### 20.2.7.2 Charging Voltage Low

| Class                       | Subclass      | Name                 | Type | Min | Max   | Default | Unit |
|-----------------------------|---------------|----------------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Voltage Range | Charging Voltage Low | I2   | 0   | 32767 | 2900    | mV   |

**Description:** Precharge Voltage range to **Charging Voltage Low** range

#### 20.2.7.3 Charging Voltage Med

| Class                       | Subclass      | Name                 | Type | Min | Max   | Default | Unit |
|-----------------------------|---------------|----------------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Voltage Range | Charging Voltage Med | I2   | 0   | 32767 | 3600    | mV   |

**Description:** **Charging Voltage Low** range to **Charging Voltage Med** range

#### 20.2.7.4 Charging Voltage High

| Class                       | Subclass      | Name                  | Type | Min | Max   | Default | Unit |
|-----------------------------|---------------|-----------------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Voltage Range | Charging Voltage High | I2   | 0   | 32767 | 4000    | mV   |

**Description:** *Charging Voltage Med* to *Charging Voltage High* range

#### 20.2.7.5 Charging Voltage Hysteresis

| Class                       | Subclass      | Name                        | Type | Min | Max | Default | Unit |
|-----------------------------|---------------|-----------------------------|------|-----|-----|---------|------|
| Advanced Charging Algorithm | Voltage Range | Charging Voltage Hysteresis | U1   | 0   | 255 | 0       | mV   |

**Description:** *Charging Voltage Hysteresis* applied when voltage is decreasing.

### 20.2.8 Degrad Mode 1

#### 20.2.8.1 Cycle Threshold

| Class                       | Subclass      | Name            | Type | Min | Max   | Default | Unit |
|-----------------------------|---------------|-----------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Degrad Mode 1 | Cycle Threshold | U2   | 0   | 65535 | 50      | —    |

**Description:** This sets the cycle count related threshold at/above which the first Level (Mode 1) CV and CC degradations can begin if *[CYCLE\_DEGRADE]* is set.

#### 20.2.8.2 SOH Threshold

| Class                       | Subclass      | Name          | Type | Min | Max | Default | Unit |
|-----------------------------|---------------|---------------|------|-----|-----|---------|------|
| Advanced Charging Algorithm | Degrad Mode 1 | SOH Threshold | U1   | 0   | 100 | 95      | %    |

**Description:** This sets the SOH-related threshold at/above which the first Level (Mode 1) CV and CC degradations can begin if *[SOH\_DEGRADE]* is set.

#### 20.2.8.3 Runtime Threshold

| Class                       | Subclass      | Name              | Type | Min | Max   | Default | Unit |
|-----------------------------|---------------|-------------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Degrad Mode 1 | Runtime Threshold | U2   | 0   | 65535 | 8760    | hrs  |

**Description:** This sets the runtime-related threshold at/above which the first level (Mode 1) CV and CC degradations can begin if *[RUNTIME\_DEGRADE]* is set.

#### 20.2.8.4 Voltage Degradation

| Class                       | Subclass      | Name                | Type | Min | Max   | Default | Unit |
|-----------------------------|---------------|---------------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Degrad Mode 1 | Voltage Degradation | I2   | 0   | 32767 | 10      | mV   |

**Description:** This sets the amount of voltage degradation from the charging voltage that will occur at the Mode 1 level if this feature is enabled.

#### 20.2.8.5 Current Degradation

| Class                       | Subclass      | Name                | Type | Min | Max | Default | Unit |
|-----------------------------|---------------|---------------------|------|-----|-----|---------|------|
| Advanced Charging Algorithm | Degrad Mode 1 | Current Degradation | U2   | 0   | 100 | 10      | %    |

**Description:** This sets the percentage of current degradation from the charging current that will occur at the Mode 1 level if this feature is enabled.

## 20.2.9 Degradate Mode 2

### 20.2.9.1 Cycle Threshold

| Class                       | Subclass       | Name            | Type | Min | Max   | Default | Unit |
|-----------------------------|----------------|-----------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Degrade Mode 2 | Cycle Threshold | U2   | 0   | 65535 | 150     | —    |

**Description:** This sets the cycle count related threshold at/above which the first level (Mode 2) CV and CC degradations can begin if CYCLE\_DEGRADE is set.

### 20.2.9.2 SOH Threshold

| Class                       | Subclass       | Name          | Type | Min | Max | Default | Unit |
|-----------------------------|----------------|---------------|------|-----|-----|---------|------|
| Advanced Charging Algorithm | Degrade Mode 2 | SOH Threshold | U1   | 0   | 100 | 80      | %    |

**Description:** This sets the SOH related threshold at/above which the first level (Mode 2) CV and CC degradations can begin if SOH\_DEGRADE is set.

### 20.2.9.3 Runtime Threshold

| Class                       | Subclass       | Name              | Type | Min | Max   | Default | Unit |
|-----------------------------|----------------|-------------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Degrade Mode 2 | Runtime Threshold | U2   | 0   | 65535 | 17520   | hrs  |

**Description:** This sets the runtime-related threshold at/above which the first level (Mode 2) CV and CC degradations can begin if RUNTIME\_DEGRADE is set.

### 20.2.9.4 Voltage Degradation

| Class                       | Subclass       | Name                | Type | Min | Max   | Default | Unit |
|-----------------------------|----------------|---------------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Degrade Mode 2 | Voltage Degradation | I2   | 0   | 32767 | 40      | mV   |

**Description:** This sets the amount of voltage degradation from the charging voltage that will occur at the Mode 2 level if this feature is enabled.

### 20.2.9.5 Current Degradation

| Class                       | Subclass       | Name                | Type | Min | Max | Default | Unit |
|-----------------------------|----------------|---------------------|------|-----|-----|---------|------|
| Advanced Charging Algorithm | Degrade Mode 2 | Current Degradation | U2   | 0   | 100 | 20      | %    |

**Description:** This sets the percentage of current degradation from the charging current that will occur at the Mode 2 level if this feature is enabled.

## 20.2.10 Degradate Mode 3

### 20.2.10.1 Cycle Threshold

| Class                       | Subclass       | Name            | Type | Min | Max   | Default | Unit |
|-----------------------------|----------------|-----------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Degrade Mode 3 | Cycle Threshold | U2   | 0   | 65535 | 350     | —    |

**Description:** This sets the cycle count related threshold at/above which the first Level (Mode 3) CV and CC degradations can begin if CYCLE\_DEGRADE is set.

### 20.2.10.2 SOH Threshold

| Class                       | Subclass       | Name          | Type | Min | Max | Default | Unit |
|-----------------------------|----------------|---------------|------|-----|-----|---------|------|
| Advanced Charging Algorithm | Degrade Mode 3 | SOH Threshold | U1   | 0   | 100 | 60      | %    |

**Description:** This sets the SOH related threshold at/above which the first Level (Mode 3) CV and CC degradations can begin if SOH\_DEGRADE is set.

### 20.2.10.3 Runtime Threshold

| Class                       | Subclass       | Name              | Type | Min | Max   | Default | Unit |
|-----------------------------|----------------|-------------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Degrade Mode 3 | Runtime Threshold | U2   | 0   | 65535 | 26280   | hrs  |

**Description:** This sets the runtime-related threshold at/above which the first Level (Mode 3) CV and CC degradations can begin if RUNTIME\_DEGRADE is set.

### 20.2.10.4 Voltage Degradation

| Class                       | Subclass       | Name                | Type | Min | Max   | Default | Unit |
|-----------------------------|----------------|---------------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Degrade Mode 3 | Voltage Degradation | I2   | 0   | 32767 | 70      | mV   |

**Description:** This sets the amount of voltage degradation from the charging voltage that will occur at the Mode 3 level if this feature is enabled.

### 20.2.10.5 Current Degradation

| Class                       | Subclass       | Name                | Type | Min | Max | Default | Unit |
|-----------------------------|----------------|---------------------|------|-----|-----|---------|------|
| Advanced Charging Algorithm | Degrade Mode 3 | Current Degradation | U2   | 0   | 100 | 40      | %    |

**Description:** This sets the percentage of current degradation from the charging current that will occur at the Mode 3 level if this feature is enabled.

## 20.2.11 Degrade Mode

### 20.2.11.1 Runtime Degrade

| Class                       | Subclass     | Name            | Type | Min | Max   | Default | Unit |
|-----------------------------|--------------|-----------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Degrade Mode | Runtime Degrade | U2   | 0   | 65535 | 0       | hrs  |

**Description:** This is the accumulated runtime for runtime degradation.

### 20.2.11.2 Runtime Update Interval

| Class                       | Subclass     | Name                    | Type | Min | Max   | Default | Unit |
|-----------------------------|--------------|-------------------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Degrade Mode | Runtime Update Interval | U2   | 0   | 65535 | 0       | hrs  |

**Description:** Runtime Degrade is updated periodically every Runtime Update Interval.

### 20.2.11.3 Cycle Count Start Runtime

| Class                       | Subclass     | Name                      | Type | Min | Max | Default | Unit |
|-----------------------------|--------------|---------------------------|------|-----|-----|---------|------|
| Advanced Charging Algorithm | Degrade Mode | Cycle Count Start Runtime | U1   | 0   | 255 | 1       | -    |

**Description:** This sets the cycle count threshold above which runtime begins to accumulate for runtime degradation.

## 20.2.12 CS Degrade

### 20.2.12.1 Temperature Threshold

| Class                     | Subclass   | Name                  | Type | Min | Max   | Default | Unit  |
|---------------------------|------------|-----------------------|------|-----|-------|---------|-------|
| Advanced Charge Algorithm | CS Degrade | Temperature Threshold | I2   | 0   | 32767 | 3232    | 0.1 K |

**Description:** This sets the temperature threshold that the cell temperature is compared to in the cell swelling control feature.

#### 20.2.12.2 Voltage Threshold

| Class                     | Subclass   | Name              | Type | Min | Max   | Default | Unit |
|---------------------------|------------|-------------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | CS Degrade | Voltage Threshold | I2   | 0   | 32767 | 4200    | mV   |

**Description:** This sets the voltage threshold that the cell voltage is compared to in the cell swelling control feature.

#### 20.2.12.3 Time Interval

| Class                     | Subclass   | Name          | Type | Min | Max   | Default | Unit |
|---------------------------|------------|---------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | CS Degrade | Time Interval | U2   | 0   | 14400 | 300     | s    |

**Description:** This sets the time period that the cell swelling control feature compares with how long the max cell voltage and cell temperature have been above their thresholds. After which the charging voltage is stepped down.

#### 20.2.12.4 Delta Voltage

| Class                     | Subclass   | Name          | Type | Min | Max   | Default | Unit |
|---------------------------|------------|---------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | CS Degrade | Delta Voltage | I2   | 0   | 32767 | 25      | mV   |

**Description:** This sets the voltage level that the charging voltage will be stepped down as part of the swelling control feature.

#### 20.2.12.5 Min CV

| Class                     | Subclass   | Name   | Type | Min | Max   | Default | Unit |
|---------------------------|------------|--------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | CS Degrade | Min CV | I2   | 0   | 32767 | 3000    | mV   |

**Description:** This sets the lowest level that the charging voltage will be allowed to step down to as part of the swelling control feature.

### 20.2.13 Charge Voltage Override

#### 20.2.13.1 CHGV Override Max

| Class                     | Subclass                | Name              | Type | Min | Max   | Default | Unit |
|---------------------------|-------------------------|-------------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Charge Voltage Override | CHGV Override Max | I2   | 0   | 32767 | 4500    | mV   |

**Description:** This sets the maximum value allowed to write in for advanced charge algorithm charging voltage in data flash by `ManufacturerAccess() 0x00B0 ChargingVoltageOverride`.

#### 20.2.13.2 CHGV Override Min

| Class                     | Subclass                | Name              | Type | Min | Max   | Default | Unit |
|---------------------------|-------------------------|-------------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Charge Voltage Override | CHGV Override Min | I2   | 0   | 32767 | 2000    | mV   |

**Description:** This sets the minimum value allowed to write in for advanced charge algorithm charging voltage in data flash by `ManufacturerAccess() 0x00B0 ChargingVoltageOverride()`.

## 20.2.14 Charge Current Override

### 20.2.14.1 CHGI Override Max

| Class                     | Subclass                | Name              | Type | Min | Max   | Default | Unit |
|---------------------------|-------------------------|-------------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Charge Current Override | CHGI Override Max | I2   | 0   | 32767 | 4500    | mA   |

**Description:** This sets the maximum value allowed to write in for advanced charge algorithm charging current in data flash by *ManufacturerAccess()* 0x00B2 *ChargingCurrentOverride*.

### 20.2.14.2 CHGI Override Min

| Class                     | Subclass                | Name              | Type | Min | Max   | Default | Unit |
|---------------------------|-------------------------|-------------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Charge Current Override | CHGI Override Min | I2   | 0   | 32767 | 100     | mA   |

**Description:** This sets the minimum value allowed to write in for advanced charge algorithm charging current in data flash by *ManufacturerAccess()* 0x00B2 *ChargingCurrentOverride*.

## 20.2.15 Termination Config

### 20.2.15.1 Minimum Taper Charge

| Class                     | Subclass           | Name                 | Type | Min | Max  | Default | Unit    |
|---------------------------|--------------------|----------------------|------|-----|------|---------|---------|
| Advanced Charge Algorithm | Termination Config | Minimum Taper Charge | I2   | 0   | 1000 | 64      | mAh/256 |

**Description:** Minimum charge transferred (in units of mAh/256) during a taper window period required for the taper window counter to advance toward charge termination. If charge transferred in the current window exceeds this threshold, the window counter increments.

### 20.2.15.2 Charge Term Taper Current

| Class                       | Subclass           | Name                      | Type | Min | Max   | Default | Unit |
|-----------------------------|--------------------|---------------------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Termination Config | Charge Term Taper Current | I2   | 0   | 32767 | 250     | mA   |

**Description:** Valid charge termination taper current qualifier threshold

### 20.2.15.3 Charge Term Voltage Offset

| Class                       | Subclass           | Name                       | Type | Min | Max   | Default | Unit |
|-----------------------------|--------------------|----------------------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Termination Config | Charge Term Voltage Offset | I2   | 0   | 32767 | 75      | mV   |

**Description:** Valid charge termination delta voltage qualifier, max cell-based

### 20.2.15.4 Charge Term Charging Voltage

| Class                       | Subclass           | Name                         | Type | Min | Max   | Default | Unit |
|-----------------------------|--------------------|------------------------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Termination Config | Charge Term Charging Voltage | I2   | 0   | 32767 | 4200    | mV   |

**Description:** If *[TAPER\_VOLT]* = 1, *Charge Term Charging Voltage* will be used for a valid charge termination condition.

## 20.2.16 Charging Rate of Change

### 20.2.16.1 Current Rate

| Class                       | Subclass                | Name         | Type | Min | Max  | Default | Unit  |
|-----------------------------|-------------------------|--------------|------|-----|------|---------|-------|
| Advanced Charging Algorithm | Charging Rate of Change | Current Rate | U2   | 1   | 1000 | 1       | steps |

**Description:** Number of 1-second steps to add between any two *ChargingCurrent()* settings. When **[SLOW\_CRATE] = 1**, **Current Rate** is multiplied by 5 to transition over 5x the period.

#### 20.2.16.2 Voltage Rate

| Class                       | Subclass                | Name         | Type | Min | Max | Default | Unit    |
|-----------------------------|-------------------------|--------------|------|-----|-----|---------|---------|
| Advanced Charging Algorithm | Charging Rate of Change | Voltage Rate | U1   | 1   | 255 | 1       | steps/s |

**Description:** Number of steps to add between any two *ChargingVoltage()* settings

#### 20.2.17 Charge Loss Compensation

##### 20.2.17.1 CCC Current Threshold

| Class                       | Subclass                 | Name                  | Type | Min | Max   | Default | Unit |
|-----------------------------|--------------------------|-----------------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Charge Loss Compensation | CCC Current Threshold | I2   | 0   | 32767 | 3520    | mA   |

**Description:** CONSTANT CURRENT CHARGE mode *ChargingCurrent()* threshold to activate Charge Loss Compensation

##### 20.2.17.2 CCC Voltage Threshold

| Class                       | Subclass                 | Name                  | Type | Min | Max   | Default | Unit |
|-----------------------------|--------------------------|-----------------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Charge Loss Compensation | CCC Voltage Threshold | I2   | 0   | 32767 | 4200    | mV   |

**Description:** CONSTANT CURRENT CHARGE mode max *ChargingVoltage()* increase limit

#### 20.2.18 IR Correction

##### 20.2.18.1 Averaging Interval

| Class                     | Subclass      | Name               | Type | Min | Max | Default | Unit |
|---------------------------|---------------|--------------------|------|-----|-----|---------|------|
| Advanced Charge Algorithm | IR Correction | Averaging Interval | U1   | 1   | 255 | 12      | s    |

**Description:** To prevent overcharging by the IR compensation scheme (in case the **System Resistance** is set too high) the IT algorithm runs an averaging calculation to reduce the charging voltage if needed. This averaging calculation is averaged over the averaging interval defined in this register.

#### 20.2.19 Sealed Write

##### 20.2.19.1 Hold Off

| Class                     | Subclass     | Name     | Type | Min | Max   | Default | Unit |
|---------------------------|--------------|----------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Sealed Write | Hold Off | U2   | 0   | 65535 | 2       | s    |

**Description:** This sets the delay time for changing the JEITA charging voltage or current settings in data flash after receiving the last 0x00B0 ChargingVoltageOverride or 0x00B2 ChargingCurrentOverride commands.

##### 20.2.19.2 Lockout

| Class                     | Subclass     | Name    | Type | Min | Max   | Default | Unit |
|---------------------------|--------------|---------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Sealed Write | Lockout | U2   | 0   | 65535 | 7200    | s    |

**Description:** This sets the delay time before MAC 0x00B0 ChargingVoltageOverride command or 0x00B2 ChargingCurrentOverride command can take effect again after the JEITA charging voltage or current setting is updated in the data flash. Writes to 0x00B0 and 0x00B2 are ignore during this delay time.

## 20.2.20 Low Temp Charging

### 20.2.20.1 Voltage

| Class                       | Subclass          | Name    | Type | Min | Max   | Default | Unit |
|-----------------------------|-------------------|---------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Low Temp Charging | Voltage | I2   | 0   | 32767 | 4000    | mV   |

**Description:** Sets the *ChargingVoltage()* for the low temperature range

### 20.2.20.2 Current Low

| Class                       | Subclass          | Name        | Type | Min | Max   | Default | Unit |
|-----------------------------|-------------------|-------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Low Temp Charging | Current Low | I2   | 0   | 32767 | 132     | mA   |

**Description:** Sets the *ChargingCurrent()* for the low temperature range, low voltage range

### 20.2.20.3 Current Med

| Class                       | Subclass          | Name        | Type | Min | Max   | Default | Unit |
|-----------------------------|-------------------|-------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Low Temp Charging | Current Med | I2   | 0   | 32767 | 352     | mA   |

**Description:** Sets the *ChargingCurrent()* for the low temperature range, medium voltage range

### 20.2.20.4 Current High

| Class                       | Subclass          | Name         | Type | Min | Max   | Default | Unit |
|-----------------------------|-------------------|--------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Low Temp Charging | Current High | I2   | 0   | 32767 | 264     | mA   |

**Description:** Sets the *ChargingCurrent()* for the low temperature range, high voltage range

## 20.2.21 Standard Temp Low Charging

### 20.2.21.1 Voltage

| Class                       | Subclass                   | Name    | Type | Min | Max   | Default | Unit |
|-----------------------------|----------------------------|---------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Standard Temp Low Charging | Voltage | I2   | 0   | 32767 | 4200    | mV   |

**Description:** Sets the *ChargingVoltage()* for the standard temperature range

### 20.2.21.2 Current Low

| Class                       | Subclass                   | Name        | Type | Min | Max   | Default | Unit |
|-----------------------------|----------------------------|-------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Standard Temp Low Charging | Current Low | I2   | 0   | 32767 | 1980    | mA   |

**Description:** Sets the *ChargingCurrent()* for the standard temperature range, low voltage range

### 20.2.21.3 Current Med

| Class                       | Subclass                   | Name        | Type | Min | Max   | Default | Unit |
|-----------------------------|----------------------------|-------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Standard Temp Low Charging | Current Med | I2   | 0   | 32767 | 4004    | mA   |

**Description:** Sets the *ChargingCurrent()* for the standard temperature range, medium voltage range

### 20.2.21.4 Current High

| Class                       | Subclass                   | Name         | Type | Min | Max   | Default | Unit |
|-----------------------------|----------------------------|--------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Standard Temp Low Charging | Current High | I2   | 0   | 32767 | 2992    | mA   |

**Description:** Sets the *ChargingCurrent()* for the standard temperature range, high voltage range

## 20.2.22 Standard Temp High Charging

### 20.2.22.1 Voltage

| Class                       | Subclass                    | Name    | Type | Min | Max   | Default | Unit |
|-----------------------------|-----------------------------|---------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Standard Temp High Charging | Voltage | I2   | 0   | 32767 | 4200    | mV   |

**Description:** Sets the *ChargingVoltage()* for the standard temperature range

### 20.2.22.2 Current Low

| Class                       | Subclass                    | Name        | Type | Min | Max   | Default | Unit |
|-----------------------------|-----------------------------|-------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Standard Temp High Charging | Current Low | I2   | 0   | 32767 | 1980    | mA   |

**Description:** Sets the *ChargingCurrent()* for the standard temperature range, low voltage range

### 20.2.22.3 Current Med

| Class                       | Subclass                    | Name        | Type | Min | Max   | Default | Unit |
|-----------------------------|-----------------------------|-------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Standard Temp High Charging | Current Med | I2   | 0   | 32767 | 4004    | mA   |

**Description:** Sets the *ChargingCurrent()* for the standard temperature range, medium voltage range

### 20.2.22.4 Current High

| Class                       | Subclass                    | Name         | Type | Min | Max   | Default | Unit |
|-----------------------------|-----------------------------|--------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Standard Temp High Charging | Current High | I2   | 0   | 32767 | 2992    | mA   |

**Description:** Sets the *ChargingCurrent()* for the standard temperature range, high voltage range

## 20.2.23 High Temp Charging

### 20.2.23.1 Voltage

| Class                       | Subclass           | Name    | Type | Min | Max   | Default | Unit |
|-----------------------------|--------------------|---------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | High Temp Charging | Voltage | I2   | 0   | 32767 | 4000    | mV   |

**Description:** Sets the *ChargingVoltage()* for the high temperature range

### 20.2.23.2 Current Low

| Class                       | Subclass           | Name        | Type | Min | Max   | Default | Unit |
|-----------------------------|--------------------|-------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | High Temp Charging | Current Low | I2   | 0   | 32767 | 1012    | mA   |

**Description:** Sets the *ChargingCurrent()* for the high temperature range, low voltage range

### 20.2.23.3 Current Med

| Class                       | Subclass           | Name        | Type | Min | Max   | Default | Unit |
|-----------------------------|--------------------|-------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | High Temp Charging | Current Med | I2   | 0   | 32767 | 1980    | mA   |

**Description:** Sets the *ChargingCurrent()* for the high temperature range, medium voltage range

#### 20.2.23.4 Current High

| Class                       | Subclass           | Name         | Type | Min | Max   | Default | Unit |
|-----------------------------|--------------------|--------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | High Temp Charging | Current High | I2   | 0   | 32767 | 1496    | mA   |

**Description:** Sets the *ChargingCurrent()* for the high temperature range, high voltage range

#### 20.2.24 Rec Temp Charging

##### 20.2.24.1 Voltage

| Class                       | Subclass          | Name    | Type | Min | Max   | Default | Unit |
|-----------------------------|-------------------|---------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Rec Temp Charging | Voltage | I2   | 0   | 32767 | 4100    | mV   |

**Description:** Sets the *ChargingVoltage()* for the recommended temperature range

##### 20.2.24.2 Current Low

| Class                       | Subclass          | Name        | Type | Min | Max   | Default | Unit |
|-----------------------------|-------------------|-------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Rec Temp Charging | Current Low | I2   | 0   | 32767 | 2508    | mA   |

**Description:** Sets the *ChargingCurrent()* for the recommended temperature range, low voltage range

##### 20.2.24.3 Current Med

| Class                       | Subclass          | Name        | Type | Min | Max   | Default | Unit |
|-----------------------------|-------------------|-------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Rec Temp Charging | Current Med | I2   | 0   | 32767 | 4488    | mA   |

**Description:** Sets the *ChargingCurrent()* for the recommended temperature range, medium voltage range

##### 20.2.24.4 Current High

| Class                       | Subclass          | Name         | Type | Min | Max   | Default | Unit |
|-----------------------------|-------------------|--------------|------|-----|-------|---------|------|
| Advanced Charging Algorithm | Rec Temp Charging | Current High | I2   | 0   | 32767 | 3520    | mA   |

**Description:** Sets the *ChargingCurrent()* for the recommended temperature range, high voltage range

#### 20.2.25 Elevated Degrade

##### 20.2.25.1 Accumulated ERM Time

| Class                     | Subclass         | Name                 | Type | Min | Max   | Default | Unit |
|---------------------------|------------------|----------------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Elevated Degrade | Accumulated ERM Time | U2   | 0   | 65535 | 0       | h    |

**Description:** This is the accumulated ERM time counted by the device.

##### 20.2.25.2 Accumulated ERETm Time

| Class                     | Subclass         | Name                   | Type | Min | Max   | Default | Unit |
|---------------------------|------------------|------------------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Elevated Degrade | Accumulated ERETm Time | U2   | 0   | 65535 | 0       | h    |

**Description:** This is the accumulated ERETm time counted by the device.

##### 20.2.25.3 Accumulated EVLTm Time

| Class                     | Subclass         | Name                   | Type | Min | Max   | Default | Unit |
|---------------------------|------------------|------------------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Elevated Degrade | Accumulated EVLTm Time | U2   | 0   | 65535 | 0       | h    |

**Description:** This is the accumulated EVLTM time counted by the device.

#### 20.2.25.4 Accumulated EVMTM Time

| Class                     | Subclass         | Name                   | Type | Min | Max   | Default | Unit |
|---------------------------|------------------|------------------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Elevated Degrade | Accumulated EVMTM Time | U2   | 0   | 65535 | 0       | h    |

**Description:** This is the accumulated EVMTM time counted by the device.

#### 20.2.25.5 Accumulated EVHTM Time

| Class                     | Subclass         | Name                   | Type | Min | Max   | Default | Unit |
|---------------------------|------------------|------------------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Elevated Degrade | Accumulated EVHTM Time | U2   | 0   | 65535 | 0       | h    |

**Description:** This is the accumulated EVHTM time counted by the device.

#### 20.2.25.6 ERETM Status

| Class                     | Subclass         | Name         | Type | Min  | Max  | Default | Unit |
|---------------------------|------------------|--------------|------|------|------|---------|------|
| Advanced Charge Algorithm | Elevated Degrade | ERETM Status | H1   | 0x00 | 0xFF | 0x00    | -    |

7                  6                  5                  4                  3                  2                  1                  0

|      |      |      |      |      |      |                   |                  |
|------|------|------|------|------|------|-------------------|------------------|
| RSVD | RSVD | RSVD | RSVD | RSVD | RVSD | ERETM_DEGR<br>ADE | ERETM_ACTIV<br>E |
|------|------|------|------|------|------|-------------------|------------------|

**RSVD (Bits 7–2):** Reserved. Do not use.

**ERETM\_DEGRADE (Bit 1):** This is the ERETm active flag the gauge sets when ERETm is active and beginning the next CHARGE cycle.

- 1 = ERETm degrade active
- 0 = ERETm degrade not active

**ERETM\_ACTIVE (Bit 0):** ERETm conditions have been met and *ChargingVoltage()* will be degraded starting with next charge cycle

- 1 = ERETm conditions met
- 0 = ERETm conditions not met

#### 20.2.25.7 EVTM Degrade

| Class                     | Subclass         | Name         | Type | Min | Max    | Default | Unit |
|---------------------------|------------------|--------------|------|-----|--------|---------|------|
| Advanced Charge Algorithm | Elevated Degrade | EVTM Degrade | H2   | 0x0 | 0xFFFF | 0x0     | -    |

15                  14                  13                  12                  11                  10                  9                  8

|      |            |            |            |            |            |            |            |
|------|------------|------------|------------|------------|------------|------------|------------|
| RSVD | EVHTM_TTH5 | EVHTM_TTH4 | EVHTM_TTH3 | EVHTM_TTH2 | EVHTM_TTH1 | EVMTM_TTH5 | EVMTM_TTH4 |
|------|------------|------------|------------|------------|------------|------------|------------|

7                  6                  5                  4                  3                  2                  1                  0

|            |            |            |            |            |            |            |            |
|------------|------------|------------|------------|------------|------------|------------|------------|
| EVMTM_TTH3 | EVMTM_TTH2 | EVMTM_TTH1 | EVLTM_TTH5 | EVLTM_TTH4 | EVLTM_TTH3 | EVLTM_TTH2 | EVLTM_TTH1 |
|------------|------------|------------|------------|------------|------------|------------|------------|

**RSVD (Bits 15):** Reserved. Do not use.

**EVHTM\_TTH5 (Bits 14):** Status of EVHTM\_TTH5 degradataion

- 1 = *EVHTM CV Delta5* degradation has been applied
- 0 = *EVHTM CV Delta5* degradation has not been applied

**EVHTM\_TTH4 (Bits 13):** Status of EVHTM\_TTH4 degradataion

- 1 = *EVHTM CV Delta4* degradation has been applied

0 = **EVHTM CV Delta4** degradation has not been applied

**EVHTM\_TTH3 (Bits 12):** Status of EVHTM\_TTH3 degradataion

1 = **EVHTM CV Delta3** degradation has been applied

0 = **EVHTM CV Delta3** degradation has not been applied

**EVHTM\_TTH2 (Bits 11):** Status of EVHTM\_TTH2 degradataion

1 = **EVHTM CV Delta2** degradation has been applied

0 = **EVHTM CV Delta2** degradation has not been applied

**EVHTM\_TTH1 (Bits 10):** Status of EVHTM\_TTH1 degradataion

1 = **EVHTM CV Delta1** degradation has been applied

0 = **EVHTM CV Delta1** degradation has not been applied

**EVMTM\_TTH5 (Bits 9):** Status of EVMTM\_TTH5 degradataion

1 = **EVMTM CV Delta5** degradation has been applied

0 = **EVMTM CV Delta5** degradation has not been applied

**EVMTM\_TTH4 (Bits 8):** Status of EVMTM\_TTH4 degradataion

1 = **EVMTM CV Delta4** degradation has been applied

0 = **EVMTM CV Delta4** degradation has not been applied

**EVMTM\_TTH3 (Bits 7):** Status of EVMTM\_TTH3 degradataion

1 = **EVMTM CV Delta3** degradation has been applied

0 = **EVMTM CV Delta3** degradation has not been applied

**EVMTM\_TTH2 (Bits 6):** Status of EVMTM\_TTH2 degradataion

1 = **EVMTM CV Delta2** degradation has been applied

0 = **EVMTM CV Delta2** degradation has not been applied

**EVMTM\_TTH1 (Bits 5):** Status of EVMTM\_TTH1 degradataion

1 = **EVMTM CV Delta1** degradation has been applied

0 = **EVMTM CV Delta1** degradation has not been applied

**EVLTM\_TTH5 (Bits 4):** Status of EVLTM\_TTH5 degradataion

1 = **EVLTM CV Delta5** degradation has been applied

0 = **EVLTM CV Delta5** degradation has not been applied

**EVLTM\_TTH4 (Bits 3):** Status of EVLTM\_TTH4 degradataion

1 = **EVLTM CV Delta4** degradation has been applied

0 = **EVLTM CV Delta4** degradation has not been applied

**EVLTM\_TTH3 (Bits 2):** Status of EVLTM\_TTH3 degradataion

1 = **EVLTM CV Delta3** degradation has been applied

0 = **EVLTM CV Delta3** degradation has been not applied

**EVLTM\_TTH2 (Bits 1):** Status of EVLTM\_TTH2 degradataion

1 = **EVLTM CV Delta2** degradation has been applied

0 = **EVLTM CV Delta2** degradation has been not applied

**EVLTM\_TTH1 (Bits 0):** Status of EVLTM\_TTH1 degradataion

1 = **EVLTM CV Delta1** degradation has been applied

0 = **EVLTM CV Delta1** degradation has not been applied

## 20.2.25.8 EVTm Active

| Class                     | Subclass         | Name        | Type | Min | Max    | Default | Unit |
|---------------------------|------------------|-------------|------|-----|--------|---------|------|
| Advanced Charge Algorithm | Elevated Degrade | EVTm Active | H2   | 0x0 | 0xFFFF | 0x0     | -    |

|            |            |            |            |            |            |            |            |
|------------|------------|------------|------------|------------|------------|------------|------------|
| 15         | 14         | 13         | 12         | 11         | 10         | 9          | 8          |
| RSVD       | EVHTM_TTH5 | EVHTM_TTH4 | EVHTM_TTH3 | EVHTM_TTH2 | EVHTM_TTH1 | EVMTM_TTH5 | EVMTM_TTH4 |
| 7          | 6          | 5          | 4          | 3          | 2          | 1          | 0          |
| EVMTM_TTH3 | EVMTM_TTH2 | EVMTM_TTH1 | EVLTM_TTH5 | EVLTM_TTH4 | EVLTM_TTH3 | EVLTM_TTH2 | EVLTM_TTH1 |

**RSVD (Bits 15):** Reserved. Do not use.

**EVHTM\_TTH5 (Bits 14):** Status of EVHTM\_TTH5 activation

- 1 = EVHTM\_TTH5 conditions are met, and **EVHTM CV Delta5** degradation will be applied when device enters CHARGE mode
- 0 = EVHTM\_TTH5 conditions are not met

**EVHTM\_TTH4 (Bits 13):** Status of EVHTM\_TTH4 activation

- 1 = EVHTM\_TTH4 conditions are met, and **EVHTM CV Delta4** degradation will be applied when device enters CHARGE mode
- 0 = EVHTM\_TTH4 conditions are not met

**EVHTM\_TTH3 (Bits 12):** Status of EVHTM\_TTH3 activation

- 1 = EVHTM\_TTH3 conditions are met, and **EVHTM CV Delta3** degradation will be applied when device enters CHARGE mode
- 0 = EVHTM\_TTH3 conditions are not met

**EVHTM\_TTH2 (Bits 11):** Status of EVHTM\_TTH2 activation

- 1 = EVHTM\_TTH2 conditions are met, and **EVHTM CV Delta2** degradation will be applied when device enters CHARGE mode
- 0 = EVHTM\_TTH2 conditions are not met

**EVHTM\_TTH1 (Bits 10):** Status of EVHTM\_TTH1 activation

- 1 = EVHTM\_TTH1 conditions are met, and **EVHTM CV Delta1** degradation will be applied when device enters CHARGE mode
- 0 = EVHTM\_TTH1 conditions are not met

**EVMTM\_TTH5 (Bits 9):** Status of EVMTM\_TTH5 activation

- 1 = EVMTM\_TTH5 conditions are met, and **EVMTM CV Delta5** degradation will be applied when device enters CHARGE mode
- 0 = EVMTM\_TTH5 conditions are not met

**EVMTM\_TTH4 (Bits 8):** Status of EVMTM\_TTH4 activation

- 1 = EVMTM\_TTH4 conditions are met, and **EVMTM CV Delta4** degradation will be applied when device enters CHARGE mode
- 0 = EVMTM\_TTH4 conditions are not met

**EVMTM\_TTH3 (Bits 7):** Status of EVMTM\_TTH3 activation

- 1 = EVMTM\_TTH3 conditions are met, and **EVMTM CV Delta3** degradation will be applied when device enters CHARGE mode
- 0 = EVMTM\_TTH3 conditions are not met

**EVMTM\_TTH2 (Bits 6):** Status of EVMTM\_TTH2 activation

- 1 = EVMTM\_TTH2 conditions are met, and **EVMTM CV Delta2** degradation will be applied when device enters CHARGE mode
- 0 = EVMTM\_TTH2 conditions are not met

**EVMTM\_TTH1 (Bits 5):** Status of EVMTM\_TTH1 activation

- 1 = EVMTM\_TTH1 conditions are met, and **EVMTM CV Delta1** degradation will be applied when device enters CHARGE mode
- 0 = EVMTM\_TTH1 conditions are not met

**EVLTM\_TTH5 (Bits 4):** Status of EVLTM\_TTH5 activation

- 1 = EVLTM\_TTH5 conditions are met, and **EVLTM CV Delta5** degradation will be applied when device enters CHARGE mode
- 0 = EVLTM\_TTH5 conditions are not met

**EVLTM\_TTH4 (Bits 3):** Status of EVLTM\_TTH4 activation

- 1 = EVLTM\_TTH4 conditions are met, and **EVLTM CV Delta4** degradation will be applied when device enters CHARGE mode
- 0 = EVLTM\_TTH4 conditions are not met

**EVLTM\_TTH3 (Bits 2):** Status of EVLTM\_TTH3 activation

- 1 = EVLTM\_TTH3 conditions are met, and **EVLTM CV Delta3** degradation will be applied when device enters CHARGE mode

0 = EVLTM\_TTH3 conditions are not met

**EVLTM\_TTH2 (Bits 1):** Status of EVLTM\_TTH2 activation

1 = EVLTM\_TTH2 conditions are met, and **EVLTM CV Delta2** degradation will be applied when device enters CHARGE mode

0 = EVLTM\_TTH2 conditions are not met

**EVLTM\_TTH1 (Bits 0):** Status of EVLTM\_TTH1 activation

1 = EVLTM\_TTH1 conditions are met, and **EVLTM CV Delta1** degradation will be applied when device enters CHARGE mode

0 = EVLTM\_TTH1 conditions are not met

#### 20.2.25.9 ERM Reset RSoC Threshold

| Class                     | Subclass         | Name                     | Type | Min | Max | Default | Unit |
|---------------------------|------------------|--------------------------|------|-----|-----|---------|------|
| Advanced Charge Algorithm | Elevated Degrade | ERM Reset RSoC Threshold | U1   | 0   | 100 | 85      | %    |

**Description:** This sets the RSOC value by which **Elevated Degrade** will reset when **[ERM\_MODE]** is cleared.

#### 20.2.25.10 ERM Reset Voltage Threshold

| Class                     | Subclass         | Name                        | Type | Min | Max   | Default | Unit |
|---------------------------|------------------|-----------------------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Elevated Degrade | ERM Reset Voltage Threshold | I2   | 0   | 32767 | 3700    | mV   |

**Description:** This sets the RSOC value by which **Elevated Degrade** will reset when **[ERM\_MODE]** is set.

#### 20.2.25.11 ERM RSoC Threshold

| Class                     | Subclass         | Name               | Type | Min | Max | Default | Unit |
|---------------------------|------------------|--------------------|------|-----|-----|---------|------|
| Advanced Charge Algorithm | Elevated Degrade | ERM RSoC Threshold | U1   | 0   | 100 | 90      | %    |

**Description:** This sets the RSOC threshold above which **Accumulated ERM Time** will count when **[ERM\_MODE]** is cleared.

#### 20.2.25.12 ERM Voltage Threshold

| Class                     | Subclass         | Name                  | Type | Min | Max   | Default | Unit |
|---------------------------|------------------|-----------------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Elevated Degrade | ERM Voltage Threshold | I2   | 0   | 32767 | 4000    | mV   |

**Description:** This sets the voltage threshold above which **Accumulated ERM Time** will count when **[ERM\_MODE]** is set.

#### 20.2.25.13 ERM Time Threshold

| Class                     | Subclass         | Name               | Type | Min | Max   | Default | Unit |
|---------------------------|------------------|--------------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Elevated Degrade | ERM Time Threshold | U2   | 0   | 65535 | 10000   | hrs  |

**Description:** This sets the time threshold above which **[ERM]** is set.

#### 20.2.25.14 ERETm RSoC Threshold

| Class                     | Subclass         | Name                 | Type | Min | Max | Default | Unit |
|---------------------------|------------------|----------------------|------|-----|-----|---------|------|
| Advanced Charge Algorithm | Elevated Degrade | ERETm RSoC Threshold | U1   | 0   | 100 | 90      | %    |

**Description:** This sets the RSOC threshold above which **Accumulated ERETm Time** will count when **[ERETm\_MODE]** is cleared.

### 20.2.25.15 ERET Voltage Threshold

| Class                     | Subclass         | Name                    | Type | Min | Max   | Default | Unit |
|---------------------------|------------------|-------------------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Elevated Degrade | ERETM Voltage Threshold | I2   | 0   | 32767 | 4200    | mV   |

**Description:** This sets the voltage threshold above which **Accumulated ERET Time** will count when the temperature condition is met and **[ERETM\_MODE]** is set.

### 20.2.25.16 ERET Temperature Threshold

| Class                     | Subclass         | Name                            | Type | Min  | Max  | Default | Unit  |
|---------------------------|------------------|---------------------------------|------|------|------|---------|-------|
| Advanced Charge Algorithm | Elevated Degrade | ERETM Temperature Threshold     | I2   | 2332 | 3932 | 3123    | 0.1 K |
| Advanced Charge Algorithm | Elevated Degrade | ERETM Temperature Max Threshold | I2   | 2332 | 3932 | 3223    | 0.1 K |

**Description:** This sets the temperature threshold above which **Accumulated ERET Time** will count when RSOC or voltage condition is met, and the lower temperature threshold which **Accumulated EVLTM Time** will count when the voltage condition is met.

### 20.2.25.17 ERET Time Threshold

| Class                     | Subclass         | Name                 | Type | Min | Max   | Default | Unit |
|---------------------------|------------------|----------------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Elevated Degrade | ERETM Time Threshold | U2   | 0   | 65535 | 10000   | h    |

**Description:** This sets the time threshold above which **[ERM]** is set and **ChargingVoltage()** is set to **ERETM Charging Voltage** upon the next CHARGE cycle.

### 20.2.25.18 ERET Charging Voltage

| Class                     | Subclass         | Name                   | Type | Min | Max   | Default | Unit |
|---------------------------|------------------|------------------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Elevated Degrade | ERETM Charging Voltage | I2   | 0   | 32767 | 3900    | mV   |

**Description:** This sets the **ChargingVoltage()** for all temperature ranges when the device enters **Elevated RSOC and Temperature Mode**.

### 20.2.25.19 EVTM Voltage Thresholds

| Class                     | Subclass         | Name                        | Type | Min | Max   | Default | Unit |
|---------------------------|------------------|-----------------------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Elevated Degrade | EVTM Voltage Low Threshold  | I2   | 0   | 32767 | 4300    | mV   |
| Advanced Charge Algorithm | Elevated Degrade | EVTM Voltage Mid Threshold  | I2   | 0   | 32767 | 4200    | mV   |
| Advanced Charge Algorithm | Elevated Degrade | EVTM Voltage High Threshold | I2   | 0   | 32767 | 4100    | mV   |

**Description:** These parameters set the 3 levels of voltage thresholds which **Accumulated EVLTM/EVMTM/ EVHTM Time** will count, when the temperature condition is met.

### 20.2.25.20 EVTM Temperature Thresholds

| Class                     | Subclass         | Name                            | Type | Min  | Max  | Default | Unit  |
|---------------------------|------------------|---------------------------------|------|------|------|---------|-------|
| Advanced Charge Algorithm | Elevated Degrade | EVTM Temperature Low Threshold  | I2   | 2332 | 3932 | 3123    | 0.1 K |
| Advanced Charge Algorithm | Elevated Degrade | EVTM Temperature Mid Threshold  | I2   | 2332 | 3932 | 3173    | 0.1 K |
| Advanced Charge Algorithm | Elevated Degrade | EVTM Temperature High Threshold | I2   | 2332 | 3932 | 3223    | 0.1 K |

**Description:** These parameters set the 3 levels of temperature thresholds and hysteresis which **Accumulated EVLTM/EVMTM/EVHTM Time** will count, when the voltage condition is met.

#### 20.2.25.21 EVLTM Time Thresholds

| Class                     | Subclass           | Name       | Type | Min | Max   | Default | Unit |
|---------------------------|--------------------|------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Elevated Degradate | EVLTM TTH1 | U2   | 0   | 65535 | 480     | h    |
| Advanced Charge Algorithm | Elevated Degradate | EVLTM TTH2 | U2   | 0   | 65535 | 720     | h    |
| Advanced Charge Algorithm | Elevated Degradate | EVLTM TTH3 | U2   | 0   | 65535 | 1680    | h    |
| Advanced Charge Algorithm | Elevated Degradate | EVLTM TTH4 | U2   | 0   | 65535 | 2880    | h    |
| Advanced Charge Algorithm | Elevated Degradate | EVLTM TTH5 | U2   | 0   | 65535 | 5760    | h    |

**Description:** These parameters set the 5 levels of time thresholds for elevated voltage extended charge degradation under EVLTM temperature range.

#### 20.2.25.22 EVLTM Delta Charging Voltages

| Class                     | Subclass           | Name            | Type | Min | Max   | Default | Unit |
|---------------------------|--------------------|-----------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Elevated Degradate | EVLTM CV Delta1 | I2   | 0   | 32767 | 50      | mV   |
| Advanced Charge Algorithm | Elevated Degradate | EVLTM CV Delta2 | I2   | 0   | 32767 | 100     | mV   |
| Advanced Charge Algorithm | Elevated Degradate | EVLTM CV Delta3 | I2   | 0   | 32767 | 150     | mV   |
| Advanced Charge Algorithm | Elevated Degradate | EVLTM CV Delta4 | I2   | 0   | 32767 | 200     | mV   |
| Advanced Charge Algorithm | Elevated Degradate | EVLTM CV Delta5 | I2   | 0   | 32767 | 300     | mV   |

**Description:** These parameters set the 5 levels of stepdown voltaged to be reduced from *ChargingVoltage()* for elevated voltage extended charge degradation under EVLTM temperature range.

#### 20.2.25.23 EVMTM Time Thresholds

| Class                     | Subclass           | Name       | Type | Min | Max   | Default | Unit |
|---------------------------|--------------------|------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Elevated Degradate | EVMTM TTH1 | U2   | 0   | 65535 | 240     | h    |
| Advanced Charge Algorithm | Elevated Degradate | EVMTM TTH2 | U2   | 0   | 65535 | 480     | h    |
| Advanced Charge Algorithm | Elevated Degradate | EVMTM TTH3 | U2   | 0   | 65535 | 1440    | h    |
| Advanced Charge Algorithm | Elevated Degradate | EVMTM TTH4 | U2   | 0   | 65535 | 2160    | h    |
| Advanced Charge Algorithm | Elevated Degradate | EVMTM TTH5 | U2   | 0   | 65535 | 2400    | h    |

**Description:** These parameters set the 5 levels of time thresholds for elevated voltage extended charge degradation under EVMTM temperature range.

#### 20.2.25.24 EVMTM Delta Charging Voltages

| Class                     | Subclass           | Name            | Type | Min | Max   | Default | Unit |
|---------------------------|--------------------|-----------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Elevated Degradate | EVMTM CV Delta1 | I2   | 0   | 32767 | 50      | mV   |
| Advanced Charge Algorithm | Elevated Degradate | EVMTM CV Delta2 | I2   | 0   | 32767 | 100     | mV   |
| Advanced Charge Algorithm | Elevated Degradate | EVMTM CV Delta3 | I2   | 0   | 32767 | 150     | mV   |

| Class                     | Subclass         | Name            | Type | Min | Max   | Default | Unit |
|---------------------------|------------------|-----------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Elevated Degrade | EVMTM CV Delta4 | I2   | 0   | 32767 | 200     | mV   |
| Advanced Charge Algorithm | Elevated Degrade | EVMTM CV Delta5 | I2   | 0   | 32767 | 300     | mV   |

**Description:** These parameters set the 5 levels of stepdown voltaged to be reduced from *ChargingVoltage()* for elevated voltage extended charge degradation under EVMTM temperature range.

#### 20.2.25.25 EVHTM Time Thresholds

| Class                     | Subclass         | Name       | Type | Min | Max   | Default | Unit |
|---------------------------|------------------|------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Elevated Degrade | EVHTM TTH1 | U2   | 0   | 65535 | 24      | h    |
| Advanced Charge Algorithm | Elevated Degrade | EVHTM TTH2 | U2   | 0   | 65535 | 120     | h    |
| Advanced Charge Algorithm | Elevated Degrade | EVHTM TTH3 | U2   | 0   | 65535 | 336     | h    |
| Advanced Charge Algorithm | Elevated Degrade | EVHTM TTH4 | U2   | 0   | 65535 | 480     | h    |
| Advanced Charge Algorithm | Elevated Degrade | EVHTM TTH5 | U2   | 0   | 65535 | 720     | h    |

**Description:** These parameters set the 5 levels of time thresholds for elevated voltage extended charge degradation under EVHTM temperature range.

#### 20.2.25.26 EVHTM Delta Charging Voltages

| Class                     | Subclass         | Name            | Type | Min | Max   | Default | Unit |
|---------------------------|------------------|-----------------|------|-----|-------|---------|------|
| Advanced Charge Algorithm | Elevated Degrade | EVHTM CV Delta1 | I2   | 0   | 32767 | 50      | mV   |
| Advanced Charge Algorithm | Elevated Degrade | EVHTM CV Delta2 | I2   | 0   | 32767 | 100     | mV   |
| Advanced Charge Algorithm | Elevated Degrade | EVHTM CV Delta3 | I2   | 0   | 32767 | 200     | mV   |
| Advanced Charge Algorithm | Elevated Degrade | EVHTM CV Delta4 | I2   | 0   | 32767 | 250     | mV   |
| Advanced Charge Algorithm | Elevated Degrade | EVHTM CV Delta5 | I2   | 0   | 32767 | 300     | mV   |

**Description:** These parameters set the 5 levels of stepdown voltaged to be reduced from *ChargingVoltage()* for elevated voltage extended charge degradation under EVHTM temperature range.

## 20.3 Power

### 20.3.1 Power

| Class | Subclass | Name                 | Type | Min | Max   | Default | Unit |
|-------|----------|----------------------|------|-----|-------|---------|------|
| Power | Power    | Valid Update Voltage | I2   | 0   | 32767 | 3500    | mV   |

**Description:** Min stack voltage threshold for Flash update

### 20.3.2 Shutdown

#### 20.3.2.1 Shutdown Voltage

| Class | Subclass | Name             | Type | Min | Max   | Default | Unit |
|-------|----------|------------------|------|-----|-------|---------|------|
| Power | Shutdown | Shutdown Voltage | I2   | 0   | 32767 | 1750    | mV   |

**Description:** Cell-based shutdown voltage trip threshold

### 20.3.2.2 Shutdown Time

| Class | Subclass | Name          | Type | Min | Max | Default | Unit |
|-------|----------|---------------|------|-----|-----|---------|------|
| Power | Shutdown | Shutdown Time | U1   | 0   | 255 | 10      | s    |

**Description:** Cell-based shutdown voltage trip delay

### 20.3.2.3 IO Shutdown Delay

| Class | Subclass | Name              | Type | Min | Max | Default | Unit  |
|-------|----------|-------------------|------|-----|-----|---------|-------|
| Power | Shutdown | IO Shutdown Delay | U1   | 0   | 255 | 1       | 250ms |

**Description:** IO shutdown input debounce time

### 20.3.2.4 IO Shutdown Timeout

| Class | Subclass | Name                | Type | Min | Max | Default | Unit  |
|-------|----------|---------------------|------|-----|-----|---------|-------|
| Power | Shutdown | IO Shutdown Timeout | U1   | 0   | 255 | 8       | 250ms |

**Description:** This is the IO shutdown activation timeout when **[IO\_TIMEOUT]** is set and PACK voltage > **Charger Present Threshold**.

### 20.3.2.5 Low RSoC Shutdown Threshold

| Class | Subclass | Name                        | Type | Min | Max | Default | Unit |
|-------|----------|-----------------------------|------|-----|-----|---------|------|
| Power | Shutdown | Low RSoC Shutdown Threshold | U1   | 0   | 100 | 2       | %    |

**Description:** When **Power Config[RSOC\_SD]** is enabled, this parameter sets the RSOC threshold below which a timer will start to count down from **[Low RSOC SD Time]** before auto shutdown if no charge current is detected during the count down.

### 20.3.2.6 Low RSoC Shutdown Time

| Class | Subclass | Name                   | Type | Min | Max | Default | Unit  |
|-------|----------|------------------------|------|-----|-----|---------|-------|
| Power | Shutdown | Low RSoC Shutdown Time | U1   | 0   | 255 | 24      | hours |

**Description:** Time limit for Low RSOC auto shutdown

### 20.3.2.7 Charger Present Threshold

| Class | Subclass | Name                      | Type | Min | Max   | Default | Unit |
|-------|----------|---------------------------|------|-----|-------|---------|------|
| Power | Shutdown | Charger Present Threshold | I2   | 0   | 32767 | 3000    | mV   |

**Description:** PACK pin charger present detect threshold for shutdown hardware. This value should not be greater than 3 V, unless the charger output is less than 3 V.

## 20.3.3 Sleep

### 20.3.3.1 Sleep Current

| Class | Subclass | Name          | Type | Min | Max   | Default | Unit |
|-------|----------|---------------|------|-----|-------|---------|------|
| Power | Sleep    | Sleep Current | I2   | 0   | 32767 | 10      | mA   |

**Description:** **|Current()** threshold to enter SLEEP mode. If this parameter is set to 0, then the **deadband** will effectively become the **Sleep Current** setting, because any current below the **deadband** will set the **Current()** = 0 mA.

### 20.3.3.2 Low Current

| Class | Subclass | Name        | Type | Min | Max   | Default | Unit |
|-------|----------|-------------|------|-----|-------|---------|------|
| Power | Sleep    | Low Current | I2   | 0   | 32767 | 5       | mA   |

**Description:** If gauge is not in sleep mode and *Current()* < Low Current, current is measured every Low Current Period.

### 20.3.3.3 Low Current Period

| Class | Subclass | Name               | Type | Min    | Max    | Default | Unit |
|-------|----------|--------------------|------|--------|--------|---------|------|
| Power | Sleep    | Low Current Period | H2   | 0x0008 | 0x0040 | 0x0010  | Hex  |

**Description:** Low Current Period determines the current measurement period. 0x0040 is 8s, 0x0020 is 4s, 0x0010 is 2s, 0x0008 is 1s.

### 20.3.3.4 Measure Time

| Class | Subclass | Name         | Type | Min | Max | Default | Unit |
|-------|----------|--------------|------|-----|-----|---------|------|
| Power | Sleep    | Measure Time | U2   | 8   | 8   | 8       | s    |

**Description:** Voltage measurement time in sleep mode.

### 20.3.3.5 Bus Timeout

| Class | Subclass | Name        | Type | Min | Max | Default | Unit |
|-------|----------|-------------|------|-----|-----|---------|------|
| Power | Sleep    | Bus Timeout | U1   | 0   | 255 | 5       | s    |

**Description:** Bus low or no communication time to enter SLEEP mode

### 20.3.3.6 Current Time

| Class | Subclass | Name         | Type | Min | Max | Default | Unit |
|-------|----------|--------------|------|-----|-----|---------|------|
| Power | Sleep    | Current Time | U1   | 1   | 64  | 16      | s    |

**Description:** *Current()* sampling period in SLEEP mode

#### Note

A valid **Current Time** must be the multiple of 8s. It means that **Current Time** can only be configured as 8, 16, 24, 32, 40, 48, 56, 64s.

## 20.3.4 Ship

### 20.3.4.1 FET Off Time

| Class | Subclass | Name         | Type | Min | Max | Default | Unit |
|-------|----------|--------------|------|-----|-----|---------|------|
| Power | Ship     | FET Off Time | U1   | 0   | 127 | 10      | s    |

**Description:** Delay time to turn off FETs prior to entering SHUTDOWN mode. This setting should not be longer than the **Ship Delay** setting.

### 20.3.4.2 Delay

| Class | Subclass | Name  | Type | Min | Max | Default | Unit |
|-------|----------|-------|------|-----|-----|---------|------|
| Power | Ship     | Delay | U1   | 0   | 254 | 20      | s    |

**Description:** Delay time to enter SHUTDOWN mode after FETs are turned off.

### 20.3.4.3 Auto Ship Time

| Class | Subclass | Name           | Type | Min | Max   | Default | Unit |
|-------|----------|----------------|------|-----|-------|---------|------|
| Power | Ship     | Auto Ship time | U2   | 0   | 65535 | 1440    | min  |

**Description:** The device will automatically enter SHUTDOWN mode after staying in SLEEP mode without communication for this amount of time when **Power Config[AUTO\_SHIP\_EN] = 1**.

### 20.3.5 Power Off

| Class | Subclass  | Name    | Type | Min | Max   | Default | Unit |
|-------|-----------|---------|------|-----|-------|---------|------|
| Power | Power Off | Timeout | U2   | 0   | 65535 | 30      | min  |

**Description:** Timeout to exit the Emergency FET Shutdown condition

### 20.3.6 Manual FET Control

| Class | Subclass           | Name      | Type | Min | Max | Default | Unit   |
|-------|--------------------|-----------|------|-----|-----|---------|--------|
| Power | Manual FET Control | MFC Delay | U1   | 0   | 255 | 60      | 0.25 s |

**Description:** Delay time to turn off FETs through MFC

### 20.3.7 System Present

#### 20.3.7.1 SysPres Delay

| Class | Subclass       | Name          | Type | Min | Max | Default | Unit  |
|-------|----------------|---------------|------|-----|-----|---------|-------|
| Power | System Present | SYS_PRE Delay | U1   | 1   | 8   | 1       | Count |

**Description:** Number of consecutive pin samples required to determine the state of a configured function. This parameter is used for debouncing the SHUTDN and PRES functions when assigned to a GPIO pin via IO Config settings. Samples are taken at 250-ms intervals.

### 20.3.8 Storage

#### 20.3.8.1 Storage Delay

| Class | Subclass | Name          | Type | Min | Max | Default | Units |
|-------|----------|---------------|------|-----|-----|---------|-------|
| Power | Storage  | Storage Delay | U1   | 0   | 255 | 10      | s     |

**Description:** Sets the time after which the CHG and DSG FETs are turned off for STORAGE mode.

#### 20.3.8.2 Storage Ignore SMB Delay

| Class | Subclass | Name                     | Type | Min | Max | Default | Units |
|-------|----------|--------------------------|------|-----|-----|---------|-------|
| Power | Storage  | Storage Ignore SMB Delay | U1   | 0   | 255 | 30      | s     |

**Description:** This sets the time after which the CHG and DSG FETs are turned back on if the device is not in SLEEP mode.

### 20.3.9 Power Events

#### 20.3.9.1 Power Events

| Class     | Subclass     | Name                 | Type | Min | Max | Default | Unit   |
|-----------|--------------|----------------------|------|-----|-----|---------|--------|
| Lifetimes | Power Events | No of Shutdowns      | U1   | 0   | 255 | 0       | events |
| Lifetimes | Power Events | No of Partial Resets | U1   | 0   | 255 | 0       | events |
| Lifetimes | Power Events | No of Full Resets    | U1   | 0   | 255 | 0       | events |
| Lifetimes | Power Events | No of Wdt Resets     | U1   | 0   | 255 | 0       | events |

**Description:** Total number of shutdown events, partial resets, full resets and watchdog resets.

## 20.3.10 IATA

### 20.3.10.1 IATA Config

| Class | Subclass | Name        | Type | Min  | Max  | Default   | Unit       |
|-------|----------|-------------|------|------|------|-----------|------------|
| Power | IATA     | IATA Config | H1   | 0x00 | 0xFF | 0x03      | Hex        |
| 7     | 6        | 5           | 4    | 3    | 2    | 1         | 0          |
| RSVD  | RSVD     | RSVD        | RSVD | RSVD | RSVD | ISTORE_RM | ISTORE_FCC |

**RSVD (Bits 7–2):** Reserved. Do not use.

**ISTORE\_RM (Bit 1):** This bit defines whether the stored value of RM ( *IATA RM* ) or the true value is displayed during the *IATA Delay Time* period.

1 = Stored value of RM (IATA RM) is displayed during the *IATA Delay Time* period. (default)

0 = True (present) value of RM is displayed.

**ISTORE\_FCC (Bit 0):** This bit defines whether the stored value of FCC ( *IATA FCC* ) or the true value is displayed during the *IATA Delay Time* period.

1 = Stored value of FCC ( *IATA FCC* ) is displayed during the *IATA Delay Time* period. (default)

0 = True (present) value of FCC is displayed.

### 20.3.10.2 IATA Delay Time

| Class | Subclass | Name            | Type | Min | Max   | Default | Unit |
|-------|----------|-----------------|------|-----|-------|---------|------|
| Power | IATA     | IATA Delay Time | U2   | 0   | 65535 | 10      | s    |

**Description:** *IATA Delay Time* holds the time that the stored RM and FCC values are displayed initially on wake up from IATA shutdown.

### 20.3.10.3 IATA RSOC Threshold

| Class | Subclass | Name                | Type | Min | Max | Default | Unit |
|-------|----------|---------------------|------|-----|-----|---------|------|
| Power | IATA     | IATA RSOC Threshold | U1   | 0   | 100 | 30      | %    |

**Description:** *IATA RSOC Threshold* holds the RSOC threshold above which IATA shutdown will not be allowed.

### 20.3.10.4 IATA Wake AbsRSOC

| Class | Subclass | Name              | Type | Min | Max | Default | Unit |
|-------|----------|-------------------|------|-----|-----|---------|------|
| Power | IATA     | IATA Wake AbsRSOC | U1   | 0   | 100 | 10      | %    |

**Description:** On wake up from *IATA* shutdown, if *IATA Delay Time* = 0, and if true RSOC is  $\leq$  *IATA Wake AbsRSOC* , then the true value of remaining capacity and FCC will be immediately displayed on wake up.

### 20.3.10.5 IATA MIN Temperature

| Class | Subclass | Name                 | Type | Min  | Max  | Default | Unit  |
|-------|----------|----------------------|------|------|------|---------|-------|
| Power | IATA     | IATA MIN Temperature | I2   | 2332 | 3932 | 2832    | 0.1 K |

**Description:** *IATA MIN Temperature* holds the min temperature below which, on wake up from IATA, only the true (present) value of FCC and RM is displayed.

### 20.3.10.6 IATA MAX Temperature

| Class | Subclass | Name                 | Type | Min  | Max  | Default | Unit  |
|-------|----------|----------------------|------|------|------|---------|-------|
| Power | IATA     | IATA MAX Temperature | I2   | 2332 | 3932 | 3132    | 0.1 K |

**Description:** *IATA MAX Temperature* holds the max temperature above which, on wake up from IATA, only the true (present) value of FCC and RM is displayed.

### 20.3.10.7 IATA MIN Voltage

| Class | Subclass | Name             | Type | Min | Max   | Default | Unit |
|-------|----------|------------------|------|-----|-------|---------|------|
| Power | IATA     | IATA MIN Voltage | I2   | 0   | 32767 | 3000    | mV   |

**Description:** *IATA MIN Voltage* holds the min voltage below which, on wake up from IATA, only the true (present) value of FCC and RM is displayed.

### 20.3.10.8 IATA MAX Voltage

| Class | Subclass | Name             | Type | Min | Max   | Default | Unit |
|-------|----------|------------------|------|-----|-------|---------|------|
| Power | IATA     | IATA MAX Voltage | I2   | 0   | 32767 | 3600    | mV   |

**Description:** *IATA MAX Voltage* holds the max voltage above which, on wake up from IATA, only the true (present) value of FCC and RM is displayed.

## 20.3.11 IATA STORE

### 20.3.11.1 IATA RM mAH

| Class | Subclass   | Name        | Type | Min | Max   | Default | Unit |
|-------|------------|-------------|------|-----|-------|---------|------|
| Power | IATA STORE | IATA RM mAH | I2   | 0   | 32767 | 0       | mAh  |

**Description:** *IATA RM mAH* stores the remaining capacity (in mAh) at the time an IATA shutdown occurs.

### 20.3.11.2 IATA RM cWH

| Class | Subclass   | Name        | Type | Min | Max   | Default | Unit |
|-------|------------|-------------|------|-----|-------|---------|------|
| Power | IATA STORE | IATA RM cWH | I2   | 0   | 32767 | 0       | cWh  |

**Description:** *IATA RM cWH* stores the remaining capacity (in cWh) at the time an IATA shutdown occurs.

### 20.3.11.3 IATA FCC mAH

| Class | Subclass   | Name         | Type | Min | Max   | Default | Unit |
|-------|------------|--------------|------|-----|-------|---------|------|
| Power | IATA STORE | IATA FCC mAH | I2   | 0   | 32767 | 0       | mAh  |

**Description:** *IATA FCC mAH* stores the value of FCC (in mAh) at the time an IATA shutdown occurs.

### 20.3.11.4 IATA FCC cWH

| Class | Subclass   | Name         | Type | Min | Max   | Default | Unit |
|-------|------------|--------------|------|-----|-------|---------|------|
| Power | IATA STORE | IATA FCC cWH | I2   | 0   | 32767 | 0       | cWh  |

**Description:** *IATA FCC cWH* stores the value of FCC (in cWh) at the time an IATA shutdown occurs.

### 20.3.11.5 IATA Flag

| Class | Subclass   | Name      | Type | Min  | Max  | Default | Unit |
|-------|------------|-----------|------|------|------|---------|------|
| Power | IATA STORE | IATA Flag | H1   | 0x00 | 0xFF | 0x0     | Hex  |

7                      6                      5                      4                      3                      2                      1                      0

|      |      |      |      |      |      |      |           |
|------|------|------|------|------|------|------|-----------|
| RSVD | RSVD | RSVD | RSVD | RSVD | RSVD | RSVD | IATA_SHUT |
|------|------|------|------|------|------|------|-----------|

**RSVD (Bits 7–1):** Reserved. Do not use.

**IATA\_SHUT (Bit 0):** Enables the IATA shutdown to proceed. This bit is automatically set if the *IATA\_SHUTDOWN()* MAC command is used. This bit needs to be manually set if the normal *ShutdownMode()* MAC command is expected to do an IATA shutdown.

1 = IATA shutdown is enabled.

0 = IATA shutdown is disabled.

## 20.3.12 Unintended Wakeup

### 20.3.12.1 Delay

| Class | Subclass          | Name  | Type | Min | Max | Default | Unit |
|-------|-------------------|-------|------|-----|-----|---------|------|
| Power | Unintended Wakeup | Delay | U1   | 0   | 240 | 2       | s    |

**Description:** This sets the time in which communication is checked. If during this **Delay** timer period there is no valid communication with the device, then the device goes back into shutdown (with FETs turned off). If there is valid communication within the **Delay** timer period, then the device stays in wake and continues like a normal wakeup.

### 20.3.12.2 Count

| Class | Subclass          | Name  | Type | Min | Max | Default | Unit |
|-------|-------------------|-------|------|-----|-----|---------|------|
| Power | Unintended Wakeup | Count | U1   | 0   | 255 | 3       | —    |

**Description:** The number of times the gauge wakes up from shutdown unintentionally is recorded. This "unintentional wakeup" counter is reset when the gauge wakes up and sees valid communication. If this count exceeds the threshold set by this register ( **Count** with the default of 3), then the next time the gauge wakes up from shutdown, it will execute a normal wakeup without looking for valid communication (and the counter recording wakeup will be reset). If **Count** is set to 0, then no threshold exists and the gauge will only wake up with valid communications.

## 20.4 System Data

### 20.4.1 Manufacturer Info

| Class       | Subclass          | Name             | Type | Min | Max | Default                             | Units |
|-------------|-------------------|------------------|------|-----|-----|-------------------------------------|-------|
| System Data | Manufacturer Data | ManufacturerInfo | S33  | —   | —   | abcdefghijklmnpqrstuvw<br>zxy012345 | —     |

**Description:** *ManufacturerInfo()* value

### 20.4.2 Manufacturer Info B

| Class       | Subclass            | Name                       | Type | Min | Max  | Default | Units |
|-------------|---------------------|----------------------------|------|-----|------|---------|-------|
| System Data | Manufacturer Info B | Manufacturer Info B Length | U1   | 1   | 32   | 32      | —     |
| System Data | Manufacturer Info B | Manufacturer Info B01      | H1   | 0x0 | 0xFF | 01      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B02      | H1   | 0x0 | 0xFF | 23      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B03      | H1   | 0x0 | 0xFF | 45      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B04      | H1   | 0x0 | 0xFF | 67      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B05      | H1   | 0x0 | 0xFF | 89      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B06      | H1   | 0x0 | 0xFF | AB      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B07      | H1   | 0x0 | 0xFF | CD      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B08      | H1   | 0x0 | 0xFF | EF      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B09      | H1   | 0x0 | 0xFF | 10      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B10      | H1   | 0x0 | 0xFF | 11      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B11      | H1   | 0x0 | 0xFF | 12      | Hex   |

| Class       | Subclass            | Name                  | Type | Min | Max  | Default | Units |
|-------------|---------------------|-----------------------|------|-----|------|---------|-------|
| System Data | Manufacturer Info B | Manufacturer Info B12 | H1   | 0x0 | 0xFF | 13      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B13 | H1   | 0x0 | 0xFF | 14      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B14 | H1   | 0x0 | 0xFF | 15      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B15 | H1   | 0x0 | 0xFF | 16      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B16 | H1   | 0x0 | 0xFF | 17      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B17 | H1   | 0x0 | 0xFF | 18      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B18 | H1   | 0x0 | 0xFF | 19      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B19 | H1   | 0x0 | 0xFF | 1A      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B20 | H1   | 0x0 | 0xFF | 1B      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B21 | H1   | 0x0 | 0xFF | 1C      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B22 | H1   | 0x0 | 0xFF | 1C      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B23 | H1   | 0x0 | 0xFF | 1D      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B24 | H1   | 0x0 | 0xFF | 1E      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B25 | H1   | 0x0 | 0xFF | 1F      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B26 | H1   | 0x0 | 0xFF | 20      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B27 | H1   | 0x0 | 0xFF | 21      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B28 | H1   | 0x0 | 0xFF | 22      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B29 | H1   | 0x0 | 0xFF | 23      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B30 | H1   | 0x0 | 0xFF | 24      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B31 | H1   | 0x0 | 0xFF | 25      | Hex   |
| System Data | Manufacturer Info B | Manufacturer Info B32 | H1   | 0x0 | 0xFF | 26      | Hex   |

**Description:** *ManufacturerInfoB()* value

## 20.4.3 Manufacturer Info C

| Class       | Subclass            | Name                       | Type | Min | Max  | Default | Units |
|-------------|---------------------|----------------------------|------|-----|------|---------|-------|
| System Data | Manufacturer Info C | Manufacturer Info C Length | U1   | 1   | 32   | 32      | —     |
| System Data | Manufacturer Info C | Manufacturer Info C01      | H1   | 0x0 | 0xFF | 01      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C02      | H1   | 0x0 | 0xFF | 23      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C03      | H1   | 0x0 | 0xFF | 45      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C04      | H1   | 0x0 | 0xFF | 67      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C05      | H1   | 0x0 | 0xFF | 89      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C06      | H1   | 0x0 | 0xFF | AB      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C07      | H1   | 0x0 | 0xFF | CD      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C08      | H1   | 0x0 | 0xFF | EF      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C09      | H1   | 0x0 | 0xFF | 10      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C10      | H1   | 0x0 | 0xFF | 11      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C11      | H1   | 0x0 | 0xFF | 12      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C12      | H1   | 0x0 | 0xFF | 13      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C13      | H1   | 0x0 | 0xFF | 14      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C14      | H1   | 0x0 | 0xFF | 15      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C15      | H1   | 0x0 | 0xFF | 16      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C16      | H1   | 0x0 | 0xFF | 17      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C17      | H1   | 0x0 | 0xFF | 18      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C18      | H1   | 0x0 | 0xFF | 19      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C19      | H1   | 0x0 | 0xFF | 1A      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C20      | H1   | 0x0 | 0xFF | 1B      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C21      | H1   | 0x0 | 0xFF | 1C      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C22      | H1   | 0x0 | 0xFF | 1C      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C23      | H1   | 0x0 | 0xFF | 1D      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C24      | H1   | 0x0 | 0xFF | 1E      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C25      | H1   | 0x0 | 0xFF | 1F      | Hex   |

| Class       | Subclass            | Name                  | Type | Min | Max  | Default | Units |
|-------------|---------------------|-----------------------|------|-----|------|---------|-------|
| System Data | Manufacturer Info C | Manufacturer Info C26 | H1   | 0x0 | 0xFF | 20      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C27 | H1   | 0x0 | 0xFF | 21      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C28 | H1   | 0x0 | 0xFF | 22      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C29 | H1   | 0x0 | 0xFF | 23      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C30 | H1   | 0x0 | 0xFF | 24      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C31 | H1   | 0x0 | 0xFF | 25      | Hex   |
| System Data | Manufacturer Info C | Manufacturer Info C32 | H1   | 0x0 | 0xFF | 26      | Hex   |

**Description:** *ManufacturerInfoC()* values. To enable writing these registers during SEALED mode, a two-word MfgInfoC Write MAC sequence is required. The two-word key is programmable using ManufacturerAccess() 0x0035 Security Keys. Both keys must be sent within 4 seconds of each other. Once the correct two-word MAC sequence is received, host can update *ManufacturerInfoC()* values in SEALED mode for the time period specified in **MfgInfoC Write Timeout**. After this period runs out, *ManufacturerInfoC()* will automatically be sealed again and updates will no longer be allowed.

#### 20.4.4 Integrity

##### 20.4.4.1 Static DF Signature

| Class       | Subclass  | Name                | Type | Min | Max    | Default | Units |
|-------------|-----------|---------------------|------|-----|--------|---------|-------|
| System Data | Integrity | Static DF Signature | H2   | 0x0 | 0x7FFF | 0x0     | Hex   |

**Description:** Static data flash signature. Use MAC *StaticDFSSignature()* (with MSB set to 0) to initialize this value.

##### 20.4.4.2 Static Chem DF

| Class       | Subclass  | Name                     | Type | Min | Max    | Default | Units |
|-------------|-----------|--------------------------|------|-----|--------|---------|-------|
| System Data | Integrity | Static Chem DF Signature | H2   | 0x0 | 0x7FFF | 0x73B5  | Hex   |

**Description:** Static chemistry data signature. Use MAC *StaticChemDFSSignature()* (with MSB set to 0) to initialize this value.

##### 20.4.4.3 All DF Signature

| Class       | Subclass  | Name             | Type | Min | Max    | Default | Units |
|-------------|-----------|------------------|------|-----|--------|---------|-------|
| System Data | Integrity | All DF Signature | H2   | 0x0 | 0x7FFF | 0x0     | Hex   |

**Description:** Static data flash signature. Use MAC *AllDFSSignature()* (with MSB set to 0) to initialize this value.

## 20.5 SBS Configuration

### 20.5.1 Data

#### 20.5.1.1 Manufacturer Date

| Class             | Subclass | Name              | Type | Min | Max   | Default | Unit |
|-------------------|----------|-------------------|------|-----|-------|---------|------|
| SBS Configuration | Data     | Manufacturer Date | U2   | 0   | 65535 | 0       | Date |

**Description:** *ManufacturerDate()* value in the following format: Day + Month×32 + (Year–1980) × 512

#### 20.5.1.2 Serial Number

| Class             | Subclass | Name          | Type | Min    | Max    | Default | Unit |
|-------------------|----------|---------------|------|--------|--------|---------|------|
| SBS Configuration | Data     | Serial Number | H2   | 0x0000 | 0xFFFF | 0x0001  | Hex  |

**Description:** *SerialNumber()* value

### 20.5.1.3 Manufacturer Name

| Class             | Subclass | Name              | Type  | Min | Max | Default           | Unit  |
|-------------------|----------|-------------------|-------|-----|-----|-------------------|-------|
| SBS Configuration | Data     | Manufacturer Name | S20+1 | —   | —   | Texas Instruments | ASCII |

**Description:** *ManufacturerName()* value

### 20.5.1.4 Device Name

| Class             | Subclass | Name        | Type  | Min | Max | Default  | Unit  |
|-------------------|----------|-------------|-------|-----|-----|----------|-------|
| SBS Configuration | Data     | Device Name | S20+1 | —   | —   | BQDEVICE | ASCII |

**Description:** *DeviceName()* value

### 20.5.1.5 Device Chemistry

| Class             | Subclass | Name             | Type | Min | Max | Default | Unit  |
|-------------------|----------|------------------|------|-----|-----|---------|-------|
| SBS Configuration | Data     | Device Chemistry | S4+1 | —   | —   | LION    | ASCII |

**Description:** *DeviceChemistry()* value

### 20.5.1.6 Remaining Capacity Alarm

#### 20.5.1.6.1 Remaining Ah Capacity Alarm

| Class             | Subclass | Name                        | Type | Min | Max   | Default | Unit |
|-------------------|----------|-----------------------------|------|-----|-------|---------|------|
| SBS Configuration | Data     | Remaining Ah Capacity Alarm | U2   | 0   | 32767 | 300     | mAh  |

**Description:** *RemainingCapacityAlarm()* value in mAh

#### 20.5.1.6.2 Remaining Wh Capacity Alarm

| Class             | Subclass | Name                        | Type | Min | Max   | Default | Unit |
|-------------------|----------|-----------------------------|------|-----|-------|---------|------|
| SBS Configuration | Data     | Remaining Wh Capacity Alarm | U2   | 0   | 32767 | 432     | cWh  |

**Description:** *RemainingCapacityAlarm()* value in cWh

### 20.5.1.7 RemainingTimeAlarm

| Class             | Subclass | Name                 | Type | Min | Max   | Default | Unit |
|-------------------|----------|----------------------|------|-----|-------|---------|------|
| SBS Configuration | Data     | Remaining Time Alarm | U2   | 0   | 65535 | 10      | min  |

**Description:** *RemainingTimeAlarm()* value

### 20.5.1.8 Initial Battery Mode

| Class             | Subclass | Name                 | Type | Min    | Max    | Default | Unit |
|-------------------|----------|----------------------|------|--------|--------|---------|------|
| SBS Configuration | Data     | Initial Battery Mode | H2   | 0x0000 | 0xFFFF | 0x0081  | Hex  |

15      14      13      12      11      10      9      8

|      |      |    |      |      |      |    |    |
|------|------|----|------|------|------|----|----|
| CAPM | CHGM | AM | RSVD | RSVD | RSVD | PB | CC |
|------|------|----|------|------|------|----|----|

7      6      5      4      3      2      1      0

|    |      |      |      |      |      |     |     |
|----|------|------|------|------|------|-----|-----|
| CF | RSVD | RSVD | RSVD | RSVD | RSVD | PBS | ICC |
|----|------|------|------|------|------|-----|-----|

**CAPM (Bit 15):** Capacity\_Mode (R/W)

- 1 = Report in cW or cWh
- 0 = Report in mA or mAh (default)

**CHGM (Bit 14):** Charger\_Mode (R/W)

- 1 = Disables *ChargingVoltage()* and *ChargingCurrent()* broadcasts to the host and smart battery charger (default)
- 0 = Enables *ChargingVoltage()* and *ChargingCurrent()* broadcasts to the host and smart battery charger

**AM (Bit 13):** ALARM Mode (R/W)

- 1 = Disables *AlarmWarning()* broadcasts to the host and smart battery charger
- 0 = Enables *AlarmWarning()* broadcasts to the host and smart battery charger (default)

**RSVD (Bits 12–10):** Reserved. Do not use.

**PB (Bit 9):** Primary\_Battery (R/W)

- 1 = Battery operating in its primary role
- 0 = Battery operating in its secondary role (default)

**CC (Bit 8):** Charge\_Controller\_Enabled (R/W)

- 1 = Internal charge control enabled
- 0 = Internal charge control disabled (default)

**CF (Bit 7):** Condition\_Flag (R)

- 1 = Conditioning cycle requested
- 0 = Battery is okay.

**RSVD (Bits 6–2):** Reserved. Do not use.

**PBS (Bit 1):** Primary\_Battery\_Support (R)

- 1 = Primary or secondary battery support
- 0 = Function is not supported. (default)

**ICC (Bit 0):** Internal\_Charge\_Controller (R)

- 1 = Function is supported.
- 0 = Function is not supported. (default)

### 20.5.1.9 Specification Information

| Class             | Subclass | Name                      | Type    | Min      | Max      | Default  | Unit     |
|-------------------|----------|---------------------------|---------|----------|----------|----------|----------|
| SBS Configuration | Data     | Specification Information | H2      | 0x0000   | 0xFFFF   | 0x0031   | Hex      |
| 15                | 14       | 13                        | 12      | 11       | 10       | 9        | 8        |
| IPScale           | IPScale  | IPScale                   | IPScale | VScale   | VScale   | VScale   | VScale   |
| 7                 | 6        | 5                         | 4       | 3        | 2        | 1        | 0        |
| Version           | Version  | Version                   | Version | Revision | Revision | Revision | Revision |

*SpecificationInformation()* values

**IPScale (Bits 15–12):** IP Scale Factor

- 0,0,0,0 = Reported currents and capacities scaled by 10E0 except *ChargingVoltage()* and *ChargingCurrent()*
- 0,0,0,1 = Reported currents and capacities scaled by 10E1 except *ChargingVoltage()* and *ChargingCurrent()*
- 0,0,1,0 = Reported currents and capacities scaled by 10E2 except *ChargingVoltage()* and *ChargingCurrent()*
- 0,0,1,1 = Reported currents and capacities scaled by 10E3 except *ChargingVoltage()* and *ChargingCurrent()*

**VScale (Bits 11–8):** Voltage Scale Factor

- 0,0,0,0 = Reported voltages scaled by 10E0

0,0,0,1 = Reported voltages scaled by 10E1

0,0,1,0 = Reported voltages scaled by 10E2

0,0,1,1 = Reported voltages scaled by 10E3

#### Version (Bits 7–4): Version

0,0,0,1 = Version 1.0

0,0,1,1 = Version 1.1

0,0,1,1 = Version 1.1 with optional PEC support

#### Revision (Bits 3–0): Revision

0,0,0,1 = Version 1.0 and 1.1 (default)

### 20.5.1.10 VLB Remaining Capacity

#### 20.5.1.10.1 VLB Remaining Cap mAh

| Class             | Subclass | Name                  | Type | Min | Max   | Default | Unit |
|-------------------|----------|-----------------------|------|-----|-------|---------|------|
| SBS Configuration | Data     | VLB Remaining Cap mAh | I2   | 0   | 32767 | 176     | mAh  |

**Description:** Very low battery warning hold capacity in mAh.

#### 20.5.1.10.2 VLB Remaining Cap in cWh

| Class             | Subclass | Name                  | Type | Min | Max   | Default | Unit |
|-------------------|----------|-----------------------|------|-----|-------|---------|------|
| SBS Configuration | Data     | VLB Remaining Cap cWh | I2   | 0   | 32767 | 254     | cWh  |

**Description:** Very low battery warning hold capacity in cWh.

### 20.5.1.11 VLB Voltage

| Class             | Subclass | Name        | Type | Min | Max  | Default | Unit |
|-------------------|----------|-------------|------|-----|------|---------|------|
| SBS Configuration | Data     | VLB Voltage | I2   | 0   | 5000 | 2850    | mV   |

**Description:** Very low battery warning voltage.

### 20.5.1.12 VLB Hold Time

| Class             | Subclass | Name          | Type | Min | Max | Default | Unit |
|-------------------|----------|---------------|------|-----|-----|---------|------|
| SBS Configuration | Data     | VLB Hold Time | U1   | 0   | 255 | 2       | s    |

**Description:** Very low battery warning hold time.

### 20.5.1.13 VLB Timeout

| Class             | Subclass | Name        | Type | Min | Max | Default | Unit |
|-------------------|----------|-------------|------|-----|-----|---------|------|
| SBS Configuration | Data     | VLB Timeout | U1   | 0   | 255 | 120     | s    |

**Description:** *RemainingCapacity()* is hold to **VLB Remaning Cap** .for **VLB Timeout** .

## 20.6 Lifetimes

### 20.6.1 Cell 1 Max Voltage

| Class     | Subclass | Name               | Type | Min | Max   | Default | Unit |
|-----------|----------|--------------------|------|-----|-------|---------|------|
| Lifetimes | Voltage  | Cell 1 Max Voltage | I2   | 0   | 32767 | 0       | mV   |

**Description:** Maximum reported cell voltage 1

### 20.6.2 Cell 1 Min Voltage

| Class     | Subclass | Name               | Type | Min | Max   | Default | Unit |
|-----------|----------|--------------------|------|-----|-------|---------|------|
| Lifetimes | Voltage  | Cell 1 Min Voltage | I2   | 0   | 32767 | 32767   | mV   |

**Description:** Minimum reported cell voltage 1

### 20.6.3 Current

#### 20.6.3.1 Max Charge Current

| Class     | Subclass | Name               | Type | Min | Max   | Default | Unit |
|-----------|----------|--------------------|------|-----|-------|---------|------|
| Lifetimes | Current  | Max Charge Current | I2   | 0   | 32767 | 0       | mA   |

**Description:** Maximum reported *Current()* in charge direction

#### 20.6.3.2 Max Discharge Current

| Class     | Subclass | Name                  | Type | Min    | Max | Default | Unit |
|-----------|----------|-----------------------|------|--------|-----|---------|------|
| Lifetimes | Current  | Max Discharge Current | I2   | -32768 | 0   | 0       | mA   |

**Description:** Maximum reported *Current()* in discharge direction

#### 20.6.3.3 Max Avg Dsg Current

| Class     | Subclass | Name                | Type | Min    | Max | Default | Unit |
|-----------|----------|---------------------|------|--------|-----|---------|------|
| Lifetimes | Current  | Max Avg Dsg Current | I2   | -32768 | 0   | 0       | mA   |

**Description:** Maximum reported *AverageCurrent()* in discharge direction

#### 20.6.3.4 Max Avg Dsg Power

| Class     | Subclass | Name              | Type | Min    | Max | Default | Unit |
|-----------|----------|-------------------|------|--------|-----|---------|------|
| Lifetimes | Current  | Max Avg Dsg Power | I2   | -32768 | 0   | 0       | cW   |

**Description:** Maximum reported average power in the discharge direction

### 20.6.4 Temperature-Relax

#### 20.6.4.1 Max Temp Cell

| Class     | Subclass          | Name          | Type | Min | Max | Default | Unit |
|-----------|-------------------|---------------|------|-----|-----|---------|------|
| Lifetimes | Temperature-Relax | Max Temp Cell | U1   | 0   | 255 | 0       | °C   |

**Description:** Maximum reported cell temperature in RELAX mode

#### 20.6.4.2 Min Temp Cell

| Class     | Subclass          | Name          | Type | Min  | Max | Default | Unit |
|-----------|-------------------|---------------|------|------|-----|---------|------|
| Lifetimes | Temperature-Relax | Min Temp Cell | I1   | -128 | 127 | 127     | °C   |

**Description:** Minimum reported cell temperature in RELAX mode

#### 20.6.4.3 Min Temp Int Sensor

| Class     | Subclass          | Name                | Type | Min  | Max | Default | Unit |
|-----------|-------------------|---------------------|------|------|-----|---------|------|
| Lifetimes | Temperature-Relax | Min Temp Int Sensor | I1   | -128 | 127 | 127     | °C   |

**Description:** Minimum reported internal temperature sensor temperature in RELAX mode

#### 20.6.4.4 Max Temp Int Sensor

| Class     | Subclass          | Name                | Type | Min | Max | Default | Unit |
|-----------|-------------------|---------------------|------|-----|-----|---------|------|
| Lifetimes | Temperature-Relax | Max Temp Int Sensor | U1   | 0   | 255 | 0       | °C   |

**Description:** Maximum reported internal temperature sensor temperature in RELAX mode

**20.6.4.5 Max Temp Fet**

| Class     | Subclass          | Name         | Type | Min | Max | Default | Unit |
|-----------|-------------------|--------------|------|-----|-----|---------|------|
| Lifetimes | Temperature-Relax | Max Temp Fet | U1   | 0   | 255 | 0       | °C   |

**Description:** Maximum reported FET temperature in RELAX mode

**20.6.4.6 Max Temp TS1**

| Class     | Subclass          | Name         | Type | Min | Max | Default | Unit |
|-----------|-------------------|--------------|------|-----|-----|---------|------|
| Lifetimes | Temperature-Relax | Max Temp TS1 | U1   | 0   | 255 | 0       | °C   |

**Description:** Maximum reported TS1 in RELAX mode

**20.6.4.7 Min Temp TS1**

| Class     | Subclass          | Name         | Type | Min  | Max | Default | Unit |
|-----------|-------------------|--------------|------|------|-----|---------|------|
| Lifetimes | Temperature-Relax | Min Temp TS1 | I1   | -128 | 127 | 127     | °C   |

**Description:** Minimum reported TS1 in RELAX mode

**20.6.5 Max Temp Cell**

| Class     | Subclass           | Name          | Type | Min | Max | Default | Unit |
|-----------|--------------------|---------------|------|-----|-----|---------|------|
| Lifetimes | Temperature-Charge | Max Temp Cell | U1   | 0   | 255 | 0       | °C   |

**Description:** Maximum reported cell temperature in CHARGE mode

**20.6.6 Min Temp Cell**

| Class     | Subclass           | Name          | Type | Min  | Max | Default | Unit |
|-----------|--------------------|---------------|------|------|-----|---------|------|
| Lifetimes | Temperature-Charge | Min Temp Cell | I1   | -128 | 127 | 127     | °C   |

**Description:** Minimum reported cell temperature in CHARGE mode

**20.6.7 Max Temp Int Sensor**

| Class     | Subclass           | Name                | Type | Min | Max | Default | Unit |
|-----------|--------------------|---------------------|------|-----|-----|---------|------|
| Lifetimes | Temperature-Charge | Max Temp Int Sensor | U1   | 0   | 255 | 0       | °C   |

**Description:** Maximum reported internal temperature sensor temperature in CHARGE mode

**20.6.8 Min Temp Int Sensor**

| Class     | Subclass           | Name                | Type | Min  | Max | Default | Unit |
|-----------|--------------------|---------------------|------|------|-----|---------|------|
| Lifetimes | Temperature-Charge | Min Temp Int Sensor | I1   | -128 | 127 | 127     | °C   |

**Description:** Minimum reported internal temperature sensor temperature in CHARGE mode

**20.6.9 Max Temp Fet**

| Class     | Subclass           | Name         | Type | Min | Max | Default | Unit |
|-----------|--------------------|--------------|------|-----|-----|---------|------|
| Lifetimes | Temperature-Charge | Max Temp Fet | U1   | 0   | 255 | 0       | °C   |

**Description:** Maximum reported FET temperature in CHARGE mode

**20.6.10 Max Temp TS1**

| Class     | Subclass           | Name         | Type | Min | Max | Default | Unit |
|-----------|--------------------|--------------|------|-----|-----|---------|------|
| Lifetimes | Temperature-Charge | Max Temp TS1 | U1   | 0   | 255 | 0       | °C   |

**Description:** Maximum reported TS1 in CHARGE mode

#### 20.6.11 Min Temp TS1

| Class     | Subclass           | Name         | Type | Min  | Max | Default | Unit |
|-----------|--------------------|--------------|------|------|-----|---------|------|
| Lifetimes | Temperature-Charge | Min Temp TS1 | I1   | -128 | 127 | 127     | °C   |

**Description:** Minimum reported TS1 in CHARGE mode

#### 20.6.12 Max Temp Cell

| Class     | Subclass              | Name          | Type | Min | Max | Default | Unit |
|-----------|-----------------------|---------------|------|-----|-----|---------|------|
| Lifetimes | Temperature-Discharge | Max Temp Cell | U1   | 0   | 255 | 0       | °C   |

**Description:** Maximum reported cell temperature in DISCHARGE mode

#### 20.6.13 Min Temp Cell

| Class     | Subclass              | Name          | Type | Min  | Max | Default | Unit |
|-----------|-----------------------|---------------|------|------|-----|---------|------|
| Lifetimes | Temperature-Discharge | Min Temp Cell | I1   | -128 | 127 | 127     | °C   |

**Description:** Minimum reported cell temperature in DISCHARGE mode

#### 20.6.14 Max Temp Int Sensor

| Class     | Subclass              | Name                | Type | Min | Max | Default | Unit |
|-----------|-----------------------|---------------------|------|-----|-----|---------|------|
| Lifetimes | Temperature-Discharge | Max Temp Int Sensor | U1   | 0   | 255 | 0       | °C   |

**Description:** Maximum reported internal temperature sensor temperature in DISCHARGE mode

#### 20.6.15 Min Temp Int Sensor

| Class     | Subclass              | Name                | Type | Min  | Max | Default | Unit |
|-----------|-----------------------|---------------------|------|------|-----|---------|------|
| Lifetimes | Temperature-Discharge | Min Temp Int Sensor | I1   | -128 | 127 | 127     | °C   |

**Description:** Minimum reported internal temperature sensor temperature in DISCHARGE mode

#### 20.6.16 Max Temp Fet

| Class     | Subclass              | Name         | Type | Min | Max | Default | Unit |
|-----------|-----------------------|--------------|------|-----|-----|---------|------|
| Lifetimes | Temperature-Discharge | Max Temp Fet | U1   | 0   | 255 | 0       | °C   |

**Description:** Maximum reported FET temperature in DISCHARGE mode

#### 20.6.17 Max Temp TS1

| Class     | Subclass              | Name         | Type | Min | Max | Default | Unit |
|-----------|-----------------------|--------------|------|-----|-----|---------|------|
| Lifetimes | Temperature-Discharge | Max Temp TS1 | U1   | 0   | 255 | 0       | °C   |

**Description:** Maximum reported TS1 in DISCHARGE mode

#### 20.6.18 Min Temp TS1

| Class     | Subclass              | Name         | Type | Min  | Max | Default | Unit |
|-----------|-----------------------|--------------|------|------|-----|---------|------|
| Lifetimes | Temperature-Discharge | Min Temp TS1 | I1   | -128 | 127 | 127     | °C   |

**Description:** Minimum reported TS1 in DISCHARGE mode

## 20.6.19 Safety Events

### 20.6.19.1 No Of COV Events

| Class     | Subclass      | Name             | Type | Min | Max   | Default | Unit   |
|-----------|---------------|------------------|------|-----|-------|---------|--------|
| Lifetimes | Safety Events | No Of COV Events | U2   | 0   | 32767 | 0       | events |

**Description:** Total number of *SafetyStatus()[COV]* events

### 20.6.19.2 Last COV Event

| Class     | Subclass      | Name           | Type | Min | Max   | Default | Unit   |
|-----------|---------------|----------------|------|-----|-------|---------|--------|
| Lifetimes | Safety Events | Last COV Event | U2   | 0   | 32767 | 0       | cycles |

**Description:** Last *SafetyStatus()[COV]* event in *CycleCount()* cycles

### 20.6.19.3 No Of CUV Events

| Class     | Subclass      | Name             | Type | Min | Max   | Default | Unit   |
|-----------|---------------|------------------|------|-----|-------|---------|--------|
| Lifetimes | Safety Events | No Of CUV Events | U2   | 0   | 32767 | 0       | events |

**Description:** Total number of *SafetyStatus()[CUV]* events

### 20.6.19.4 Last CUV Event

| Class     | Subclass      | Name           | Type | Min | Max   | Default | Unit   |
|-----------|---------------|----------------|------|-----|-------|---------|--------|
| Lifetimes | Safety Events | Last CUV Event | U2   | 0   | 32767 | 0       | cycles |

**Description:** Last *SafetyStatus()[CUV]* event in *CycleCount()* cycles

### 20.6.19.5 No Of OCD1 Events

| Class     | Subclass      | Name              | Type | Min | Max   | Default | Unit   |
|-----------|---------------|-------------------|------|-----|-------|---------|--------|
| Lifetimes | Safety Events | No Of OCD1 Events | U2   | 0   | 32767 | 0       | events |

**Description:** Total number of *SafetyStatus()[OCD1]* events

### 20.6.19.6 Last OCD1 Event

| Class     | Subclass      | Name            | Type | Min | Max   | Default | Unit   |
|-----------|---------------|-----------------|------|-----|-------|---------|--------|
| Lifetimes | Safety Events | Last OCD1 Event | U2   | 0   | 32767 | 0       | cycles |

**Description:** Last *SafetyStatus()[OCD1]* event in *CycleCount()* cycles

### 20.6.19.7 No Of OCD2 Events

| Class     | Subclass      | Name              | Type | Min | Max   | Default | Unit   |
|-----------|---------------|-------------------|------|-----|-------|---------|--------|
| Lifetimes | Safety Events | No Of OCD2 Events | U2   | 0   | 32767 | 0       | events |

**Description:** Total number of *SafetyStatus()[OCD2]* events

### 20.6.19.8 Last OCD2 Event

| Class     | Subclass      | Name            | Type | Min | Max   | Default | Unit   |
|-----------|---------------|-----------------|------|-----|-------|---------|--------|
| Lifetimes | Safety Events | Last OCD2 Event | U2   | 0   | 32767 | 0       | cycles |

**Description:** Last *SafetyStatus()[OCD2]* event in *CycleCount()* cycles

### 20.6.19.9 No Of OCC1 Events

| Class     | Subclass      | Name              | Type | Min | Max   | Default | Unit   |
|-----------|---------------|-------------------|------|-----|-------|---------|--------|
| Lifetimes | Safety Events | No Of OCC1 Events | U2   | 0   | 32767 | 0       | events |

**Description:** Total number of *SafetyStatus()[OCC1]* events

#### 20.6.19.10 Last OCC1 Event

| Class     | Subclass      | Name            | Type | Min | Max   | Default | Unit   |
|-----------|---------------|-----------------|------|-----|-------|---------|--------|
| Lifetimes | Safety Events | Last OCC1 Event | U2   | 0   | 32767 | 0       | cycles |

**Description:** Last *SafetyStatus()[OCC1]* event in *CycleCount()* cycles

#### 20.6.19.11 No Of OCC2 Events

| Class     | Subclass      | Name              | Type | Min | Max   | Default | Unit   |
|-----------|---------------|-------------------|------|-----|-------|---------|--------|
| Lifetimes | Safety Events | No Of OCC2 Events | U2   | 0   | 32767 | 0       | events |

**Description:** Total number of *SafetyStatus()[OCC2]* events

#### 20.6.19.12 Last OCC2 Event

| Class     | Subclass      | Name            | Type | Min | Max   | Default | Unit   |
|-----------|---------------|-----------------|------|-----|-------|---------|--------|
| Lifetimes | Safety Events | Last OCC2 Event | U2   | 0   | 32767 | 0       | cycles |

**Description:** Last *SafetyStatus()[OCC2]* event in *CycleCount()* cycles

#### 20.6.19.13 No Of AOCD Events

| Class     | Subclass      | Name              | Type | Min | Max   | Default | Unit   |
|-----------|---------------|-------------------|------|-----|-------|---------|--------|
| Lifetimes | Safety Events | No Of AOCD Events | U2   | 0   | 32767 | 0       | events |

**Description:** Total number of *SafetyStatus()[AOCD]* events

#### 20.6.19.14 Last AOCD Event

| Class     | Subclass      | Name            | Type | Min | Max   | Default | Unit   |
|-----------|---------------|-----------------|------|-----|-------|---------|--------|
| Lifetimes | Safety Events | Last AOCD Event | U2   | 0   | 32767 | 0       | cycles |

**Description:** Last *SafetyStatus()[AOCD]* event in *CycleCount()* cycles

#### 20.6.19.15 No Of ASCD Events

| Class     | Subclass      | Name              | Type | Min | Max   | Default | Unit   |
|-----------|---------------|-------------------|------|-----|-------|---------|--------|
| Lifetimes | Safety Events | No Of ASCD Events | U2   | 0   | 32767 | 0       | events |

**Description:** Total number of *SafetyStatus()[ASCD]* events

#### 20.6.19.16 Last ASCD Event

| Class     | Subclass      | Name            | Type | Min | Max   | Default | Unit   |
|-----------|---------------|-----------------|------|-----|-------|---------|--------|
| Lifetimes | Safety Events | Last ASCD Event | U2   | 0   | 32767 | 0       | cycles |

**Description:** Last *SafetyStatus()[ASCD]* event in *CycleCount()* cycles

#### 20.6.19.17 No Of AOCC Events

| Class     | Subclass      | Name              | Type | Min | Max   | Default | Unit   |
|-----------|---------------|-------------------|------|-----|-------|---------|--------|
| Lifetimes | Safety Events | No Of AOCC Events | U2   | 0   | 32767 | 0       | events |

**Description:** Total number of *SafetyStatus()[AOCC]* events

#### 20.6.19.18 Last AOCC Event

| Class     | Subclass      | Name            | Type | Min | Max   | Default | Unit   |
|-----------|---------------|-----------------|------|-----|-------|---------|--------|
| Lifetimes | Safety Events | Last AOCC Event | U2   | 0   | 32767 | 0       | cycles |

**Description:** Last *SafetyStatus()*[AOCC] event in *CycleCount()* cycles

#### 20.6.19.19 No Of OTC Events

| Class     | Subclass      | Name             | Type | Min | Max   | Default | Unit   |
|-----------|---------------|------------------|------|-----|-------|---------|--------|
| Lifetimes | Safety Events | No Of OTC Events | U2   | 0   | 32767 | 0       | events |

**Description:** Total number of *SafetyStatus()*[OTC] events

#### 20.6.19.20 Last OTC Event

| Class     | Subclass      | Name           | Type | Min | Max   | Default | Unit   |
|-----------|---------------|----------------|------|-----|-------|---------|--------|
| Lifetimes | Safety Events | Last OTC Event | U2   | 0   | 32767 | 0       | cycles |

**Description:** Last *SafetyStatus()*[OTC] event in *CycleCount()* cycles

#### 20.6.19.21 No Of OTD Events

| Class     | Subclass      | Name             | Type | Min | Max   | Default | Unit   |
|-----------|---------------|------------------|------|-----|-------|---------|--------|
| Lifetimes | Safety Events | No Of OTD Events | U2   | 0   | 32767 | 0       | events |

**Description:** Total number of *SafetyStatus()*[OTD] events

#### 20.6.19.22 Last OTD Event

| Class     | Subclass      | Name           | Type | Min | Max   | Default | Unit   |
|-----------|---------------|----------------|------|-----|-------|---------|--------|
| Lifetimes | Safety Events | Last OTD Event | U2   | 0   | 32767 | 0       | cycles |

**Description:** Last *SafetyStatus()*[OTD] event in *CycleCount()* cycles

#### 20.6.19.23 No Of OTF Events

| Class     | Subclass      | Name             | Type | Min | Max   | Default | Unit   |
|-----------|---------------|------------------|------|-----|-------|---------|--------|
| Lifetimes | Safety Events | No Of OTF Events | U2   | 0   | 32767 | 0       | events |

**Description:** Total number of *SafetyStatus()*[OTF] events

#### 20.6.19.24 Last OTF Event

| Class     | Subclass      | Name           | Type | Min | Max   | Default | Unit   |
|-----------|---------------|----------------|------|-----|-------|---------|--------|
| Lifetimes | Safety Events | Last OTF Event | U2   | 0   | 32767 | 0       | cycles |

**Description:** Last *SafetyStatus()*[OTF] event in *CycleCount()* cycles

### 20.6.20 Charging Events

#### 20.6.20.1 No Valid Charge Term

| Class     | Subclass        | Name                 | Type | Min | Max   | Default | Unit   |
|-----------|-----------------|----------------------|------|-----|-------|---------|--------|
| Lifetimes | Charging Events | No Valid Charge Term | U2   | 0   | 32767 | 0       | events |

**Description:** Total number of valid charge termination events

#### 20.6.20.2 Last Valid Charge Term

| Class     | Subclass        | Name                   | Type | Min | Max   | Default | Unit   |
|-----------|-----------------|------------------------|------|-----|-------|---------|--------|
| Lifetimes | Charging Events | Last Valid Charge Term | U2   | 0   | 32767 | 0       | cycles |

**Description:** Last valid charge termination in *CycleCount()* cycles

## 20.6.21 Gauging Events

### 20.6.21.1 No Of Qmax Updates

| Class     | Subclass       | Name               | Type | Min | Max   | Default | Unit   |
|-----------|----------------|--------------------|------|-----|-------|---------|--------|
| Lifetimes | Gauging Events | No Of Qmax Updates | U2   | 0   | 32767 | 0       | events |

**Description:** Total number of *GaugingStatus()*[QMax] toggles

### 20.6.21.2 Last Qmax Update

| Class     | Subclass       | Name             | Type | Min | Max   | Default | Unit   |
|-----------|----------------|------------------|------|-----|-------|---------|--------|
| Lifetimes | Gauging Events | Last Qmax Update | U2   | 0   | 32767 | 0       | cycles |

**Description:** The *CycleCount()* cycles made at the last event of *GaugingStatus()*[QMax] update

### 20.6.21.3 No Of Ra Updates

| Class     | Subclass       | Name             | Type | Min | Max   | Default | Unit   |
|-----------|----------------|------------------|------|-----|-------|---------|--------|
| Lifetimes | Gauging Events | No Of Ra Updates | U2   | 0   | 32767 | 0       | events |

**Description:** Total number of *GaugingStatus()*[RX] toggles

### 20.6.21.4 Last Ra Update

| Class     | Subclass       | Name           | Type | Min | Max   | Default | Unit   |
|-----------|----------------|----------------|------|-----|-------|---------|--------|
| Lifetimes | Gauging Events | Last Ra Update | U2   | 0   | 32767 | 0       | cycles |

**Description:** Last *GaugingStatus()*[RX] toggle in *CycleCount()* cycles

### 20.6.21.5 No Of Ra Disable

| Class     | Subclass       | Name             | Type | Min | Max   | Default | Unit   |
|-----------|----------------|------------------|------|-----|-------|---------|--------|
| Lifetimes | Gauging Events | No Of Ra Disable | U2   | 0   | 32767 | 0       | events |

**Description:** Total number of *GaugingStatus()*[R\_DIS] = 1 event

### 20.6.21.6 Last Ra Disable

| Class     | Subclass       | Name            | Type | Min | Max   | Default | Unit   |
|-----------|----------------|-----------------|------|-----|-------|---------|--------|
| Lifetimes | Gauging Events | Last Ra Disable | U2   | 0   | 32767 | 0       | cycles |

**Description:** The *CycleCount()* cycles of the last update event of *GaugingStatus()*[R\_DIS] = 1

## 20.6.22 Time

### 20.6.22.1 Total Firmware Runtime

| Class     | Subclass | Name                   | Type | Min | Max        | Default | Unit |
|-----------|----------|------------------------|------|-----|------------|---------|------|
| Lifetimes | Time     | Total Firmware Runtime | U4   | 0   | 4294967295 | 0       | s    |

**Description:** Total firmware runtime between resets

### 20.6.22.2 Time Spent in LFT\_UUT

| Class     | Subclass | Name                         | Type | Min | Max        | Default | Unit |
|-----------|----------|------------------------------|------|-----|------------|---------|------|
| Lifetimes | Time     | Time Spent in LFT_UUT RSOC A | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_UUT RSOC B | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_UUT RSOC C | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_UUT RSOC D | U4   | 0   | 4294967295 | 0       | s    |

| Class     | Subclass | Name                            | Type | Min | Max        | Default | Unit |
|-----------|----------|---------------------------------|------|-----|------------|---------|------|
| Lifetimes | Time     | Time Spent in LFT_UUT<br>RSOC E | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_UUT<br>RSOC F | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_UUT<br>RSOC G | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_UUT<br>RSOC H | U4   | 0   | 4294967295 | 0       | s    |

**Description:** Firmware runtime spent below LFT\_T0 broken up according to running RSOC:

The RSOC A slot defines the range greater than or equal to **Time RSOC Threshold A**.

RSOC B is the range greater than or equal to **Time RSOC Threshold B** and less than **Time RSOC Threshold A**.

RSOC C is the range greater than or equal to **Time RSOC Threshold C** and less than **Time RSOC Threshold B**.

RSOC D is the range greater than or equal to **Time RSOC Threshold D** and less than **Time RSOC Threshold C**.

RSOC E is the range greater than or equal to **Time RSOC Threshold E** and less than **Time RSOC Threshold D**.

RSOC F is the range greater than or equal to **Time RSOC Threshold F** and less than **Time RSOC Threshold E**.

RSOC G is the range greater than or equal to **Time RSOC Threshold G** and less than **Time RSOC Threshold F**.

RSOC H is the range less than **Time RSOC Threshold G**.

#### 20.6.22.3 Time Spent in LFT\_UT

| Class     | Subclass | Name                           | Type | Min | Max        | Default | Unit |
|-----------|----------|--------------------------------|------|-----|------------|---------|------|
| Lifetimes | Time     | Time Spent in LFT_UT<br>RSOC A | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_UT<br>RSOC B | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_UT<br>RSOC C | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_UT<br>RSOC D | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_UT<br>RSOC E | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_UT<br>RSOC F | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_UT<br>RSOC G | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_UT<br>RSOC H | U4   | 0   | 4294967295 | 0       | s    |

**Description:** Firmware runtime spent between LFT\_T0 and LFT\_T1 broken up according to running RSOC:

The RSOC A slot defines the range greater than or equal to **Time RSOC Threshold A**.

RSOC B is the range greater than or equal to **Time RSOC Threshold B** and less than **Time RSOC Threshold A**.

RSOC C is the range greater than or equal to **Time RSOC Threshold C** and less than **Time RSOC Threshold B**.

RSOC D is the range greater than or equal to **Time RSOC Threshold D** and less than **Time RSOC Threshold C**.

RSOC E is the range greater than or equal to **Time RSOC Threshold E** and less than **Time RSOC Threshold D**.

RSOC F is the range greater than or equal to **Time RSOC Threshold F** and less than **Time RSOC Threshold E**.

RSOC G is the range greater than or equal to **Time RSOC Threshold G** and less than **Time RSOC Threshold F**.

RSOC H is the range less than **Time RSOC Threshold G**.

#### 20.6.22.4 Time Spent in LFT\_LT

| Class     | Subclass | Name                        | Type | Min | Max        | Default | Unit |
|-----------|----------|-----------------------------|------|-----|------------|---------|------|
| Lifetimes | Time     | Time Spent in LFT_LT RSOC A | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_LT RSOC B | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_LT RSOC C | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_LT RSOC D | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_LT RSOC E | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_LT RSOC F | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_LT RSOC G | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_LT RSOC H | U4   | 0   | 4294967295 | 0       | s    |

**Description:** Total firmware runtime spent between LFT\_T1 and LFT\_T2 broken up according to running RSOC: The RSOC A slot defines the range greater than or equal to **Time RSOC Threshold A**.

RSOC B is the range greater than or equal to **Time RSOC Threshold B** and less than **Time RSOC Threshold A**.

RSOC C is the range greater than or equal to **Time RSOC Threshold C** and less than **Time RSOC Threshold B**.

RSOC D is the range greater than or equal to **Time RSOC Threshold D** and less than **Time RSOC Threshold C**.

RSOC E is the range greater than or equal to **Time RSOC Threshold E** and less than **Time RSOC Threshold D**.

RSOC F is the range greater than or equal to **Time RSOC Threshold F** and less than **Time RSOC Threshold E**.

RSOC G is the range greater than or equal to **Time RSOC Threshold G** and less than **Time RSOC Threshold F**.

RSOC H is the range less than **Time RSOC Threshold G**.

#### 20.6.22.5 Time Spent in LFT\_STL

| Class     | Subclass | Name                         | Type | Min | Max        | Default | Unit |
|-----------|----------|------------------------------|------|-----|------------|---------|------|
| Lifetimes | Time     | Time Spent in LFT_STL RSOC A | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_STL RSOC B | U4   | 0   | 4294967295 | 0       | s    |

| Class     | Subclass | Name                         | Type | Min | Max        | Default | Unit |
|-----------|----------|------------------------------|------|-----|------------|---------|------|
| Lifetimes | Time     | Time Spent in LFT_STL RSOC C | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_STL RSOC D | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_STL RSOC E | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_STL RSOC F | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_STL RSOC G | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_STL RSOC H | U4   | 0   | 4294967295 | 0       | s    |

**Description:** Total firmware runtime spent between LFT\_T2 and LFT\_T5 broken up according to running RSOC: The RSOC A slot defines the range greater than or equal to **Time RSOC Threshold A**.

RSOC B is the range greater than or equal to **Time RSOC Threshold B** and less than **Time RSOC Threshold A**.

RSOC C is the range greater than or equal to **Time RSOC Threshold C** and less than **Time RSOC Threshold B**.

RSOC D is the range greater than or equal to **Time RSOC Threshold D** and less than **Time RSOC Threshold C**.

RSOC E is the range greater than or equal to **Time RSOC Threshold E** and less than **Time RSOC Threshold D**.

RSOC F is the range greater than or equal to **Time RSOC Threshold F** and less than **Time RSOC Threshold E**.

RSOC G is the range greater than or equal to **Time RSOC Threshold G** and less than **Time RSOC Threshold F**.

RSOC H is the range less than **Time RSOC Threshold G**.

#### 20.6.22.6 Time Spent in LFT\_RT

| Class     | Subclass | Name                        | Type | Min | Max        | Default | Unit |
|-----------|----------|-----------------------------|------|-----|------------|---------|------|
| Lifetimes | Time     | Time Spent in LFT_RT RSOC A | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_RT RSOC B | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_RT RSOC C | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_RT RSOC D | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_RT RSOC E | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_RT RSOC F | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_RT RSOC G | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_RT RSOC H | U4   | 0   | 4294967295 | 0       | s    |

**Description:** Total firmware runtime spent between LFT\_T5 and LFT\_T6 broken up according to running RSOC: The RSOC A slot defines the range greater than or equal to **Time RSOC Threshold A**.

RSOC B is the range greater than or equal to **Time RSOC Threshold B** and less than **Time RSOC Threshold A**.

RSOC C is the range greater than or equal to **Time RSOC Threshold C** and less than **Time RSOC Threshold B**.

RSOC D is the range greater than or equal to **Time RSOC Threshold D** and less than **Time RSOC Threshold C**.

RSOC E is the range greater than or equal to **Time RSOC Threshold E** and less than **Time RSOC Threshold D**.

RSOC F is the range greater than or equal to **Time RSOC Threshold F** and less than **Time RSOC Threshold E**.

RSOC G is the range greater than or equal to **Time RSOC Threshold G** and less than **Time RSOC Threshold F**.

RSOC H is the range less than **Time RSOC Threshold G**.

#### 20.6.22.7 Time Spent in LFT\_STH

| Class     | Subclass | Name                         | Type | Min | Max        | Default | Unit |
|-----------|----------|------------------------------|------|-----|------------|---------|------|
| Lifetimes | Time     | Time Spent in LFT_STH RSOC A | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_STH RSOC B | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_STH RSOC C | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_STH RSOC D | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in STH RSOC E     | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_STH RSOC F | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_STH RSOC G | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_STH RSOC H | U4   | 0   | 4294967295 | 0       | s    |

**Description:** Total firmware runtime spent between LFT\_T6 and LFT\_T3 broken up according to running RSOC:

The RSOC A slot defines the range greater than or equal to **Time RSOC Threshold A**.

RSOC B is the range greater than or equal to **Time RSOC Threshold B** and less than **Time RSOC Threshold A**.

RSOC C is the range greater than or equal to **Time RSOC Threshold C** and less than **Time RSOC Threshold B**.

RSOC D is the range greater than or equal to **Time RSOC Threshold D** and less than **Time RSOC Threshold C**.

RSOC E is the range greater than or equal to **Time RSOC Threshold E** and less than **Time RSOC Threshold D**.

RSOC F is the range greater than or equal to **Time RSOC Threshold F** and less than **Time RSOC Threshold E**.

RSOC G is the range greater than or equal to **Time RSOC Threshold G** and less than **Time RSOC Threshold F**.

RSOC H is the range less than **Time RSOC Threshold G**.

#### 20.6.22.8 Time Spent in LFT\_HT

| Class     | Subclass | Name                        | Type | Min | Max        | Default | Unit |
|-----------|----------|-----------------------------|------|-----|------------|---------|------|
| Lifetimes | Time     | Time Spent in LFT_HT RSOC A | U4   | 0   | 4294967295 | 0       | s    |

| Class     | Subclass | Name                           | Type | Min | Max        | Default | Unit |
|-----------|----------|--------------------------------|------|-----|------------|---------|------|
| Lifetimes | Time     | Time Spent in LFT_HT<br>RSOC B | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_HT<br>RSOC C | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_HT<br>RSOC D | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_HT<br>RSOC E | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_HT<br>RSOC F | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_HT<br>RSOC G | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_HT<br>RSOC H | U4   | 0   | 4294967295 | 0       | s    |

**Description:** Total firmware runtime spent between LFT\_T3 and LFT\_T4 broken up according to running RSOC:  
The RSOC A slot defines the range greater than or equal to **Time RSOC Threshold A** .

RSOC B is the range greater than or equal to **Time RSOC Threshold B** and less than **Time RSOC Threshold A** .

RSOC C is the range greater than or equal to **Time RSOC Threshold C** and less than **Time RSOC Threshold B** .

RSOC D is the range greater than or equal to **Time RSOC Threshold D** and less than **Time RSOC Threshold C** .

RSOC E is the range greater than or equal to **Time RSOC Threshold E** and less than **Time RSOC Threshold D** .

RSOC F is the range greater than or equal to **Time RSOC Threshold F** and less than **Time RSOC Threshold E** .

RSOC G is the range greater than or equal to **Time RSOC Threshold G** and less than **Time RSOC Threshold F** .

RSOC H is the range less than **Time RSOC Threshold G** .

#### 20.6.22.9 Time Spent in LFT\_OT

| Class     | Subclass | Name                           | Type | Min | Max        | Default | Unit |
|-----------|----------|--------------------------------|------|-----|------------|---------|------|
| Lifetimes | Time     | Time Spent in LFT_OT<br>RSOC A | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_OT<br>RSOC B | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_OT<br>RSOC C | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_OT<br>RSOC D | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_OT<br>RSOC E | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_OT<br>RSOC F | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_OT<br>RSOC G | U4   | 0   | 4294967295 | 0       | s    |
| Lifetimes | Time     | Time Spent in LFT_OT<br>RSOC H | U4   | 0   | 4294967295 | 0       | s    |

**Description:** Total firmware runtime spent above LFT\_T4 broken up according to running RSOC:

The RSOC A slot defines the range greater than or equal to **Time RSOC Threshold A** .

RSOC B is the range greater than or equal to **Time RSOC Threshold B** and less than **Time RSOC Threshold A**.

RSOC C is the range greater than or equal to **Time RSOC Threshold C** and less than **Time RSOC Threshold B**.

RSOC D is the range greater than or equal to **Time RSOC Threshold D** and less than **Time RSOC Threshold C**.

RSOC E is the range greater than or equal to **Time RSOC Threshold E** and less than **Time RSOC Threshold D**.

RSOC F is the range greater than or equal to **Time RSOC Threshold F** and less than **Time RSOC Threshold E**.

RSOC G is the range greater than or equal to **Time RSOC Threshold G** and less than **Time RSOC Threshold F**.

RSOC H is the range less than **Time RSOC Threshold G**.

## 20.7 Protections

### 20.7.1 CUV—Cell Undervoltage

#### 20.7.1.1 Threshold

| Class       | Subclass | Name      | Type | Min | Max   | Default | Unit |
|-------------|----------|-----------|------|-----|-------|---------|------|
| Protections | CUV      | Threshold | I2   | 0   | 32767 | 2500    | mV   |

**Description:** Cell undervoltage trip threshold

#### 20.7.1.2 Delay

| Class       | Subclass | Name  | Type | Min | Max | Default | Unit |
|-------------|----------|-------|------|-----|-----|---------|------|
| Protections | CUV      | Delay | U1   | 0   | 255 | 2       | s    |

**Description:** Cell undervoltage trip delay

#### 20.7.1.3 Recovery

| Class       | Subclass | Name     | Type | Min | Max   | Default | Unit |
|-------------|----------|----------|------|-----|-------|---------|------|
| Protections | CUV      | Recovery | I2   | 0   | 32767 | 3000    | mV   |

**Description:** Cell undervoltage recovery threshold

#### 20.7.1.4 Recovery Charger Present Time

| Class       | Subclass | Name                          | Type | Min | Max | Default | Unit |
|-------------|----------|-------------------------------|------|-----|-----|---------|------|
| Protections | CUV      | Recovery Charger Present Time | U1   | 0   | 255 | 2       | s    |

**Description:** Time required for PACK voltage > **Charger Present Threshold** to recover from Cell undervoltage protection if **Protection Configuration[CUV\_RECOV\_CHG]** = 1.

### 20.7.2 CUVC—Cell Undervoltage

#### 20.7.2.1 Threshold

| Class       | Subclass | Name      | Type | Min | Max   | Default | Unit |
|-------------|----------|-----------|------|-----|-------|---------|------|
| Protections | CUVC     | Threshold | I2   | 0   | 32767 | 2400    | mV   |

**Description:** Cell undervoltage trip threshold

**20.7.2.2 Delay**

| Class       | Subclass | Name  | Type | Min | Max | Default | Unit |
|-------------|----------|-------|------|-----|-----|---------|------|
| Protections | CUVC     | Delay | U1   | 0   | 255 | 2       | s    |

**Description:** Cell undervoltage trip delay

**20.7.2.3 Recovery**

| Class       | Subclass | Name     | Type | Min | Max   | Default | Unit |
|-------------|----------|----------|------|-----|-------|---------|------|
| Protections | CUVC     | Recovery | I2   | 0   | 32767 | 3000    | mV   |

**Description:** Cell undervoltage recovery threshold

**20.7.3 ACUV—Cell Under Voltage hardware based****20.7.3.1 Recovery (ACUV)**

| Class       | Subclass | Name     | Type | Min | Max   | Default | Unit |
|-------------|----------|----------|------|-----|-------|---------|------|
| Protections | ACUV     | Recovery | I2   | 0   | 32767 | 3000    | mV   |

**Description:** **ACUV** recovery voltage threshold for AFE cell undervoltage hardware protection. The ACUV SafetyStatus flag clears immediately (no time delay) when the minimum cell voltage rises to or above this threshold. Upon recovery, the AFE hardware BATUV latch is also cleared.

**20.7.4 ACOV—Cell Over Voltage hardware based****20.7.4.1 Recovery (ACOV)**

| Class       | Subclass | Name     | Type | Min | Max   | Default | Unit |
|-------------|----------|----------|------|-----|-------|---------|------|
| Protections | ACOV     | Recovery | I2   | 0   | 32767 | 3900    | mV   |

**Description:** **ACOV** recovery voltage threshold for AFE cell overvoltage hardware protection. The ACOV SafetyStatus flag clears immediately (no time delay) when the maximum cell voltage falls to or below this threshold. Upon recovery, the AFE hardware BATOV latch is also cleared.

**20.7.5 COV—Cell Overvoltage****20.7.5.1 Threshold Low Temp**

| Class       | Subclass | Name               | Type | Min | Max   | Default | Unit |
|-------------|----------|--------------------|------|-----|-------|---------|------|
| Protections | COV      | Threshold Low Temp | I2   | 0   | 32767 | 4300    | mV   |

**Description:** Cell overvoltage low temperature range trip threshold

**20.7.5.2 Threshold Standard Temp Low**

| Class       | Subclass | Name                        | Type | Min | Max   | Default | Unit |
|-------------|----------|-----------------------------|------|-----|-------|---------|------|
| Protections | COV      | Threshold Standard Temp Low | I2   | 0   | 32767 | 4300    | mV   |

**Description:** Cell overvoltage standard temperature low range trip threshold

**20.7.5.3 Threshold Standard Temp High**

| Class       | Subclass | Name                         | Type | Min | Max   | Default | Unit |
|-------------|----------|------------------------------|------|-----|-------|---------|------|
| Protections | COV      | Threshold Standard Temp High | I2   | 0   | 32767 | 4300    | mV   |

**Description:** Cell overvoltage standard temperature high range trip threshold

#### 20.7.5.4 Threshold High Temp

| Class       | Subclass | Name                | Type | Min | Max   | Default | Unit |
|-------------|----------|---------------------|------|-----|-------|---------|------|
| Protections | COV      | Threshold High Temp | I2   | 0   | 32767 | 4300    | mV   |

**Description:** Cell overvoltage high temperature range trip threshold

#### 20.7.5.5 Threshold Rec Temp

| Class       | Subclass | Name               | Type | Min | Max   | Default | Unit |
|-------------|----------|--------------------|------|-----|-------|---------|------|
| Protections | COV      | Threshold Rec Temp | I2   | 0   | 32767 | 4300    | mV   |

**Description:** Cell overvoltage recommended temperature range trip threshold

#### 20.7.5.6 Delay

| Class       | Subclass | Name  | Type | Min | Max | Default | Unit |
|-------------|----------|-------|------|-----|-----|---------|------|
| Protections | COV      | Delay | U1   | 0   | 255 | 2       | s    |

**Description:** Cell overvoltage trip delay

#### 20.7.5.7 Recovery Low Temp

| Class       | Subclass | Name              | Type | Min | Max   | Default | Unit |
|-------------|----------|-------------------|------|-----|-------|---------|------|
| Protections | COV      | Recovery Low Temp | I2   | 0   | 32767 | 3900    | mV   |

**Description:** Cell overvoltage low temperature range recovery threshold

#### 20.7.5.8 Recovery Standard Temp Low

| Class       | Subclass | Name                       | Type | Min | Max   | Default | Unit |
|-------------|----------|----------------------------|------|-----|-------|---------|------|
| Protections | COV      | Recovery Standard Temp Low | I2   | 0   | 32767 | 3900    | mV   |

**Description:** Cell overvoltage standard temperature low recovery range threshold

#### 20.7.5.9 Recovery Standard Temp High

| Class       | Subclass | Name                        | Type | Min | Max   | Default | Unit |
|-------------|----------|-----------------------------|------|-----|-------|---------|------|
| Protections | COV      | Recovery Standard Temp High | I2   | 0   | 32767 | 3900    | mV   |

**Description:** Cell overvoltage standard temperature high recovery range threshold

#### 20.7.5.10 Recovery High Temp

| Class       | Subclass | Name               | Type | Min | Max   | Default | Unit |
|-------------|----------|--------------------|------|-----|-------|---------|------|
| Protections | COV      | Recovery High Temp | I2   | 0   | 32767 | 3900    | mV   |

**Description:** Cell overvoltage high temperature range recovery threshold

#### 20.7.5.11 Recovery Rec Temp

| Class       | Subclass | Name              | Type | Min | Max   | Default | Unit |
|-------------|----------|-------------------|------|-----|-------|---------|------|
| Protections | COV      | Recovery Rec Temp | I2   | 0   | 32767 | 3900    | mV   |

**Description:** Cell overvoltage recommended temperature range recovery threshold

#### 20.7.5.12 Cell Overvoltage Latch Limit

| Class       | Subclass | Name        | Type | Min | Max | Default | Unit   |
|-------------|----------|-------------|------|-----|-----|---------|--------|
| Protections | COV      | Latch Limit | I2   | 0   | 255 | 0       | counts |

**Description:** Cell overvoltage latch counter trip threshold

#### 20.7.5.13 Cell Overvoltage Counter Decrement Delay

| Class       | Subclass | Name              | Type | Min | Max | Default | Unit |
|-------------|----------|-------------------|------|-----|-----|---------|------|
| Protections | COV      | Counter Dec Delay | I2   | 0   | 255 | 10      | s    |

**Description:** Cell overvoltage counter decrement delay

#### 20.7.5.14 Reset

| Class       | Subclass | Name  | Type | Min | Max | Default | Unit |
|-------------|----------|-------|------|-----|-----|---------|------|
| Protections | COV      | Reset | I2   | 0   | 255 | 15      | s    |

**Description:** Cell overvoltage latch reset time

### 20.7.6 OCC1—Overcurrent In Charge 1

#### 20.7.6.1 Threshold

| Class       | Subclass | Name      | Type | Min    | Max   | Default | Unit |
|-------------|----------|-----------|------|--------|-------|---------|------|
| Protections | OCC1     | Threshold | I2   | –32768 | 32767 | 6000    | mA   |

**Description:** Overcurrent in Charge 1 trip threshold

#### 20.7.6.2 Delay

| Class       | Subclass | Name  | Type | Min | Max | Default | Unit |
|-------------|----------|-------|------|-----|-----|---------|------|
| Protections | OCC1     | Delay | U1   | 0   | 255 | 6       | s    |

**Description:** Overcurrent in Charge 1 trip delay

### 20.7.7 OCC2—Overcurrent In Charge 2

#### 20.7.7.1 Threshold

| Class       | Subclass | Name      | Type | Min    | Max   | Default | Unit |
|-------------|----------|-----------|------|--------|-------|---------|------|
| Protections | OCC2     | Threshold | I2   | –32768 | 32767 | 8000    | mA   |

**Description:** Overcurrent in Charge 2 trip threshold

#### 20.7.7.2 Delay

| Class       | Subclass | Name  | Type | Min | Max | Default | Unit |
|-------------|----------|-------|------|-----|-----|---------|------|
| Protections | OCC2     | Delay | U1   | 0   | 255 | 3       | s    |

**Description:** Overcurrent in Charge 2 trip delay

### 20.7.8 OCC—Overcurrent In Charge Recovery

#### 20.7.8.1 Recovery Threshold

| Class       | Subclass | Name               | Type | Min    | Max   | Default | Unit |
|-------------|----------|--------------------|------|--------|-------|---------|------|
| Protections | OCC      | Recovery Threshold | I2   | –32768 | 32767 | –200    | mA   |

**Description:** Overcurrent in Charge 1 and 2 recovery threshold

#### 20.7.8.2 Recovery Delay

| Class       | Subclass | Name           | Type | Min | Max | Default | Unit |
|-------------|----------|----------------|------|-----|-----|---------|------|
| Protections | OCC      | Recovery Delay | U1   | 0   | 255 | 5       | s    |

**Description:** Overcurrent in Charge 1 and 2 recovery delay

## 20.7.9 OCD1—Overcurrent In Discharge 1

### 20.7.9.1 Threshold

| Class       | Subclass | Name      | Type | Min    | Max   | Default | Unit |
|-------------|----------|-----------|------|--------|-------|---------|------|
| Protections | OCD1     | Threshold | I2   | –32768 | 32767 | –6000   | mA   |

**Description:** Overcurrent in Discharge 1 trip threshold

### 20.7.9.2 Delay

| Class       | Subclass | Name  | Type | Min | Max | Default | Unit |
|-------------|----------|-------|------|-----|-----|---------|------|
| Protections | OCD1     | Delay | U1   | 0   | 255 | 6       | s    |

**Description:** Overcurrent in Discharge 1 trip delay

## 20.7.10 OCD2—Overcurrent In Discharge 2

### 20.7.10.1 Threshold

| Class       | Subclass | Name      | Type | Min    | Max   | Default | Unit |
|-------------|----------|-----------|------|--------|-------|---------|------|
| Protections | OCD2     | Threshold | I2   | –32768 | 32767 | –8000   | mA   |

**Description:** Overcurrent in Discharge 2 trip threshold

### 20.7.10.2 Delay

| Class       | Subclass | Name  | Type | Min | Max | Default | Unit |
|-------------|----------|-------|------|-----|-----|---------|------|
| Protections | OCD2     | Delay | U1   | 0   | 255 | 3       | s    |

**Description:** Overcurrent in Discharge 2 trip delay

## 20.7.11 OCD—Overcurrent In Discharge Recovery

### 20.7.11.1 Recovery Threshold

| Class       | Subclass | Name               | Type | Min    | Max   | Default | Unit |
|-------------|----------|--------------------|------|--------|-------|---------|------|
| Protections | OCD      | Recovery Threshold | I2   | –32768 | 32767 | 200     | mA   |

**Description:** Overcurrent in Discharge 1 and 2 recovery threshold

### 20.7.11.2 Recovery Delay

| Class       | Subclass | Name           | Type | Min | Max | Default | Unit |
|-------------|----------|----------------|------|-----|-----|---------|------|
| Protections | OCD      | Recovery Delay | U1   | 0   | 255 | 5       | s    |

**Description:** Overcurrent in Discharge 1 and 2 recovery delay

### 20.7.11.3 Latch Limit

| Class       | Subclass | Name        | Type | Min | Max | Default | Unit   |
|-------------|----------|-------------|------|-----|-----|---------|--------|
| Protections | OCD      | Latch Limit | U1   | 0   | 255 | 0       | counts |

**Description:** Overcurrent in Discharge (OCD) latch counter trip threshold

### 20.7.11.4 Counter Dec Delay

| Class       | Subclass | Name              | Type | Min | Max | Default | Unit |
|-------------|----------|-------------------|------|-----|-----|---------|------|
| Protections | OCD      | Counter Dec Delay | U1   | 0   | 255 | 10      | s    |

**Description:** Overcurrent in Discharge (OCD) counter decrement delay

### 20.7.11.5 Reset

| Class       | Subclass | Name  | Type | Min | Max | Default | Unit |
|-------------|----------|-------|------|-----|-----|---------|------|
| Protections | OCD      | Reset | U1   | 0   | 255 | 15      | s    |

**Description:** Overcurrent in Discharge (OCD) latch reset time

### 20.7.12 AOCD—Overload in Discharge

#### 20.7.12.1 Latch Limit

| Class       | Subclass | Name        | Type | Min | Max | Default | Unit   |
|-------------|----------|-------------|------|-----|-----|---------|--------|
| Protections | AOCD     | Latch Limit | U1   | 0   | 255 | 0       | counts |

**Description:** Overload latch counter trip threshold

#### 20.7.12.2 Counter Dec Delay

| Class       | Subclass | Name              | Type | Min | Max | Default | Unit |
|-------------|----------|-------------------|------|-----|-----|---------|------|
| Protections | AOCD     | Counter Dec Delay | U1   | 0   | 255 | 10      | s    |

**Description:** Overload latch counter decrement delay

#### 20.7.12.3 Recovery

| Class       | Subclass | Name     | Type | Min | Max | Default | Unit |
|-------------|----------|----------|------|-----|-----|---------|------|
| Protections | AOCD     | Recovery | U1   | 0   | 255 | 5       | s    |

**Description:** Overload recovery time

#### 20.7.12.4 Reset

| Class       | Subclass | Name  | Type | Min | Max | Default | Unit |
|-------------|----------|-------|------|-----|-----|---------|------|
| Protections | AOCD     | Reset | U1   | 0   | 255 | 15      | s    |

**Description:** Overload latch reset time

### 20.7.13 AOCC—Overcurrent In Charge

#### 20.7.13.1 Latch Limit

| Class       | Subclass | Name        | Type | Min | Max | Default | Unit   |
|-------------|----------|-------------|------|-----|-----|---------|--------|
| Protections | AOCC     | Latch Limit | U1   | 0   | 255 | 0       | counts |

**Description:** Short Circuit in Charge Latch counter trip threshold

#### 20.7.13.2 Counter Dec Delay

| Class       | Subclass | Name              | Type | Min | Max | Default | Unit |
|-------------|----------|-------------------|------|-----|-----|---------|------|
| Protections | AOCC     | Counter Dec Delay | U1   | 0   | 255 | 10      | s    |

**Description:** Short Circuit in Charge counter decrement delay

#### 20.7.13.3 Recovery

| Class       | Subclass | Name     | Type | Min | Max | Default | Unit |
|-------------|----------|----------|------|-----|-----|---------|------|
| Protections | AOCC     | Recovery | U1   | 0   | 255 | 5       | s    |

**Description:** Short Circuit in Charge recovery time

#### 20.7.13.4 Reset

| Class       | Subclass | Name  | Type | Min | Max | Default | Unit |
|-------------|----------|-------|------|-----|-----|---------|------|
| Protections | AOCC     | Reset | U1   | 0   | 255 | 15      | s    |

**Description:** Short Circuit in Charge latch reset time

#### 20.7.14 ASCD—Short Circuit in Discharge

##### 20.7.14.1 Latch Limit

| Class       | Subclass | Name        | Type | Min | Max | Default | Unit   |
|-------------|----------|-------------|------|-----|-----|---------|--------|
| Protections | ASCD     | Latch Limit | U1   | 0   | 255 | 0       | counts |

**Description:** Short Circuit in Discharge Latch counter trip threshold

##### 20.7.14.2 Counter Dec Delay

| Class       | Subclass | Name              | Type | Min | Max | Default | Unit |
|-------------|----------|-------------------|------|-----|-----|---------|------|
| Protections | ASCD     | Counter Dec Delay | U1   | 0   | 255 | 10      | s    |

**Description:** Short Circuit in Discharge counter decrement delay

##### 20.7.14.3 Recovery

| Class       | Subclass | Name     | Type | Min | Max | Default | Unit |
|-------------|----------|----------|------|-----|-----|---------|------|
| Protections | ASCD     | Recovery | U1   | 0   | 255 | 5       | s    |

**Description:** Short Circuit in Discharge recovery time

##### 20.7.14.4 Reset

| Class       | Subclass | Name  | Type | Min | Max | Default | Unit |
|-------------|----------|-------|------|-----|-----|---------|------|
| Protections | ASCD     | Reset | U1   | 0   | 255 | 15      | s    |

**Description:** Short Circuit in Discharge latch reset time

#### 20.7.15 OTC—Overtemperature in Charge

##### 20.7.15.1 Threshold

| Class       | Subclass | Name      | Type | Min  | Max  | Default | Unit  |
|-------------|----------|-----------|------|------|------|---------|-------|
| Protections | OTC      | Threshold | I2   | −400 | 1500 | 550     | 0.1°C |

**Description:** Overtemperature in Charge trip threshold

##### 20.7.15.2 Delay

| Class       | Subclass | Name  | Type | Min | Max | Default | Unit |
|-------------|----------|-------|------|-----|-----|---------|------|
| Protections | OTC      | Delay | U1   | 0   | 255 | 2       | s    |

**Description:** Overtemperature in Charge Cell trip delay

##### 20.7.15.3 Recovery

| Class       | Subclass | Name     | Type | Min  | Max  | Default | Unit  |
|-------------|----------|----------|------|------|------|---------|-------|
| Protections | OTC      | Recovery | I2   | −400 | 1500 | 500     | 0.1°C |

**Description:** Overtemperature in Charge Cell recovery threshold

## 20.7.16 OTD—Overtemperature in Discharge

### 20.7.16.1 Threshold

| Class       | Subclass | Name      | Type | Min  | Max  | Default | Unit  |
|-------------|----------|-----------|------|------|------|---------|-------|
| Protections | OTD      | Threshold | I2   | –400 | 1500 | 600     | 0.1°C |

**Description:** Overtemperature in Discharge trip threshold

### 20.7.16.2 Delay

| Class       | Subclass | Name  | Type | Min | Max | Default | Unit |
|-------------|----------|-------|------|-----|-----|---------|------|
| Protections | OTD      | Delay | U1   | 0   | 255 | 2       | s    |

**Description:** Overtemperature in Discharge trip delay

### 20.7.16.3 Recovery

| Class       | Subclass | Name     | Type | Min  | Max  | Default | Unit  |
|-------------|----------|----------|------|------|------|---------|-------|
| Protections | OTD      | Recovery | I2   | –400 | 1500 | 550     | 0.1°C |

**Description:** Overtemperature in Discharge recovery threshold

## 20.7.17 OTF—Overtemperature FET

### 20.7.17.1 Threshold

| Class       | Subclass | Name      | Type | Min  | Max  | Default | Unit  |
|-------------|----------|-----------|------|------|------|---------|-------|
| Protections | OTF      | Threshold | I2   | –400 | 1500 | 800     | 0.1°C |

**Description:** Overtemperature FET trip threshold

### 20.7.17.2 Delay

| Class       | Subclass | Name  | Type | Min | Max | Default | Unit |
|-------------|----------|-------|------|-----|-----|---------|------|
| Protections | OTF      | Delay | U1   | 0   | 255 | 2       | s    |

**Description:** Overtemperature FET trip delay

### 20.7.17.3 Recovery

| Class       | Subclass | Name     | Type | Min  | Max  | Default | Unit  |
|-------------|----------|----------|------|------|------|---------|-------|
| Protections | OTF      | Recovery | I2   | –400 | 1500 | 650     | 0.1°C |

**Description:** Overtemperature FET recovery threshold

## 20.7.18 UTC—Undertemperature in Charge

### 20.7.18.1 Threshold

| Class       | Subclass | Name      | Type | Min  | Max  | Default | Unit  |
|-------------|----------|-----------|------|------|------|---------|-------|
| Protections | UTC      | Threshold | I2   | –400 | 1500 | 0       | 0.1°C |

**Description:** Undertemperature in Charge trip threshold

### 20.7.18.2 Delay

| Class       | Subclass | Name  | Type | Min | Max | Default | Unit |
|-------------|----------|-------|------|-----|-----|---------|------|
| Protections | UTC      | Delay | U1   | 0   | 255 | 2       | s    |

**Description:** Undertemperature in Charge Cell trip delay

### 20.7.18.3 Recovery

| Class       | Subclass | Name     | Type | Min  | Max  | Default | Unit  |
|-------------|----------|----------|------|------|------|---------|-------|
| Protections | UTC      | Recovery | I2   | –400 | 1500 | 50      | 0.1°C |

**Description:** Undertemperature in Charge Cell recovery threshold

### 20.7.19 UTD—Undertemperature in Discharge

#### 20.7.19.1 Threshold

| Class       | Subclass | Name      | Type | Min  | Max  | Default | Unit  |
|-------------|----------|-----------|------|------|------|---------|-------|
| Protections | UTD      | Threshold | I2   | –400 | 1500 | 0       | 0.1°C |

**Description:** Undertemperature in Discharge trip threshold

#### 20.7.19.2 Delay

| Class       | Subclass | Name  | Type | Min | Max | Default | Unit |
|-------------|----------|-------|------|-----|-----|---------|------|
| Protections | UTD      | Delay | U1   | 0   | 255 | 2       | s    |

**Description:** Undertemperature in Discharge trip delay

#### 20.7.19.3 Recovery

| Class       | Subclass | Name     | Type | Min  | Max  | Default | Unit  |
|-------------|----------|----------|------|------|------|---------|-------|
| Protections | UTD      | Recovery | I2   | –400 | 1500 | 50      | 0.1°C |

**Description:** Undertemperature in Discharge recovery threshold

### 20.7.20 HWD—Host Watchdog

| Class       | Subclass | Name  | Type | Min | Max | Default | Unit |
|-------------|----------|-------|------|-----|-----|---------|------|
| Protections | HWD      | Delay | U1   | 0   | 255 | 10      | s    |

**Description:** SBS Host watchdog trip delay

### 20.7.21 PTO—PRECHARGE Mode Time Out

#### 20.7.21.1 Charge Threshold

| Class       | Subclass | Name             | Type | Min    | Max   | Default | Unit |
|-------------|----------|------------------|------|--------|-------|---------|------|
| Protections | PTO      | Charge Threshold | I2   | –32768 | 32767 | 2000    | mA   |

**Description:** Precharge Timeout Current Threshold

#### 20.7.21.2 Suspend Threshold

| Class       | Subclass | Name              | Type | Min    | Max   | Default | Unit |
|-------------|----------|-------------------|------|--------|-------|---------|------|
| Protections | PTO      | Suspend Threshold | I2   | –32768 | 32767 | 1800    | mA   |

**Description:** Precharge Timeout Suspend Threshold

#### 20.7.21.3 Delay

| Class       | Subclass | Name  | Type | Min | Max   | Default | Unit |
|-------------|----------|-------|------|-----|-------|---------|------|
| Protections | PTO      | Delay | U2   | 0   | 65535 | 1800    | s    |

**Description:** Precharge Timeout Trip Delay

**20.7.21.4 Reset**

| Class       | Subclass | Name  | Type | Min | Max   | Default | Unit |
|-------------|----------|-------|------|-----|-------|---------|------|
| Protections | PTO      | Reset | I2   | 0   | 32767 | 2       | mAh  |

**Description:** Precharge Timeout Reset Threshold**20.7.22 CTO—Fast Charge Mode Time Out****20.7.22.1 Charge Threshold**

| Class       | Subclass | Name             | Type | Min    | Max   | Default | Unit |
|-------------|----------|------------------|------|--------|-------|---------|------|
| Protections | CTO      | Charge Threshold | I2   | –32768 | 32767 | 2500    | mA   |

**Description:** Fast-Charge Timeout Current Threshold**20.7.22.2 Suspend Threshold**

| Class       | Subclass | Name              | Type | Min    | Max   | Default | Unit |
|-------------|----------|-------------------|------|--------|-------|---------|------|
| Protections | CTO      | Suspend Threshold | I2   | –32768 | 32767 | 2000    | mA   |

**Description:** Fast-Charge Timeout Suspend Threshold**20.7.22.3 Delay**

| Class       | Subclass | Name  | Type | Min | Max   | Default | Unit |
|-------------|----------|-------|------|-----|-------|---------|------|
| Protections | CTO      | Delay | U2   | 0   | 65535 | 54000   | s    |

**Description:** Fast-Charge Timeout Trip Delay**20.7.22.4 Reset**

| Class       | Subclass | Name  | Type | Min | Max   | Default | Unit |
|-------------|----------|-------|------|-----|-------|---------|------|
| Protections | CTO      | Reset | I2   | 0   | 32767 | 2       | mAh  |

**Description:** Fast-Charge Timeout Reset Threshold**20.7.23 OC—Overcharge****20.7.23.1 Threshold**

| Class       | Subclass | Name      | Type | Min    | Max   | Default | Unit |
|-------------|----------|-----------|------|--------|-------|---------|------|
| Protections | OC       | Threshold | I2   | –32768 | 32767 | 300     | mAh  |

**Description:** Overcharge trip threshold**20.7.23.2 Recovery**

| Class       | Subclass | Name     | Type | Min    | Max   | Default | Unit |
|-------------|----------|----------|------|--------|-------|---------|------|
| Protections | OC       | Recovery | I2   | –32768 | 32767 | 2       | mAh  |

**Description:** Overcharge recovery threshold**20.7.23.3 RSOC Recovery**

| Class       | Subclass | Name          | Type | Min | Max | Default | Unit |
|-------------|----------|---------------|------|-----|-----|---------|------|
| Protections | OC       | RSOC Recovery | U1   | 0   | 100 | 90      | %    |

**Description:** Overcharge *RelativeStateOfCharge()* recovery threshold

## 20.7.24 CHGV—ChargingVoltage

### 20.7.24.1 Threshold

| Class       | Subclass | Name      | Type | Min    | Max   | Default | Unit |
|-------------|----------|-----------|------|--------|-------|---------|------|
| Protections | CHGV     | Threshold | I2   | –32768 | 32767 | 500     | mV   |

**Description:** *ChargingVoltage()* delta trip threshold

### 20.7.24.2 Delay

| Class       | Subclass | Name  | Type | Min | Max | Default | Unit |
|-------------|----------|-------|------|-----|-----|---------|------|
| Protections | CHGV     | Delay | U1   | 0   | 255 | 30      | s    |

**Description:** *ChargingVoltage()* delta trip delay

### 20.7.24.3 Recovery

| Class       | Subclass | Name     | Type | Min    | Max   | Default | Unit |
|-------------|----------|----------|------|--------|-------|---------|------|
| Protections | CHGV     | Recovery | I2   | –32768 | 32767 | –500    | mV   |

**Description:** *ChargingVoltage()* delta recovery threshold

## 20.7.25 CHGC—ChargingCurrent

### 20.7.25.1 Threshold

| Class       | Subclass | Name      | Type | Min    | Max   | Default | Unit |
|-------------|----------|-----------|------|--------|-------|---------|------|
| Protections | CHGC     | Threshold | I2   | –32768 | 32767 | 500     | mA   |

**Description:** *ChargingCurrent()* delta trip threshold

### 20.7.25.2 Delay

| Class       | Subclass | Name  | Type | Min | Max | Default | Unit |
|-------------|----------|-------|------|-----|-----|---------|------|
| Protections | CHGC     | Delay | U1   | 0   | 255 | 2       | s    |

**Description:** *ChargingCurrent()* delta trip delay

### 20.7.25.3 Recovery Threshold

| Class       | Subclass | Name               | Type | Min    | Max   | Default | Unit |
|-------------|----------|--------------------|------|--------|-------|---------|------|
| Protections | CHGC     | Recovery Threshold | I2   | –32768 | 32767 | 100     | mA   |

**Description:** *ChargingCurrent()* delta recovery threshold

### 20.7.25.4 Recovery Delay

| Class       | Subclass | Name           | Type | Min | Max | Default | Unit |
|-------------|----------|----------------|------|-----|-----|---------|------|
| Protections | CHGC     | Recovery Delay | U1   | 0   | 255 | 2       | s    |

**Description:** *ChargingCurrent()* delta recovery delay

## 20.7.26 PCHGC—Pre-ChargingCurrent

### 20.7.26.1 Threshold

| Class       | Subclass | Name      | Type | Min    | Max   | Default | Unit |
|-------------|----------|-----------|------|--------|-------|---------|------|
| Protections | PCHGC    | Threshold | I2   | –32768 | 32767 | 50      | mA   |

**Description:** *Pre-ChargingCurrent()* trip threshold

**20.7.26.2 Delay**

| Class       | Subclass | Name  | Type | Min | Max | Default | Unit |
|-------------|----------|-------|------|-----|-----|---------|------|
| Protections | PCHGC    | Delay | U1   | 0   | 255 | 2       | s    |

**Description:** *Pre-ChargingCurrent()* trip delay

**20.7.26.3 Recovery Threshold**

| Class       | Subclass | Name               | Type | Min    | Max   | Default | Unit |
|-------------|----------|--------------------|------|--------|-------|---------|------|
| Protections | PCHGC    | Recovery Threshold | I2   | –32768 | 32767 | 10      | mA   |

**Description:** *Pre-ChargingCurrent()* recovery threshold

**20.7.26.4 Recovery Delay**

| Class       | Subclass | Name           | Type | Min | Max | Default | Unit |
|-------------|----------|----------------|------|-----|-----|---------|------|
| Protections | PCHGC    | Recovery Delay | U1   | 0   | 255 | 2       | s    |

**Description:** *Pre-ChargingCurrent()* recovery delay

**20.8 Permanent Fail****20.8.1 SUV—Safety Cell Undervoltage****20.8.1.1 Threshold**

| Class          | Subclass | Name      | Type | Min | Max   | Default | Unit |
|----------------|----------|-----------|------|-----|-------|---------|------|
| Permanent Fail | SUV      | Threshold | I2   | 0   | 32767 | 2200    | mV   |

**Description:** Safety Cell Undervoltage trip threshold

**20.8.1.2 Delay**

| Class          | Subclass | Name  | Type | Min | Max | Default | Unit |
|----------------|----------|-------|------|-----|-----|---------|------|
| Permanent Fail | SUV      | Delay | U1   | 0   | 255 | 5       | s    |

**Description:** Safety Cell Undervoltage trip delay

**20.8.2 SOV—Safety Cell Overvoltage****20.8.2.1 Threshold**

| Class          | Subclass | Name      | Type | Min | Max   | Default | Unit |
|----------------|----------|-----------|------|-----|-------|---------|------|
| Permanent Fail | SOV      | Threshold | I2   | 0   | 32767 | 4500    | mV   |

**Description:** Safety Cell Overvoltage trip threshold

**20.8.2.2 Delay**

| Class          | Subclass | Name  | Type | Min | Max | Default | Unit |
|----------------|----------|-------|------|-----|-----|---------|------|
| Permanent Fail | SOV      | Delay | U1   | 0   | 255 | 5       | s    |

**Description:** Safety Cell Overvoltage trip delay

**20.8.3 SOCC—Safety Overcurrent in Charge****20.8.3.1 Threshold**

| Class          | Subclass | Name      | Type | Min    | Max   | Default | Unit |
|----------------|----------|-----------|------|--------|-------|---------|------|
| Permanent Fail | SOCC     | Threshold | I2   | –32768 | 32767 | 10000   | mA   |

**Description:** Safety Overcurrent in Charge trip threshold

### 20.8.3.2 Delay

| Class          | Subclass | Name  | Type | Min | Max | Default | Unit |
|----------------|----------|-------|------|-----|-----|---------|------|
| Permanent Fail | SOCC     | Delay | U1   | 0   | 255 | 5       | s    |

**Description:** Safety Overcurrent in Charge trip delay

### 20.8.4 SOCD—Safety Overcurrent in Discharge

#### 20.8.4.1 Threshold

| Class          | Subclass | Name      | Type | Min    | Max   | Default | Unit |
|----------------|----------|-----------|------|--------|-------|---------|------|
| Permanent Fail | SOCD     | Threshold | I2   | –32768 | 32767 | –10000  | mA   |

**Description:** Safety Overcurrent in Discharge trip threshold

#### 20.8.4.2 Delay

| Class          | Subclass | Name  | Type | Min | Max | Default | Unit |
|----------------|----------|-------|------|-----|-----|---------|------|
| Permanent Fail | SOCD     | Delay | U1   | 0   | 255 | 5       | s    |

**Description:** Safety Overcurrent in Discharge trip delay

### 20.8.5 SOT—Overtemperature Cell

#### 20.8.5.1 SOTC Threshold

| Class          | Subclass | Name           | Type | Min  | Max  | Default | Unit  |
|----------------|----------|----------------|------|------|------|---------|-------|
| Permanent Fail | SOT      | SOTC Threshold | I2   | –400 | 1500 | 650     | 0.1°C |

**Description:** Overtemperature Cell trip threshold in CHARGE mode

#### 20.8.5.2 SOTC Delay

| Class          | Subclass | Name       | Type | Min | Max | Default | Unit |
|----------------|----------|------------|------|-----|-----|---------|------|
| Permanent Fail | SOT      | SOTC Delay | U1   | 0   | 255 | 5       | s    |

**Description:** Overtemperature cell trip delay in CHARGE mode

#### 20.8.5.3 SOTD Threshold

| Class          | Subclass | Name           | Type | Min  | Max  | Default | Unit  |
|----------------|----------|----------------|------|------|------|---------|-------|
| Permanent Fail | SOT      | SOTD Threshold | I2   | –400 | 1500 | 700     | 0.1°C |

**Description:** Overtemperature Cell trip threshold in DISCHARGE and RELAX mode

#### 20.8.5.4 SOTD Delay

| Class          | Subclass | Name       | Type | Min | Max | Default | Unit |
|----------------|----------|------------|------|-----|-----|---------|------|
| Permanent Fail | SOT      | SOTD Delay | U1   | 0   | 255 | 5       | s    |

**Description:** Overtemperature Cell trip delay in DISCHARGE and RELAX mode

### 20.8.6 SOTF—Overtemperature FET

#### 20.8.6.1 Threshold

| Class          | Subclass | Name      | Type | Min  | Max  | Default | Unit  |
|----------------|----------|-----------|------|------|------|---------|-------|
| Permanent Fail | SOTF     | Threshold | I2   | –400 | 1500 | 1000    | 0.1°C |

**Description:** Overtemperature FET trip threshold

**20.8.6.2 Delay**

| Class          | Subclass | Name  | Type | Min | Max | Default | Unit |
|----------------|----------|-------|------|-----|-----|---------|------|
| Permanent Fail | SOTF     | Delay | U1   | 0   | 255 | 5       | s    |

**Description:** Overtemperature FET trip delay**20.8.7 CD—Capacity Degradation****20.8.7.1 Threshold**

| Class          | Subclass | Name      | Type | Min | Max   | Default | Unit |
|----------------|----------|-----------|------|-----|-------|---------|------|
| Permanent Fail | CD       | Threshold | I2   | 0   | 32767 | 0       | mAh  |

**Description:** Capacity Degradation Threshold**20.8.7.2 Delay**

| Class          | Subclass | Name  | Type | Min | Max | Default | Unit   |
|----------------|----------|-------|------|-----|-----|---------|--------|
| Permanent Fail | CD       | Delay | U1   | 0   | 255 | 2       | cycles |

**Description:** Capacity Degradation Trip Delay**20.8.8 CFET—CHG FET Failure****20.8.8.1 OFF Threshold**

| Class          | Subclass | Name          | Type | Min | Max | Default | Unit |
|----------------|----------|---------------|------|-----|-----|---------|------|
| Permanent Fail | CFET     | OFF Threshold | I2   | 0   | 500 | 5       | mA   |

**Description:** CHG FET OFF current trip threshold**20.8.8.2 OFF Delay**

| Class          | Subclass | Name      | Type | Min | Max | Default | Unit |
|----------------|----------|-----------|------|-----|-----|---------|------|
| Permanent Fail | CFET     | OFF Delay | U1   | 0   | 255 | 5       | s    |

**Description:** CHG FET OFF trip delay**20.8.9 DFET—DFET Failure****20.8.9.1 OFF Threshold**

| Class          | Subclass | Name          | Type | Min  | Max | Default | Unit |
|----------------|----------|---------------|------|------|-----|---------|------|
| Permanent Fail | DFET     | OFF Threshold | I2   | –500 | 0   | –5      | mA   |

**Description:** DSG FET OFF current trip threshold**20.8.9.2 OFF Delay**

| Class          | Subclass | Name      | Type | Min | Max | Default | Unit |
|----------------|----------|-----------|------|-----|-----|---------|------|
| Permanent Fail | DFET     | OFF Delay | U1   | 0   | 255 | 5       | s    |

**Description:** DSG FET OFF trip delay**20.8.10 AFER—AFE Register****20.8.10.1 Threshold**

| Class          | Subclass | Name      | Type | Min | Max | Default | Unit |
|----------------|----------|-----------|------|-----|-----|---------|------|
| Permanent Fail | AFER     | Threshold | U1   | 0   | 255 | 100     | —    |

**Description:** AFE Register comparison fail trip threshold

### 20.8.10.2 Delay Period

| Class          | Subclass | Name         | Type | Min | Max | Default | Unit |
|----------------|----------|--------------|------|-----|-----|---------|------|
| Permanent Fail | AFER     | Delay Period | U1   | 0   | 255 | 2       | s    |

**Description:** AFE Register comparison counter decrement period

### 20.8.10.3 Compare Period

| Class          | Subclass | Name           | Type | Min | Max | Default | Unit |
|----------------|----------|----------------|------|-----|-----|---------|------|
| Permanent Fail | AFER     | Compare Period | U1   | 0   | 255 | 5       | s    |

**Description:** AFE Register comparison compare period

## 20.8.11 AFEC—AFE Communication

### 20.8.11.1 Threshold

| Class          | Subclass | Name      | Type | Min | Max | Default | Unit |
|----------------|----------|-----------|------|-----|-----|---------|------|
| Permanent Fail | AFEC     | Threshold | U1   | 0   | 255 | 100     | —    |

**Description:** AFE Communication fail trip threshold

### 20.8.11.2 Delay Period

| Class          | Subclass | Name         | Type | Min | Max | Default | Unit |
|----------------|----------|--------------|------|-----|-----|---------|------|
| Permanent Fail | AFEC     | Delay Period | U1   | 0   | 255 | 5       | s    |

**Description:** AFE Communication counter decrement period

## 20.9 PF Status

The data in this class is saved at the time of the PF event.

### 20.9.1 Device Status Data

#### 20.9.1.1 Safety Alert A

| Class     | Subclass           | Name           | Type | Min  | Max  | Default | Units |
|-----------|--------------------|----------------|------|------|------|---------|-------|
| PF Status | Device Status Data | Safety Alert A | H1   | 0x00 | 0xFF | 0x00    | Hex   |

**Description:** Accumulated safety flags since PF event

#### 20.9.1.2 Safety Status A

| Class     | Subclass           | Name            | Type | Min  | Max  | Default | Units |
|-----------|--------------------|-----------------|------|------|------|---------|-------|
| PF Status | Device Status Data | Safety Status A | H1   | 0x00 | 0xFF | 0x00    | Hex   |

**Description:** Accumulated safety flags since PF event

#### 20.9.1.3 Safety Alert B

| Class     | Subclass           | Name           | Type | Min  | Max  | Default | Units |
|-----------|--------------------|----------------|------|------|------|---------|-------|
| PF Status | Device Status Data | Safety Alert B | H1   | 0x00 | 0xFF | 0x00    | Hex   |

**Description:** Accumulated safety flags since PF event

#### 20.9.1.4 Safety Status B

| Class     | Subclass           | Name            | Type | Min  | Max  | Default | Units |
|-----------|--------------------|-----------------|------|------|------|---------|-------|
| PF Status | Device Status Data | Safety Status B | H1   | 0x00 | 0xFF | 0x00    | Hex   |

**Description:** Accumulated safety flags since PF event

### 20.9.1.5 Safety Alert C

| Class     | Subclass           | Name           | Type | Min  | Max  | Default | Units |
|-----------|--------------------|----------------|------|------|------|---------|-------|
| PF Status | Device Status Data | Safety Alert C | H1   | 0x00 | 0xFF | 0x00    | Hex   |

**Description:** Accumulated safety flags since PF event

### 20.9.1.6 Safety Status C

| Class     | Subclass           | Name            | Type | Min  | Max  | Default | Units |
|-----------|--------------------|-----------------|------|------|------|---------|-------|
| PF Status | Device Status Data | Safety Status C | H1   | 0x00 | 0xFF | 0x00    | Hex   |

**Description:** Accumulated safety flags since PF event

### 20.9.1.7 Safety Alert D

| Class     | Subclass           | Name           | Type | Min  | Max  | Default | Units |
|-----------|--------------------|----------------|------|------|------|---------|-------|
| PF Status | Device Status Data | Safety Alert D | H1   | 0x00 | 0xFF | 0x00    | Hex   |

**Description:** Accumulated safety flags since PF event

### 20.9.1.8 Safety Status D

| Class     | Subclass           | Name            | Type | Min  | Max  | Default | Units |
|-----------|--------------------|-----------------|------|------|------|---------|-------|
| PF Status | Device Status Data | Safety Status D | H1   | 0x00 | 0xFF | 0x00    | Hex   |

**Description:** Accumulated safety flags since PF event

### 20.9.1.9 PF Alert A

| Class     | Subclass           | Name       | Type | Min  | Max  | Default | Units |
|-----------|--------------------|------------|------|------|------|---------|-------|
| PF Status | Device Status Data | PF Alert A | H1   | 0x00 | 0xFF | 0x00    | Hex   |

**Description:** Accumulated PF flags since PF event

### 20.9.1.10 PF Status A

| Class     | Subclass           | Name        | Type | Min  | Max  | Default | Units |
|-----------|--------------------|-------------|------|------|------|---------|-------|
| PF Status | Device Status Data | PF Status A | H1   | 0x00 | 0xFF | 0x00    | Hex   |

**Description:** Accumulated PF flags since PF event

### 20.9.1.11 PF Alert B

| Class     | Subclass           | Name       | Type | Min  | Max  | Default | Units |
|-----------|--------------------|------------|------|------|------|---------|-------|
| PF Status | Device Status Data | PF Alert B | H1   | 0x00 | 0xFF | 0x00    | Hex   |

**Description:** Accumulated PF flags since PF event

### 20.9.1.12 PF Status B

| Class     | Subclass           | Name        | Type | Min  | Max  | Default | Units |
|-----------|--------------------|-------------|------|------|------|---------|-------|
| PF Status | Device Status Data | PF Status B | H1   | 0x00 | 0xFF | 0x00    | Hex   |

**Description:** Accumulated PF flags since PF event

### 20.9.1.13 PF Alert C

| Class     | Subclass           | Name       | Type | Min  | Max  | Default | Units |
|-----------|--------------------|------------|------|------|------|---------|-------|
| PF Status | Device Status Data | PF Alert C | H1   | 0x00 | 0xFF | 0x00    | Hex   |

**Description:** Accumulated PF flags since PF event

#### 20.9.1.14 PF Status C

| Class     | Subclass           | Name        | Type | Min  | Max  | Default | Units |
|-----------|--------------------|-------------|------|------|------|---------|-------|
| PF Status | Device Status Data | PF Status C | H1   | 0x00 | 0xFF | 0x00    | Hex   |

**Description:** Accumulated PF flags since PF event

#### 20.9.1.15 PF Alert D

| Class     | Subclass           | Name       | Type | Min  | Max  | Default | Units |
|-----------|--------------------|------------|------|------|------|---------|-------|
| PF Status | Device Status Data | PF Alert D | H1   | 0x00 | 0xFF | 0x00    | Hex   |

**Description:** Accumulated PF flags since PF event

#### 20.9.1.16 PF Status D

| Class     | Subclass           | Name        | Type | Min  | Max  | Default | Units |
|-----------|--------------------|-------------|------|------|------|---------|-------|
| PF Status | Device Status Data | PF Status D | H1   | 0x00 | 0xFF | 0x00    | Hex   |

**Description:** Accumulated PF flags since PF event

#### 20.9.1.17 Fuse Flag

| Class     | Subclass           | Name      | Type | Min    | Max    | Default | Units |
|-----------|--------------------|-----------|------|--------|--------|---------|-------|
| PF Status | Device Status Data | Fuse Flag | H2   | 0x0000 | 0xFFFF | 0x0000  | Hex   |

**Description:** Flag set to indicate fuse blow

#### 20.9.1.18 Operation Status A

| Class     | Subclass           | Name               | Type | Min    | Max    | Default | Units |
|-----------|--------------------|--------------------|------|--------|--------|---------|-------|
| PF Status | Device Status Data | Operation Status A | H2   | 0x0000 | 0xFFFF | 0x0000  | Hex   |

**Description:** *OperationStatus()* data at the time of the PF event

#### 20.9.1.19 Operation Status B

| Class     | Subclass           | Name               | Type | Min    | Max    | Default | Units |
|-----------|--------------------|--------------------|------|--------|--------|---------|-------|
| PF Status | Device Status Data | Operation Status B | H2   | 0x0000 | 0xFFFF | 0x0000  | Hex   |

**Description:** *OperationStatus()* data at the time of the PF event

#### 20.9.1.20 Temp Range

| Class     | Subclass           | Name       | Type | Min  | Max  | Default | Units |
|-----------|--------------------|------------|------|------|------|---------|-------|
| PF Status | Device Status Data | Temp Range | H1   | 0x00 | 0xFF | 0x00    | Hex   |

**Description:** Temperature range status at the time of the PF event. The temperature range information returned by *ChargingStatus()*

#### 20.9.1.21 Charging Status A

| Class     | Subclass           | Name              | Type | Min  | Max  | Default | Units |
|-----------|--------------------|-------------------|------|------|------|---------|-------|
| PF Status | Device Status Data | Charging Status A | H1   | 0x00 | 0xFF | 0x00    | Hex   |

**Description:** The charging status at the time of the PF event. See [Section 19.2.35](#) for the bit definitions.

|     |      |    |    |    |    |    |    |
|-----|------|----|----|----|----|----|----|
| 7   | 6    | 5  | 4  | 3  | 2  | 1  | 0  |
| VCT | MCHG | SU | IN | HV | MV | LV | PV |

### 20.9.1.22 Charging Status B

| Class     | Subclass           | Name              | Type | Min  | Max  | Default | Units |
|-----------|--------------------|-------------------|------|------|------|---------|-------|
| PF Status | Device Status Data | Charging Status B | H1   | 0x00 | 0xFF | 0x00    | Hex   |

**Description:** The charging status at the time of the PF event. See [Section 19.2.35](#) for the bit definitions.

|     |      |      |      |      |     |     |     |
|-----|------|------|------|------|-----|-----|-----|
| 7   | 6    | 5    | 4    | 3    | 2   | 1   | 0   |
| VCT | RSVD | RSVD | RSVD | RSVD | CCC | CVR | CCR |

### 20.9.1.23 Gauging Status

| Class     | Subclass           | Name           | Type | Min    | Max    | Default | Units |
|-----------|--------------------|----------------|------|--------|--------|---------|-------|
| PF Status | Device Status Data | Gauging Status | H2   | 0x0000 | 0xFFFF | 0x0000  | Hex   |

**Description:** The gauging status at the time of the PF event. See [ManufacturerAccess\(\) 0x0056 GaugingStatus](#) for bit definitions.

|      |      |      |      |      |      |      |     |
|------|------|------|------|------|------|------|-----|
| 15   | 14   | 13   | 12   | 11   | 10   | 9    | 8   |
| RSVD | RSVD | RSVD | RSVD | RSVD | RSVD | RSVD | VLB |

|    |     |     |      |    |    |    |    |
|----|-----|-----|------|----|----|----|----|
| 7  | 6   | 5   | 4    | 3  | 2  | 1  | 0  |
| CF | DSG | EDV | RSVD | TC | TD | FC | FD |

### 20.9.1.24 IT Status

| Class     | Subclass           | Name      | Type | Min    | Max    | Default | Units |
|-----------|--------------------|-----------|------|--------|--------|---------|-------|
| PF Status | Device Status Data | IT Status | H2   | 0x0000 | 0xFFFF | 0x0000  | Hex   |

**Description:** The Impedance Track™ status at the time of the PF event. See [ManufacturerAccess\(\) 0x0056 GaugingStatus](#) for the bit definitions.

|      |         |      |       |      |    |      |     |
|------|---------|------|-------|------|----|------|-----|
| 15   | 14      | 13   | 12    | 11   | 10 | 9    | 8   |
| RSVD | EDVCONV | RSVD | OCVFR | LDMD | RX | QMAX | VDQ |

|      |         |             |     |     |      |      |      |
|------|---------|-------------|-----|-----|------|------|------|
| 7    | 6       | 5           | 4   | 3   | 2    | 1    | 0    |
| NSFM | OCVPRED | SLPQ<br>MAX | QEN | VOK | RDIS | RSVD | REST |

## 20.9.2 Device Voltage Data (at the Time of PF Event)

### 20.9.2.1 Cell 1 Voltage

| Class     | Subclass            | Name           | Type | Min    | Max   | Default | Unit |
|-----------|---------------------|----------------|------|--------|-------|---------|------|
| PF Status | Device Voltage Data | Cell 1 Voltage | I2   | –32768 | 32767 | 0       | mV   |

**Description:** Cell 1 voltage

### 20.9.2.2 Battery Direct Voltage

| Class     | Subclass            | Name                   | Type | Min    | Max   | Default | Unit |
|-----------|---------------------|------------------------|------|--------|-------|---------|------|
| PF Status | Device Voltage Data | Battery Direct Voltage | I2   | –32768 | 32767 | 0       | mV   |

**Description:** Battery voltage

### 20.9.2.3 Pack Voltage

| Class     | Subclass            | Name         | Type | Min    | Max   | Default | Unit |
|-----------|---------------------|--------------|------|--------|-------|---------|------|
| PF Status | Device Voltage Data | Pack Voltage | I2   | –32768 | 32767 | 0       | mV   |

**Description:** PACK voltage

### 20.9.3 Device Current Data

| Class     | Subclass            | Name    | Type | Min    | Max   | Default | Unit |
|-----------|---------------------|---------|------|--------|-------|---------|------|
| PF Status | Device Current Data | Current | I2   | –32768 | 32767 | 0       | mV   |

**Description:** *Current()*

### 20.9.4 Device Gauging Data (at the Time of PF Event)

#### 20.9.4.1 Cell 1DOD0

| Class     | Subclass            | Name        | Type | Min    | Max   | Default | Unit |
|-----------|---------------------|-------------|------|--------|-------|---------|------|
| PF Status | Device Gauging Data | Cell 1 DOD0 | I2   | –32768 | 32767 | 0       | —    |

**Description:** Cell 1 depth of discharge

#### 20.9.4.2 Passed Charge

| Class     | Subclass            | Name          | Type | Min    | Max   | Default | Unit |
|-----------|---------------------|---------------|------|--------|-------|---------|------|
| PF Status | Device Gauging Data | Passed Charge | I2   | –32768 | 32767 | 0       | mAh  |

**Description:** Passed charge since last QMax update

### 20.9.5 AFE Regs

The **AFE Regs** data is intended for Texas Instruments' use to help with internal firmware diagnostics. They are not settings. They are the snapshot of the corresponding registers under **Settings:AFE** when permanent failur occurs.

#### 20.9.5.1 OCC

| Class     | Subclass | Name | Type | Min | Max  | Default | Unit |
|-----------|----------|------|------|-----|------|---------|------|
| PF Status | AFE Regs | OCC  | H1   | 0x0 | 0x7F | 0x03    | Hex  |

**Description:** AFE OCC Register Contents

#### 20.9.5.2 OCD1

| Class     | Subclass | Name | Type | Min | Max  | Default | Unit |
|-----------|----------|------|------|-----|------|---------|------|
| PF Status | AFE Regs | OCD1 | H1   | 0x0 | 0x7F | 0x03    | Hex  |

**Description:** AFE OCD1 Register Contents

#### 20.9.5.3 OCD2

| Class     | Subclass | Name | Type | Min | Max  | Default | Unit |
|-----------|----------|------|------|-----|------|---------|------|
| PF Status | AFE Regs | OCD2 | H1   | 0x0 | 0x7F | 0x04    | Hex  |

**Description:** AFE OCD2 Register Contents

#### 20.9.5.4 Short Circuit Discharge

| Class     | Subclass | Name                    | Type | Min | Max  | Default | Unit |
|-----------|----------|-------------------------|------|-----|------|---------|------|
| PF Status | AFE Regs | Short Circuit Discharge | H1   | 0x0 | 0x7F | 0x64    | Hex  |

**Description:** AFE Short Circuit Discharge Register Contents

#### 20.9.5.5 Current Discharge Wake

| Class     | Subclass | Name                   | Type | Min  | Max  | Default | Unit |
|-----------|----------|------------------------|------|------|------|---------|------|
| PF Status | AFE Regs | Current Discharge Wake | H1   | 0x70 | 0x7F | 0x79    | Hex  |

**Description:** AFE Current Discharge Wake Register Contents

#### 20.9.5.6 Current Charge Wake

| Class     | Subclass | Name                | Type | Min  | Max  | Default | Unit |
|-----------|----------|---------------------|------|------|------|---------|------|
| PF Status | AFE Regs | Current Charge Wake | H1   | 0x70 | 0x7F | 0x79    | Hex  |

**Description:** AFE Current Charge Wake Register Contents

#### 20.9.5.7 OCC 1 Delay 2

| Class     | Subclass | Name          | Type | Min | Max  | Default | Unit |
|-----------|----------|---------------|------|-----|------|---------|------|
| PF Status | AFE Regs | OCC 1 Delay 2 | H1   | 0x0 | 0x07 | 0x07    | Hex  |

**Description:** AFE OCC 1 Delay2 Register Contents

#### 20.9.5.8 OCC 1 Delay 1

| Class     | Subclass | Name          | Type | Min | Max  | Default | Unit |
|-----------|----------|---------------|------|-----|------|---------|------|
| PF Status | AFE Regs | OCC 1 Delay 1 | H1   | 0x0 | 0xFF | 0xFF    | Hex  |

**Description:** AFE OCC 1 Delay 1 Register Contents

#### 20.9.5.9 OCD 1 Delay 2

| Class     | Subclass | Name          | Type | Min | Max  | Default | Unit |
|-----------|----------|---------------|------|-----|------|---------|------|
| PF Status | AFE Regs | OCD 1 Delay 2 | H1   | 0x0 | 0x07 | 0x07    | Hex  |

**Description:** AFE OCD 1 Delay 2 Register Contents

#### 20.9.5.10 OCD 1 Delay 1

| Class     | Subclass | Name          | Type | Min | Max  | Default | Unit |
|-----------|----------|---------------|------|-----|------|---------|------|
| PF Status | AFE Regs | OCD 1 Delay 1 | H1   | 0x0 | 0xFF | 0xFF    | Hex  |

**Description:** AFE OCD 1 Delay 1 Register Contents

#### 20.9.5.11 OCD 2 Delay 2

| Class     | Subclass | Name          | Type | Min | Max  | Default | Unit |
|-----------|----------|---------------|------|-----|------|---------|------|
| PF Status | AFE Regs | OCD 2 Delay 2 | H1   | 0x0 | 0x07 | 0x07    | Hex  |

**Description:** AFE OCD 2 Delay 2 Register Contents

#### 20.9.5.12 OCD 2 Delay 1

| Class     | Subclass | Name          | Type | Min | Max  | Default | Unit |
|-----------|----------|---------------|------|-----|------|---------|------|
| PF Status | AFE Regs | OCD 2 Delay 1 | H1   | 0x0 | 0xFF | 0xFF    | Hex  |

**Description:** AFE OCD 2 Delay 1 Register Contents

### 20.9.5.13 Short Circuit Discharge Delay

| Class     | Subclass | Name                          | Type | Min | Max  | Default | Unit |
|-----------|----------|-------------------------------|------|-----|------|---------|------|
| PF Status | AFE Regs | Short Circuit Discharge Delay | H1   | 0x0 | 0x3F | 0x14    | Hex  |

**Description:** AFE Short Circuit Discharge Delay Register Contents

### 20.9.5.14 Over Temperature Delay

| Class     | Subclass | Name                   | Type | Min | Max  | Default | Unit |
|-----------|----------|------------------------|------|-----|------|---------|------|
| PF Status | AFE Regs | Over Temperature Delay | H1   | 0x0 | 0x1F | 0x14    | Hex  |

**Description:** AFE Over Temperature Delay Register Contents

### 20.9.5.15 OCD Wake Delay 2

| Class     | Subclass | Name             | Type | Min | Max  | Default | Unit |
|-----------|----------|------------------|------|-----|------|---------|------|
| PF Status | AFE Regs | OCD Wake Delay 2 | H1   | 0x0 | 0x01 | 0x01    | Hex  |

**Description:** AFE OCD Wake Delay 2 Register Contents

### 20.9.5.16 OCD Wake Delay 1

| Class     | Subclass | Name             | Type | Min | Max  | Default | Unit |
|-----------|----------|------------------|------|-----|------|---------|------|
| PF Status | AFE Regs | OCD Wake Delay 1 | H1   | 0x0 | 0xFF | 0xFF    | Hex  |

**Description:** AFE OCD Wake Delay 1 Register Contents

### 20.9.5.17 OCC Wake Delay 2

| Class     | Subclass | Name             | Type | Min | Max  | Default | Unit |
|-----------|----------|------------------|------|-----|------|---------|------|
| PF Status | AFE Regs | OCC Wake Delay 2 | H1   | 0x0 | 0x01 | 0x01    | Hex  |

**Description:** AFE OCC Wake Delay 2 Register Contents

### 20.9.5.18 OCC Wake Delay 1

| Class     | Subclass | Name             | Type | Min | Max  | Default | Unit |
|-----------|----------|------------------|------|-----|------|---------|------|
| PF Status | AFE Regs | OCC Wake Delay 1 | H1   | 0x0 | 0xFF | 0xFF    | Hex  |

**Description:** AFE OCC Wake Delay 1 Register Contents

## 20.10 Black Box

### 20.10.1 Safety Status

| Class     | Subclass      | Name                   | Type | Min  | Max   | Default | Unit | Description                      |
|-----------|---------------|------------------------|------|------|-------|---------|------|----------------------------------|
| Black Box | Safety Status | 1st Safety Status A    | H1   | 0x00 | 0xFF  | 0x00    | Hex  | <i>SafetyStatus()</i> data       |
| Black Box | Safety Status | 1st Safety Status B    | H1   | 0x00 | 0xFF  | 0x00    | Hex  | <i>SafetyStatus()</i> data       |
| Black Box | Safety Status | 1st Safety Status C    | H1   | 0x00 | 0xFF  | 0x00    | Hex  | <i>SafetyStatus()</i> data       |
| Black Box | Safety Status | 1st Safety Status D    | H1   | 0x00 | 0xFF  | 0x00    | Hex  | <i>SafetyStatus()</i> data       |
| Black Box | Safety Status | 1st Time to Next Event | U2   | 0    | 65535 | 0       | s    | Time from 1st event to 2nd event |
| Black Box | Safety Status | 1st Cycle Count        | U2   | 0    | 65535 | 0       | —    | Cycle Count of 1st event         |
| Black Box | Safety Status | 2nd Safety Status A    | H1   | 0x00 | 0xFF  | 0x00    | Hex  | <i>SafetyStatus()</i> data       |

| Class     | Subclass      | Name                   | Type | Min  | Max   | Default | Unit | Description                      |
|-----------|---------------|------------------------|------|------|-------|---------|------|----------------------------------|
| Black Box | Safety Status | 2nd Safety Status B    | H1   | 0x00 | 0xFF  | 0x00    | Hex  | <i>SafetyStatus()</i> data       |
| Black Box | Safety Status | 2nd Safety Status C    | H1   | 0x00 | 0xFF  | 0x00    | Hex  | <i>SafetyStatus()</i> data       |
| Black Box | Safety Status | 2nd Safety Status D    | H1   | 0x00 | 0xFF  | 0x00    | Hex  | <i>SafetyStatus()</i> data       |
| Black Box | Safety Status | 2nd Time to Next Event | U2   | 0    | 65535 | 0       | s    | Time from 2nd event to 3rd event |
| Black Box | Safety Status | 2nd Cycle Count        | U2   | 0    | 65535 | 0       | —    | Cycle Count of 2nd event         |
| Black Box | Safety Status | 3rd Safety Status A    | H1   | 0x00 | 0xFF  | 0x00    | Hex  | <i>SafetyStatus()</i> data       |
| Black Box | Safety Status | 3rd Safety Status B    | H1   | 0x00 | 0xFF  | 0x00    | Hex  | <i>SafetyStatus()</i> data       |
| Black Box | Safety Status | 3rd Safety Status C    | H1   | 0x00 | 0xFF  | 0x00    | Hex  | <i>SafetyStatus()</i> data       |
| Black Box | Safety Status | 3rd Safety Status D    | H1   | 0x00 | 0xFF  | 0x00    | Hex  | <i>SafetyStatus()</i> data       |
| Black Box | Safety Status | 3rd Time to Next Event | U2   | 0    | 65535 | 0       | s    | Time since 3rd event             |
| Black Box | Safety Status | 3rd Cycle Count        | U2   | 0    | 65535 | 0       | —    | Cycle Count of 3rd event         |

## 20.10.2 PF Status

| Class     | Subclass  | Name                   | Type | Min  | Max   | Default | Unit | Description                      |
|-----------|-----------|------------------------|------|------|-------|---------|------|----------------------------------|
| Black Box | PF Status | 1st PF Status A        | H1   | 0x00 | 0xFF  | 0x00    | Hex  | <i>PFStatus()</i> data           |
| Black Box | PF Status | 1st PF Status B        | H1   | 0x00 | 0xFF  | 0x00    | Hex  | <i>PFStatus()</i> data           |
| Black Box | PF Status | 1st PF Status C        | H1   | 0x00 | 0xFF  | 0x00    | Hex  | <i>PFStatus()</i> data           |
| Black Box | PF Status | 1st PF Status D        | H1   | 0x00 | 0xFF  | 0x00    | Hex  | <i>PFStatus()</i> data           |
| Black Box | PF Status | 1st Time to Next Event | U2   | 0    | 65535 | 0       | s    | Time from 1st event to 2nd event |
| Black Box | PF Status | 1st Cycle Count        | U2   | 0    | 65535 | 0       | —    | Cycle Count of 1st event         |
| Black Box | PF Status | 2nd PF Status A        | H1   | 0x00 | 0xFF  | 0x00    | Hex  | <i>PFStatus()</i> data           |
| Black Box | PF Status | 2nd PF Status B        | H1   | 0x00 | 0xFF  | 0x00    | Hex  | <i>PFStatus()</i> data           |
| Black Box | PF Status | 2nd PF Status C        | H1   | 0x00 | 0xFF  | 0x00    | Hex  | <i>PFStatus()</i> data           |
| Black Box | PF Status | 2nd PF Status D        | H1   | 0x00 | 0xFF  | 0x00    | Hex  | <i>PFStatus()</i> data           |
| Black Box | PF Status | 2nd Time to Next Event | U2   | 0    | 65535 | 0       | s    | Time from 2nd event to 3rd event |
| Black Box | PF Status | 2nd Cycle Count        | U2   | 0    | 65535 | 0       | —    | Cycle Count of 2nd event         |
| Black Box | PF Status | 3rd PF Status A        | H1   | 0x00 | 0xFF  | 0x00    | Hex  | <i>PFStatus()</i> data           |
| Black Box | PF Status | 3rd PF Status B        | H1   | 0x00 | 0xFF  | 0x00    | Hex  | <i>PFStatus()</i> data           |
| Black Box | PF Status | 3rd PF Status C        | H1   | 0x00 | 0xFF  | 0x00    | Hex  | <i>PFStatus()</i> data           |
| Black Box | PF Status | 3rd PF Status D        | H1   | 0x00 | 0xFF  | 0x00    | Hex  | <i>PFStatus()</i> data           |
| Black Box | PF Status | 3rd Cycle Count        | U2   | 0    | 65535 | 0       | —    | Cycle Count of 3rd event         |

## 20.11 Gas Gauging

### 20.11.1 Current Thresholds

#### 20.11.1.1 Dsg Current Threshold

| Class       | Subclass           | Name                  | Type | Min    | Max   | Default | Unit |
|-------------|--------------------|-----------------------|------|--------|-------|---------|------|
| Gas Gauging | Current Thresholds | Dsg Current Threshold | I2   | -32768 | 32767 | 100     | mA   |

**Description:** DISCHARGE mode *Current()* threshold

#### 20.11.1.2 Chg Current Threshold

| Class       | Subclass           | Name                  | Type | Min    | Max   | Default | Unit |
|-------------|--------------------|-----------------------|------|--------|-------|---------|------|
| Gas Gauging | Current Thresholds | Chg Current Threshold | I2   | -32768 | 32767 | 50      | mA   |

**Description:** CHARGE mode *Current()* threshold

#### 20.11.1.3 Quit Current

| Class       | Subclass           | Name         | Type | Min | Max   | Default | Unit |
|-------------|--------------------|--------------|------|-----|-------|---------|------|
| Gas Gauging | Current Thresholds | Quit Current | I2   | 0   | 32767 | 10      | mA   |

**Description:** *|Current()* threshold to enter rest mode

#### 20.11.1.4 Dsg Relax Time

| Class       | Subclass           | Name           | Type | Min | Max | Default | Unit |
|-------------|--------------------|----------------|------|-----|-----|---------|------|
| Gas Gauging | Current Thresholds | Dsg Relax Time | U1   | 0   | 255 | 1       | s    |

**Description:** Discharge to relax timeout. When discharge is stopped, the device will exit the DISCHARGE mode after this time is passed.

#### 20.11.1.5 Chg Relax Time

| Class       | Subclass           | Name           | Type | Min | Max | Default | Unit |
|-------------|--------------------|----------------|------|-----|-----|---------|------|
| Gas Gauging | Current Thresholds | Chg Relax Time | U1   | 0   | 255 | 60      | s    |

**Description:** Charge to relax timeout. When charging is stopped, the device will exit the CHARGE mode after this time is passed.

### 20.11.2 Design

#### 20.11.2.1 Design Capacity mAh

| Class       | Subclass | Name                | Type | Min | Max   | Default | Unit |
|-------------|----------|---------------------|------|-----|-------|---------|------|
| Gas Gauging | Design   | Design Capacity mAh | I2   | 100 | 32767 | 4400    | mAh  |

**Description:** *Design Capacity* in mAh. This is reported by *DesignCapacity()* if **[CAPM]** = 0.

#### 20.11.2.2 Design Capacity cWh

| Class       | Subclass | Name                | Type | Min | Max   | Default | Unit |
|-------------|----------|---------------------|------|-----|-------|---------|------|
| Gas Gauging | Design   | Design Capacity cWh | I2   | 0   | 32767 | 6336    | cWh  |

**Description:** *Design Capacity* in cWh. This is reported by *DesignCapacity()* if **[CAPM]** = 1.

#### 20.11.2.3 Design Voltage

| Class       | Subclass | Name           | Type | Min | Max   | Default | Unit |
|-------------|----------|----------------|------|-----|-------|---------|------|
| Gas Gauging | Design   | Design Voltage | I2   | 0   | 32767 | 3600    | mV   |

**Description:** Nominal design voltage of the battery cell. Default 3600mV for single-cell Li-ion application.

### 20.11.3 Cycle

| Class       | Subclass | Name                   | Type | Min | Max | Default | Unit |
|-------------|----------|------------------------|------|-----|-----|---------|------|
| Gas Gauging | Cycle    | Cycle Count Percentage | U1   | 0   | 100 | 90      | %    |

**Description:** This threshold increments the cycle count if the accumulated discharge is more than this set percentage of *FullChargeCapacity()* (if **[CCT]** = 1) or *DesignCapacity()* (if **[CCT]** = 0).

#### Note

A minimum of 10% of *DesignCapacity()* change of the accumulated discharge is required for cycle count increment. This is to prevent an erroneous cycle count increment due to extremely low *FullChargeCapacity()*.

### 20.11.4 FD

#### 20.11.4.1 Set Voltage Threshold

| Class       | Subclass | Name                  | Type | Min | Max  | Default | Unit |
|-------------|----------|-----------------------|------|-----|------|---------|------|
| Gas Gauging | FD       | Set Voltage Threshold | I2   | 0   | 5000 | 3000    | mV   |

**Description:** *GaugingStatus()*[FD] and *BatteryStatus()*[FD] cell voltage set threshold

#### 20.11.4.2 Clear Voltage Threshold

| Class       | Subclass | Name                    | Type | Min | Max  | Default | Unit |
|-------------|----------|-------------------------|------|-----|------|---------|------|
| Gas Gauging | FD       | Clear Voltage Threshold | I2   | 0   | 5000 | 3100    | mV   |

**Description:** *GaugingStatus()*[FD] and *BatteryStatus()*[FD] cell voltage clear threshold

#### 20.11.4.3 Set % RSOC Threshold

| Class       | Subclass | Name                 | Type | Min | Max | Default | Unit |
|-------------|----------|----------------------|------|-----|-----|---------|------|
| Gas Gauging | FD       | Set % RSOC Threshold | U1   | 0   | 100 | 0       | %    |

**Description:** *GaugingStatus()*[FD] and *BatteryStatus()*[FD] *RelativeStateOfCharge()* set threshold

#### 20.11.4.4 Clear % RSOC Threshold

| Class       | Subclass | Name                   | Type | Min | Max | Default | Unit |
|-------------|----------|------------------------|------|-----|-----|---------|------|
| Gas Gauging | FD       | Clear % RSOC Threshold | U1   | 0   | 100 | 5       | %    |

**Description:** *GaugingStatus()*[FD] and *BatteryStatus()*[FD] *RelativeStateOfCharge()* clear threshold

### 20.11.5 FC

#### 20.11.5.1 Set Voltage Threshold

| Class       | Subclass | Name                  | Type | Min | Max  | Default | Unit |
|-------------|----------|-----------------------|------|-----|------|---------|------|
| Gas Gauging | FC       | Set Voltage Threshold | I2   | 0   | 5000 | 4200    | mV   |

**Description:** *GaugingStatus()*[FC] and *BatteryStatus()*[FC] cell voltage set threshold

#### 20.11.5.2 Clear Voltage Threshold

| Class       | Subclass | Name                    | Type | Min | Max  | Default | Unit |
|-------------|----------|-------------------------|------|-----|------|---------|------|
| Gas Gauging | FC       | Clear Voltage Threshold | I2   | 0   | 5000 | 4100    | mV   |

**Description:** *GaugingStatus()*[FC] and *BatteryStatus()*[FC] cell voltage clear threshold

### 20.11.5.3 Set % RSOC Threshold

| Class       | Subclass | Name                 | Type | Min | Max | Default | Unit |
|-------------|----------|----------------------|------|-----|-----|---------|------|
| Gas Gauging | FC       | Set % RSOC Threshold | U1   | 0   | 100 | 100     | %    |

**Description:** *GaugingStatus()[FC]* and *BatteryStatus()[FC] RelativeStateOfCharge()* set threshold

### 20.11.5.4 Clear % RSOC Threshold

| Class       | Subclass | Name                   | Type | Min | Max | Default | Unit |
|-------------|----------|------------------------|------|-----|-----|---------|------|
| Gas Gauging | FC       | Clear % RSOC Threshold | U1   | 0   | 100 | 95      | %    |

**Description:** *GaugingStatus()[FC]* and *BatteryStatus()[FC] RelativeStateOfCharge()* clear threshold

### 20.11.6 TD

*GaugingStatus()[TD]* sets *BatteryStatus()[TDA]* when in DISCHARGE mode.

#### 20.11.6.1 Set Voltage Threshold

| Class       | Subclass | Name                  | Type | Min | Max  | Default | Unit |
|-------------|----------|-----------------------|------|-----|------|---------|------|
| Gas Gauging | TD       | Set Voltage Threshold | I2   | 0   | 5000 | 3200    | mV   |

**Description:** *GaugingStatus()[TD]* cell voltage set threshold

#### 20.11.6.2 Clear Voltage Threshold

| Class       | Subclass | Name                    | Type | Min | Max  | Default | Unit |
|-------------|----------|-------------------------|------|-----|------|---------|------|
| Gas Gauging | TD       | Clear Voltage Threshold | I2   | 0   | 5000 | 3300    | mV   |

**Description:** *GaugingStatus()[TD]* cell voltage clear threshold

#### 20.11.6.3 Set % RSOC Threshold

| Class       | Subclass | Name                 | Type | Min | Max | Default | Unit |
|-------------|----------|----------------------|------|-----|-----|---------|------|
| Gas Gauging | TD       | Set % RSOC Threshold | U1   | 0   | 100 | 6       | %    |

**Description:** *GaugingStatus()[TD] RelativeStateOfCharge()* set threshold

#### 20.11.6.4 Clear % RSOC Threshold

| Class       | Subclass | Name                   | Type | Min | Max | Default | Unit |
|-------------|----------|------------------------|------|-----|-----|---------|------|
| Gas Gauging | TD       | Clear % RSOC Threshold | U1   | 0   | 100 | 8       | %    |

**Description:** *GaugingStatus()[TD] RelativeStateOfCharge()* clear threshold

### 20.11.7 TC

*GaugingStatus()[TC]* sets *BatteryStatus()[TCA]* when in CHARGE mode

#### 20.11.7.1 Set Voltage Threshold

| Class       | Subclass | Name                  | Type | Min | Max  | Default | Unit |
|-------------|----------|-----------------------|------|-----|------|---------|------|
| Gas Gauging | TC       | Set Voltage Threshold | I2   | 0   | 5000 | 4200    | mV   |

**Description:** *GaugingStatus()[TC]* cell voltage set threshold

#### 20.11.7.2 Clear Voltage Threshold

| Class       | Subclass | Name                    | Type | Min | Max  | Default | Unit |
|-------------|----------|-------------------------|------|-----|------|---------|------|
| Gas Gauging | TC       | Clear Voltage Threshold | I2   | 0   | 5000 | 4100    | mV   |

**Description:** *GaugingStatus()[TC]* cell voltage clear threshold

### 20.11.7.3 Set % RSOC Threshold

| Class       | Subclass | Name                 | Type | Min | Max | Default | Unit |
|-------------|----------|----------------------|------|-----|-----|---------|------|
| Gas Gauging | TC       | Set % RSOC Threshold | U1   | 0   | 100 | 100     | %    |

**Description:** *GaugingStatus()[TC] RelativeStateOfCharge()* set threshold

### 20.11.7.4 Clear % RSOC Threshold

| Class       | Subclass | Name                   | Type | Min | Max | Default | Unit |
|-------------|----------|------------------------|------|-----|-----|---------|------|
| Gas Gauging | TC       | Clear % RSOC Threshold | U1   | 0   | 100 | 95      | %    |

**Description:** *GaugingStatus()[TC] RelativeStateOfCharge()* clear threshold

## 20.11.8 State

### 20.11.8.1 QMax

| Class       | Subclass | Name             | Type | Min | Max   | Default | Unit | Description                               |
|-------------|----------|------------------|------|-----|-------|---------|------|-------------------------------------------|
| Gas Gauging | State    | QMax Cell        | I2   | 0   | 32767 | 4400    | mAh  | QMax Cell                                 |
| Gas Gauging | State    | Qmax Cycle Count | U2   | 0   | 65535 | 0       | —    | The <i>CycleCount()</i> when Qmax updated |

### 20.11.8.2 Update Status

| Class       | Subclass | Name          | Type | Min  | Max  | Default | Unit |
|-------------|----------|---------------|------|------|------|---------|------|
| Gas Gauging | State    | Update Status | H1   | 0x00 | 0x0E | 0x00    | Hex  |

7                  6                  5                  4                  3                  2                  1                  0

|      |      |      |      |      |        |         |         |
|------|------|------|------|------|--------|---------|---------|
| RSVD | RSVD | RSVD | RSVD | QMax | Enable | Update1 | Update0 |
|------|------|------|------|------|--------|---------|---------|

**RSVD (Bits 7–4):** Reserved. Do not use.

#### QMax update in the field (Bit 3)

1 = Updated

0 = Not updated

**Enable (Bit 2):** Impedance Track™ gauging and lifetime updating enable

1 = Enabled

0 = Disabled

**Update1, Update0 (Bits 1–0):** Update Status

0,0 = Impedance Track™ gauging and lifetime updating is disabled.

0,1 = QMax updated

1,0 = QMax and Ra table have been updated.

### 20.11.8.3 Cell 1 Chg Voltage at EoC

| Class       | Subclass | Name                      | Type | Min | Max   | Default | Unit |
|-------------|----------|---------------------------|------|-----|-------|---------|------|
| Gas Gauging | State    | Cell 1 Chg Voltage at EoC | I2   | 0   | 32767 | 4200    | mV   |

**Description:** Cell 1 voltage value at end of charge

### 20.11.8.4 Current at EoC

| Class       | Subclass | Name           | Type | Min | Max   | Default | Unit |
|-------------|----------|----------------|------|-----|-------|---------|------|
| Gas Gauging | State    | Current at EoC | I2   | 0   | 32767 | 250     | mA   |

**Description:** Current at end of charge

#### 20.11.8.5 Average Last Run

##### 20.11.8.5.1 Avg I Last Run

| Class       | Subclass | Name           | Type | Min    | Max   | Default | Unit |
|-------------|----------|----------------|------|--------|-------|---------|------|
| Gas Gauging | State    | Avg I Last Run | I2   | –32768 | 32767 | –2000   | mA   |

**Description:** Average current last discharge cycle

##### 20.11.8.5.2 Avg P Last Run

| Class       | Subclass | Name           | Type | Min    | Max   | Default | Unit  |
|-------------|----------|----------------|------|--------|-------|---------|-------|
| Gas Gauging | State    | Avg P Last Run | I2   | –32768 | 32767 | –3022   | 10 mW |

**Description:** Average power last discharge cycle

#### 20.11.8.6 Delta Voltage

| Class       | Subclass | Name          | Type | Min    | Max   | Default | Unit |
|-------------|----------|---------------|------|--------|-------|---------|------|
| Gas Gauging | State    | Delta Voltage | I2   | –32768 | 32767 | 0       | mV   |

**Description:** *Voltage()* delta between normal and short load spikes to optimize run time calculation

#### 20.11.8.7 Temp

##### 20.11.8.7.1 Temp k

| Class       | Subclass | Name   | Type | Min | Max   | Default | Unit              |
|-------------|----------|--------|------|-----|-------|---------|-------------------|
| Gas Gauging | State    | Temp k | I2   | 0   | 32767 | 100     | 0.1°C/<br>2560 mW |

**Description:** Initial thermal model temperature factor

##### 20.11.8.7.2 Temp a

| Class       | Subclass | Name   | Type | Min | Max   | Default | Unit |
|-------------|----------|--------|------|-----|-------|---------|------|
| Gas Gauging | State    | Temp a | I2   | 0   | 32767 | 1000    | s    |

**Description:** Initial thermal model temperature

#### 20.11.8.8 Max Avg Last Run

##### 20.11.8.8.1 Max Avg I Last Run

| Class       | Subclass | Name               | Type | Min    | Max   | Default | Unit |
|-------------|----------|--------------------|------|--------|-------|---------|------|
| Gas Gauging | State    | Max Avg I Last Run | I2   | –32768 | 32767 | –2000   | mA   |

**Description:** Max current last discharge cycle

##### 20.11.8.8.2 Max Avg P Last Run

| Class       | Subclass | Name               | Type | Min    | Max   | Default | Unit |
|-------------|----------|--------------------|------|--------|-------|---------|------|
| Gas Gauging | State    | Max Avg P Last Run | I2   | –32768 | 32767 | –3022   | cW   |

**Description:** Max power last discharge cycle

#### 20.11.8.9 SOH FCC Max

##### 20.11.8.9.1 SOH FCC Max mAh

| Class       | Subclass | Name            | Type | Min | Max   | Default | Unit |
|-------------|----------|-----------------|------|-----|-------|---------|------|
| Gas Gauging | State    | SOH FCC Max mAh | I2   | 100 | 32767 | 4400    | mAh  |

**Description:** Learned **SOH FCC Max** in mAh. This is used in *StateOfHealth()* calculation if **[CAPM] = 0**, **Settings:IT Gauging Ext[SOH\_LEARN\_EN] = 1** and **SOH FCC Max mAh > Design Capacity mAh** ..

#### 20.11.8.9.2 SOH FCC Max cWh

| Class       | Subclass | Name            | Type | Min | Max   | Default | Unit |
|-------------|----------|-----------------|------|-----|-------|---------|------|
| Gas Gauging | State    | SOH FCC Max cWh | I2   | 0   | 32767 | 6336    | cWh  |

**Description:** Learned **SOH FCC Max** in cWh. This is used in *StateOfHealth()* calculation if **[CAPM] = 1**, **Settings:IT Gauging Ext[SOH\_LEARN\_EN] = 1** and **SOH FCC Max cWh > Design Capacity cWh** .

#### 20.11.8.10 SOH Temp

##### 20.11.8.10.1 SOH Temp k

| Class       | Subclass | Name       | Type | Min | Max   | Default | Unit              |
|-------------|----------|------------|------|-----|-------|---------|-------------------|
| Gas Gauging | State    | SOH Temp k | I2   | 0   | 32767 | 100     | 0.1°C/<br>2560 mW |

**Description:** Initial thermal model temperature factor for SOH simulation

##### 20.11.8.10.2 SOH Temp a

| Class       | Subclass | Name       | Type | Min | Max   | Default | Unit |
|-------------|----------|------------|------|-----|-------|---------|------|
| Gas Gauging | State    | SOH Temp a | I2   | 0   | 32767 | 1000    | s    |

**Description:** Initial thermal model temperature for SOH simulation

#### 20.11.8.11 Cycle Count

| Class       | Subclass | Name        | Type | Min | Max   | Default | Unit | Description |
|-------------|----------|-------------|------|-----|-------|---------|------|-------------|
| Gas Gauging | State    | Cycle Count | U2   | 0   | 65535 | 0       | —    | Cycle Count |

**Description:** Value reported by *CycleCount()*. The gauge updates this automatically when accumulated discharge exceeds the threshold set by **Cycle Count Percentage** .

#### 20.11.9 Turbo Cfg

##### 20.11.9.1 Min System Voltage

| Class       | Subclass  | Name               | Type | Min | Max   | Default | Unit |
|-------------|-----------|--------------------|------|-----|-------|---------|------|
| Gas Gauging | Turbo Cfg | Min System Voltage | I2   | 0   | 32767 | 3000    | mV   |

**Description:** This is the minimum required system voltage on the battery pack terminals to be used for TURBO mode.

##### 20.11.9.2 Ten Second Max C-Rate

| Class       | Subclass  | Name                  | Type | Min    | Max | Default | Unit           |
|-------------|-----------|-----------------------|------|--------|-----|---------|----------------|
| Gas Gauging | Turbo Cfg | Ten Second Max C-Rate | I2   | –32768 | 0   | –200    | 0.01<br>C rate |

**Description:** This value specifies the maximal discharge current for 10 s. The native unit for this parameter is 0.01C-rate

##### 20.11.9.3 Ten Millisecond Max C-Rate

| Class       | Subclass  | Name                       | Type | Min    | Max | Default | Unit           |
|-------------|-----------|----------------------------|------|--------|-----|---------|----------------|
| Gas Gauging | Turbo Cfg | Ten Millisecond Max C-Rate | I2   | –32768 | 0   | –400    | 0.01<br>C rate |

**Description:** This value specifies the maximal discharge current for 10 ms. The native unit for this parameter is 0.01C-rate

#### 20.11.9.4 High Frequency Resistance

| Class       | Subclass  | Name                      | Type | Min | Max   | Default | Unit |
|-------------|-----------|---------------------------|------|-----|-------|---------|------|
| Gas Gauging | Turbo Cfg | High Frequency Resistance | I2   | 0   | 32767 | 36      | mΩ   |

**Description:** This is the high-frequency resistance related to the specific cell chemistry and pack configuration.

#### 20.11.9.5 Reserve Energy %

| Class       | Subclass  | Name             | Type | Min | Max | Default | Unit |
|-------------|-----------|------------------|------|-----|-----|---------|------|
| Gas Gauging | Turbo Cfg | Reserve Energy % | I1   | 0   | 100 | 0       | %    |

**Description:** This is the remaining energy at present average discharge rate (as defined in **Load Select**) until the maximal peak power reaches the value reported by *MaxPeakPower()*.

#### 20.11.9.6 Turbo Adjustment Factor

| Class       | Subclass  | Name                    | Type | Min | Max | Default | Unit |
|-------------|-----------|-------------------------|------|-----|-----|---------|------|
| Gas Gauging | Turbo Cfg | Turbo Adjustment Factor | U1   | 0   | 255 | 100     | %    |

**Description:** This is a resistance correction factor that, if used, would be a one-time adjustment the user computes from a 10-s pulse test.

### 20.11.10 IT-DZT Config

#### 20.11.10.1 Design Resistance

| Class       | Subclass   | Name              | Type | Min | Max   | Default | Unit |
|-------------|------------|-------------------|------|-----|-------|---------|------|
| Gas Gauging | IT-DZT Cfg | Design Resistance | I2   | 1   | 32767 | 96      | mΩ   |

**Description:** Averaged cell resistance at **Reference Grid** point.

#### 20.11.10.2 Pack Resistance

| Class       | Subclass   | Name            | Type | Min | Max   | Default | Unit |
|-------------|------------|-----------------|------|-----|-------|---------|------|
| Gas Gauging | IT-DZT Cfg | Pack Resistance | I2   | 0   | 32767 | 0       | mΩ   |

**Description:** Pack-side resistance value accessed using *TURBO\_PACK\_R()*

#### 20.11.10.3 System Resistance

| Class       | Subclass   | Name              | Type | Min | Max   | Default | Unit |
|-------------|------------|-------------------|------|-----|-------|---------|------|
| Gas Gauging | IT-DZT Cfg | System Resistance | I2   | 0   | 32767 | 0       | mΩ   |

**Description:** System side resistance value accessed using *TURBO\_SYS\_R()*

#### 20.11.10.4 Predict Ambient Time

| Class       | Subclass   | Name                 | Type | Min | Max   | Default | Unit |
|-------------|------------|----------------------|------|-----|-------|---------|------|
| Gas Gauging | IT-DZT Cfg | Predict Ambient Time | U2   | 0   | 65535 | 2000    | s    |

**Description:** The time interval to predict true ambient temperature using the thermal model during charge and discharge.

### 20.11.10.5 Ra Filter

| Class       | Subclass   | Name      | Type | Min | Max | Default | Unit |
|-------------|------------|-----------|------|-----|-----|---------|------|
| Gas Gauging | IT-DZT Cfg | Ra Filter | U2   | 0   | 999 | 800     | 0.1% |

**Description:** Filter value used in Ra Updates and specifies what percentage or Ra update is from the new value (100% setting) versus the old value (setting). The recommended setting is 80% if the **[RSOC\_CONV]** feature is enabled. Otherwise, the setting should be 50% as default.

### 20.11.10.6 Ra Max Delta

| Class       | Subclass   | Name         | Type | Min | Max | Default | Unit |
|-------------|------------|--------------|------|-----|-----|---------|------|
| Gas Gauging | IT-DZT Cfg | Ra Max Delta | U1   | 0   | 255 | 15      | %    |

**Description:** Maximum value of allowed Ra change

### 20.11.10.7 Reference Grid

| Class       | Subclass   | Name           | Type | Min | Max | Default | Unit |
|-------------|------------|----------------|------|-----|-----|---------|------|
| Gas Gauging | IT-DZT Cfg | Reference Grid | U1   | 0   | 14  | 4       | —    |

**Description:** **Reference Grid** point used by **Design Resistance**. The default setting should be used if the **[RSOC\_CONV]** feature is enabled. Otherwise, grid point 11 should be used to ensure resistance updates fast enough at the grid where discharge termination occurs.

### 20.11.10.8 Resistance Parameter Filter

| Class       | Subclass   | Name                        | Type | Min | Max   | Default | Unit |
|-------------|------------|-----------------------------|------|-----|-------|---------|------|
| Gas Gauging | IT-DZT Cfg | Resistance Parameter Filter | U2   | 1   | 65535 | 65142   | —    |

**Description:** This is one of the filters used for a resistance update. Reducing this filter setting can improve low temperature performance at high rates. The default setting is 41 s.

It is recommended to keep this filter within the range of 4 s (DF setting = 61680) up to the default 41 s (DF setting = 65142). Examining the **Term Voltage Delta** setting and **Fast Scale Start SOC** should be done prior to adjusting this parameter when trying to improve the RSOC performance.

The following is the formula to convert the DF setting into the actual filter time constant in units of seconds:

Filter time constant =  $[0.25 / (1 - (DF\_Value / 65536))] - 0.25$ .

### 20.11.10.9 Near EDV Ra Param Filter

| Class       | Subclass   | Name                     | Type | Min | Max   | Default | Unit |
|-------------|------------|--------------------------|------|-----|-------|---------|------|
| Gas Gauging | IT-DZT Cfg | Near EDV Ra Param Filter | U2   | 1   | 65535 | 59220   | —    |

**Description:** Ra filter used in the fast scaling region if **[FF\_NEAR\_EDV]** = 1. Default value should be used. Near EDV Ra Param Filter = 65142 for use with Turbo Mode 3.0.

### 20.11.10.10 Max Current Change %

| Class       | Subclass   | Name                 | Type | Min | Max | Default | Unit |
|-------------|------------|----------------------|------|-----|-----|---------|------|
| Gas Gauging | IT-DZT Cfg | Max Current Change % | U1   | 0   | 100 | 10      | %    |

**Description:** Close to the end of discharge, if the change in current exceeds this threshold, the resistance update and Ra scale update are not allowed to prevent incorrect FCC drops.

### 20.11.10.11 Resistance Update Voltage

| Class       | Subclass   | Name                      | Type | Min | Max   | Default | Unit |
|-------------|------------|---------------------------|------|-----|-------|---------|------|
| Gas Gauging | IT-DZT Cfg | Resistance Update Voltage | I2   | 0   | 32767 | 50      | mV   |

**Description:** The difference between the voltage based on DoD and the measured voltage is estimated as the IR drop. If this IR drop is less than the value in this register, then the resistance calculation is not done and the resistance table is not updated.

### 20.11.10.12 Qmax Delta

| Class       | Subclass   | Name       | Type | Min | Max | Default | Unit |
|-------------|------------|------------|------|-----|-----|---------|------|
| Gas Gauging | IT-DZT Cfg | Qmax Delta | U1   | 3   | 100 | 5       | %    |

**Description:** Maximum allowed Qmax change from its previous value. The Qmax change will be capped by this setting if the delta from the previous Qmax is larger than **Qmax Delta**. **Qmax Delta** is a percentage of **Design Capacity**.

### 20.11.10.13 Qmax Upper Bound

| Class       | Subclass   | Name             | Type | Min | Max | Default | Unit |
|-------------|------------|------------------|------|-----|-----|---------|------|
| Gas Gauging | IT-DZT Cfg | Qmax Upper Bound | U1   | 100 | 255 | 130     | %    |

**Description:** Maximum Qmax value over the lifetime of the pack. If the updated Qmax value is larger than this setting, the updated Qmax will be capped to **Qmax Upper Bound**. **Qmax Upper Bound** is a percentage of **Design Capacity**.

### 20.11.10.14 Term Voltage

| Class       | Subclass   | Name         | Type | Min | Max   | Default | Unit |
|-------------|------------|--------------|------|-----|-------|---------|------|
| Gas Gauging | IT-DZT Cfg | Term Voltage | I2   | 0   | 32767 | 9000    | mV   |

**Description:** Min stack voltage to be used for capacity calculation

### 20.11.10.15 Res Relax Time

| Class       | Subclass   | Name           | Type | Min | Max   | Default | Unit |
|-------------|------------|----------------|------|-----|-------|---------|------|
| Gas Gauging | IT-DZT Cfg | Res Relax Time | U2   | 0   | 65535 | 200     | s    |

**Description:** The time constant associated with resistance at the start of discharge.

### 20.11.10.16 Term Voltage Delta

| Class       | Subclass   | Name               | Type | Min | Max   | Default | Unit |
|-------------|------------|--------------------|------|-----|-------|---------|------|
| Gas Gauging | IT-DZT Cfg | Term Voltage Delta | I2   | 0   | 32767 | 300     | mV   |

**Description:** Controls when the **[RSOC\_CONV]** feature becomes active. The recommended setting is 3.3 – **Term Voltage** /Number Cells.

The default setting is 300 mV, which is assuming a typical 3-V termination voltage per cell. If a different termination voltage is used, this parameter should be adjusted accordingly.

### 20.11.10.17 Max Simulation Iterations

| Class       | Subclass   | Name                      | Type | Min | Max | Default | Unit |
|-------------|------------|---------------------------|------|-----|-----|---------|------|
| Gas Gauging | IT-DZT Cfg | Max Simulation Iterations | U1   | 20  | 50  | 30      | —    |

**Description:** **Max Simulation Iterations** enables the user to set the max number of simulation iterations IT is allowed to do. If the user finds that the watchdog is tripping, this number can be lowered. The default is set at the optimal setting of 30. For 4-series cell applications, a setting of 50 is not recommended.

#### 20.11.10.18 Simulation Near Term Delta

| Class       | Subclass   | Name                       | Type | Min | Max   | Default | Unit |
|-------------|------------|----------------------------|------|-----|-------|---------|------|
| Gas Gauging | IT-DZT Cfg | Simulation Near Term Delta | I2   | 0   | 32767 | 250     | mV   |

**Description:** Voltage delta from **Term Voltage**, which defines "near EDV" for IT simulations. If **Term Voltage** is increased, **Simulation Near Term Delta** should be decreased to keep **Term Voltage** + **Simulation Near Term Delta** around 3.2 V–3.5 V, the knee of the discharge curve.

#### 20.11.10.19 Fast Scale Start SOC

| Class       | Subclass   | Name                 | Type | Min | Max | Default | Unit |
|-------------|------------|----------------------|------|-----|-----|---------|------|
| Gas Gauging | IT-DZT Cfg | Fast Scale Start SOC | U1   | 0   | 100 | 10      | %    |

**Description:** Controls the start of convergence when **[RSOC\_CONV]** = 1 based on RSOC %. Raising this setting can improve the RSOC drop at the end of discharge. However, the RSOC % chosen for this setting must be kept after the sharp drop of the discharge curve (the knee of the discharge curve).

#### 20.11.10.20 DeltaV Max Voltage Delta

| Class       | Subclass   | Name                     | Type | Min    | Max   | Default | Unit |
|-------------|------------|--------------------------|------|--------|-------|---------|------|
| Gas Gauging | IT-DZT Cfg | DeltaV Max Voltage Delta | I2   | –32768 | 32767 | 10      | mV   |

**Description:** This sets the maximum bound of how much DeltaV can change.

#### 20.11.10.21 Load Select

| Class       | Subclass   | Name        | Type | Min | Max | Default | Unit |
|-------------|------------|-------------|------|-----|-----|---------|------|
| Gas Gauging | IT-DZT Cfg | Load Select | U1   | 0   | 7   | 7       | —    |

**Description:** Defines load compensation mode used by the gauging algorithm. Load Select = 1 for use with Turbo Mode 3.0.

#### 20.11.10.22 Fast Scale Load Select

| Class       | Subclass   | Name                   | Type | Min | Max | Default | Unit |
|-------------|------------|------------------------|------|-----|-----|---------|------|
| Gas Gauging | IT-DZT Cfg | Fast Scale Load Select | U1   | 0   | 7   | 3       | —    |

**Description:** Defines load compensation mode used by the gauging algorithm in the fast scaling region

#### 20.11.10.23 Load Mode

| Class       | Subclass   | Name      | Type | Min | Max | Default | Unit |
|-------------|------------|-----------|------|-----|-----|---------|------|
| Gas Gauging | IT-DZT Cfg | Load Mode | U1   | 0   | 1   | 0       | —    |

**Description:** Defines unit used by the gauging algorithm:

1 = Constant Power

0 = Constant Current

#### 20.11.10.24 User Rate-mA

| Class       | Subclass   | Name         | Type | Min   | Max | Default | Unit |
|-------------|------------|--------------|------|-------|-----|---------|------|
| Gas Gauging | IT-DZT Cfg | User Rate-mA | I2   | –9000 | 0   | 0       | mA   |

**Description:** Discharge rate used for capacity calculation selected by **Load Select** = 6

#### 20.11.10.25 User Rate-cW

| Class       | Subclass   | Name         | Type | Min    | Max | Default | Unit |
|-------------|------------|--------------|------|--------|-----|---------|------|
| Gas Gauging | IT-DZT Cfg | User Rate-cW | I2   | -32768 | 0   | 0       | cW   |

**Description:** Discharge rate used for capacity calculation selected by **Load Select** = 6

#### 20.11.10.26 Reserve Cap-mAh

| Class       | Subclass   | Name            | Type | Min | Max  | Default | Unit |
|-------------|------------|-----------------|------|-----|------|---------|------|
| Gas Gauging | IT-DZT Cfg | Reserve Cap-mAh | I2   | 0   | 9000 | 0       | mAh  |

**Description:** Capacity reserved available when the gauging algorithm reports 0% *RelativeStateOfCharge()*. The gauge predicts to report a capacity of 0 when approximately **Reserve Cap-mAh** remains. This parameter is used when Load Mode = 0 and predictions are made assuming a constant current load.

#### 20.11.10.27 Reserve Cap-cWh

| Class       | Subclass   | Name            | Type | Min | Max   | Default | Unit |
|-------------|------------|-----------------|------|-----|-------|---------|------|
| Gas Gauging | IT-DZT Cfg | Reserve Cap-cWh | I2   | 0   | 32000 | 0       | cWh  |

**Description:** Capacity reserved available when the gauging algorithm reports 0% *RelativeStateOfCharge()*. The gauge predicts to report a capacity of 0 when approximately **Reserve Cap-cWh** remains. This parameter is used when Load Mode = 1 and predictions are made using a constant power load.

### 20.11.11 Smoothing

#### 20.11.11.1 Smooth Relax Time

| Class       | Subclass  | Name              | Type | Min | Max   | Default | Unit |
|-------------|-----------|-------------------|------|-----|-------|---------|------|
| Gas Gauging | Smoothing | Smooth Relax Time | U2   | 1   | 32767 | 1000    | s    |

**Description:** If **[RELAX\_SMOOTH\_OK]** = 1, the delta remaining capacity and full charge capacity are smoothed over this set period of time. It is recommended to use the default setting.

#### 20.11.11.2 Term Smooth Start Cell V Delta

| Class       | Subclass  | Name                           | Type | Min | Max   | Default | Unit |
|-------------|-----------|--------------------------------|------|-----|-------|---------|------|
| Gas Gauging | Smoothing | Term Smooth Start Cell V Delta | I2   | 0   | 32767 | 150     | mV   |

**Description:** If the config bit **[DSG\_0\_SMOOTH\_OK]** is set, then during discharge and once the pack voltage is below the threshold defined in this register, time-based smoothing is initiated. This will smooth RemCap to 0 mAh over the next **Term Smooth Time** seconds. **Term Smooth Start Cell V Delta** is a per cell voltage delta. This value is multiplied by the number of cells, added to **Terminate Voltage**, and checked against *Voltage()*. Smoothing will continue to 0% unless charging starts (even in RELAX mode).

#### 20.11.11.3 Term Smooth Final Cell V Delta

| Class       | Subclass  | Name                           | Type | Min | Max   | Default | Unit |
|-------------|-----------|--------------------------------|------|-----|-------|---------|------|
| Gas Gauging | Smoothing | Term Smooth Final Cell V Delta | I2   | 0   | 32767 | 100     | mV   |

**Description:** If the config bit **[DSG\_0\_SMOOTH\_OK]** is set, then during discharge and once the conditions for smoothing are reached, smoothing to 0 is initiated. To assure that the gauge reports 0% in low voltage situations, **Term Smooth Final Cell V Delta** is used. This value is multiplied by the number of cells, subtracted from **Terminate Voltage**, and checked against *Voltage()*. Once voltage passes this threshold, 0% will be forced even if smoothing has not completed.

### Note

This DF can be disabled by setting it to 0, and is typically expected to be set low enough to enable the system to shut down properly (without brownout).

#### 20.11.11.4 Term Smooth Time

| Class       | Subclass  | Name             | Type | Min | Max | Default | Unit |
|-------------|-----------|------------------|------|-----|-----|---------|------|
| Gas Gauging | Smoothing | Term Smooth Time | U1   | 1   | 255 | 20      | s    |

**Description:** If the config bit *[DSG\_0\_SMOOTH\_OK]* is set, then during discharge and once the pack voltage is below the threshold defined in *Term Smooth Start Cell V Delta*, time-based smoothing is initiated. This will smooth RemCap to 0 mAh over the next *Term Smooth Time* seconds.

#### 20.11.12 Condition Flag

| Class       | Subclass       | Name            | Type | Min | Max | Default | Unit |
|-------------|----------------|-----------------|------|-----|-----|---------|------|
| Gas Gauging | Condition Flag | Max Error Limit | U1   | 0   | 100 | 100     | %    |

**Description:** Max Error Limit Percentage

#### 20.11.13 Max Error

##### 20.11.13.1 Time Cycle Equivalent

| Class       | Subclass  | Name                  | Type | Min | Max | Default | Unit |
|-------------|-----------|-----------------------|------|-----|-----|---------|------|
| Gas Gauging | Max Error | Time Cycle Equivalent | U1   | 1   | 255 | 12      | 2 h  |

**Description:** After valid QMax update, each passed time period of *Time Cycle Equivalent* will increment of *MaxError()* by *Cycle Delta*.

##### 20.11.13.2 Cycle Delta

| Class       | Subclass  | Name        | Type | Min | Max | Default | Unit  |
|-------------|-----------|-------------|------|-----|-----|---------|-------|
| Gas Gauging | Max Error | Cycle Delta | U1   | 0   | 255 | 5       | 0.01% |

**Description:** Each increment of *CycleCount()* after a valid QMax update will increment of *MaxError()* by *Cycle Delta*. Setting this parameter to 0 disables the *MaxError()* increment by time or cycle increment.

#### 20.11.14 SOH

| Class       | Subclass | Name          | Type | Min | Max | Default | Unit        |
|-------------|----------|---------------|------|-----|-----|---------|-------------|
| Gas Gauging | SOH      | SOH Load Rate | U1   | 0   | 255 | 50      | 0.1 Hr rate |

**Description:** Current rate used in SOH simulation specified in hour-rate (that is, current = C/ *SOH Load Rate*)

### 20.12 RA Table

#### 20.12.1 R\_a0

| Class    | Subclass | Name            | Type | Min    | Max    | Default | Unit |
|----------|----------|-----------------|------|--------|--------|---------|------|
| RA Table | R_a0     | Cell 0 R_A Flag | H2   | 0x0000 | 0xFFFF | 0xFF55  | Hex  |

#### Description:

This value indicates the validity of the cell impedance table for *Cell 1*. It is recommended not to change this value manually.

| High Byte |                                        | Low Byte |                                            |
|-----------|----------------------------------------|----------|--------------------------------------------|
| 0x00      | Cell impedance and QMax updated        | 0x00     | The table is not used and QMax is updated. |
| 0x05      | RELAX mode and QMax update in progress | 0x55     | The table is used.                         |

| High Byte |                                           | Low Byte |                                                            |
|-----------|-------------------------------------------|----------|------------------------------------------------------------|
| 0x55      | DISCHARGE mode and cell impedance updated | 0xFF     | The table is never used; no QMax or cell impedance update. |
| 0xFF      | Cell impedance never updated              |          |                                                            |

The gauge stores and updates the impedance profile for **Cell 1**, as shown in the following table:

| Class    | Subclass | Name          | Type | Min | Max   | Default | Unit | Description                        |
|----------|----------|---------------|------|-----|-------|---------|------|------------------------------------|
| RA Table | R_a0     | Cell 0 R_A 0  | I2   | 0   | 32767 | 67      | mΩ   | Cell 0 resistance at grid point 0  |
| RA Table | R_a0     | Cell 0 R_A 1  | I2   | 0   | 32767 | 71      | mΩ   | Cell 0 resistance at grid point 1  |
| RA Table | R_a0     | Cell 0 R_A 2  | I2   | 0   | 32767 | 83      | mΩ   | Cell 0 resistance at grid point 2  |
| RA Table | R_a0     | Cell 0 R_A 3  | I2   | 0   | 32767 | 110     | mΩ   | Cell 0 resistance at grid point 3  |
| RA Table | R_a0     | Cell 0 R_A 4  | I2   | 0   | 32767 | 96      | mΩ   | Cell 0 resistance at grid point 4  |
| RA Table | R_a0     | Cell 0 R_A 5  | I2   | 0   | 32767 | 77      | mΩ   | Cell 0 resistance at grid point 5  |
| RA Table | R_a0     | Cell 0 R_A 6  | I2   | 0   | 32767 | 96      | mΩ   | Cell 0 resistance at grid point 6  |
| RA Table | R_a0     | Cell 0 R_A 7  | I2   | 0   | 32767 | 86      | mΩ   | Cell 0 resistance at grid point 7  |
| RA Table | R_a0     | Cell 0 R_A 8  | I2   | 0   | 32767 | 84      | mΩ   | Cell 0 resistance at grid point 8  |
| RA Table | R_a0     | Cell 0 R_A 9  | I2   | 0   | 32767 | 82      | mΩ   | Cell 0 resistance at grid point 9  |
| RA Table | R_a0     | Cell 0 R_A 10 | I2   | 0   | 32767 | 81      | mΩ   | Cell 0 resistance at grid point 10 |
| RA Table | R_a0     | Cell 0 R_A 11 | I2   | 0   | 32767 | 92      | mΩ   | Cell 0 resistance at grid point 11 |
| RA Table | R_a0     | Cell 0 R_A 12 | I2   | 0   | 32767 | 103     | mΩ   | Cell 0 resistance at grid point 12 |
| RA Table | R_a0     | Cell 0 R_A 13 | I2   | 0   | 32767 | 123     | mΩ   | Cell 0 resistance at grid point 13 |
| RA Table | R_a0     | Cell 0 R_A 14 | I2   | 0   | 32767 | 658     | mΩ   | Cell 0 resistance at grid point 14 |

### 20.12.2 R\_a0x

| Class    | Subclass | Name             | Type | Min    | Max    | Default | Unit |
|----------|----------|------------------|------|--------|--------|---------|------|
| RA Table | R_a0x    | xCell 0 R_A Flag | H2   | 0x0000 | 0xFFFF | 0xFFFF  | Hex  |

#### Description:

This value indicates the validity of the cell impedance table for **Cell 1**. It is recommended not to change this value manually.

#### Note

The Ra table serves as a backup during optimization cycles rather than alternating with RaX to manage flash wear as in previous generation devices. Flash wear management is handled through a file system approach instead.

| High Byte |                                           | Low Byte |                                                            |
|-----------|-------------------------------------------|----------|------------------------------------------------------------|
| 0x00      | Cell impedance and QMax updated           | 0x00     | The table is not used and QMax is updated.                 |
| 0x05      | RELAX mode and QMax update in progress    | 0x55     | The table is used.                                         |
| 0x55      | DISCHARGE mode and cell impedance updated | 0xFF     | The table is never used; no QMax or cell impedance update. |
| 0xFF      | Cell impedance never updated              |          |                                                            |

The gauge stores and updates the impedance profile for **Cell 1**, as shown in the following table:

| Class    | Subclass | Name          | Type | Min | Max   | Default | Unit | Description                       |
|----------|----------|---------------|------|-----|-------|---------|------|-----------------------------------|
| RA Table | R_a0x    | xCell 0 R_A 0 | I2   | 0   | 32768 | 67      | mΩ   | Cell 0 resistance at grid point 0 |
| RA Table | R_a0x    | xCell 0 R_A 1 | I2   | 0   | 32768 | 71      | mΩ   | Cell 0 resistance at grid point 1 |
| RA Table | R_a0x    | xCell 0 R_A 2 | I2   | 0   | 32768 | 83      | mΩ   | Cell 0 resistance at grid point 2 |
| RA Table | R_a0x    | xCell 0 R_A 3 | I2   | 0   | 32768 | 110     | mΩ   | Cell 0 resistance at grid point 3 |
| RA Table | R_a0x    | xCell 0 R_A 4 | I2   | 0   | 32768 | 96      | mΩ   | Cell 0 resistance at grid point 4 |
| RA Table | R_a0x    | xCell 0 R_A 5 | I2   | 0   | 32768 | 77      | mΩ   | Cell 0 resistance at grid point 5 |
| RA Table | R_a0x    | xCell 0 R_A 6 | I2   | 0   | 32768 | 96      | mΩ   | Cell 0 resistance at grid point 6 |

| Class    | Subclass | Name           | Type | Min | Max   | Default | Unit | Description                        |
|----------|----------|----------------|------|-----|-------|---------|------|------------------------------------|
| RA Table | R_a0x    | xCell 0 R_A 7  | I2   | 0   | 32768 | 86      | mΩ   | Cell 0 resistance at grid point 7  |
| RA Table | R_a0x    | xCell 0 R_A 8  | I2   | 0   | 32768 | 84      | mΩ   | Cell 0 resistance at grid point 8  |
| RA Table | R_a0x    | xCell 0 R_A 9  | I2   | 0   | 32768 | 82      | mΩ   | Cell 0 resistance at grid point 9  |
| RA Table | R_a0x    | xCell 0 R_A 10 | I2   | 0   | 32768 | 81      | mΩ   | Cell 0 resistance at grid point 10 |
| RA Table | R_a0x    | xCell 0 R_A 11 | I2   | 0   | 32768 | 92      | mΩ   | Cell 0 resistance at grid point 11 |
| RA Table | R_a0x    | xCell 0 R_A 12 | I2   | 0   | 32768 | 103     | mΩ   | Cell 0 resistance at grid point 12 |
| RA Table | R_a0x    | xCell 0 R_A 13 | I2   | 0   | 32768 | 123     | mΩ   | Cell 0 resistance at grid point 13 |
| RA Table | R_a0x    | xCell 0 R_A 14 | I2   | 0   | 32768 | 658     | mΩ   | Cell 0 resistance at grid point 14 |

## 21 Data Flash Access and Format

### 21.1 Data Flash Access

#### 21.1.1 Minimum Voltage

Data flash can only be updated when the measured cell voltage is above the **Valid Update Voltage**.

#### Note

*ManufacturingStatus()[CAL\_EN]* = 1 overrides this voltage requirement so data flash can be updated prior to or during calibration of cell voltage. However, the voltage applied must exceed **Valid Update Voltage** for proper data flash update operation.

| Class | Subclass | Name                 | Type | Min | Max   | Default | Unit | Description                                     |
|-------|----------|----------------------|------|-----|-------|---------|------|-------------------------------------------------|
| Power | Power    | Valid Update Voltage | I2   | 0   | 32767 | 2100    | mV   | Min cell voltage threshold for the flash update |

### 21.2 Data Formats

#### 21.2.1 Unsigned Integer

Unsigned integers are stored without changes as 1-byte, 2-byte, or 4-byte values in little endian byte order.

0

|           |
|-----------|
| U1<br>MSB |
|-----------|

0

1

|           |           |
|-----------|-----------|
| U2<br>LSB | U2<br>MSB |
|-----------|-----------|

0

1

2

3

|             |             |             |             |
|-------------|-------------|-------------|-------------|
| U4 L<br>LSB | U4 L<br>MSB | U4 H<br>LSB | U4 H<br>MSB |
|-------------|-------------|-------------|-------------|

#### 21.2.2 Integer

Integer values are stored in 2's-complement format in 1-byte, 2-byte, or 4-byte values in little endian byte order.

0

|           |
|-----------|
| I1<br>MSB |
|-----------|

0

1

|           |           |
|-----------|-----------|
| I2<br>LSB | I2<br>MSB |
|-----------|-----------|

|             |             |             |             |
|-------------|-------------|-------------|-------------|
| 0           | 1           | 2           | 3           |
| I4 L<br>LSB | I4 L<br>MSB | I4 H<br>LSB | I4 H<br>MSB |

### 21.2.3 Floating Point

Floating point values are stored using the IEEE 754 single-precision, 4-byte format in little endian byte order.

|             |              |                          |                 |
|-------------|--------------|--------------------------|-----------------|
| 0           | 1            | 2                        | 3               |
| Fract [0–7] | Fract [8–15] | Exp[0] +<br>Fract[16–22] | Sign + Exp[1–7] |

Where:

Exp: 8-bit exponent stored with an offset bias of 127. The values 00 and FF have special meaning.

Fract: 23-bit fraction. If the exponent is > 0, then the mantissa is 1.fract. If the exponent is 0, then the mantissa is 0.fract.

The floating point value depends on the special cases of the exponent:

- If the exponent is FF and the fraction is 0, this represents  $\pm$  infinity.
- If the exponent is FF and the fraction is non-0, this represents "not a number" (NaN).
- If the exponent is 00, then the value is a subnormal number represented by  $(-1)^{\text{sign}} \times 2^{-126} \times 0.\text{fraction}$ .
- Otherwise, the value is a normalized number represented by  $(-1)^{\text{sign}} \times 2^{(\text{exponent} - 127)} \times 1.\text{fraction}$ .

### 21.2.4 Hex

Bit register definitions are stored in unsigned integer format.

### 21.2.5 String

String values are stored with the length byte first, followed by a number of data bytes defined with the length byte.

|        |       |     |       |
|--------|-------|-----|-------|
| 0      | 1     | ... | N     |
| Length | Data0 | ... | DataN |

## 22 Data Flash Summary

### 22.1 Data Flash Summary - Subject to Change upon FW build details

Table 22-1. Data Flash Table for bq27z855 v0.09 build 10

| Class       | Subclass            | Address | Name                           | Type | Min Value   | Max Value  | Default | Units |
|-------------|---------------------|---------|--------------------------------|------|-------------|------------|---------|-------|
| Calibration | Voltage             | 0x4000  | Cell Gain                      | I4   | –2147483648 | 2147483647 | 12101   | —     |
| Calibration | Voltage             | 0x4004  | Pack Gain                      | I4   | –2147483648 | 2147483647 | 40253   | —     |
| Calibration | Current             | 0x400C  | CC Gain                        | I4   | –2147483648 | 2147483647 | 2507    | —     |
| Calibration | Current             | 0x46FB  | Calibration Current Period     | H1   | 0x08        | 0x40       | 0x08    | Hex   |
| Calibration | Current Offset      | 0x4014  | CC Offset                      | I2   | –32767      | 32767      | 0       | —     |
| Calibration | Current Offset      | 0x4016  | Coulomb Counter Offset Samples | U2   | 0           | 65535      | 64      | —     |
| Calibration | Current Offset      | 0x4018  | Board Offset                   | I2   | –32768      | 32767      | 0       | —     |
| Calibration | Current Offset      | 0x52C0  | VG CC Offset                   | I2   | –32768      | 32767      | 0       | —     |
| Calibration | Current Offset      | 0x52C2  | VG CC Offset Cal Point         | I2   | –32768      | 32767      | 0       | —     |
| Calibration | Temperature         | 0x401A  | Internal Temp Offset           | I2   | –32768      | 32767      | 0       | 0.1°C |
| Calibration | Temperature         | 0x401C  | External1 Temp Offset          | I2   | –32768      | 32767      | 0       | 0.1°C |
| Calibration | Internal Temp Model | 0x4580  | Int Gain                       | I4   | –32768      | 32767      | –20189  | —     |

**Table 22-1. Data Flash Table for bq27z855 v0.09 build 10 (continued)**

| Class       | Subclass               | Address | Name                     | Type | Min Value | Max Value | Default | Units  |
|-------------|------------------------|---------|--------------------------|------|-----------|-----------|---------|--------|
| Calibration | Internal Temp Model    | 0x4584  | Int base offset          | I2   | –32768    | 32767     | 6142    | —      |
| Calibration | Internal Temp Model    | 0x4586  | Int Minimum AD           | I2   | –32768    | 32767     | 0       | —      |
| Calibration | Internal Temp Model    | 0x4588  | Int Maximum Temp         | I2   | 0         | 32767     | 5754    | 0.1°K  |
| Calibration | Cell Temperature Model | 0x458C  | Coeff a1                 | I2   | –32768    | 32767     | –11130  | —      |
| Calibration | Cell Temperature Model | 0x458E  | Coeff a2                 | I2   | –32768    | 32767     | 19142   | —      |
| Calibration | Cell Temperature Model | 0x4590  | Coeff a3                 | I2   | –32768    | 32767     | –19262  | —      |
| Calibration | Cell Temperature Model | 0x4592  | Coeff a4                 | I2   | –32768    | 32767     | 28203   | —      |
| Calibration | Cell Temperature Model | 0x4594  | Coeff a5                 | I2   | –32768    | 32767     | 892     | —      |
| Calibration | Cell Temperature Model | 0x4596  | Coeff b1                 | I2   | –32768    | 32767     | 328     | —      |
| Calibration | Cell Temperature Model | 0x4598  | Coeff b2                 | I2   | –32768    | 32767     | –605    | —      |
| Calibration | Cell Temperature Model | 0x459A  | Coeff b3                 | I2   | –32768    | 32767     | –2443   | —      |
| Calibration | Cell Temperature Model | 0x459C  | Coeff b4                 | I2   | –32768    | 32767     | 4696    | —      |
| Calibration | Cell Temperature Model | 0x459E  | Rc0                      | I2   | –32768    | 32767     | 6999    | —      |
| Calibration | Cell Temperature Model | 0x45A0  | Adc0                     | I2   | –32768    | 32767     | 6999    | —      |
| Calibration | Cell Temperature Model | 0x45A2  | Rpad                     | I2   | –32768    | 32767     | 1       | —      |
| Calibration | Cell Temperature Model | 0x45A4  | Rint                     | I2   | –32768    | 32767     | 18000   | —      |
| Calibration | Fet Temperature Model  | 0x45A8  | Coeff a1                 | I2   | –32768    | 32767     | –11130  | —      |
| Calibration | Fet Temperature Model  | 0x45AA  | Coeff a2                 | I2   | –32768    | 32767     | 19142   | —      |
| Calibration | Fet Temperature Model  | 0x45AC  | Coeff a3                 | I2   | –32768    | 32767     | –19262  | —      |
| Calibration | Fet Temperature Model  | 0x45AE  | Coeff a4                 | I2   | –32768    | 32767     | 28203   | —      |
| Calibration | Fet Temperature Model  | 0x45B0  | Coeff a5                 | I2   | –32768    | 32767     | 892     | —      |
| Calibration | Fet Temperature Model  | 0x45B2  | Coeff b1                 | I2   | –32768    | 32767     | 328     | —      |
| Calibration | Fet Temperature Model  | 0x45B4  | Coeff b2                 | I2   | –32768    | 32767     | –605    | —      |
| Calibration | Fet Temperature Model  | 0x45B6  | Coeff b3                 | I2   | –32768    | 32767     | –2443   | —      |
| Calibration | Fet Temperature Model  | 0x45B8  | Coeff b4                 | I2   | –32768    | 32767     | 4696    | —      |
| Calibration | Fet Temperature Model  | 0x45BA  | Rc0                      | I2   | –32768    | 32767     | 6999    | —      |
| Calibration | Fet Temperature Model  | 0x45BC  | Adc0                     | I2   | –32768    | 32767     | 6999    | —      |
| Calibration | Fet Temperature Model  | 0x45BE  | Rpad                     | I2   | –32768    | 32767     | 1       | —      |
| Calibration | Fet Temperature Model  | 0x45C0  | Rint                     | I2   | –32768    | 32767     | 18000   | —      |
| Calibration | Current Deadband       | 0x4560  | Deadband                 | U2   | 0         | 255       | 3       | mA     |
| Calibration | Current Deadband       | 0x4562  | Coulomb Counter Deadband | U2   | 0         | 255       | 9       | 116 nV |

**Table 22-1. Data Flash Table for bq27z855 v0.09 build 10 (continued)**

| Class       | Subclass                | Address | Name                             | Type | Min Value | Max Value | Default | Units |
|-------------|-------------------------|---------|----------------------------------|------|-----------|-----------|---------|-------|
| Calibration | Interconnect Resistance | 0x48C0  | Cell                             | I2   | 0         | 1000      | 0       | mΩ    |
| Settings    | Configuration           | 0x4292  | ZT SiAnode Gauging Configuration | H2   | 0x0       | 0x0001    | 0x0000  | Hex   |
| Settings    | Configuration           | 0x42B0  | Ship Mode Config                 | H2   | 0x0       | 0xFFFF    | 0x0001  | Hex   |
| Settings    | Configuration           | 0x45D0  | Charging Configuration           | H2   | 0x0       | 0xFFFF    | 0x0     | Hex   |
| Settings    | Configuration           | 0x45D2  | Charging Configuration Ext       | H2   | 0x00      | 0x0007    | 0x00    | Hex   |
| Settings    | Configuration           | 0x4660  | Elevated Degrade Configuration   | H2   | 0x0       | 0x00FF    | 0x0015  | Hex   |
| Settings    | Configuration           | 0x46D0  | HMAC-SHA2 Challenge Size         | U1   | 0         | 32        | 1       | —     |
| Settings    | Configuration           | 0x4722  | FET Options                      | H2   | 0x0       | 0x00FF    | 0x0020  | Hex   |
| Settings    | Configuration           | 0x4724  | Sbs Gauging Configuration        | H2   | 0x0       | 0x003F    | 0x0004  | Hex   |
| Settings    | Configuration           | 0x4726  | Sbs Configuration                | H2   | 0x0       | 0x00FF    | 0x0020  | Hex   |
| Settings    | Configuration           | 0x4728  | Auth Config                      | H2   | 0x0       | 0x001E    | 0x0000  | Hex   |
| Settings    | Configuration           | 0x472A  | Power Config                     | H2   | 0x0       | 0x7D7F    | 0x0000  | Hex   |
| Settings    | Configuration           | 0x472E  | IO Config                        | H2   | 0x0       | 0x001F    | 0x0000  | Hex   |
| Settings    | Configuration           | 0x4780  | Temperature Enable               | H2   | 0x0       | 0x003F    | 0x0003  | Hex   |
| Settings    | Configuration           | 0x4782  | Ext TMP Temperature Enable       | H2   | 0x0       | 0x00FF    | 0x00FF  | Hex   |
| Settings    | Configuration           | 0x4784  | Temperature Mode                 | H2   | 0x0       | 0x003F    | 0x0001  | Hex   |
| Settings    | Configuration           | 0x4786  | Ext TMP Temperature Mode         | H2   | 0x0       | 0x00FF    | 0x0004  | Hex   |
| Settings    | Configuration           | 0x4788  | DA Configuration                 | H2   | 0x0       | 0xFFFF    | 0x001C  | Hex   |
| Settings    | Configuration           | 0x47C0  | DZT Gauging Configuration        | H2   | 0x0       | 0x0001    | 0x0000  | Hex   |
| Settings    | Configuration           | 0x47DC  | SOC Flag Config A                | H2   | 0x0       | 0x0FFF    | 0x0C8C  | Hex   |
| Settings    | Configuration           | 0x47DE  | SOC Flag Config B                | H2   | 0x0       | 0x00FF    | 0x008C  | Hex   |
| Settings    | Configuration           | 0x4890  | IT Gauging Configuration         | H2   | 0x0       | 0xFFFF    | 0xD0FE  | Hex   |
| Settings    | Configuration           | 0x4894  | IT Gauging Ext                   | H2   | 0x0000    | 0x83FF    | 0x005A  | Hex   |
| Settings    | GPIO                    | 0x4760  | Pres pin number                  | H1   | 0x0       | 0xFF      | 0xC3    | —     |
| Settings    | GPIO                    | 0x4762  | Disconnect pin number            | H1   | 0x0       | 0xFF      | 0x0     | —     |
| Settings    | GPIO                    | 0x4764  | Emergency Shutdown pin number    | H1   | 0x0       | 0xFF      | 0x0     | —     |
| Settings    | GPIO                    | 0x4765  | IO Shutdown pin number           | H1   | 0x0       | 0xFF      | 0x0     | —     |
| Settings    | GPIO                    | 0x4766  | BTP pin number                   | H1   | 0x0       | 0xFF      | 0x0     | —     |
| Settings    | GPIO                    | 0x4767  | BTP pin config                   | H1   | 0x0       | 0x02      | 0x02    | Hex   |
| Settings    | GPIO                    | 0x4768  | GPIO_PF pin number               | H1   | 0x0       | 0xFF      | 0x0     | —     |
| Settings    | GPIO                    | 0x476A  | Ship Exit pin number             | U1   | 0         | 255       | 7       | —     |
| Settings    | GPIO                    | 0x476C  | GPIO_INT Enable                  | H1   | 0x0       | 0x73      | 0x40    | Hex   |
| Settings    | GPIO                    | 0x476D  | GPIO_INT Output Enable           | H1   | 0x0       | 0x73      | 0x40    | Hex   |
| Settings    | GPIO                    | 0x476E  | GPIO_INT Default Out             | H1   | 0x0       | 0x73      | 0x0     | Hex   |
| Settings    | GPIO                    | 0x476F  | Sealed Access Config             | H1   | 0x0       | 0x73      | 0x40    | Hex   |
| Settings    | Fuse                    | 0x4720  | GPIO Timeout                     | U2   | 0         | 65535     | 30      | s     |
| Settings    | BTP                     | 0x4730  | Init Discharge Set               | I2   | 0         | 32767     | 150     | mAh   |
| Settings    | BTP                     | 0x4732  | Init Charge Set                  | I2   | 0         | 32767     | 175     | mAh   |
| Settings    | BTP                     | 0x4734  | Init Charge SoC Set              | U2   | 0         | 100       | 10      | %     |
| Settings    | BTP                     | 0x4736  | Init Discharge SoC Set           | U2   | 0         | 100       | 5       | %     |
| Settings    | Flag Map                | 0x473A  | Set Up 1 Configuration           | H2   | 0x0000    | 0xFFFF    | 0x0000  | Hex   |
| Settings    | Flag Map                | 0x473C  | Set Up 1 pin number              | H1   | 0x0       | 0xFF      | 0x0     | —     |
| Settings    | Flag Map                | 0x473E  | Set Up 2 Configuration           | H2   | 0x0000    | 0xFFFF    | 0x0000  | Hex   |
| Settings    | Flag Map                | 0x4740  | Set Up 2 pin number              | H1   | 0x0       | 0xFF      | 0x0     | —     |
| Settings    | Flag Map                | 0x4742  | Set Up 3 Configuration           | H2   | 0x0000    | 0xFFFF    | 0x0000  | Hex   |
| Settings    | Flag Map                | 0x4744  | Set Up 3 pin number              | H1   | 0x0       | 0xFF      | 0x0     | —     |
| Settings    | Flag Map                | 0x4746  | Set Up 4 Configuration           | H2   | 0x0000    | 0xFFFF    | 0x0000  | Hex   |
| Settings    | Flag Map                | 0x4748  | Set Up 4 pin number              | H1   | 0x0       | 0xFF      | 0x0     | —     |

**Table 22-1. Data Flash Table for bq27z855 v0.09 build 10 (continued)**

| Class    | Subclass          | Address | Name                          | Type | Min Value | Max Value | Default | Units |
|----------|-------------------|---------|-------------------------------|------|-----------|-----------|---------|-------|
| Settings | I2C               | 0x474A  | Address                       | H1   | 0x0       | 0xFF      | 0xAA    | —     |
| Settings | I2C               | 0x474B  | Address Check                 | H1   | 0x0       | 0xFF      | 0x56    | —     |
| Settings | Sealed Access     | 0x474E  | DF Read Only Timeout          | U2   | 0         | 255       | 10      | s     |
| Settings | Sealed Access     | 0x4750  | MfgInfoC Write Timeout        | U1   | 0         | 255       | 10      | s     |
| Settings | Lifetimes         | 0x4820  | Lifetimes Configuration       | H2   | 0x0       | 0x00FF    | 0x0000  | Hex   |
| Settings | Lifetimes         | 0x4823  | Time RSOC Threshold A         | U1   | 0         | 100       | 95      | %     |
| Settings | Lifetimes         | 0x4824  | Time RSOC Threshold B         | U1   | 0         | 100       | 90      | %     |
| Settings | Lifetimes         | 0x4825  | Time RSOC Threshold C         | U1   | 0         | 100       | 80      | %     |
| Settings | Lifetimes         | 0x4826  | Time RSOC Threshold D         | U1   | 0         | 100       | 50      | %     |
| Settings | Lifetimes         | 0x4827  | Time RSOC Threshold E         | U1   | 0         | 100       | 20      | %     |
| Settings | Lifetimes         | 0x4828  | Time RSOC Threshold F         | U1   | 0         | 100       | 10      | %     |
| Settings | Lifetimes         | 0x4829  | Time RSOC Threshold G         | U1   | 0         | 100       | 5       | %     |
| Settings | Lifetimes         | 0x482A  | Temperature Hold-off Time     | U2   | 0         | 255       | 5       | s     |
| Settings | Lifetimes         | 0x482C  | LFT_T0 Temp                   | I2   | 2332      | 3932      | 2632    | 0.1°K |
| Settings | Lifetimes         | 0x482E  | Hysteresis Temp LFT_T0        | I2   | 0         | 150       | 10      | 0.1°K |
| Settings | Lifetimes         | 0x4830  | LFT_T1 Temp                   | I2   | 2332      | 3932      | 2732    | 0.1°K |
| Settings | Lifetimes         | 0x4832  | Hysteresis Temp LFT_T1        | I2   | 0         | 150       | 10      | 0.1°K |
| Settings | Lifetimes         | 0x4834  | LFT_T2 Temp                   | I2   | 2332      | 3932      | 2852    | 0.1°K |
| Settings | Lifetimes         | 0x4836  | Hysteresis Temp LFT_T2        | I2   | 0         | 150       | 10      | 0.1°K |
| Settings | Lifetimes         | 0x4838  | LFT_T5 Temp                   | I2   | 2332      | 3932      | 2932    | 0.1°K |
| Settings | Lifetimes         | 0x483A  | Hysteresis Temp LFT_T5        | I2   | 0         | 150       | 10      | 0.1°K |
| Settings | Lifetimes         | 0x483C  | LFT_T6 Temp                   | I2   | 2332      | 3932      | 2982    | 0.1°K |
| Settings | Lifetimes         | 0x483E  | Hysteresis Temp LFT_T6        | I2   | 0         | 150       | 10      | 0.1°K |
| Settings | Lifetimes         | 0x4840  | LFT_T3 Temp                   | I2   | 2332      | 3932      | 3032    | 0.1°K |
| Settings | Lifetimes         | 0x4842  | Hysteresis Temp LFT_T3        | I2   | 0         | 150       | 10      | 0.1°K |
| Settings | Lifetimes         | 0x4844  | LFT_T4 Temp                   | I2   | 2332      | 3932      | 3282    | 0.1°K |
| Settings | Lifetimes         | 0x4846  | Hysteresis Temp LFT_T4        | I2   | 0         | 150       | 10      | 0.1°K |
| Settings | Protection        | 0x44D0  | Enabled Protections A         | H1   | 0x0       | 0xFF      | 0xFF    | Hex   |
| Settings | Protection        | 0x44D1  | Enabled Protections B         | H1   | 0x0       | 0xFF      | 0xFF    | Hex   |
| Settings | Protection        | 0x44D2  | Enabled Protections C         | H1   | 0x0       | 0xFF      | 0xD5    | Hex   |
| Settings | Protection        | 0x44D3  | Enabled Protections D         | H1   | 0x0       | 0xFF      | 0xCF    | Hex   |
| Settings | Protection        | 0x455C  | Protection Configuration      | H2   | 0x0       | 0x000F    | 0x0000  | Hex   |
| Settings | Permanent Failure | 0x4460  | Enabled PF A                  | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Settings | Permanent Failure | 0x4461  | Enabled PF B                  | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Settings | Permanent Failure | 0x4462  | Enabled PF C                  | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Settings | Permanent Failure | 0x4463  | Enabled PF D                  | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Settings | Smart Temperature | 0x4798  | Mid Point Temp                | I2   | 2332      | 3932      | 2982    | 0.1°K |
| Settings | AFE               | 0x479C  | ZVCHG Exit Threshold          | I2   | 0         | 4000      | 2400    | mV    |
| Settings | AFE               | 0x47A0  | OCC                           | H1   | 0x0       | 0x7F      | 0x3C    | Hex   |
| Settings | AFE               | 0x47A1  | OCD                           | H1   | 0x0       | 0x7F      | 0x3C    | Hex   |
| Settings | AFE               | 0x47A2  | Short Circuit Discharge       | H1   | 0x0       | 0x7F      | 0x7F    | Hex   |
| Settings | AFE               | 0x47A3  | Under Voltage                 | H1   | 0x0       | 0x7F      | 0x28    | Hex   |
| Settings | AFE               | 0x47A4  | Over Voltage                  | H1   | 0x0       | 0x7F      | 0x64    | Hex   |
| Settings | AFE               | 0x47A5  | Current Charge Wake           | H1   | 0x70      | 0x7F      | 0x74    | Hex   |
| Settings | AFE               | 0x47A6  | Current Discharge Wake        | H1   | 0x70      | 0x7F      | 0x74    | Hex   |
| Settings | AFE               | 0x47A7  | OCC Delay                     | H1   | 0x0       | 0x7F      | 0x07    | Hex   |
| Settings | AFE               | 0x47A8  | OCD Delay                     | H1   | 0x0       | 0x7F      | 0x07    | Hex   |
| Settings | AFE               | 0x47A9  | Short Circuit Discharge Delay | H1   | 0x0       | 0x07      | 0x07    | Hex   |
| Settings | AFE               | 0x47AA  | Under Voltage Delay           | H1   | 0x0       | 0xFF      | 0xFF    | Hex   |
| Settings | AFE               | 0x47AB  | Over Voltage Delay            | H1   | 0x0       | 0xFF      | 0xFF    | Hex   |
| Settings | AFE               | 0x47AC  | Over Voltage Delay Hi         | H1   | 0x0       | 0x1F      | 0x1F    | Hex   |

**Table 22-1. Data Flash Table for bq27z855 v0.09 build 10 (continued)**

| Class                     | Subclass             | Address | Name                        | Type | Min Value | Max Value | Default | Units |
|---------------------------|----------------------|---------|-----------------------------|------|-----------|-----------|---------|-------|
| Settings                  | AFE                  | 0x47AD  | CD Wake Delay               | H1   | 0x0       | 0x1F      | 0x1F    | Hex   |
| Settings                  | AFE                  | 0x47AE  | CC Wake Delay               | H1   | 0x0       | 0x1F      | 0x1F    | Hex   |
| Settings                  | Manufacturing        | 0x53D8  | Mfg Status init             | H2   | 0x0       | 0xFFFF    | 0x0000  | Hex   |
| Settings                  | Accumulated Charge   | 0x4850  | Accum Discharge Threshold   | I2   | –32768    | 0         | –1000   | mAh   |
| Settings                  | Accumulated Charge   | 0x4852  | Accum Charge Threshold      | I2   | 0         | 32767     | 1000    | mAh   |
| Advanced Charge Algorithm | Temperature Ranges   | 0x45D4  | T1 Temp                     | I2   | 2332      | 3932      | 2732    | 0.1°K |
| Advanced Charge Algorithm | Temperature Ranges   | 0x45D6  | Hysteresis Temp T1          | I2   | 0         | 150       | 10      | 0.1°K |
| Advanced Charge Algorithm | Temperature Ranges   | 0x45D8  | T2 Temp                     | I2   | 2332      | 3932      | 2852    | 0.1°K |
| Advanced Charge Algorithm | Temperature Ranges   | 0x45DA  | Hysteresis Temp T2          | I2   | 0         | 150       | 10      | 0.1°K |
| Advanced Charge Algorithm | Temperature Ranges   | 0x45DC  | T5 Temp                     | I2   | 2332      | 3932      | 2932    | 0.1°K |
| Advanced Charge Algorithm | Temperature Ranges   | 0x45DE  | Hysteresis Temp T5          | I2   | 0         | 150       | 10      | 0.1°K |
| Advanced Charge Algorithm | Temperature Ranges   | 0x45E0  | T6 Temp                     | I2   | 2332      | 3932      | 2982    | 0.1°K |
| Advanced Charge Algorithm | Temperature Ranges   | 0x45E2  | Hysteresis Temp T6          | I2   | 0         | 150       | 10      | 0.1°K |
| Advanced Charge Algorithm | Temperature Ranges   | 0x45E4  | T3 Temp                     | I2   | 2332      | 3932      | 3032    | 0.1°K |
| Advanced Charge Algorithm | Temperature Ranges   | 0x45E6  | Hysteresis Temp T3          | I2   | 0         | 150       | 10      | 0.1°K |
| Advanced Charge Algorithm | Temperature Ranges   | 0x45E8  | T4 Temp                     | I2   | 2332      | 3932      | 3282    | 0.1°K |
| Advanced Charge Algorithm | Temperature Ranges   | 0x45EA  | Hysteresis Temp T4          | I2   | 0         | 150       | 10      | 0.1°K |
| Advanced Charge Algorithm | Pre-Charging         | 0x45EC  | Current                     | I2   | 0         | 32767     | 88      | mA    |
| Advanced Charge Algorithm | Maintenance Charging | 0x45EE  | Current                     | I2   | 0         | 32767     | 44      | mA    |
| Advanced Charge Algorithm | Voltage Range        | 0x45F0  | Precharge Start Voltage     | I2   | 0         | 32767     | 2500    | mV    |
| Advanced Charge Algorithm | Voltage Range        | 0x45F2  | Charging Voltage Low        | I2   | 0         | 32767     | 2900    | mV    |
| Advanced Charge Algorithm | Voltage Range        | 0x45F4  | Charging Voltage Med        | I2   | 0         | 32767     | 3600    | mV    |
| Advanced Charge Algorithm | Voltage Range        | 0x45F6  | Charging Voltage High       | I2   | 0         | 32767     | 4000    | mV    |
| Advanced Charge Algorithm | Voltage Range        | 0x45F8  | Charging Voltage Hysteresis | U2   | 0         | 255       | 0       | mV    |
| Advanced Charge Algorithm | SoC Range            | 0x45FA  | Charging SoC Med            | U2   | 0         | 100       | 50      | %     |
| Advanced Charge Algorithm | SoC Range            | 0x45FC  | Charging SoC High           | U2   | 0         | 100       | 75      | %     |
| Advanced Charge Algorithm | SoC Range            | 0x45FE  | Charging SoC Hysteresis     | U2   | 0         | 100       | 1       | %     |
| Advanced Charge Algorithm | Degrade Mode 1       | 0x4600  | Cycle Threshold             | U2   | 0         | 65535     | 50      | —     |
| Advanced Charge Algorithm | Degrade Mode 1       | 0x4602  | SOH Threshold               | U2   | 0         | 100       | 95      | %     |
| Advanced Charge Algorithm | Degrade Mode 1       | 0x4604  | Runtime Threshold           | U2   | 0         | 65535     | 8760    | h     |
| Advanced Charge Algorithm | Degrade Mode 1       | 0x4606  | Voltage Degradation         | I2   | 0         | 32767     | 10      | mV    |
| Advanced Charge Algorithm | Degrade Mode 1       | 0x4608  | Current Degradation         | U2   | 0         | 100       | 10      | %     |

**Table 22-1. Data Flash Table for bq27z855 v0.09 build 10 (continued)**

| Class                     | Subclass                 | Address | Name                         | Type | Min Value | Max Value | Default | Units   |
|---------------------------|--------------------------|---------|------------------------------|------|-----------|-----------|---------|---------|
| Advanced Charge Algorithm | Degrade Mode 2           | 0x460C  | Cycle Threshold              | U2   | 0         | 65535     | 150     | —       |
| Advanced Charge Algorithm | Degrade Mode 2           | 0x460E  | SOH Threshold                | U2   | 0         | 100       | 80      | %       |
| Advanced Charge Algorithm | Degrade Mode 2           | 0x4610  | Runtime Threshold            | U2   | 0         | 65535     | 17520   | h       |
| Advanced Charge Algorithm | Degrade Mode 2           | 0x4612  | Voltage Degradation          | I2   | 0         | 32767     | 40      | mV      |
| Advanced Charge Algorithm | Degrade Mode 2           | 0x4614  | Current Degradation          | U2   | 0         | 100       | 20      | %       |
| Advanced Charge Algorithm | Degrade Mode 3           | 0x4618  | Cycle Threshold              | U2   | 0         | 65535     | 350     | —       |
| Advanced Charge Algorithm | Degrade Mode 3           | 0x461A  | SOH Threshold                | U2   | 0         | 100       | 60      | %       |
| Advanced Charge Algorithm | Degrade Mode 3           | 0x461C  | Runtime Threshold            | U2   | 0         | 65535     | 26280   | h       |
| Advanced Charge Algorithm | Degrade Mode 3           | 0x461E  | Voltage Degradation          | I2   | 0         | 32767     | 70      | mV      |
| Advanced Charge Algorithm | Degrade Mode 3           | 0x4620  | Current Degradation          | U2   | 0         | 100       | 40      | %       |
| Advanced Charge Algorithm | Degrade Mode             | 0x4624  | Cycle Count Start Runtime    | U2   | 0         | 255       | 1       | —       |
| Advanced Charge Algorithm | Degrade Mode             | 0x4626  | Runtime Update Interval      | U2   | 0         | 18        | 10      | h       |
| Advanced Charge Algorithm | Degrade Mode             | 0x5100  | Runtime Degrade              | U2   | 0         | 65535     | 0       | hours   |
| Advanced Charge Algorithm | CS Degrade               | 0x4628  | Temperature Threshold        | I2   | 0         | 32767     | 3232    | 0.1°K   |
| Advanced Charge Algorithm | CS Degrade               | 0x462A  | Voltage Threshold            | I2   | 0         | 32767     | 4200    | mV      |
| Advanced Charge Algorithm | CS Degrade               | 0x462C  | Time Interval                | U2   | 0         | 14400     | 300     | s       |
| Advanced Charge Algorithm | CS Degrade               | 0x462E  | Delta Voltage                | I2   | 0         | 32767     | 25      | mV      |
| Advanced Charge Algorithm | CS Degrade               | 0x4630  | Min CV                       | I2   | 0         | 32767     | 3000    | mV      |
| Advanced Charge Algorithm | Charge Voltage Override  | 0x4634  | CHGV Override Max            | I2   | 0         | 32767     | 4500    | mV      |
| Advanced Charge Algorithm | Charge Voltage Override  | 0x4636  | CHGV Override Min            | I2   | 0         | 32767     | 2000    | mV      |
| Advanced Charge Algorithm | Charge Current Override  | 0x4638  | CHGI Override Max            | I2   | 0         | 32767     | 4500    | mA      |
| Advanced Charge Algorithm | Charge Current Override  | 0x463A  | CHGI Override Min            | I2   | 0         | 32767     | 100     | mA      |
| Advanced Charge Algorithm | Termination Config       | 0x463C  | Charge Term Taper Current    | I2   | 0         | 32767     | 250     | mA      |
| Advanced Charge Algorithm | Termination Config       | 0x463E  | Minimum Taper Charge         | I2   | 0         | 1000      | 64      | mAh/256 |
| Advanced Charge Algorithm | Termination Config       | 0x4640  | Charge Term Voltage Offset   | I2   | 0         | 32767     | 75      | mV      |
| Advanced Charge Algorithm | Termination Config       | 0x4642  | Charge Term Charging Voltage | I2   | 0         | 32767     | 4200    | mV      |
| Advanced Charge Algorithm | Charging Rate of Change  | 0x464C  | Current Rate                 | I2   | 1         | 1000      | 1       | steps   |
| Advanced Charge Algorithm | Charging Rate of Change  | 0x464E  | Voltage Rate                 | I2   | 1         | 255       | 1       | steps   |
| Advanced Charge Algorithm | Charge Loss Compensation | 0x4652  | CCC Current Threshold        | I2   | 0         | 32767     | 3520    | mA      |
| Advanced Charge Algorithm | Charge Loss Compensation | 0x4654  | CCC Voltage Threshold        | I2   | 0         | 32767     | 4200    | mV      |
| Advanced Charge Algorithm | IR Correction            | 0x4656  | Averaging Interval           | U2   | 1         | 255       | 12      | s       |

**Table 22-1. Data Flash Table for bq27z855 v0.09 build 10 (continued)**

| Class                     | Subclass                    | Address | Name                    | Type | Min Value | Max Value | Default | Units |
|---------------------------|-----------------------------|---------|-------------------------|------|-----------|-----------|---------|-------|
| Advanced Charge Algorithm | Sealed Write                | 0x4658  | Hold Off                | U2   | 0         | 65535     | 2       | s     |
| Advanced Charge Algorithm | Sealed Write                | 0x465A  | Lockout                 | U2   | 0         | 65535     | 7200    | s     |
| Advanced Charge Algorithm | Low Temp Charging           | 0x50D0  | Voltage                 | I2   | 0         | 32767     | 4000    | mV    |
| Advanced Charge Algorithm | Low Temp Charging           | 0x50DA  | Current Low             | I2   | 0         | 32767     | 132     | mA    |
| Advanced Charge Algorithm | Low Temp Charging           | 0x50DC  | Current Med             | I2   | 0         | 32767     | 352     | mA    |
| Advanced Charge Algorithm | Low Temp Charging           | 0x50DE  | Current High            | I2   | 0         | 32767     | 264     | mA    |
| Advanced Charge Algorithm | Standard Temp Low Charging  | 0x50D2  | Voltage                 | I2   | 0         | 32767     | 4200    | mV    |
| Advanced Charge Algorithm | Standard Temp Low Charging  | 0x50E0  | Current Low             | I2   | 0         | 32767     | 441     | mA    |
| Advanced Charge Algorithm | Standard Temp Low Charging  | 0x50E2  | Current Med             | I2   | 0         | 32767     | 892     | mA    |
| Advanced Charge Algorithm | Standard Temp Low Charging  | 0x50E4  | Current High            | I2   | 0         | 32767     | 667     | mA    |
| Advanced Charge Algorithm | Standard Temp High Charging | 0x50D4  | Voltage                 | I2   | 0         | 32767     | 4200    | mV    |
| Advanced Charge Algorithm | Standard Temp High Charging | 0x50E6  | Current Low             | I2   | 0         | 32767     | 441     | mA    |
| Advanced Charge Algorithm | Standard Temp High Charging | 0x50E8  | Current Med             | I2   | 0         | 32767     | 892     | mA    |
| Advanced Charge Algorithm | Standard Temp High Charging | 0x50EA  | Current High            | I2   | 0         | 32767     | 667     | mA    |
| Advanced Charge Algorithm | High Temp Charging          | 0x50D6  | Voltage                 | I2   | 0         | 32767     | 4000    | mV    |
| Advanced Charge Algorithm | High Temp Charging          | 0x50EC  | Current Low             | I2   | 0         | 32767     | 225     | mA    |
| Advanced Charge Algorithm | High Temp Charging          | 0x50EE  | Current Med             | I2   | 0         | 32767     | 441     | mA    |
| Advanced Charge Algorithm | High Temp Charging          | 0x50F0  | Current High            | I2   | 0         | 32767     | 333     | mA    |
| Advanced Charge Algorithm | Rec Temp Charging           | 0x50D8  | Voltage                 | I2   | 0         | 32767     | 4100    | mV    |
| Advanced Charge Algorithm | Rec Temp Charging           | 0x50F2  | Current Low             | I2   | 0         | 32767     | 559     | mA    |
| Advanced Charge Algorithm | Rec Temp Charging           | 0x50F4  | Current Med             | I2   | 0         | 32767     | 1000    | mA    |
| Advanced Charge Algorithm | Rec Temp Charging           | 0x50F6  | Current High            | I2   | 0         | 32767     | 784     | mA    |
| Advanced Charge Algorithm | Charger                     | 0x4410  | Minimum System Voltage  | I2   | 0         | 32767     | 3000    | mV    |
| Advanced Charge Algorithm | Charger                     | 0x4418  | CHGR_DET On Voltage     | I2   | -32768    | 32767     | 0       | mV    |
| Advanced Charge Algorithm | Charger                     | 0x441A  | CHGR_DET Off Voltage    | I2   | -32768    | 32767     | 10      | mV    |
| Advanced Charge Algorithm | Charger                     | 0x441E  | Temperature Threshold 0 | I2   | 2982      | 3882      | 3232    | 0.1°K |
| Advanced Charge Algorithm | Charger                     | 0x4420  | Temperature Derate 0    | U2   | 1         | 99        | 10      | %     |
| Advanced Charge Algorithm | Charger                     | 0x4422  | Temperature Threshold 1 | I2   | 2982      | 3882      | 3332    | 0.1°K |
| Advanced Charge Algorithm | Charger                     | 0x4424  | Temperature Derate 1    | U2   | 1         | 99        | 20      | %     |
| Advanced Charge Algorithm | Charger                     | 0x4426  | Temperature Threshold 2 | I2   | 2982      | 3882      | 3432    | 0.1°K |
| Advanced Charge Algorithm | Charger                     | 0x4428  | Temperature Derate 2    | U2   | 1         | 99        | 50      | %     |

**Table 22-1. Data Flash Table for bq27z855 v0.09 build 10 (continued)**

| Class                     | Subclass         | Address | Name                           | Type | Min Value | Max Value | Default | Units |
|---------------------------|------------------|---------|--------------------------------|------|-----------|-----------|---------|-------|
| Advanced Charge Algorithm | Charger          | 0x442A  | Temperature Threshold 3        | I2   | 2982      | 3882      | 3532    | 0.1°K |
| Advanced Charge Algorithm | Charger          | 0x442C  | Temperature Derate 3           | U2   | 1         | 99        | 70      | %     |
| Advanced Charge Algorithm | Charger          | 0x442E  | Temperature Threshold 4        | I2   | 2982      | 3882      | 3632    | 0.1°K |
| Advanced Charge Algorithm | Charger          | 0x4430  | Temperature Derate 4           | U2   | 1         | 99        | 80      | %     |
| Advanced Charge Algorithm | Charger          | 0x4432  | Temperature Threshold 5        | I2   | 2982      | 3882      | 3732    | 0.1°K |
| Advanced Charge Algorithm | Charger          | 0x4434  | Temperature Derate 5           | U2   | 1         | 99        | 95      | %     |
| Advanced Charge Algorithm | Charger          | 0x4436  | Temp Derate Hysteresis         | I2   | 0         | 150       | 10      | 0.1°C |
| Advanced Charge Algorithm | Charger          | 0x4438  | Pack Bat Diff 0                | I2   | 10        | 2500      | 100     | mV    |
| Advanced Charge Algorithm | Charger          | 0x443A  | Pack Bat Derate 0              | U2   | 1         | 99        | 10      | %     |
| Advanced Charge Algorithm | Charger          | 0x443C  | Pack Bat Diff 1                | I2   | 10        | 2500      | 200     | mV    |
| Advanced Charge Algorithm | Charger          | 0x443E  | Pack Bat Derate 1              | U2   | 1         | 99        | 20      | %     |
| Advanced Charge Algorithm | Charger          | 0x4440  | Pack Bat Diff 2                | I2   | 10        | 2500      | 500     | mV    |
| Advanced Charge Algorithm | Charger          | 0x4442  | Pack Bat Derate 2              | U2   | 1         | 99        | 35      | %     |
| Advanced Charge Algorithm | Charger          | 0x4444  | Pack Bat Diff 3                | I2   | 10        | 2500      | 800     | mV    |
| Advanced Charge Algorithm | Charger          | 0x4446  | Pack Bat Derate 3              | U2   | 1         | 99        | 50      | %     |
| Advanced Charge Algorithm | Charger          | 0x4448  | Pack Bat Diff 4                | I2   | 10        | 2500      | 1000    | mV    |
| Advanced Charge Algorithm | Charger          | 0x444A  | Pack Bat Derate 4              | U2   | 1         | 99        | 70      | %     |
| Advanced Charge Algorithm | Charger          | 0x444C  | Pack Bat Diff 5                | I2   | 10        | 2500      | 1500    | mV    |
| Advanced Charge Algorithm | Charger          | 0x444E  | Pack Bat Derate 5              | U2   | 1         | 99        | 90      | %     |
| Advanced Charge Algorithm | Charger          | 0x4450  | Pack Bat Derate Hysteresis     | I2   | 0         | 150       | 10      | mV    |
| Advanced Charge Algorithm | Charger          | 0x4452  | Configuration                  | H2   | 0x00      | 0x000F    | 0x000D  | Hex   |
| Advanced Charge Algorithm | Elevated Degrade | 0x4662  | ERM Reset RSoC Threshold       | U2   | 0         | 100       | 85      | %     |
| Advanced Charge Algorithm | Elevated Degrade | 0x4664  | ERM Reset Voltage Threshold    | I2   | 0         | 32767     | 3700    | mV    |
| Advanced Charge Algorithm | Elevated Degrade | 0x4666  | ERM RSoC Threshold             | U2   | 0         | 100       | 90      | %     |
| Advanced Charge Algorithm | Elevated Degrade | 0x4668  | ERM Voltage Threshold          | I2   | 0         | 32767     | 4000    | mV    |
| Advanced Charge Algorithm | Elevated Degrade | 0x466A  | ERM Time Threshold             | U2   | 0         | 65535     | 10000   | hours |
| Advanced Charge Algorithm | Elevated Degrade | 0x466C  | ERETM RSoC Threshold           | U2   | 0         | 100       | 90      | %     |
| Advanced Charge Algorithm | Elevated Degrade | 0x466E  | ERETM Voltage Threshold        | I2   | 0         | 32767     | 4200    | mV    |
| Advanced Charge Algorithm | Elevated Degrade | 0x4670  | ERETM Temperature Threshold    | I2   | 2332      | 3932      | 3123    | 0.1°K |
| Advanced Charge Algorithm | Elevated Degrade | 0x4672  | EVTM Voltage Low Threshold     | I2   | 0         | 32767     | 4300    | mV    |
| Advanced Charge Algorithm | Elevated Degrade | 0x4674  | EVTM Temperature Low Threshold | I2   | 2332      | 3932      | 3123    | 0.1°K |

**Table 22-1. Data Flash Table for bq27z855 v0.09 build 10 (continued)**

| Class                     | Subclass         | Address | Name                            | Type | Min Value | Max Value | Default | Units |
|---------------------------|------------------|---------|---------------------------------|------|-----------|-----------|---------|-------|
| Advanced Charge Algorithm | Elevated Degrade | 0x4676  | EVLTM TTH1                      | U2   | 0         | 65535     | 480     | hours |
| Advanced Charge Algorithm | Elevated Degrade | 0x4678  | EVLTM CV Delta 1                | I2   | 0         | 32767     | 50      | mV    |
| Advanced Charge Algorithm | Elevated Degrade | 0x467A  | EVLTM TTH2                      | U2   | 0         | 65535     | 720     | hours |
| Advanced Charge Algorithm | Elevated Degrade | 0x467C  | EVLTM CV Delta 2                | I2   | 0         | 32767     | 100     | mV    |
| Advanced Charge Algorithm | Elevated Degrade | 0x467E  | EVLTM TTH3                      | U2   | 0         | 65535     | 1680    | hours |
| Advanced Charge Algorithm | Elevated Degrade | 0x4680  | EVLTM CV Delta 3                | I2   | 0         | 32767     | 150     | mV    |
| Advanced Charge Algorithm | Elevated Degrade | 0x4682  | EVLTM TTH4                      | U2   | 0         | 65535     | 2880    | hours |
| Advanced Charge Algorithm | Elevated Degrade | 0x4684  | EVLTM CV Delta 4                | I2   | 0         | 32767     | 200     | mV    |
| Advanced Charge Algorithm | Elevated Degrade | 0x4686  | EVLTM TTH5                      | U2   | 0         | 65535     | 5760    | hours |
| Advanced Charge Algorithm | Elevated Degrade | 0x4688  | EVLTM CV Delta 5                | I2   | 0         | 32767     | 300     | mV    |
| Advanced Charge Algorithm | Elevated Degrade | 0x468A  | EVTM Voltage Mid Threshold      | I2   | 0         | 32767     | 4200    | mV    |
| Advanced Charge Algorithm | Elevated Degrade | 0x468C  | EVTM Temperature Mid Threshold  | I2   | 2332      | 3932      | 3173    | 0.1°K |
| Advanced Charge Algorithm | Elevated Degrade | 0x468E  | EVMTM TTH1                      | U2   | 0         | 65535     | 240     | hours |
| Advanced Charge Algorithm | Elevated Degrade | 0x4690  | EVMTM CV Delta 1                | I2   | 0         | 32767     | 50      | mV    |
| Advanced Charge Algorithm | Elevated Degrade | 0x4692  | EVMTM TTH2                      | U2   | 0         | 65535     | 480     | hours |
| Advanced Charge Algorithm | Elevated Degrade | 0x4694  | EVMTM CV Delta 2                | I2   | 0         | 32767     | 100     | mV    |
| Advanced Charge Algorithm | Elevated Degrade | 0x4696  | EVMTM TTH3                      | U2   | 0         | 65535     | 1440    | hours |
| Advanced Charge Algorithm | Elevated Degrade | 0x4698  | EVMTM CV Delta 3                | I2   | 0         | 32767     | 150     | mV    |
| Advanced Charge Algorithm | Elevated Degrade | 0x469A  | EVMTM TTH4                      | U2   | 0         | 65535     | 2160    | hours |
| Advanced Charge Algorithm | Elevated Degrade | 0x469C  | EVMTM CV Delta 4                | I2   | 0         | 32767     | 200     | mV    |
| Advanced Charge Algorithm | Elevated Degrade | 0x469E  | EVMTM TTH5                      | U2   | 0         | 65535     | 2400    | hours |
| Advanced Charge Algorithm | Elevated Degrade | 0x46A0  | EVMTM CV Delta 5                | I2   | 0         | 32767     | 300     | mV    |
| Advanced Charge Algorithm | Elevated Degrade | 0x46A2  | EVTM Voltage High Threshold     | I2   | 0         | 32767     | 4100    | mV    |
| Advanced Charge Algorithm | Elevated Degrade | 0x46A4  | EVTM Temperature High Threshold | I2   | 2332      | 3932      | 3223    | 0.1°K |
| Advanced Charge Algorithm | Elevated Degrade | 0x46A6  | EVHTM TTH1                      | U2   | 0         | 65535     | 24      | hours |
| Advanced Charge Algorithm | Elevated Degrade | 0x46A8  | EVHTM CV Delta 1                | I2   | 0         | 32767     | 50      | mV    |
| Advanced Charge Algorithm | Elevated Degrade | 0x46AA  | EVHTM TTH2                      | U2   | 0         | 65535     | 120     | hours |
| Advanced Charge Algorithm | Elevated Degrade | 0x46AC  | EVHTM CV Delta 2                | I2   | 0         | 32767     | 100     | mV    |
| Advanced Charge Algorithm | Elevated Degrade | 0x46AE  | EVHTM TTH3                      | U2   | 0         | 65535     | 336     | hours |
| Advanced Charge Algorithm | Elevated Degrade | 0x46B0  | EVHTM CV Delta 3                | I2   | 0         | 32767     | 200     | mV    |
| Advanced Charge Algorithm | Elevated Degrade | 0x46B2  | EVHTM TTH4                      | U2   | 0         | 65535     | 480     | hours |

**Table 22-1. Data Flash Table for bq27z855 v0.09 build 10 (continued)**

| Class                     | Subclass           | Address | Name                            | Type | Min Value | Max Value | Default | Units  |
|---------------------------|--------------------|---------|---------------------------------|------|-----------|-----------|---------|--------|
| Advanced Charge Algorithm | Elevated Degrade   | 0x46B4  | EVHTM CV Delta 4                | I2   | 0         | 32767     | 250     | mV     |
| Advanced Charge Algorithm | Elevated Degrade   | 0x46B6  | EVHTM TTH5                      | U2   | 0         | 65535     | 720     | hours  |
| Advanced Charge Algorithm | Elevated Degrade   | 0x46B8  | EVHTM CV Delta 5                | I2   | 0         | 32767     | 300     | mV     |
| Advanced Charge Algorithm | Elevated Degrade   | 0x46BA  | ERETM Temperature Max Threshold | I2   | 2332      | 3932      | 3223    | 0.1°K  |
| Advanced Charge Algorithm | Elevated Degrade   | 0x46BC  | ERETM Time Threshold            | U2   | 0         | 65535     | 10000   | hours  |
| Advanced Charge Algorithm | Elevated Degrade   | 0x46BE  | ERETM Charging Voltage          | I2   | 0         | 32767     | 3900    | mV     |
| Advanced Charge Algorithm | Elevated Degrade   | 0x5110  | Accumulated ERM Time            | U2   | 0         | 65535     | 0       | hours  |
| Advanced Charge Algorithm | Elevated Degrade   | 0x5112  | Accumulated ERETm Time          | U2   | 0         | 65535     | 0       | hours  |
| Advanced Charge Algorithm | Elevated Degrade   | 0x5114  | Accumulated EVLTM Time          | U2   | 0         | 65535     | 0       | hours  |
| Advanced Charge Algorithm | Elevated Degrade   | 0x5116  | Accumulated EVMTM Time          | U2   | 0         | 65535     | 0       | hours  |
| Advanced Charge Algorithm | Elevated Degrade   | 0x5118  | Accumulated EVHTM Time          | U2   | 0         | 65535     | 0       | hours  |
| Advanced Charge Algorithm | Elevated Degrade   | 0x511A  | ERETM Status                    | H2   | 0x0       | 0x00FF    | 0x0     | —      |
| Advanced Charge Algorithm | Elevated Degrade   | 0x511C  | EVTM Degrade                    | H2   | 0x0       | 0xFFFF    | 0x0     | —      |
| Advanced Charge Algorithm | Elevated Degrade   | 0x511E  | EVTM Active                     | H2   | 0x0       | 0xFFFF    | 0x0     | —      |
| Power                     | Shutdown           | 0x46E0  | Shutdown Voltage                | I2   | 0         | 32767     | 1750    | mV     |
| Power                     | Shutdown           | 0x46E2  | Shutdown Time                   | U2   | 0         | 255       | 10      | s      |
| Power                     | Shutdown           | 0x46E4  | IO Shutdown Delay               | U2   | 0         | 255       | 1       | 250 ms |
| Power                     | Shutdown           | 0x46E6  | IO Shutdown Timeout             | U2   | 0         | 255       | 8       | 250 ms |
| Power                     | Shutdown           | 0x46E8  | PF Shutdown Voltage             | I2   | 0         | 32767     | 1750    | mV     |
| Power                     | Shutdown           | 0x46EA  | PF Shutdown Time                | U2   | 0         | 255       | 10      | s      |
| Power                     | Shutdown           | 0x46EC  | PS Shutdown Voltage             | I2   | 0         | 32767     | 2500    | mV     |
| Power                     | Shutdown           | 0x46EE  | PS NoLoadResCap Threshold       | I2   | 0         | 32767     | 0       | mAh    |
| Power                     | Shutdown           | 0x46F2  | Low RSoC Shutdown Threshold     | U1   | 0         | 100       | 2       | %      |
| Power                     | Shutdown           | 0x46F3  | Low RSoC Shutdown Time          | U1   | 0         | 255       | 24      | h      |
| Power                     | Shutdown           | 0x46F4  | Charger Present Threshold       | I2   | 0         | 32767     | 3000    | mV     |
| Power                     | Power              | 0x46F0  | Valid Update Voltage            | I2   | 0         | 32767     | 2800    | mV     |
| Power                     | Sleep              | 0x46F6  | Sleep Current                   | I2   | 0         | 32767     | 10      | mA     |
| Power                     | Sleep              | 0x46F8  | Low Current                     | I2   | 0         | 32767     | 5       | mA     |
| Power                     | Sleep              | 0x46FA  | Low Current Period              | H1   | 0x08      | 0x40      | 0x08    | Hex    |
| Power                     | Sleep              | 0x46FC  | Bus Timeout                     | U2   | 0         | 255       | 0       | s      |
| Power                     | Sleep              | 0x4702  | Measure Time                    | U2   | 8         | 8         | 8       | s      |
| Power                     | Sleep              | 0x4704  | Current Time                    | U2   | 8         | 64        | 16      | s      |
| Power                     | Ship               | 0x4706  | FET Off Time                    | U2   | 0         | 127       | 10      | s      |
| Power                     | Ship               | 0x4708  | Delay                           | U2   | 0         | 254       | 20      | s      |
| Power                     | Ship               | 0x470A  | Auto Ship Time                  | U2   | 0         | 65535     | 1440    | min    |
| Power                     | Power Off          | 0x470C  | Timeout                         | U2   | 0         | 65535     | 30      | min    |
| Power                     | Manual FET Control | 0x470E  | MFC Delay                       | U1   | 0         | 255       | 60      | 0.25 s |
| Power                     | System Present     | 0x470F  | SYS_PRES Delay                  | U1   | 1         | 8         | 1       | Counts |
| Power                     | ENAB               | 0x4710  | Startup ENAB Hold Time          | U1   | 0         | 100       | 0       | s      |
| Power                     | Storage Mode       | 0x42C0  | Storage Delay                   | U1   | 0         | 255       | 10      | s      |
| Power                     | Storage Mode       | 0x42C1  | Storage Ignore SMB Delay        | U1   | 0         | 255       | 30      | s      |

**Table 22-1. Data Flash Table for bq27z855 v0.09 build 10 (continued)**

| Class       | Subclass          | Address | Name                        | Type | Min Value | Max Value | Default | Units  |
|-------------|-------------------|---------|-----------------------------|------|-----------|-----------|---------|--------|
| Power       | Power Events      | 0x5340  | No Of Shutdowns             | U1   | 0         | 255       | 0       | events |
| Power       | Power Events      | 0x5341  | No Of Partial Resets        | U1   | 0         | 255       | 0       | events |
| Power       | Power Events      | 0x5342  | No Of Full Resets           | U1   | 0         | 255       | 0       | events |
| Power       | Power Events      | 0x5343  | No Of Wdt Resets            | U1   | 0         | 255       | 0       | events |
| Power       | IATA              | 0x4800  | IATA Config                 | H2   | 0x0       | 0x00FF    | 0x0003  | —      |
| Power       | IATA              | 0x4802  | IATA Delay Time             | U2   | 0         | 65535     | 10      | s      |
| Power       | IATA              | 0x4804  | IATA RSOC Threshold         | U2   | 0         | 100       | 30      | %      |
| Power       | IATA              | 0x4806  | IATA DeltaV Threshold       | U2   | 0         | 255       | 50      | mV     |
| Power       | IATA              | 0x4808  | IATA Delta RSOC             | U2   | 0         | 100       | 3       | %      |
| Power       | IATA              | 0x480A  | IATA Wake AbsRsoc           | U2   | 0         | 100       | 10      | %      |
| Power       | IATA              | 0x480C  | IATA Min Temperature        | I2   | 2332      | 3932      | 2832    | 0.1°K  |
| Power       | IATA              | 0x480E  | IATA Max Temperature        | I2   | 2332      | 3932      | 3132    | 0.1°K  |
| Power       | IATA              | 0x4810  | IATA Min Voltage            | I2   | 0         | 32767     | 3000    | mV     |
| Power       | IATA              | 0x4812  | IATA Max Voltage            | I2   | 0         | 32767     | 3600    | mV     |
| Power       | IATA STORE        | 0x5130  | IATA RM mAh                 | I2   | 0         | 32767     | 0       | mAh    |
| Power       | IATA STORE        | 0x5132  | IATA RM cWh                 | I2   | 0         | 32767     | 0       | cWh    |
| Power       | IATA STORE        | 0x5134  | IATA FCC mAh                | I2   | 0         | 32767     | 0       | mAh    |
| Power       | IATA STORE        | 0x5136  | IATA FCC cWh                | I2   | 0         | 32767     | 0       | cWh    |
| Power       | IATA STORE        | 0x5138  | IATA Flag                   | H2   | 0x0       | 0x00FF    | 0x0     | —      |
| Power       | Unintended Wakeup | 0x4870  | Delay                       | U2   | 0         | 240       | 2       | s      |
| Power       | Unintended Wakeup | 0x4872  | Count                       | U2   | 0         | 255       | 3       | —      |
| Power       | Ship Mode         | 0x42B2  | Voltage Threshold           | I2   | 0         | 32767     | 2300    | mV     |
| Power       | Ship Mode         | 0x42B4  | Voltage Delay               | U2   | 0         | 255       | 10      | s      |
| Power       | Ship Mode         | 0x42BA  | Command Delay               | U1   | 0         | 255       | 0       | s      |
| Power       | Shelf Mode        | 0x42B6  | Voltage Threshold           | I2   | 0         | 32767     | 2200    | mV     |
| Power       | Shelf Mode        | 0x42B8  | Voltage Delay               | U2   | 0         | 255       | 10      | s      |
| System Data | Manufacturer Data | 0x4100  | Manufacturer Info A Length  | U1   | 1         | 32        | 32      | —      |
| System Data | Manufacturer Data | 0x4101  | Manufacturer Info Block A01 | H1   | 0x0       | 0xFF      | 0x61    | Hex    |
| System Data | Manufacturer Data | 0x4102  | Manufacturer Info Block A02 | H1   | 0x0       | 0xFF      | 0x62    | Hex    |
| System Data | Manufacturer Data | 0x4103  | Manufacturer Info Block A03 | H1   | 0x0       | 0xFF      | 0x63    | Hex    |
| System Data | Manufacturer Data | 0x4104  | Manufacturer Info Block A04 | H1   | 0x0       | 0xFF      | 0x64    | Hex    |
| System Data | Manufacturer Data | 0x4105  | Manufacturer Info Block A05 | H1   | 0x0       | 0xFF      | 0x65    | Hex    |
| System Data | Manufacturer Data | 0x4106  | Manufacturer Info Block A06 | H1   | 0x0       | 0xFF      | 0x66    | Hex    |
| System Data | Manufacturer Data | 0x4107  | Manufacturer Info Block A07 | H1   | 0x0       | 0xFF      | 0x67    | Hex    |
| System Data | Manufacturer Data | 0x4108  | Manufacturer Info Block A08 | H1   | 0x0       | 0xFF      | 0x68    | Hex    |
| System Data | Manufacturer Data | 0x4109  | Manufacturer Info Block A09 | H1   | 0x0       | 0xFF      | 0x69    | Hex    |
| System Data | Manufacturer Data | 0x410A  | Manufacturer Info Block A10 | H1   | 0x0       | 0xFF      | 0x6A    | Hex    |
| System Data | Manufacturer Data | 0x410B  | Manufacturer Info Block A11 | H1   | 0x0       | 0xFF      | 0x6B    | Hex    |
| System Data | Manufacturer Data | 0x410C  | Manufacturer Info Block A12 | H1   | 0x0       | 0xFF      | 0x6C    | Hex    |
| System Data | Manufacturer Data | 0x410D  | Manufacturer Info Block A13 | H1   | 0x0       | 0xFF      | 0x6D    | Hex    |
| System Data | Manufacturer Data | 0x410E  | Manufacturer Info Block A14 | H1   | 0x0       | 0xFF      | 0x6E    | Hex    |
| System Data | Manufacturer Data | 0x410F  | Manufacturer Info Block A15 | H1   | 0x0       | 0xFF      | 0x6F    | Hex    |
| System Data | Manufacturer Data | 0x4110  | Manufacturer Info Block A16 | H1   | 0x0       | 0xFF      | 0x70    | Hex    |
| System Data | Manufacturer Data | 0x4111  | Manufacturer Info Block A17 | H1   | 0x0       | 0xFF      | 0x71    | Hex    |
| System Data | Manufacturer Data | 0x4112  | Manufacturer Info Block A18 | H1   | 0x0       | 0xFF      | 0x72    | Hex    |
| System Data | Manufacturer Data | 0x4113  | Manufacturer Info Block A19 | H1   | 0x0       | 0xFF      | 0x73    | Hex    |
| System Data | Manufacturer Data | 0x4114  | Manufacturer Info Block A20 | H1   | 0x0       | 0xFF      | 0x74    | Hex    |
| System Data | Manufacturer Data | 0x4115  | Manufacturer Info Block A21 | H1   | 0x0       | 0xFF      | 0x75    | Hex    |
| System Data | Manufacturer Data | 0x4116  | Manufacturer Info Block A22 | H1   | 0x0       | 0xFF      | 0x76    | Hex    |
| System Data | Manufacturer Data | 0x4117  | Manufacturer Info Block A23 | H1   | 0x0       | 0xFF      | 0x77    | Hex    |

**Table 22-1. Data Flash Table for bq27z855 v0.09 build 10 (continued)**

| Class       | Subclass            | Address | Name                        | Type | Min Value | Max Value | Default | Units |
|-------------|---------------------|---------|-----------------------------|------|-----------|-----------|---------|-------|
| System Data | Manufacturer Data   | 0x4118  | Manufacturer Info Block A24 | H1   | 0x0       | 0xFF      | 0x7A    | Hex   |
| System Data | Manufacturer Data   | 0x4119  | Manufacturer Info Block A25 | H1   | 0x0       | 0xFF      | 0x78    | Hex   |
| System Data | Manufacturer Data   | 0x411A  | Manufacturer Info Block A26 | H1   | 0x0       | 0xFF      | 0x79    | Hex   |
| System Data | Manufacturer Data   | 0x411B  | Manufacturer Info Block A27 | H1   | 0x0       | 0xFF      | 0x30    | Hex   |
| System Data | Manufacturer Data   | 0x411C  | Manufacturer Info Block A28 | H1   | 0x0       | 0xFF      | 0x31    | Hex   |
| System Data | Manufacturer Data   | 0x411D  | Manufacturer Info Block A29 | H1   | 0x0       | 0xFF      | 0x32    | Hex   |
| System Data | Manufacturer Data   | 0x411E  | Manufacturer Info Block A30 | H1   | 0x0       | 0xFF      | 0x33    | Hex   |
| System Data | Manufacturer Data   | 0x411F  | Manufacturer Info Block A31 | H1   | 0x0       | 0xFF      | 0x34    | Hex   |
| System Data | Manufacturer Data   | 0x4120  | Manufacturer Info Block A32 | H1   | 0x0       | 0xFF      | 0x35    | Hex   |
| System Data | Manufacturer Info B | 0x4121  | Manufacturer Info B Length  | U1   | 1         | 32        | 32      | —     |
| System Data | Manufacturer Info B | 0x4122  | Manufacturer Info Block B01 | H1   | 0x0       | 0xFF      | 0x01    | Hex   |
| System Data | Manufacturer Info B | 0x4123  | Manufacturer Info Block B02 | H1   | 0x0       | 0xFF      | 0x23    | Hex   |
| System Data | Manufacturer Info B | 0x4124  | Manufacturer Info Block B03 | H1   | 0x0       | 0xFF      | 0x45    | Hex   |
| System Data | Manufacturer Info B | 0x4125  | Manufacturer Info Block B04 | H1   | 0x0       | 0xFF      | 0x67    | Hex   |
| System Data | Manufacturer Info B | 0x4126  | Manufacturer Info Block B05 | H1   | 0x0       | 0xFF      | 0x89    | Hex   |
| System Data | Manufacturer Info B | 0x4127  | Manufacturer Info Block B06 | H1   | 0x0       | 0xFF      | 0xAB    | Hex   |
| System Data | Manufacturer Info B | 0x4128  | Manufacturer Info Block B07 | H1   | 0x0       | 0xFF      | 0xCD    | Hex   |
| System Data | Manufacturer Info B | 0x4129  | Manufacturer Info Block B08 | H1   | 0x0       | 0xFF      | 0xEF    | Hex   |
| System Data | Manufacturer Info B | 0x412A  | Manufacturer Info Block B09 | H1   | 0x0       | 0xFF      | 0x10    | Hex   |
| System Data | Manufacturer Info B | 0x412B  | Manufacturer Info Block B10 | H1   | 0x0       | 0xFF      | 0x11    | Hex   |
| System Data | Manufacturer Info B | 0x412C  | Manufacturer Info Block B11 | H1   | 0x0       | 0xFF      | 0x12    | Hex   |
| System Data | Manufacturer Info B | 0x412D  | Manufacturer Info Block B12 | H1   | 0x0       | 0xFF      | 0x13    | Hex   |
| System Data | Manufacturer Info B | 0x412E  | Manufacturer Info Block B13 | H1   | 0x0       | 0xFF      | 0x14    | Hex   |
| System Data | Manufacturer Info B | 0x412F  | Manufacturer Info Block B14 | H1   | 0x0       | 0xFF      | 0x15    | Hex   |
| System Data | Manufacturer Info B | 0x4130  | Manufacturer Info Block B15 | H1   | 0x0       | 0xFF      | 0x16    | Hex   |
| System Data | Manufacturer Info B | 0x4131  | Manufacturer Info Block B16 | H1   | 0x0       | 0xFF      | 0x17    | Hex   |
| System Data | Manufacturer Info B | 0x4132  | Manufacturer Info Block B17 | H1   | 0x0       | 0xFF      | 0x18    | Hex   |
| System Data | Manufacturer Info B | 0x4133  | Manufacturer Info Block B18 | H1   | 0x0       | 0xFF      | 0x19    | Hex   |
| System Data | Manufacturer Info B | 0x4134  | Manufacturer Info Block B19 | H1   | 0x0       | 0xFF      | 0x1A    | Hex   |
| System Data | Manufacturer Info B | 0x4135  | Manufacturer Info Block B20 | H1   | 0x0       | 0xFF      | 0x1B    | Hex   |
| System Data | Manufacturer Info B | 0x4136  | Manufacturer Info Block B21 | H1   | 0x0       | 0xFF      | 0x1C    | Hex   |
| System Data | Manufacturer Info B | 0x4137  | Manufacturer Info Block B22 | H1   | 0x0       | 0xFF      | 0x1C    | Hex   |
| System Data | Manufacturer Info B | 0x4138  | Manufacturer Info Block B23 | H1   | 0x0       | 0xFF      | 0x1D    | Hex   |
| System Data | Manufacturer Info B | 0x4139  | Manufacturer Info Block B24 | H1   | 0x0       | 0xFF      | 0x1E    | Hex   |
| System Data | Manufacturer Info B | 0x413A  | Manufacturer Info Block B25 | H1   | 0x0       | 0xFF      | 0x1F    | Hex   |
| System Data | Manufacturer Info B | 0x413B  | Manufacturer Info Block B26 | H1   | 0x0       | 0xFF      | 0x20    | Hex   |
| System Data | Manufacturer Info B | 0x413C  | Manufacturer Info Block B27 | H1   | 0x0       | 0xFF      | 0x21    | Hex   |
| System Data | Manufacturer Info B | 0x413D  | Manufacturer Info Block B28 | H1   | 0x0       | 0xFF      | 0x22    | Hex   |
| System Data | Manufacturer Info B | 0x413E  | Manufacturer Info Block B29 | H1   | 0x0       | 0xFF      | 0x23    | Hex   |
| System Data | Manufacturer Info B | 0x413F  | Manufacturer Info Block B30 | H1   | 0x0       | 0xFF      | 0x24    | Hex   |
| System Data | Manufacturer Info B | 0x4140  | Manufacturer Info Block B31 | H1   | 0x0       | 0xFF      | 0x25    | Hex   |
| System Data | Manufacturer Info B | 0x4141  | Manufacturer Info Block B32 | H1   | 0x0       | 0xFF      | 0x26    | Hex   |
| System Data | Manufacturer Info C | 0x4142  | Manufacturer Info C Length  | U1   | 1         | 32        | 32      | —     |
| System Data | Manufacturer Info C | 0x4143  | Manufacturer Info Block C01 | H1   | 0x0       | 0xFF      | 0x01    | Hex   |
| System Data | Manufacturer Info C | 0x4144  | Manufacturer Info Block C02 | H1   | 0x0       | 0xFF      | 0x23    | Hex   |
| System Data | Manufacturer Info C | 0x4145  | Manufacturer Info Block C03 | H1   | 0x0       | 0xFF      | 0x45    | Hex   |
| System Data | Manufacturer Info C | 0x4146  | Manufacturer Info Block C04 | H1   | 0x0       | 0xFF      | 0x67    | Hex   |
| System Data | Manufacturer Info C | 0x4147  | Manufacturer Info Block C05 | H1   | 0x0       | 0xFF      | 0x89    | Hex   |
| System Data | Manufacturer Info C | 0x4148  | Manufacturer Info Block C06 | H1   | 0x0       | 0xFF      | 0xAB    | Hex   |
| System Data | Manufacturer Info C | 0x4149  | Manufacturer Info Block C07 | H1   | 0x0       | 0xFF      | 0xCD    | Hex   |
| System Data | Manufacturer Info C | 0x414A  | Manufacturer Info Block C08 | H1   | 0x0       | 0xFF      | 0xEF    | Hex   |

**Table 22-1. Data Flash Table for bq27z855 v0.09 build 10 (continued)**

| Class             | Subclass            | Address | Name                        | Type | Min Value | Max Value | Default           | Units |
|-------------------|---------------------|---------|-----------------------------|------|-----------|-----------|-------------------|-------|
| System Data       | Manufacturer Info C | 0x414B  | Manufacturer Info Block C09 | H1   | 0x0       | 0xFF      | 0x10              | Hex   |
| System Data       | Manufacturer Info C | 0x414C  | Manufacturer Info Block C10 | H1   | 0x0       | 0xFF      | 0x11              | Hex   |
| System Data       | Manufacturer Info C | 0x414D  | Manufacturer Info Block C11 | H1   | 0x0       | 0xFF      | 0x12              | Hex   |
| System Data       | Manufacturer Info C | 0x414E  | Manufacturer Info Block C12 | H1   | 0x0       | 0xFF      | 0x13              | Hex   |
| System Data       | Manufacturer Info C | 0x414F  | Manufacturer Info Block C13 | H1   | 0x0       | 0xFF      | 0x14              | Hex   |
| System Data       | Manufacturer Info C | 0x4150  | Manufacturer Info Block C14 | H1   | 0x0       | 0xFF      | 0x15              | Hex   |
| System Data       | Manufacturer Info C | 0x4151  | Manufacturer Info Block C15 | H1   | 0x0       | 0xFF      | 0x16              | Hex   |
| System Data       | Manufacturer Info C | 0x4152  | Manufacturer Info Block C16 | H1   | 0x0       | 0xFF      | 0x17              | Hex   |
| System Data       | Manufacturer Info C | 0x4153  | Manufacturer Info Block C17 | H1   | 0x0       | 0xFF      | 0x18              | Hex   |
| System Data       | Manufacturer Info C | 0x4154  | Manufacturer Info Block C18 | H1   | 0x0       | 0xFF      | 0x19              | Hex   |
| System Data       | Manufacturer Info C | 0x4155  | Manufacturer Info Block C19 | H1   | 0x0       | 0xFF      | 0x1A              | Hex   |
| System Data       | Manufacturer Info C | 0x4156  | Manufacturer Info Block C20 | H1   | 0x0       | 0xFF      | 0x1B              | Hex   |
| System Data       | Manufacturer Info C | 0x4157  | Manufacturer Info Block C21 | H1   | 0x0       | 0xFF      | 0x1C              | Hex   |
| System Data       | Manufacturer Info C | 0x4158  | Manufacturer Info Block C22 | H1   | 0x0       | 0xFF      | 0x1C              | Hex   |
| System Data       | Manufacturer Info C | 0x4159  | Manufacturer Info Block C23 | H1   | 0x0       | 0xFF      | 0x1D              | Hex   |
| System Data       | Manufacturer Info C | 0x415A  | Manufacturer Info Block C24 | H1   | 0x0       | 0xFF      | 0x1E              | Hex   |
| System Data       | Manufacturer Info C | 0x415B  | Manufacturer Info Block C25 | H1   | 0x0       | 0xFF      | 0x1F              | Hex   |
| System Data       | Manufacturer Info C | 0x415C  | Manufacturer Info Block C26 | H1   | 0x0       | 0xFF      | 0x20              | Hex   |
| System Data       | Manufacturer Info C | 0x415D  | Manufacturer Info Block C27 | H1   | 0x0       | 0xFF      | 0x21              | Hex   |
| System Data       | Manufacturer Info C | 0x415E  | Manufacturer Info Block C28 | H1   | 0x0       | 0xFF      | 0x22              | Hex   |
| System Data       | Manufacturer Info C | 0x415F  | Manufacturer Info Block C29 | H1   | 0x0       | 0xFF      | 0x23              | Hex   |
| System Data       | Manufacturer Info C | 0x4160  | Manufacturer Info Block C30 | H1   | 0x0       | 0xFF      | 0x24              | Hex   |
| System Data       | Manufacturer Info C | 0x4161  | Manufacturer Info Block C31 | H1   | 0x0       | 0xFF      | 0x25              | Hex   |
| System Data       | Manufacturer Info C | 0x4162  | Manufacturer Info Block C32 | H1   | 0x0       | 0xFF      | 0x26              | Hex   |
| System Data       | Integrity           | 0x4170  | Static DF Signature         | H2   | 0x0       | 0x7FFF    | 0x0               | Hex   |
| System Data       | Integrity           | 0x4172  | Static Chem DF Signature    | H2   | 0x0       | 0x7FFF    | 0x73B5            | Hex   |
| System Data       | Integrity           | 0x4174  | All DF Signature            | H2   | 0x0       | 0x7FFF    | 0x0               | Hex   |
| SBS Configuration | Data                | 0x40C0  | Manufacture Date            | U2   | 0         | 65535     | 0                 | date  |
| SBS Configuration | Data                | 0x40C2  | Serial Number               | H2   | 0x0       | 0xFFFF    | 0x0001            | Hex   |
| SBS Configuration | Data                | 0x40C4  | Manufacturer Name           | S21  | x         | x         | Texas Instruments | —     |
| SBS Configuration | Data                | 0x40D9  | Device Name                 | S21  | x         | x         | bq27z855          | —     |
| SBS Configuration | Data                | 0x40EE  | Device Chemistry            | S5   | x         | x         | LION              | —     |
| SBS Configuration | Data                | 0x4860  | Remaining AH Cap. Alarm     | I2   | 0         | 32767     | 300               | mAh   |
| SBS Configuration | Data                | 0x4862  | Remaining WH Cap. Alarm     | I2   | 0         | 32767     | 432               | cWh   |
| SBS Configuration | Data                | 0x4864  | Remaining Time Alarm        | U2   | 0         | 65535     | 10                | min   |
| SBS Configuration | Data                | 0x4866  | Initial Battery Mode        | H2   | 0x0       | 0xFFFF    | 0x0081            | Hex   |
| SBS Configuration | Data                | 0x4868  | Specification Information   | H2   | 0x0       | 0xFFFF    | 0x0031            | Hex   |
| SBS Configuration | Data                | 0x4880  | VLB Remaining Cap. mAh      | I2   | 0         | 32767     | 176               | mAh   |
| SBS Configuration | Data                | 0x4882  | VLB Remaining Cap. cWh      | I2   | 0         | 32767     | 254               | cWh   |
| SBS Configuration | Data                | 0x4884  | VLB Voltage                 | I2   | 0         | 5000      | 2850              | mV    |
| SBS Configuration | Data                | 0x4886  | VLB Hold Time               | U2   | 0         | 255       | 2                 | s     |
| SBS Configuration | Data                | 0x4888  | VLB Timeout                 | U2   | 0         | 255       | 120               | s     |
| Lifetimes         | Voltage             | 0x5140  | Cell Max Voltage            | I2   | 0         | 32767     | 0                 | mV    |
| Lifetimes         | Voltage             | 0x5142  | Cell Min Voltage            | I2   | 0         | 32767     | 32767             | mV    |
| Lifetimes         | Current             | 0x5144  | Max Charge Current          | I2   | 0         | 32767     | 0                 | mA    |
| Lifetimes         | Current             | 0x5146  | Max Discharge Current       | I2   | –32768    | 0         | 0                 | mA    |
| Lifetimes         | Current             | 0x5148  | Max Avg Dsg Current         | I2   | –32768    | 0         | 0                 | mA    |
| Lifetimes         | Current             | 0x514C  | Max Avg Dsg Power           | I2   | –32768    | 0         | 0                 | cW    |
| Lifetimes         | Temperature-Relax   | 0x5150  | Max Temp Cell               | U1   | 0         | 255       | 0                 | °C    |
| Lifetimes         | Temperature-Relax   | 0x5151  | Min Temp Cell               | I1   | –128      | 127       | 127               | °C    |

**Table 22-1. Data Flash Table for bq27z855 v0.09 build 10 (continued)**

| Class     | Subclass              | Address | Name                | Type | Min Value | Max Value | Default | Units  |
|-----------|-----------------------|---------|---------------------|------|-----------|-----------|---------|--------|
| Lifetimes | Temperature-Relax     | 0x5152  | Max Delta Cell Temp | U1   | 0         | 255       | 0       | °C     |
| Lifetimes | Temperature-Relax     | 0x5153  | Max Temp Int Sensor | U1   | 0         | 255       | 0       | °C     |
| Lifetimes | Temperature-Relax     | 0x5154  | Min Temp Int Sensor | I1   | -128      | 127       | 127     | °C     |
| Lifetimes | Temperature-Relax     | 0x5155  | Max Temp Fet        | U1   | 0         | 255       | 0       | °C     |
| Lifetimes | Temperature-Relax     | 0x5156  | Max Temp TS1        | U1   | 0         | 255       | 0       | °C     |
| Lifetimes | Temperature-Relax     | 0x5157  | Min Temp TS1        | I1   | -128      | 127       | 127     | °C     |
| Lifetimes | Temperature-Charge    | 0x5158  | Max Temp Cell       | U1   | 0         | 255       | 0       | °C     |
| Lifetimes | Temperature-Charge    | 0x5159  | Min Temp Cell       | I1   | -128      | 127       | 127     | °C     |
| Lifetimes | Temperature-Charge    | 0x515A  | Max Delta Cell Temp | U1   | 0         | 255       | 0       | °C     |
| Lifetimes | Temperature-Charge    | 0x515B  | Max Temp Int Sensor | U1   | 0         | 255       | 0       | °C     |
| Lifetimes | Temperature-Charge    | 0x515C  | Min Temp Int Sensor | I1   | -128      | 127       | 127     | °C     |
| Lifetimes | Temperature-Charge    | 0x515D  | Max Temp Fet        | U1   | 0         | 255       | 0       | °C     |
| Lifetimes | Temperature-Charge    | 0x515E  | Max Temp TS1        | U1   | 0         | 255       | 0       | °C     |
| Lifetimes | Temperature-Charge    | 0x515F  | Min Temp TS1        | I1   | -128      | 127       | 127     | °C     |
| Lifetimes | Temperature-Discharge | 0x5160  | Max Temp Cell       | U1   | 0         | 255       | 0       | °C     |
| Lifetimes | Temperature-Discharge | 0x5161  | Min Temp Cell       | I1   | -128      | 127       | 127     | °C     |
| Lifetimes | Temperature-Discharge | 0x5162  | Max Delta Cell Temp | U1   | 0         | 255       | 0       | °C     |
| Lifetimes | Temperature-Discharge | 0x5163  | Max Temp Int Sensor | U1   | 0         | 255       | 0       | °C     |
| Lifetimes | Temperature-Discharge | 0x5164  | Min Temp Int Sensor | I1   | -128      | 127       | 127     | °C     |
| Lifetimes | Temperature-Discharge | 0x5165  | Max Temp Fet        | U1   | 0         | 255       | 0       | °C     |
| Lifetimes | Temperature-Discharge | 0x5166  | Max Temp TS1        | U1   | 0         | 255       | 0       | °C     |
| Lifetimes | Temperature-Discharge | 0x5167  | Min Temp TS1        | I1   | -128      | 127       | 127     | °C     |
| Lifetimes | Safety Events         | 0x5168  | No Of COV Events    | U2   | 0         | 32767     | 0       | events |
| Lifetimes | Safety Events         | 0x516A  | Last COV Event      | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes | Safety Events         | 0x516C  | No Of CUV Events    | U2   | 0         | 32767     | 0       | events |
| Lifetimes | Safety Events         | 0x516E  | Last CUV Event      | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes | Safety Events         | 0x5170  | No Of OCD1 Events   | U2   | 0         | 32767     | 0       | events |
| Lifetimes | Safety Events         | 0x5172  | Last OCD1 Event     | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes | Safety Events         | 0x5174  | No Of OCD2 Events   | U2   | 0         | 32767     | 0       | events |
| Lifetimes | Safety Events         | 0x5176  | Last OCD2 Event     | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes | Safety Events         | 0x5178  | No Of OCC1 Events   | U2   | 0         | 32767     | 0       | events |
| Lifetimes | Safety Events         | 0x517A  | Last OCC1 Event     | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes | Safety Events         | 0x517C  | No Of OCC2 Events   | U2   | 0         | 32767     | 0       | events |
| Lifetimes | Safety Events         | 0x517E  | Last OCC2 Event     | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes | Safety Events         | 0x5180  | No Of AOCD Events   | U2   | 0         | 32767     | 0       | events |
| Lifetimes | Safety Events         | 0x5182  | Last AOCD Event     | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes | Safety Events         | 0x5184  | No Of ASCD Events   | U2   | 0         | 32767     | 0       | events |
| Lifetimes | Safety Events         | 0x5186  | Last ASCD Event     | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes | Safety Events         | 0x5188  | No Of AOCC Events   | U2   | 0         | 32767     | 0       | events |
| Lifetimes | Safety Events         | 0x518A  | Last AOCC Event     | U2   | 0         | 32767     | 0       | cycles |
| Lifetimes | Safety Events         | 0x518C  | No Of OTC Events    | U2   | 0         | 32767     | 0       | events |

**Table 22-1. Data Flash Table for bq27z855 v0.09 build 10 (continued)**

| Class     | Subclass        | Address | Name                     | Type | Min Value | Max Value  | Default | Units  |
|-----------|-----------------|---------|--------------------------|------|-----------|------------|---------|--------|
| Lifetimes | Safety Events   | 0x518E  | Last OTC Event           | U2   | 0         | 32767      | 0       | cycles |
| Lifetimes | Safety Events   | 0x5190  | No Of OTD Events         | U2   | 0         | 32767      | 0       | events |
| Lifetimes | Safety Events   | 0x5192  | Last OTD Event           | U2   | 0         | 32767      | 0       | cycles |
| Lifetimes | Safety Events   | 0x5194  | No Of OTF Events         | U2   | 0         | 32767      | 0       | events |
| Lifetimes | Safety Events   | 0x5196  | Last OTF Event           | U2   | 0         | 32767      | 0       | cycles |
| Lifetimes | Charging Events | 0x5198  | No Valid Charge Term     | U2   | 0         | 32767      | 0       | events |
| Lifetimes | Charging Events | 0x519A  | Last Valid Charge Term   | U2   | 0         | 32767      | 0       | cycles |
| Lifetimes | Gauging Events  | 0x519C  | No Of Qmax Updates       | U2   | 0         | 32767      | 0       | events |
| Lifetimes | Gauging Events  | 0x519E  | Last Qmax Update         | U2   | 0         | 32767      | 0       | cycles |
| Lifetimes | Gauging Events  | 0x51A0  | No Of Ra Updates         | U2   | 0         | 32767      | 0       | events |
| Lifetimes | Gauging Events  | 0x51A2  | Last Ra Update           | U2   | 0         | 32767      | 0       | cycles |
| Lifetimes | Gauging Events  | 0x51A4  | No Of Ra Disable         | U2   | 0         | 32767      | 0       | events |
| Lifetimes | Gauging Events  | 0x51A6  | Last Ra Disable          | U2   | 0         | 32767      | 0       | cycles |
| Lifetimes | State of Health | 0x51A8  | Min FCC-SOH mAh          | I2   | 0         | 32767      | 0       | mAh    |
| Lifetimes | State of Health | 0x51AA  | Min FCC-SOH cWh          | I2   | 0         | 32767      | 0       | cWh    |
| Lifetimes | Time            | 0x51AC  | Total Fw Runtime         | U4   | 0         | 4294967295 | 0       | s      |
| Lifetimes | Time            | 0x51B0  | Time Spent In UUT RSOC A | U4   | 0         | 4294967295 | 0       | s      |
| Lifetimes | Time            | 0x51B4  | Time Spent In UUT RSOC B | U4   | 0         | 4294967295 | 0       | s      |
| Lifetimes | Time            | 0x51B8  | Time Spent In UUT RSOC C | U4   | 0         | 4294967295 | 0       | s      |
| Lifetimes | Time            | 0x51BC  | Time Spent In UUT RSOC D | U4   | 0         | 4294967295 | 0       | s      |
| Lifetimes | Time            | 0x51C0  | Time Spent In UUT RSOC E | U4   | 0         | 4294967295 | 0       | s      |
| Lifetimes | Time            | 0x51C4  | Time Spent In UUT RSOC F | U4   | 0         | 4294967295 | 0       | s      |
| Lifetimes | Time            | 0x51C8  | Time Spent In UUT RSOC G | U4   | 0         | 4294967295 | 0       | s      |
| Lifetimes | Time            | 0x51CC  | Time Spent In UUT RSOC H | U4   | 0         | 4294967295 | 0       | s      |
| Lifetimes | Time            | 0x51D0  | Time Spent In UT RSOC A  | U4   | 0         | 4294967295 | 0       | s      |
| Lifetimes | Time            | 0x51D4  | Time Spent In UT RSOC B  | U4   | 0         | 4294967295 | 0       | s      |
| Lifetimes | Time            | 0x51D8  | Time Spent In UT RSOC C  | U4   | 0         | 4294967295 | 0       | s      |
| Lifetimes | Time            | 0x51DC  | Time Spent In UT RSOC D  | U4   | 0         | 4294967295 | 0       | s      |
| Lifetimes | Time            | 0x51E0  | Time Spent In UT RSOC E  | U4   | 0         | 4294967295 | 0       | s      |
| Lifetimes | Time            | 0x51E4  | Time Spent In UT RSOC F  | U4   | 0         | 4294967295 | 0       | s      |
| Lifetimes | Time            | 0x51E8  | Time Spent In UT RSOC G  | U4   | 0         | 4294967295 | 0       | s      |
| Lifetimes | Time            | 0x51EC  | Time Spent In UT RSOC H  | U4   | 0         | 4294967295 | 0       | s      |
| Lifetimes | Time            | 0x51F0  | Time Spent In LT RSOC A  | U4   | 0         | 4294967295 | 0       | s      |
| Lifetimes | Time            | 0x51F4  | Time Spent In LT RSOC B  | U4   | 0         | 4294967295 | 0       | s      |
| Lifetimes | Time            | 0x51F8  | Time Spent In LT RSOC C  | U4   | 0         | 4294967295 | 0       | s      |
| Lifetimes | Time            | 0x51FC  | Time Spent In LT RSOC D  | U4   | 0         | 4294967295 | 0       | s      |
| Lifetimes | Time            | 0x5200  | Time Spent In LT RSOC E  | U4   | 0         | 4294967295 | 0       | s      |

**Table 22-1. Data Flash Table for bq27z855 v0.09 build 10 (continued)**

| Class     | Subclass | Address | Name                     | Type | Min Value | Max Value  | Default | Units |
|-----------|----------|---------|--------------------------|------|-----------|------------|---------|-------|
| Lifetimes | Time     | 0x5204  | Time Spent In LT RSOC F  | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x5208  | Time Spent In LT RSOC G  | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x520C  | Time Spent In LT RSOC H  | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x5210  | Time Spent In STL RSOC A | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x5214  | Time Spent In STL RSOC B | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x5218  | Time Spent In STL RSOC C | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x521C  | Time Spent In STL RSOC D | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x5220  | Time Spent In STL RSOC E | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x5224  | Time Spent In STL RSOC F | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x5228  | Time Spent In STL RSOC G | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x522C  | Time Spent In STL RSOC H | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x5230  | Time Spent In RT RSOC A  | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x5234  | Time Spent In RT RSOC B  | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x5238  | Time Spent In RT RSOC C  | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x523C  | Time Spent In RT RSOC D  | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x5240  | Time Spent In RT RSOC E  | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x5244  | Time Spent In RT RSOC F  | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x5248  | Time Spent In RT RSOC G  | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x524C  | Time Spent In RT RSOC H  | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x5250  | Time Spent In STH RSOC A | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x5254  | Time Spent In STH RSOC B | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x5258  | Time Spent In STH RSOC C | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x525C  | Time Spent In STH RSOC D | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x5260  | Time Spent In STH RSOC E | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x5264  | Time Spent In STH RSOC F | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x5268  | Time Spent In STH RSOC G | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x526C  | Time Spent In STH RSOC H | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x5270  | Time Spent In HT RSOC A  | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x5274  | Time Spent In HT RSOC B  | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x5278  | Time Spent In HT RSOC C  | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes | Time     | 0x527C  | Time Spent In HT RSOC D  | U4   | 0         | 4294967295 | 0       | s     |

**Table 22-1. Data Flash Table for bq27z855 v0.09 build 10 (continued)**

| Class       | Subclass | Address | Name                          | Type | Min Value | Max Value  | Default | Units |
|-------------|----------|---------|-------------------------------|------|-----------|------------|---------|-------|
| Lifetimes   | Time     | 0x5280  | Time Spent In HT RSOC E       | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes   | Time     | 0x5284  | Time Spent In HT RSOC F       | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes   | Time     | 0x5288  | Time Spent In HT RSOC G       | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes   | Time     | 0x528C  | Time Spent In HT RSOC H       | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes   | Time     | 0x5290  | Time Spent In OT RSOC A       | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes   | Time     | 0x5294  | Time Spent In OT RSOC B       | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes   | Time     | 0x5298  | Time Spent In OT RSOC C       | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes   | Time     | 0x529C  | Time Spent In OT RSOC D       | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes   | Time     | 0x52A0  | Time Spent In OT RSOC E       | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes   | Time     | 0x52A4  | Time Spent In OT RSOC F       | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes   | Time     | 0x52A8  | Time Spent In OT RSOC G       | U4   | 0         | 4294967295 | 0       | s     |
| Lifetimes   | Time     | 0x52AC  | Time Spent In OT RSOC H       | U4   | 0         | 4294967295 | 0       | s     |
| Protections | CUV      | 0x44D4  | Threshold                     | I2   | 0         | 32767      | 2500    | mV    |
| Protections | CUV      | 0x44D6  | Delay                         | U2   | 0         | 255        | 2       | s     |
| Protections | CUV      | 0x44D8  | Recovery                      | I2   | 0         | 32767      | 3000    | mV    |
| Protections | CUV      | 0x44FC  | Recovery Charger Present Time | U2   | 0         | 255        | 2       | s     |
| Protections | CUVC     | 0x44DA  | Threshold                     | I2   | 0         | 32767      | 2400    | mV    |
| Protections | CUVC     | 0x44DC  | Delay                         | U2   | 0         | 255        | 2       | s     |
| Protections | CUVC     | 0x44DE  | Recovery                      | I2   | 0         | 32767      | 3000    | mV    |
| Protections | COV      | 0x44E0  | Threshold Low Temp            | I2   | 0         | 32767      | 4300    | mV    |
| Protections | COV      | 0x44E2  | Threshold Standard Temp Low   | I2   | 0         | 32767      | 4300    | mV    |
| Protections | COV      | 0x44E4  | Threshold Standard Temp High  | I2   | 0         | 32767      | 4300    | mV    |
| Protections | COV      | 0x44E6  | Threshold High Temp           | I2   | 0         | 32767      | 4300    | mV    |
| Protections | COV      | 0x44E8  | Threshold Rec Temp            | I2   | 0         | 32767      | 4300    | mV    |
| Protections | COV      | 0x44EA  | Delay                         | U2   | 0         | 255        | 2       | s     |
| Protections | COV      | 0x44EC  | Recovery Low Temp             | I2   | 0         | 32767      | 3900    | mV    |
| Protections | COV      | 0x44EE  | Recovery Standard Temp Low    | I2   | 0         | 32767      | 3900    | mV    |
| Protections | COV      | 0x44F0  | Recovery Standard Temp High   | I2   | 0         | 32767      | 3900    | mV    |
| Protections | COV      | 0x44F2  | Recovery High Temp            | I2   | 0         | 32767      | 3900    | mV    |
| Protections | COV      | 0x44F4  | Recovery Rec Temp             | I2   | 0         | 32767      | 3900    | mV    |
| Protections | COV      | 0x44F8  | Latch Limit                   | U2   | 0         | 255        | 0       | —     |
| Protections | COV      | 0x44FA  | Counter Dec Delay             | U2   | 0         | 255        | 10      | s     |
| Protections | COV      | 0x44FE  | Reset                         | U2   | 0         | 255        | 15      | s     |
| Protections | ACUV     | 0x4500  | Recovery                      | I2   | 0         | 32767      | 3000    | mV    |
| Protections | ACOV     | 0x4502  | Recovery                      | I2   | 0         | 32767      | 3900    | mV    |
| Protections | OCC1     | 0x4504  | Threshold                     | I2   | –32768    | 32767      | 6000    | mA    |
| Protections | OCC1     | 0x4506  | Delay                         | U2   | 0         | 255        | 6       | s     |
| Protections | OCC2     | 0x4508  | Threshold                     | I2   | –32768    | 32767      | 8000    | mA    |
| Protections | OCC2     | 0x450A  | Delay                         | U2   | 0         | 255        | 3       | s     |
| Protections | OCC      | 0x450C  | Recovery Threshold            | I2   | –32768    | 32767      | –200    | mA    |
| Protections | OCC      | 0x450E  | Recovery Delay                | U2   | 0         | 255        | 5       | s     |
| Protections | OCD1     | 0x4510  | Threshold                     | I2   | –32768    | 32767      | –6000   | mA    |
| Protections | OCD1     | 0x4512  | Delay                         | U2   | 0         | 255        | 6       | s     |

**Table 22-1. Data Flash Table for bq27z855 v0.09 build 10 (continued)**

| Class       | Subclass | Address | Name               | Type | Min Value | Max Value | Default | Units |
|-------------|----------|---------|--------------------|------|-----------|-----------|---------|-------|
| Protections | OCD2     | 0x4514  | Threshold          | I2   | –32768    | 32767     | –8000   | mA    |
| Protections | OCD2     | 0x4516  | Delay              | U2   | 0         | 255       | 3       | s     |
| Protections | OCD      | 0x4518  | Recovery Threshold | I2   | –32768    | 32767     | 200     | mA    |
| Protections | OCD      | 0x451A  | Recovery Delay     | U2   | 0         | 255       | 5       | s     |
| Protections | OCD      | 0x451C  | Latch Limit        | U2   | 0         | 255       | 0       | —     |
| Protections | OCD      | 0x451E  | Counter Dec Delay  | U2   | 0         | 255       | 10      | s     |
| Protections | OCD      | 0x4520  | Reset              | U2   | 0         | 255       | 15      | s     |
| Protections | AOCD     | 0x4524  | Latch Limit        | U2   | 0         | 255       | 0       | —     |
| Protections | AOCD     | 0x4526  | Counter Dec Delay  | U2   | 0         | 255       | 10      | s     |
| Protections | AOCD     | 0x4528  | Recovery           | U2   | 0         | 255       | 5       | s     |
| Protections | AOCD     | 0x452A  | Reset              | U2   | 0         | 255       | 15      | s     |
| Protections | AOCC     | 0x452C  | Latch Limit        | U2   | 0         | 255       | 0       | —     |
| Protections | AOCC     | 0x452E  | Counter Dec Delay  | U2   | 0         | 255       | 10      | s     |
| Protections | AOCC     | 0x4530  | Recovery           | U2   | 0         | 255       | 5       | s     |
| Protections | AOCC     | 0x4532  | Reset              | U2   | 0         | 255       | 15      | s     |
| Protections | ASCD     | 0x4534  | Latch Limit        | U2   | 0         | 255       | 0       | —     |
| Protections | ASCD     | 0x4536  | Counter Dec Delay  | U2   | 0         | 255       | 10      | s     |
| Protections | ASCD     | 0x4538  | Recovery           | U2   | 0         | 255       | 5       | s     |
| Protections | ASCD     | 0x453A  | Reset              | U2   | 0         | 255       | 15      | s     |
| Protections | OTC      | 0x453C  | Threshold          | I2   | 2332      | 3932      | 3282    | 0.1°K |
| Protections | OTC      | 0x453E  | Delay              | U2   | 0         | 255       | 2       | s     |
| Protections | OTC      | 0x4540  | Recovery           | I2   | 2332      | 3932      | 3232    | 0.1°K |
| Protections | OTD      | 0x4542  | Threshold          | I2   | 2332      | 3932      | 3332    | 0.1°K |
| Protections | OTD      | 0x4544  | Delay              | U2   | 0         | 255       | 2       | s     |
| Protections | OTD      | 0x4546  | Recovery           | I2   | 2332      | 3932      | 3282    | 0.1°K |
| Protections | OTF      | 0x4548  | Threshold          | I2   | 2332      | 3932      | 3532    | 0.1°K |
| Protections | OTF      | 0x454A  | Delay              | U2   | 0         | 255       | 2       | s     |
| Protections | OTF      | 0x454C  | Recovery           | I2   | 2332      | 3932      | 3382    | 0.1°K |
| Protections | UTC      | 0x454E  | Threshold          | I2   | 2332      | 3932      | 2732    | 0.1°K |
| Protections | UTC      | 0x4550  | Delay              | U2   | 0         | 255       | 2       | s     |
| Protections | UTC      | 0x4552  | Recovery           | I2   | 2332      | 3932      | 2782    | 0.1°K |
| Protections | UTD      | 0x4554  | Threshold          | I2   | 2332      | 3932      | 2732    | 0.1°K |
| Protections | UTD      | 0x4556  | Delay              | U2   | 0         | 255       | 2       | s     |
| Protections | UTD      | 0x4558  | Recovery           | I2   | 2332      | 3932      | 2782    | 0.1°K |
| Protections | HWD      | 0x455A  | Delay              | U2   | 0         | 255       | 10      | s     |
| Protections | PTO      | 0x44A0  | Charge Threshold   | I2   | –32768    | 32767     | 2000    | mA    |
| Protections | PTO      | 0x44A2  | Suspend Threshold  | I2   | –32768    | 32767     | 1800    | mA    |
| Protections | PTO      | 0x44A4  | Delay              | U2   | 0         | 65535     | 1800    | s     |
| Protections | PTO      | 0x44A6  | Reset              | I2   | 0         | 32767     | 2       | mAh   |
| Protections | CTO      | 0x44A8  | Charge Threshold   | I2   | –32768    | 32767     | 2500    | mA    |
| Protections | CTO      | 0x44AA  | Suspend Threshold  | I2   | –32768    | 32767     | 2000    | mA    |
| Protections | CTO      | 0x44AC  | Delay              | U2   | 0         | 65535     | 54000   | s     |
| Protections | CTO      | 0x44AE  | Reset              | I2   | 0         | 32767     | 2       | mAh   |
| Protections | OC       | 0x44B0  | Threshold          | I2   | –32768    | 32767     | 300     | mAh   |
| Protections | OC       | 0x44B2  | Recovery           | I2   | –32768    | 32767     | 2       | mAh   |
| Protections | OC       | 0x44B4  | RSOC Recovery      | U2   | 0         | 100       | 90      | %     |
| Protections | CHGV     | 0x44B6  | Threshold          | I2   | –32768    | 32767     | 1500    | mV    |
| Protections | CHGV     | 0x44B8  | Delay              | U2   | 0         | 255       | 30      | s     |
| Protections | CHGV     | 0x44BA  | Recovery           | I2   | –32768    | 32767     | –500    | mV    |
| Protections | CHGC     | 0x44BC  | Threshold          | I2   | –32768    | 32767     | 500     | mA    |
| Protections | CHGC     | 0x44BE  | Delay              | U2   | 0         | 255       | 2       | s     |

**Table 22-1. Data Flash Table for bq27z855 v0.09 build 10 (continued)**

| Class          | Subclass           | Address | Name                       | Type | Min Value | Max Value | Default | Units    |
|----------------|--------------------|---------|----------------------------|------|-----------|-----------|---------|----------|
| Protections    | CHGC               | 0x44C0  | Recovery Threshold         | I2   | –32768    | 32767     | 100     | mA       |
| Protections    | CHGC               | 0x44C2  | Recovery Delay             | U2   | 0         | 255       | 2       | s        |
| Protections    | PCHGC              | 0x44C4  | Threshold                  | I2   | –32768    | 32767     | 50      | mA       |
| Protections    | PCHGC              | 0x44C6  | Delay                      | U2   | 0         | 255       | 2       | s        |
| Protections    | PCHGC              | 0x44C8  | Recovery Threshold         | I2   | –32768    | 32767     | 10      | mA       |
| Protections    | PCHGC              | 0x44CA  | Recovery Delay             | U2   | 0         | 255       | 2       | s        |
| Permanent Fail | SUV                | 0x4464  | Threshold                  | I2   | 0         | 32767     | 2200    | mV       |
| Permanent Fail | SUV                | 0x4466  | Delay                      | U2   | 0         | 255       | 5       | s        |
| Permanent Fail | SOV                | 0x4468  | Threshold                  | I2   | 0         | 32767     | 4500    | mV       |
| Permanent Fail | SOV                | 0x446A  | Delay                      | U2   | 0         | 255       | 5       | s        |
| Permanent Fail | SOCC               | 0x446C  | Threshold                  | I2   | –32768    | 32767     | 10000   | mA       |
| Permanent Fail | SOCC               | 0x446E  | Delay                      | U2   | 0         | 255       | 5       | s        |
| Permanent Fail | SOCD               | 0x4470  | Threshold                  | I2   | –32768    | 32767     | –10000  | mA       |
| Permanent Fail | SOCD               | 0x4472  | Delay                      | U2   | 0         | 255       | 5       | s        |
| Permanent Fail | SOT                | 0x4474  | SOTC Threshold             | I2   | 2332      | 4232      | 3382    | 0.1°K    |
| Permanent Fail | SOT                | 0x4476  | SOTC Delay                 | U2   | 0         | 255       | 5       | s        |
| Permanent Fail | SOT                | 0x4478  | SOTD Threshold             | I2   | 2332      | 4232      | 3432    | 0.1°K    |
| Permanent Fail | SOT                | 0x447A  | SOTD Delay                 | U2   | 0         | 255       | 5       | s        |
| Permanent Fail | SOTF               | 0x447C  | Threshold                  | I2   | 2332      | 4232      | 3732    | 0.1°K    |
| Permanent Fail | SOTF               | 0x447E  | Delay                      | U2   | 0         | 255       | 5       | s        |
| Permanent Fail | Open Thermistor    | 0x4480  | Threshold                  | I2   | 0         | 32767     | 2232    | 0.1°K    |
| Permanent Fail | Open Thermistor    | 0x4482  | Delay                      | U2   | 0         | 255       | 5       | s        |
| Permanent Fail | Open Thermistor    | 0x4484  | Fet Delta                  | I2   | 0         | 1500      | 200     | 0.1°K    |
| Permanent Fail | Open Thermistor    | 0x4486  | Cell Delta                 | I2   | 0         | 1500      | 200     | 0.1°K    |
| Permanent Fail | CD                 | 0x4488  | Threshold                  | I2   | 0         | 32767     | 0       | mAh      |
| Permanent Fail | CD                 | 0x448A  | Delay                      | U2   | 0         | 255       | 2       | cycles   |
| Permanent Fail | CFET               | 0x448C  | OFF Threshold              | I2   | 0         | 500       | 5       | mA       |
| Permanent Fail | CFET               | 0x448E  | OFF Delay                  | U2   | 0         | 255       | 5       | s        |
| Permanent Fail | DFET               | 0x4490  | OFF Threshold              | I2   | –500      | 0         | –5      | mA       |
| Permanent Fail | DFET               | 0x4492  | OFF Delay                  | U2   | 0         | 255       | 5       | s        |
| Permanent Fail | BSD                | 0x4282  | Min R Threshold            | I2   | 0         | 32767     | 200     | mΩ       |
| Permanent Fail | BSD                | 0x4284  | Min Cycle Count Threshold  | U2   | 0         | 65535     | 100     | Cycle    |
| Permanent Fail | BSD                | 0x4286  | Max Slope                  | I2   | 0         | 32767     | 1000    | mΩ/Cycle |
| Permanent Fail | BSD                | 0x4288  | Slope Update Grid          | U1   | 0         | 14        | 7       | —        |
| Permanent Fail | BSD                | 0x4494  | BSD Event Count            | U2   | 0         | 255       | 5       | Cycle    |
| Permanent Fail | BSD                | 0x537C  | Cell 0 BSD Event Count     | U1   | 0         | 255       | 0       | —        |
| Permanent Fail | ISI                | 0x4496  | Low Fault Count Threshold  | U2   | 0         | 255       | 5       | —        |
| Permanent Fail | ISI                | 0x4498  | High Fault Count Threshold | U2   | 0         | 255       | 5       | —        |
| PF Status      | Device Status Data | 0x52F0  | Safety Alert A             | H1   | 0x0       | 0xFF      | 0x0     | Hex      |
| PF Status      | Device Status Data | 0x52F1  | Safety Status A            | H1   | 0x0       | 0xFF      | 0x0     | Hex      |
| PF Status      | Device Status Data | 0x52F2  | Safety Alert B             | H1   | 0x0       | 0xFF      | 0x0     | Hex      |
| PF Status      | Device Status Data | 0x52F3  | Safety Status B            | H1   | 0x0       | 0xFF      | 0x0     | Hex      |
| PF Status      | Device Status Data | 0x52F4  | Safety Alert C             | H1   | 0x0       | 0xFF      | 0x0     | Hex      |
| PF Status      | Device Status Data | 0x52F5  | Safety Status C            | H1   | 0x0       | 0xFF      | 0x0     | Hex      |
| PF Status      | Device Status Data | 0x52F6  | Safety Alert D             | H1   | 0x0       | 0xFF      | 0x0     | Hex      |
| PF Status      | Device Status Data | 0x52F7  | Safety Status D            | H1   | 0x0       | 0xFF      | 0x0     | Hex      |
| PF Status      | Device Status Data | 0x52F8  | PF Alert A                 | H1   | 0x0       | 0xFF      | 0x0     | Hex      |
| PF Status      | Device Status Data | 0x52F9  | PF Status A                | H1   | 0x0       | 0xFF      | 0x0     | Hex      |
| PF Status      | Device Status Data | 0x52FA  | PF Alert B                 | H1   | 0x0       | 0xFF      | 0x0     | Hex      |
| PF Status      | Device Status Data | 0x52FB  | PF Status B                | H1   | 0x0       | 0xFF      | 0x0     | Hex      |
| PF Status      | Device Status Data | 0x52FC  | PF Alert C                 | H1   | 0x0       | 0xFF      | 0x0     | Hex      |

**Table 22-1. Data Flash Table for bq27z855 v0.09 build 10 (continued)**

| Class     | Subclass                | Address | Name                          | Type | Min Value | Max Value  | Default | Units  |
|-----------|-------------------------|---------|-------------------------------|------|-----------|------------|---------|--------|
| PF Status | Device Status Data      | 0x52FD  | PF Status C                   | H1   | 0x0       | 0xFF       | 0x0     | Hex    |
| PF Status | Device Status Data      | 0x52FE  | PF Alert D                    | H1   | 0x0       | 0xFF       | 0x0     | Hex    |
| PF Status | Device Status Data      | 0x52FF  | PF Status D                   | H1   | 0x0       | 0xFF       | 0x0     | Hex    |
| PF Status | Device Status Data      | 0x5300  | Operation Status A            | H2   | 0x0       | 0xFFFF     | 0x0     | Hex    |
| PF Status | Device Status Data      | 0x5302  | Operation Status B            | H2   | 0x0       | 0xFFFF     | 0x0     | Hex    |
| PF Status | Device Status Data      | 0x5304  | Temp Range                    | H1   | 0x0       | 0xFF       | 0x0     | Hex    |
| PF Status | Device Status Data      | 0x5305  | Charging Status A             | H1   | 0x0       | 0xFF       | 0x0     | Hex    |
| PF Status | Device Status Data      | 0x5306  | Charging Status B             | H1   | 0x0       | 0xFF       | 0x0     | Hex    |
| PF Status | Device Status Data      | 0x530A  | Gauging Status                | H2   | 0x0       | 0xFFFF     | 0x0     | Hex    |
| PF Status | Device Status Data      | 0x530C  | IT Status                     | H2   | 0x0       | 0xFFFF     | 0x0     | Hex    |
| PF Status | Device Voltage Data     | 0x530E  | Cell Voltage                  | I2   | –32768    | 32767      | 0       | mV     |
| PF Status | Device Voltage Data     | 0x5310  | Pack Voltage                  | I2   | –32768    | 32767      | 0       | mV     |
| PF Status | Device Current Data     | 0x5312  | Current                       | I2   | –32768    | 32767      | 0       | mA     |
| PF Status | Device Temperature Data | 0x5314  | Internal Temperature          | I2   | –1        | 32767      | 0       | 0.1°K  |
| PF Status | Device Temperature Data | 0x5316  | External 1 Temperature        | I2   | –1        | 32767      | 0       | 0.1°K  |
| PF Status | Device Gauging Data     | 0x5318  | Cell Dod0                     | I2   | –32768    | 32767      | 0       | —      |
| PF Status | Device Gauging Data     | 0x531A  | Passed Charge                 | I2   | –32768    | 32767      | 0       | mAh    |
| PF Status | Device ISI Data         | 0x531C  | Coarse Max Internal Short     | I2   | –32768    | 32767      | –32768  | 0.1 mA |
| PF Status | Device ISI Data         | 0x531E  | Coarse Min Internal Short     | I2   | –32768    | 32767      | 32767   | 0.1 mA |
| PF Status | Device ISI Data         | 0x5320  | Fine Max Internal Short       | I2   | –32768    | 32767      | –32768  | 0.1 mA |
| PF Status | Device ISI Data         | 0x5322  | Fine Min Internal Short       | I2   | –32768    | 32767      | 32767   | 0.1 mA |
| PF Status | Device ISI Data         | 0x5324  | Low PF Time                   | U4   | 0         | 4294967295 | 0       | s      |
| PF Status | Device ISI Data         | 0x5328  | Low First Fail                | I2   | –32768    | 32767      | 0       | 0.1 mA |
| PF Status | Device ISI Data         | 0x532A  | Low Last Fail                 | I2   | –32768    | 32767      | 0       | 0.1 mA |
| PF Status | Device ISI Data         | 0x532C  | High PF Time                  | U4   | 0         | 4294967295 | 0       | s      |
| PF Status | Device ISI Data         | 0x5330  | High First Fail               | I2   | –32768    | 32767      | 0       | 0.1 mA |
| PF Status | Device ISI Data         | 0x5332  | High Last Fail                | I2   | –32768    | 32767      | 0       | 0.1 mA |
| PF Status | AFE Regs                | 0x52D0  | OCC                           | H1   | 0x0       | 0x7F       | 0x0     | Hex    |
| PF Status | AFE Regs                | 0x52D1  | OCD                           | H1   | 0x0       | 0x7F       | 0x0     | Hex    |
| PF Status | AFE Regs                | 0x52D2  | Short Circuit Discharge       | H1   | 0x0       | 0x7F       | 0x0     | Hex    |
| PF Status | AFE Regs                | 0x52D3  | Under Voltage                 | H1   | 0x0       | 0x7F       | 0x0     | Hex    |
| PF Status | AFE Regs                | 0x52D4  | Over Voltage                  | H1   | 0x0       | 0x7F       | 0x0     | Hex    |
| PF Status | AFE Regs                | 0x52D5  | Current Charge Wake           | H1   | 0x0       | 0x7F       | 0x0     | Hex    |
| PF Status | AFE Regs                | 0x52D6  | Current Discharge Wake        | H1   | 0x70      | 0x7F       | 0x74    | Hex    |
| PF Status | AFE Regs                | 0x52D7  | OCC Delay                     | H1   | 0x0       | 0x7F       | 0x0     | Hex    |
| PF Status | AFE Regs                | 0x52D8  | OCD Delay                     | H1   | 0x0       | 0x7F       | 0x0     | Hex    |
| PF Status | AFE Regs                | 0x52D9  | Short Circuit Discharge Delay | H1   | 0x0       | 0x07       | 0x0     | Hex    |
| PF Status | AFE Regs                | 0x52DA  | Under Voltage Delay           | H1   | 0x0       | 0xFF       | 0x0     | Hex    |
| PF Status | AFE Regs                | 0x52DB  | Over Voltage Delay            | H1   | 0x0       | 0xFF       | 0xFF    | Hex    |
| PF Status | AFE Regs                | 0x52DC  | Over Voltage Delay Hi         | H1   | 0x0       | 0x1F       | 0x0     | Hex    |
| PF Status | AFE Regs                | 0x52DD  | CD Wake Delay                 | H1   | 0x0       | 0x1F       | 0x0     | Hex    |
| PF Status | AFE Regs                | 0x52DE  | CC Wake Delay                 | H1   | 0x0       | 0x1F       | 0x0     | Hex    |
| Black Box | Safety Status           | 0x50A0  | 1st Safety Status A           | H1   | 0x0       | 0xFF       | 0x0     | Hex    |
| Black Box | Safety Status           | 0x50A1  | 1st Safety Status B           | H1   | 0x0       | 0xFF       | 0x0     | Hex    |
| Black Box | Safety Status           | 0x50A2  | 1st Safety Status C           | H1   | 0x0       | 0xFF       | 0x0     | Hex    |

**Table 22-1. Data Flash Table for bq27z855 v0.09 build 10 (continued)**

| Class       | Subclass           | Address | Name                    | Type | Min Value | Max Value | Default | Units |
|-------------|--------------------|---------|-------------------------|------|-----------|-----------|---------|-------|
| Black Box   | Safety Status      | 0x50A3  | 1st Safety Status D     | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Black Box   | Safety Status      | 0x50A4  | 1st Time to Next Event  | U2   | 0         | 65535     | 0       | s     |
| Black Box   | Safety Status      | 0x50A6  | 1st Cycle Count         | U2   | 0         | 65535     | 0       | —     |
| Black Box   | Safety Status      | 0x50A8  | 2nd Safety Status A     | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Black Box   | Safety Status      | 0x50A9  | 2nd Safety Status B     | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Black Box   | Safety Status      | 0x50AA  | 2nd Safety Status C     | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Black Box   | Safety Status      | 0x50AB  | 2nd Safety Status D     | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Black Box   | Safety Status      | 0x50AC  | 2nd Time to Next Event  | U2   | 0         | 65535     | 0       | s     |
| Black Box   | Safety Status      | 0x50AE  | 2nd Cycle Count         | U2   | 0         | 65535     | 0       | —     |
| Black Box   | Safety Status      | 0x50B0  | 3rd Safety Status A     | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Black Box   | Safety Status      | 0x50B1  | 3rd Safety Status B     | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Black Box   | Safety Status      | 0x50B2  | 3rd Safety Status C     | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Black Box   | Safety Status      | 0x50B3  | 3rd Safety Status D     | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Black Box   | Safety Status      | 0x50B4  | 3rd Time to Next Event  | U2   | 0         | 65535     | 0       | s     |
| Black Box   | Safety Status      | 0x50B6  | 3rd Cycle Count         | U2   | 0         | 65535     | 0       | —     |
| Black Box   | PF Status          | 0x50B8  | 1st PF Status A         | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Black Box   | PF Status          | 0x50B9  | 1st PF Status B         | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Black Box   | PF Status          | 0x50BA  | 1st PF Status C         | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Black Box   | PF Status          | 0x50BB  | 1st PF Status D         | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Black Box   | PF Status          | 0x50BC  | 1st Time to Next Event  | U2   | 0         | 65535     | 0       | s     |
| Black Box   | PF Status          | 0x50BE  | 1st Cycle Count         | U2   | 0         | 65535     | 0       | —     |
| Black Box   | PF Status          | 0x50C0  | 2nd PF Status A         | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Black Box   | PF Status          | 0x50C1  | 2nd PF Status B         | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Black Box   | PF Status          | 0x50C2  | 2nd PF Status C         | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Black Box   | PF Status          | 0x50C3  | 2nd PF Status D         | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Black Box   | PF Status          | 0x50C4  | 2nd Time to Next Event  | U2   | 0         | 65535     | 0       | s     |
| Black Box   | PF Status          | 0x50C6  | 2nd Cycle Count         | U2   | 0         | 65535     | 0       | —     |
| Black Box   | PF Status          | 0x50C8  | 3rd PF Status A         | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Black Box   | PF Status          | 0x50C9  | 3rd PF Status B         | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Black Box   | PF Status          | 0x50CA  | 3rd PF Status C         | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Black Box   | PF Status          | 0x50CB  | 3rd PF Status D         | H1   | 0x0       | 0xFF      | 0x0     | Hex   |
| Black Box   | PF Status          | 0x50CE  | 3rd Cycle Count         | U2   | 0         | 65535     | 0       | —     |
| Gas Gauging | Current Thresholds | 0x478C  | Dsg Current Threshold   | I2   | –32768    | 32767     | 100     | mA    |
| Gas Gauging | Current Thresholds | 0x478E  | Chg Current Threshold   | I2   | –32768    | 32767     | 50      | mA    |
| Gas Gauging | Current Thresholds | 0x4790  | Quit Current            | I2   | 0         | 32767     | 10      | mA    |
| Gas Gauging | Current Thresholds | 0x4792  | Dsg Relax Time          | U2   | 0         | 255       | 1       | s     |
| Gas Gauging | Current Thresholds | 0x4794  | Chg Relax Time          | U2   | 0         | 255       | 60      | s     |
| Gas Gauging | Design             | 0x47D0  | Design Capacity mAh     | I2   | 0         | 32767     | 4400    | mAh   |
| Gas Gauging | Design             | 0x47D2  | Design Capacity cWh     | I2   | 0         | 32767     | 6336    | cWh   |
| Gas Gauging | Design             | 0x47D4  | Design Voltage          | I2   | 0         | 32767     | 3600    | mV    |
| Gas Gauging | Cycle              | 0x47D6  | Cycle Count Percentage  | U2   | 0         | 100       | 90      | %     |
| Gas Gauging | FD                 | 0x47E0  | Set Voltage Threshold   | I2   | 0         | 5000      | 3000    | mV    |
| Gas Gauging | FD                 | 0x47E2  | Clear Voltage Threshold | I2   | 0         | 5000      | 3100    | mV    |
| Gas Gauging | FD                 | 0x47E4  | Set % RSOC Threshold    | U2   | 0         | 100       | 0       | %     |
| Gas Gauging | FD                 | 0x47E6  | Clear % RSOC Threshold  | U2   | 0         | 100       | 5       | %     |
| Gas Gauging | FC                 | 0x47E8  | Set Voltage Threshold   | I2   | 0         | 5000      | 4200    | mV    |
| Gas Gauging | FC                 | 0x47EA  | Clear Voltage Threshold | I2   | 0         | 5000      | 4100    | mV    |
| Gas Gauging | FC                 | 0x47EC  | Set % RSOC Threshold    | U2   | 0         | 100       | 100     | %     |
| Gas Gauging | FC                 | 0x47EE  | Clear % RSOC Threshold  | U2   | 0         | 100       | 95      | %     |
| Gas Gauging | TD                 | 0x47F0  | Set Voltage Threshold   | I2   | 0         | 5000      | 3200    | mV    |
| Gas Gauging | TD                 | 0x47F2  | Clear Voltage Threshold | I2   | 0         | 5000      | 3300    | mV    |

**Table 22-1. Data Flash Table for bq27z855 v0.09 build 10 (continued)**

| Class       | Subclass  | Address | Name                       | Type | Min Value | Max Value | Default | Units        |
|-------------|-----------|---------|----------------------------|------|-----------|-----------|---------|--------------|
| Gas Gauging | TD        | 0x47F4  | Set % RSOC Threshold       | U2   | 0         | 100       | 6       | %            |
| Gas Gauging | TD        | 0x47F6  | Clear % RSOC Threshold     | U2   | 0         | 100       | 8       | %            |
| Gas Gauging | TC        | 0x47F8  | Set Voltage Threshold      | I2   | 0         | 5000      | 4200    | mV           |
| Gas Gauging | TC        | 0x47FA  | Clear Voltage Threshold    | I2   | 0         | 5000      | 4100    | mV           |
| Gas Gauging | TC        | 0x47FC  | Set % RSOC Threshold       | U2   | 0         | 100       | 100     | %            |
| Gas Gauging | TC        | 0x47FE  | Clear % RSOC Threshold     | U2   | 0         | 100       | 95      | %            |
| Gas Gauging | State     | 0x5120  | Cycle Count                | U2   | 0         | 65535     | 0       | —            |
| Gas Gauging | State     | 0x5380  | Qmax Cell                  | I2   | 0         | 32767     | 4400    | mAh          |
| Gas Gauging | State     | 0x5382  | Qmax Cycle Count           | U2   | 0         | 65535     | 0       | —            |
| Gas Gauging | State     | 0x5384  | Update Status              | H1   | 0x0       | 0x0E      | 0x0     | —            |
| Gas Gauging | State     | 0x5388  | Cell Chg Voltage at EoC    | I2   | 0         | 32767     | 4200    | mV           |
| Gas Gauging | State     | 0x538A  | Current at EoC             | I2   | 0         | 32767     | 250     | mA           |
| Gas Gauging | State     | 0x538C  | Avg I Last Run             | I2   | –32768    | 32767     | –2000   | mA           |
| Gas Gauging | State     | 0x538E  | Avg P Last Run             | I2   | –32768    | 32767     | –3022   | cW           |
| Gas Gauging | State     | 0x5390  | Temp k                     | I2   | 0         | 32767     | 100     | 0.1°C/256 cW |
| Gas Gauging | State     | 0x5392  | Temp a                     | I2   | 0         | 32767     | 1000    | s            |
| Gas Gauging | State     | 0x5394  | Max Avg I Last Run         | I2   | –32768    | 32767     | –2000   | mA           |
| Gas Gauging | State     | 0x5396  | Max Avg P Last Run         | I2   | –32768    | 32767     | –3022   | cW           |
| Gas Gauging | State     | 0x5398  | Delta Voltage              | I2   | –32768    | 32767     | 0       | mV           |
| Gas Gauging | State     | 0x539A  | SOH FCC Max mAh            | I2   | 0         | 32767     | 4400    | mAh          |
| Gas Gauging | State     | 0x539C  | SOH FCC Max cWh            | I2   | 0         | 32767     | 6336    | cWh          |
| Gas Gauging | State     | 0x539E  | SOH Temp k                 | I2   | 0         | 32767     | 100     | 0.1°C/256 cW |
| Gas Gauging | State     | 0x53A0  | SOH Temp a                 | I2   | 0         | 32767     | 1000    | s            |
| Gas Gauging | Turbo Cfg | 0x4984  | Ten Second Max C Rate      | I2   | –32768    | 0         | –200    | 0.01°C-rate  |
| Gas Gauging | Turbo Cfg | 0x4986  | Ten Millisecond Max C Rate | I2   | –32768    | 0         | –400    | 0.01°C-rate  |
| Gas Gauging | Turbo Cfg | 0x4988  | High Frequency Resistance  | I2   | 0         | 32767     | 36      | mΩ           |
| Gas Gauging | Turbo Cfg | 0x498A  | Reserve Energy %           | U2   | 0         | 100       | 0       | %            |
| Gas Gauging | Turbo Cfg | 0x498C  | Turbo Adjustment Factor    | U2   | 0         | 255       | 100     | %            |
| Gas Gauging | Turbo Cfg | 0x5082  | Min System Voltage         | I2   | 0         | 32767     | 9000    | mV           |
| Gas Gauging | IT Cfg    | 0x4280  | BSD Cfg                    | H2   | 0x0       | 0x0001    | 0x0001  | —            |
| Gas Gauging | IT Cfg    | 0x4294  | Room Temp                  | I2   | 0         | 3372      | 2982    | 0.1°K        |
| Gas Gauging | IT Cfg    | 0x4296  | High Temp                  | I2   | 0         | 3372      | 3182    | 0.1°K        |
| Gas Gauging | IT Cfg    | 0x4298  | Time Count Max             | U2   | 0         | 65535     | 1800    | Days         |
| Gas Gauging | IT Cfg    | 0x429A  | Time Count Max High        | U2   | 0         | 65535     | 720     | Days         |
| Gas Gauging | IT Cfg    | 0x429C  | Cycle Count Max            | U2   | 0         | 65535     | 1000    | —            |
| Gas Gauging | IT Cfg    | 0x429E  | Cycle Count Max High       | U2   | 0         | 65535     | 500     | —            |
| Gas Gauging | IT Cfg    | 0x42A0  | End of Life Capacity       | U1   | 0         | 100       | 20      | %            |
| Gas Gauging | IT Cfg    | 0x4896  | Load Select                | U1   | 0         | 7         | 7       | —            |
| Gas Gauging | IT Cfg    | 0x4897  | Fast Scale Load Select     | U1   | 0         | 7         | 3       | —            |
| Gas Gauging | IT Cfg    | 0x4898  | Load Mode                  | U1   | 0         | 1         | 0       | —            |
| Gas Gauging | IT Cfg    | 0x489C  | User Rate-mA               | I2   | –9000     | 0         | 0       | mA           |
| Gas Gauging | IT Cfg    | 0x489E  | User Rate-cW               | I2   | –32768    | 0         | 0       | cW           |
| Gas Gauging | IT Cfg    | 0x48A0  | Reserve Cap-mAh            | I2   | 0         | 9000      | 0       | mAh          |
| Gas Gauging | IT Cfg    | 0x48A2  | Reserve Cap-cWh            | I2   | 0         | 32000     | 0       | cWh          |
| Gas Gauging | IT Cfg    | 0x48BE  | Predict Ambient Time       | U2   | 0         | 65535     | 2000    | s            |
| Gas Gauging | IT Cfg    | 0x48E4  | Ra Filter                  | U2   | 0         | 999       | 800     | 0.1%         |
| Gas Gauging | IT Cfg    | 0x48E8  | Ra Max Delta               | U2   | 0         | 255       | 15      | %            |
| Gas Gauging | IT Cfg    | 0x48EC  | Reference Grid             | U2   | 0         | 14        | 4       | —            |

**Table 22-1. Data Flash Table for bq27z855 v0.09 build 10 (continued)**

| Class       | Subclass       | Address | Name                           | Type | Min Value | Max Value | Default | Units       |
|-------------|----------------|---------|--------------------------------|------|-----------|-----------|---------|-------------|
| Gas Gauging | IT Cfg         | 0x48EE  | Resistance Parameter Filter    | U2   | 1         | 65535     | 65142   | —           |
| Gas Gauging | IT Cfg         | 0x48F0  | Near EDV Ra Param Filter       | U2   | 1         | 65535     | 59220   | —           |
| Gas Gauging | IT Cfg         | 0x48F2  | Max Current Change %           | U2   | 0         | 100       | 10      | %           |
| Gas Gauging | IT Cfg         | 0x48F4  | Resistance Update Voltage      | I2   | 0         | 32767     | 50      | mV          |
| Gas Gauging | IT Cfg         | 0x492A  | Qmax Delta                     | U2   | 3         | 100       | 5       | %           |
| Gas Gauging | IT Cfg         | 0x492C  | Qmax Upper Bound               | U2   | 100       | 255       | 130     | %           |
| Gas Gauging | IT Cfg         | 0x492E  | OCV Pred Active T Limit        | U2   | 100       | 65535     | 200     | s           |
| Gas Gauging | IT Cfg         | 0x4930  | OCV Pred Transient T           | U2   | 100       | 65535     | 300     | s           |
| Gas Gauging | IT Cfg         | 0x4932  | OCV Pred Measure Time          | U2   | 0         | 65535     | 200     | s           |
| Gas Gauging | IT Cfg         | 0x4934  | Term Voltage                   | I2   | 0         | 32767     | 2800    | mV          |
| Gas Gauging | IT Cfg         | 0x4936  | Term V Hold Time               | U2   | 0         | 255       | 15      | s           |
| Gas Gauging | IT Cfg         | 0x4938  | Term Voltage Delta             | I2   | 0         | 32767     | 300     | mV          |
| Gas Gauging | IT Cfg         | 0x493C  | Res Relax Time                 | U2   | 0         | 65535     | 200     | s           |
| Gas Gauging | IT Cfg         | 0x493E  | Reff 1sec                      | I2   | 0         | 32767     | 0       | Ω           |
| Gas Gauging | IT Cfg         | 0x4944  | Max Simulation Iterations      | U2   | 20        | 50        | 30      | —           |
| Gas Gauging | IT Cfg         | 0x4948  | Simulation Near Term Delta     | I2   | 0         | 32767     | 250     | mV          |
| Gas Gauging | IT Cfg         | 0x4958  | Fast Scale Start SOC           | U2   | 0         | 100       | 10      | %           |
| Gas Gauging | IT Cfg         | 0x4966  | Min Delta Voltage              | I2   | –32768    | 32767     | 0       | mV          |
| Gas Gauging | IT Cfg         | 0x4968  | Max Delta Voltage              | I2   | –32768    | 32767     | 200     | mV          |
| Gas Gauging | IT Cfg         | 0x496A  | DeltaV Max Voltage Delta       | I2   | –32768    | 32767     | 10      | mV          |
| Gas Gauging | IT Cfg         | 0x53B0  | Design Qmax Status             | H2   | 0x0       | 0x0001    | 0x00    | —           |
| Gas Gauging | IT Cfg         | 0x53B2  | Design Qmax Cell 0             | I2   | 0         | 32767     | 4400    | mAh         |
| Gas Gauging | IT Cfg         | 0x53B4  | Design Resistance              | I2   | 1         | 32767     | 96      | mΩ          |
| Gas Gauging | IT Cfg         | 0x53B6  | Pack Resistance                | I2   | 0         | 32767     | 0       | mΩ          |
| Gas Gauging | IT Cfg         | 0x53B8  | System Resistance              | I2   | 0         | 32767     | 0       | mΩ          |
| Gas Gauging | IT Cfg         | 0x53C0  | Time Count                     | U2   | 0         | 65535     | 0       | Days        |
| Gas Gauging | IT Cfg         | 0x53C2  | Caploss Cell 0                 | I2   | 0         | 16383     | 0       | —           |
| Gas Gauging | Smoothing      | 0x48A4  | Smooth Relax Time              | U2   | 1         | 32767     | 1000    | s           |
| Gas Gauging | Smoothing      | 0x48A6  | Term Smooth Start Cell V Delta | I2   | 0         | 32767     | 150     | mV          |
| Gas Gauging | Smoothing      | 0x48A8  | Term Smooth Final Cell V Delta | I2   | 0         | 32767     | 100     | mV          |
| Gas Gauging | Smoothing      | 0x48AA  | Term Smooth Time               | U2   | 1         | 255       | 20      | s           |
| Gas Gauging | Max Error      | 0x48B2  | Time Cycle Equivalent          | U2   | 1         | 255       | 12      | 2 h         |
| Gas Gauging | Max Error      | 0x48B4  | Cycle Delta                    | U2   | 0         | 255       | 5       | 0.01%       |
| Gas Gauging | Condition Flag | 0x48B8  | Max Error Limit                | U2   | 0         | 100       | 100     | %           |
| Gas Gauging | SoH            | 0x4970  | SoH Load Rate                  | U1   | 0         | 255       | 50      | 0.1 Hr rate |
| Ra Table    | R_a0           | 0x5000  | Cell0 R_a flag                 | H2   | 0x0       | 0xFFFF    | 0xFF55  | —           |
| Ra Table    | R_a0           | 0x5002  | Cell0 R_a 0                    | I2   | 0         | 32767     | 67      | mΩ          |
| Ra Table    | R_a0           | 0x5004  | Cell0 R_a 1                    | I2   | 0         | 32767     | 71      | mΩ          |
| Ra Table    | R_a0           | 0x5006  | Cell0 R_a 2                    | I2   | 0         | 32767     | 83      | mΩ          |
| Ra Table    | R_a0           | 0x5008  | Cell0 R_a 3                    | I2   | 0         | 32767     | 110     | mΩ          |
| Ra Table    | R_a0           | 0x500A  | Cell0 R_a 4                    | I2   | 0         | 32767     | 96      | mΩ          |
| Ra Table    | R_a0           | 0x500C  | Cell0 R_a 5                    | I2   | 0         | 32767     | 77      | mΩ          |
| Ra Table    | R_a0           | 0x500E  | Cell0 R_a 6                    | I2   | 0         | 32767     | 96      | mΩ          |
| Ra Table    | R_a0           | 0x5010  | Cell0 R_a 7                    | I2   | 0         | 32767     | 86      | mΩ          |
| Ra Table    | R_a0           | 0x5012  | Cell0 R_a 8                    | I2   | 0         | 32767     | 84      | mΩ          |
| Ra Table    | R_a0           | 0x5014  | Cell0 R_a 9                    | I2   | 0         | 32767     | 82      | mΩ          |
| Ra Table    | R_a0           | 0x5016  | Cell0 R_a 10                   | I2   | 0         | 32767     | 81      | mΩ          |
| Ra Table    | R_a0           | 0x5018  | Cell0 R_a 11                   | I2   | 0         | 32767     | 92      | mΩ          |
| Ra Table    | R_a0           | 0x501A  | Cell0 R_a 12                   | I2   | 0         | 32767     | 103     | mΩ          |
| Ra Table    | R_a0           | 0x501C  | Cell0 R_a 13                   | I2   | 0         | 32767     | 123     | mΩ          |
| Ra Table    | R_a0           | 0x501E  | Cell0 R_a 14                   | I2   | 0         | 32767     | 658     | mΩ          |

**Table 22-1. Data Flash Table for bq27z855 v0.09 build 10 (continued)**

| Class    | Subclass      | Address | Name                             | Type | Min Value | Max Value | Default | Units  |
|----------|---------------|---------|----------------------------------|------|-----------|-----------|---------|--------|
| Ra Table | R_a0x         | 0x5040  | xCell0 R_a flag                  | H2   | 0x0       | 0xFFFF    | 0xFFFF  | —      |
| Ra Table | R_a0x         | 0x5042  | xCell0 R_a 0                     | I2   | 0         | 32767     | 67      | mΩ     |
| Ra Table | R_a0x         | 0x5044  | xCell0 R_a 1                     | I2   | 0         | 32767     | 71      | mΩ     |
| Ra Table | R_a0x         | 0x5046  | xCell0 R_a 2                     | I2   | 0         | 32767     | 83      | mΩ     |
| Ra Table | R_a0x         | 0x5048  | xCell0 R_a 3                     | I2   | 0         | 32767     | 110     | mΩ     |
| Ra Table | R_a0x         | 0x504A  | xCell0 R_a 4                     | I2   | 0         | 32767     | 96      | mΩ     |
| Ra Table | R_a0x         | 0x504C  | xCell0 R_a 5                     | I2   | 0         | 32767     | 77      | mΩ     |
| Ra Table | R_a0x         | 0x504E  | xCell0 R_a 6                     | I2   | 0         | 32767     | 96      | mΩ     |
| Ra Table | R_a0x         | 0x5050  | xCell0 R_a 7                     | I2   | 0         | 32767     | 86      | mΩ     |
| Ra Table | R_a0x         | 0x5052  | xCell0 R_a 8                     | I2   | 0         | 32767     | 84      | mΩ     |
| Ra Table | R_a0x         | 0x5054  | xCell0 R_a 9                     | I2   | 0         | 32767     | 82      | mΩ     |
| Ra Table | R_a0x         | 0x5056  | xCell0 R_a 10                    | I2   | 0         | 32767     | 81      | mΩ     |
| Ra Table | R_a0x         | 0x5058  | xCell0 R_a 11                    | I2   | 0         | 32767     | 92      | mΩ     |
| Ra Table | R_a0x         | 0x505A  | xCell0 R_a 12                    | I2   | 0         | 32767     | 103     | mΩ     |
| Ra Table | R_a0x         | 0x505C  | xCell0 R_a 13                    | I2   | 0         | 32767     | 123     | mΩ     |
| Ra Table | R_a0x         | 0x505E  | xCell0 R_a 14                    | I2   | 0         | 32767     | 658     | mΩ     |
| ISI      | Register      | 0x42D0  | ISI Configuration                | H2   | 0x0       | 0x0007    | 0x00    | Hex    |
| ISI      | Configuration | 0x42DC  | Manufacturing Completion Timeout | U1   | 0         | 255       | 1       | hours  |
| ISI      | Configuration | 0x42F2  | Self-Discharge Current           | I2   | –32768    | 0         | –6      | 0.1 mA |
| ISI      | Configuration | 0x42F6  | Low Internal Short Threshold     | I2   | –32768    | 0         | –40     | 0.1 mA |
| ISI      | Configuration | 0x42F8  | High Internal Short Threshold    | I2   | –32768    | 0         | –300    | 0.1 mA |
| ISI      | Configuration | 0x42FA  | Threshold Passes to Completion   | U2   | 0         | 65535     | 3       | —      |

## 23 Revision History

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

### Changes from April 30, 2026 to July 30, 2026 (from Revision \* (April 2026) to Revision A (July 2026))

|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Page |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|
| <ul style="list-style-type: none"> <li>[BMSFW-11775] Updated ISI Configuration register: corrected register content (Class, Subclass, Name, bit layout, bit descriptions). ISI_EN and ISI_DOD0 are disabled by default (default = 0x0000).....</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | 17   |
| <ul style="list-style-type: none"> <li>[BMSFW-11366] Adapted for BQ27Z855 v0.09: renamed SHIPMODE_ENABLE to SHIP_ENABLE (0x0015) and SHIPMODE_DISABLE to SHIP_DISABLE (0x0016); replaced OperationStatusB()[SHIPM] intermediate status with OperationStatus()[SHIP] unified status; corrected SHIPM_ON_RST/SHELFM_ON_RST/IO_EXIT register reference from Power Config to Ship Mode Config; updated DF table subclass Shipmode to Ship Mode and corrected DF names to match bcfgx (Voltage Threshold, Voltage Delay, Measure Time, Command Delay); added Ship Mode Config register DF entry (SHIPMODE/SHIPM_ON_RST/SHELFM_ON_RST/IO_EXIT, default 0x0001); added Settings GPIO Ship Exit pin number DF (default 7); noted Command Delay also applies to SHELF_ENABLE. Added oxy_options and prolog.....</li> </ul>                                                                                                                                                        | 26   |
| <ul style="list-style-type: none"> <li>[BMSFW-11366] Adapted for BQ27Z855 v0.09: updated command names to SHELF_ENABLE (0x000b) and SHELF_DISABLE (0x000c); replaced OperationStatusA()[SHELF] and OperationStatusB()[SHELFM] with OperationStatus()[SHIP] — bq27z855 uses a single SHIP status bit for both SHIP and SHELF modes; updated measurement list (removed TS2 rotation — bq27z855 has TSInt and TS1 only; removed every-fourth-interval PACK qualifier); updated exit description to remove V_STARTUP/ENAB holdoff exit (not in bq27z855 shipmode.c); removed DF table rows not present in bq27z855 bcfgx (Shelf Measure Time, Shelf Command Delay, Shelf Exit Holdoff, Shelf ENAB Hold Time); corrected DF subclass from Shelf to Shelf Mode; corrected DF names to Voltage Threshold and Voltage Delay; added informational row for shared Power Ship Mode Command Delay. Fixed oxy_options position (was after root element). Added prolog.....</li> </ul> | 27   |
| <ul style="list-style-type: none"> <li>Corrected CHGR_DET On Voltage default from 150 mV to 0 mV in Overview section to match firmware source and DF table. Added prolog and oxy_options.....</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | 51   |

|                                                                                                                                                                                                                                                                                                                                                                                                                                                            |     |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----|
| • [BMSFW-11843] New section: Charge Current Derating by internal die temperature and PACK-BAT voltage differential. Both derate axes enabled by default via Charger Configuration[TEMPDERATE] and [PACKBATDERATE].....                                                                                                                                                                                                                                     | 59  |
| • [BMSFW-11843] New public DF entries for Charge Current Derating: Temperature Threshold 0-5, Temperature Derate 0-5, Temp Derate Hysteresis, Pack Bat Diff 0-5, Pack Bat Derate 0-5, Pack Bat Derate Hysteresis.....                                                                                                                                                                                                                                      | 60  |
| • [BMSFW-11855] Adapted for BQ27Z855 I2C gauge. Updated device name from BQ41z551 to BQ27Z855 in internal overview paragraph. Removed EC Secure MAC (Host Authentication, B-233) subsection and its cross-reference — this feature is not supported in BQ27Z855. Moved oxy_options before root element. Added prolog.....                                                                                                                                  | 65  |
| • [BMSFW-11855] Adapted for BQ27Z855 I2C gauge. Updated Steps 2 and 4 from SMBus 0x2F protocol to I2C BlockData protocol (0x3E/0x40/0x60/0x61). Added checksum and length byte requirement. Added I2C-specific public key read note (35 bytes from 0x3E, skip 2). Updated Split Response section for I2C registers. Corrected section title from bq41z551 to bq27z855. Added prolog and oxy_options.....                                                   | 65  |
| • [BMSFW-11855] Adapted for BQ27Z855 I2C gauge: removed MAC 0x0034 (HostPublicKey) and MAC 0x003A (ECC_MAC) as EC Secure MAC Host Authentication is not supported; updated ECC_R and ECC_S to read-only; replaced SBS 0x2F with MAC 0x0000 I2C BlockData description; corrected table title; updated MAC 0x0038 key sizes from B-233 (30 B) to P-256 (32/33 B); added I2C public key read procedure for 0x0036; moved oxy_options before root element..... | 66  |
| • Clarified Setting <b>[TAPER_VOLT]=1</b> . Also fixed typo in table. from [TCASETVCT] to [TCSETVCT].....                                                                                                                                                                                                                                                                                                                                                  | 74  |
| • [BMSFW-11843] Register expanded from 2 bytes to 4 bytes. Bytes 2-3 (bits 31-16) now return the active charge current derate percentage (DERATE_PCT). Host software must read 4 bytes from this command. Prolog added; oxy_options moved before root element.....                                                                                                                                                                                         | 138 |
| • [BMSFW-11495] Reduced ZVCHG Exit Threshold maximum value from 80000 mV to 4000 mV (4 V) to match supported hardware range.....                                                                                                                                                                                                                                                                                                                           | 175 |
| • [BMSFW-11495] Minimum Taper Charge DF made public. Corrected table row: Class (Advanced Charge Algorithm), Name (Minimum Taper Charge), Max (1000), Default (64), Unit (mAh/256).....                                                                                                                                                                                                                                                                    | 184 |

## IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you fully indemnify TI and its representatives against any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to [TI's Terms of Sale](#), [TI's General Quality Guidelines](#), or other applicable terms available either on [ti.com](https://www.ti.com) or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products. Unless TI explicitly designates a product as custom or customer-specified, TI products are standard, catalog, general purpose devices.

TI objects to and rejects any additional or different terms you may propose.

Copyright © 2026, Texas Instruments Incorporated

Last updated 10/2025