

EVM User's Guide: AMC-MOD-50A-EVM

AMC-MOD-50A-EVM Evaluation Module



Description

The AMC-MOD-50A-EVM is an isolated current-sensing evaluation module designed for $\pm 50\text{A}$ shunt-based current sensing. This EVM allows sensing up to $\pm 50\text{A}$ peak current through an external shunt resistor while measuring the isolated output through the isolation barrier of the AMC1306M05. The AMC1306M05 is a high-precision, isolated modulator optimized for shunt-based current measurements and is paired with the Isabellenhütte™ BVN-M-R001 shunt resistor. This EVM features via stitching to facilitate heat dissipation at large currents and performs within $\pm 1\%$ (typical) accuracy.

Get Started


1. Order the AMC-MOD-50A-EVM on [ti.com](https://www.ti.com).
2. Download the comprehensive reference design files.
3. Evaluate performance on the bench.

Features

- $\pm 50\text{A}$ isolated current sensing
- C2000 control card connector for digital evaluation
- Heat dissipation design up to 180°C at 2 minutes
- Lugs to connect the EVM to current carrying leads
- Test points for easy evaluation
- Additional shunt resistor footprint for flexible design

Applications

- [Motor drives](#)
- [Power delivery](#)
- [Onboard chargers \(OBCs\)](#)
- [Traction inverters](#)
- [DC/DC converters](#)
- [Energy storage systems \(ESS\)](#)
- [EV charging](#)
- [Solar inverters](#)

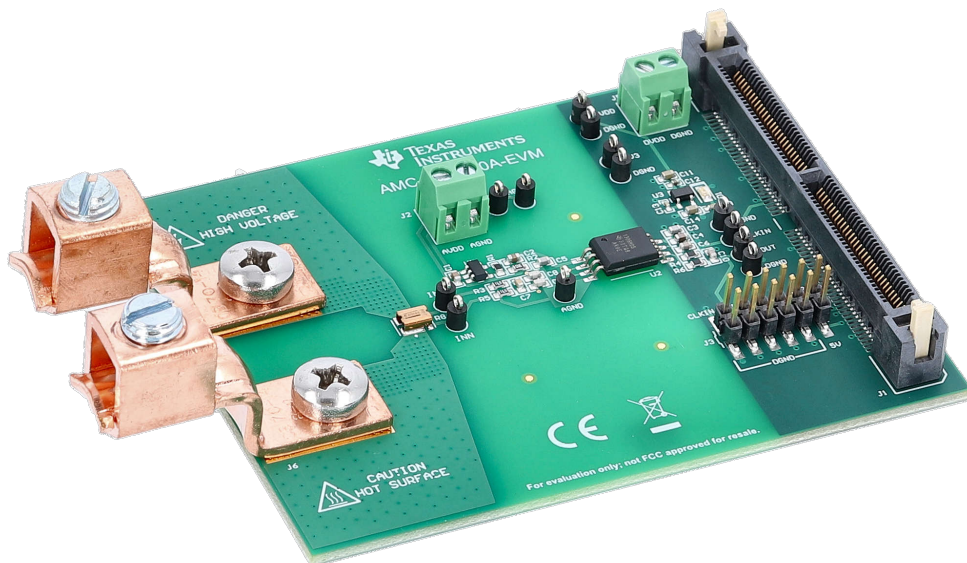

1 Evaluation Module Overview

1.1 Introduction

Throughout this document, the abbreviation *EVM* and the term *evaluation module* are synonymous with the AMC-MOD-50A-EVM. This document includes how to set up and evaluate the EVM, the printed circuit board (PCB) layout, schematics, and bill of materials (BOM).

1.2 Kit Contents

[Table 1-1](#) details the contents included in the AMC-MOD-50A-EVM kit.

Table 1-1. AMC-MOD-50A-EVM Kit Contents

Item	Description	Quantity
AMC-MOD-50A-EVM	PCB	1
CB70-14-CY	Terminal 90A Lug	2
McMaster-Carr Hexnut	Hexnut	2
McMaster-Carr Phillips Screw	Screw	2

1.3 Specification

The AMC-MOD-50A-EVM provides the ability to evaluate high currents up to $\pm 50\text{A}$. See the [AMC1306M05](#), [TLV709A01DBVR](#), [TPS73633DBVR](#), and [BVN-M-R001](#) data sheets for detailed device specifications.

1.4 Device Information

The AMC-MOD-50A-EVM is designed to provide ease-of-use and high accuracy in large-current applications. The current-sensing device, AMC1306M05, is an isolated, reinforced delta-sigma modulator intended for shunt-based current sensing with an external clock and digital output. The AMC1306M05 senses current across the BVN-M-R001 shunt resistor. Overcurrent detection is configurable using a microcontroller through the C2000 control card connector. The EVM features an additional unpopulated shunt resistor footprint in parallel to extend the current-sensing range flexibility. See [Section 2.7](#) for details. Included in the EVM kit are high-current lug connectors used for supplying primary current to be sensed by the EVM.

2 Hardware

This section summarizes the AMC-MOD-50A-EVM components, assembly instructions, interfaces, power requirements, test point information, and lug information.

2.1 Hardware Overview

Figure 2-1 shows the hardware labels for this EVM.

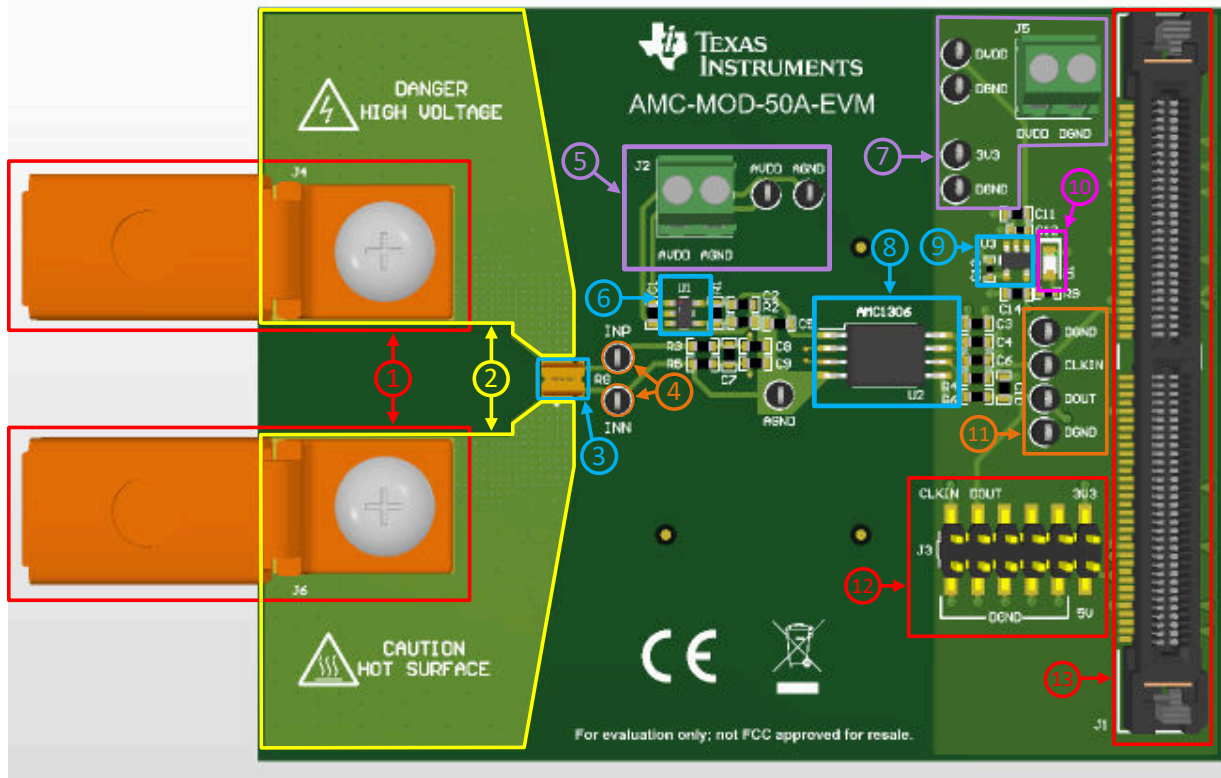


Figure 2-1. AMC-MOD-50A-EVM Hardware Labels

The AMC-MOD-50A-EVM has many hardware features, allowing the user to access and assess the EVM from many points in the signal chain. The default configuration is one 1m Ω shunt populated at R8 to sense $\pm 50\text{A}$ applications.

Note

This EVM is an example high current-sensing design. Further designs are modified per system requirements. Considerations are listed below.

- | | |
|--|---|
| 1. Lugs | Current-carrying cable board connectors. Copper planes under the lugs help dissipate heat. |
| 2. Via Stitch | Via stitching provides aeration to dissipate heat further. |
| 3. Isabellenhütte BVN-M-R001 | 1m Ω , $\pm 1\%$ tolerance shunt resistor for accurate current sensing. The PCB is not designed for more than $\pm 70\text{A}$.
<i>If an alternate current-sensing range is desired, consider alternate shunt resistor values.</i> <ul style="list-style-type: none"> • Design Considerations for Isolated Current Sensing • Shunt Resistor Selection for Isolated Data Converters |
| 4. AMC1306M05 Input Test Points | AMC1306M05 differential analog input test points. |
| 5. High-Side Power Supply | High-side power-supply connectors: terminal block J2 or test point connections. |
| 6. TLV709A01DBVR | Low-dropout (LDO) for stable and constant high-side power supply. |

7. Low-Side Power Supply	Low-side power-supply connectors: terminal block J5 or test point connections.
8. AMC1306M05	Isolated, reinforced delta-sigma current-sensing modulator with external clock and $\pm 50\text{mV}$ input. <i>If an integrated DC/DC converter is desired, consider the AMC3306M05, isolated current-sensing modulator.</i>
9. TPS73633DBVR	Low-dropout (LDO) for stable and constant high-side power supply.
10. LED	LED on to indicate device powered.
11. AMC1306M05 Digital Output and Clock Input Test Points	AMC1306M05 digital output (DOU) and external clock input (CLKIN) test points.
12. AMC1306M05 Low-Side Header Connectors	Header connections for the AMC1306M05 low-side pins.
13. C2000 Control Card Connector	C2000 microcontroller control card connector for digital output analysis and clock generation.

2.2 Assembly Instructions

This section includes step-by-step instructions on how to assemble the AMC-MOD-50A-EVM. Lugs come secured by default, but if the user needs to reattach the lugs during evaluation, follow these steps:

1. Connect the high-current input lugs to the J2 (IN+) and J5 (IN-) pads with the supplied screw and hex nut.
 - a. Make sure the lugs do not touch when secured.
 - b. Make sure that the lugs are positioned such that the lugs make contact with the maximum amount of surface area of the PCB pad.
 - c. Make sure the connectors are tightly fastened to the current carrying cables such that the connectors cannot be moved by hand. A torque wrench is recommended to provide symmetrical connection. A torque of approximately 40in-lbs is recommended.
2. Solder an additional shunt resistor if desired. See [Section 2.7](#) for more information on shunt limitations.
3. Implement overcurrent protection through the external microcontroller if desired.

2.3 Interfaces

The AMC-MOD-50A-EVM features analog input and digital interface circuitry.

2.3.1 Analog Input

[Figure 2-2](#) shows the analog input circuit for the AMC-MOD-50A-EVM.

The input is supplied through the high current input lugs at J2 (IN+) and J5 (IN-). The input current is sensed through shunt resistor R8 and carried into the analog inputs of the AMC1306M05. R7 is unpopulated by default configuration. The AMC1306M05 input is accessible to the user through test points INP and INN.

For the AMC3302 input, the passive components R3, R5, and C7 make a differential antialiasing filter with a cutoff frequency of 497kHz. Capacitors C8 and C9 help attenuate common-mode signals. C2 and C5 serve as decoupling capacitors for noise reduction and high-side power supply (AVDD) stability.

The adjustable output LDO, TLV709A01DBVR, circuitry includes resistors R1 and R2 to set the output voltage at 3.3V. Capacitors C1 and C2 counteract reactive input sources and improve transient responses.

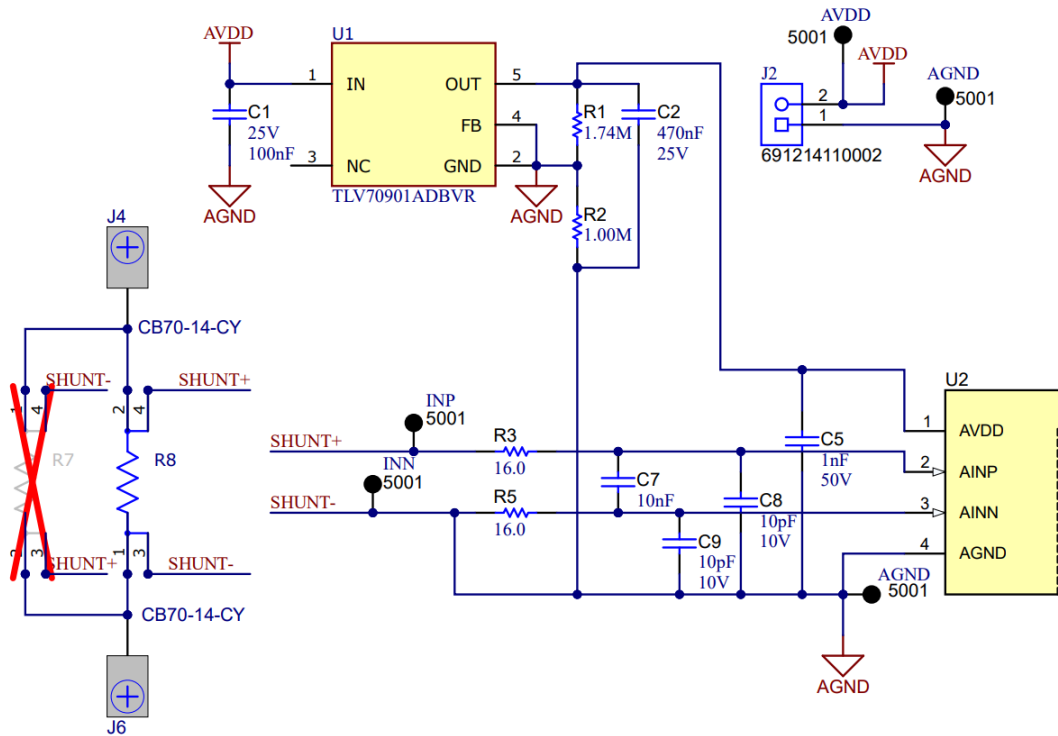


Figure 2-2. AMC-MOD-50A-EVM Analog Input

2.3.2 Digital Interface

Figure 2-3 shows the digital interface circuit for the AMC-MOD-50A-EVM.

The AMC1306M05 digital output and external clock input are accessible to the user through test points DOUT and CLKIN, respectively. DOUT is referenced to DGND and CLKIN is referenced to DGND. The passive components of the digital interface include R4, R6, C6, and C10 to form two RC filters for the data and clock lines. Each RC filter has a cutoff frequency of 53MHz. C3 and C4 serve as decoupling capacitors for noise reduction and low-side power supply (DVDD) stability.

The fixed output LDO, TPS73633DBVR, circuitry includes C11, C12, C13, and C14. These components serve as decoupling capacitors for noise reduction and high-side power supply (DVDD) stability.

Connectors J1 and J3 enable C2000 microcontroller connection for further digital output analysis.

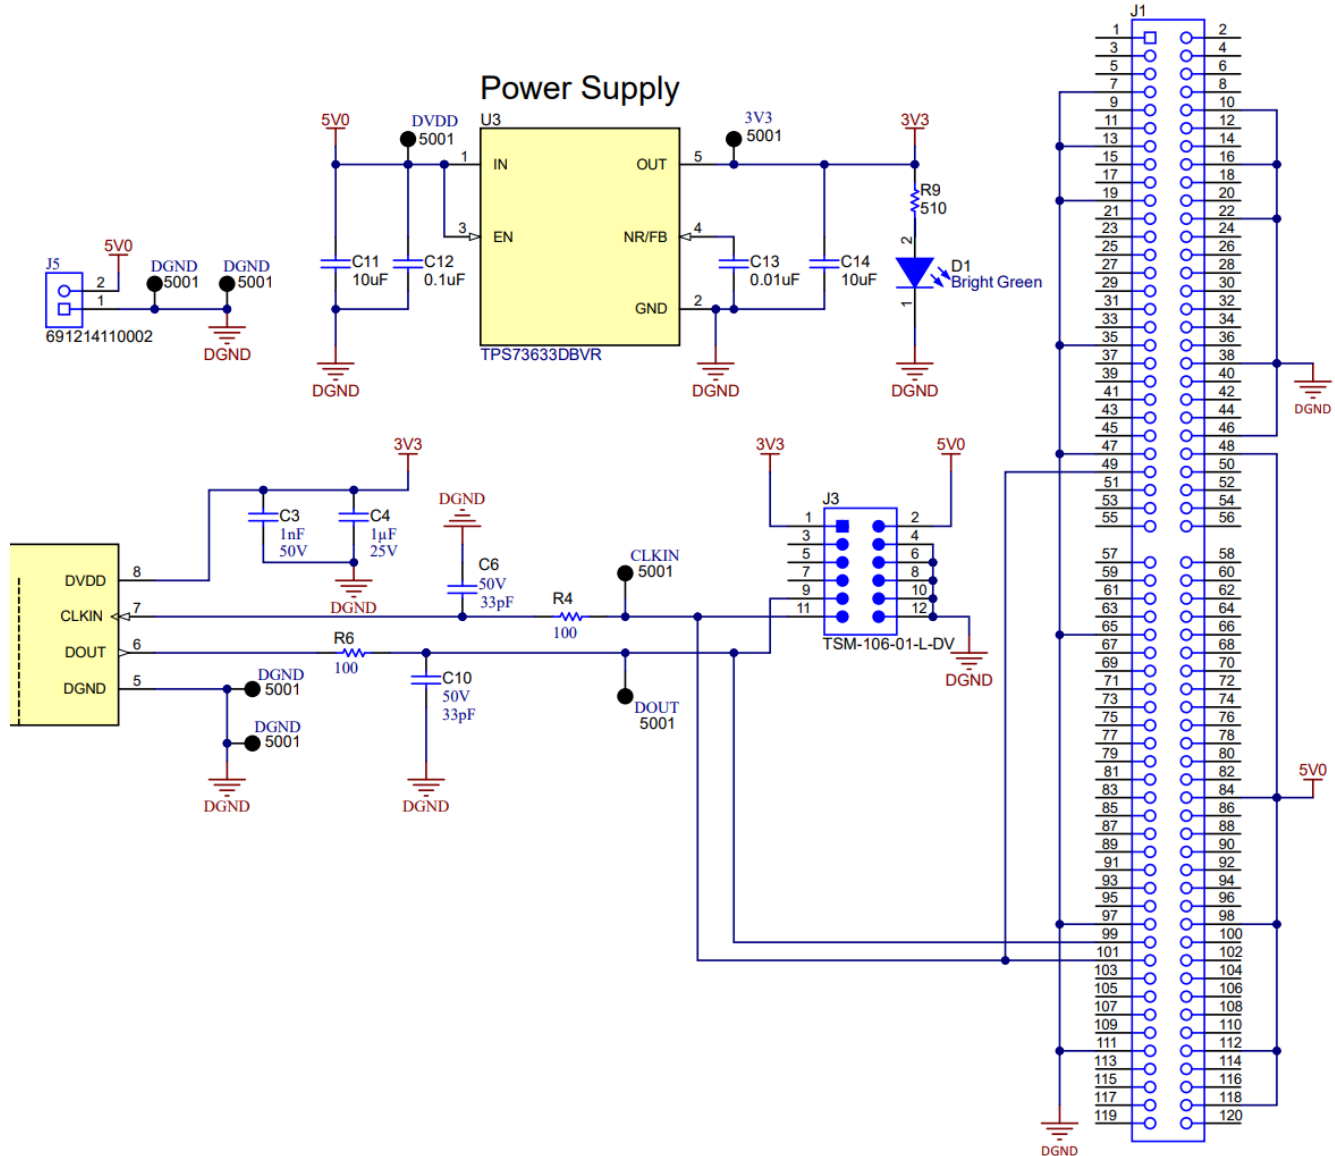


Figure 2-3. AMC-MOD-50A-EVM Digital Interface

2.4 Power Requirements

The EVM requires two external power rails for AVDD and DVDD. AVDD is the analog, high-side power supply and DVDD is the digital, low-side power supply.

2.4.1 AVDD Input

The EVM provides access to AVDD by terminal block J2 and test points AVDD and AGND. The LDO linear voltage regulator, U1, stabilizes the power supply to an adjustable voltage, set to 3.3V by default. Make sure the power supply is between the LDO recommended input voltage and operating conditions with respect to AGND (2.5V–5V).

2.4.2 DVDD Input

The EVM provides access to DVDD by terminal block J5 and test points DVDD and DGND. The LDO linear voltage regulator, U3, stabilizes the power supply to a fixed voltage, 3.3V. Make sure the power supply is set to the LDO recommended input voltage and operating conditions with respect to DGND (5V). The LED, D1, lights up when powered. Alternatively, power the AMC1306M05 with the 3V3 and DGND test points if C2000 connection is not required or the C2000 is powered by the PC.

2.5 Test Points

The AMC-MOD-50A-EVM includes 13 test points throughout the EVM signal chain. These connections allow full evaluation of the current-sensing circuitry. Attach external equipments, such as power supplies and digital multimeters (DMMs) with hook clips, to the surface-mounted test points for easy evaluation.

2.6 Lug Information

The input connectors labeled J2 (IN+) and J5 (IN-) correspond to the high-current rated load connector lugs supplied with the EVM kit. Make sure these components are securely screwed to the board to make contact. The acceptable continuous load input maximum for the included connectors is $\pm 70\text{A}$ for DC and AC measurements. Continuous allowable current is also limited by the maximum operating conditions of the shunt resistor.

2.7 Best Design Practices

Do not apply more than $\pm 70\text{A}$ continuous load to this EVM. The AMC-MOD-50A-EVM is defined to measure the $\pm 50\text{A}$ range. Populating a second $1\text{m}\Omega$ shunt on the additional shunt resistor footprint, R7, can double the current-sensing range while using the same $\pm 50\text{mV}$ input of the AMC1306M05; however, this PCB is only designed to withstand continuous currents up to $\pm 70\text{A}$ because of heat dissipation restrictions. For best reliability with a standard FR4-based PCB, make sure the temperature does not exceed 180°C .

3 Implementation Results

3.1 Evaluation Procedure

To evaluate the function of the board, run a test procedure. [Section 3.1.2](#) provides further information. For more in depth signal chain evaluation, see [Section 3.1.3](#).

3.1.1 Equipment Setup

The following list outlines the required equipment setup. [Figure 3-1](#) and [Figure 3-2](#) illustrate the positive and negative current equipment setup, respectively.

1. Two DC voltage sources capable of providing 2.5V–5V limited to 50mA.
2. High current electronic load (for example, Agilent™ N3300A).
3. DC current source.
4. High current carrying cables.
5. One (or more) oscilloscope or digital multimeters (DMMs) with at least 6.5 digits of resolution. *Optional:* Use the C2000 control card and [Code Composer Studio](#) for full signal chain evaluation.
6. One signal generator set for a 3.3V square wave at 20MHz. *Optional:* High current supply control shunt for full signal chain evaluation.

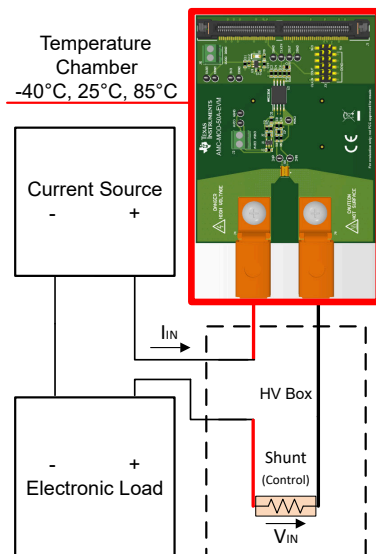


Figure 3-1. Positive Current Equipment Setup

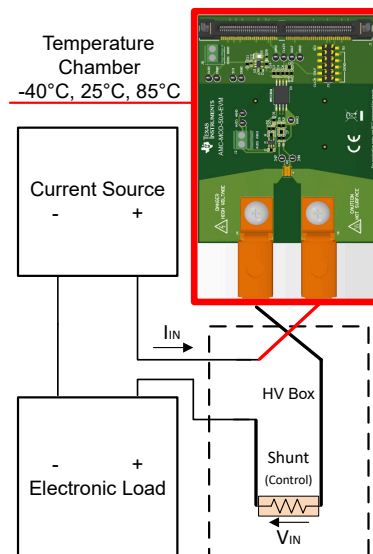


Figure 3-2. Negative Current Equipment Setup

3.1.2 Test Procedure

Note

Verify that the outputs of the connected supplies are disabled before connecting or disconnecting equipment.

1. Set the first 5V ($\pm 10\%$) source and limit the current to 50mA, as noted in [Section 3.1.1](#). Connect the EVM voltage source to one of the DVDD connections, referenced to DGND. Turn on the power source and make sure there is no more current limit drawn than what is specified in the device data sheets. See [Section 2.4.2](#) for more information. Leave unpowered for now.
2. Set the second 2.5V–5V ($\pm 10\%$) source and limit the current to 50mA, as noted in [Section 3.1.1](#). Connect the EVM voltage source to one of the AVDD connections, referenced to AGND. Turn on the power source and make sure there is no more current limit drawn than what is specified in the device data sheets. See [Section 2.4.1](#) for more information. Leave unpowered for now.
3. Set the signal generator to a 3.3V square wave at 20MHz frequency, as noted in [Section 3.1.1](#). Connect the signal generator to test point CLKIN, referenced to DGND. Leave unpowered for now.

4. Tie inputs INP and INN together and to AGND. Turn on both power supplies and signal generator. Use the oscilloscope or the DMM to verify that isolated power is present on both supplies.
5. Measure test point DOUT, referenced to DGND, using either an oscilloscope or DMM. Make sure the output is 50% high or average to 1.65V. This setting confirms device functionality. Turn off power sources.
6. Untie the inputs and connect the high current carrying cables to the positive and negative lugs, J2 (IN+) and J5 (IN-). For high-side measurement of the positive current, IN- sources to the electronic load. For the negative current, IN+ sources to the load. Set current bounds if supplies allow. Turn on all connected supplies.
7. Apply the appropriate full-scale linear input signal: $\pm 50\text{A}$.
8. Measure the AMC1306M05 digital output with the oscilloscope or the DMM.

Verify that the digital output is at the value specified by the device data sheet.

- a. For a 50A input set the output to 90% high, or approximately 2.97V. Use test-point 3V3 referenced to test-point DGND and verify using the following equation:

$$3\text{V3} \times 0.9 \tag{1}$$

- b. For a -50A input set the output 10% high, or approximately 0.33V. Use test-point 3V3 referenced to test-point DGND and verify using the following equation:

$$3\text{V3} \times 0.1 \tag{2}$$

3.1.3 Full Signal Chain Evaluation Procedure

Note

Verify that the outputs of the connected supplies are disabled before connecting or disconnecting equipment. These are general instructions for EVM evaluation. For more information on getting started with the Code Composer Studio, visit [Code Composer Studio Academy](#) for additional resources and training modules.

1. Set the first 5V ($\pm 10\%$) source and limit the current to 50mA, as noted in [Section 3.1.1](#). Connect the EVM voltage source to one of the DVDD connections, referenced to DGND. Turn on the power source and make sure there is no more current limit drawn than what is specified in the device data sheets. See [Section 2.4.2](#) for more information. Leave unpowered for now.
2. Set the second 2.5V–5V ($\pm 10\%$) source and limit the current to 50mA, as noted in [Section 3.1.1](#). Connect the EVM voltage source to one of the AVDD connections, referenced to AGND. Turn on the power source and make sure there is no more current limit drawn than what is specified in the device data sheets. See [Section 2.4.1](#) for more information. Leave unpowered for now.
3. Connect a C2000 control card, such as the [TMDSCNCD280039C](#), to connector J1.
4. Install [Code Composer Studio](#) (CCS). Open or create the project by selecting the connected control card in the board settings. Configure the following settings in *ProjectName.syscfg*:
 - a. Enable EPWM for CLKIN with the following settings:
 - i. Name: *Mod_Clk*
 - ii. Use Hardware: EPWM1
 - iii. Time Base Clock Divider: Divide clock by 1
 - iv. Time Base Period: 5
 - v. Counter Mode: Up - count mode
 - b. Enable SDFM for data collection with the following settings:
 - i. Name: *SDFM_1*
 - ii. Use Filter Channel 1:
 - iii. Chanel 1 SDCLK source: SD1 channel clock
 - iv. SD Modulator Frequency (MHz): 20
 - v. Differential clipping voltage (V): 0.064
 - vi. DC input to SD-modulator (V): 0
 - c. To evaluate the current-sensing performance of the EVM, capture the SDFM output for each current value by averaging as many samples as memory allows. Roughly 300 samples per current value works

well for evaluation. A time delay of 5 seconds between collected samples with 15 second input current increments is a good starting point. Follow the main pseudo code example (Figure 3-3) for getting started:

```

n = 100 ; // number of samples averaged
result = 0; // averaged SDFM output
ResultsArray; // array of stored samples
sample_num = 0; // number of samples obtained

for(;;){
    for(i = 0; i < n; i++){
        result += SDFM_Output[0]; // where SDFM_Output is updated from an interrupt function
    }

    result = result/n;
    ResultsArray[sample_num] = result;
    result = 0; // reset result value
    sample_num++; // increment number of samples
    DEVICE_DELAY(t); // delay between collected samples
}

```

Figure 3-3. Main Pseudo Code Example

5. Connect the high current carrying cables to the positive and negative lugs, J2 (IN+) and J5 (IN–). For high-side measurement of the positive current, IN– sources to the electronic load; for the negative current, IN+ sources to the load. Set current bounds if supplies allow. Turn on all connected supplies.
6. Turn on the power sources and begin the CCS program to begin data collection.
7. Apply the appropriate full-scale linear input sweep $\pm 50\text{A}$ range (or $\pm 70\text{A}$). Incrementing 1A every 15 seconds for data collection works well for evaluation. Record input current, input voltage at INP referenced to INN, and optionally voltage across a control shunt.

Visit the [C2000 E2E Microcontrollers Forum](#) for additional support on data collection.

8. Convert SDFM output to millivolts (mV) using the following formula:

$$V_{\text{OUT}} = \frac{\text{Output}_{\text{SDFM}} \times 0.128}{2^{31}} \quad (3)$$

9. Calculate the total error results across the entire current sweep:

- a. Default Values:

$$R_{\text{IND}} = 4.9\text{k}\Omega \quad (4)$$

$$I_{\text{B}} = 36\mu\text{A} \quad (5)$$

- b. Error Equations:

$$V_{\text{IDEAL}} = V_{\text{IN}} \times \frac{R_{\text{IND}}}{R_{\text{IND}} + R_3 + R_5} + I_{\text{B}} \times R_8 \quad (6)$$

$$V_{\text{ERROR}} = V_{\text{OUT}} - V_{\text{IDEAL}} \quad (7)$$

$$E_{\% \text{FSR}} = \frac{V_{\text{ERROR}}}{V_{\text{ERROR}}(I_{\text{IN}} = -200\text{A}) - V_{\text{ERROR}}(I_{\text{IN}} = 200\text{A})} \times 100 \quad (8)$$

10. Plot the calculated results against input current, I_{IN} . Figure 3-4 shows an example results plot.

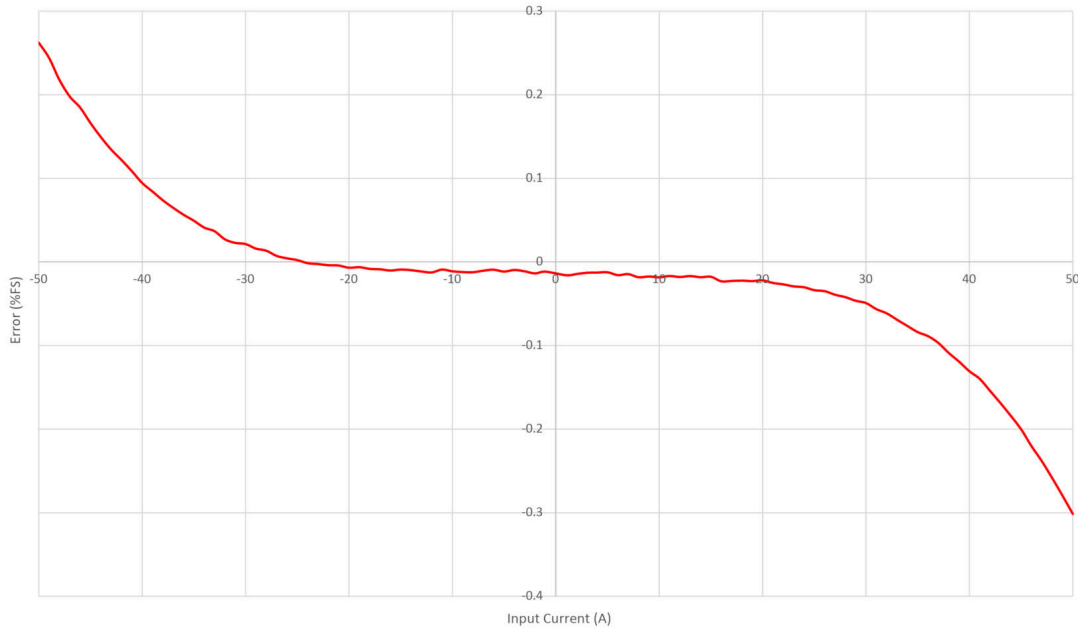


Figure 3-4. AMC-MOD-50A-EVM Total Error %FS Results

11. To evaluate the overcurrent detection performance, configure the C2000 settings in the Code Composer Studio.
12. Repeat these steps at hot and cold temperatures if desired. Calibrate if necessary.

3.2 Performance Data and Results

3.2.1 Shunt Selection Calculations

Consider desired input range and power dissipated when selecting a shunt resistor for high current applications.

The following equation calculates the ideal shunt resistance:

$$R_{SHUNT} = \frac{V}{I} = \frac{50\text{mV}(\text{Input Range of AMC3302})}{50\text{A}(\text{Current Range})} = 1\text{m}\Omega \quad (9)$$

The following equation calculates the amount of power dissipated.

$$P = I^2R = 50\text{A}^2 \times 1\text{m}\Omega = 2.5\text{W} \quad (10)$$

Make sure power dissipated is $\frac{2}{3}$ of the shunt resistor power rating for heat dissipation at high currents. See the [Shunt Resistor Selection for Isolated Data Converters application note](#) for more information.

3.2.2 Filter Selection

Figure 3-5 shows a diagram identifying three filters. Use these three circuit filters to adjust the AMC-MOD-50A-EVM performance. With each filter, there is a tradeoff between noise and propagation delay. The weaker the filter, the shorter the propagation delay.

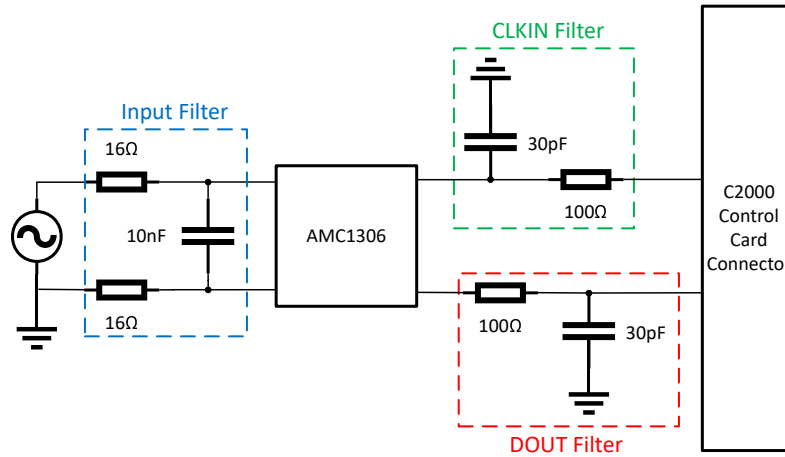


Figure 3-5. AMC-MOD-50A-EVM Filter Diagram

The following equation calculates the cutoff frequency for the input filter.

$$F_C = \frac{1}{2\pi RC} = \frac{1}{2\pi \times 32\Omega \times 10nF} = 497kHz \tag{11}$$

Selecting a shunt resistor with high inductance when measuring a high frequency signal potentially causes overshoot in AC measurements. Overshoot caused by parasitic inductance is compensated for with proper design of the differential RC filter. Best input filter design is dependent on the inductance of the resistor and PCB design. Figure 3-6 shows an example simulation for TINA-TI.

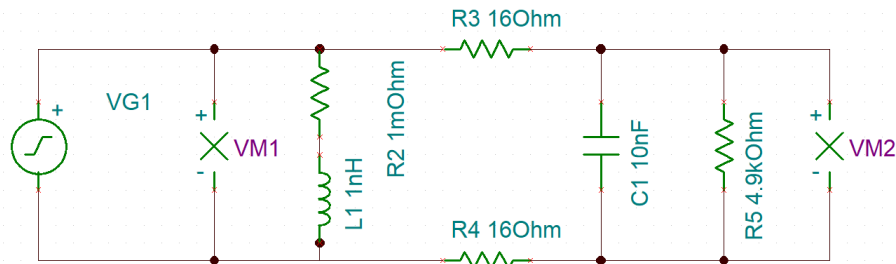


Figure 3-6. Input Filter TINA-TI

The following equation calculates the cutoff frequency for the DOUT and CLKIN filters. Modify as needed for bandwidth limitations.

$$F_C = \frac{1}{2\pi RC} = \frac{1}{2\pi \times 100\Omega \times 30pF} = 53MHz \tag{12}$$

3.2.3 Thermal Results

The AMC-MOD-50A-EVM is rated for $\pm 50\text{A}$ peak current and $\pm 35\text{A}$ RMS. The temperature rating of the FR4-based PCB used is 180°C . [Figure 3-7](#) and [Figure 3-8](#) demonstrate EVM thermal performance at 35A and 50A, respectively. As demonstrated in [Figure 3-9](#), if a system requires lower temperatures, consider adding forced air cooling. As demonstrated in [Figure 3-10](#), if lower temperatures are required, consider a larger shunt resistor size for greater heat dissipation. Thermal performance additionally depends on final system design and environment.

Results are captured at 25°C ambient temperature and after applying the specified current for two minutes.

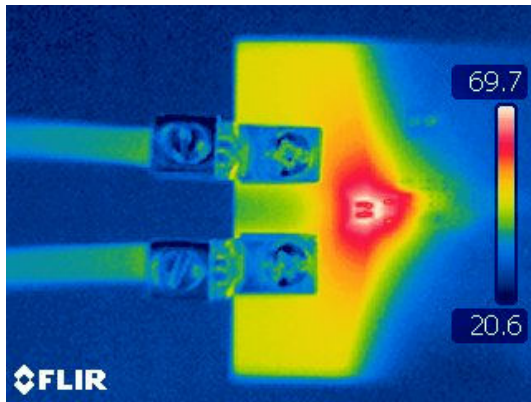


Figure 3-7. Typical Thermal Results: AMC-MOD-50A-EVM at 35A

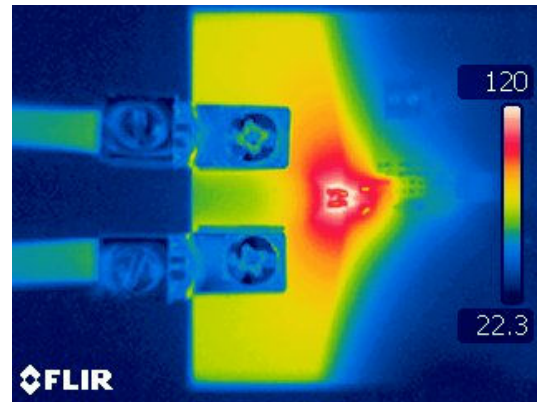


Figure 3-8. Worst-Case Thermal Results: AMC-MOD-50A-EVM at 50A

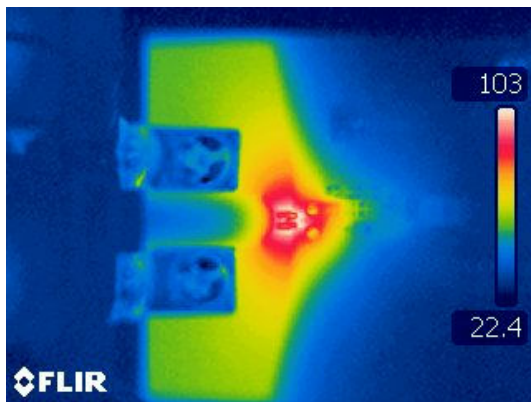


Figure 3-9. Worst-Case Thermal Results With Forced Air Cooling: AMC-MOD-50A-EVM at 50A

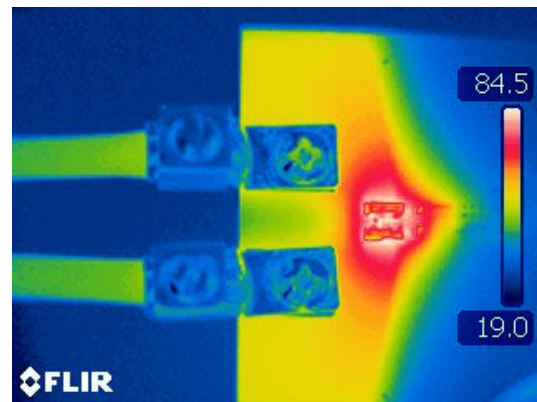


Figure 3-10. Worst-Case Thermal Results With Larger Shunt Resistor Package (Size 2725): AMC-MOD-50A-EVM at 50A

4 Hardware Design Files

4.1 Schematic

Figure 4-1 shows the schematic for the AMC-MOD-50A-EVM.

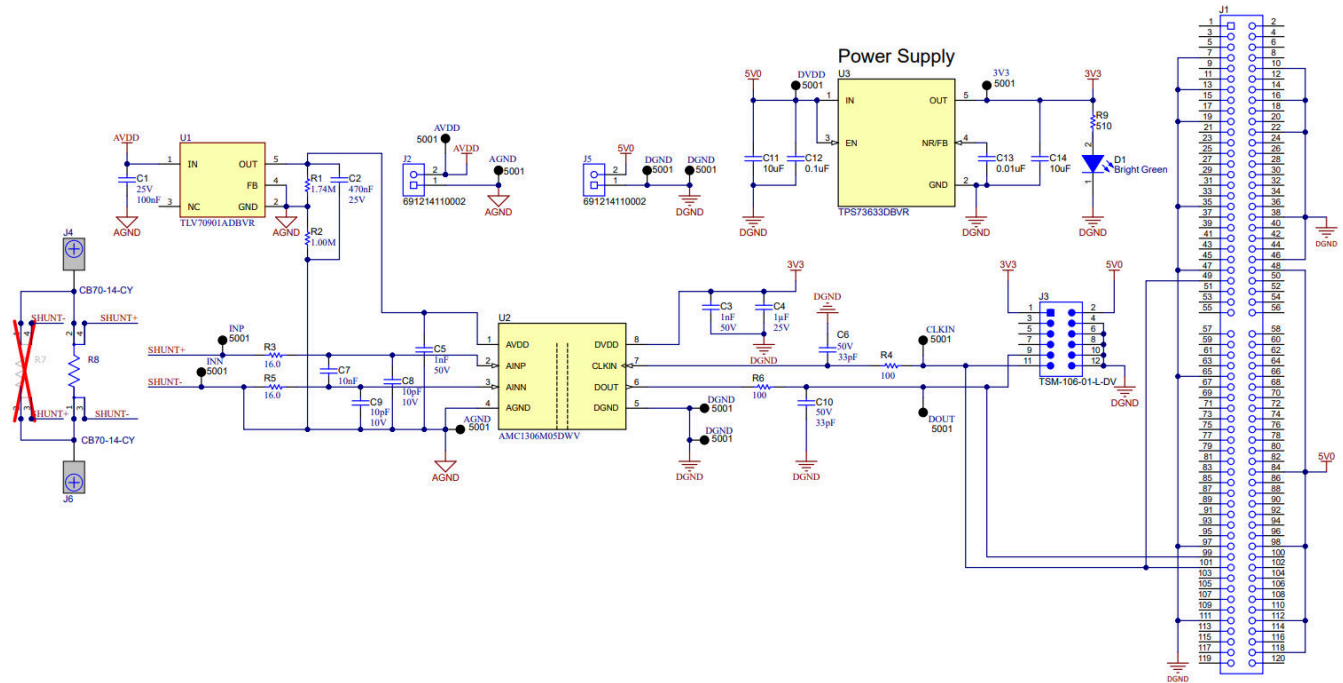


Figure 4-1. AMC-MOD-50A-EVM Schematic

4.2 PCB Layouts

Figure 4-2 shows the top printed circuit board (PCB) drawing of the AMC-MOD-50A-EVM. Figure 4-3 shows the bottom PCB drawing of the AMC-MOD-50A-EVM.

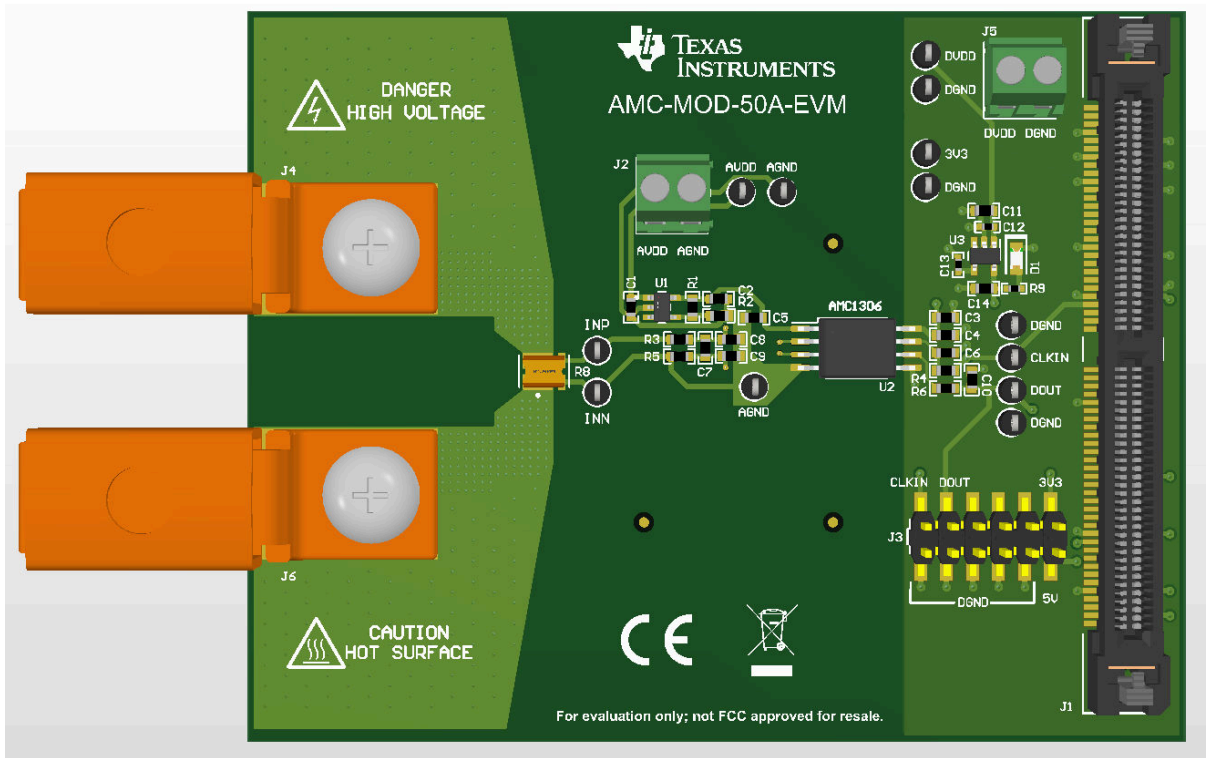


Figure 4-2. AMC-MOD-50A-EVM Top PCB Drawing

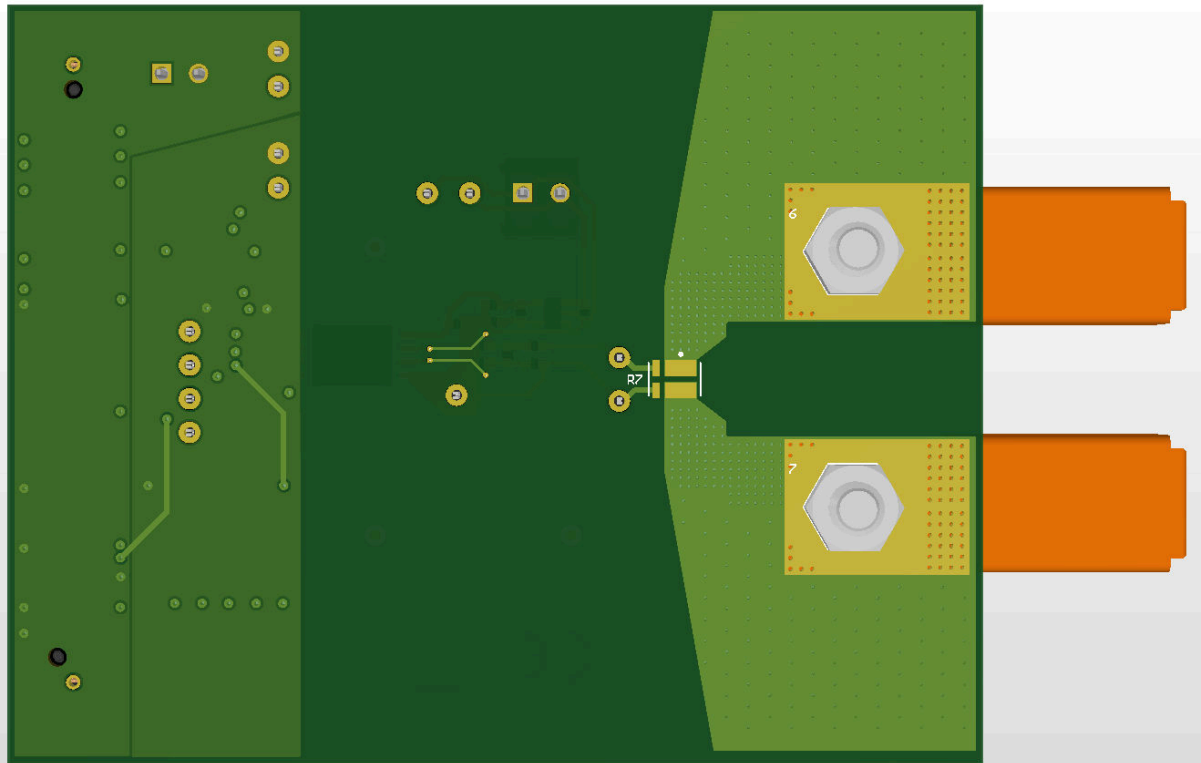


Figure 4-3. AMC-MOD-50A-EVM Bottom PCB Drawing

4.3 Bill of Materials (BOM)

Table 4-1 lists the BOM for the AMC-MOD-50A-EVM.

Table 4-1. AMC-MOD-50A-EVM BOM

Designator	Description	Manufacturer	Part Number
C1	CAP, CERM, 0.1 μ F, 25V, \pm 10%, X7R, AEC-Q200 Grade 1, 0603	MuRata	GCM188R71E104KA57D
C2	CAP, CERM, 0.47 μ F, 25V, \pm 10%, X7R, 0603	TDK	C1608X7R1E474K080AE
C3, C5	CAP, CERM, 1000pF, 50V, \pm 10%, X7R, 0603	Kemet	C0603C102K5RACTU
C4	CAP, CERM, 1 μ F, 25V, \pm 10%, X7R, AEC-Q200 Grade 1, 0603	TDK	CGA3E1X7R1E105K080AC
C6, C10	CAP, CERM, 33pF, 50V, \pm 5%, C0G/NP0, AEC-Q200 Grade 0, 0603	TDK	CGA3E2NP01H330J080AA
C7	CAP, CERM, 0.01 μ F, 25V, \pm 10%, X7R, 0603	Presidio Components	SR0603X7R103K1NT95(F)#M123A
C8, C9	CAP, CERM, 10pF, 10V, \pm 10%, X7R, 0603	AVX	0603ZC100KAT2A
C11, C14	CAP, CERM, 10 μ F, 10V, \pm 20%, X5R, 0603	MuRata	GRM188R61A106ME69D
C12	CAP, CERM, 0.1 μ F, 10V, \pm 20%, X5R, 0402	Würth Elektronik	885012105010
C13	CAP, CERM, 0.01 μ F, 10V, \pm 10%, X7R, 0402	AVX	0402ZC103KAT2A
D1	LED, Bright Green, SMD	Würth Elektronik	150080VS75000
J1	C2000 controlCARD-120HSEC connector, SMT	Samtec	HSEC8-160-01-L-DV-A-BL
J2, J5	Terminal Block, 3.5mm, 2x1, Tin, TH	Würth Elektronik	691214110002
J3	Header, 2.54mm, 6x2, Gold, SMT	Samtec	TSM-106-01-L-DV
J4, J6	Terminal 90A Lug	Panduit	CB70-14-CY
R1	RES, 1.74M, 1%, 0.1W, AEC-Q200 Grade 0, 0603	Vishay-Dale	CRCW06031M74FKEA
R2	RES, 1.00 M, 1%, 0.125W, 0603	Vishay/Beyschlag	MCT06030C1004FP500
R3, R5	RES, 16.0, 0.5%, 0.1W, 0603	Yageo America	RT0603DRE0716RL
R4, R6	RES, 100, 5%, 0.1W, AEC-Q200 Grade 0, 0603	Vishay-Dale	CRCW0603100RJNEA
R8	1 mOhms \pm 1% 7W Chip Resistor Wide 1612 (3831 Metric), 1216 Current Sense, Moisture Resistant	Isabellenhuetten	BVN-M-R001-1.0
R9	RES, 510, 5%, 0.063W, AEC-Q200 Grade 0, 0402	Vishay-Dale	CRCW0402510RJNED
U1	150-mA, 30-V, 3.2- μ A Quiescent Current, Low-Dropout Linear Regulator	Texas Instruments	TLV709A01DBVR

Table 4-1. AMC-MOD-50A-EVM BOM (continued)

Designator	Description	Manufacturer	Part Number
U2	Small Reinforced Isolated Modulator With $\pm 50\text{mV}$ Input and CMOS Interface, DWV0008A (SOIC-8)	Texas Instruments	AMC1306M05DWV
U3	Single Output Low Noise LDO, 400mA, Fixed 3.3V Output, 1.7 to 5.5V Input, with Reverse Current Protection, 5-pin SOT-23 (DBV), -40 to 85 degC, Green (RoHS & no Sb/Br)	Texas Instruments	TPS73633DBVR
3V3, AGND, AVDD, CLKIN, DGND, DOUT, DVDD, INN, INP	Test Point, Miniature, Black, TH	Keystone Electronics	5001
N/A	Passivated 18-8 Stainless Steel Pan Head Phillips Screws M5 x 0.8mm Thread, 10mm Long	McMaster-Carr	92000A320
N/A	JIS Hex Nut Medium-Strength Zinc-Plated Steel, Class 8, M5 x 0.8mm Thread	McMaster-Carr	91028A415

5 Additional Information

5.1 Trademarks

Isabellenhütte™ and ISA-WELD™ are trademarks of Isabellenhütte USA.

Agilent™ is a trademark of Agilent Technologies, Inc.

All trademarks are the property of their respective owners.

6 Related Documentation

- Texas Instruments, [AMC1306M05, High-Precision, \$\pm 50\text{mV}\$ Input, Reinforced Isolated Modulator with External Clock data sheet](#)
- Texas Instruments, [TLV709 150mA, 30V, 3.2 \$\mu\text{A}\$ Quiescent Current, Low-Dropout Linear Regulator data sheet](#)
- Texas Instruments, [TPS736 Capacitor-Free, NMOS, 400mA, Low-Dropout Regulator With Reverse Current Protection data sheet](#)
- Texas Instruments, [Shunt Resistor Selection for Isolated Data Converters application brief](#)
- Texas Instruments, [Design Considerations for Isolated Current Sensing analog design journal](#)
- Isabellenhütte USA, [BVN \(1216\) ISA-WELD™ Precision Resistor data sheet](#)

STANDARD TERMS FOR EVALUATION MODULES

1. *Delivery:* TI delivers TI evaluation boards, kits, or modules, including any accompanying demonstration software, components, and/or documentation which may be provided together or separately (collectively, an "EVM" or "EVMs") to the User ("User") in accordance with the terms set forth herein. User's acceptance of the EVM is expressly subject to the following terms.
 - 1.1 EVMs are intended solely for product or software developers for use in a research and development setting to facilitate feasibility evaluation, experimentation, or scientific analysis of TI semiconductor products. EVMs have no direct function and are not finished products. EVMs shall not be directly or indirectly assembled as a part or subassembly in any finished product. For clarification, any software or software tools provided with the EVM ("Software") shall not be subject to the terms and conditions set forth herein but rather shall be subject to the applicable terms that accompany such Software
 - 1.2 EVMs are not intended for consumer or household use. EVMs may not be sold, sublicensed, leased, rented, loaned, assigned, or otherwise distributed for commercial purposes by Users, in whole or in part, or used in any finished product or production system.
2. *Limited Warranty and Related Remedies/Disclaimers:*
 - 2.1 These terms do not apply to Software. The warranty, if any, for Software is covered in the applicable Software License Agreement.
 - 2.2 TI warrants that the TI EVM will conform to TI's published specifications for ninety (90) days after the date TI delivers such EVM to User. Notwithstanding the foregoing, TI shall not be liable for a nonconforming EVM if (a) the nonconformity was caused by neglect, misuse or mistreatment by an entity other than TI, including improper installation or testing, or for any EVMs that have been altered or modified in any way by an entity other than TI, (b) the nonconformity resulted from User's design, specifications or instructions for such EVMs or improper system design, or (c) User has not paid on time. Testing and other quality control techniques are used to the extent TI deems necessary. TI does not test all parameters of each EVM. User's claims against TI under this Section 2 are void if User fails to notify TI of any apparent defects in the EVMs within ten (10) business days after delivery, or of any hidden defects with ten (10) business days after the defect has been detected.
 - 2.3 TI's sole liability shall be at its option to repair or replace EVMs that fail to conform to the warranty set forth above, or credit User's account for such EVM. TI's liability under this warranty shall be limited to EVMs that are returned during the warranty period to the address designated by TI and that are determined by TI not to conform to such warranty. If TI elects to repair or replace such EVM, TI shall have a reasonable time to repair such EVM or provide replacements. Repaired EVMs shall be warranted for the remainder of the original warranty period. Replaced EVMs shall be warranted for a new full ninety (90) day warranty period.

WARNING

Evaluation Kits are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems.

User shall operate the Evaluation Kit within TI's recommended guidelines and any applicable legal or environmental requirements as well as reasonable and customary safeguards. Failure to set up and/or operate the Evaluation Kit within TI's recommended guidelines may result in personal injury or death or property damage. Proper set up entails following TI's instructions for electrical ratings of interface circuits such as input, output and electrical loads.

NOTE:

EXPOSURE TO ELECTROSTATIC DISCHARGE (ESD) MAY CAUSE DEGRADATION OR FAILURE OF THE EVALUATION KIT; TI RECOMMENDS STORAGE OF THE EVALUATION KIT IN A PROTECTIVE ESD BAG.

3 Regulatory Notices:

3.1 United States

3.1.1 Notice applicable to EVMs not FCC-Approved:

FCC NOTICE: This kit is designed to allow product developers to evaluate electronic components, circuitry, or software associated with the kit to determine whether to incorporate such items in a finished product and software developers to write software applications for use with the end product. This kit is not a finished product and when assembled may not be resold or otherwise marketed unless all required FCC equipment authorizations are first obtained. Operation is subject to the condition that this product not cause harmful interference to licensed radio stations and that this product accept harmful interference. Unless the assembled kit is designed to operate under part 15, part 18 or part 95 of this chapter, the operator of the kit must operate under the authority of an FCC license holder or must secure an experimental authorization under part 5 of this chapter.

3.1.2 For EVMs annotated as FCC – FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant:

CAUTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement for Class A EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Interference Statement for Class B EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

3.2 Canada

3.2.1 For EVMs issued with an Industry Canada Certificate of Conformance to RSS-210 or RSS-247

Concerning EVMs Including Radio Transmitters:

This device complies with Industry Canada license-exempt RSSs. Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Concernant les EVMs avec appareils radio:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Concerning EVMs Including Detachable Antennas:

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. This radio transmitter has been approved by Industry Canada to operate with the antenna types listed in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante. Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

3.3 Japan

3.3.1 *Notice for EVMs delivered in Japan:* Please see http://www.tij.co.jp/lstds/ti_ja/general/eStore/notice_01.page 日本国内に輸入される評価用キット、ボードについては、次のところをご覧ください。

<https://www.ti.com/ja-jp/legal/notice-for-evaluation-kits-delivered-in-japan.html>

3.3.2 *Notice for Users of EVMs Considered "Radio Frequency Products" in Japan:* EVMs entering Japan may not be certified by TI as conforming to Technical Regulations of Radio Law of Japan.

If User uses EVMs in Japan, not certified to Technical Regulations of Radio Law of Japan, User is required to follow the instructions set forth by Radio Law of Japan, which includes, but is not limited to, the instructions below with respect to EVMs (which for the avoidance of doubt are stated strictly for convenience and should be verified by User):

1. Use EVMs in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
2. Use EVMs only after User obtains the license of Test Radio Station as provided in Radio Law of Japan with respect to EVMs, or
3. Use of EVMs only after User obtains the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to EVMs. Also, do not transfer EVMs, unless User gives the same notice above to the transferee. Please note that if User does not follow the instructions above, User will be subject to penalties of Radio Law of Japan.

【無線電波を送信する製品の開発キットをお使いになる際の注意事項】 開発キットの中には技術基準適合証明を受けていないものがあります。技術適合証明を受けていないものご使用に際しては、電波法遵守のため、以下のいずれかの措置を取っていただく必要がありますのでご注意ください。

1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用いただく。
2. 実験局の免許を取得後ご使用いただく。
3. 技術基準適合証明を取得後ご使用いただく。

なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。

上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。日本テキサス・イ

ンスツルメンツ株式会社

東京都新宿区西新宿 6 丁目 2 4 番 1 号

西新宿三井ビル

3.3.3 *Notice for EVMs for Power Line Communication:* Please see http://www.tij.co.jp/lstds/ti_ja/general/eStore/notice_02.page

電力線搬送波通信についての開発キットをお使いになる際の注意事項については、次のところをご覧ください。 <https://www.ti.com/ja-jp/legal/notice-for-evaluation-kits-for-power-line-communication.html>

3.4 European Union

3.4.1 *For EVMs subject to EU Directive 2014/30/EU (Electromagnetic Compatibility Directive):*

This is a class A product intended for use in environments other than domestic environments that are connected to a low-voltage power-supply network that supplies buildings used for domestic purposes. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

-
4. *EVM Use Restrictions and Warnings:*
 - 4.1 EVMS ARE NOT FOR USE IN FUNCTIONAL SAFETY AND/OR SAFETY CRITICAL EVALUATIONS, INCLUDING BUT NOT LIMITED TO EVALUATIONS OF LIFE SUPPORT APPLICATIONS.
 - 4.2 User must read and apply the user guide and other available documentation provided by TI regarding the EVM prior to handling or using the EVM, including without limitation any warning or restriction notices. The notices contain important safety information related to, for example, temperatures and voltages.
 - 4.3 *Safety-Related Warnings and Restrictions:*
 - 4.3.1 User shall operate the EVM within TI's recommended specifications and environmental considerations stated in the user guide, other available documentation provided by TI, and any other applicable requirements and employ reasonable and customary safeguards. Exceeding the specified performance ratings and specifications (including but not limited to input and output voltage, current, power, and environmental ranges) for the EVM may cause personal injury or death, or property damage. If there are questions concerning performance ratings and specifications, User should contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may also result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM user guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, even with the inputs and outputs kept within the specified allowable ranges, some circuit components may have elevated case temperatures. These components include but are not limited to linear regulators, switching transistors, pass transistors, current sense resistors, and heat sinks, which can be identified using the information in the associated documentation. When working with the EVM, please be aware that the EVM may become very warm.
 - 4.3.2 EVMs are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems. User assumes all responsibility and liability for proper and safe handling and use of the EVM by User or its employees, affiliates, contractors or designees. User assumes all responsibility and liability to ensure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard. User assumes all responsibility and liability for any improper or unsafe handling or use of the EVM by User or its employees, affiliates, contractors or designees.
 - 4.4 User assumes all responsibility and liability to determine whether the EVM is subject to any applicable international, federal, state, or local laws and regulations related to User's handling and use of the EVM and, if applicable, User assumes all responsibility and liability for compliance in all respects with such laws and regulations. User assumes all responsibility and liability for proper disposal and recycling of the EVM consistent with all applicable international, federal, state, and local requirements.
 5. *Accuracy of Information:* To the extent TI provides information on the availability and function of EVMs, TI attempts to be as accurate as possible. However, TI does not warrant the accuracy of EVM descriptions, EVM availability or other information on its websites as accurate, complete, reliable, current, or error-free.
 6. *Disclaimers:*
 - 6.1 EXCEPT AS SET FORTH ABOVE, EVMS AND ANY MATERIALS PROVIDED WITH THE EVM (INCLUDING, BUT NOT LIMITED TO, REFERENCE DESIGNS AND THE DESIGN OF THE EVM ITSELF) ARE PROVIDED "AS IS" AND "WITH ALL FAULTS." TI DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, REGARDING SUCH ITEMS, INCLUDING BUT NOT LIMITED TO ANY EPIDEMIC FAILURE WARRANTY OR IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADE SECRETS OR OTHER INTELLECTUAL PROPERTY RIGHTS.
 - 6.2 EXCEPT FOR THE LIMITED RIGHT TO USE THE EVM SET FORTH HEREIN, NOTHING IN THESE TERMS SHALL BE CONSTRUED AS GRANTING OR CONFERRING ANY RIGHTS BY LICENSE, PATENT, OR ANY OTHER INDUSTRIAL OR INTELLECTUAL PROPERTY RIGHT OF TI, ITS SUPPLIERS/LICENSORS OR ANY OTHER THIRD PARTY, TO USE THE EVM IN ANY FINISHED END-USER OR READY-TO-USE FINAL PRODUCT, OR FOR ANY INVENTION, DISCOVERY OR IMPROVEMENT, REGARDLESS OF WHEN MADE, CONCEIVED OR ACQUIRED.
 7. *USER'S INDEMNITY OBLIGATIONS AND REPRESENTATIONS.* USER WILL DEFEND, INDEMNIFY AND HOLD TI, ITS LICENSORS AND THEIR REPRESENTATIVES HARMLESS FROM AND AGAINST ANY AND ALL CLAIMS, DAMAGES, LOSSES, EXPENSES, COSTS AND LIABILITIES (COLLECTIVELY, "CLAIMS") ARISING OUT OF OR IN CONNECTION WITH ANY HANDLING OR USE OF THE EVM THAT IS NOT IN ACCORDANCE WITH THESE TERMS. THIS OBLIGATION SHALL APPLY WHETHER CLAIMS ARISE UNDER STATUTE, REGULATION, OR THE LAW OF TORT, CONTRACT OR ANY OTHER LEGAL THEORY, AND EVEN IF THE EVM FAILS TO PERFORM AS DESCRIBED OR EXPECTED.

8. *Limitations on Damages and Liability:*

8.1 *General Limitations.* IN NO EVENT SHALL TI BE LIABLE FOR ANY SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL, OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF THESE TERMS OR THE USE OF THE EVMS , REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCLUDED DAMAGES INCLUDE, BUT ARE NOT LIMITED TO, COST OF REMOVAL OR REINSTALLATION, ANCILLARY COSTS TO THE PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, RETESTING, OUTSIDE COMPUTER TIME, LABOR COSTS, LOSS OF GOODWILL, LOSS OF PROFITS, LOSS OF SAVINGS, LOSS OF USE, LOSS OF DATA, OR BUSINESS INTERRUPTION. NO CLAIM, SUIT OR ACTION SHALL BE BROUGHT AGAINST TI MORE THAN TWELVE (12) MONTHS AFTER THE EVENT THAT GAVE RISE TO THE CAUSE OF ACTION HAS OCCURRED.

8.2 *Specific Limitations.* IN NO EVENT SHALL TI'S AGGREGATE LIABILITY FROM ANY USE OF AN EVM PROVIDED HEREUNDER, INCLUDING FROM ANY WARRANTY, INDEMNITY OR OTHER OBLIGATION ARISING OUT OF OR IN CONNECTION WITH THESE TERMS, , EXCEED THE TOTAL AMOUNT PAID TO TI BY USER FOR THE PARTICULAR EVM(S) AT ISSUE DURING THE PRIOR TWELVE (12) MONTHS WITH RESPECT TO WHICH LOSSES OR DAMAGES ARE CLAIMED. THE EXISTENCE OF MORE THAN ONE CLAIM SHALL NOT ENLARGE OR EXTEND THIS LIMIT.

9. *Return Policy.* Except as otherwise provided, TI does not offer any refunds, returns, or exchanges. Furthermore, no return of EVM(s) will be accepted if the package has been opened and no return of the EVM(s) will be accepted if they are damaged or otherwise not in a resalable condition. If User feels it has been incorrectly charged for the EVM(s) it ordered or that delivery violates the applicable order, User should contact TI. All refunds will be made in full within thirty (30) working days from the return of the components(s), excluding any postage or packaging costs.

10. *Governing Law:* These terms and conditions shall be governed by and interpreted in accordance with the laws of the State of Texas, without reference to conflict-of-laws principles. User agrees that non-exclusive jurisdiction for any dispute arising out of or relating to these terms and conditions lies within courts located in the State of Texas and consents to venue in Dallas County, Texas. Notwithstanding the foregoing, any judgment may be enforced in any United States or foreign court, and TI may seek injunctive relief in any United States or foreign court.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2023, Texas Instruments Incorporated

IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you fully indemnify TI and its representatives against any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to [TI's Terms of Sale](#), [TI's General Quality Guidelines](#), or other applicable terms available either on [ti.com](#) or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products. Unless TI explicitly designates a product as custom or customer-specified, TI products are standard, catalog, general purpose devices.

TI objects to and rejects any additional or different terms you may propose.

Copyright © 2025, Texas Instruments Incorporated

Last updated 10/2025